
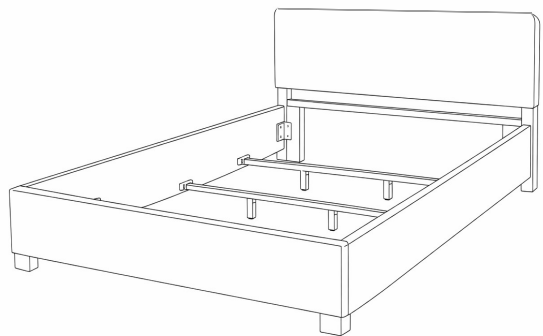


CROSLEY

FURNITURE





Queen / King Bed CF92006-502 / 602

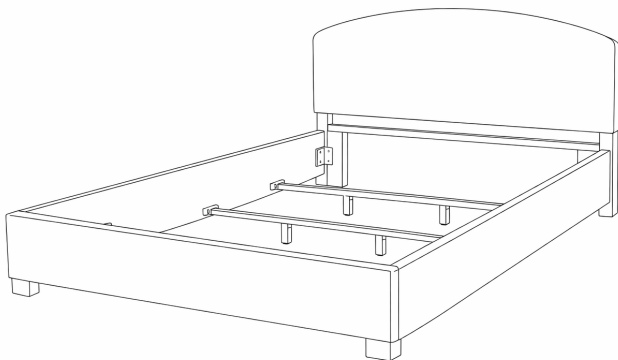





NOTE :

Compatible with both square (CF92006-501/601) and curved (CF92010-501/601) headboards.
Assembly steps are identical; only headboard shape differs.

PART LIST

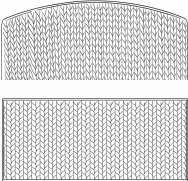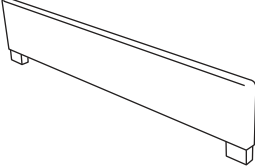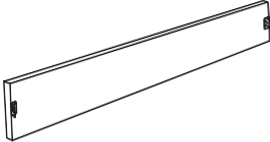
A  Headboard 1 PC	B  Right Post 1 PC	C  Left Post 1 PC	D  Crossbar 1 PC	E  Footboard 1 PC
F  Side Rail 2 PCS	G  Slats 3 PCS	H  Center Leg 6 PCS	Please note headboard, right post, left post and crossbar will ship separately.	

HARDWARE LIST

#1  1/4 " x 1.1/2" L Short Bolt 6 PCS (Extra 1)	#2  1/4 " x 2" L Bolt 2 PCS (Extra 1)	#3  Small Flat Washer 8 PCS (Extra 1)	#4  Allen Wrench 1 PC	#5  1/4 " x 1.1/4 " L Hex Bolt 8 PCS (Extra 1)
#6  Flat Washer 8 PCS	#7  Wrench 1 PC			


Step 1. Lay headboard (part A) down on a soft surface, such as carpet. Attach posts (parts B & C) to headboard (part A) using short bolts (part #1), small flat washers (part #3) and allen wrench (part #4).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

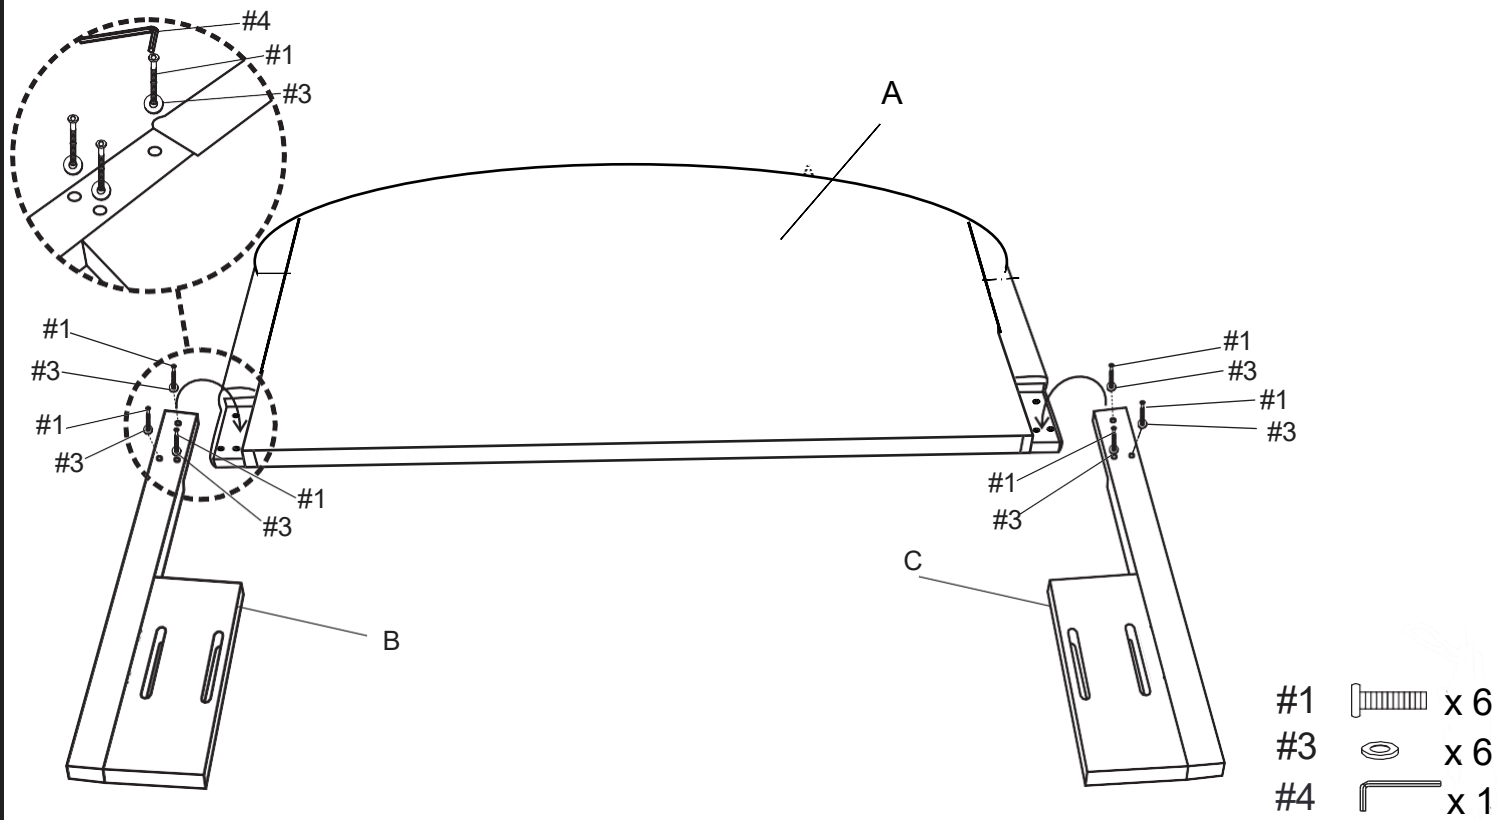


Step 2. Attach crossbar (part D) to posts (parts B & C) using bolts (part #2), small flat washers (part #3) and allen wrench (part #4).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

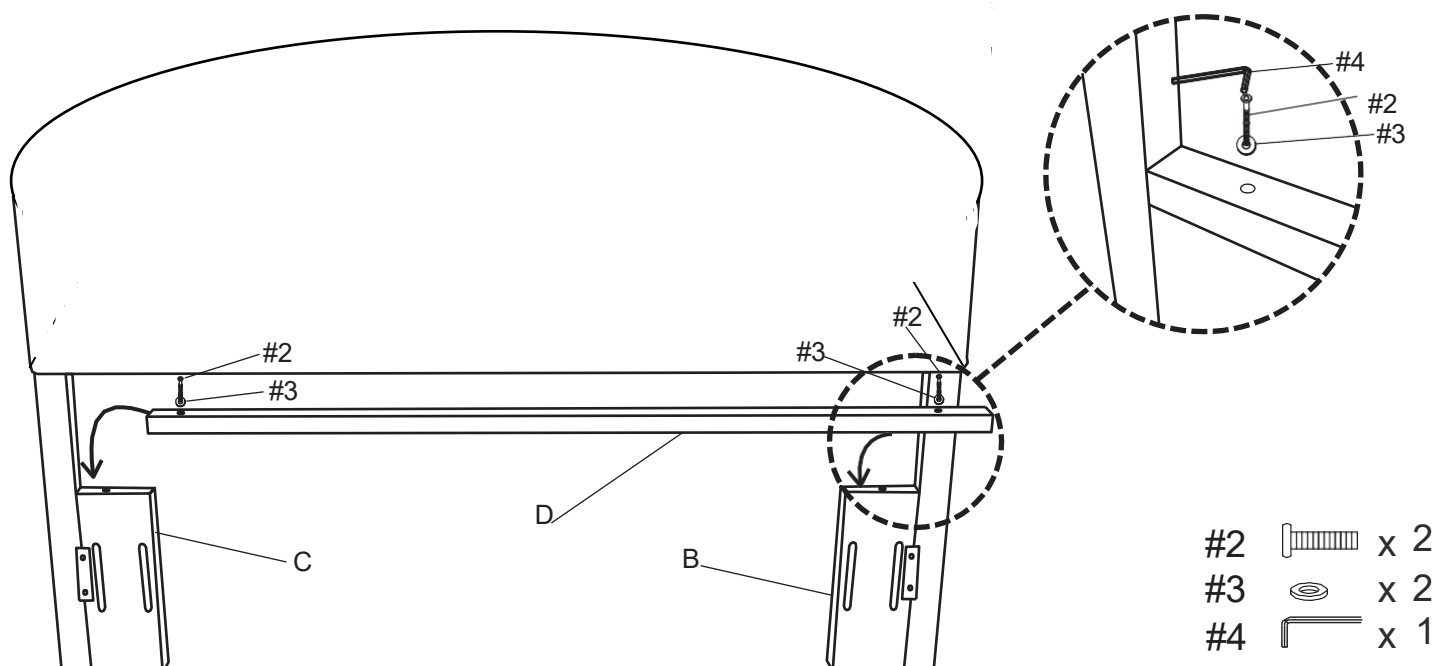


Step 3. Attach side rails (part F) to posts (parts B & C) using hex bolts (part #5), flat washers (part #6) and wrench (part #7).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

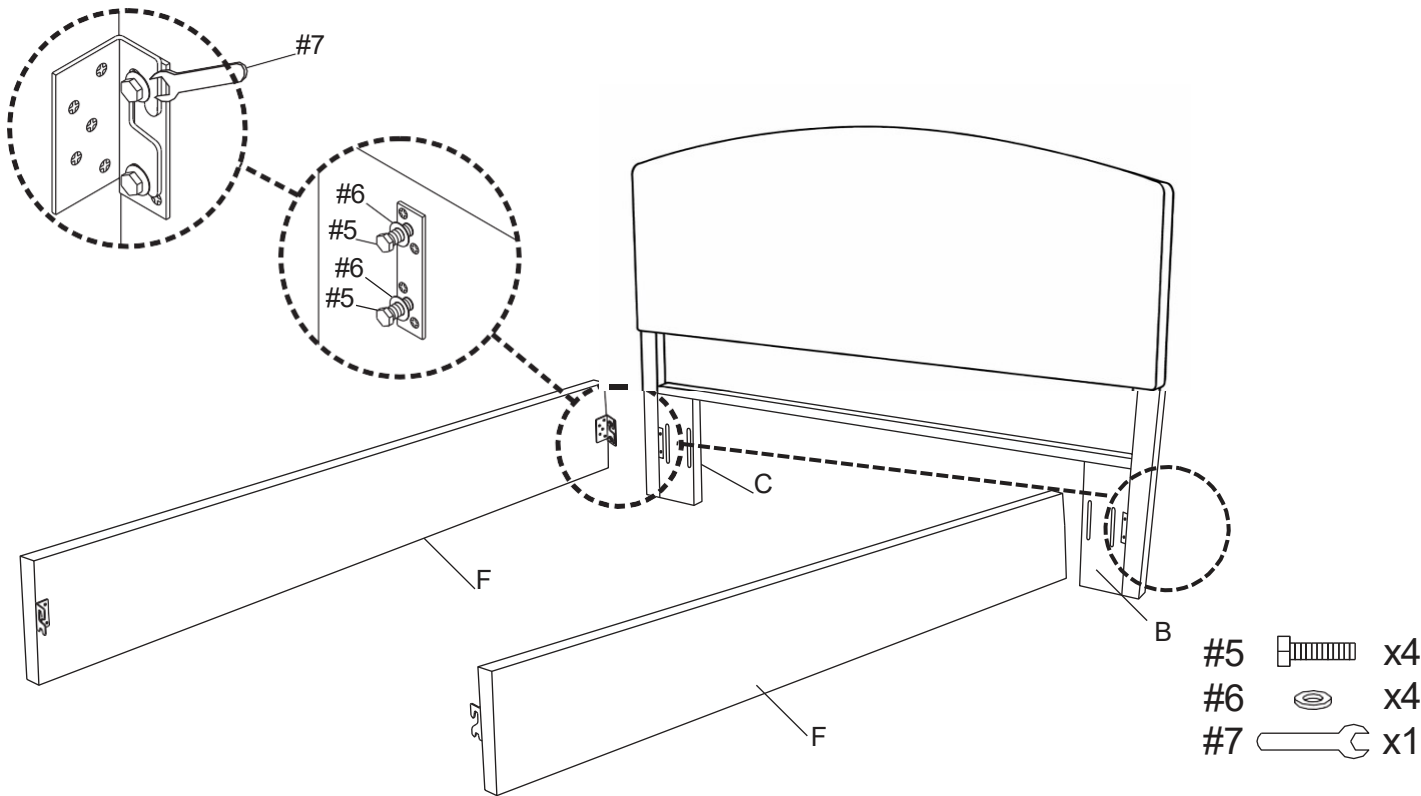


Step 4. Attach footboard (part E) to side rails (part F) using hex bolts (part #5), flat washers (part #6) and wrench (part #7).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

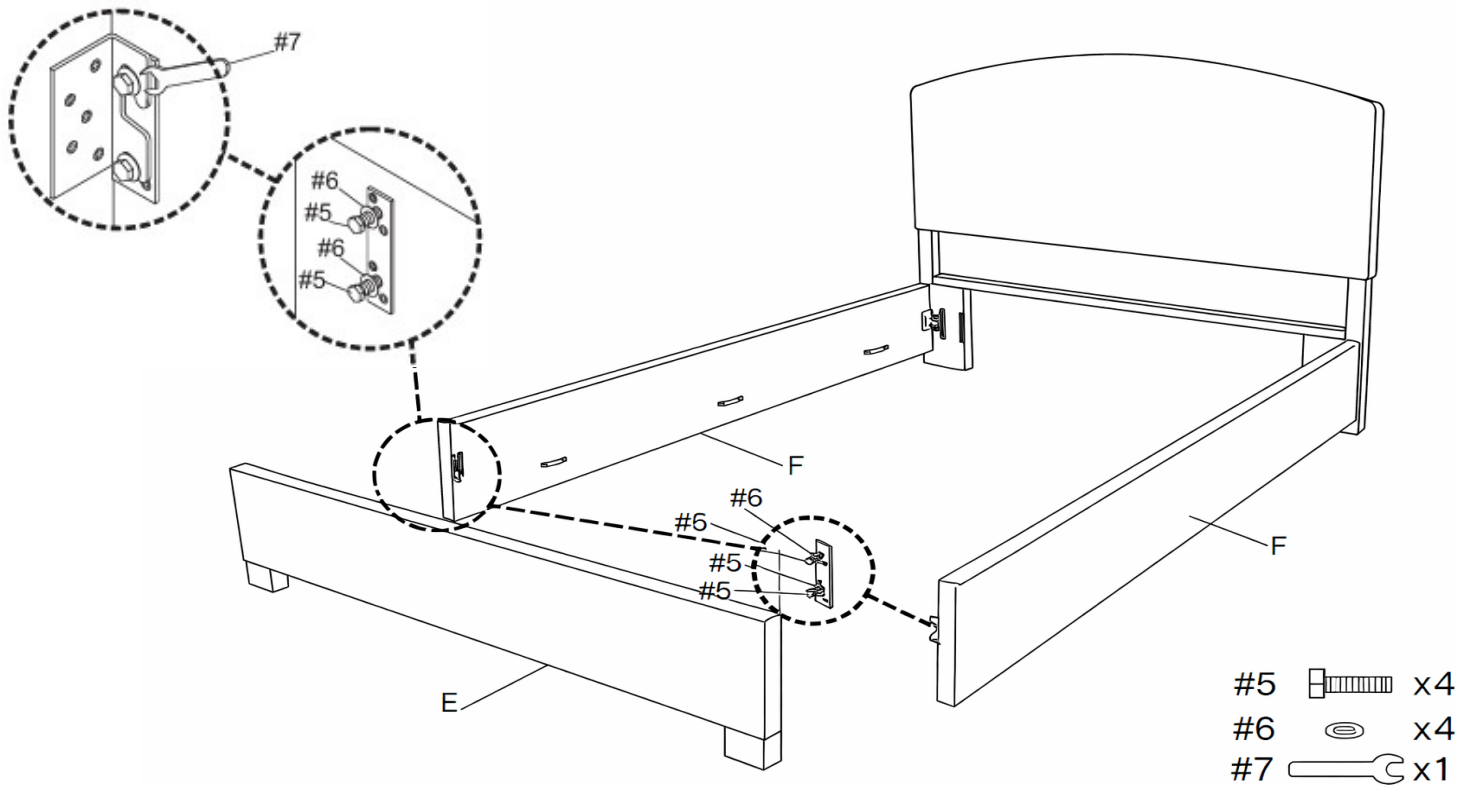



Step 5. Attach center legs (part H) to slats (part G).

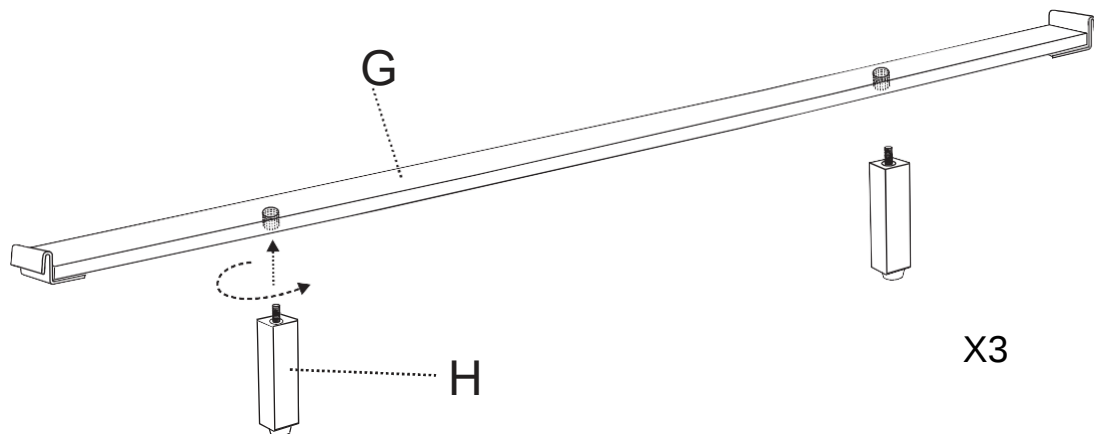

Step 6. Place assembled unit (parts G & H) to side rails (part F) by fitting metal supports in place.

NOTE: Please fully tighten all bolts at this time.

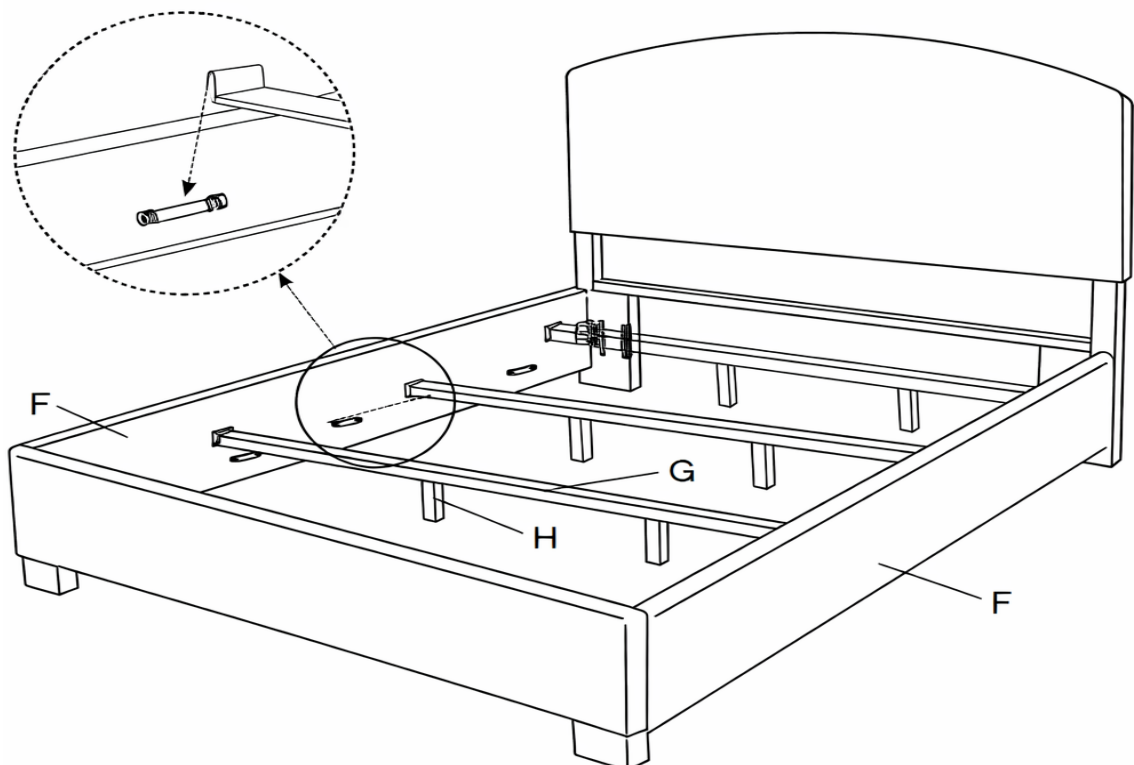

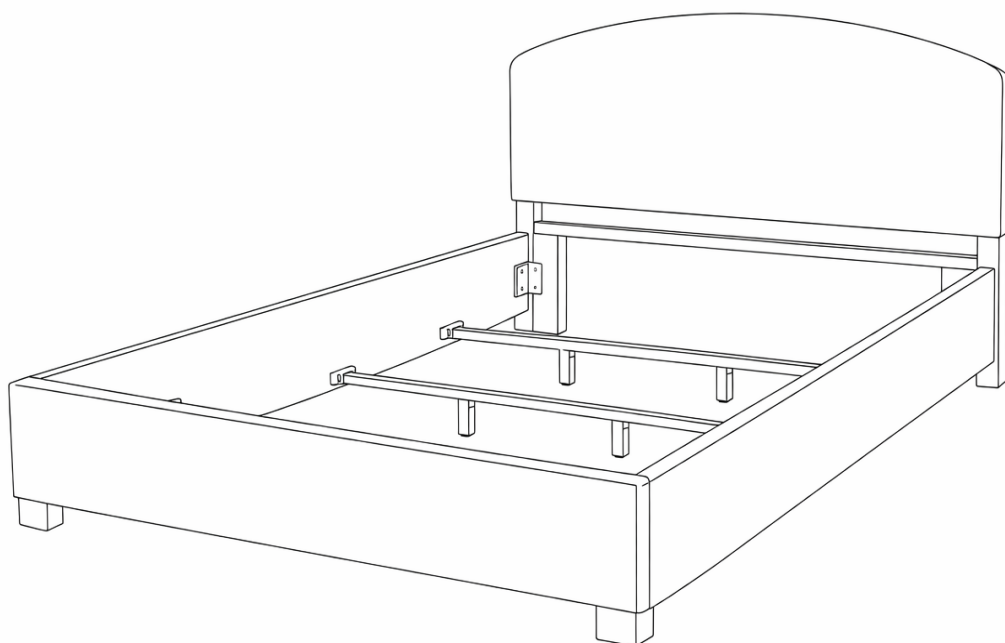

Note :

For square headboard (CF92006-501/601), follow the same steps. Only the headboard shape differs.