









ISLiFE

Mid-century new style series

DIY Sliding Barn Door
Installation Instruction

Email: info@islifeusa.com

PARTS INCLUDED

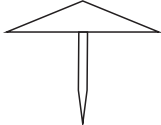Description	Part	Side View
Left Side Panel	(A)	
Middle Panel	(B)	
Right Side Panel	(C)	
Top Panel (8"wide)	(D)	
Center Panel (6"wide)	(E)	
Bottom Panel (8"wide)	(F)	
Screw	(G)	
Decorative Pin (Place the pins out of reach from children under 3 years old.)	(H)	


PRE-INSTALLATION

Product Cautions:

1. Avoid Direct Sunlight
2. Avoid Moisture
3. Avoid Rain



Tools Required

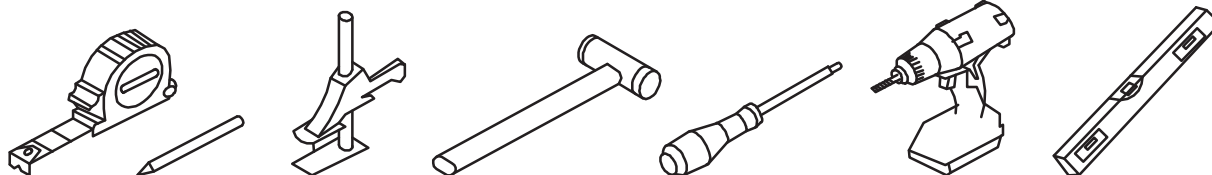


Assembly with a partner is recommended.
Wear working gloves.

INSTALLATION

STEP 1:


combine lower Panel A, B, and C.

Make sure all panels with 45 degree Incline side corners are facing upward.

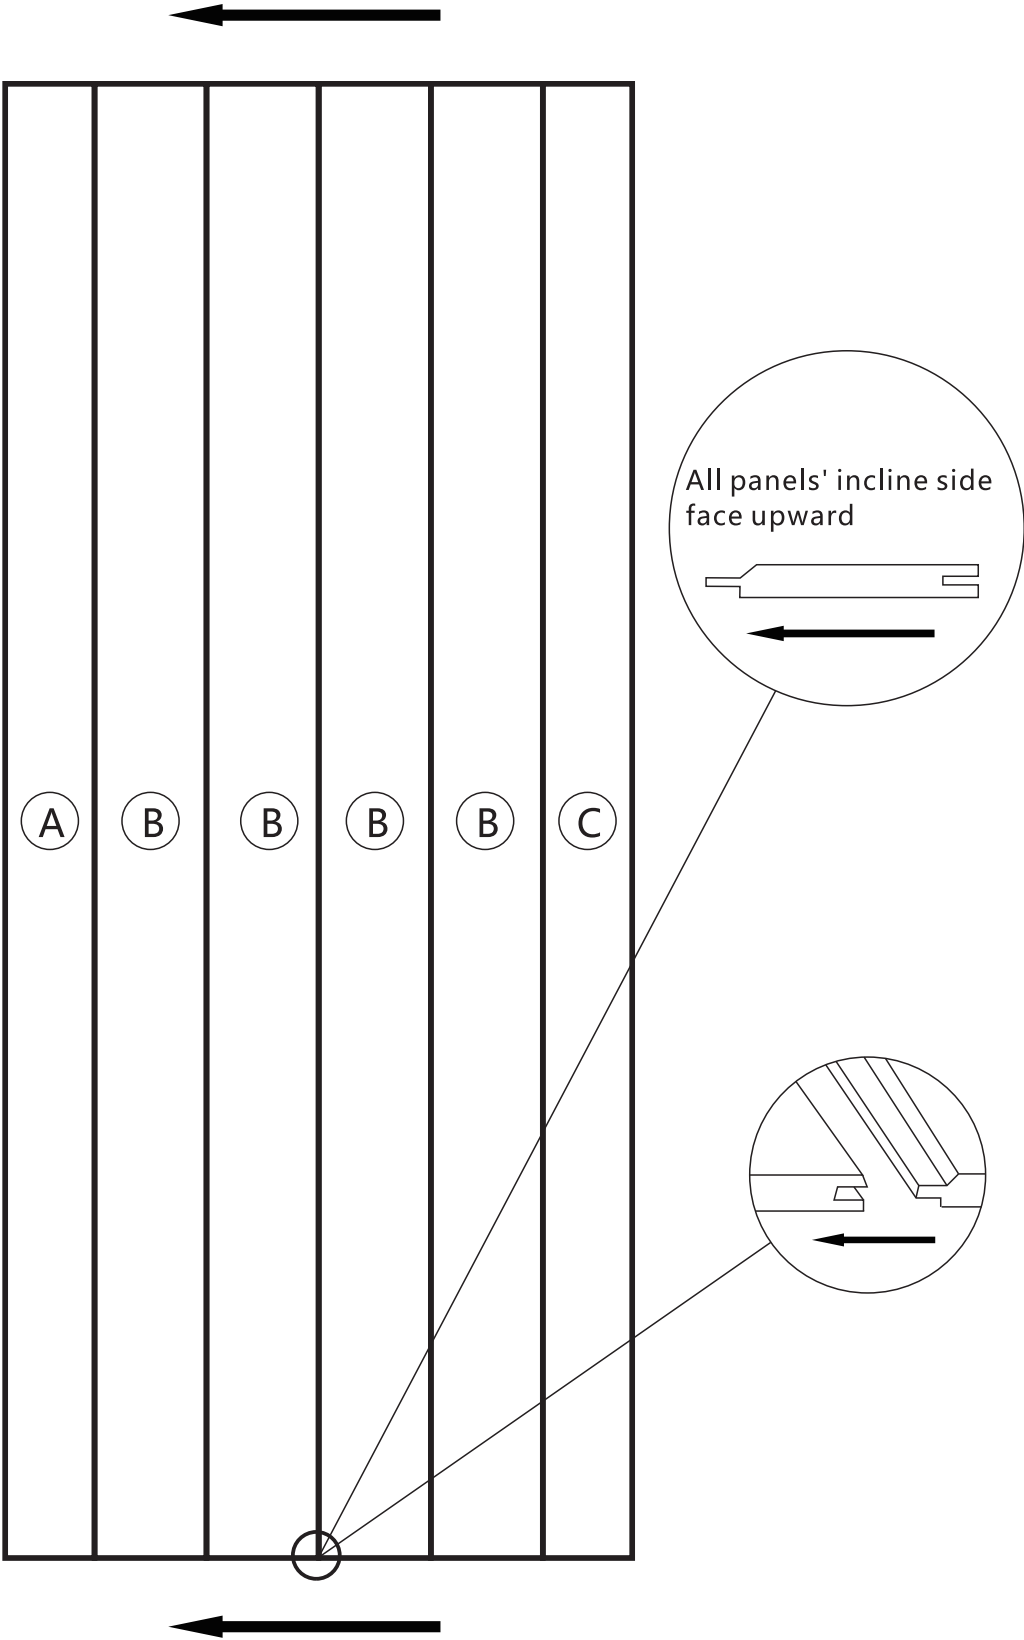

STEP 4:


Install all decorative pins (H), on the front side of the door. Decorative Pins (H) on the sides should be 1-1/4 inches away from the edge horizontally, and 6-3/4 inches away vertically, (All pins other than the pins on the side should be placed on the center of each panel). Pins in the center two rows should be 30-1/2 inches from the top and bottom. See figure below for visual guide.

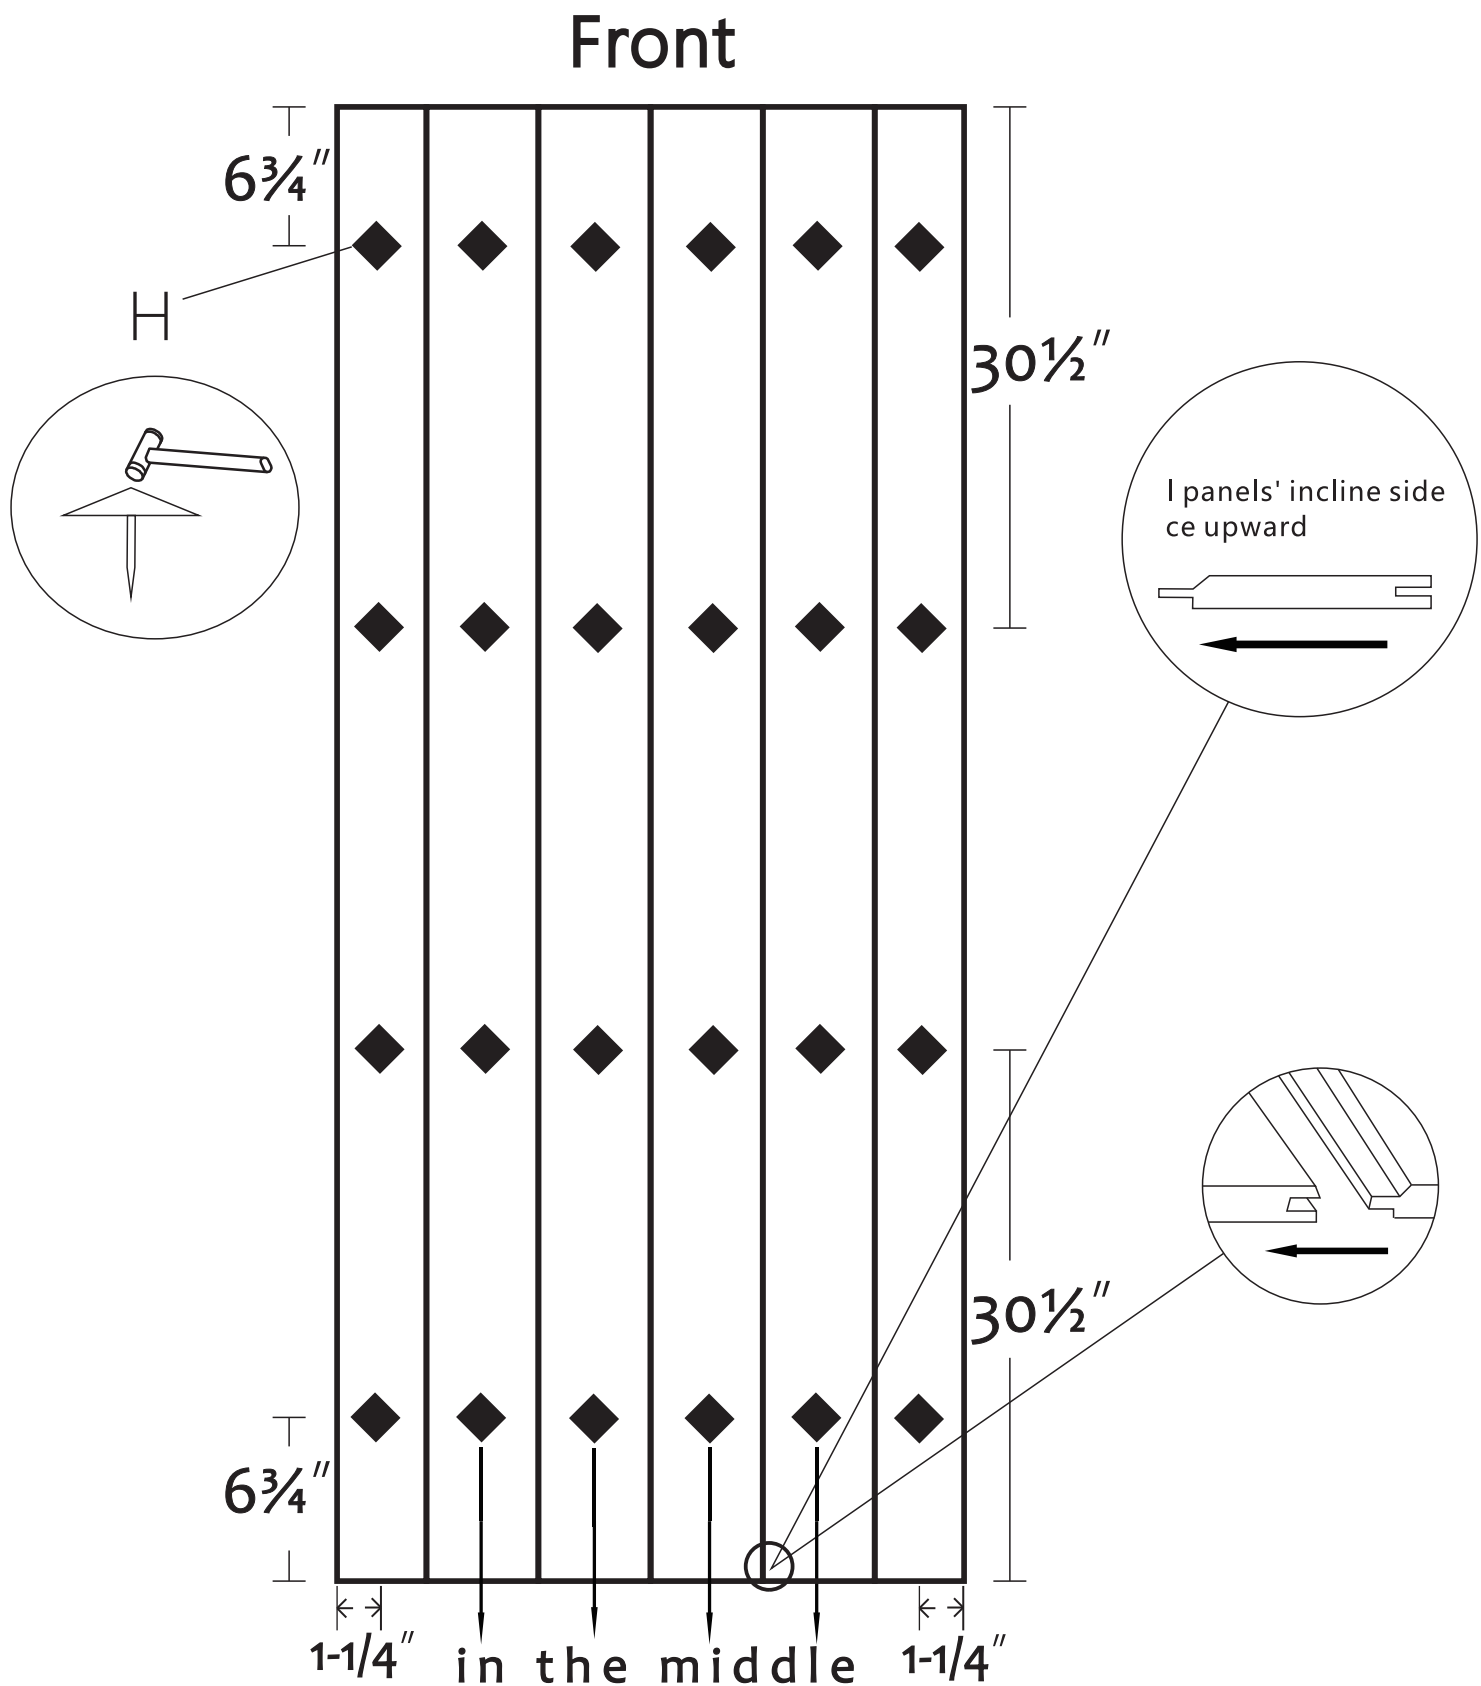

For Sliding Hardware installation (if purchased), please refer to the hardware installation guide found in the sliding hardware box.

STEP 3:

Both E boards should be 27³/₄ inches away from the top and the bottom. Reference picture below for exact measurements.

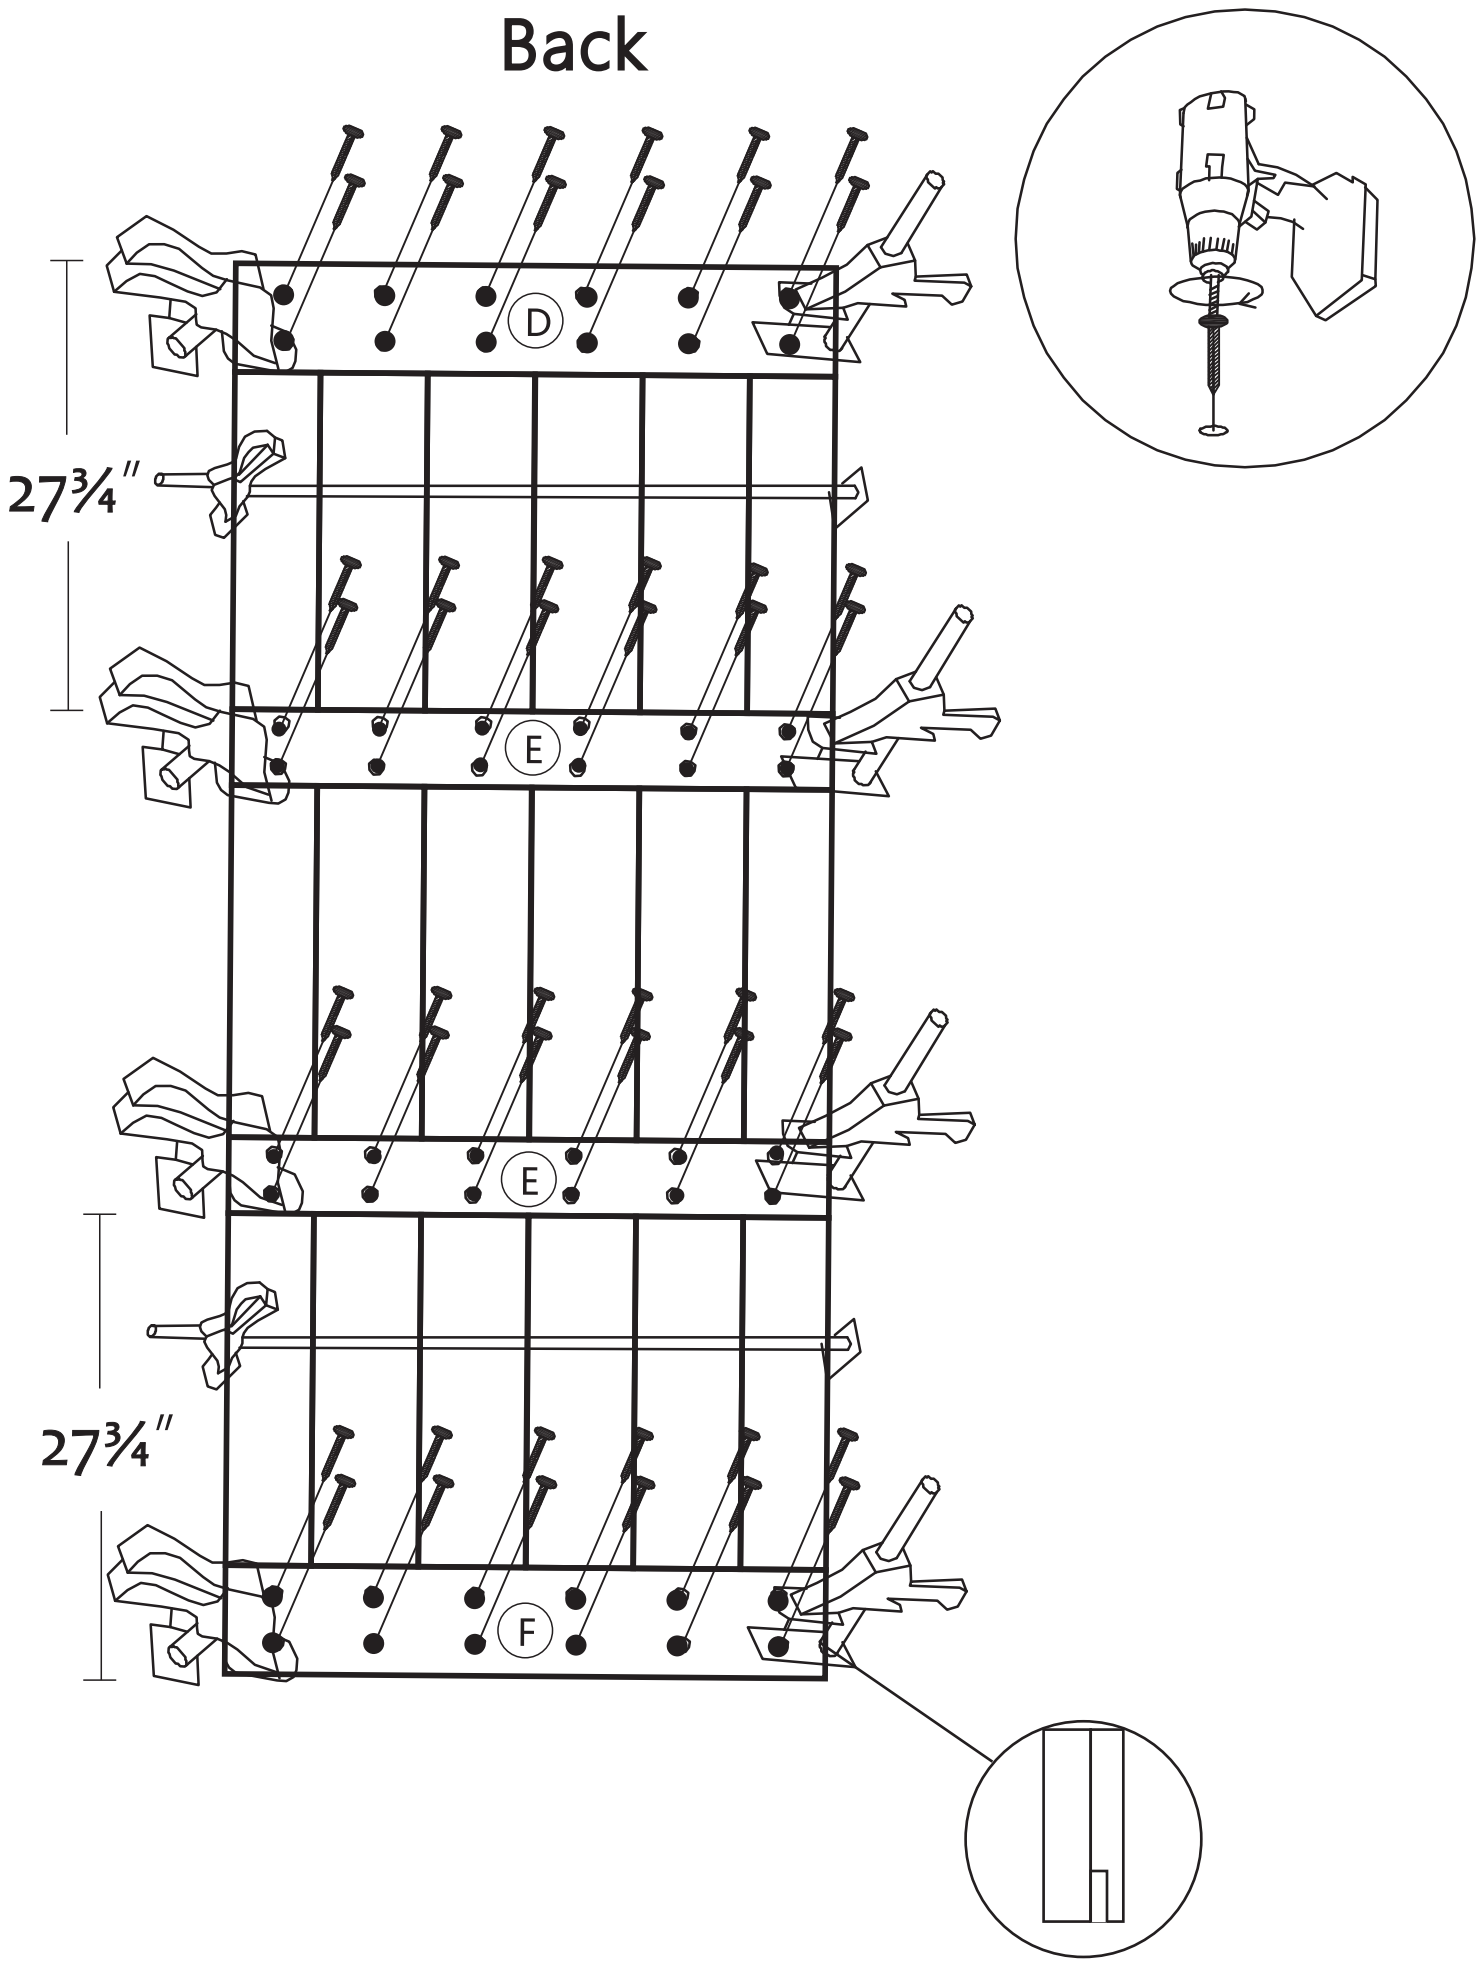

STEP 2:

Align panels D, E, and F on the back side of the door. (Note: Boards D and F are wider than Boards E, and make sure board F is on the bottom, Cutout facing the doos . Lock in all screws in the pre-drilled holes.

Back

