




13' X 16.5' SUNROOM

ASSEMBLY MANUAL

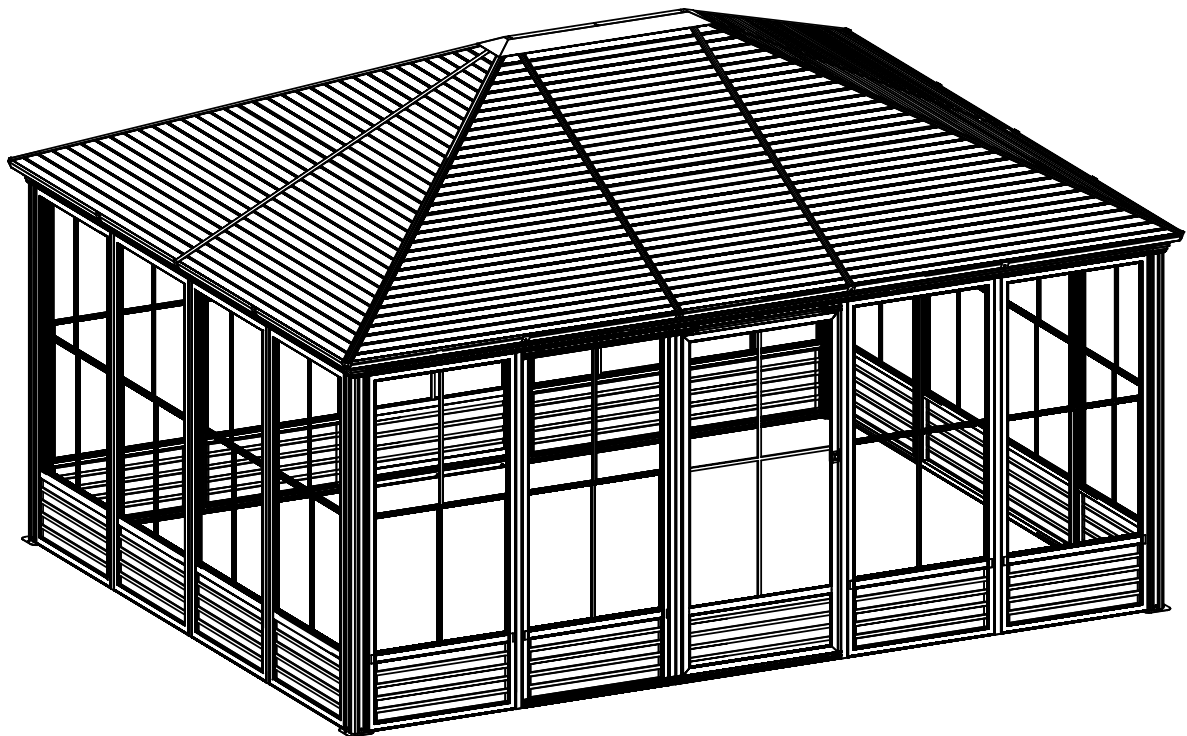

MODEL#: LGMF1480A

Missing part? Damaged? Contact us via email at

service@domioutdoorliving.com

www.domioutdoorliving.com

© Copyright 2023–2025 domi LLC. All Rights Reserved.

THANK YOU FOR PURCHASING THE DOMI OUT LIVING® CHALET PAVILION.

- This manual will provide you with clear and detailed instructions on how to safely and correctly assemble and maintain your chalet pavilion, to ensure it brings you many years of use and enjoyment.

NOTICE

- **IMPORTANT:** A gazebo may entail purchasing a municipal permit or be subject to specific building codes. It is the consumer's responsibility to inform themselves of any restrictions.
- It is important to read and follow all safety information prior to assembly of the unit as well as during usage to reduce risk of injury and avoid damage to the product and its surroundings.
- It is highly recommended to avoid installing and settling your gazebo in a corridor of heavy wind.

OPERATION

- The gazebo is intended to be used as a shelter, Do not use this product for anything other than its intended use.
- Your shelter has been designed to be enjoyed during all four seasons and will resist snow accumulations up to 2000 lbs (907 kg). For your comfort and safety, it is recommended not to use the gazebo during sub-zero temperatures.
- **WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM ALL FABRICS.**
- Do not place any type of space heater, heat conductor, or exposed flame under or within 5 feet of the gazebo.
- The fabrics meet the flammability requirements of the CPA1-84, The fabrics may burn if they are in continuous contact with a flame. Any foreign substance applied directly to the fabrics may weaken the flame-resistant properties.
- Avoid using excessive force while opening or closing the mosquito netting. When tying the netting to the columns, be mindful not to make the Velcro tangle with the netting.
- Do not suspend or hang from the structure any objects exceeding 15 lbs (6.8 kg).

MAINTENANCE AND CARE

- Check periodically that the gazebo is anchored properly to the floor or ground and that all bolts remain tight to maintain the solidity of the structure.
- Remove any foreign objects from the roof in order to avoid damages. Remove any snow accumulation on the roof at all times.
- Make sure there is no ice buildup anywhere on the main structure.
- Remove all accessories during the winter.
- To order replacement parts refer to the model # of the unit as well as part # in the parts list.

PLANNING INSTALLATION AND SAFTY

A. Keep this user guide and parts list for future Reference.

- Make sure that the boxes contain all the parts prior to assembly.
- Follow all assembly instructions for proper construction.
- In order to avoid damages to the shelter and its components, place all parts on a soft surface and use appropriate tools during assembly.
- Do not assemble the gazebo during periods of heavy wind or rain.

B. It is highly recommended to avoid installing your gazebo in a corridor of heavy wind.

- You must schedule enough time to complete the assembly. For safety issues, you must not leave the unit unattended if it is not fully assembled, The assembly will take approximately 4 to 5 hours.

C. A minimum of 2 people are required to assemble the gazebo.

- This unit must be assembled on a level platform(wood deck, stone tile or anchored using appropriate screws for that flooring.
- Be sure to keep all children and pets away from assembly area.

- To avoid damages, the gazebo should be assembled no less than 5 feet from any fixed obstruction.
- During assembly, do not use the structure as a support. Use a stepladder when necessary.
- Some parts contain sharp edges. Wear protective gloves when handling these parts. It is also recommended to wear protective goggles (safety glasses) and closed shoes.
- It is recommended to tighten all bolts and screws once a step is completed.

TOOLS AND EQUIPMENT REQUIRED (NON INCLUS)

- Note: Tools and equipment are not shown to actual size and scale.




Rubber Mallet




Phillips screw driver



Drill



5/32" bit



7/32" bit



Safety hat



Gloves



Safety goggles



Stepladder



Level












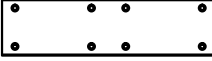





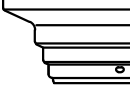

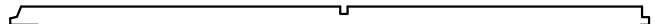
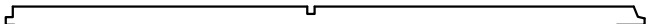


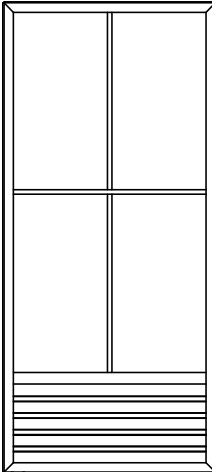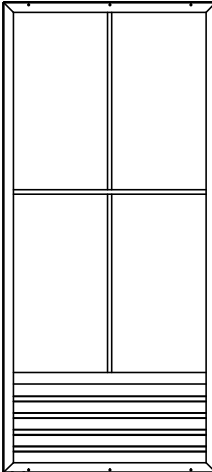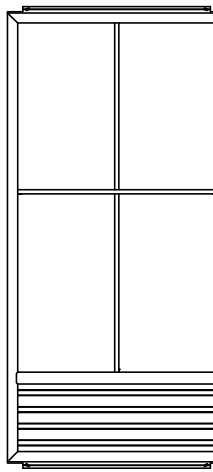




Care And Cleaning






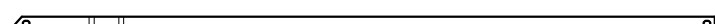

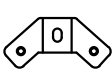

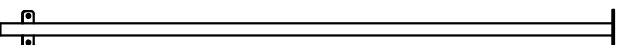
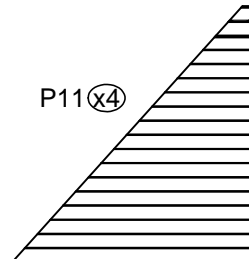
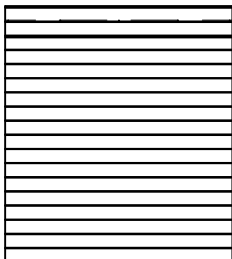
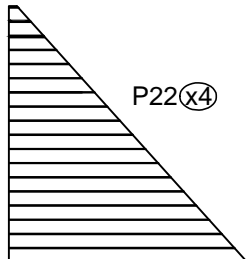
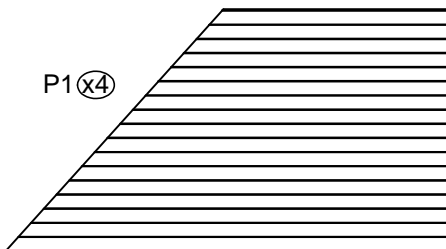
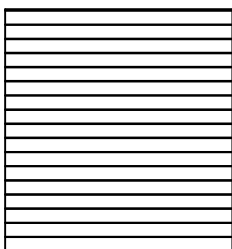
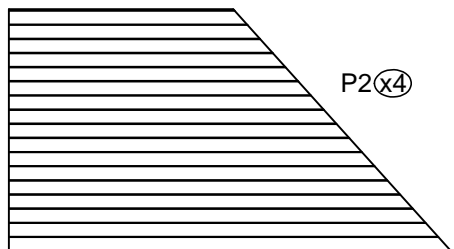
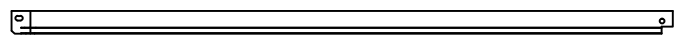
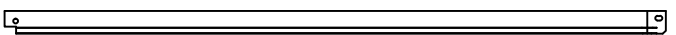
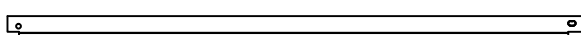
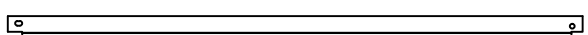
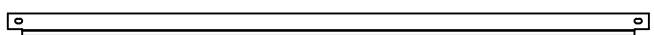



Wash frame parts with mild soap and water, rinse thoroughly.










Dry frame completely.


Do not use bleach, acid or other solvents on frame parts.

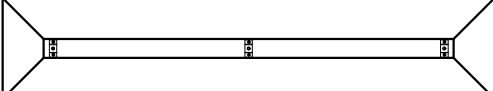Please inspect and tighten all bolts or fasteners on a regular basis to ensure proper performance and safety of your sunroom.

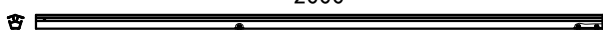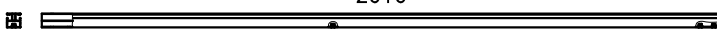
| | | | | | | | |
|---|--|---|--|--|--|---|--|
|  <p>2010</p> <p>890</p> <p>A(x14)</p> | |  <p>2010</p> <p>890</p> <p>A1(x2)</p> | |  <p>2010</p> <p>1000</p> <p>B(x2)</p> | |  <p>1967</p> <p>930</p> <p>B1(x2)</p> | |
|  <p>1910</p> <p>B2(x2)</p> | | | |  <p>1910</p> <p>B3(x2)</p> | | | |
|  <p>B4(x8)</p> | |  <p>B5(x2)</p> | |  <p>2005</p> <p>C(x28)</p> | | | |
|  <p>2005</p> <p>D(x4)</p> | | | |  <p>D1(x4)</p> | |  <p>E(x6)</p> | |
|  <p>1882</p> <p>E1(x2)</p> | | | |  <p>1882</p> <p>E2(x2)</p> | | | |
|  <p>1598</p> <p>E3(x2)</p> | | | |  <p>1598</p> <p>E4(x2)</p> | | | |
|  <p>1600</p> <p>E5(x2)</p> | | | |  <p>E6(x4)</p> | |  <p>E7(x6)</p> | |
|  <p>1930, 5</p> <p>F1(x2)</p> | | | |  <p>1930, 5</p> <p>F2(x2)</p> | | | |
|  <p>1646, 5</p> <p>F3(x2)</p> | | | |  <p>1646, 5</p> <p>F4(x2)</p> | | | |
|  <p>1600</p> <p>F5(x2)</p> | | | |  <p>G(x4)</p> | |  <p>G1(x6)</p> | |
|  <p>1258</p> <p>H(x1)</p> | | | |  <p>1298</p> <p>H1(x1)</p> | | | |

| | | | |
|---|--------|---|---|
|  2000 Ja(x4) | |  2010 Ka(x6) | |
|  1070 Jb(x4) | J (x4) |  258 Kb(x6) | K (x6) |
|  990 L (x2) | |  1044 L1(x4) | |
|  1044 L2(x4) | |  L3(x4) | |
|  L4(x6) | |  1010 L5(x8) | |
| <div><div> P11(x4)</div><div> P33(x2)</div><div> P22(x4)</div></div> <div><div> P1(x4)</div><div> P3(x2)</div><div> P2(x4)</div></div> | | | |
|  1101, 5 Q1(x4) | |  1101, 5 Q2(x4) | |
|  958 Q3(x4) | |  958 Q4(x4) | |
|  1068 Q (x2) | |  R(x20) |  S (x4) |
| | |  T (x14) | |
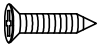
| | | | | | |
|---|------------|--|-----------|---|-----------|
|  M6x16 | 1# x181 |  M5x16 | 2# x76 |  M5x48 | 3# x24 |
|  4x16 | 4# x16 |  ST3.5x13 | 5# x40 |  M6x35 | 6# x16 |
|  M5x8 | 7# x8 |  M6x12 | 8# x12 |  M5x8 | 9# x6 |

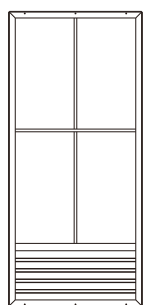

A1(x2)



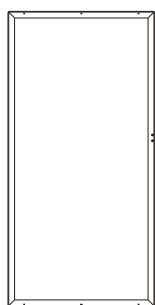




B(x2)



C(x4)

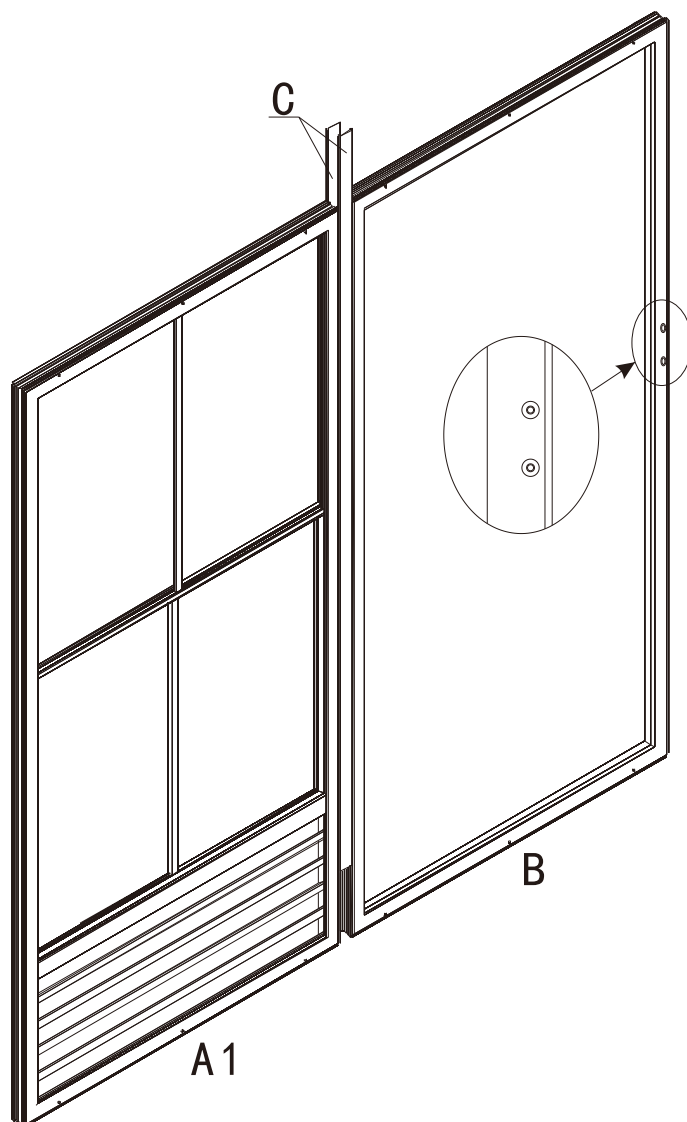
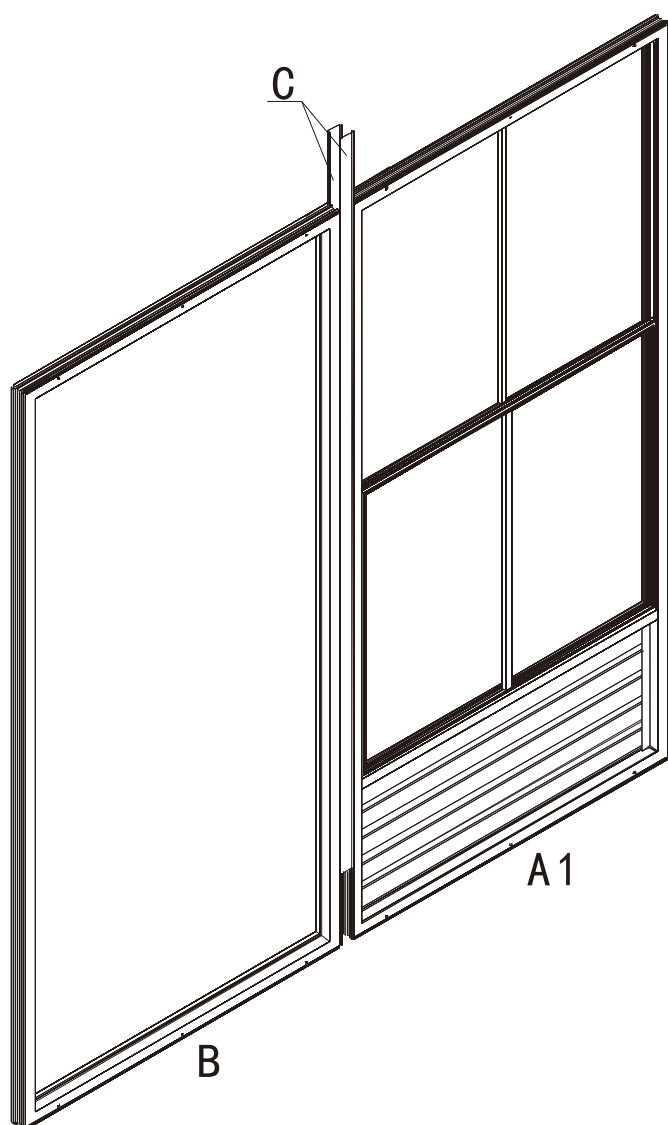
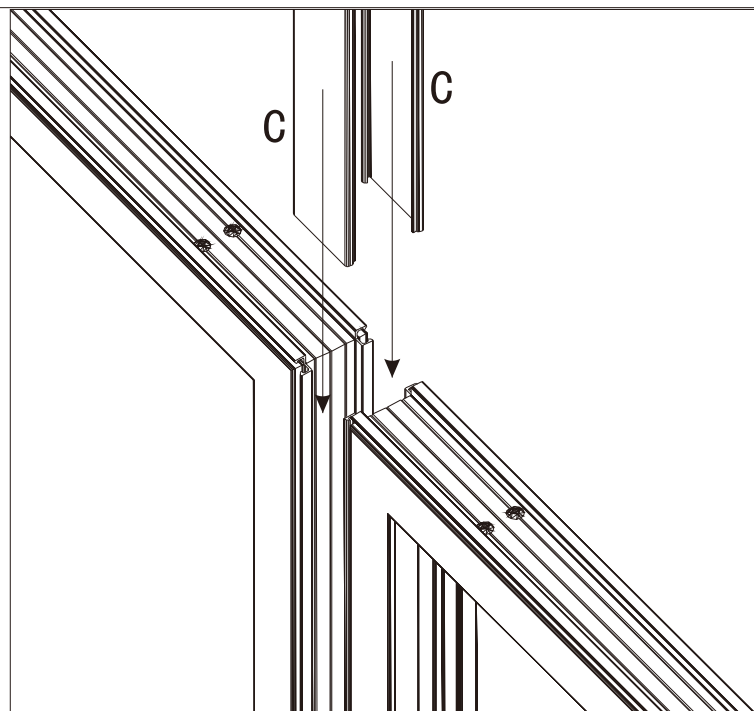
CONNECTING THE DOOR ASSEMBLIES:




 t B2(x2)
 F B3(x2)


 M5x48
 3#
 x24

DOOR TRACK ASSEMBLY:

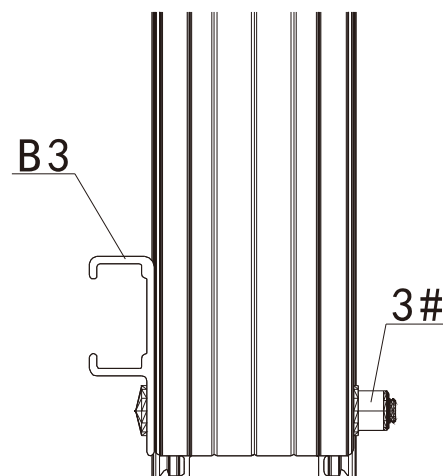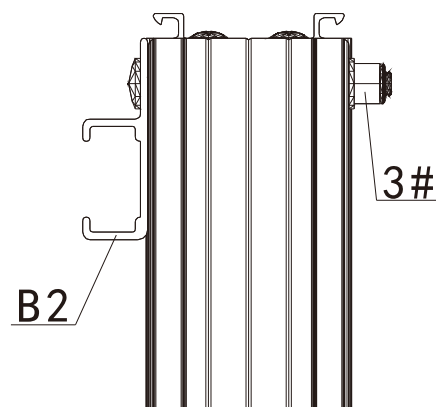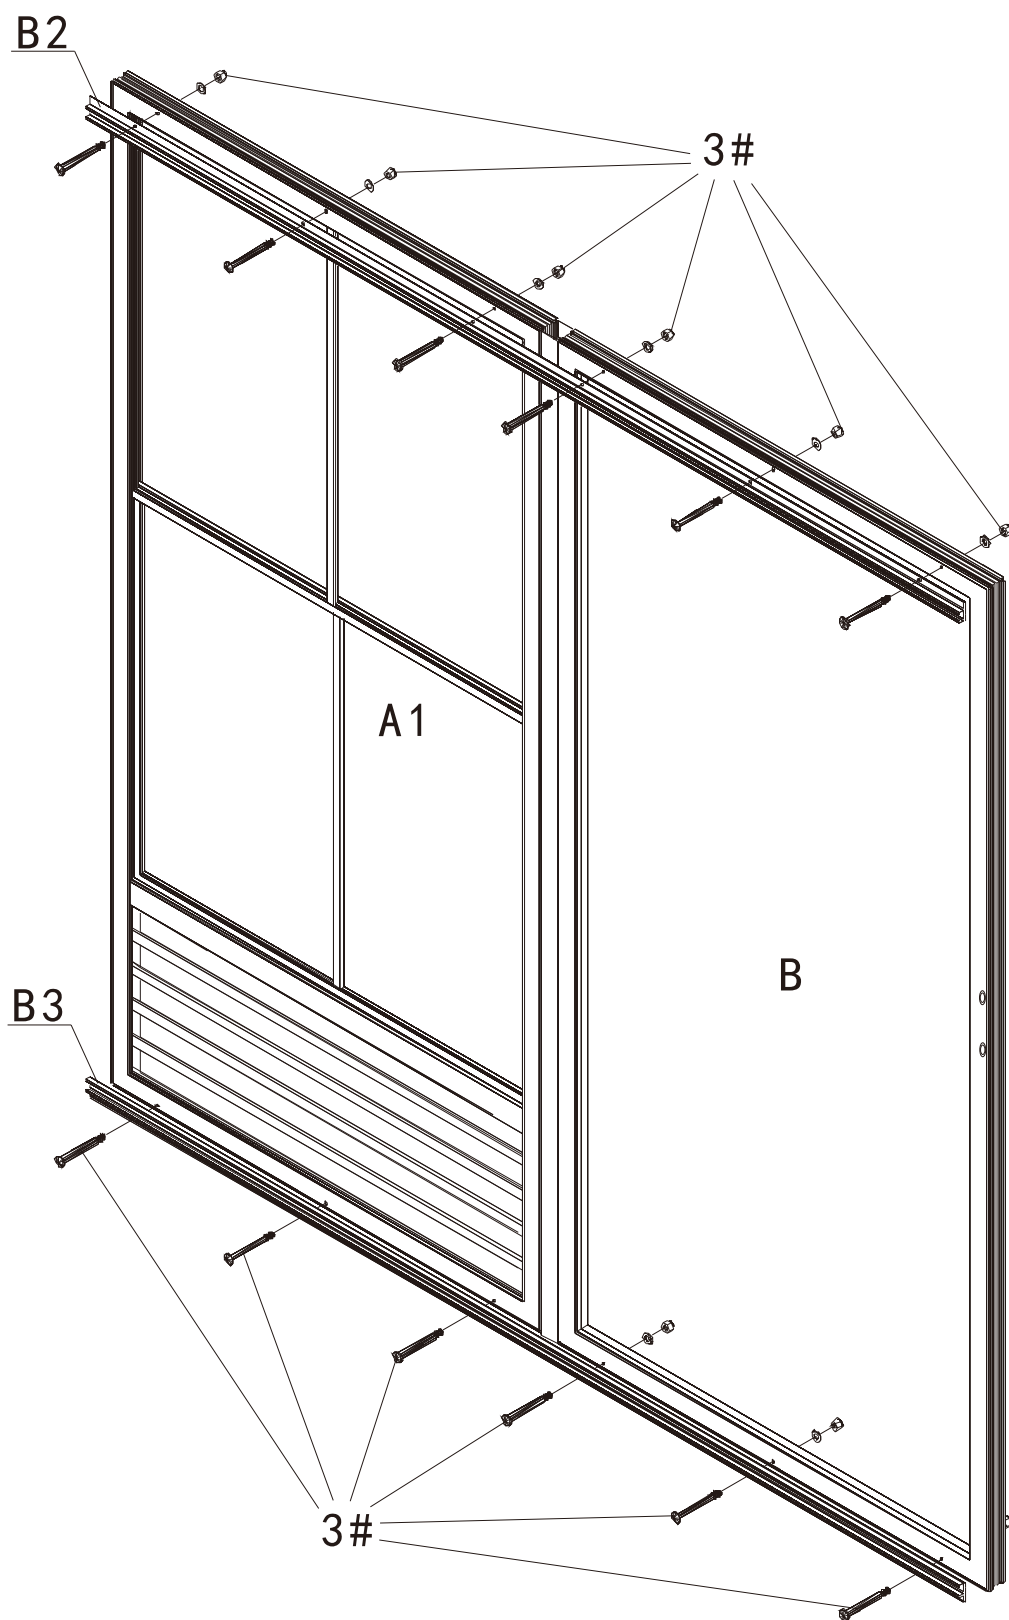


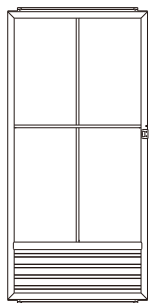

B1(x2)

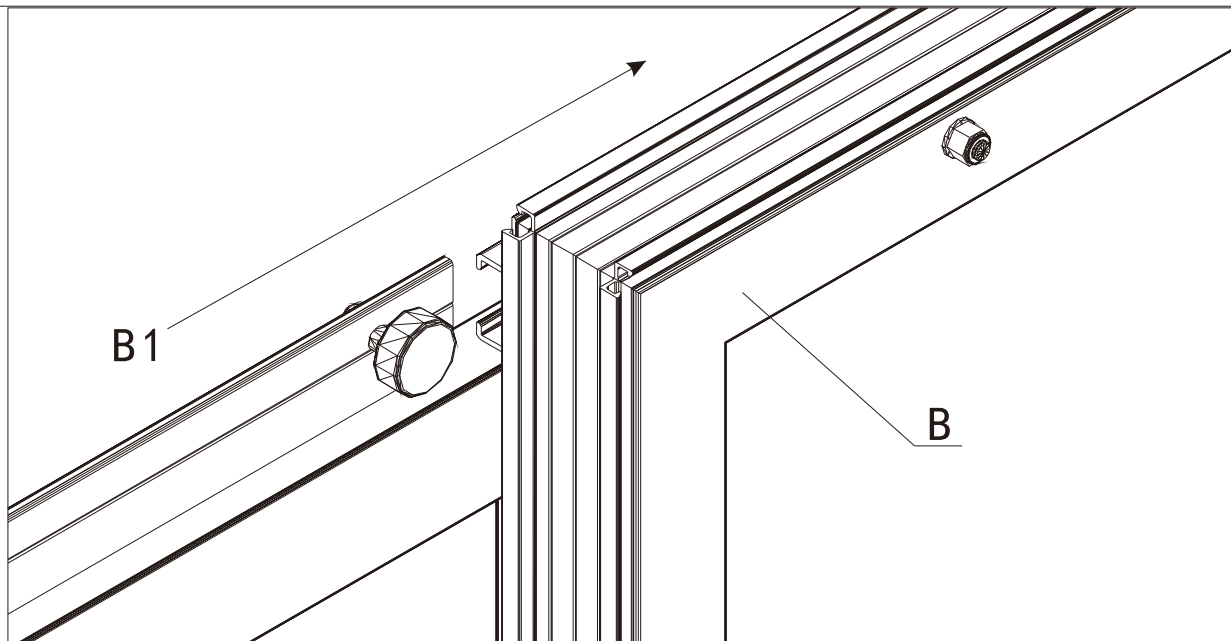

SLIDING DOOR ASSEMBLY:

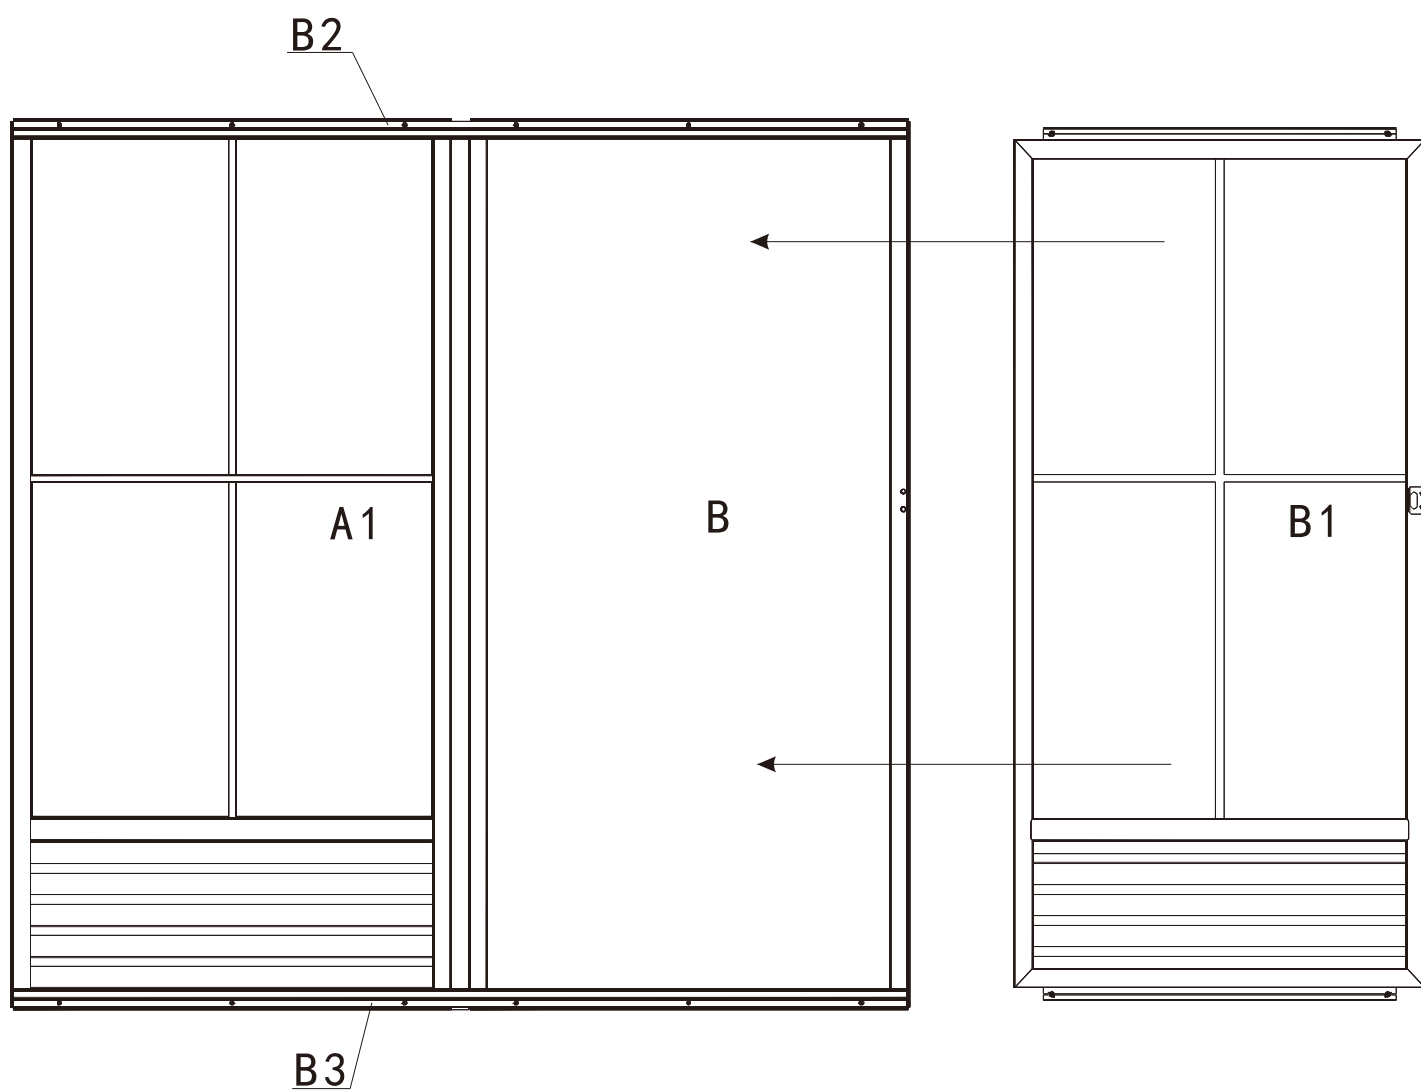



B4(x8)



M5x16

2#
x4





B5(x2)




4x16

4#
x16

DOOR STOPPER & DOOR LOCK ASSEMBLY:

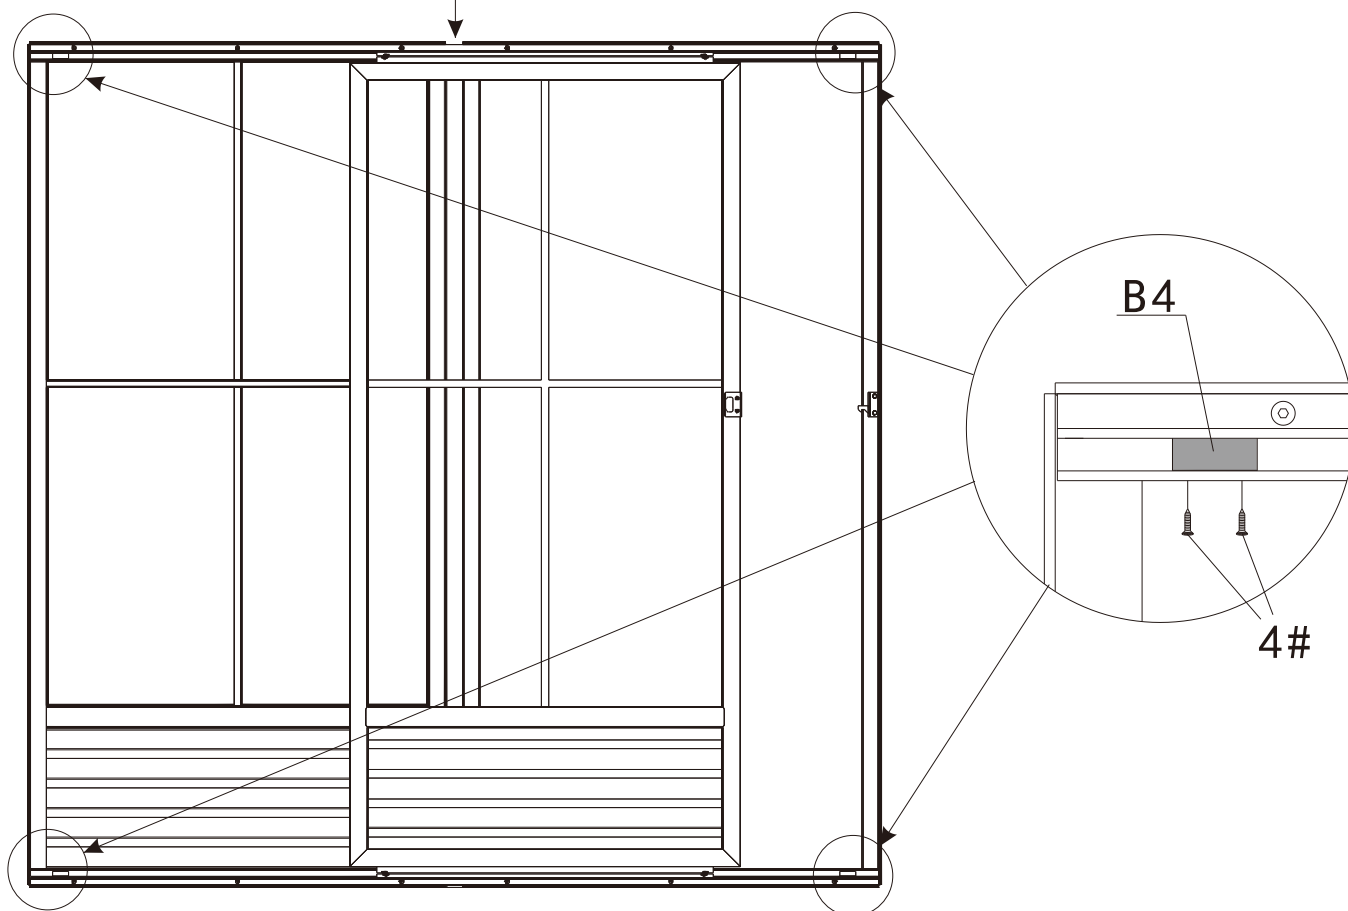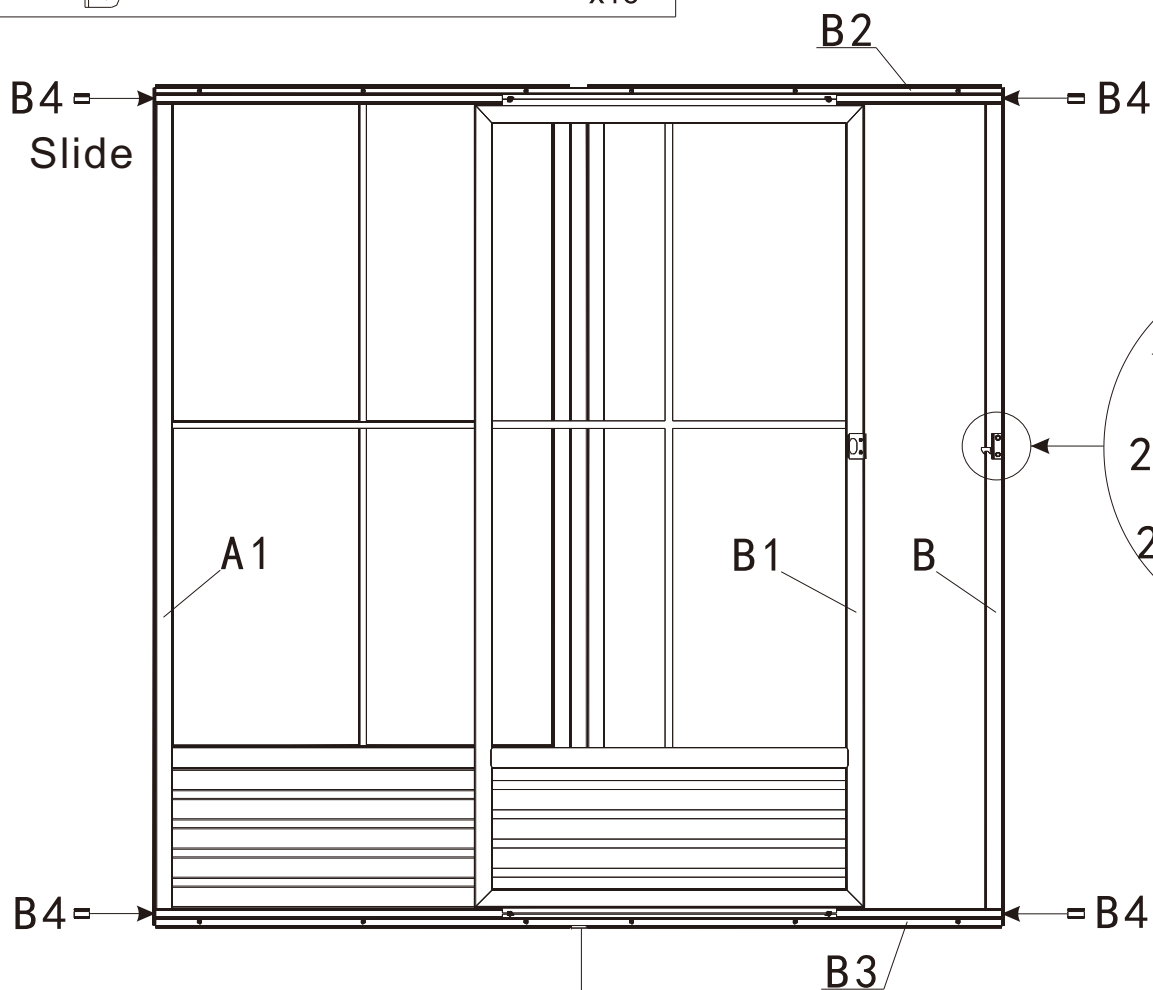


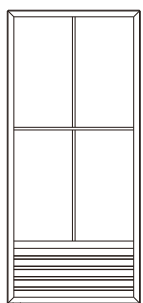



A x14




C x24


Connecting The Screen Panels:

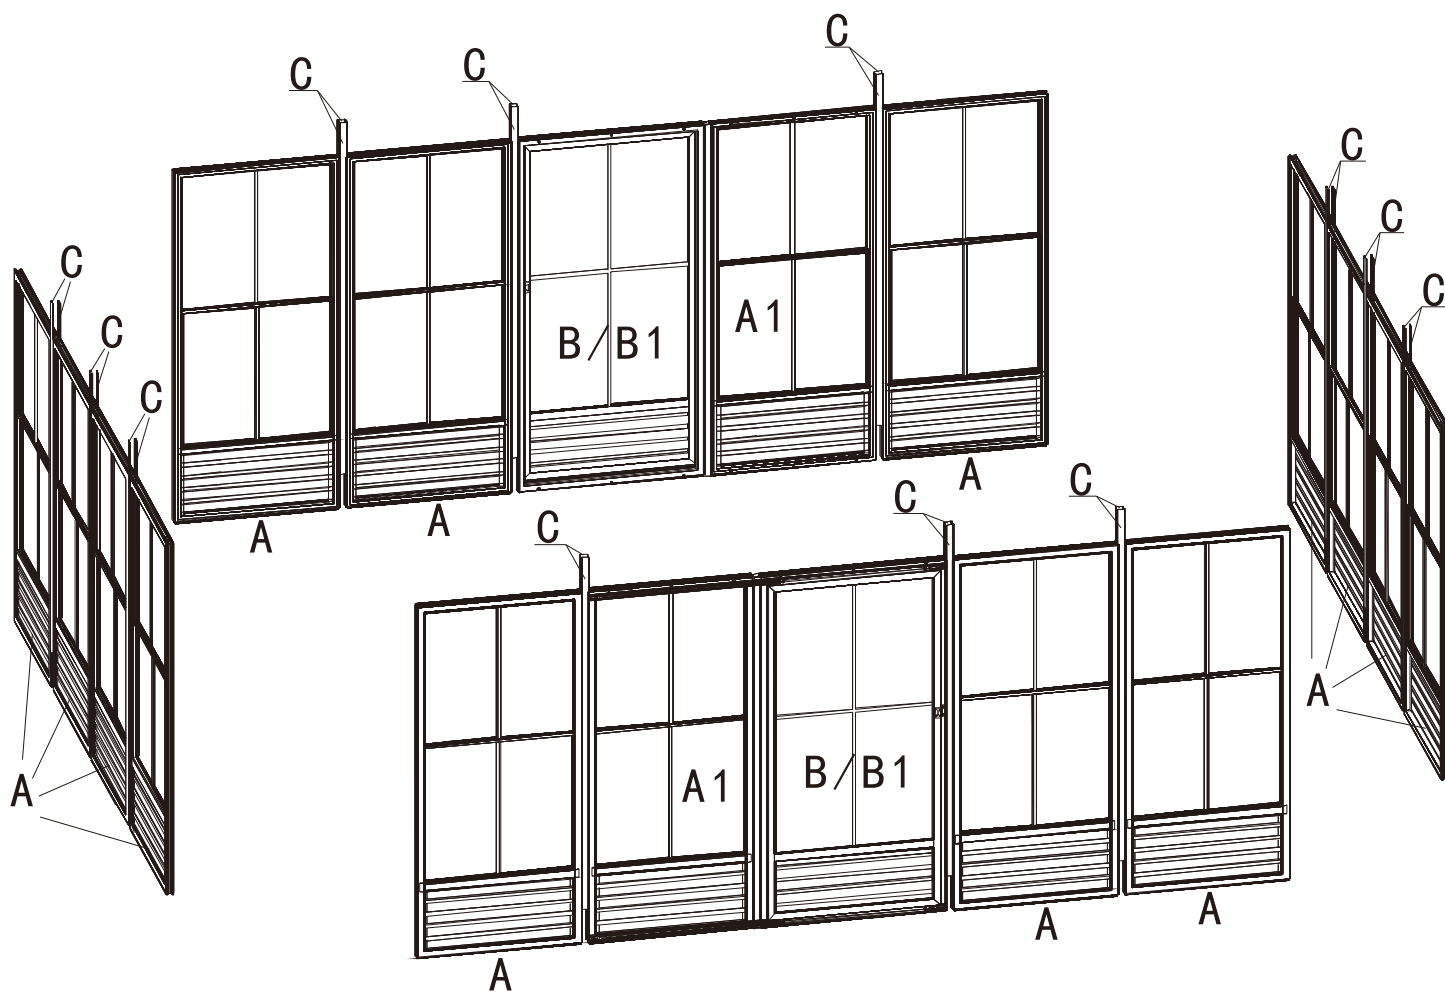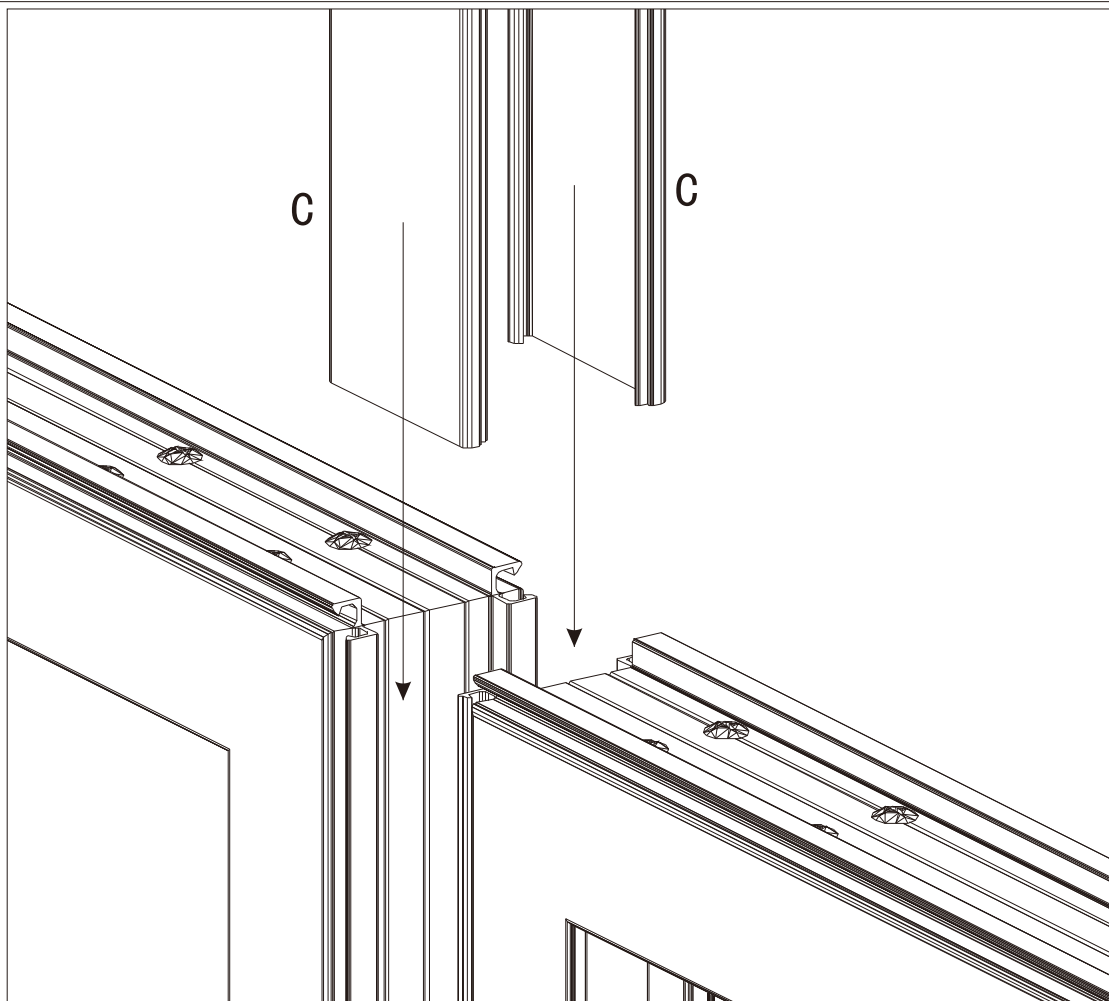





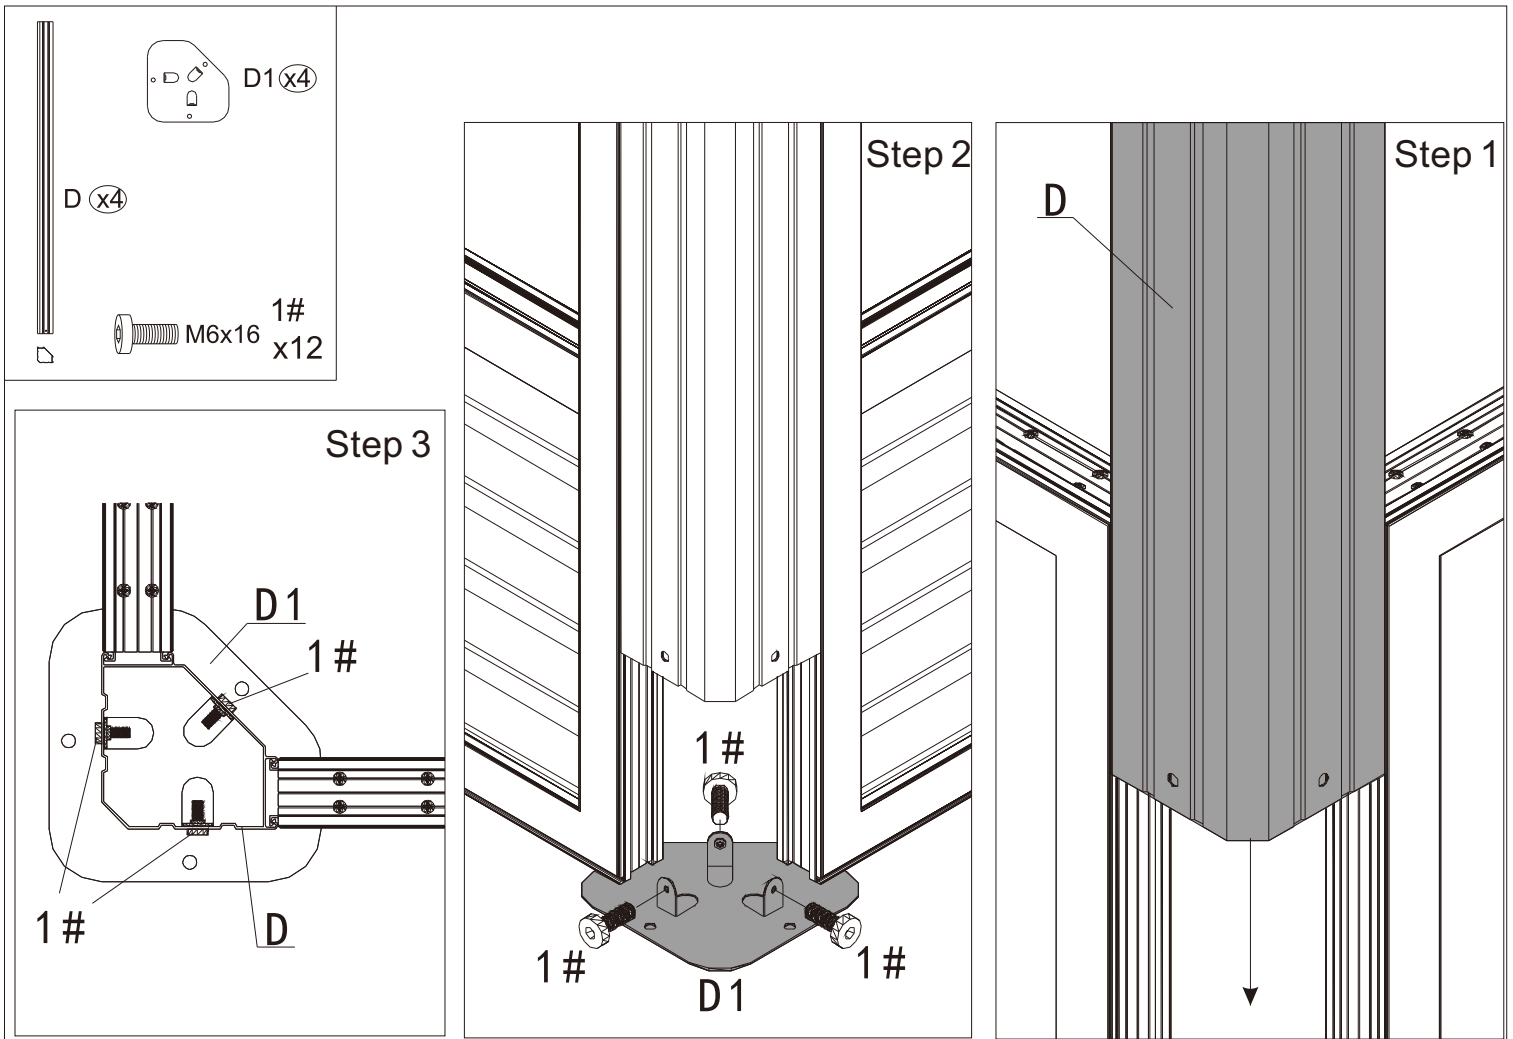


Connecting the Bases

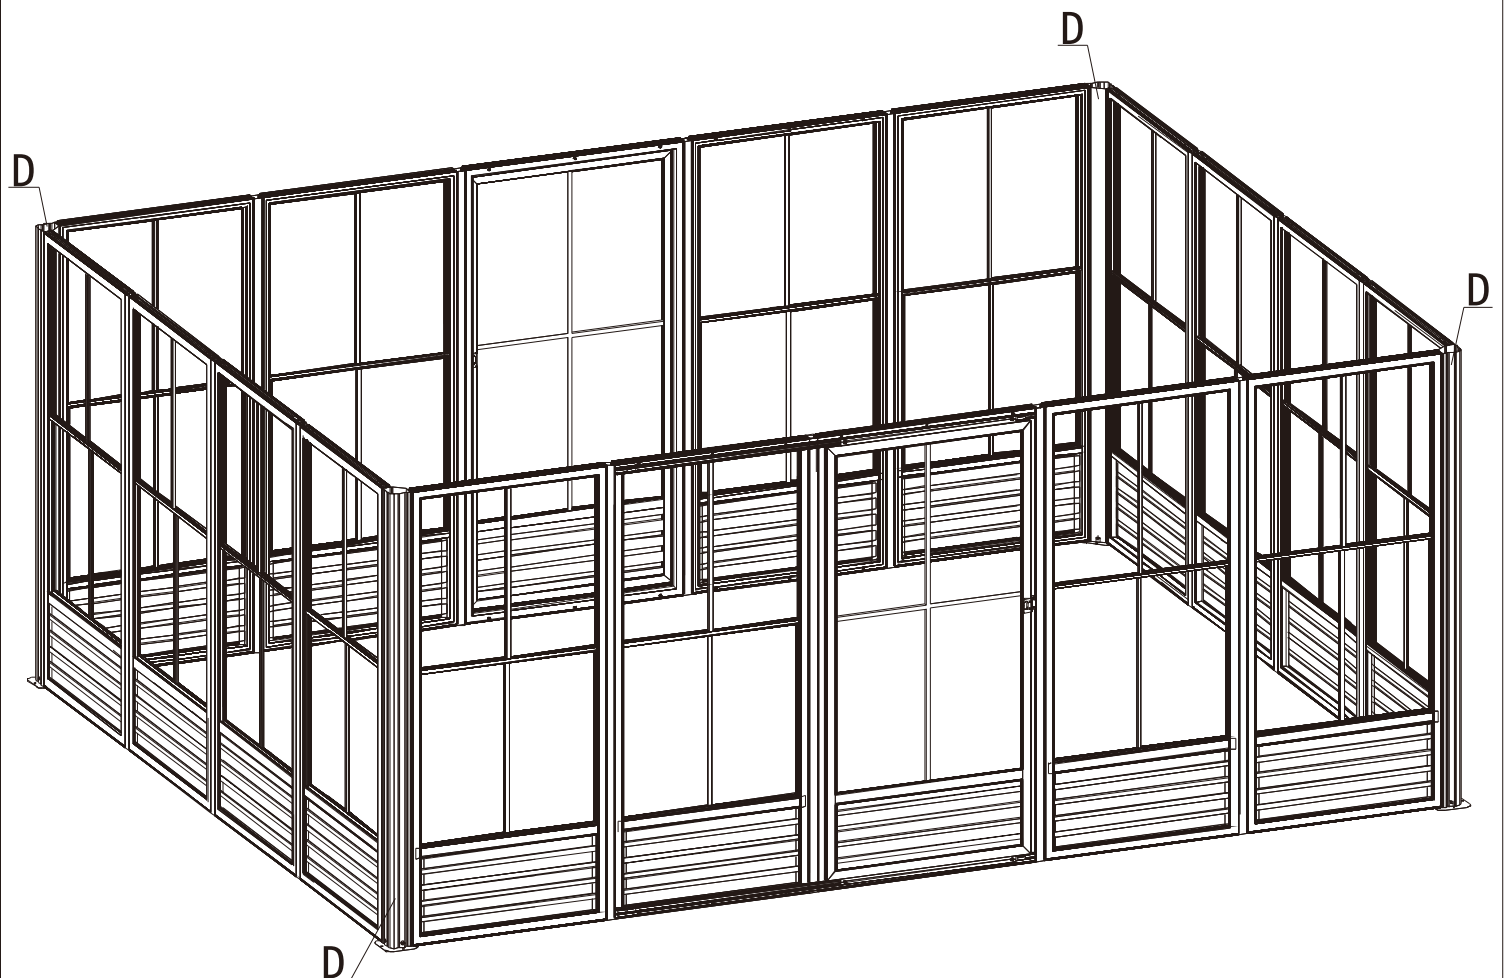


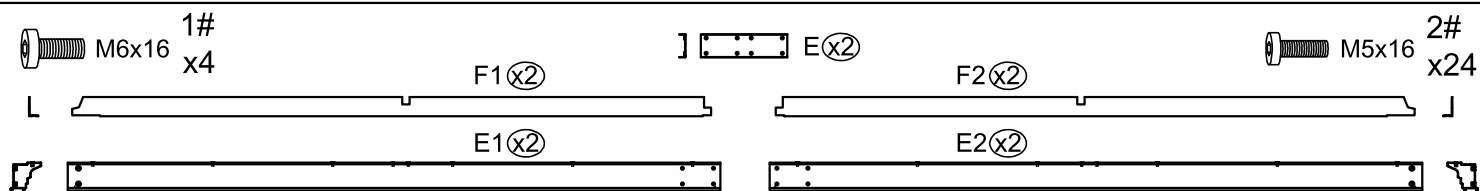










CROSSBEAMS ASSEMBLY:

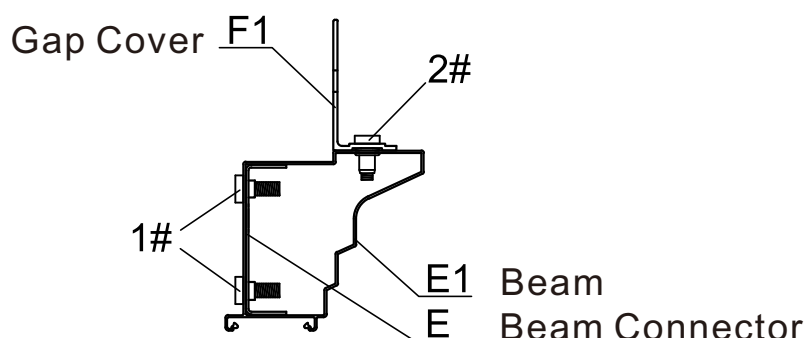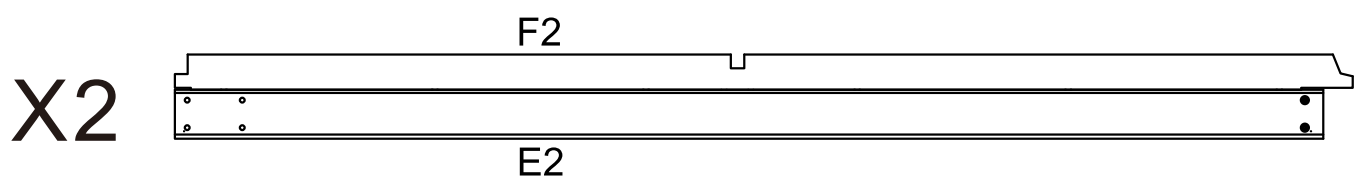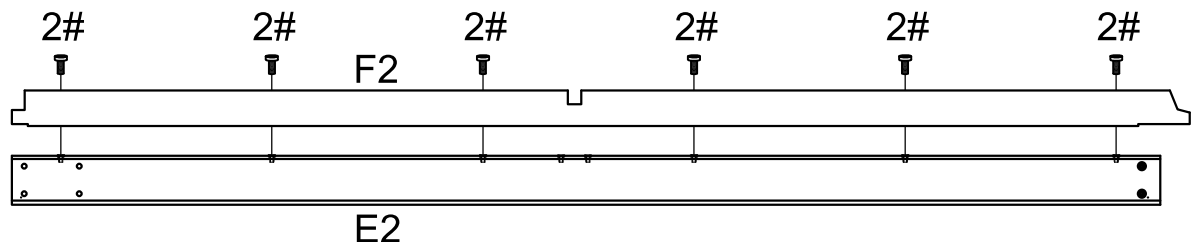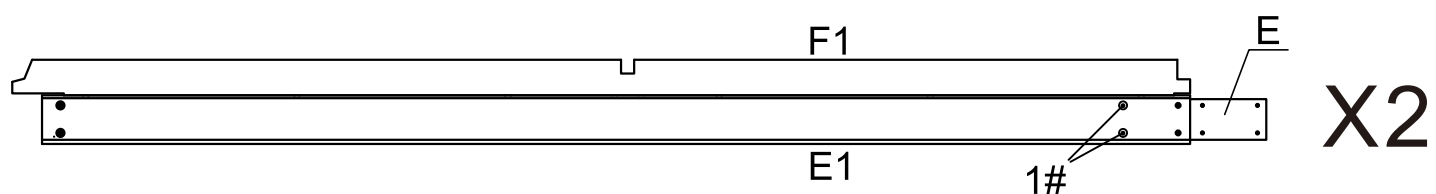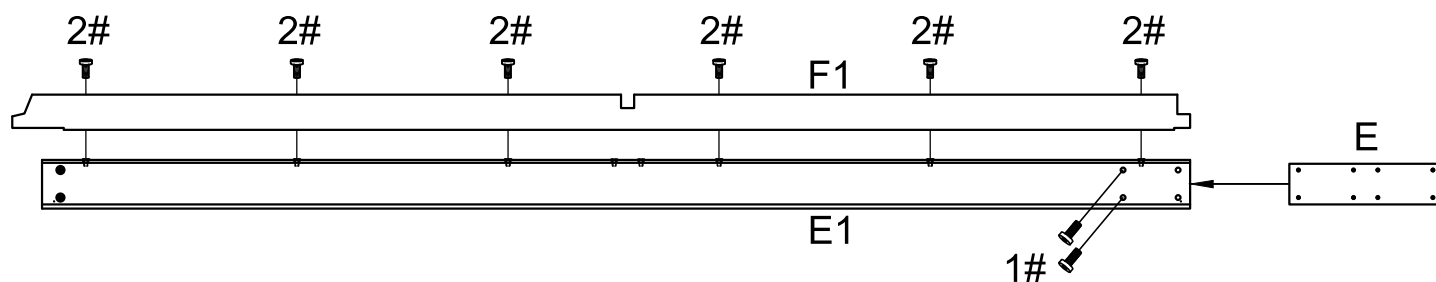

Section View

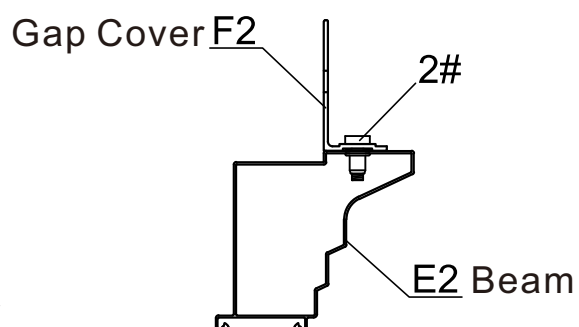

Section View

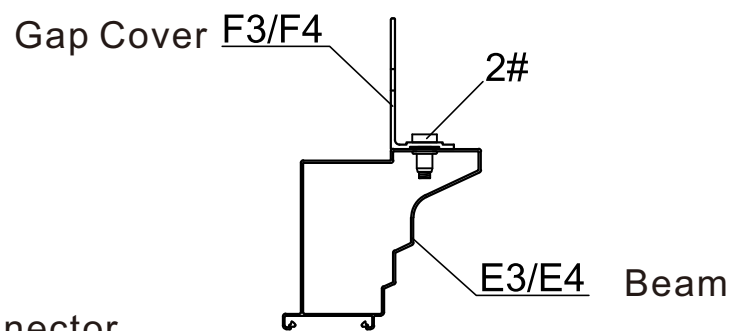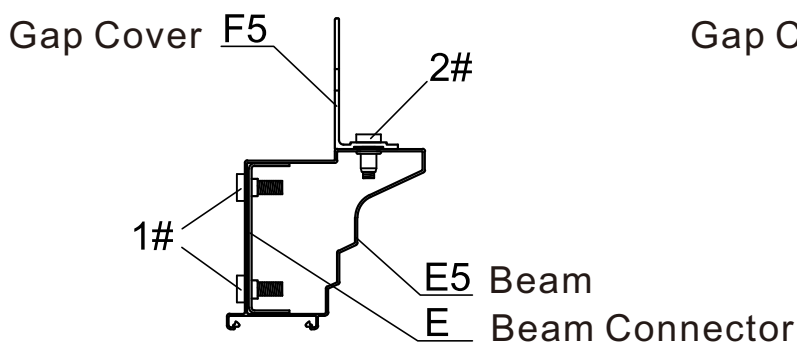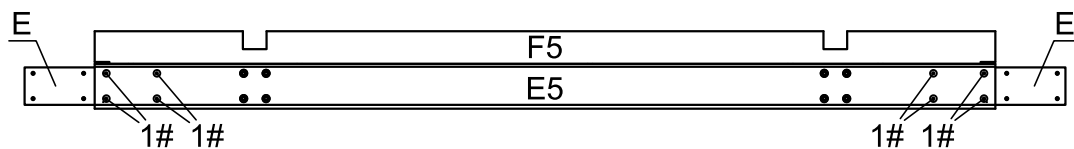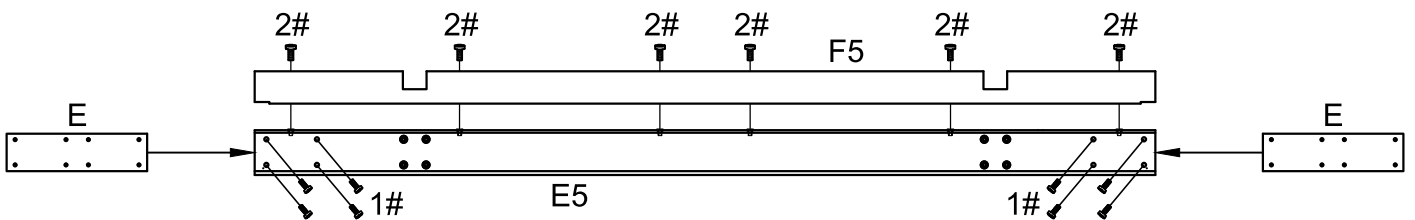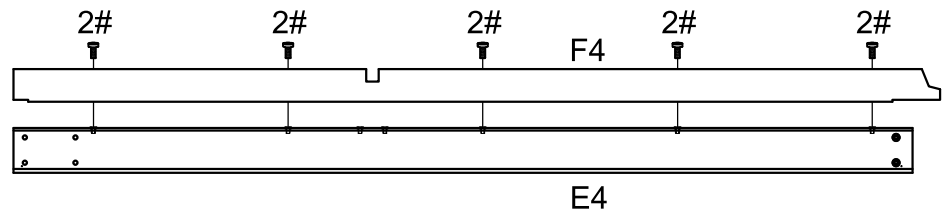
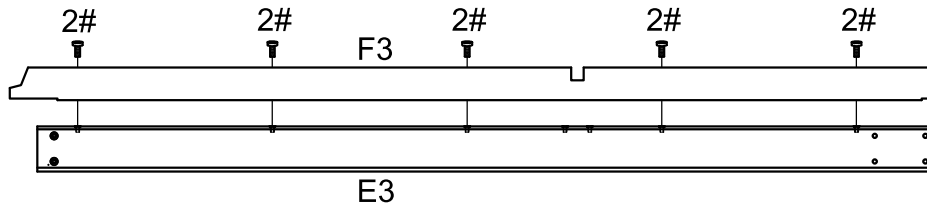
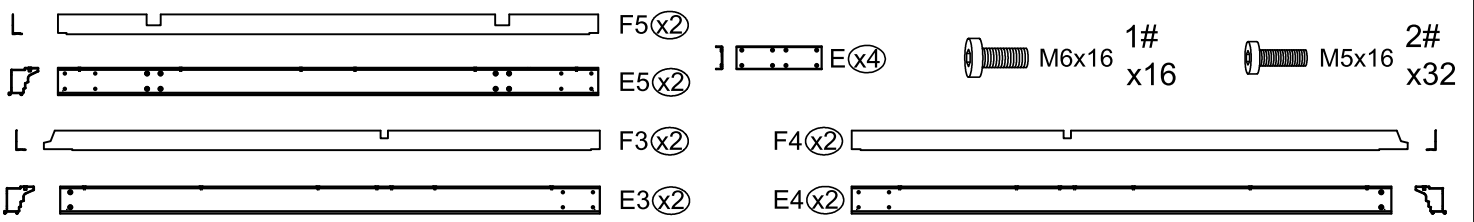





M6x16



1#
x20

Slide the Crossbeams to the panel

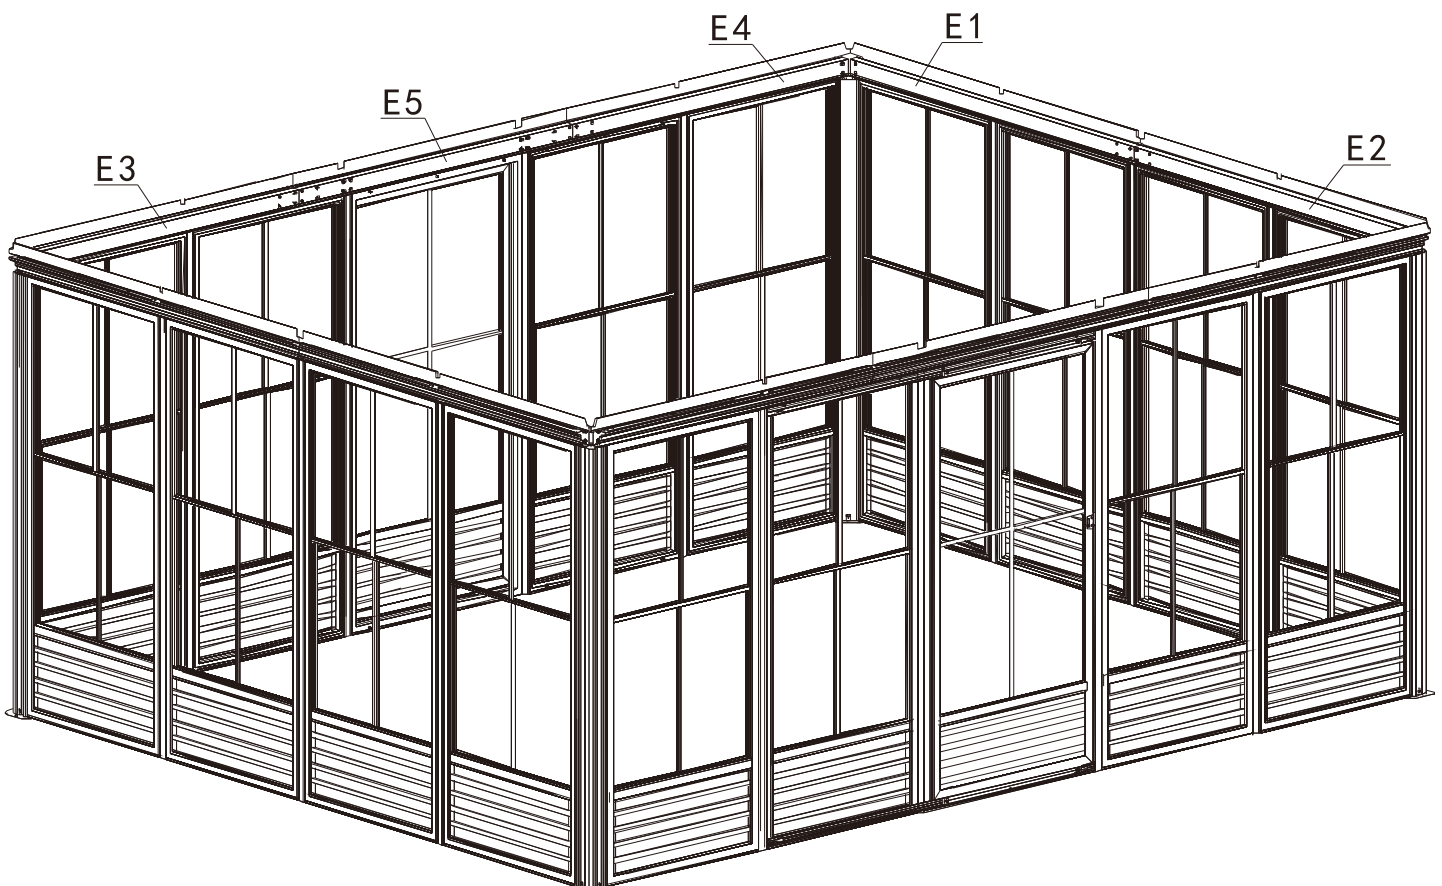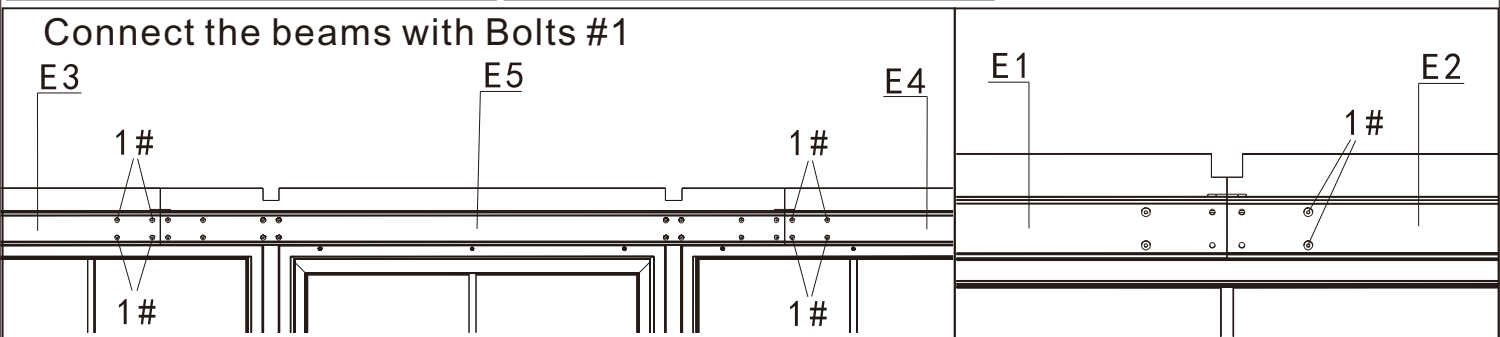
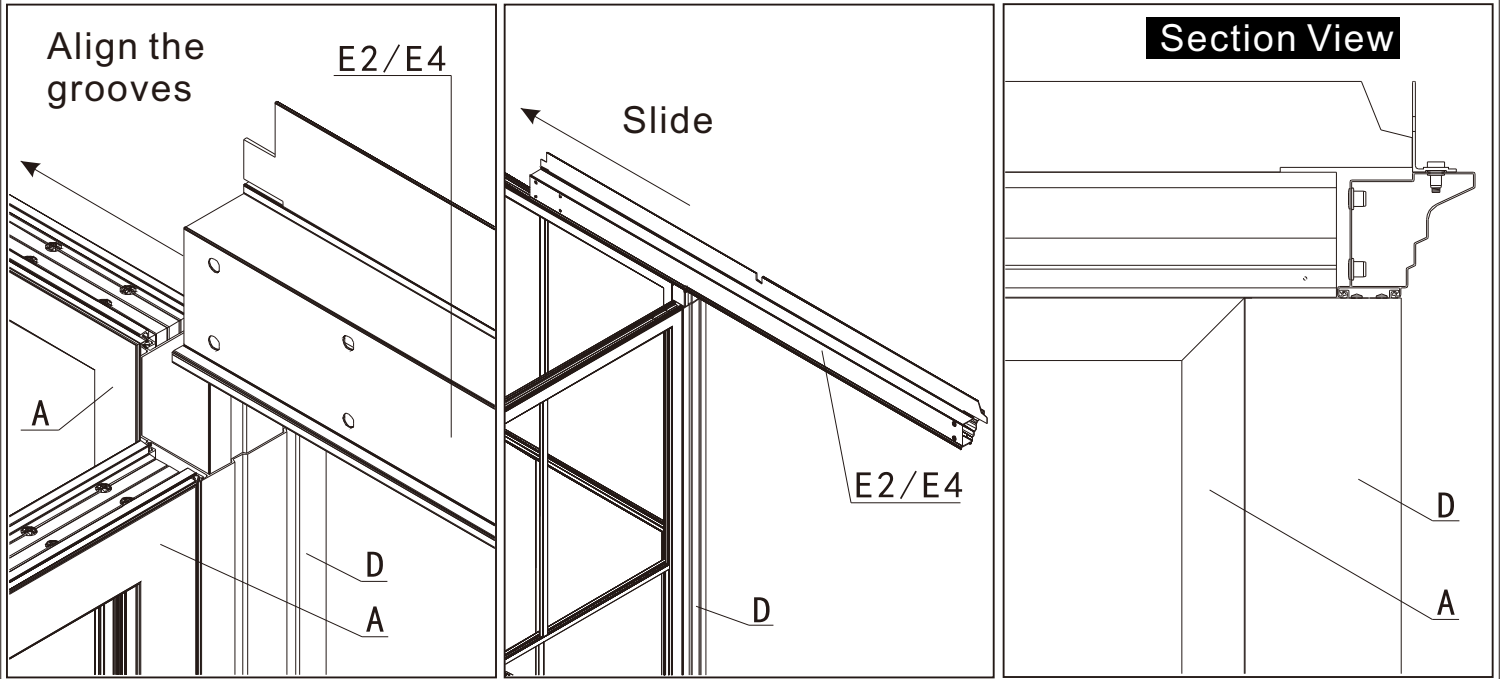



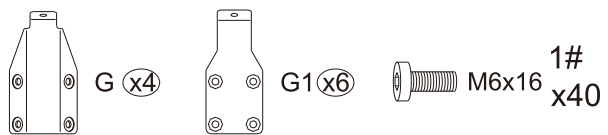


Connecting the iron-angles

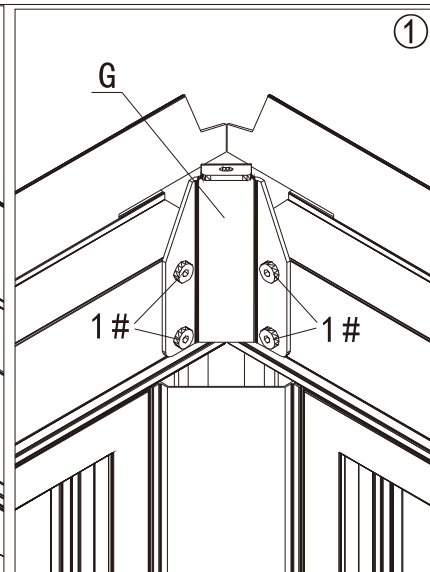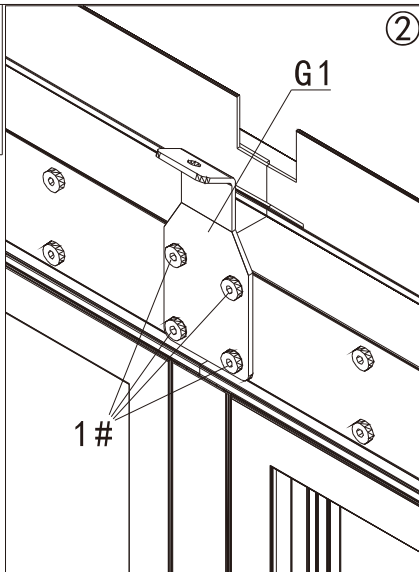


Inside View

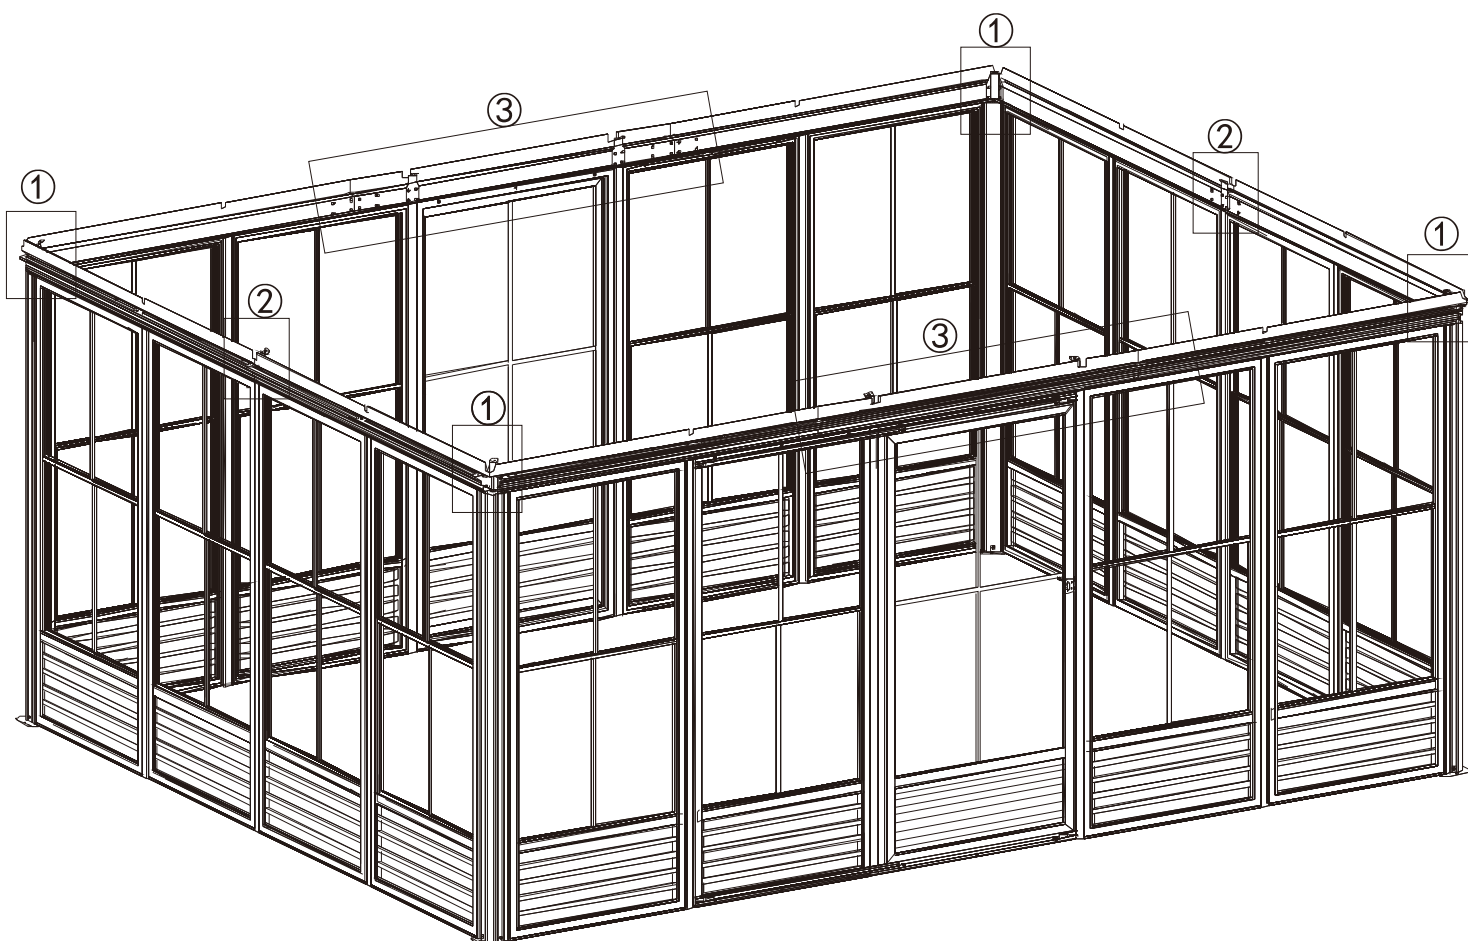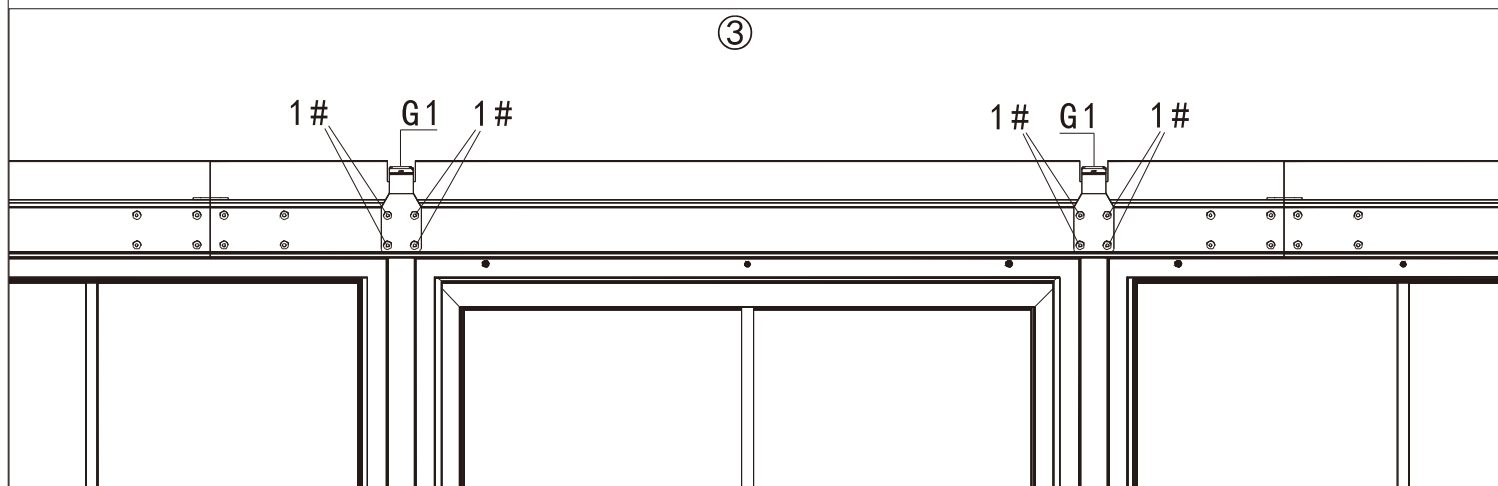




Connecting the Corner Covers and Gap Covers:

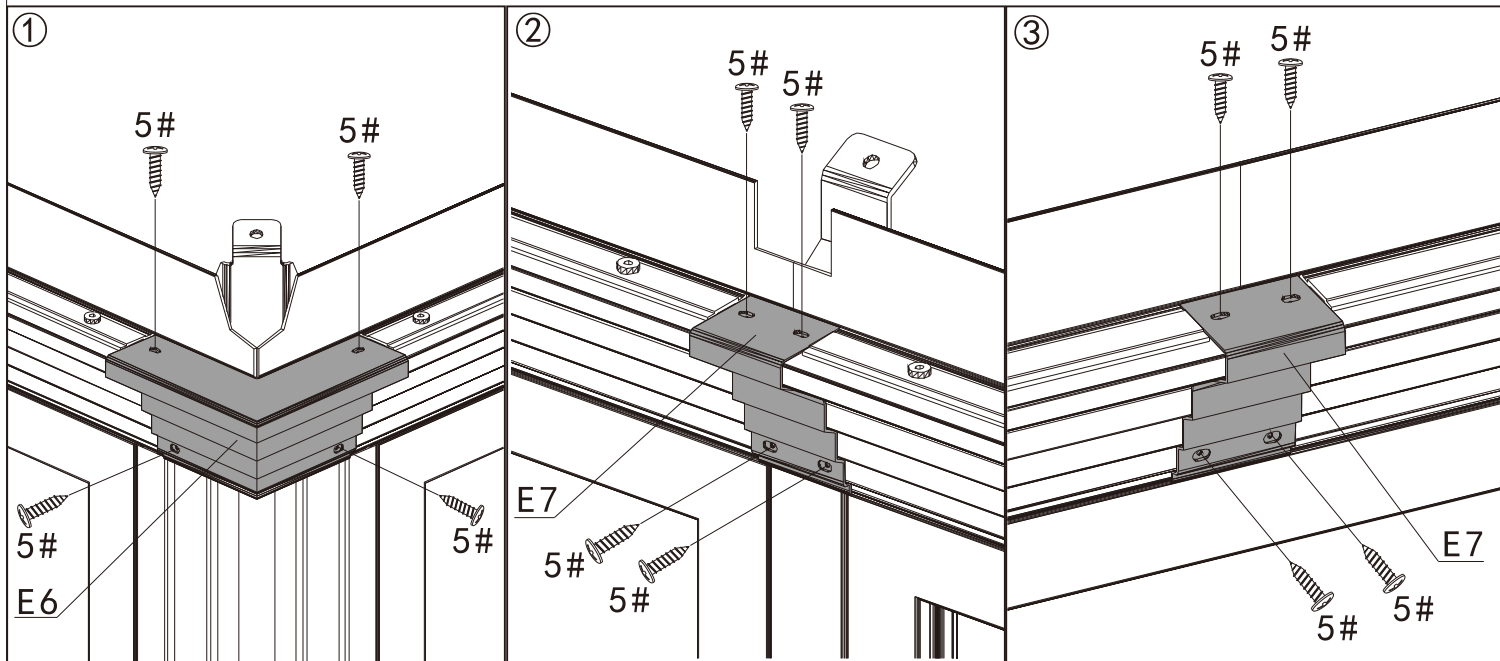

Outside View

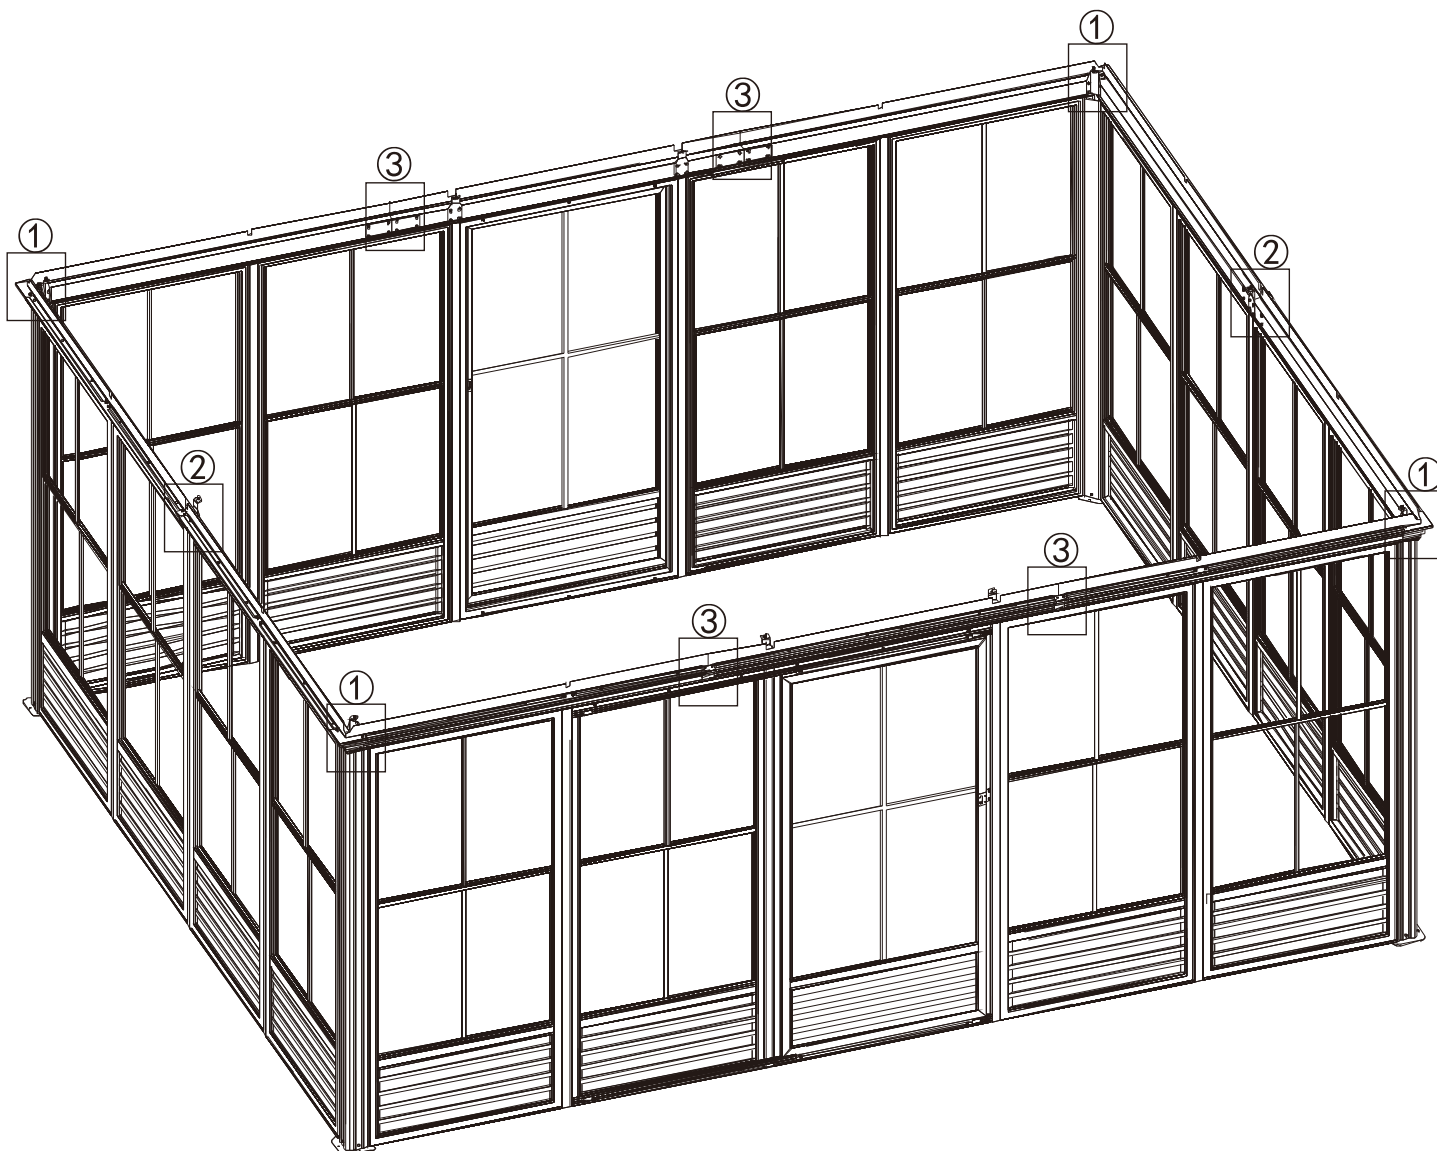

Jb (x4)


Ja (x4)




M6x16 1#
x8



M5x8 7#
x8

Connect #Ja with #Jb using 2 Bolts 1 and 2 Bolts #7 to form the whole Corner Roof Tube #J.

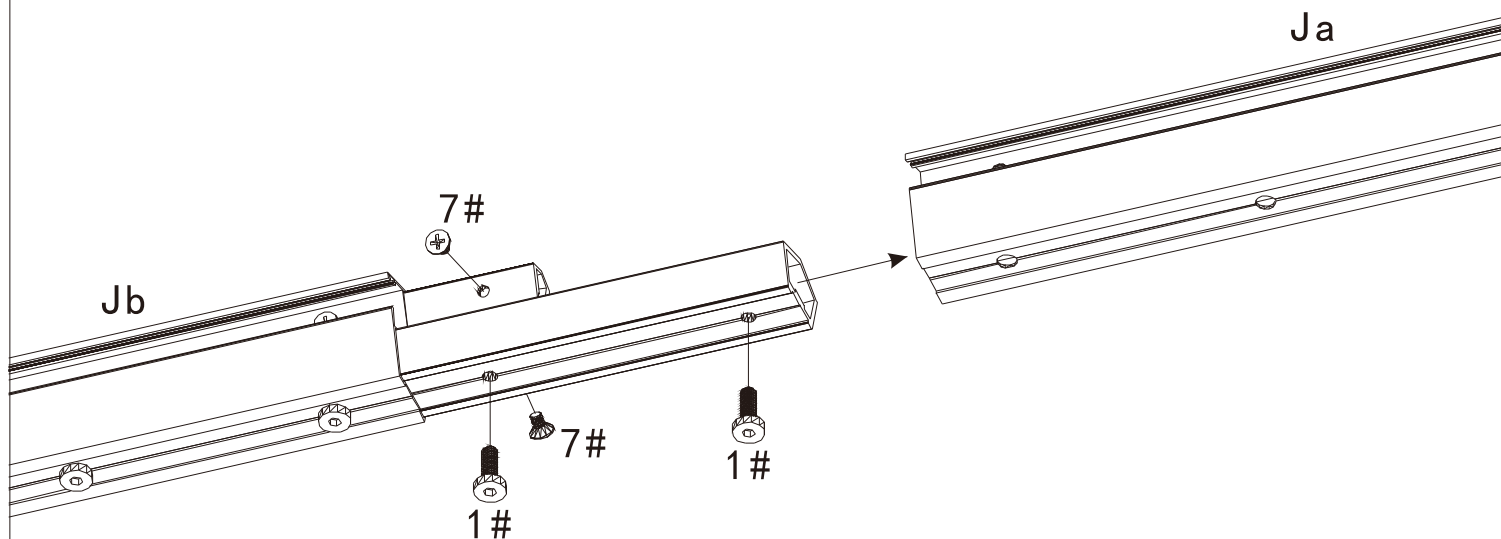


X4

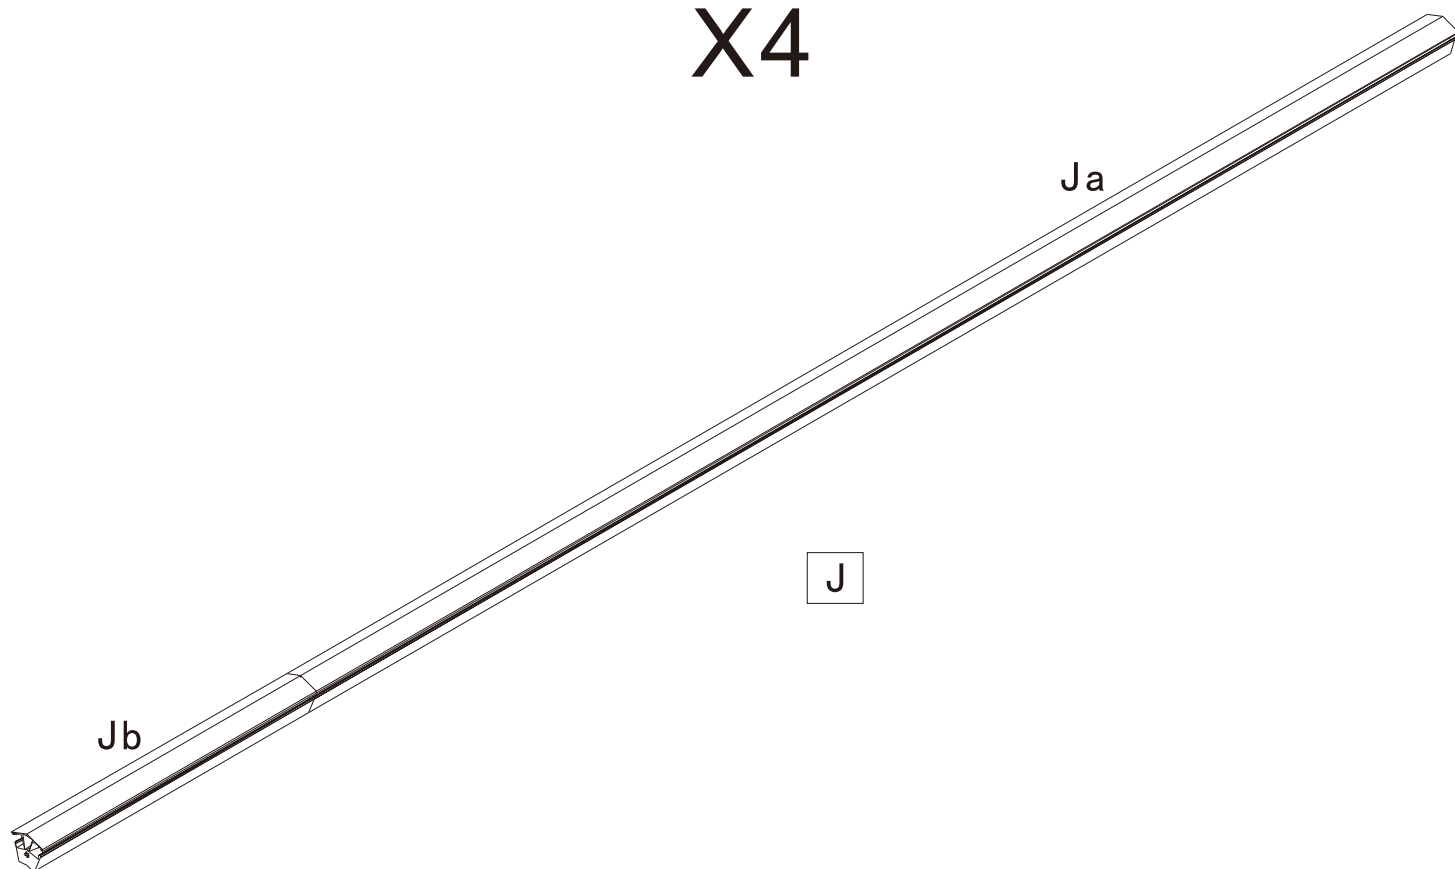

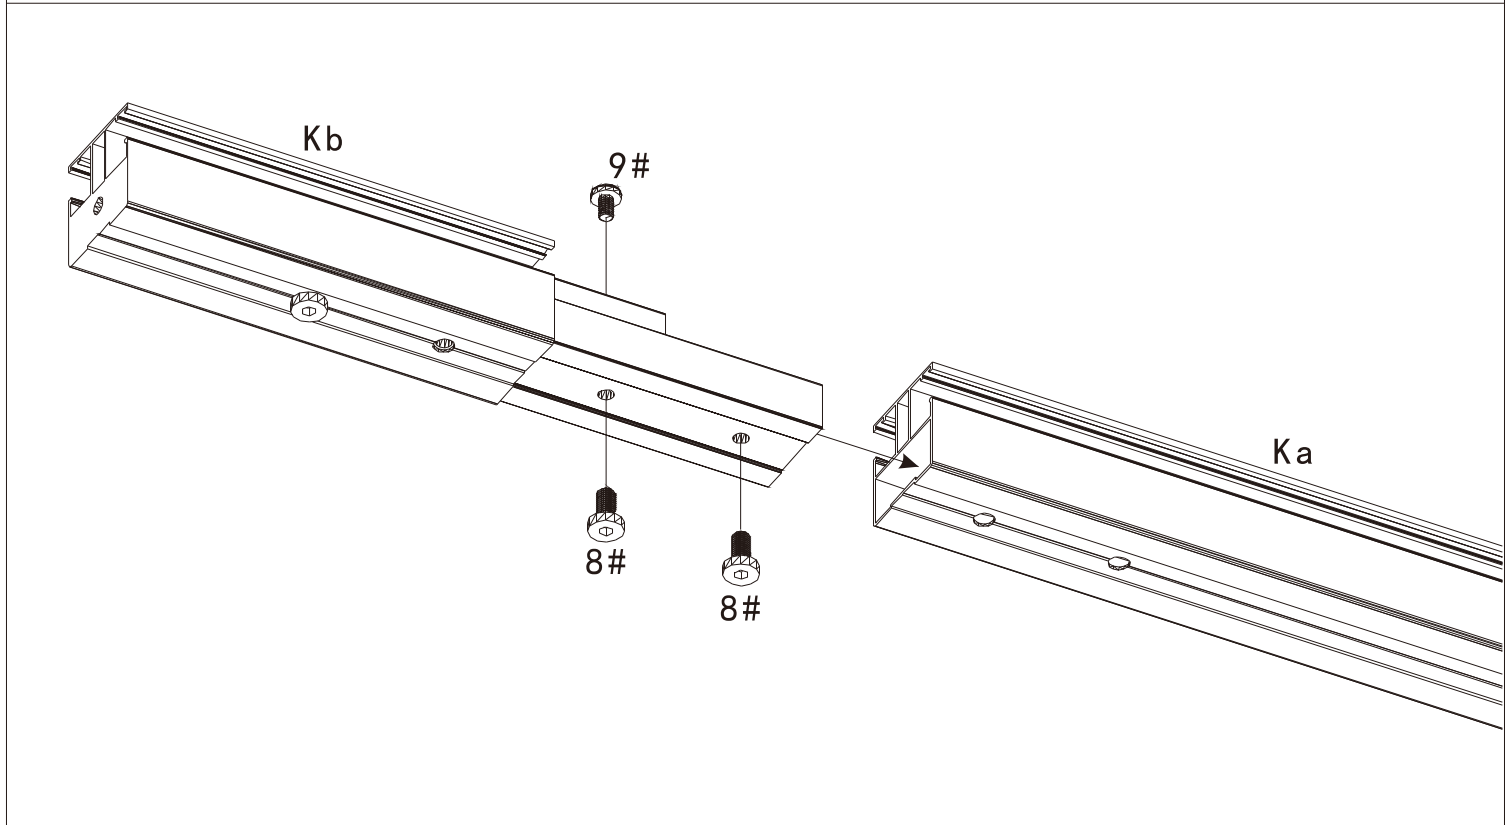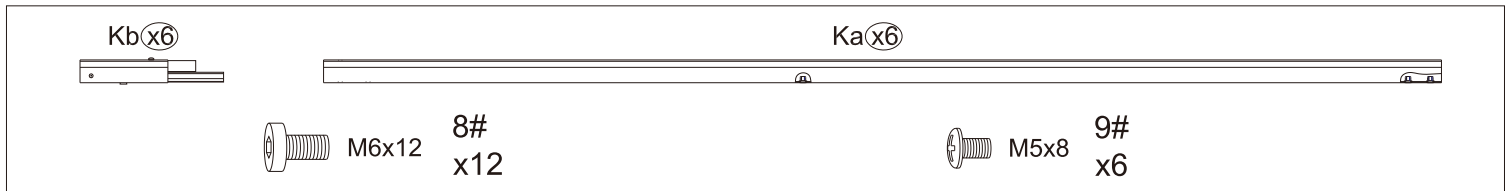

Connect #Ka with #Kb using 2 Bolts 8 and 1 Bolt #9 to form the whole Middle Roof Tube #K.

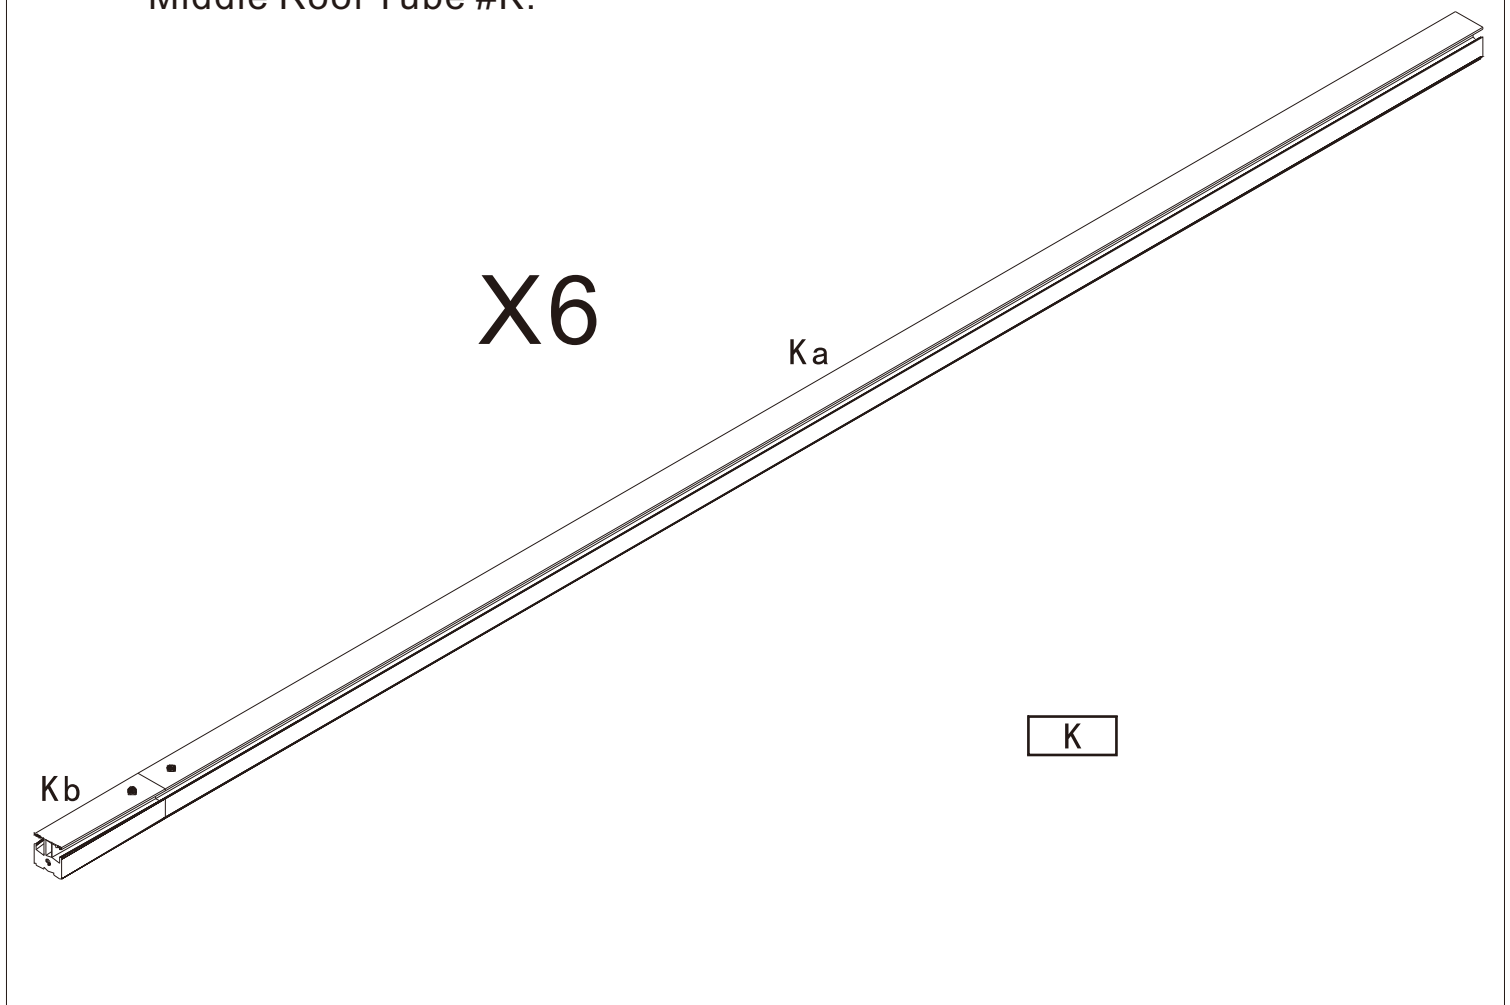



H (x1)


M6x16 1#
x30






J (x4)




K (x6)

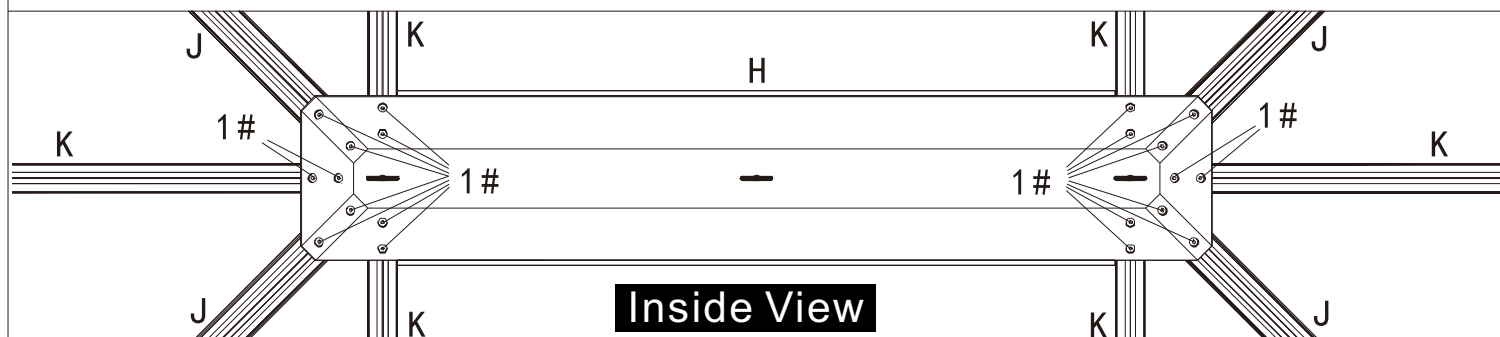


Inside View

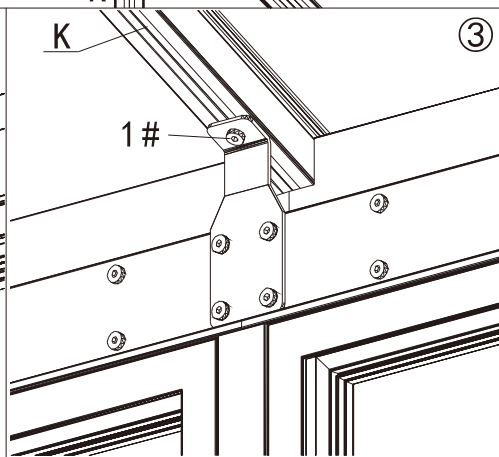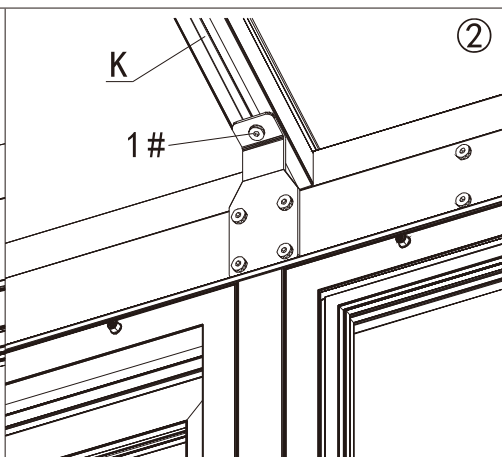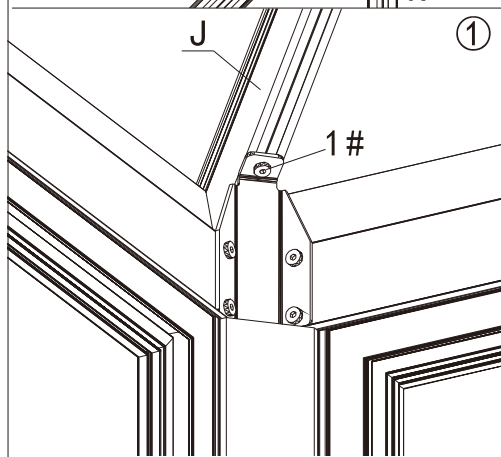

Assembling the roof structure :

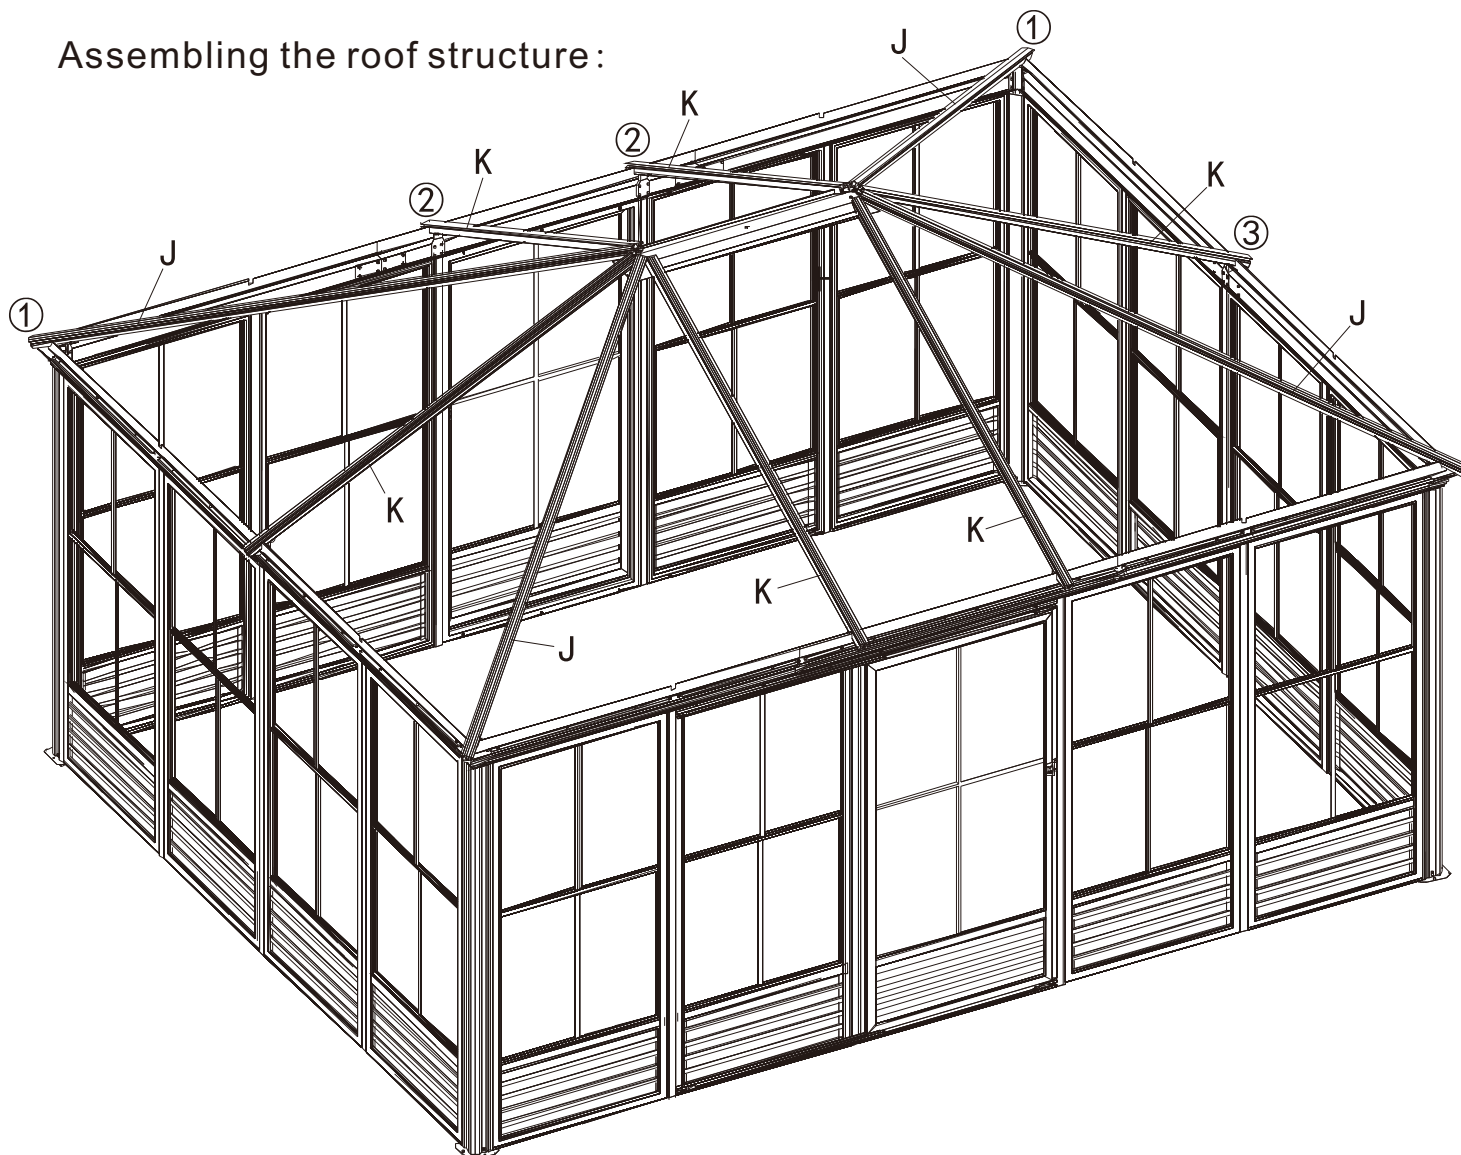






H1(x1)



M6x16

1#
x3

Assembling the Outside Roof Cover:

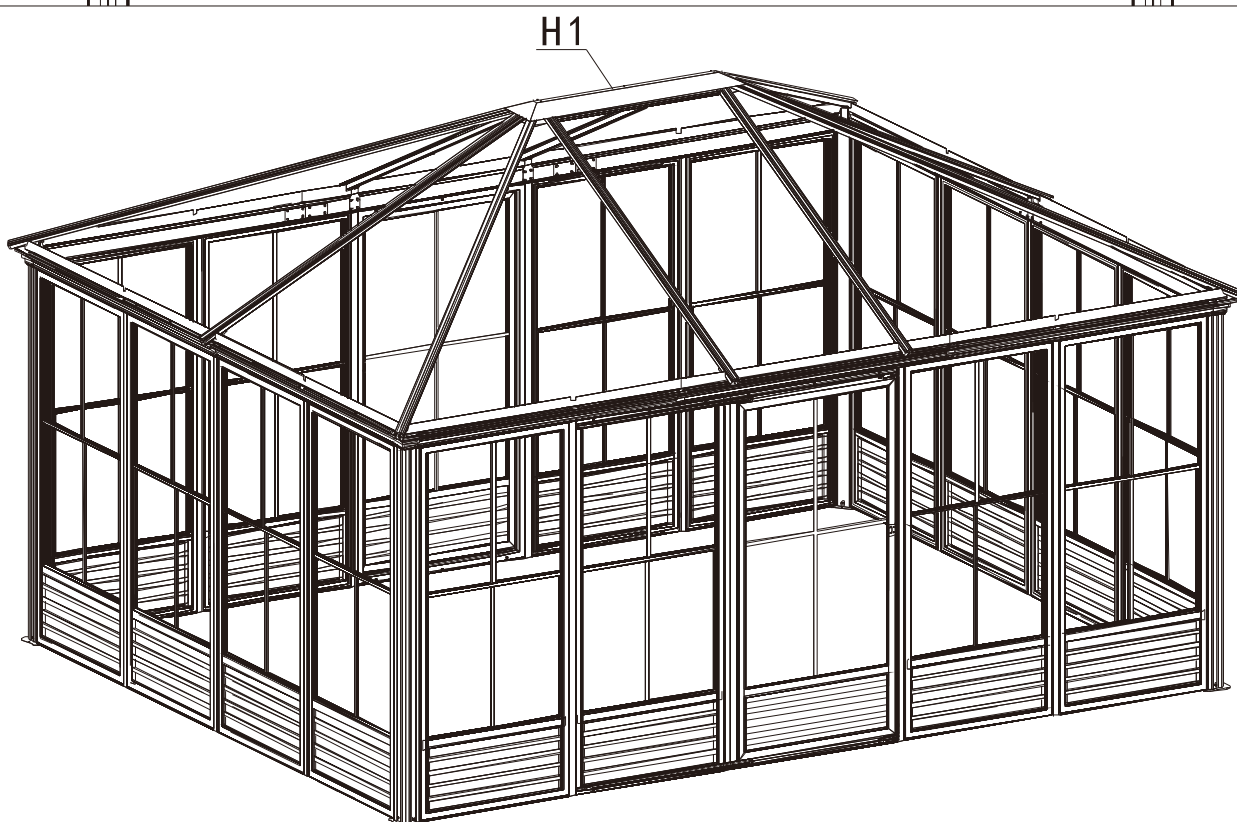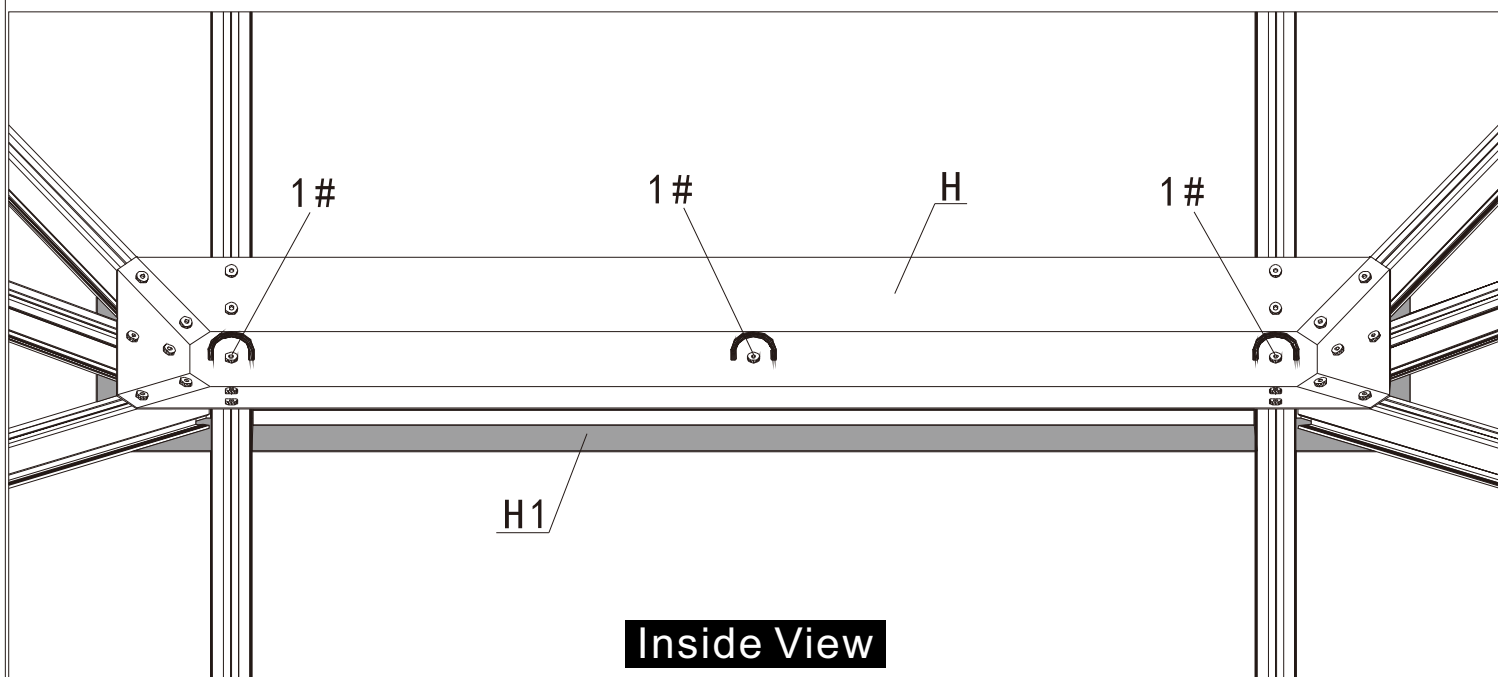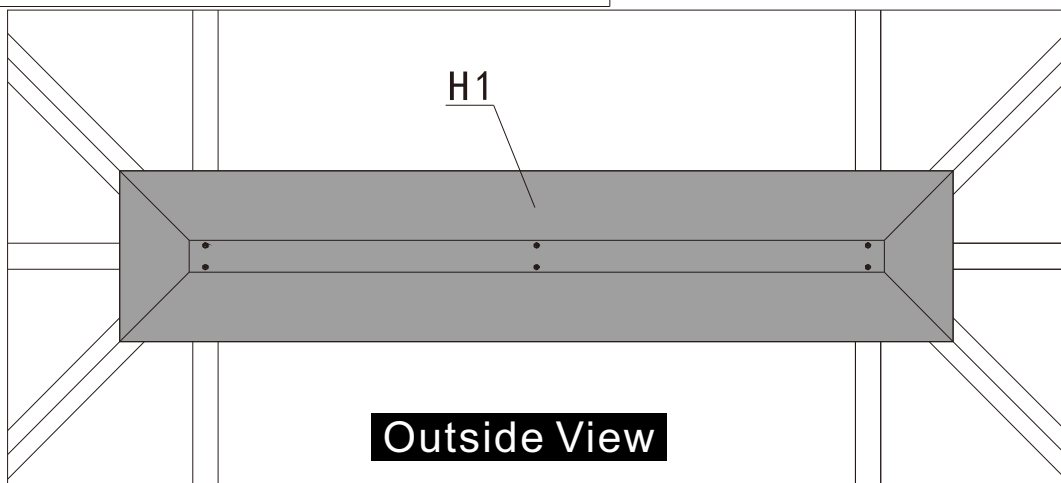

L (x2)

L1 (x4)


L4 (x6)

L3 (x4)


M6x16 1#
x30

L2 (x4)


Connecting the Support Bars:

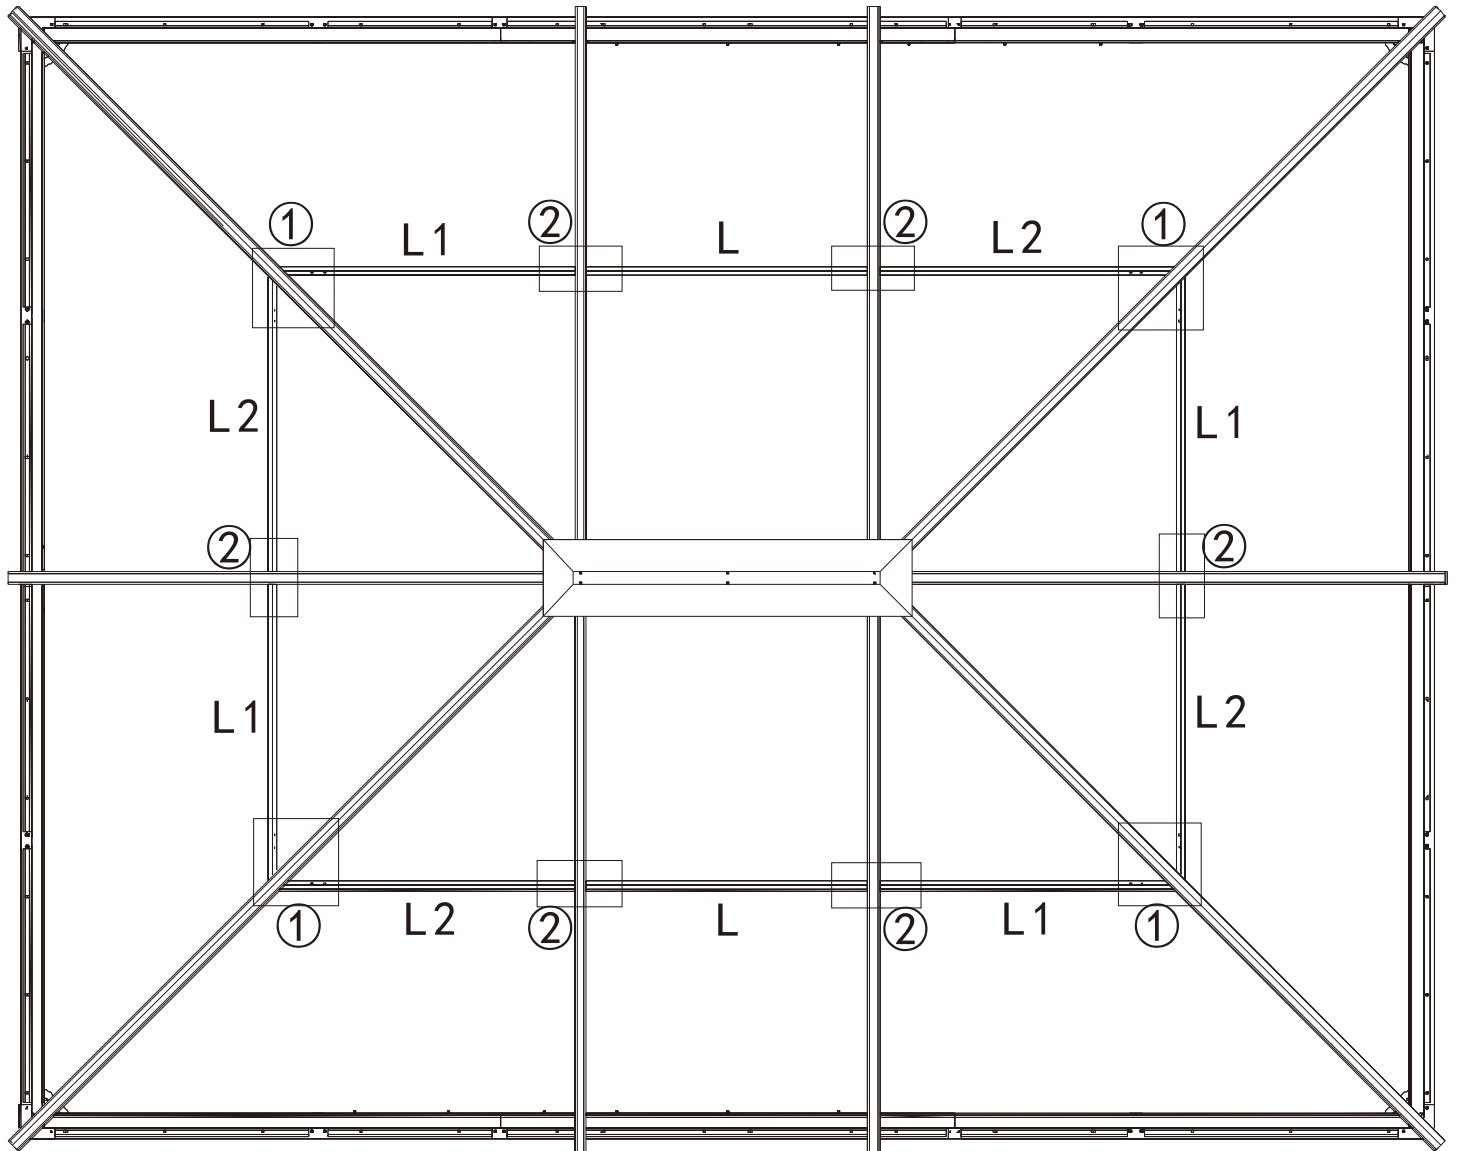

Outside View

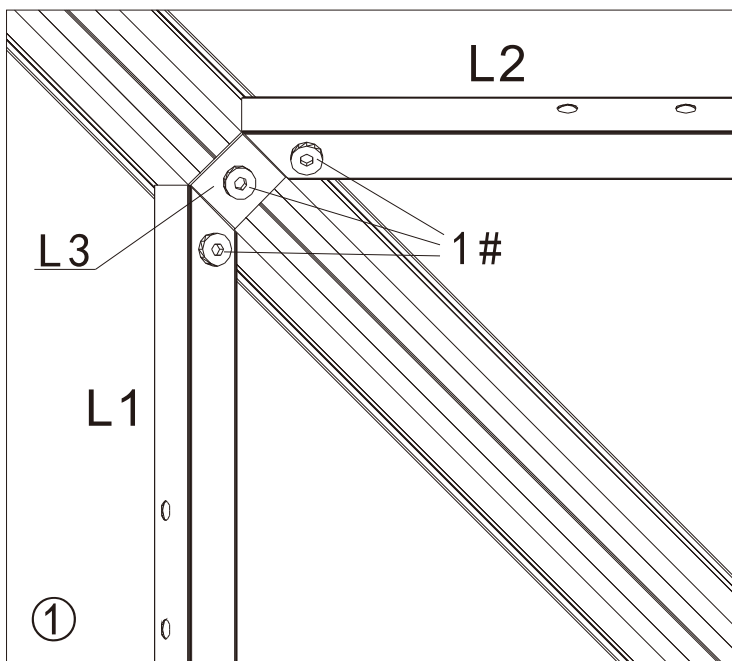

Inside View

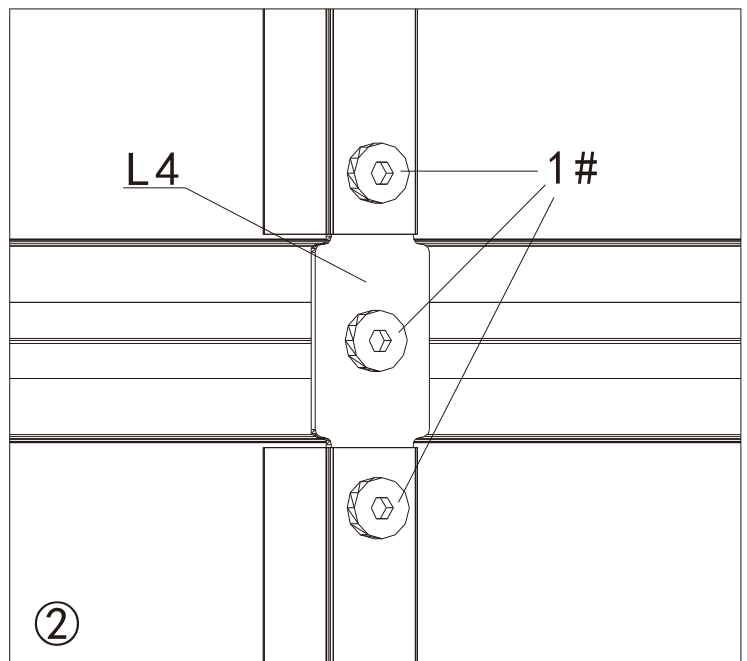


Inside View

L5 x8


M5x16 2# x16

M6x35 6# x16


Connecting the Support Bars #L5:

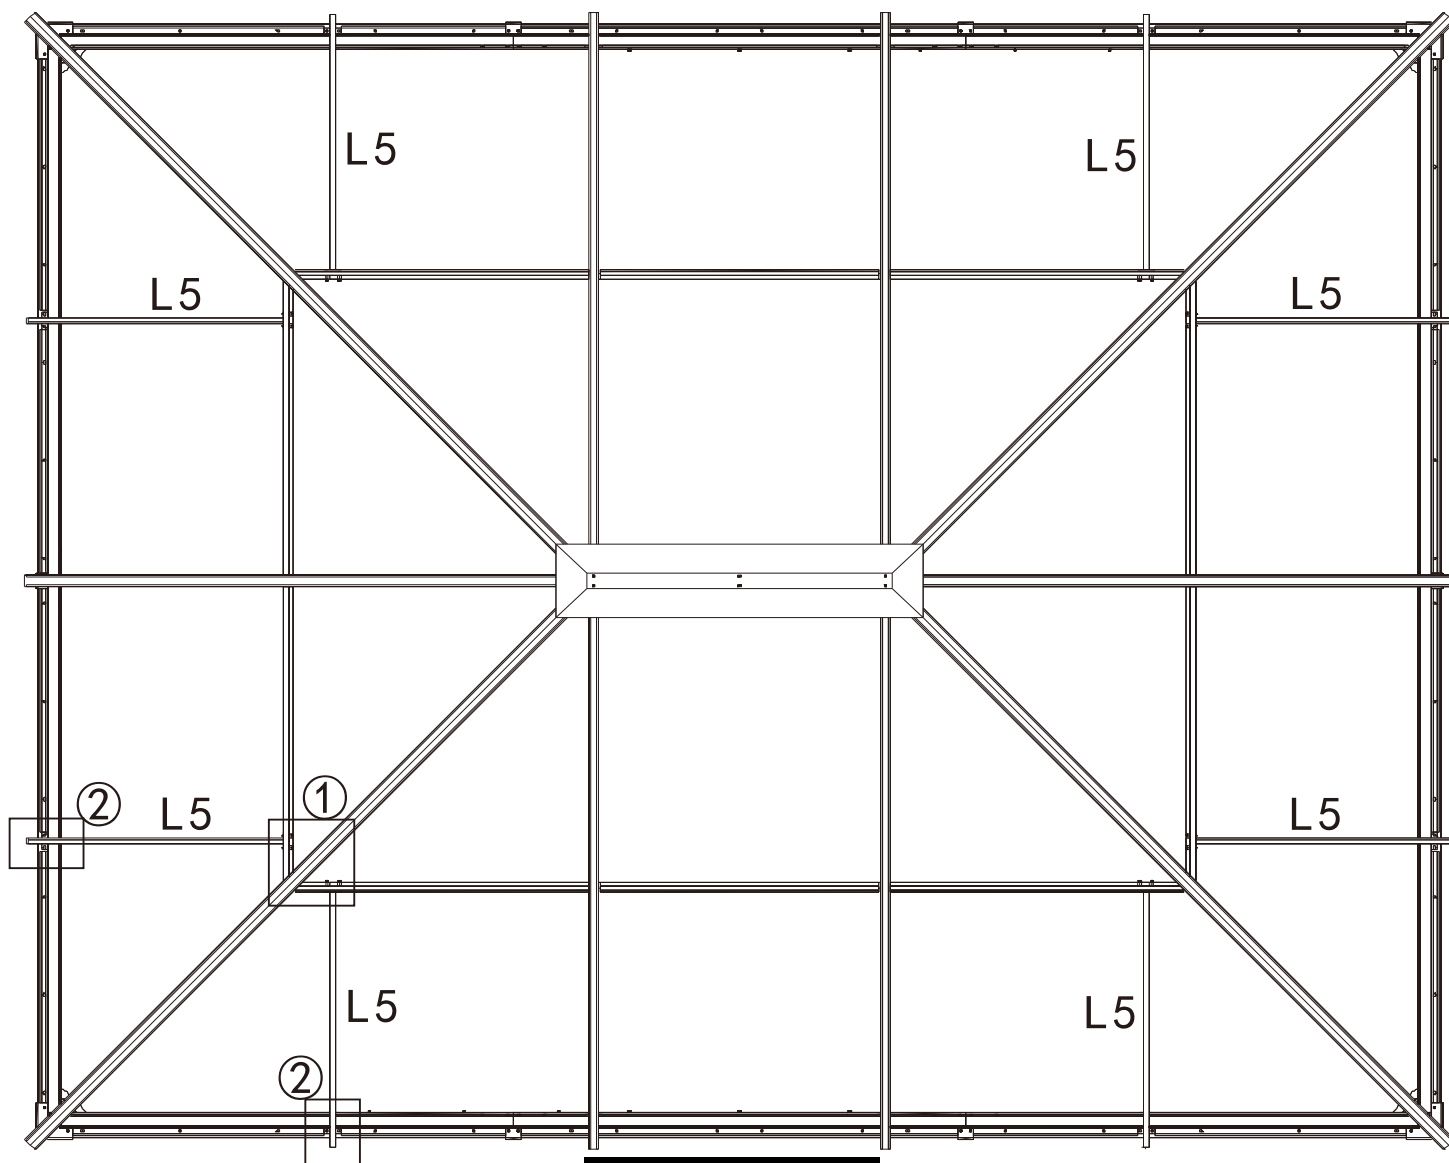


Outside View

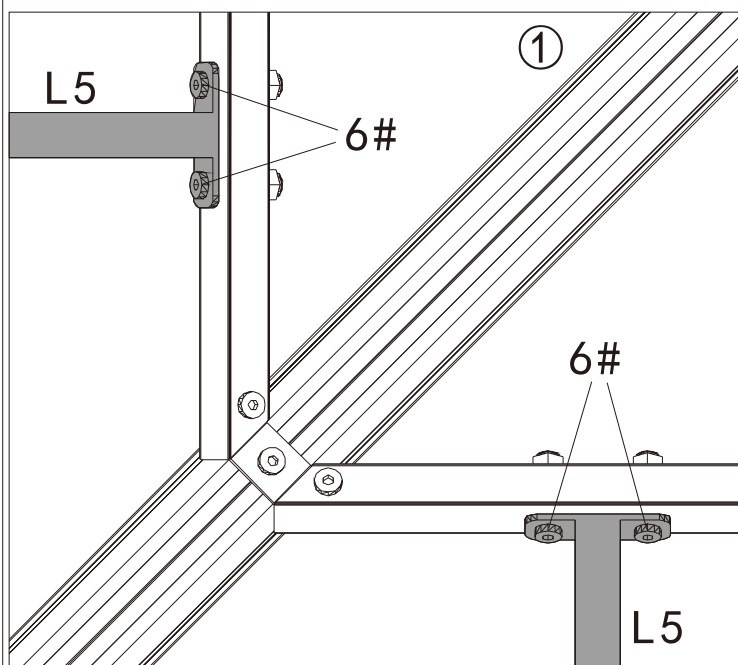

Inside View

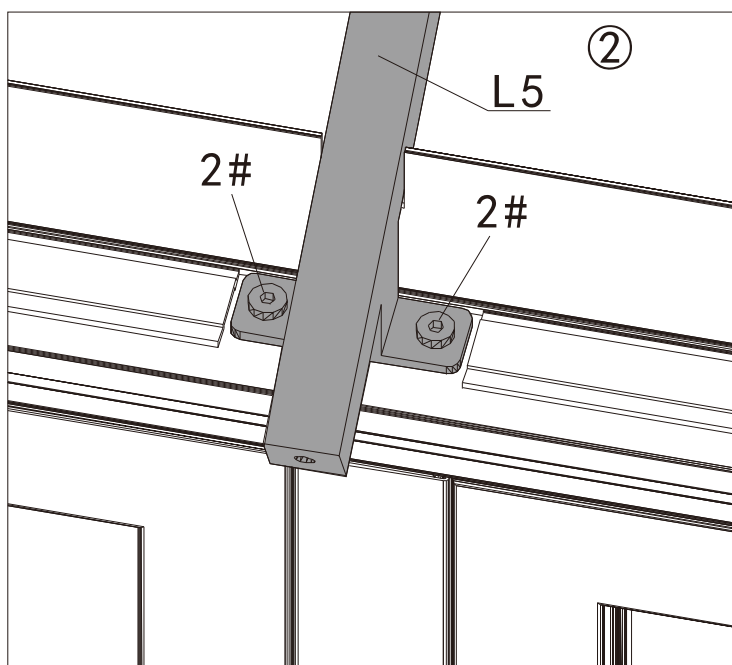

Outside View

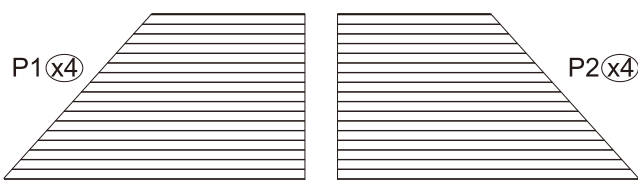

S (x4)

T (x10)

M6x16





1#
x14

Q1 (x4)

Q2 (x4)


Q3 (x4)


Q4 (x4)

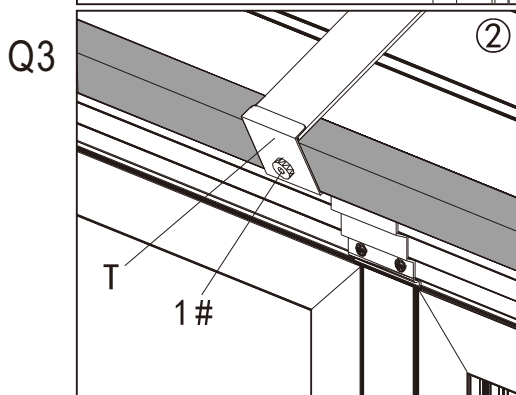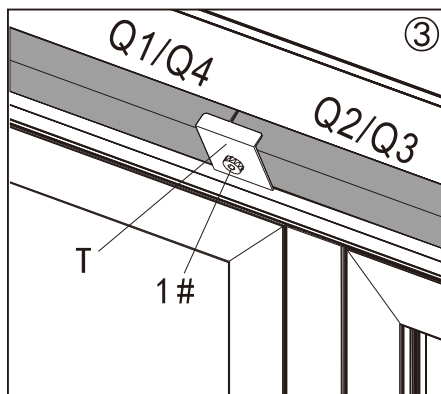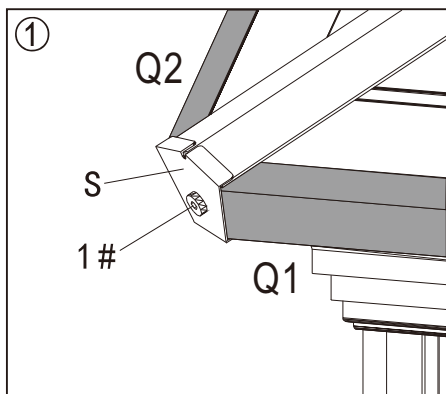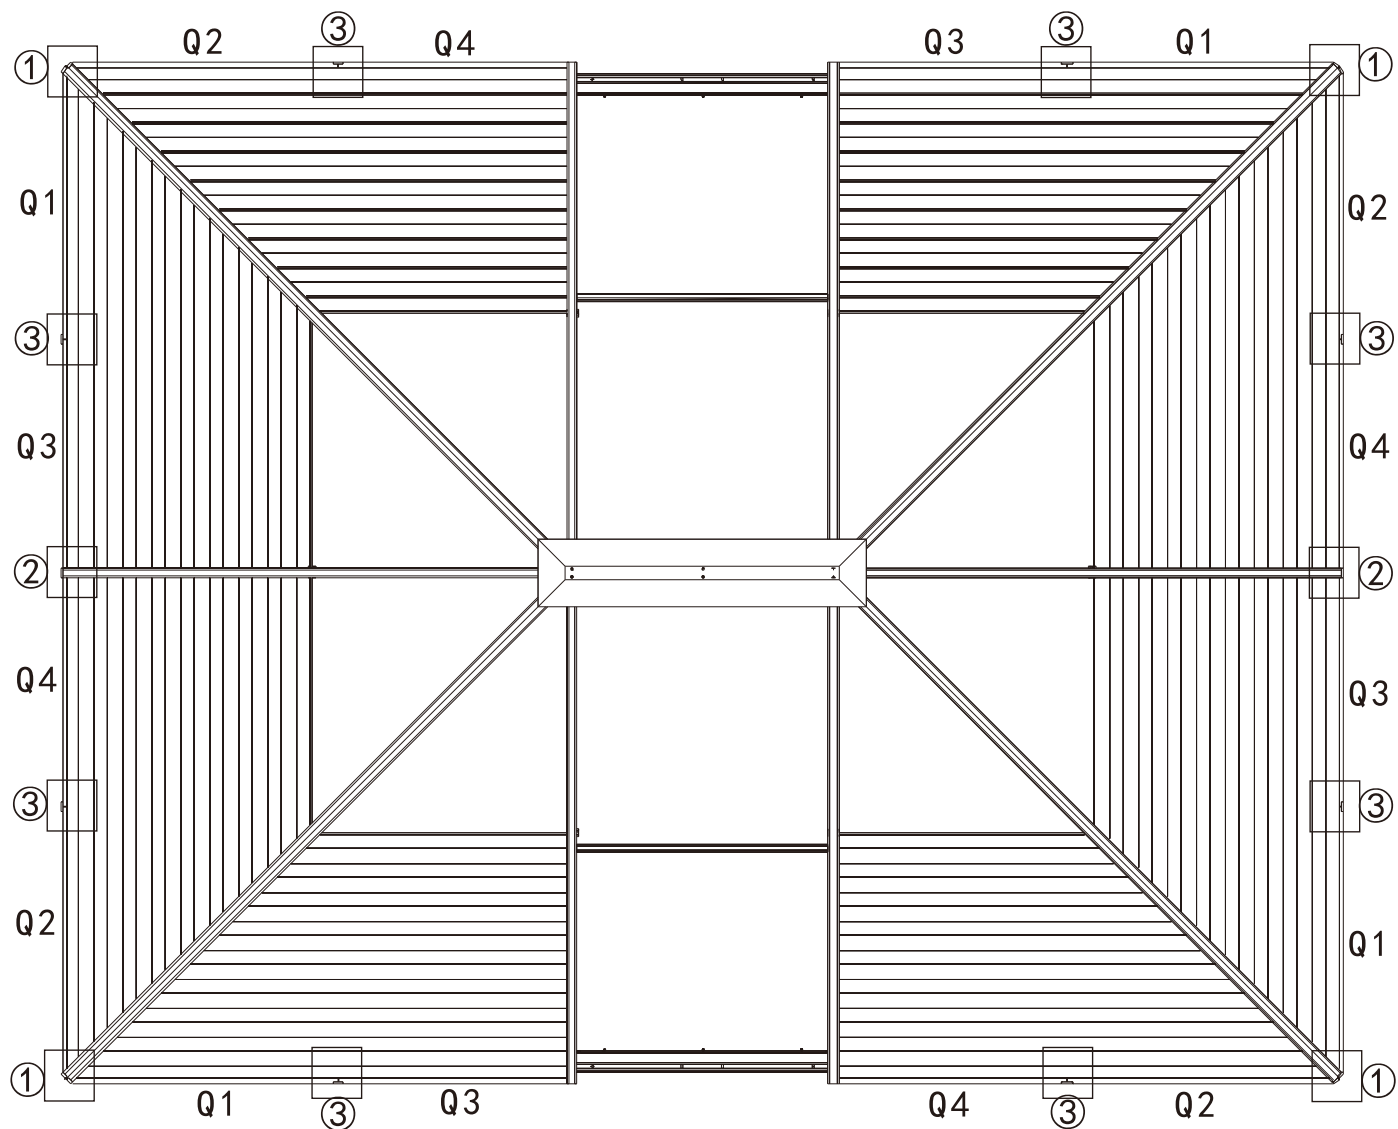


Q4


Installing the Roof Panels,
Finishing End Bars,
and Finishing End Plates.

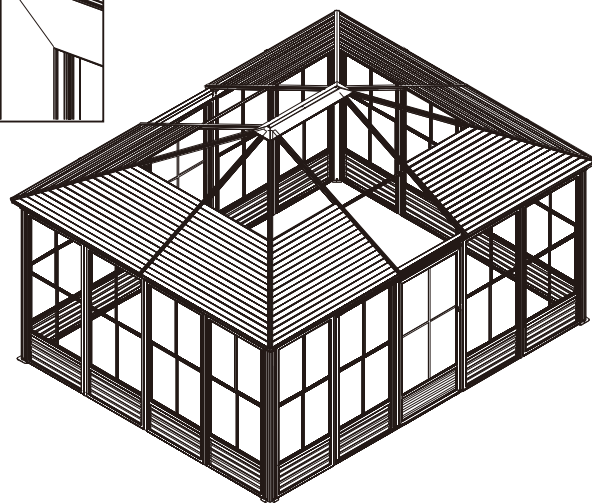

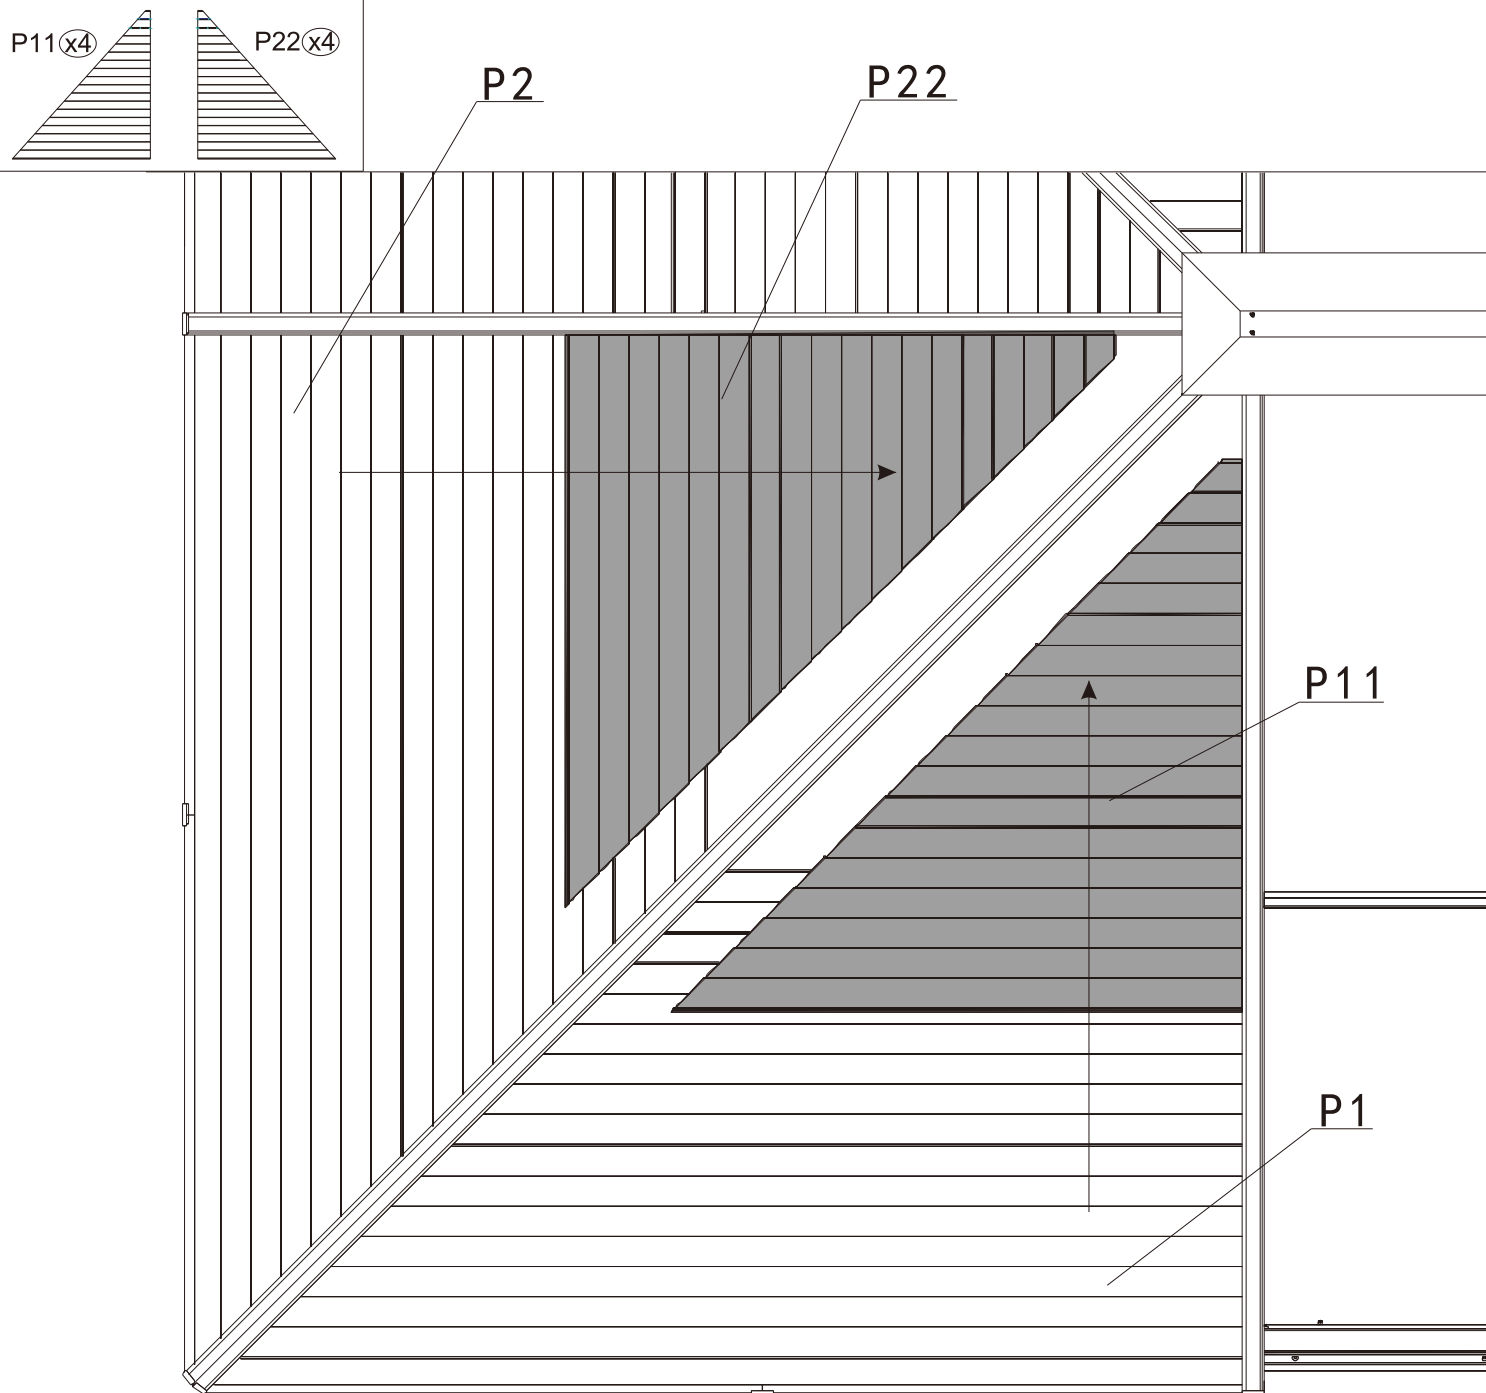


Installing the Roof Panels P11 / P22
 #P11 & P12:

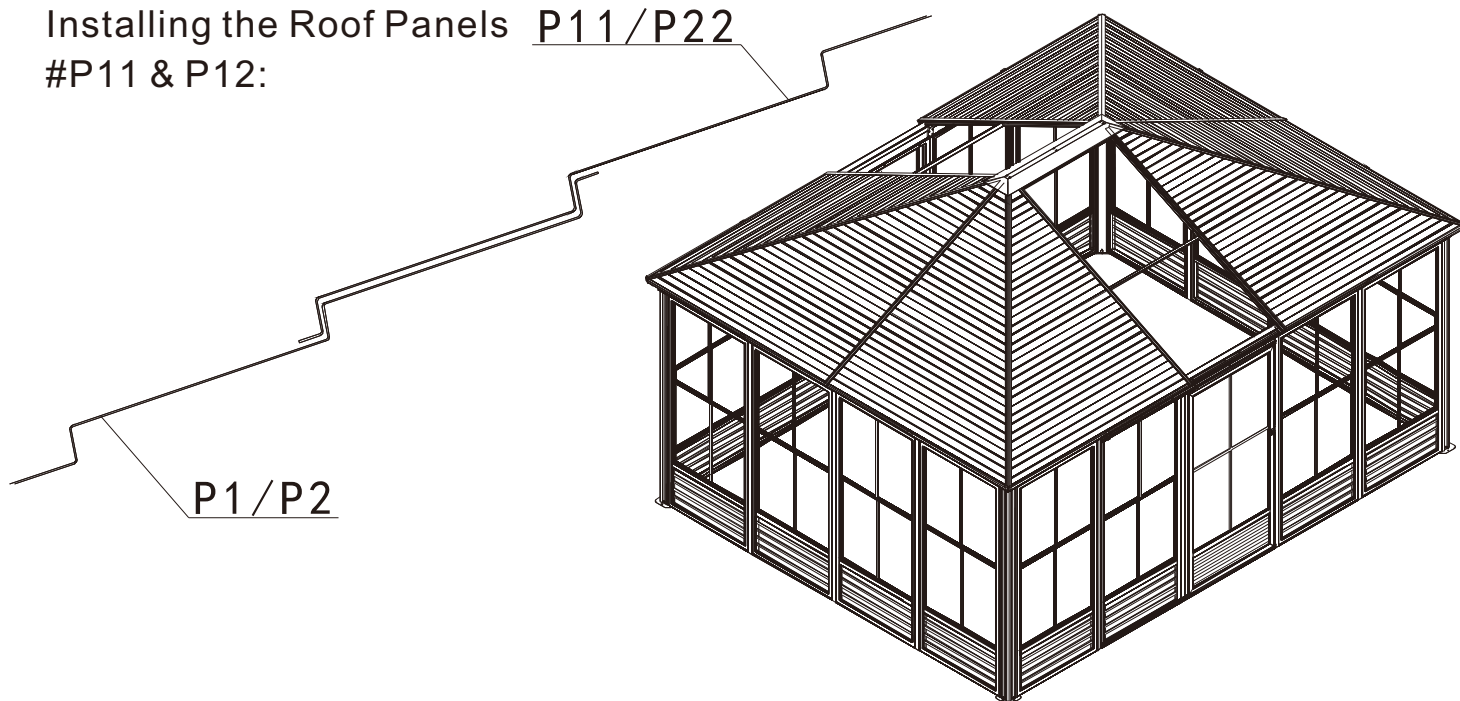


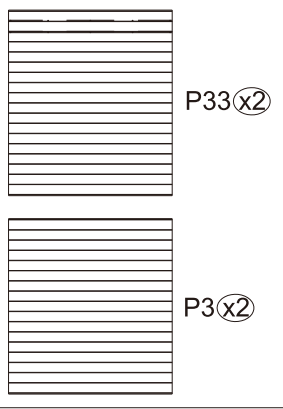


Installing the Roof Panels #P3 & P33:

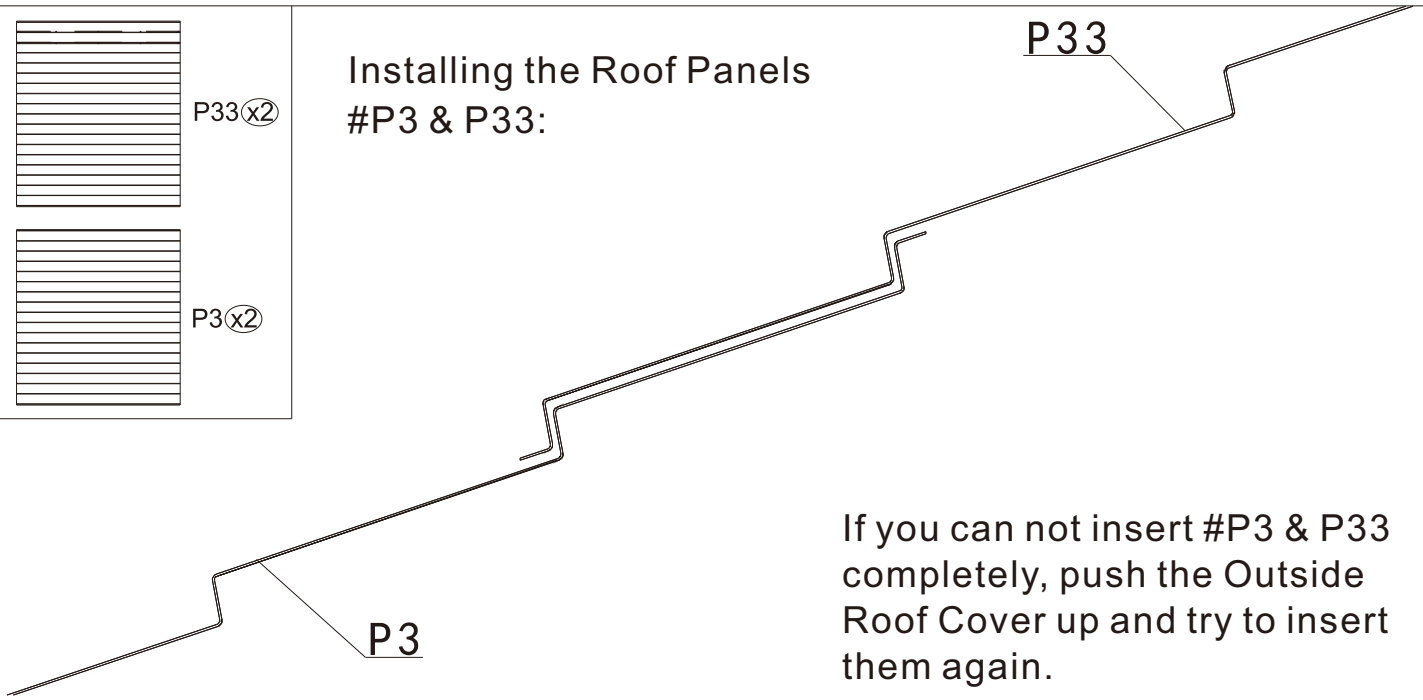

If you can not insert #P3 & P33 completely, push the Outside Roof Cover up and try to insert them again.

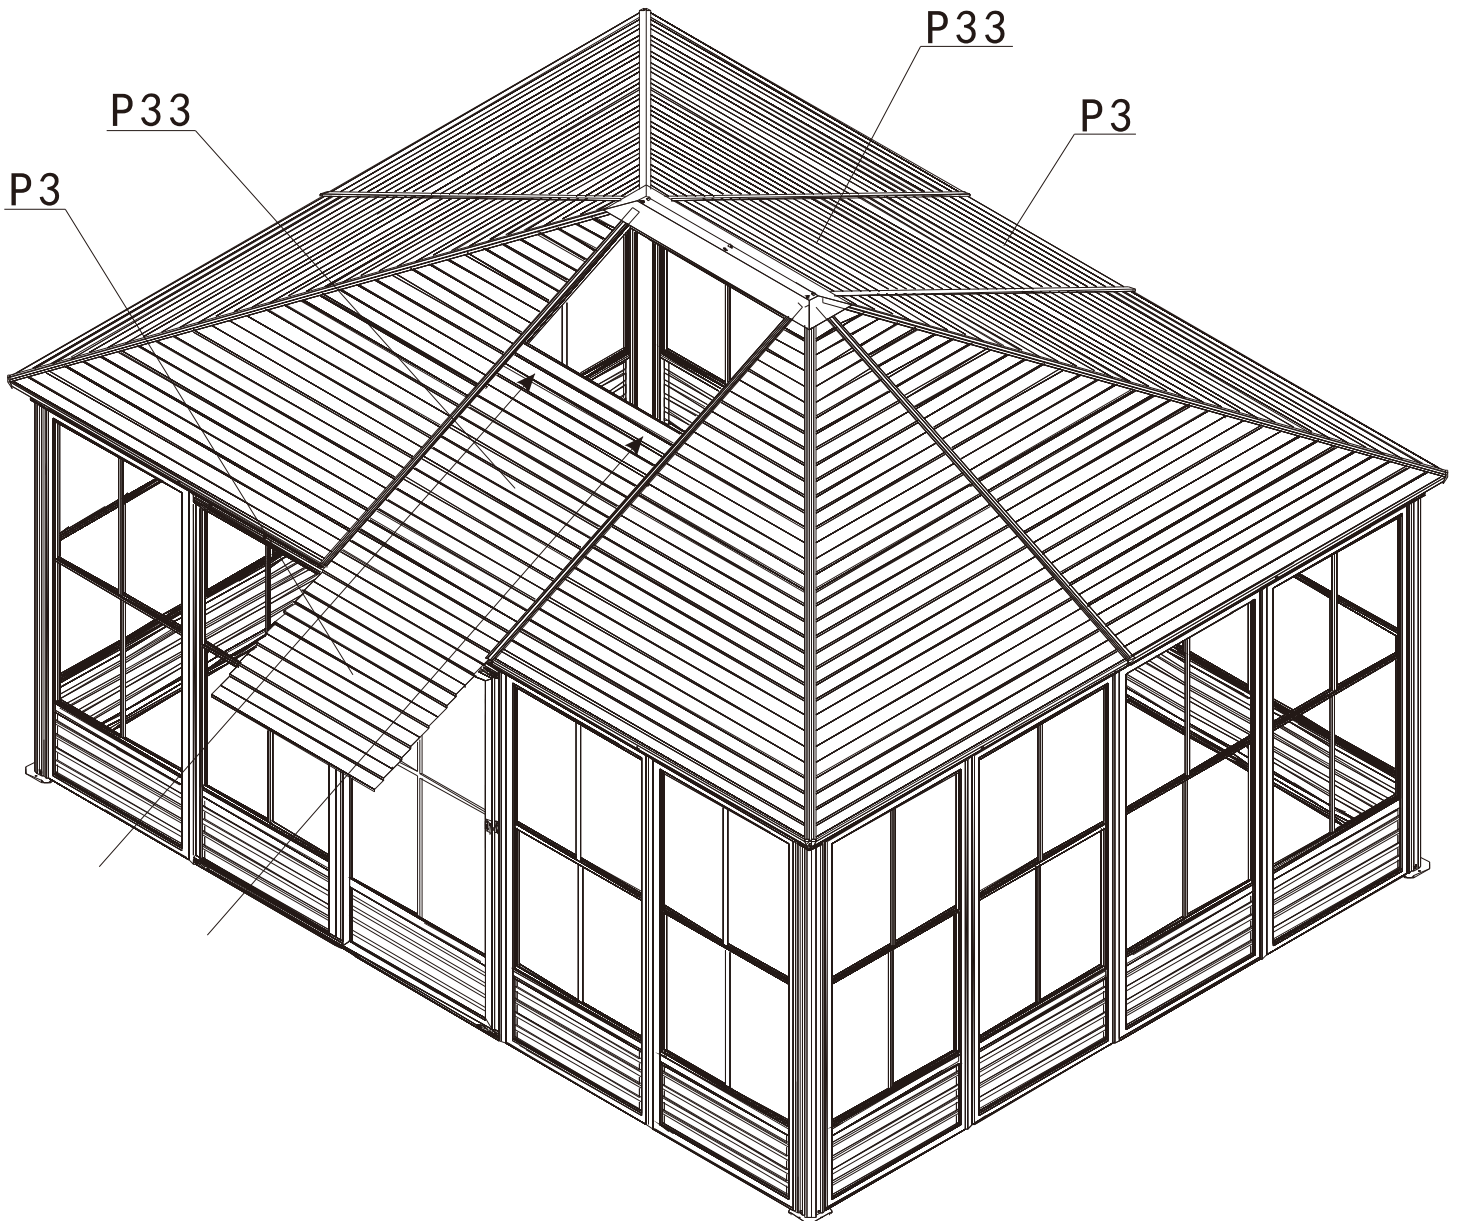





Q x2





T x4



M6x16
1#
x4




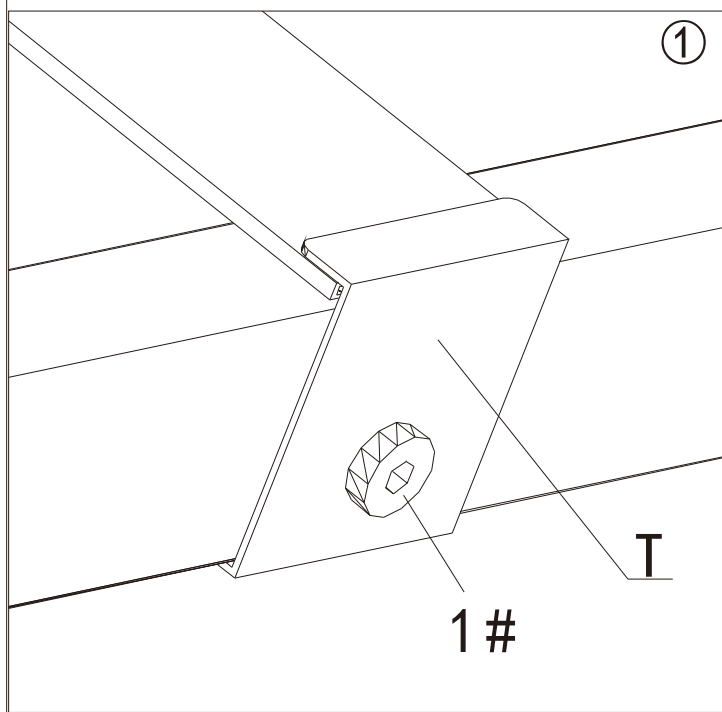
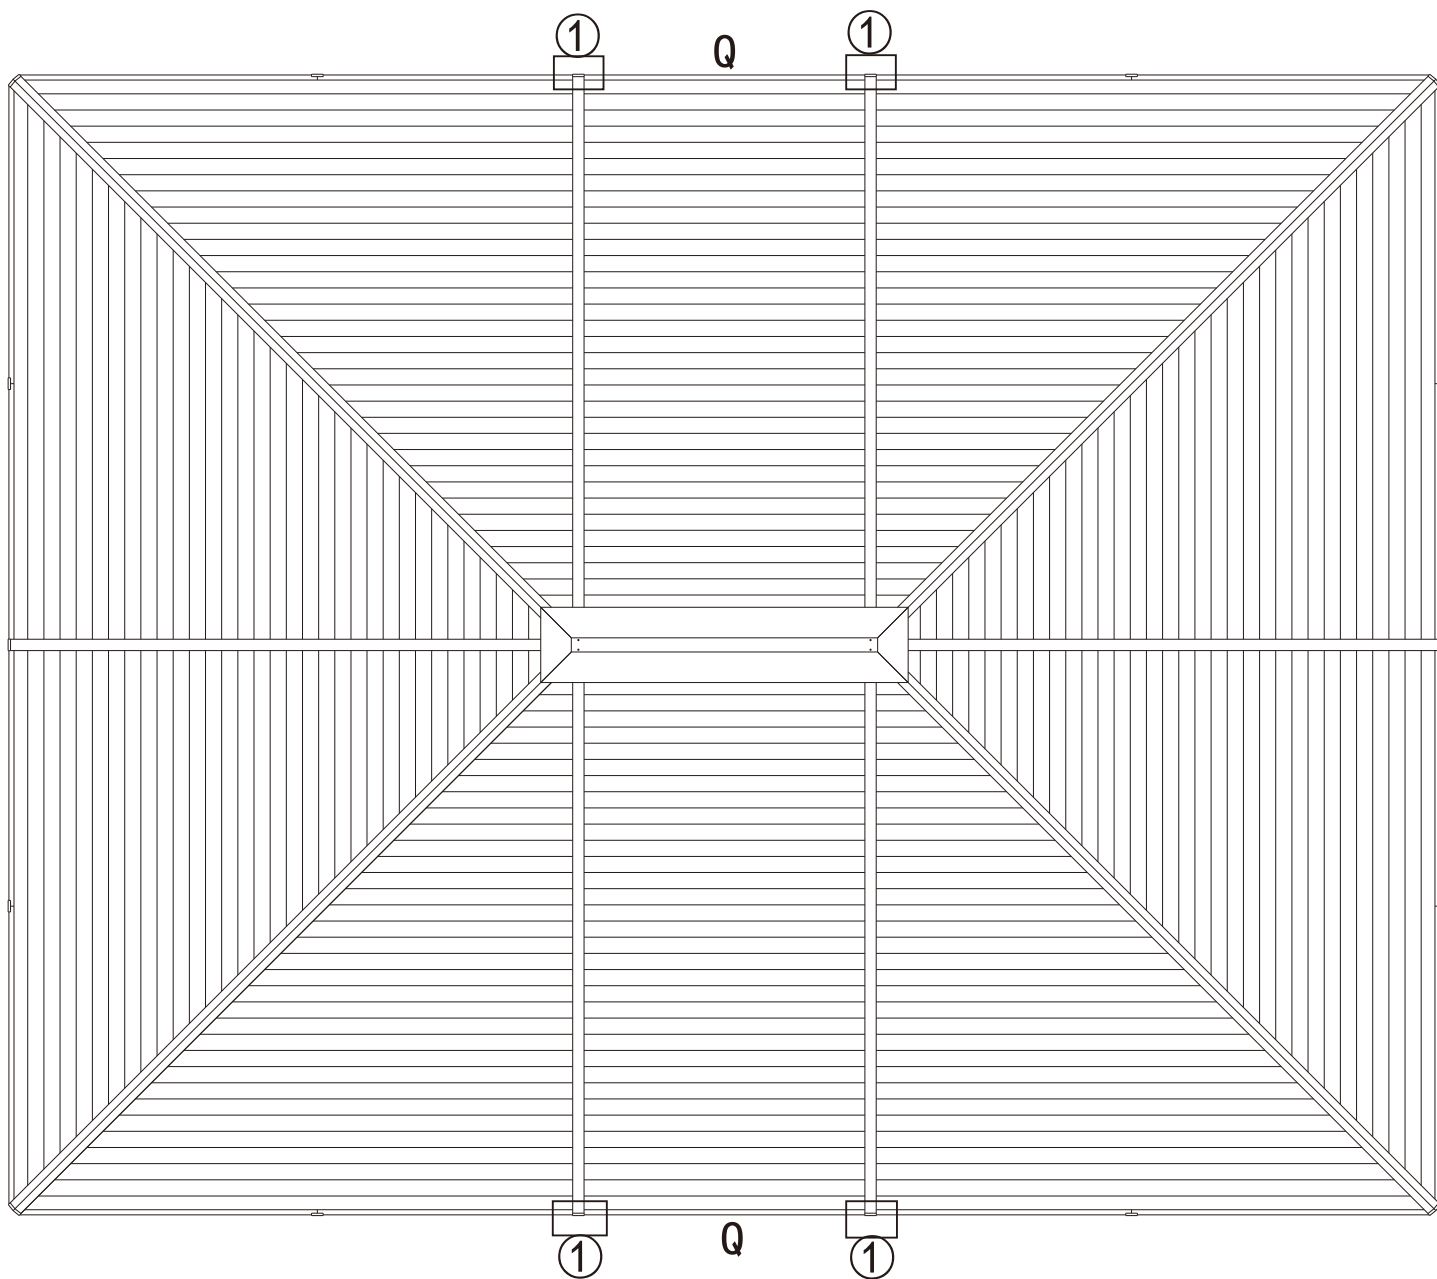


Connecting the Finishing End Bars #Q
and Finishing End Plates #T.

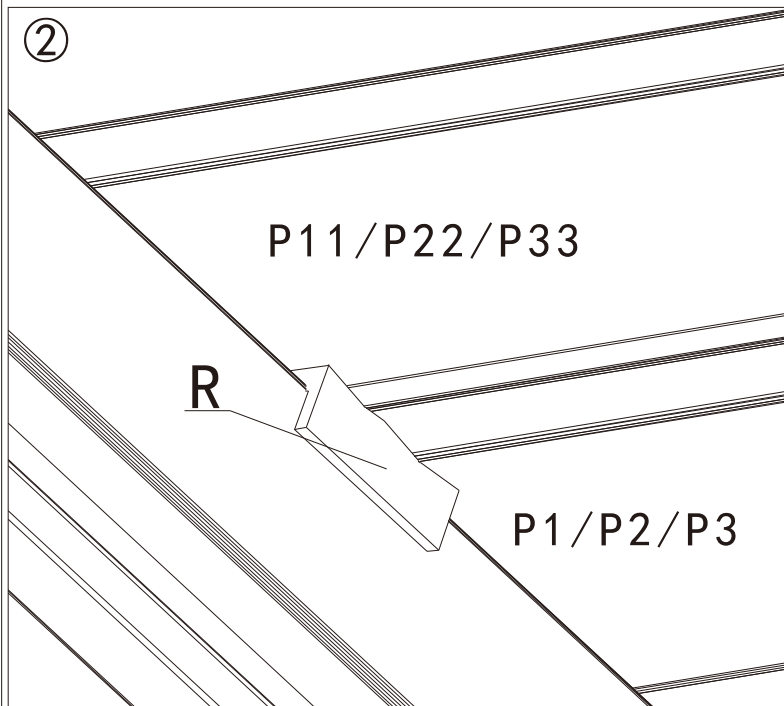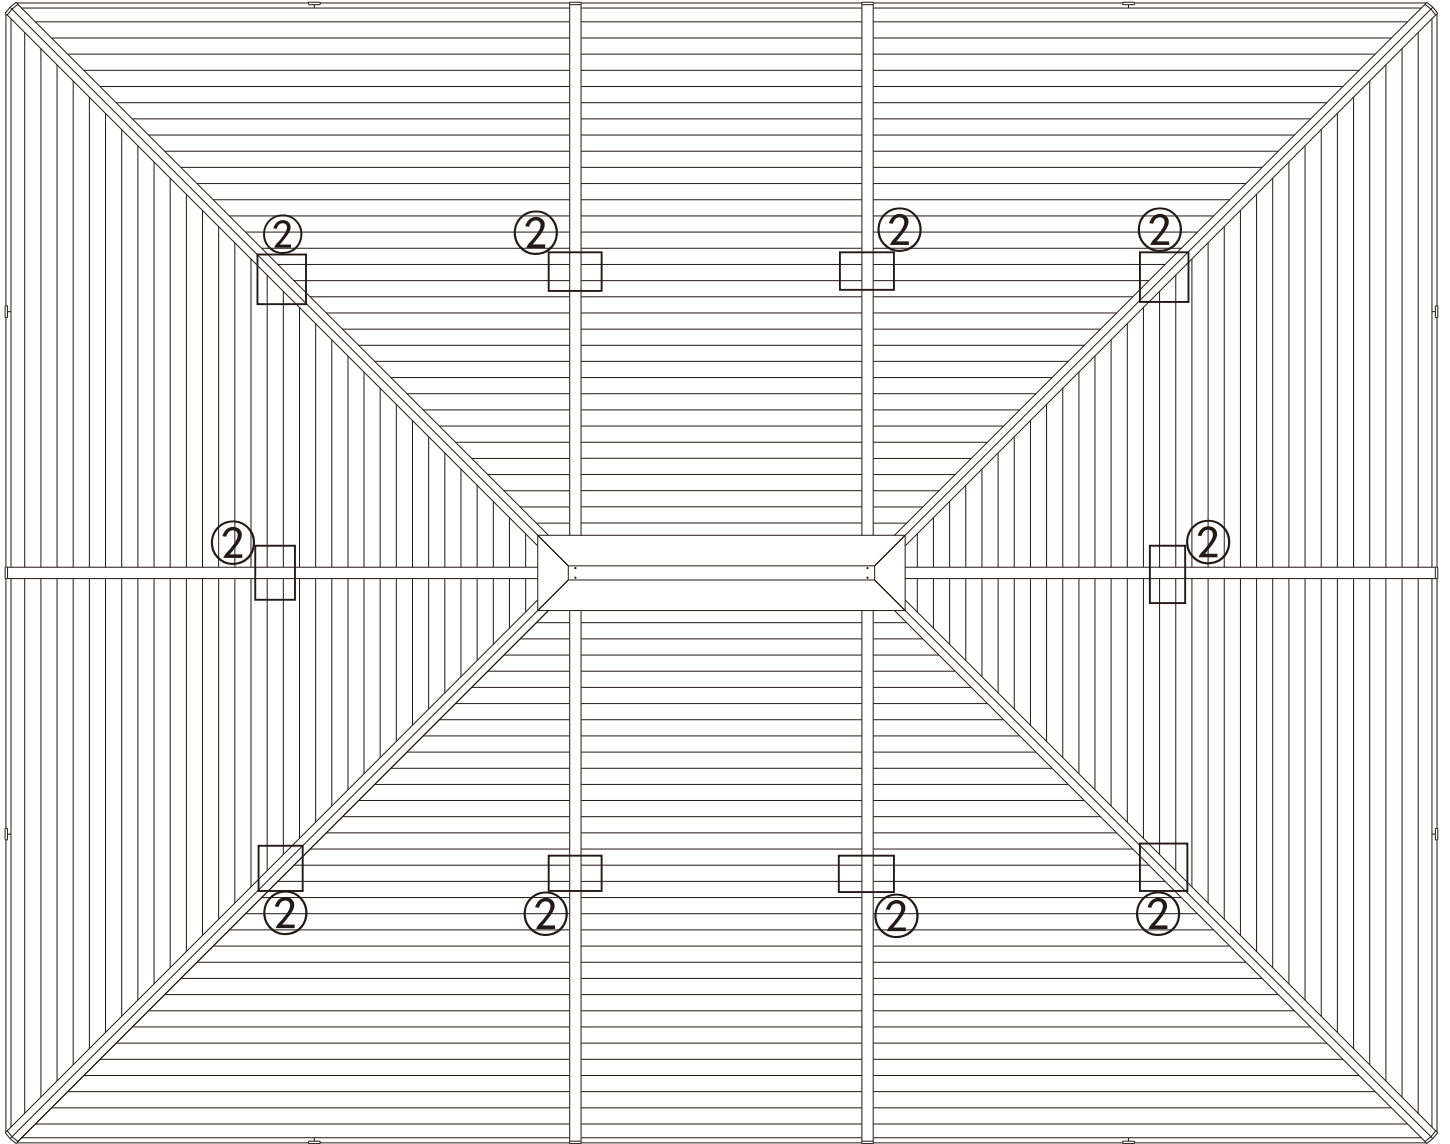


Roof Panel Plug #R needs to be inserted between the Roof Tubes and the splicing of the upper and lower roof panels, as shown in ②.

Inside View

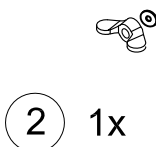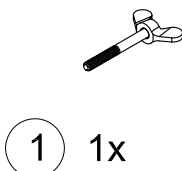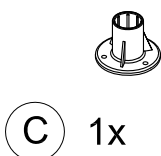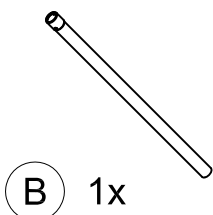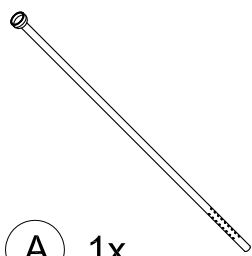


Temporary Support Pole Assembly :
 The Temporary Support Pole is used to stand under the inside roof cover, Which can strengthen the weight capacity of the metal roof.
 In bad weather, especially snowstorms, it is needed to prevent the roof from collapsing under heavy snow.
 In daily life, you can put it away.

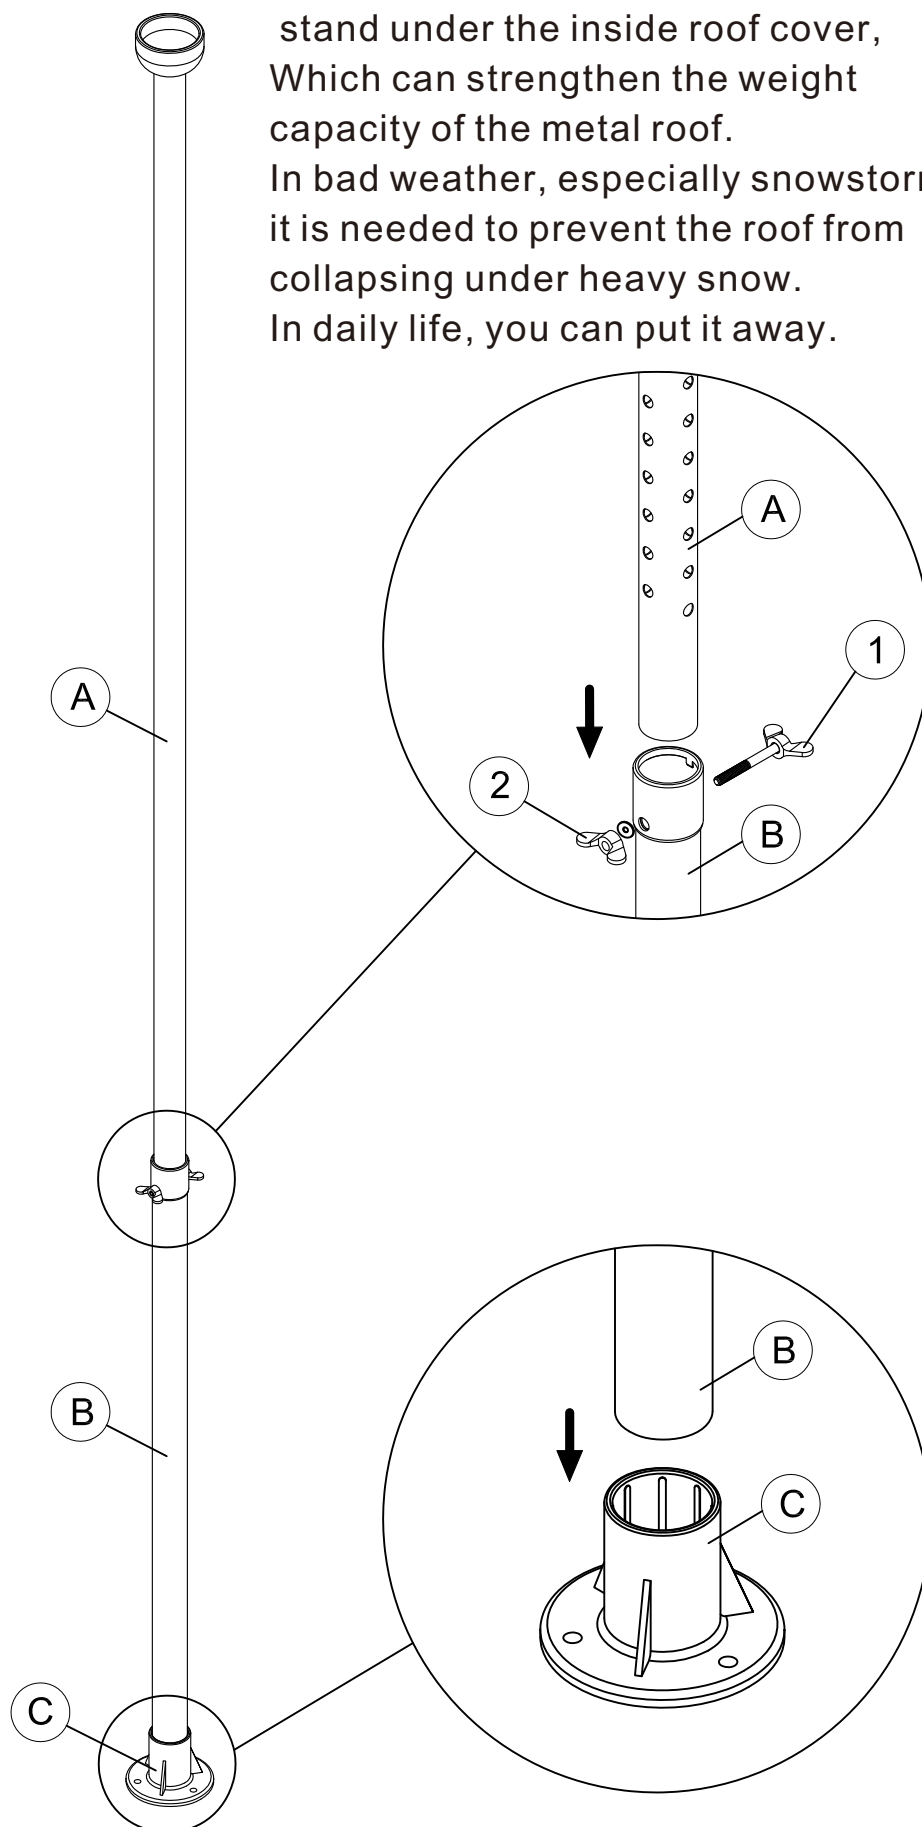

Anchoring the solarium:

The unit must be anchored to either wood, stone tiles, or concrete using appropriate screws for that flooring.

IMPORTANT: Camp nails cannot be used for permanent anchoring. Failure to do so may nullify the Warranty.

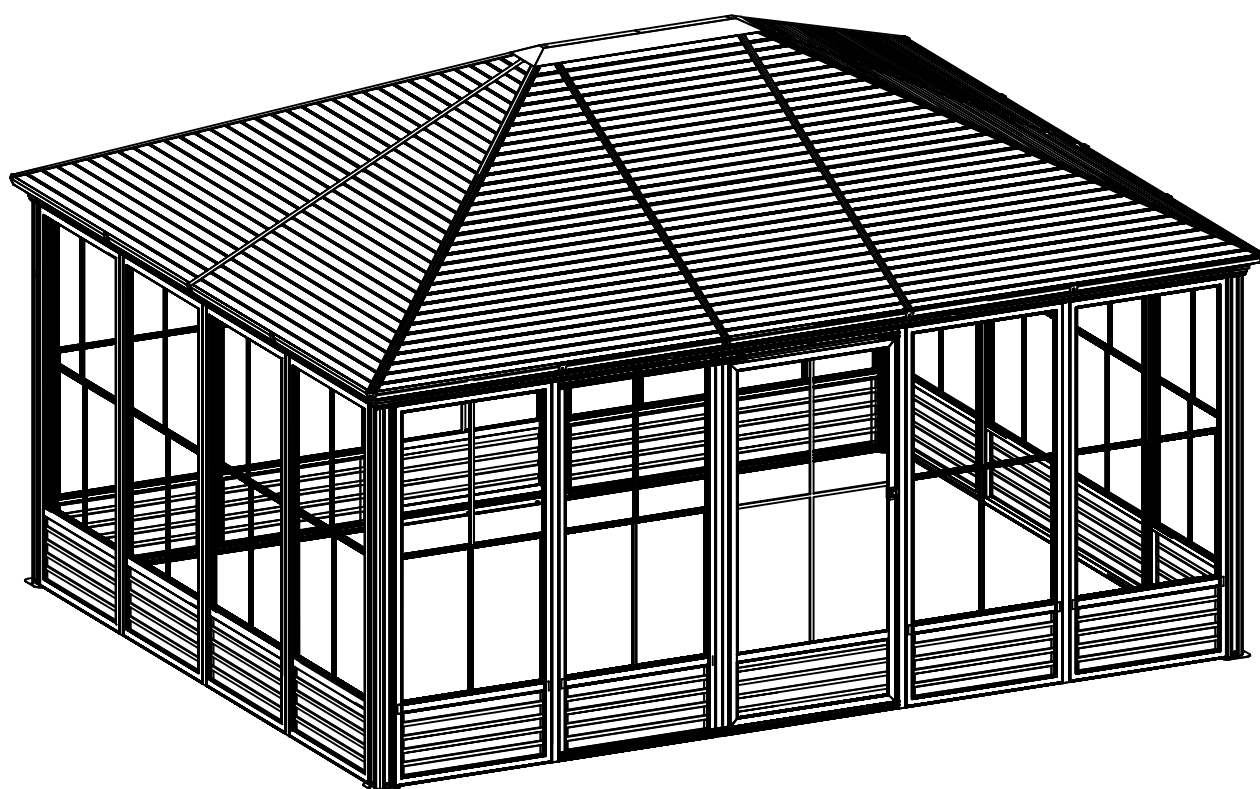

WARRANTY

A. Frames & Side Wall

- Frames and side walls constructions are warranted to be free from defects in material and workmanship for 1 year from item purchased, Damage to frame from negligence won't be covered by this warranty.

B. Bolts And Nuts

- Bolts and nuts are warranted to be free from defects in material and workmanship for 1 year from item purchased. Damage from exposure to chemicals (including not only oils, spills, fluids) won't be covered by this warranty.

C. Warranty Limitation

- This warranty is for the original purchase order only. (Order number required). This warranty is non-transferable. Domi is responsible for the free replacement part including shipping charges for the 1 year warranty.

D. Warranty Exclusion

This warranty does not cover products subject to negligence, abuse usage, inappropriate installation, Domi reserves the right to explain warranty exclusions, When the replacement item is applied the 1 year warranty automatically expires. Please feel free to contact us for applying warranty.



Thanks for your purchase.

At domi outdoor living, we believe in our products.

That's why we provide a 12-month warranty and friendly, easy-to-reach after-sales service. So, if you have any questions about our product or assembly, please feel free to contact us. We are here for you.

Support:  

After-sales contact email:

service@domioutdoorliving.com

Business cooperation contact email:

marketing@domioutdoorliving.com

Please have your order ID available if you reach out for support.

If you have damaged parts or product, please send us photos for an immediate response.