


LUNO 4+4 DRAWER CHEST



ASSEMBLY INSTRUCTION - Please Keep For Future Reference

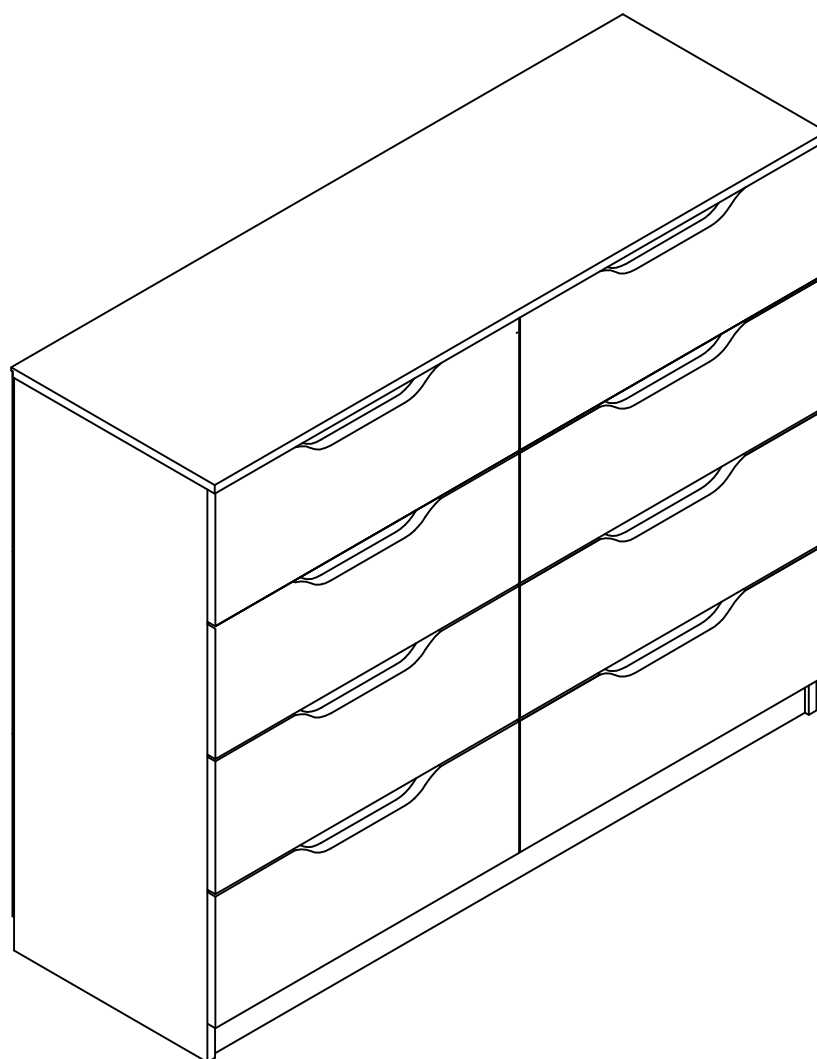

Safety and Care Advice

IMPORTANT - Please Read This Instruction Carefully Before Assembly.






- Check you have all the components and tools listed on page 3.
- Remove all settings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before assembly.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to it's intended position(in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit.
- Parts of the assembly will be easier with 2 people.
- Do not use power drill/drivers for assembly, or the unit may be damaged.
- Dispose of all packaging carefully and responsibly.

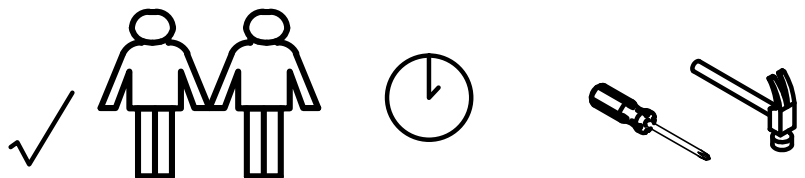

CARE and MAINTENANCE

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal center.


General Hints & Tips



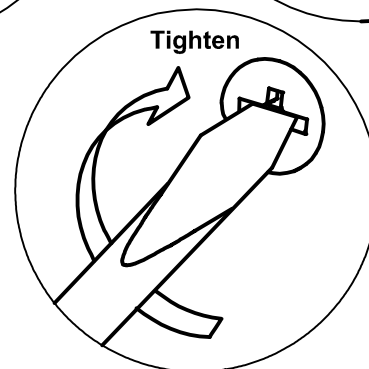
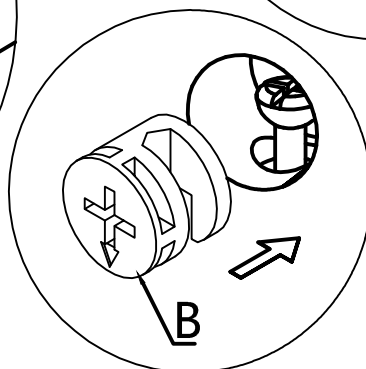
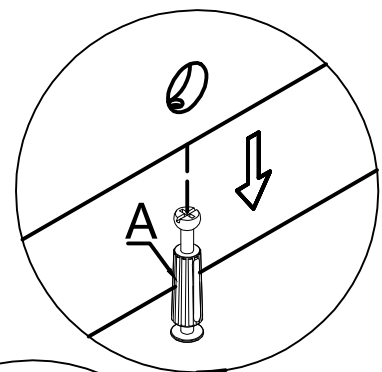
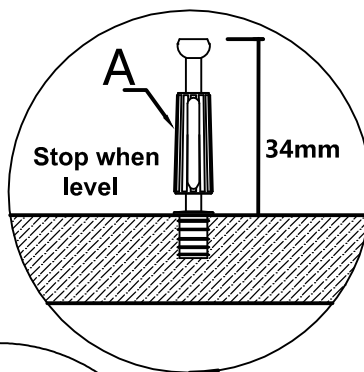
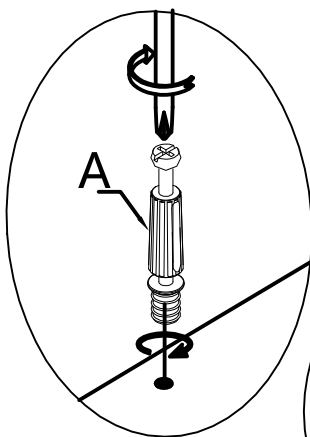


Components and Tools

IMPORTANT - Please Check If You Have All The Components and Tools.

Note: The quantities below are the correct amount to complete the assembly. In some cases more pieces may be supplied than are required.

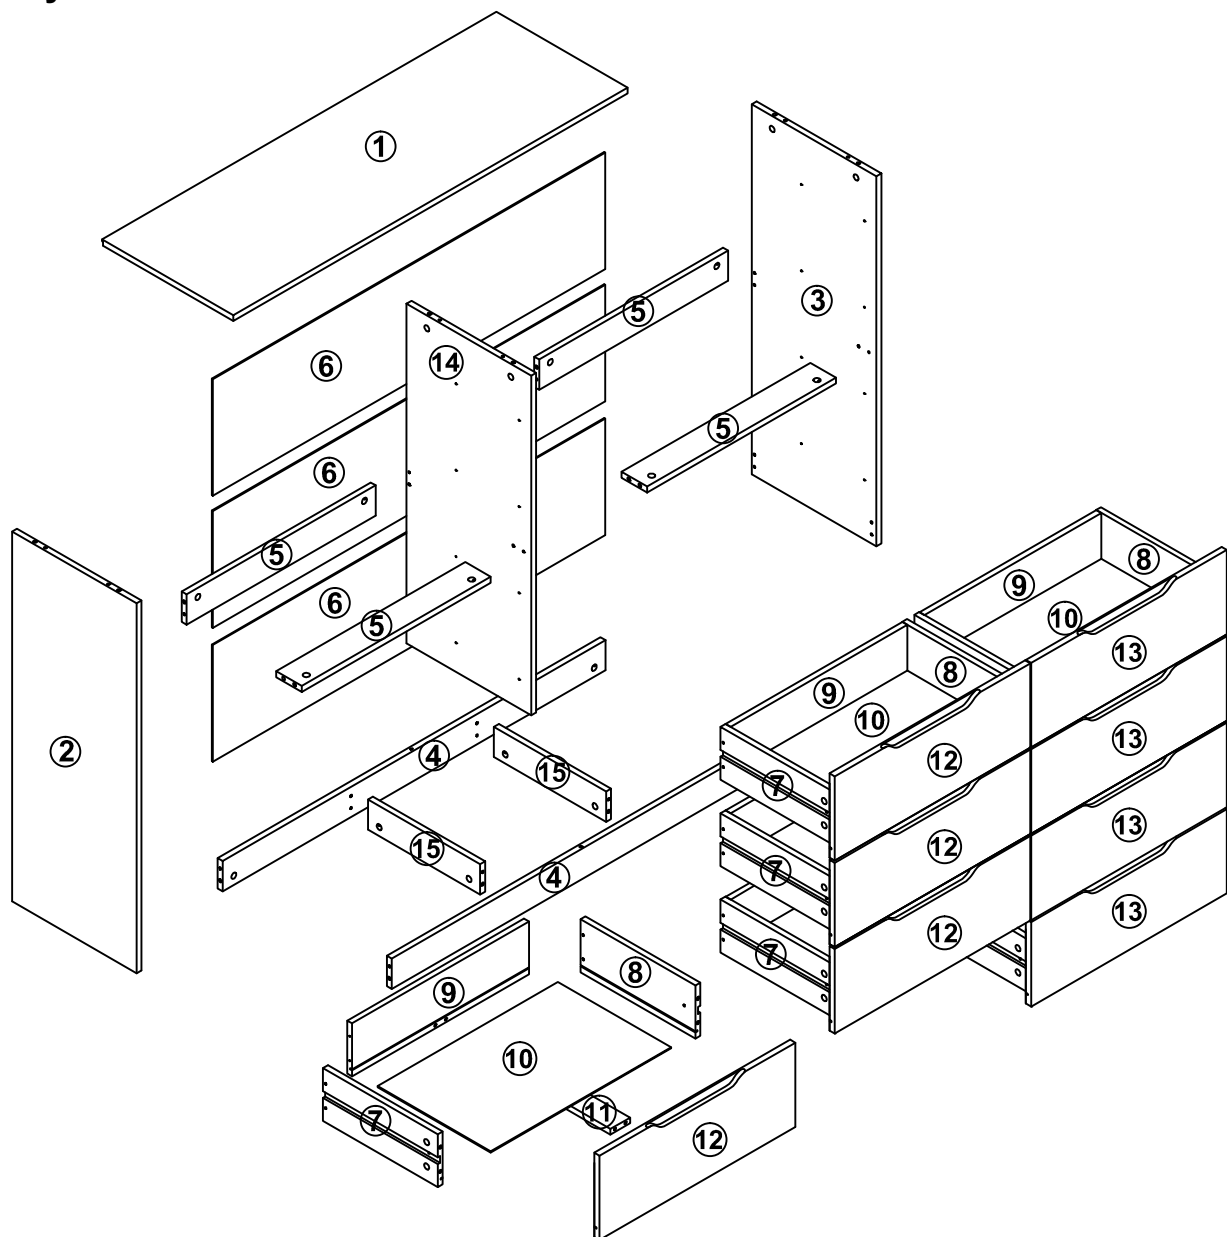

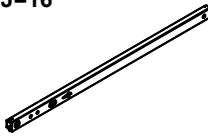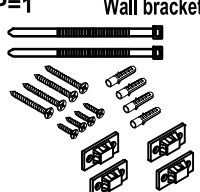A=54  Peg M6*34mm	B=54  Lock M15*12mm	C=56  Dowel M8*30mm	D=32  Screw M3.5*14mm	E=32  Screw M4*38	F=8  Plastic Feet
G=20  Pin	H=16  Screw M4*12mm	J=16  Drawer Runner	P=1 Wall bracket 		

1OF2 ①,④X2,⑥X3,⑨X8,⑩X8,⑫X4,⑬X4,


2OF2 ②,③,⑤X4,⑦X8,⑧X8,⑪X8,⑭,⑮X2,FITTING KIT

Assembly Instruction

Step 1




A=10

C=4



Peg


Dowel

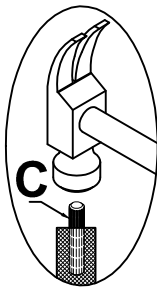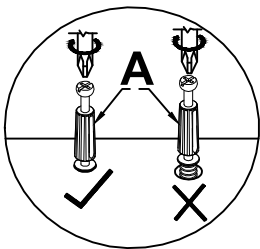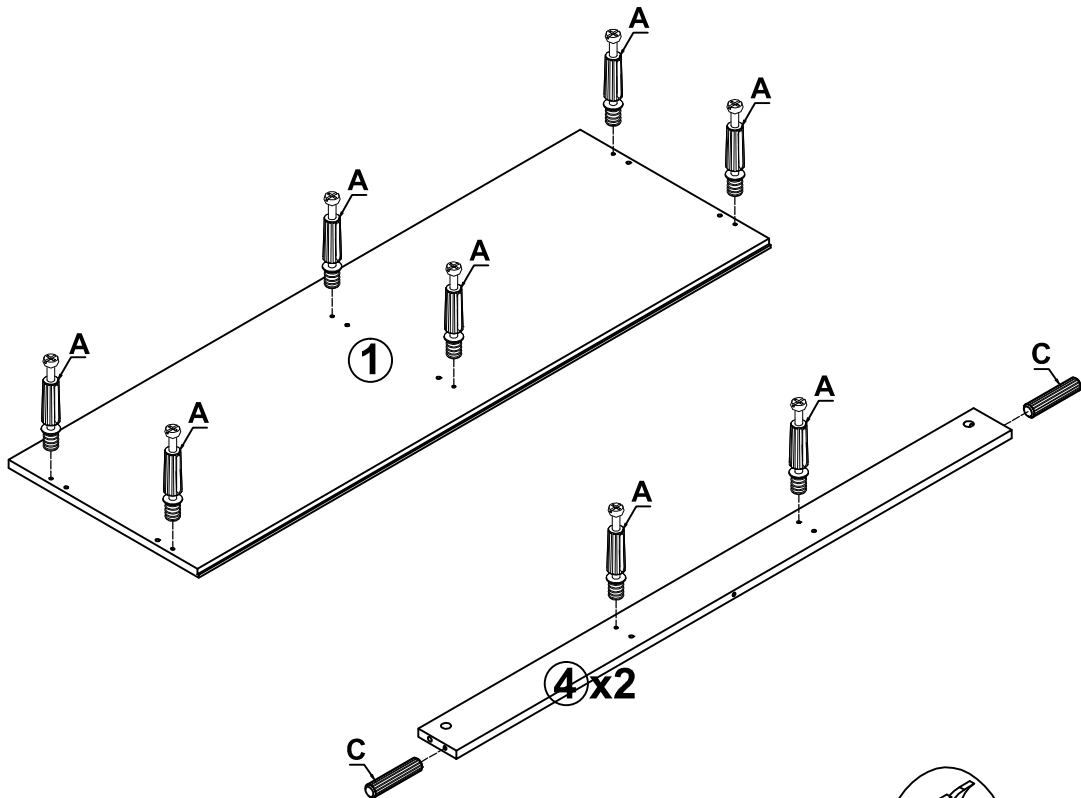

Step 2


A=32

C=44




Peg


Dowel

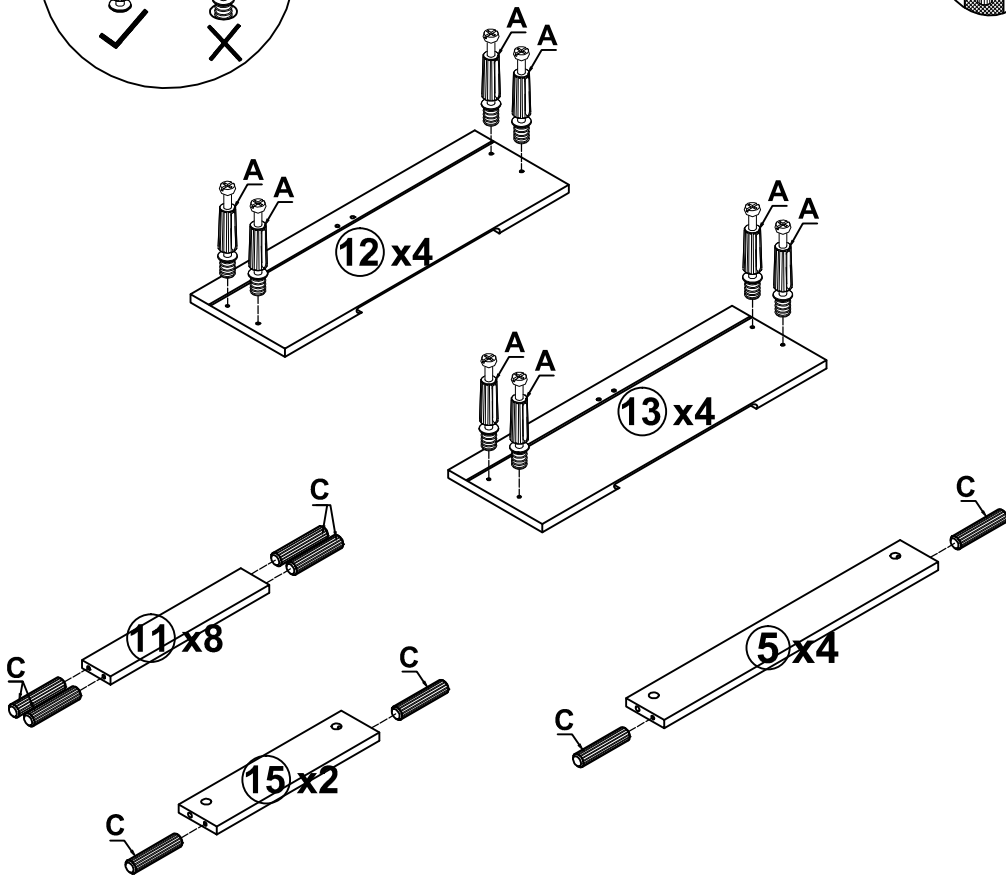

Assembly Instruction


Step 3


A=4	C=2
	
Peg	Dowel
J=4	D=8
	
Drawer Runner	Screw M3.5*14mm

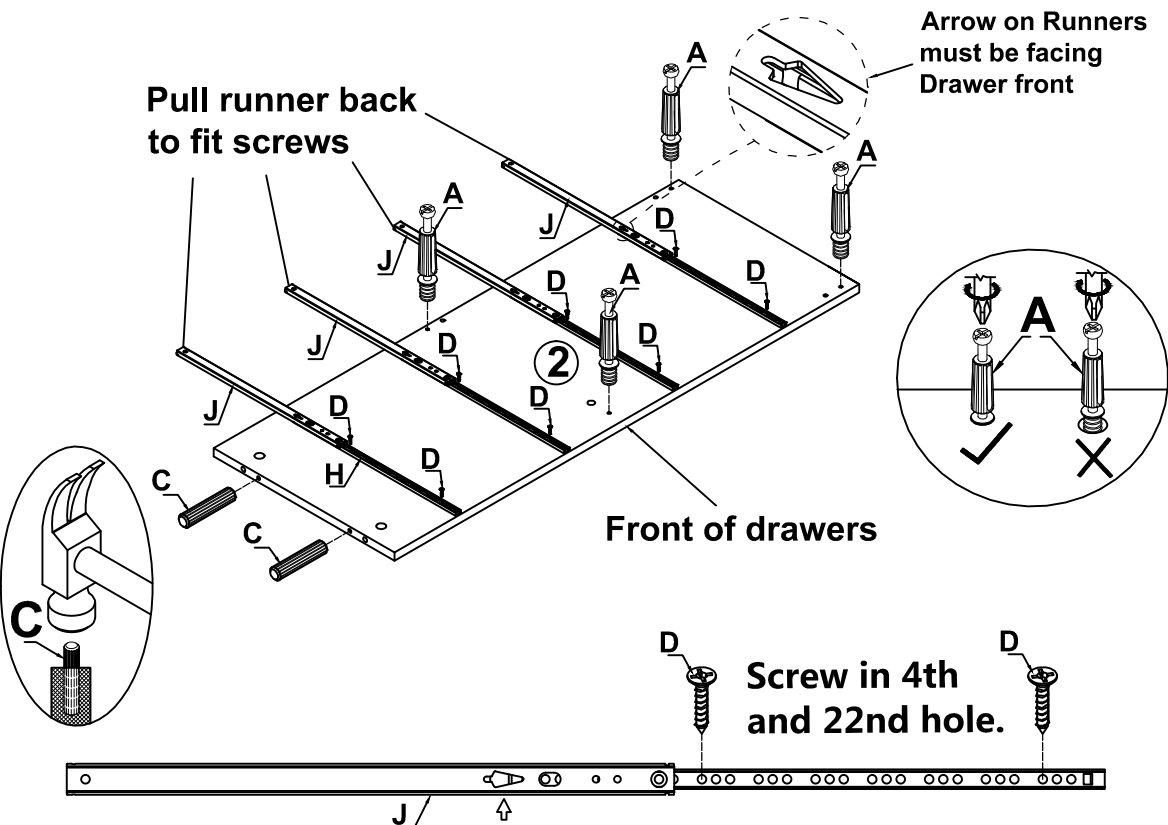

Make sure this arrow on the runners is pointing towards the front of drawers

Step 4

A=4	C=2
	
Peg	Dowel
J=4	D=8
	
Drawer Runner	Screw M3.5*14mm

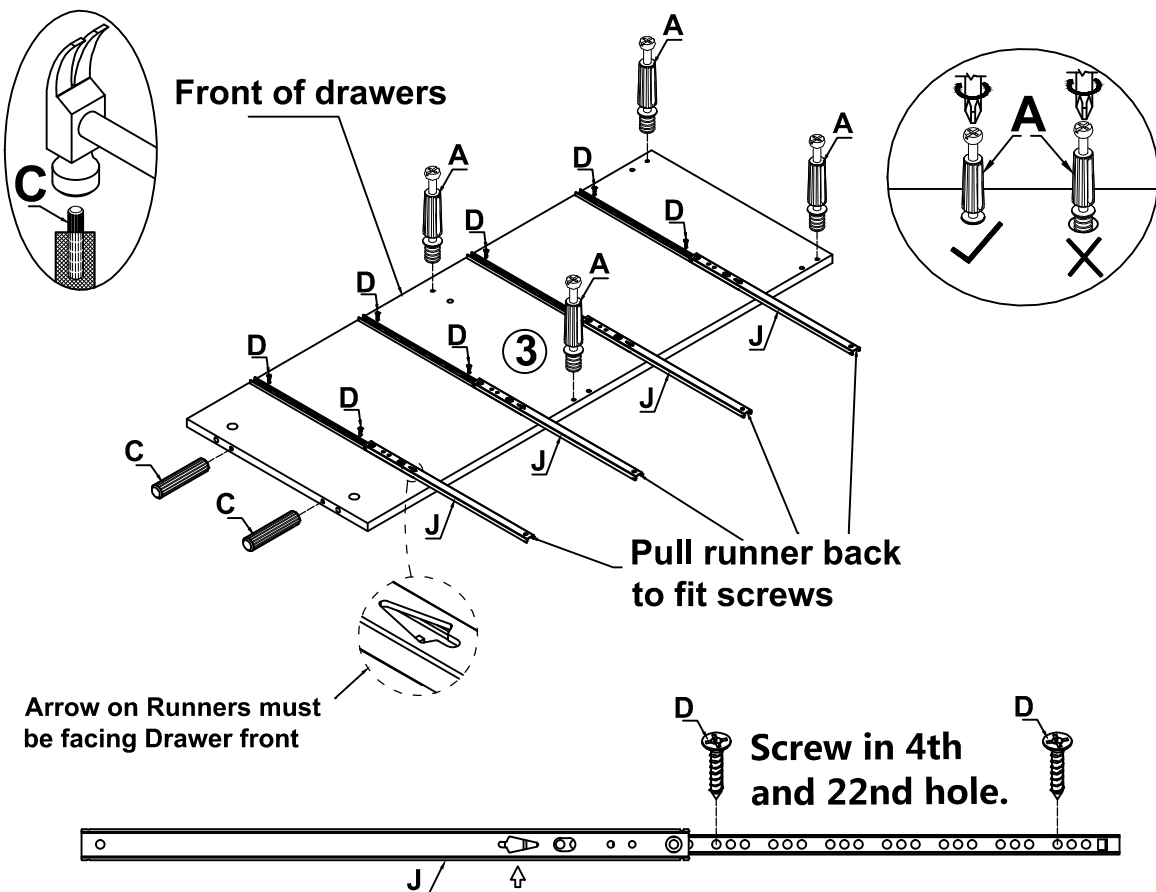

Make sure this arrow on the runners is pointing towards the front of drawers

Assembly Instruction

Step 5

A=2

C=4



Peg

Dowel


J=4

D=8



Drawer Runner

Screw M3.5*14mm

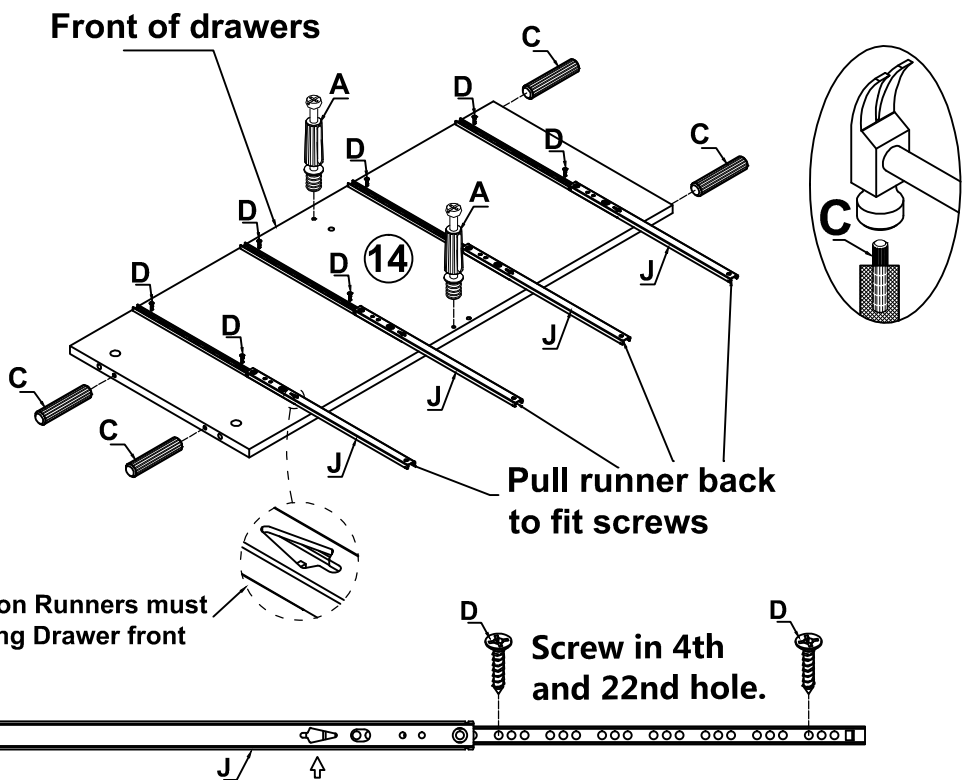

Make sure this arrow on the runners is pointing towards the front of drawers

Step 6

A=2

J=4




Peg

Drawer Runner

D=8



Screw M3.5*14mm

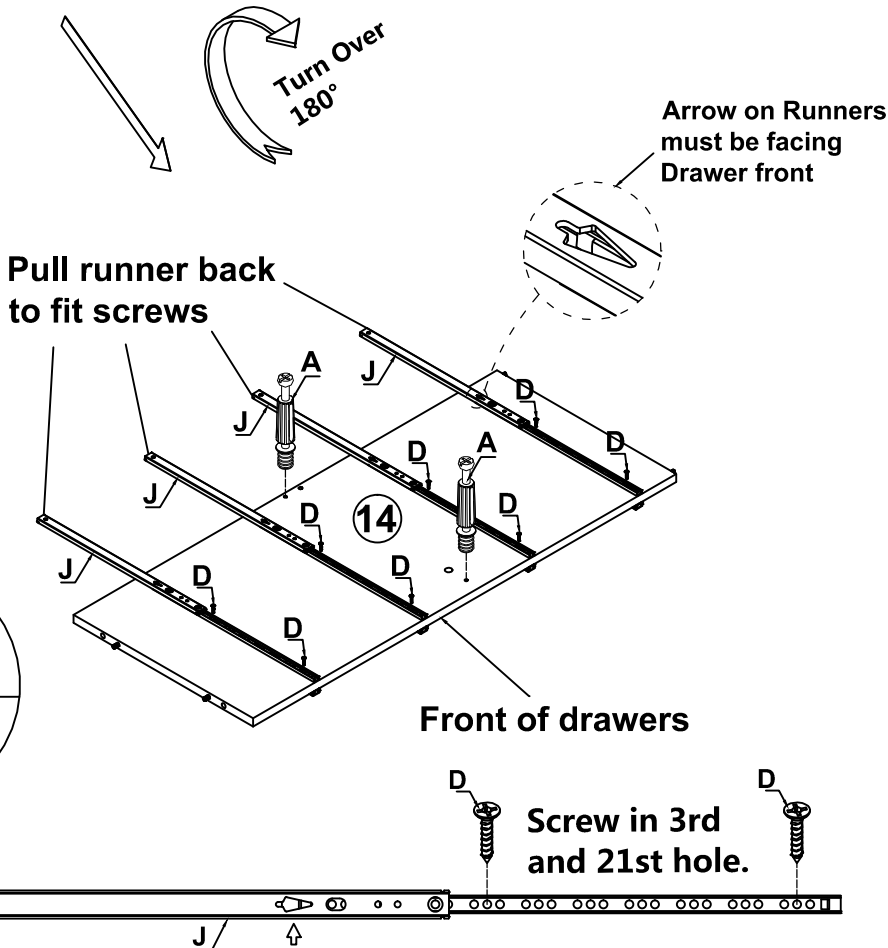


Make sure this arrow on the runners is pointing towards the front of drawers



Assembly Instruction

Step 7

B=4

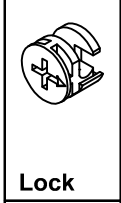


4

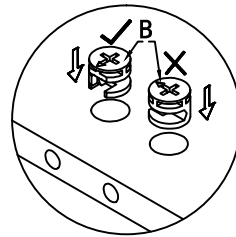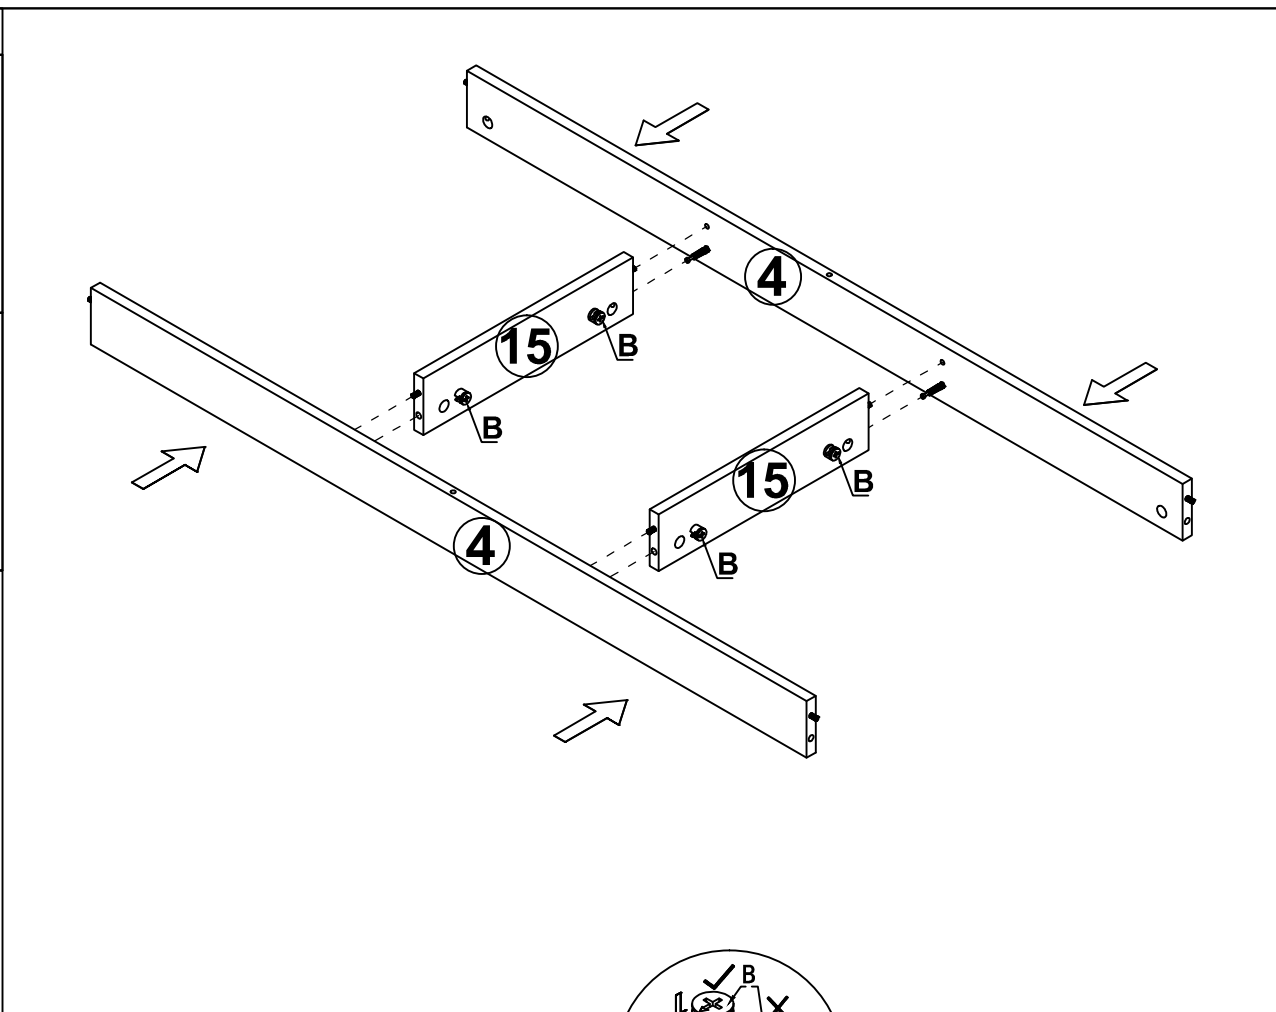


Step 8

B=2

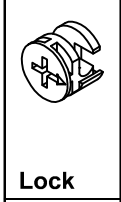


4

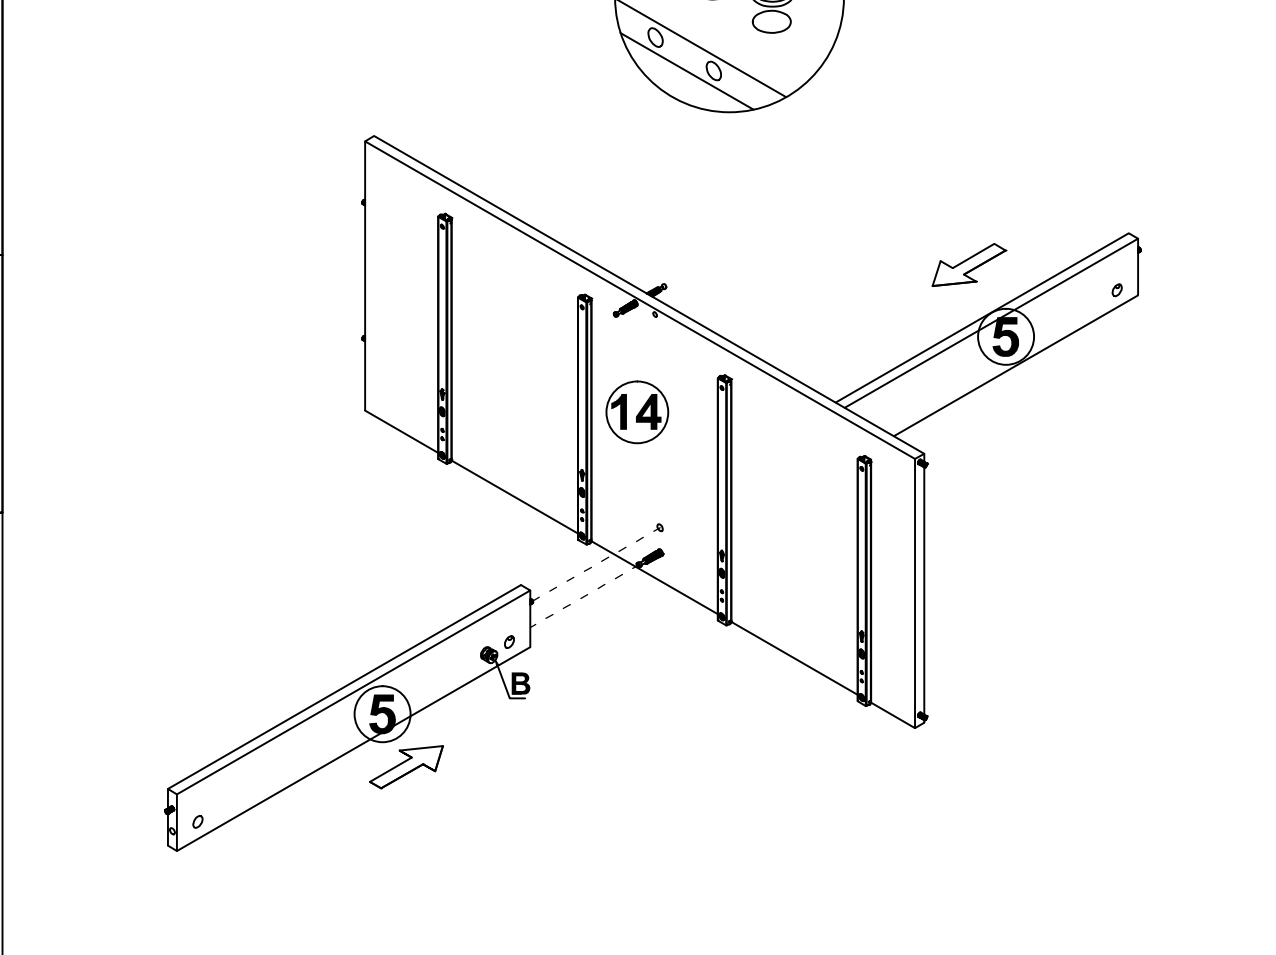

Assembly Instruction

Step 9


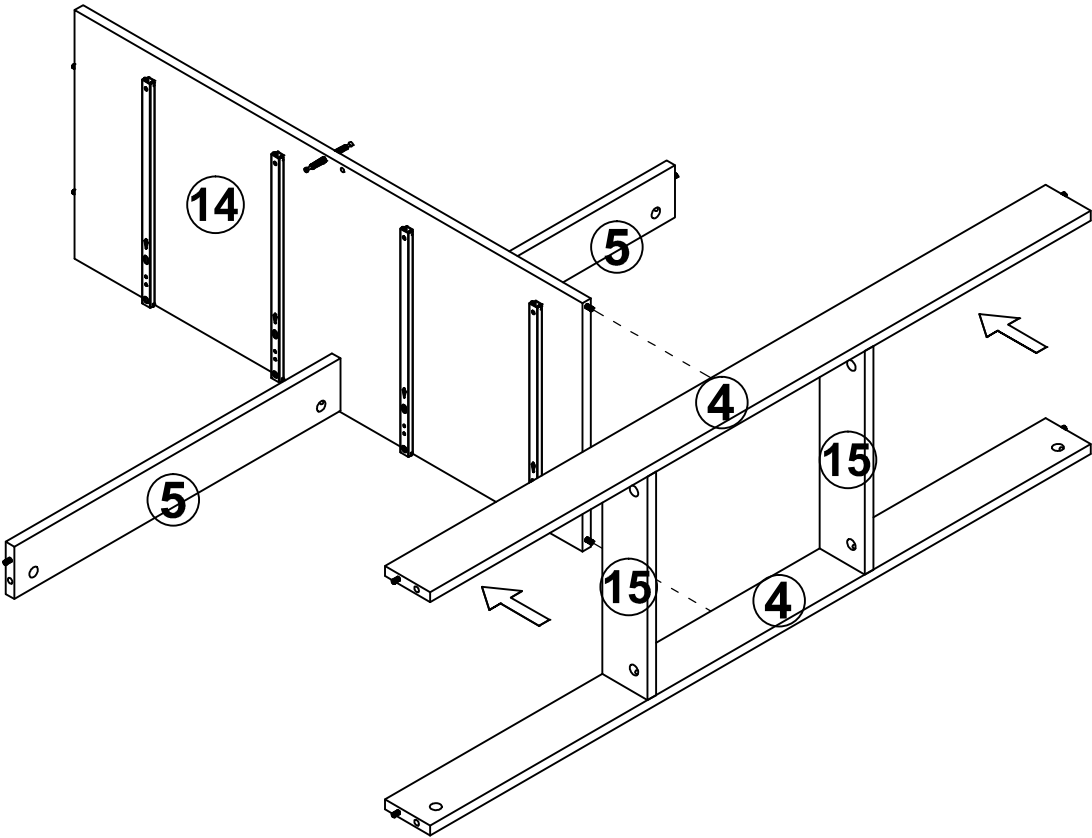


Step 10

B=5



Lock

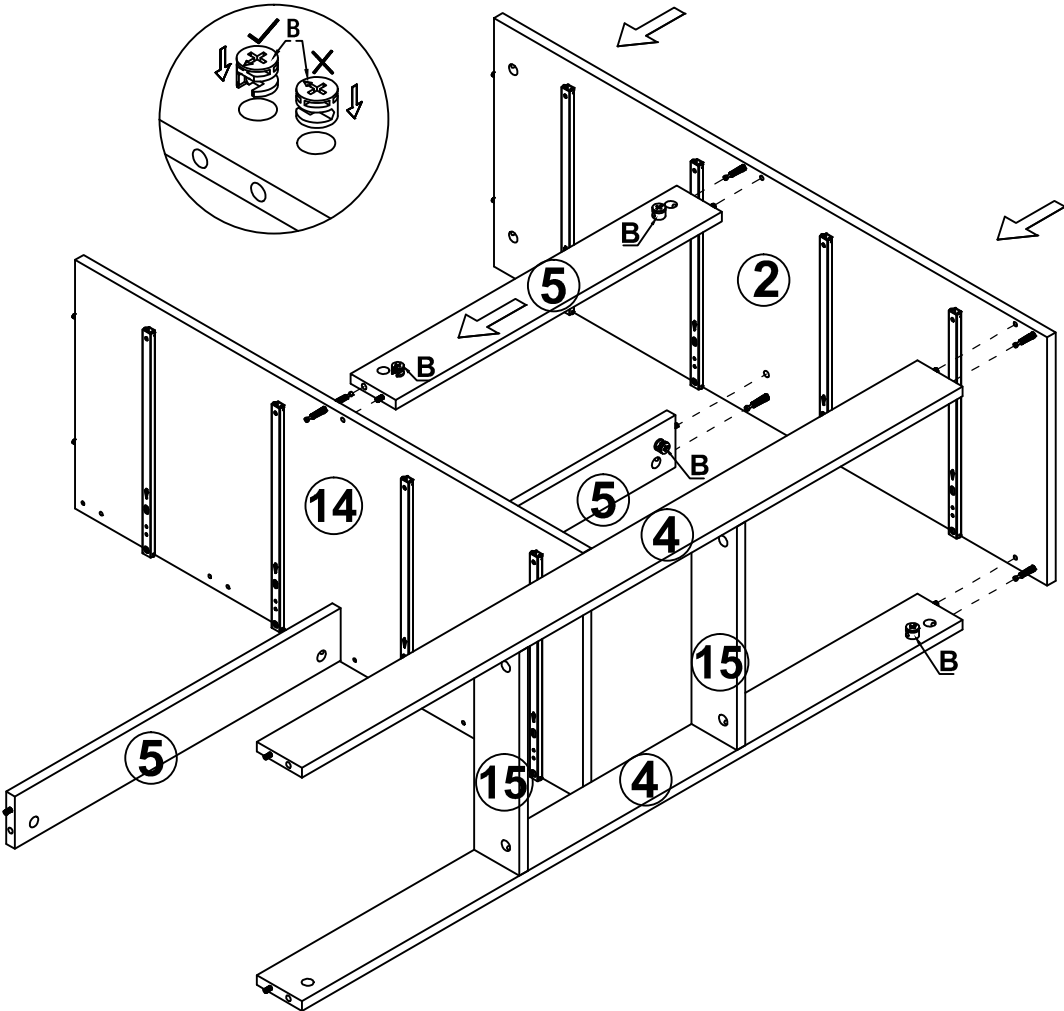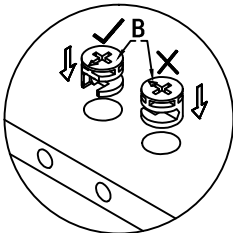


Assembly Instruction

Step 11

B=5



Lock

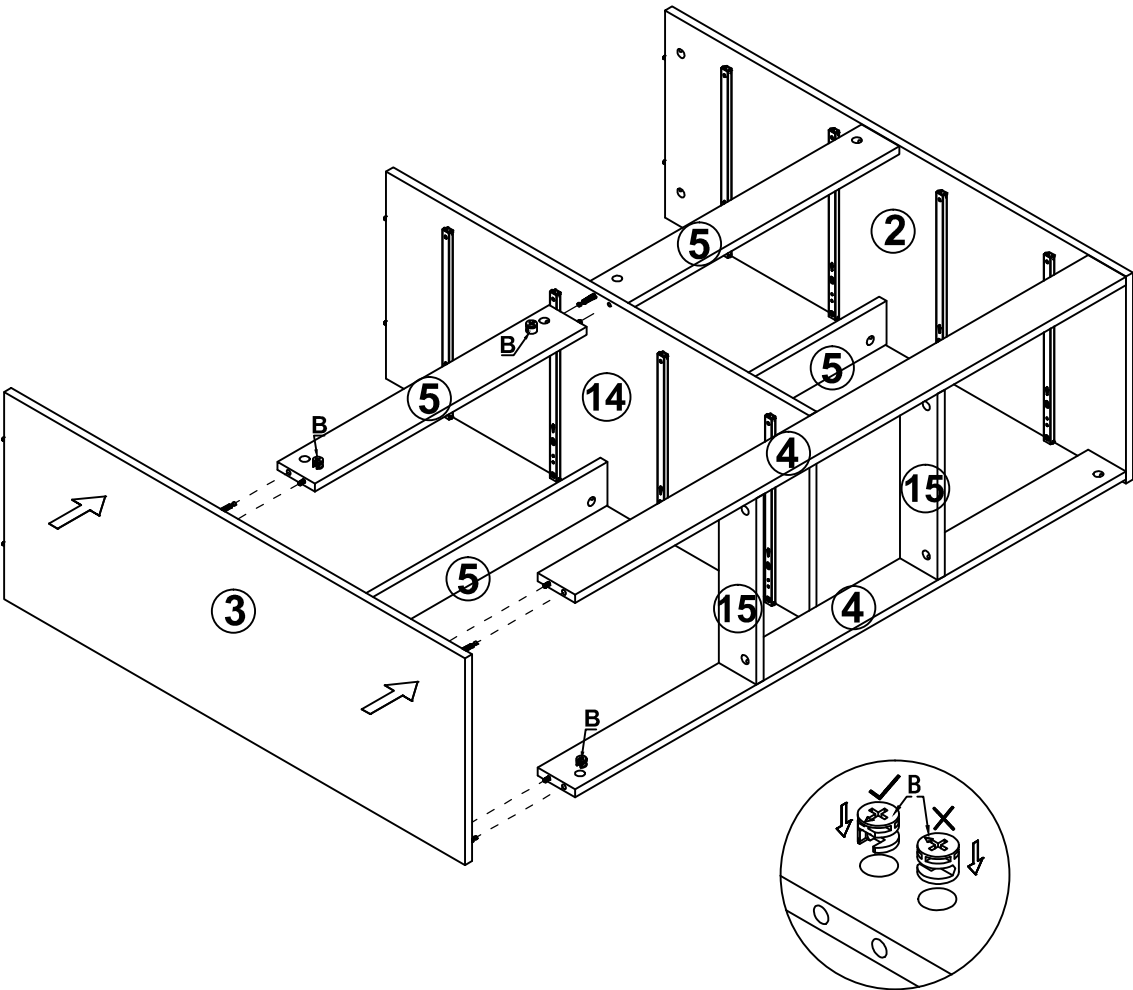


Step 12

B=6




Lock

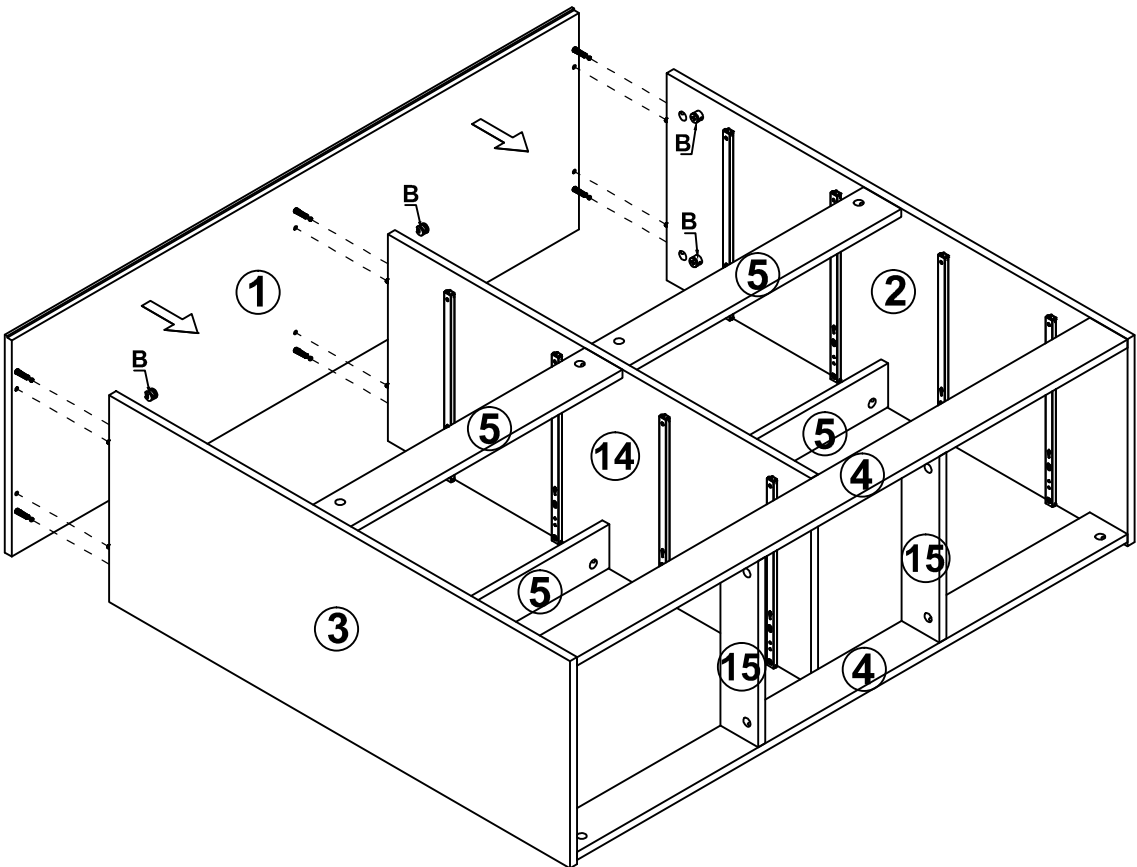


Assembly Instruction

Step 13

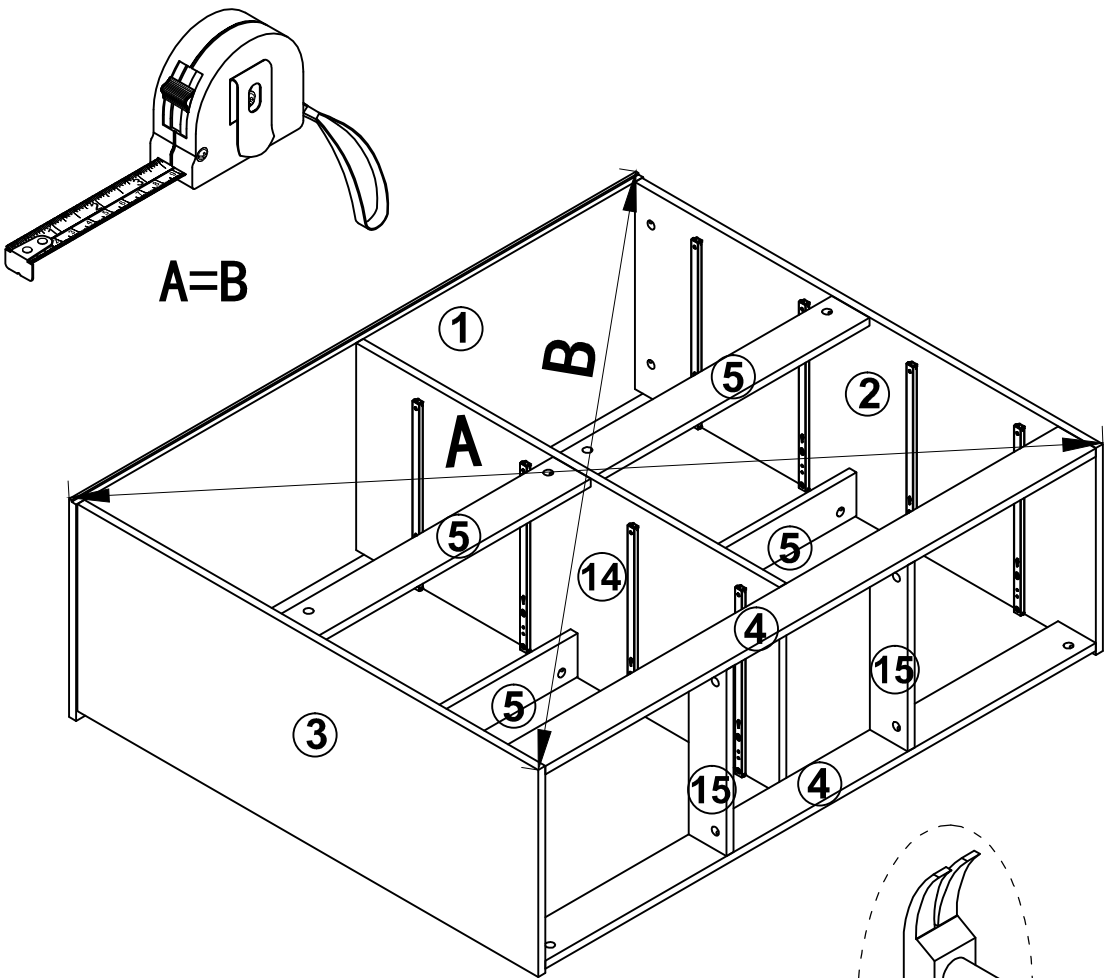


Step 14

G=18	F=8
	
Pin	Plastic Feet

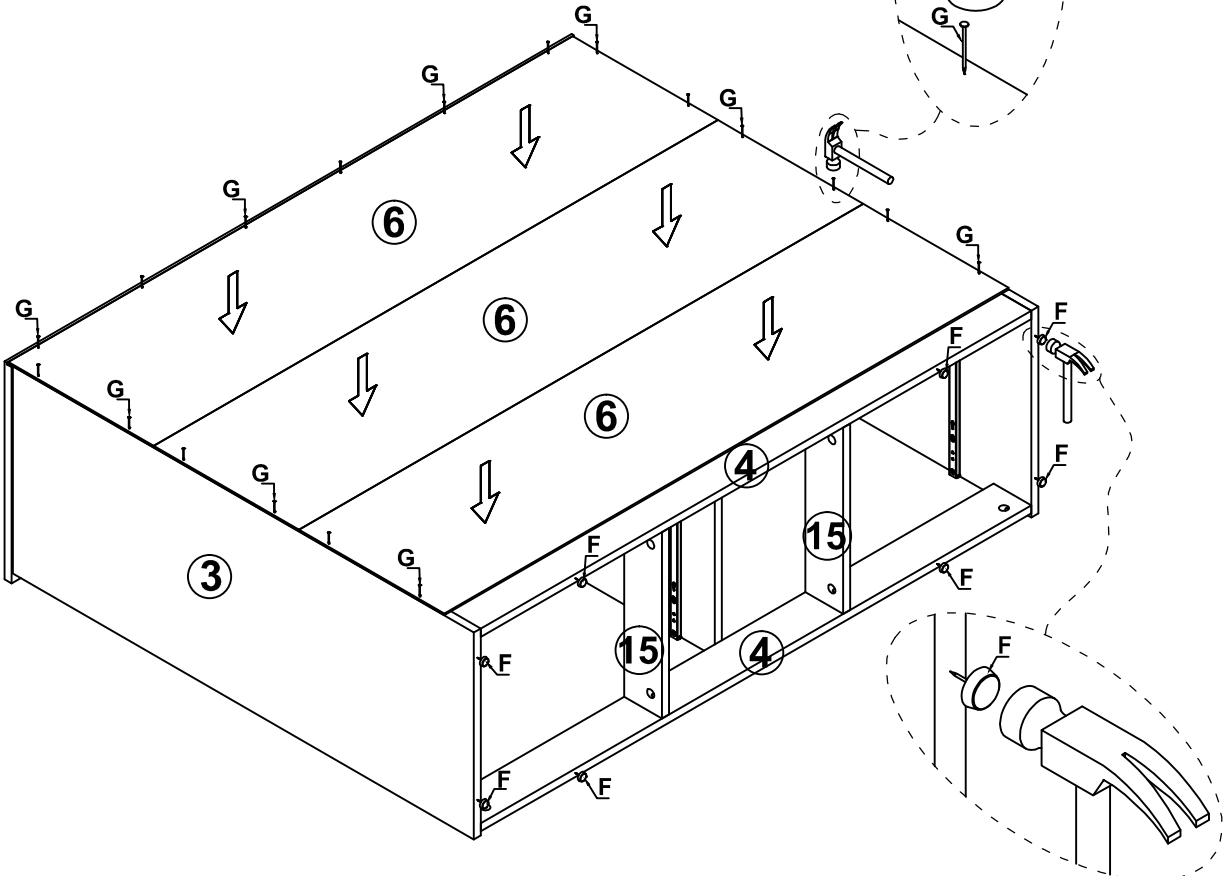


Assembly Instruction

Step 15	

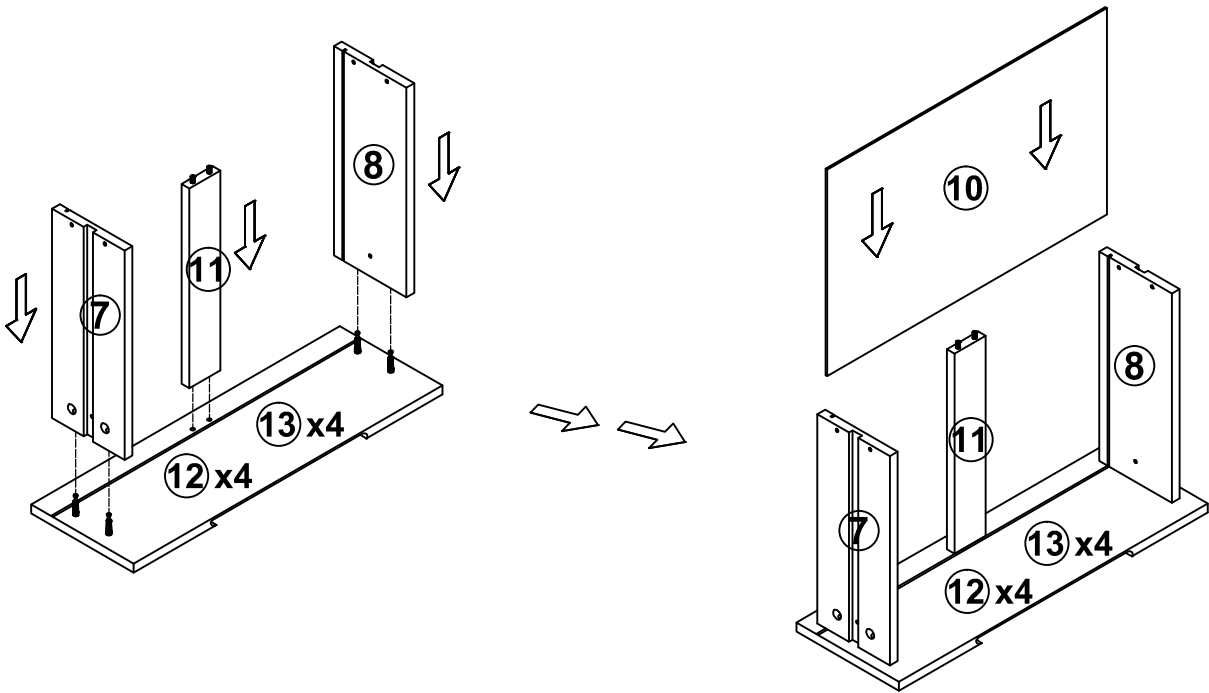

※Assembly Details
Please slide drawer bottom then fix the cam lock


Step 16	
E=32	B=32
	
Screw M4*38	Lock

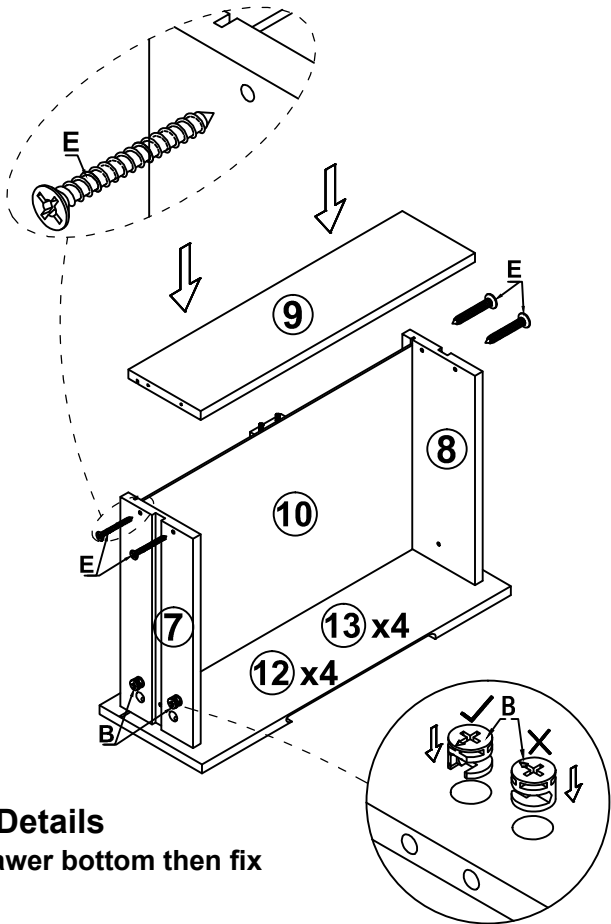


※Assembly Details
Please slide drawer bottom then fix the cam lock

Assembly Instruction

Step 17

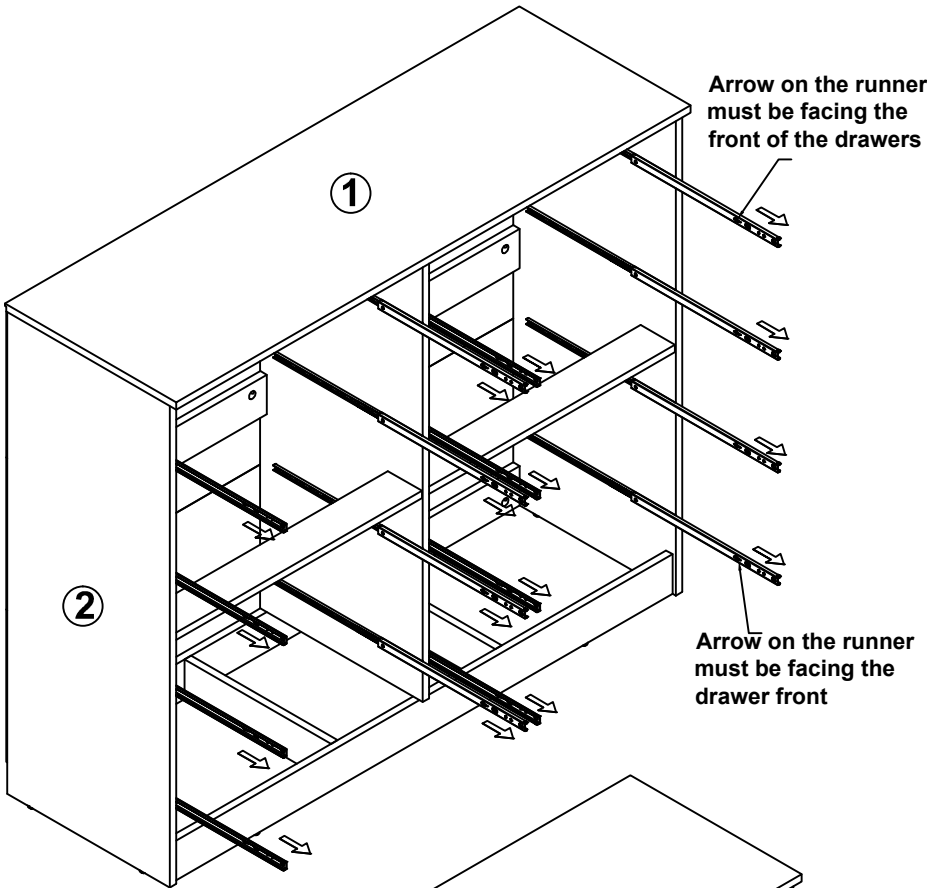


Step 18

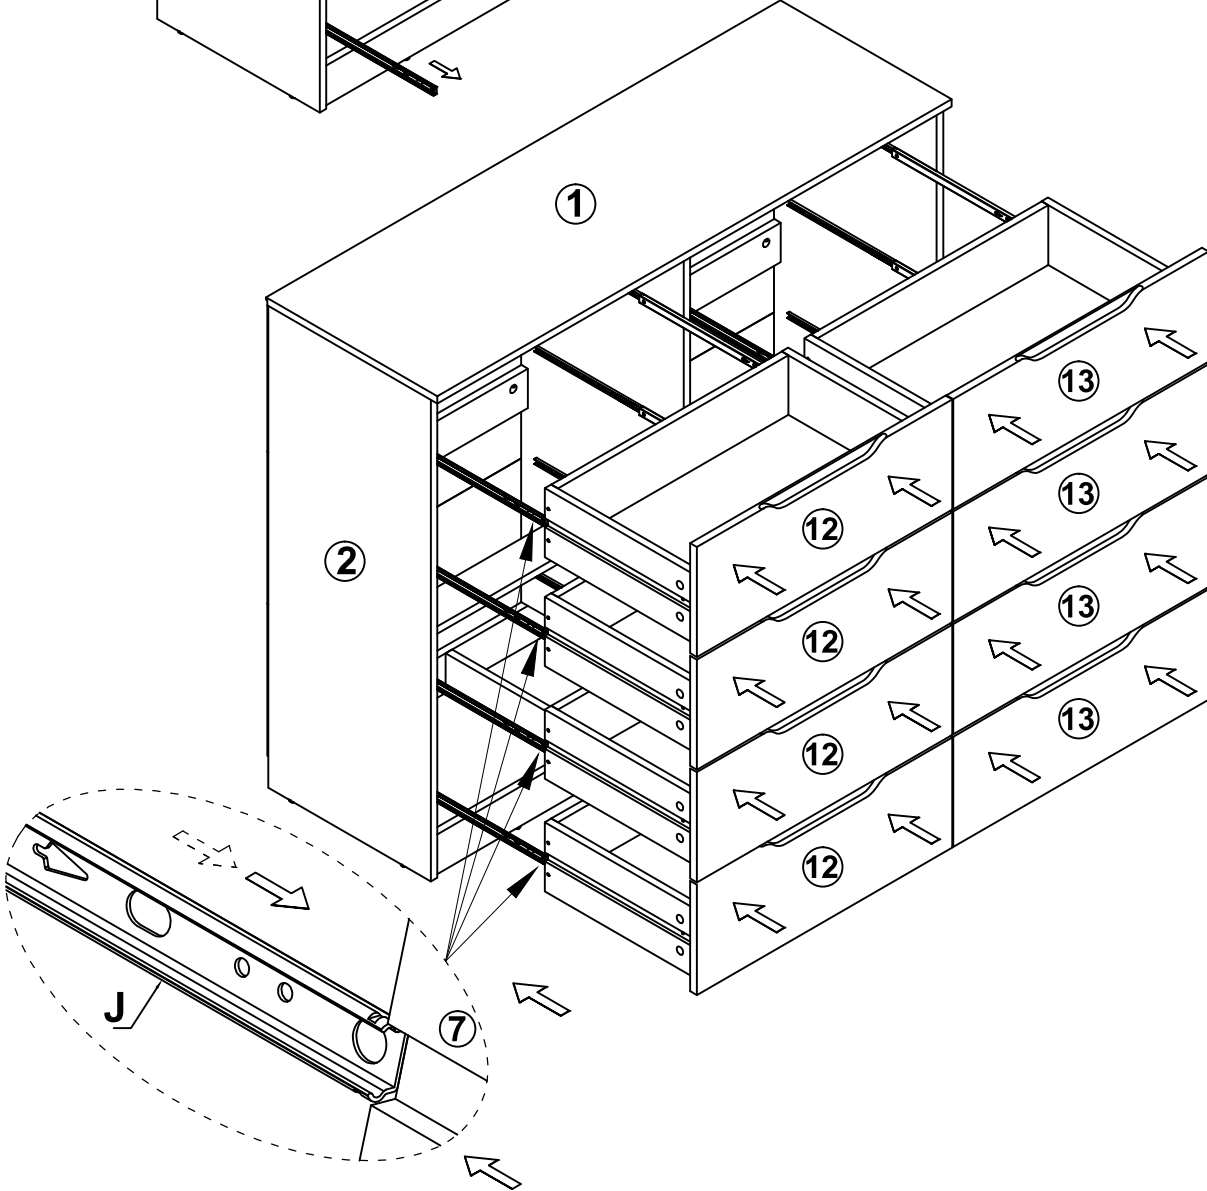


Assembly Instruction

Step 19


H=16

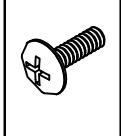


Screw
M4*12mm

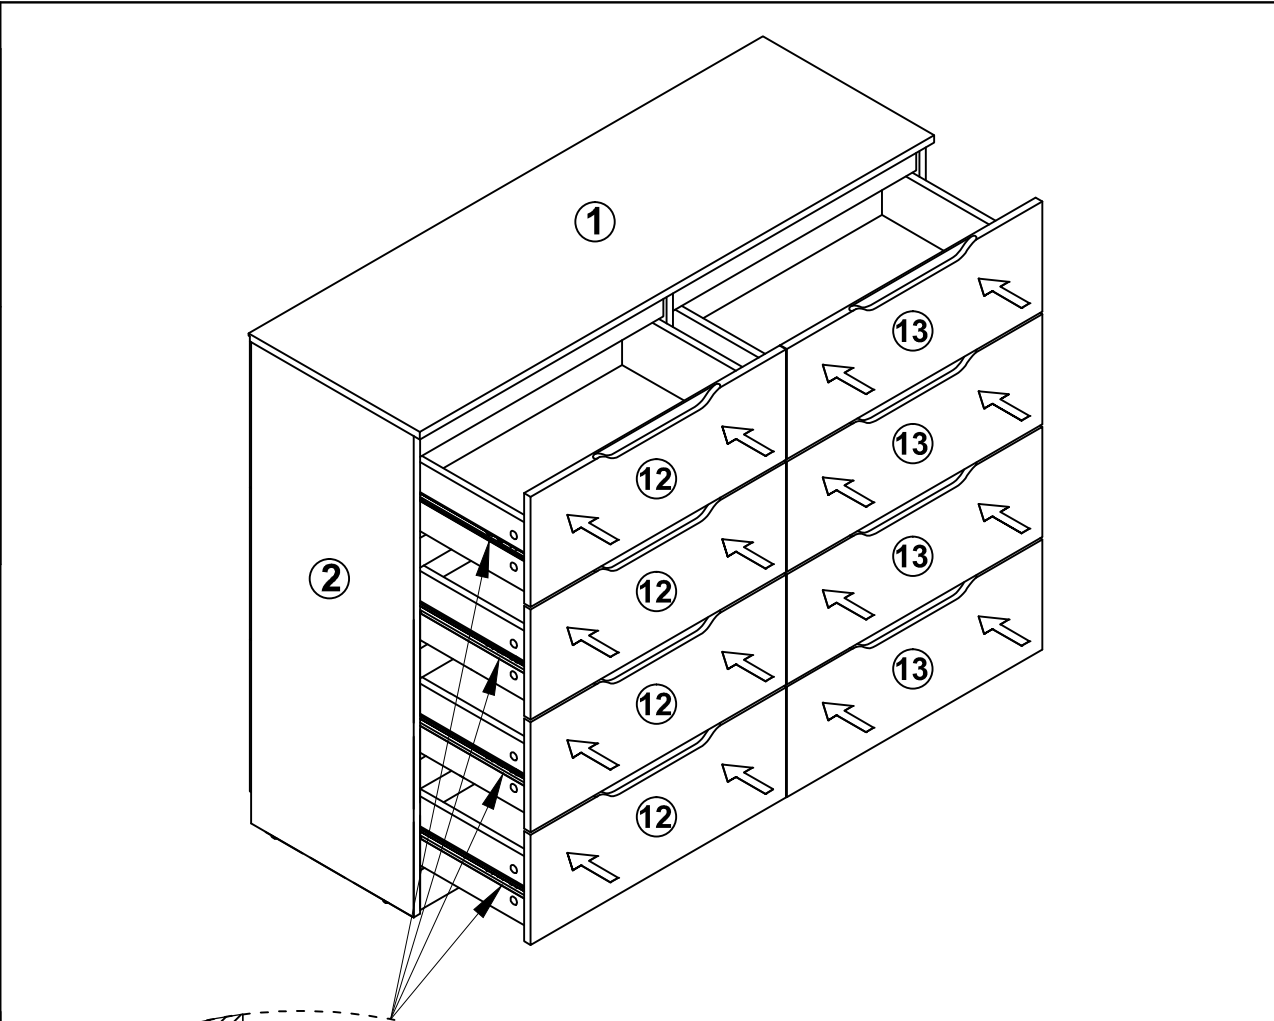

Step 20

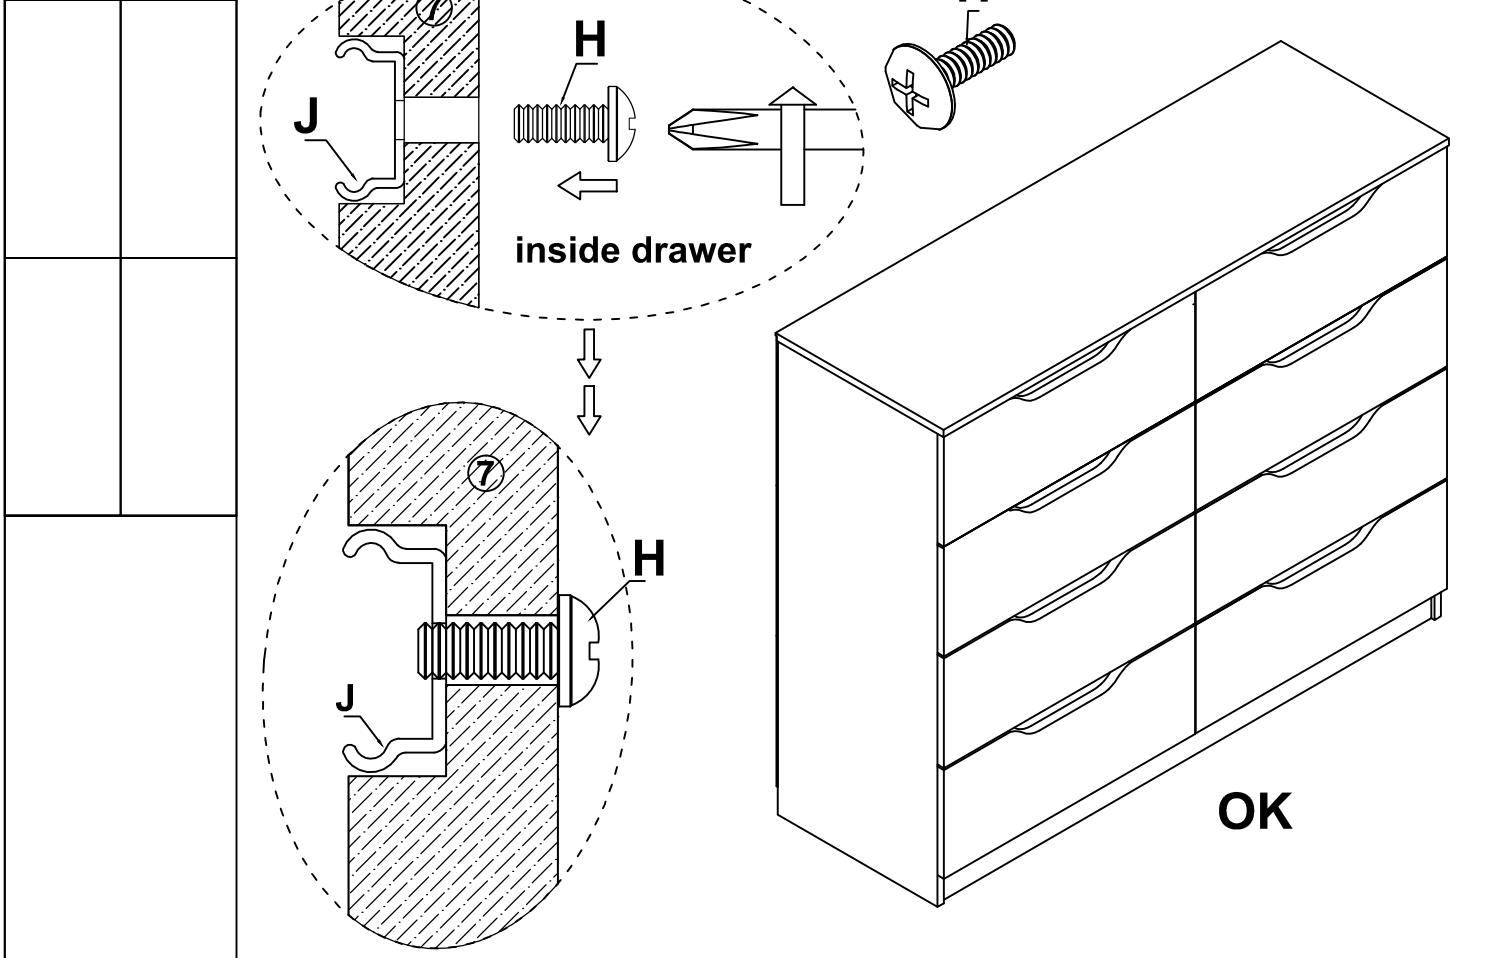

P=1

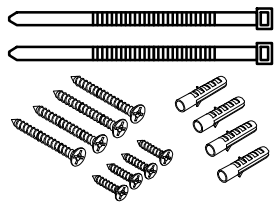

Wall bracket

