



ASSEMBLY INSTRUCTION


① X1



② X2



③ X1



④ X2



A X10

M6x30



B X2

M6x40



Cx1



Dx4




STEP 1

Assembly Tips:

You must not tighten any screw yet in this step

A X6
M6x30

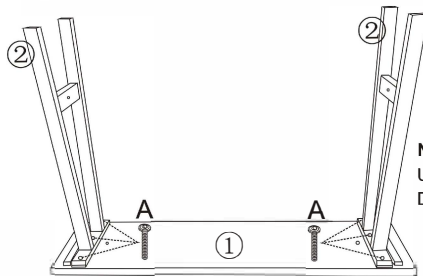


NOTE:
Use 8 short #A 30MM screws,
Do NOT use #B screws

STEP 2

Assembly Tips:

You must not tighten any screw yet in this step

B X2
M6x40

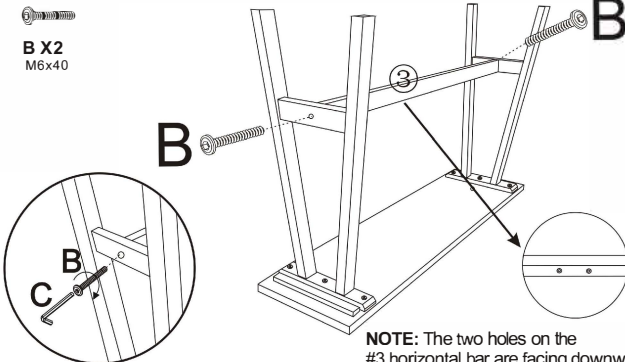

NOTE: Use 2 #B 40MM screws

NOTE: The two holes on the
#3 horizontal bar are facing downward,
close to the #1 top board

ASSEMBLY INSTRUCTION

STEP 3

Assembly Tips:


You must not tighten any screw yet in this step

A X2
M6x30

Dx4



NOTE: Use 2 #A 30MM screws

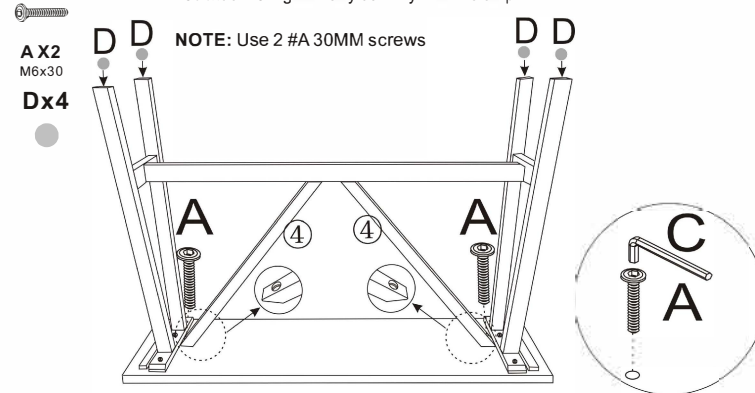

STEP 4

Assembly Tips: When every part is OK,
You can tighten all screws in this step.

A X2
M6x30



A X2

M6x30



A X2

M6x30



A X2

M6x30



A X2

M6x30



A X2

M6x30



A X2

M6x30



NOTE: Use 2 #A 30MM screws

