


CURTAIN ROD

Ideally, a curtain rod should be mounted 2" to 4" above the window trim.

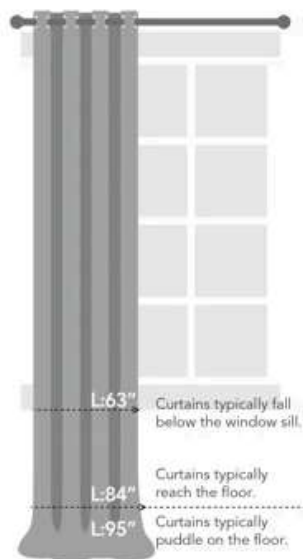

PANELS

For a proper fullness, curtain panels combined should measure approx. 2-3x the width of your window. Please choose panels according to the width chart below.

*The red color is the suggested number of panels.

Window Width	Suggested Width & Number of Panels										
	25"	38"	42"	46"	52"	54"	60"	80"	100"	120"	180"
25" to 27"	2 P				1 P	1 P	1 P	1 P			
28" to 38"		2 P						1 P	1 P		
39" to 42"			2 P					1 P			
43" to 47"				2 P					1 P	1 P	
48" to 52"					2 P				1 P	1 P	
53" to 55"						2 P				1 P	
56" to 61"							2 P			1 P	1 P
62" to 77"		4 P									1 P
78" to 85"			4 P					2 P			1 P
86" to 93"				4 P				2 P			
94" to 100"					4 P			2 P		2 P	
101" to 105"						4 P				2 P	
106" to 121"							4 P			2 P	
122" to 127"			6 P								2 P
128" to 139"				6 P							2 P
140" to 157"					6 P						2 P
158" to 163"						6 P					2 P
164" to 180"							6 P				2 P

WINDOW CURTAIN MEASURING GUIDE

1. MEASURE FROM TOP OF CURTAIN ROD TO BOTTOM OF WINDOW.
2. CHOOSE A CURTAIN SIZE BIGGER THAN YOUR MEASUREMENT.