

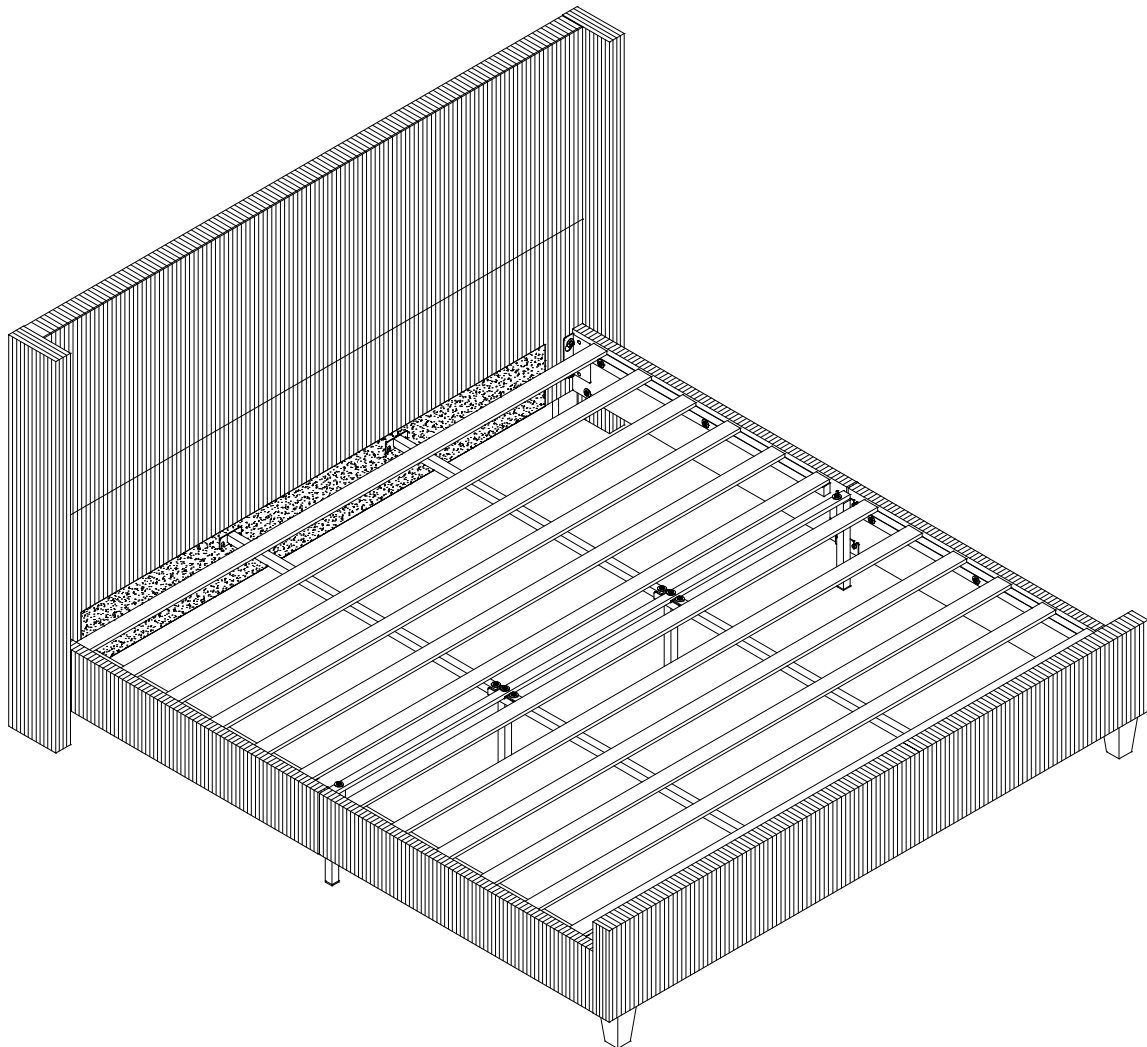


# **Upholstered Platform Bed with Tufted Wingback Headboard**

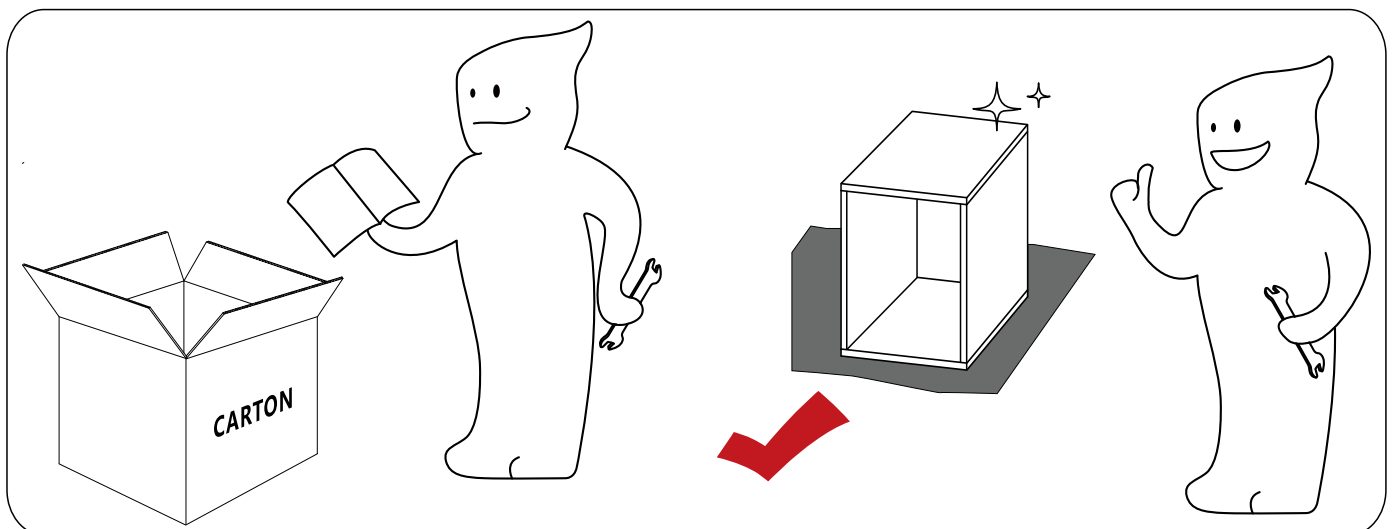


# ! IMPORTANT

Please follow the instruction manuals and use a pad to protect the product during your assembly.

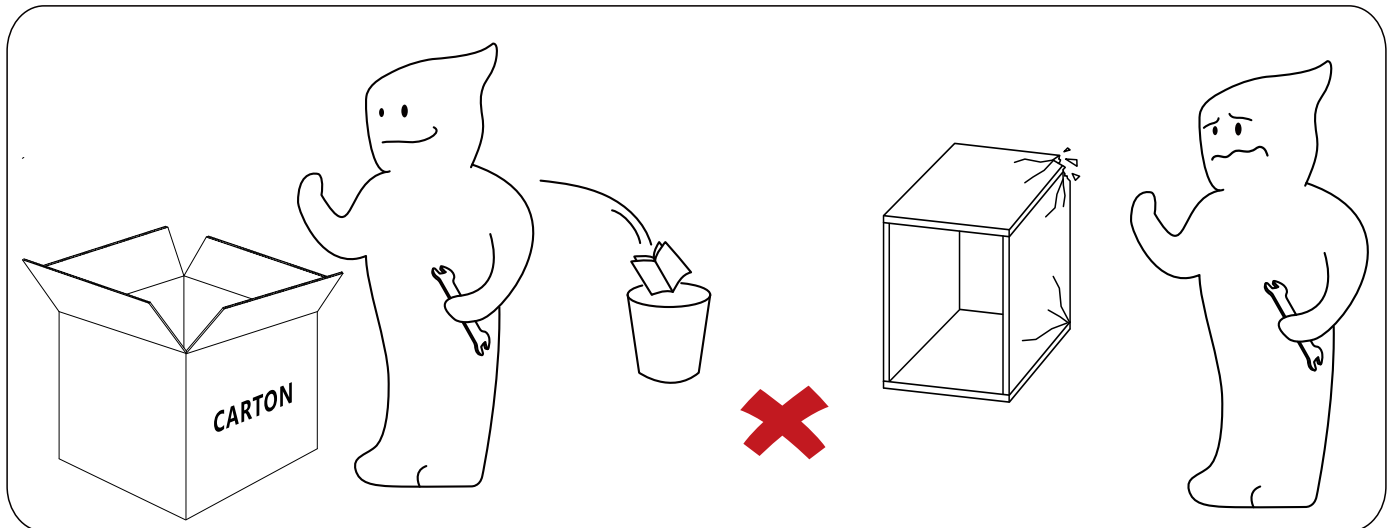


**Note:**













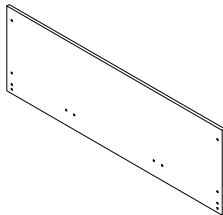
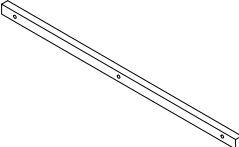
1. Should be assembled on flat ground to keep balance.
2. Before completing the installation, do not tighten the screws.

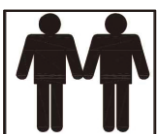










For easier and better assembly, **2** or more adults are required.

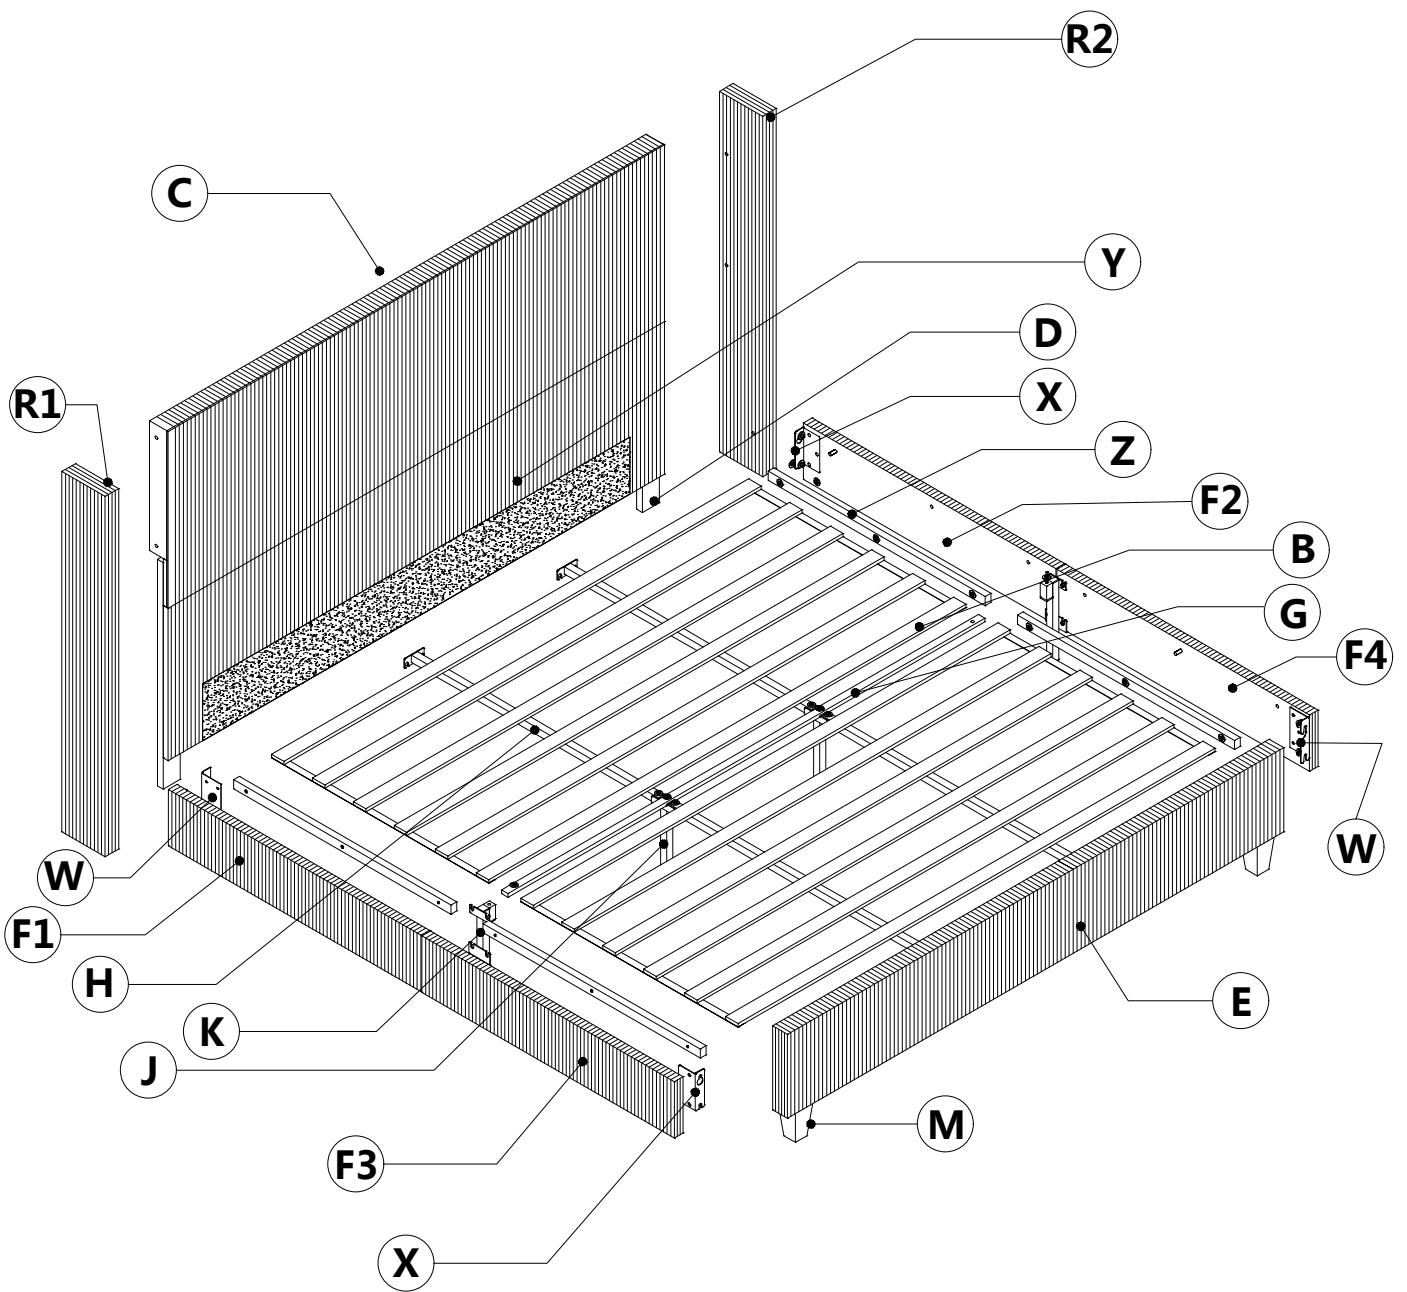

# BED FRAME PARTS LIST

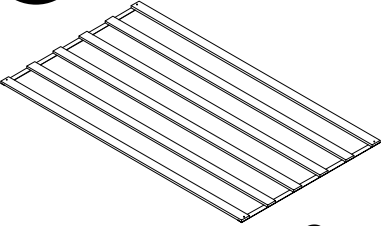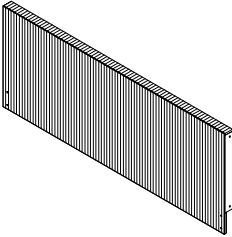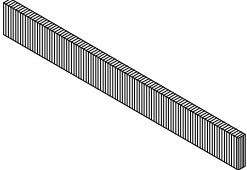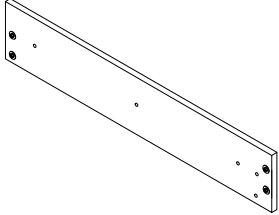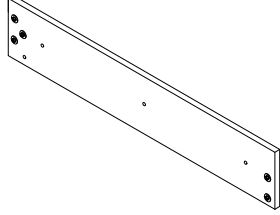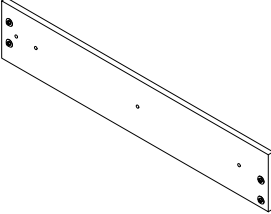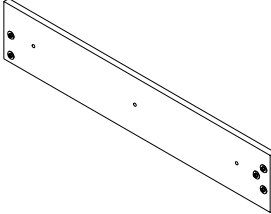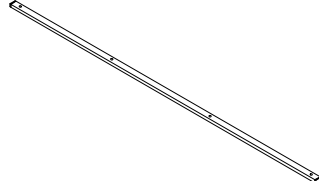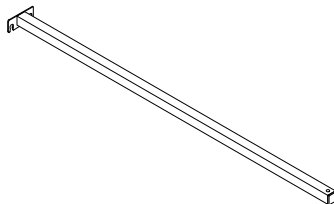
<p><b>(B)</b></p>  <p>2pcs</p>	<p><b>(C)</b></p>  <p>1pc</p>	<p><b>(D)</b></p>  <p>2pcs</p>
<p><b>(E)</b></p>  <p>1pc</p>	<p><b>(F1)</b></p>  <p>1pc</p>	<p><b>(F2)</b></p>  <p>1pc</p>
<p><b>(F3)</b></p>  <p>1pc</p>	<p><b>(F4)</b></p>  <p>1pc</p>	<p><b>(G)</b></p>  <p>1pc</p>
<p><b>(H)</b></p>  <p>4pcs</p>	<p><b>(R1)</b></p>  <p>1pc</p>	<p><b>(R2)</b></p>  <p>1pc</p>
<p><b>(Y)</b></p>  <p>1pc</p>	<p><b>(Z)</b></p>  <p>4pcs</p>	

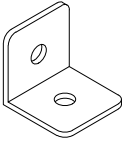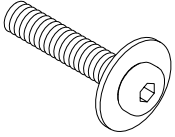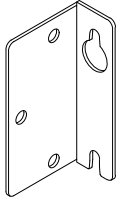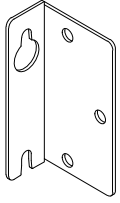

## FITTING PART LIST

<p><b>Ⓘ</b></p>  <p>1pc</p>	<p><b>Ⓙ</b></p>  <p>2pcs</p>	<p><b>Ⓚ</b></p>  <p>2pcs</p>
<p><b>Ⓜ</b></p>  <p>2pcs</p>	<p><b>Ⓝ</b></p>  <p>32pcs+1pc</p>	<p><b>Ⓟ</b></p>  <p>1pc</p>
<p><b>Ⓢ</b></p>  <p>2pcs</p>	<p><b>Ⓦ</b></p>  <p>2pcs</p>	<p><b>Ⓝ</b></p>  <p>2pcs</p>
<div></div>		

**1**

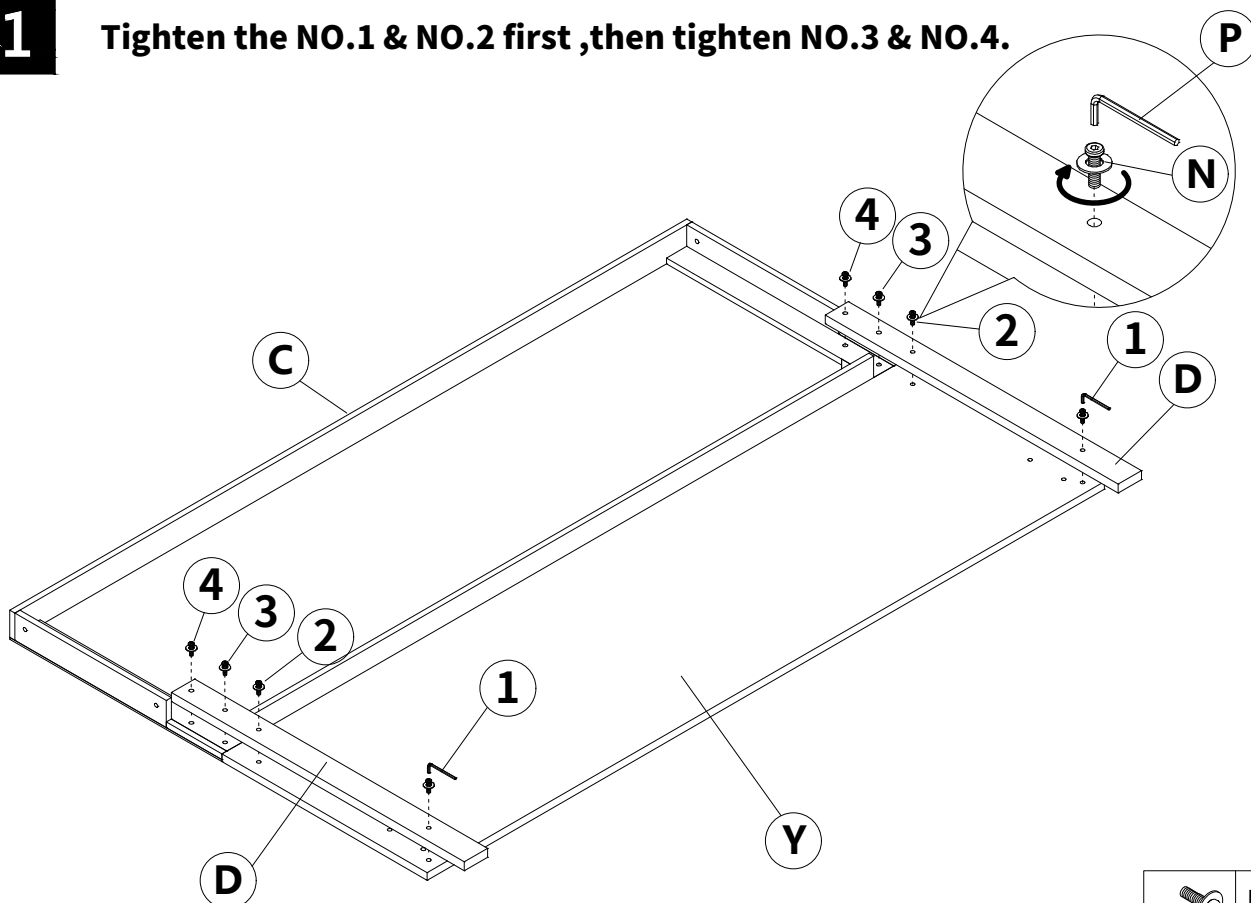
**Tighten the NO.1 & NO.2 first ,then tighten NO.3 & NO.4.**





	N x 8pcs
	P x 1pc


**2**

**L Shape connector Iron plate**

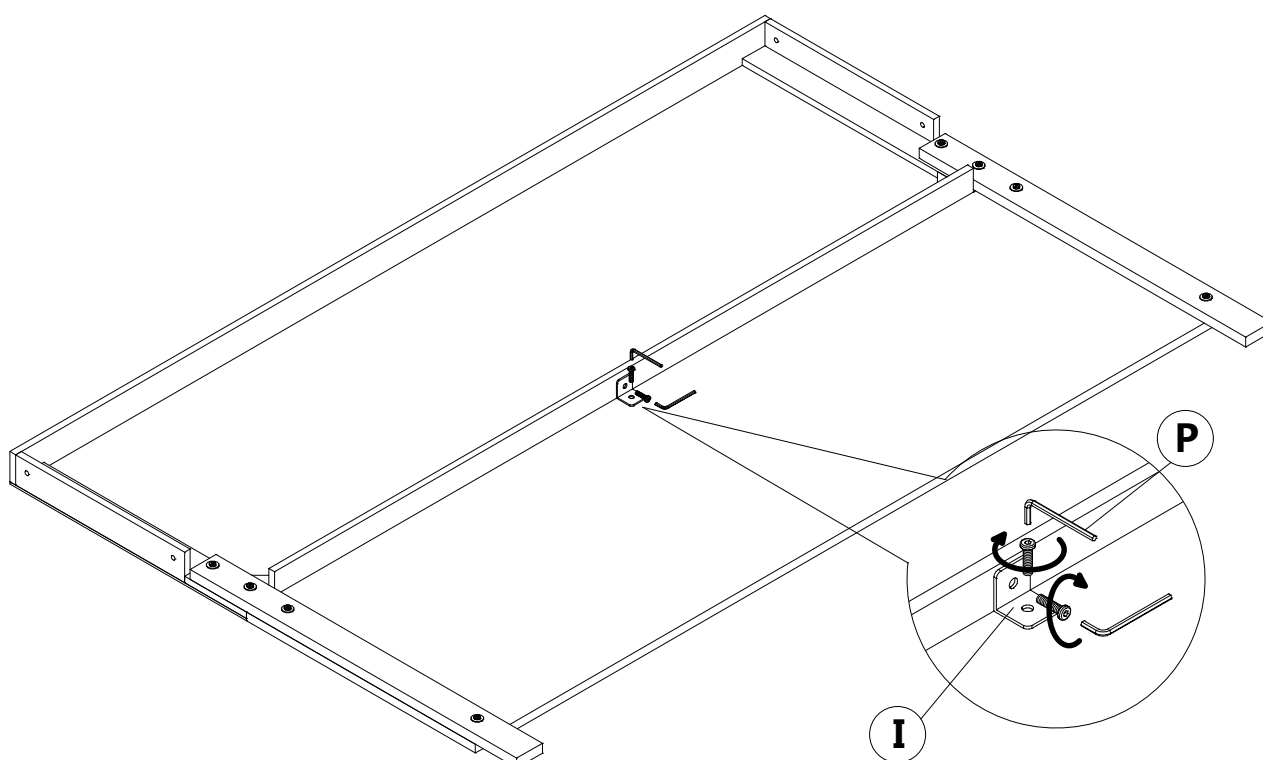


	I x 1pc
	P x 1pc

3

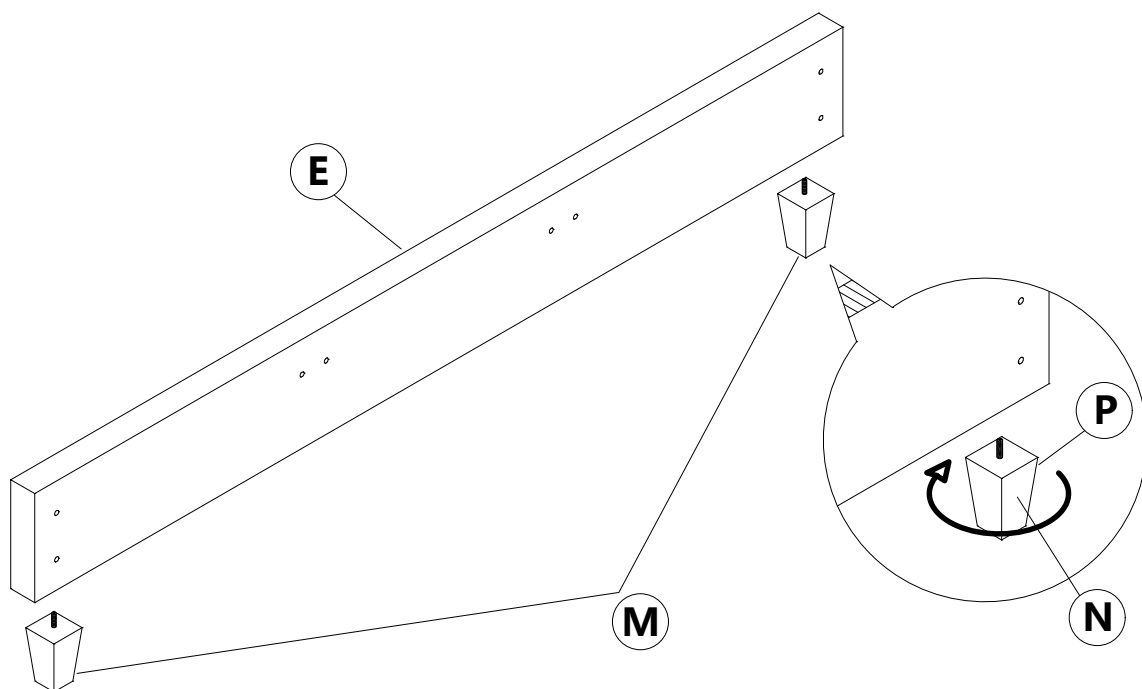


4

Take out parts F1 and F2, and lock the iron frame foot K in the middle according to the figure. Note that there are **2 holes** located on the inner side of the board. Then lock the bed hanging pieces W/X on the front and rear of the board, with **3 holes** on each side.

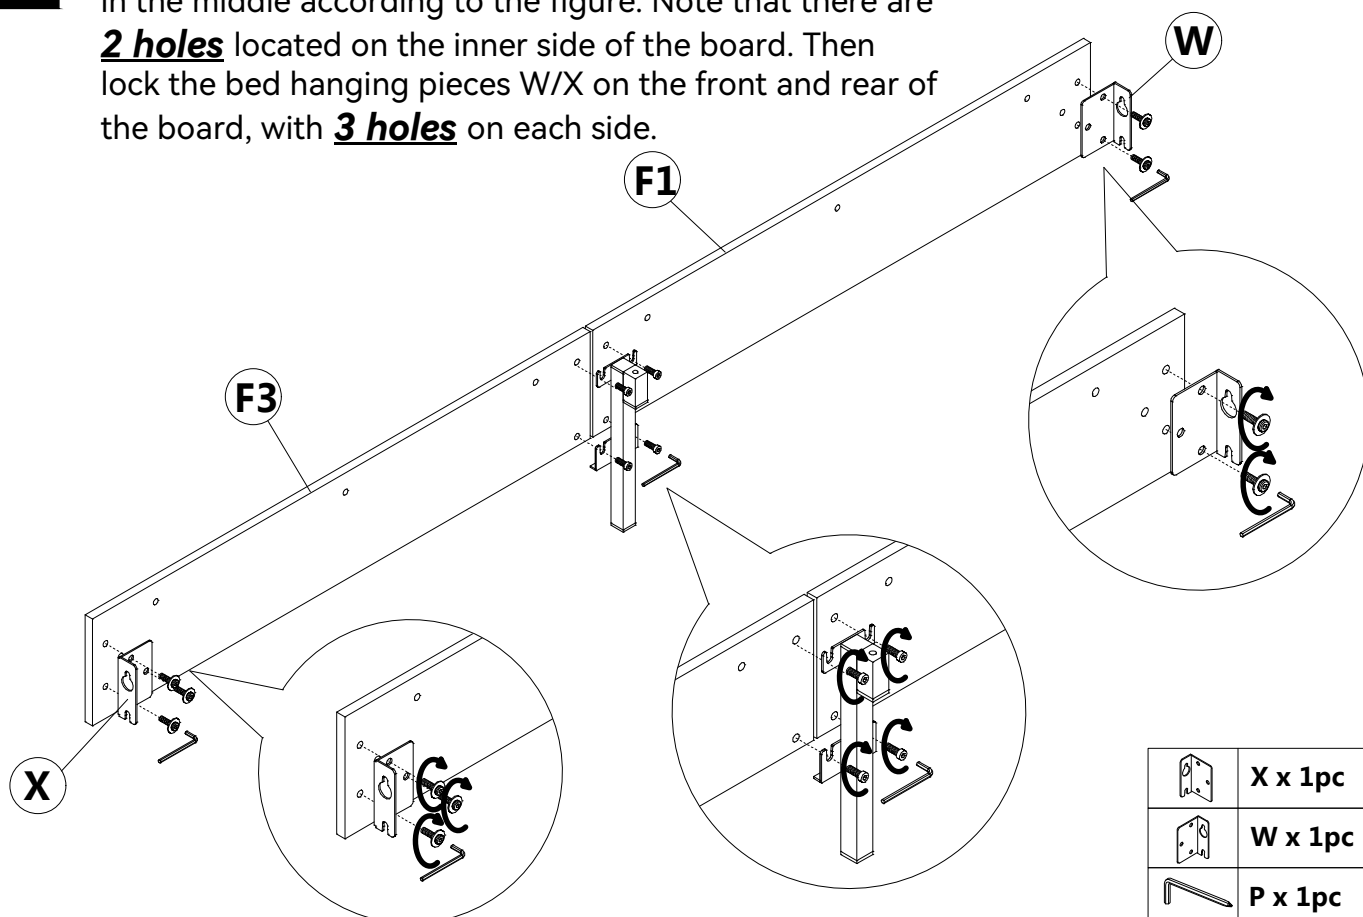


**5**

Same as Step 4

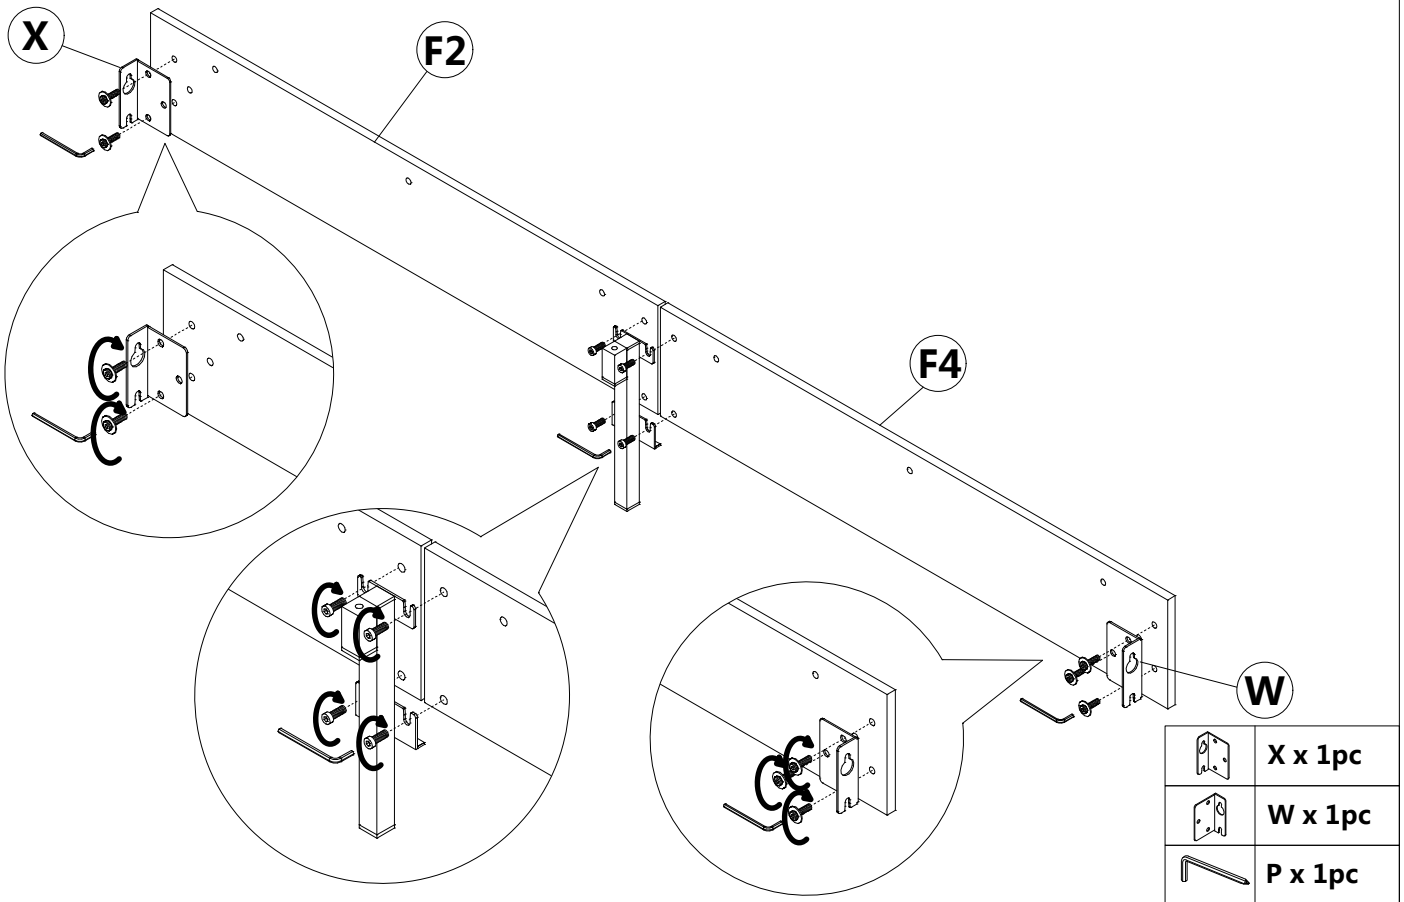


**6**

Loosen the screw of headboard side leg and both sides of footboard, hanging the bracket and tight the innerscrew.

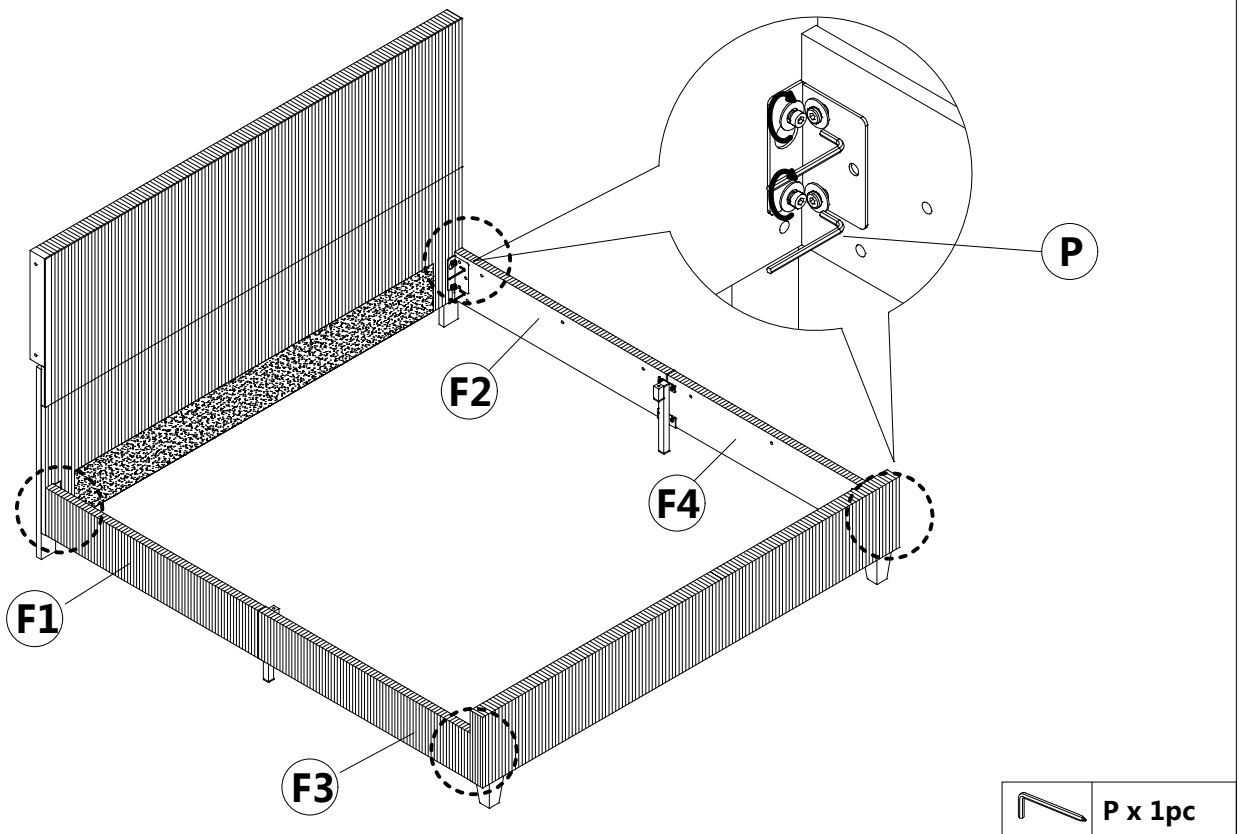




7

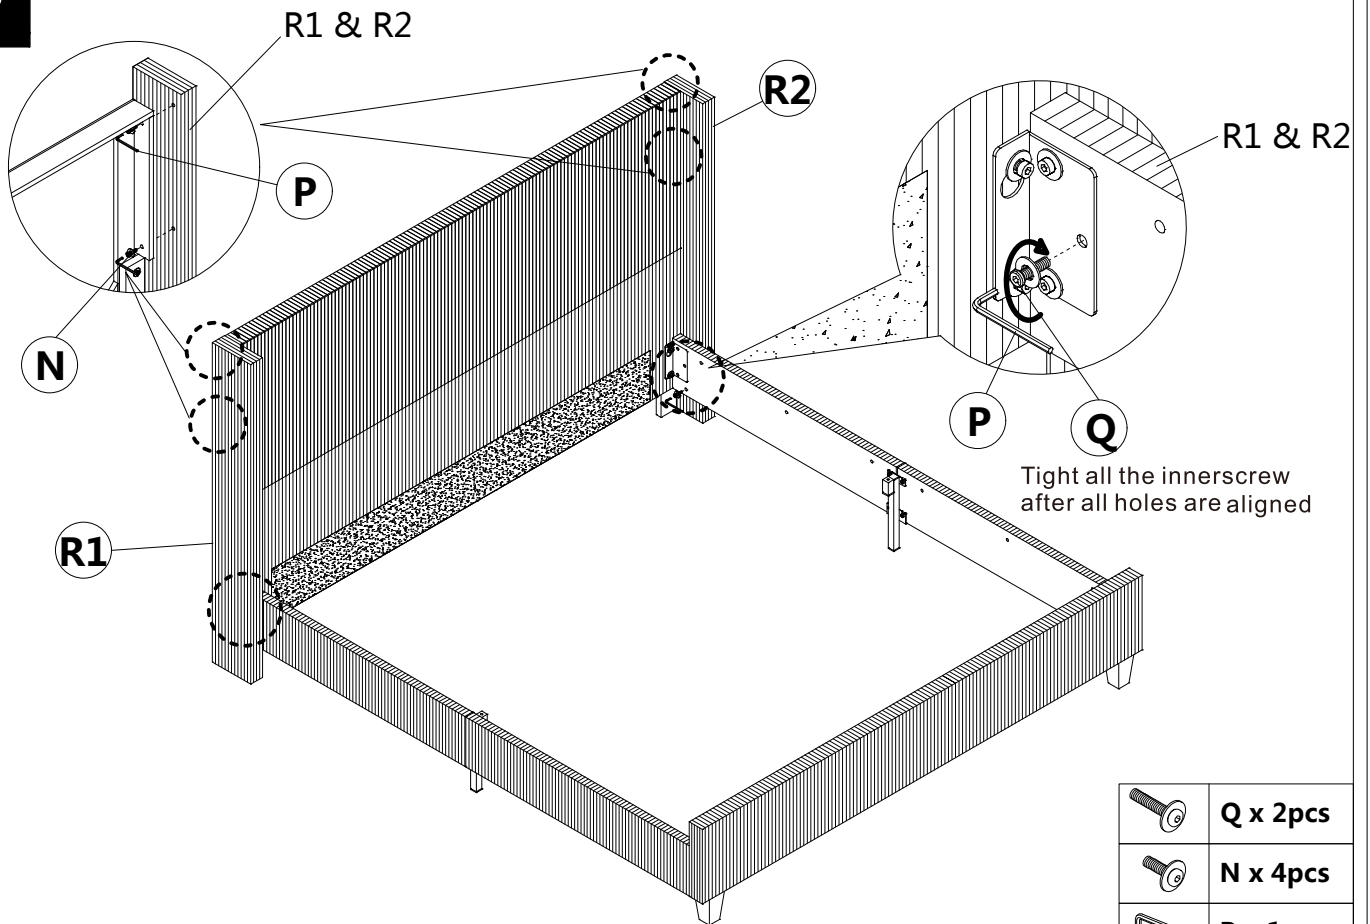


8

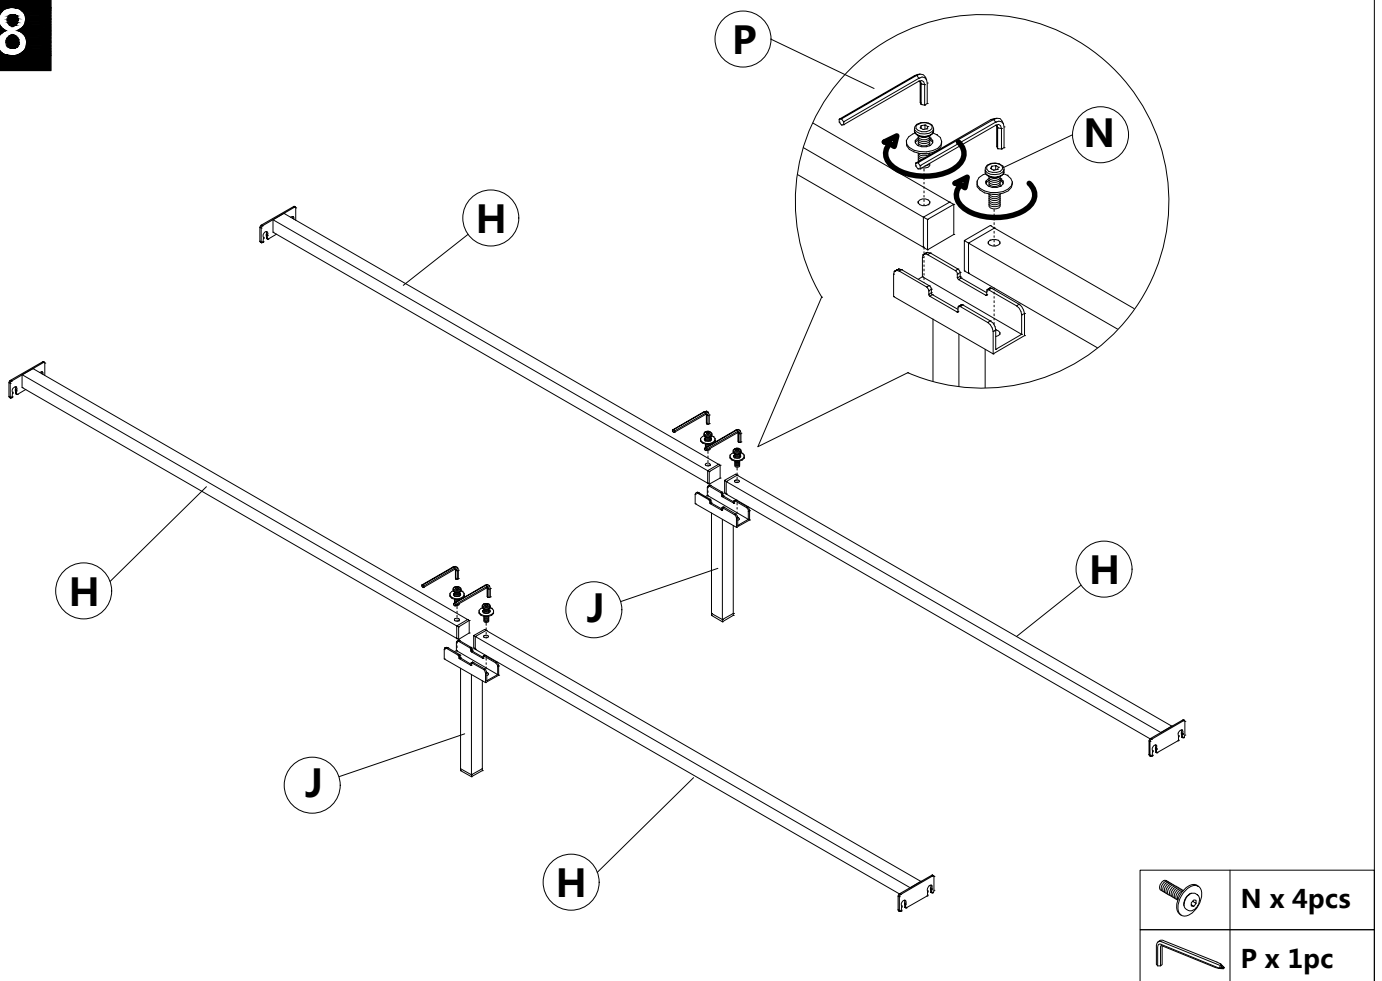


9

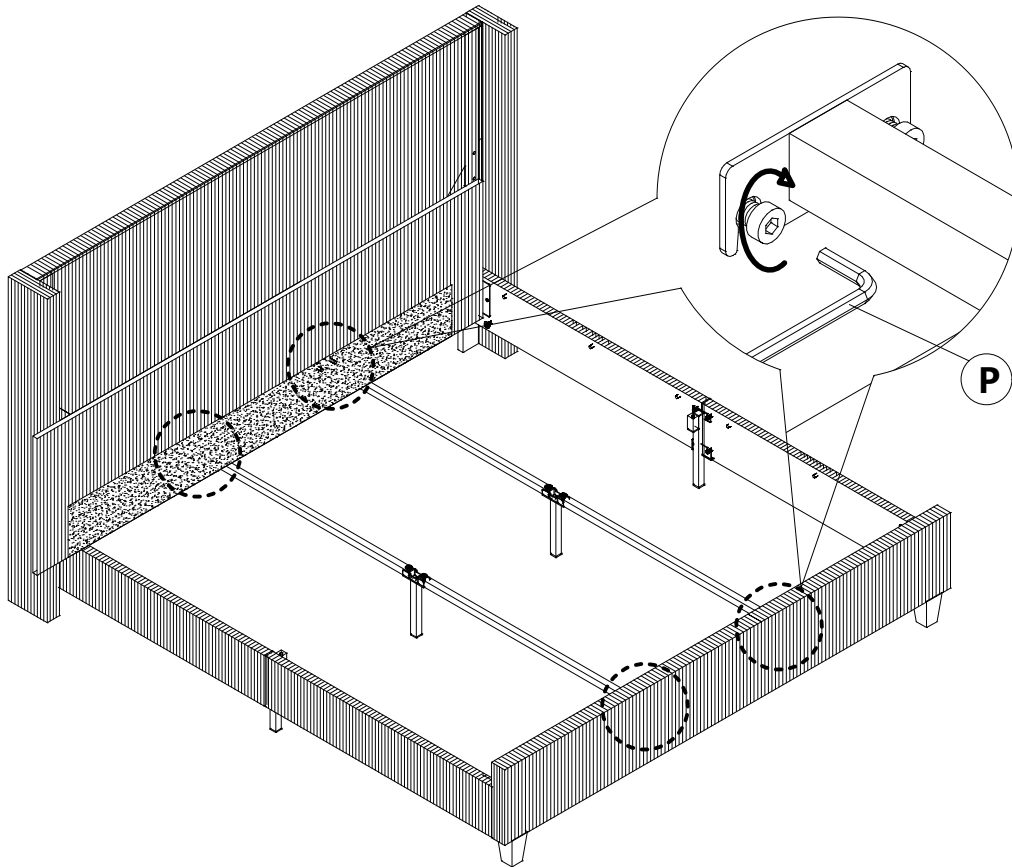

Loosen the screw of the middle of footboard, hanging the bracket and tight the innerscrew.




 P x 1pc

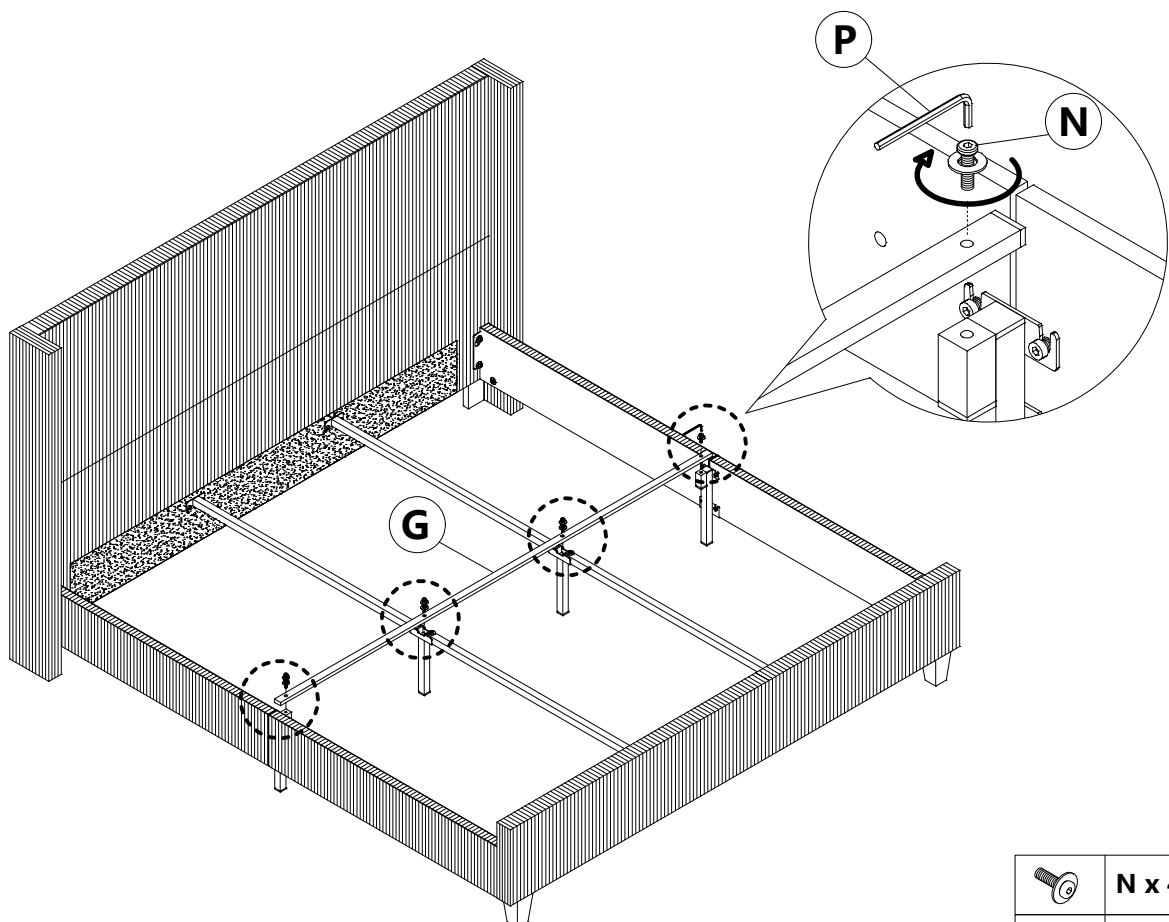

10




 N x 4pcs  
 P x 1pc

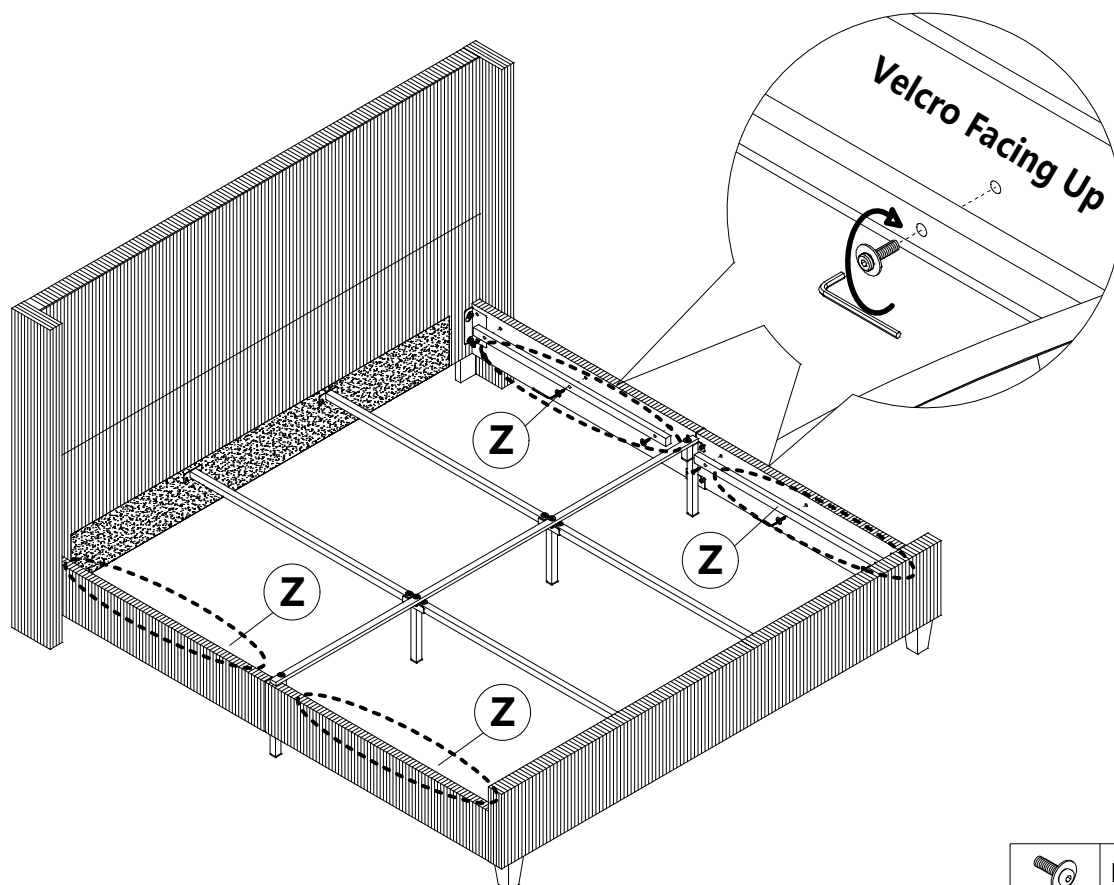11




	N x 12pcs
	P x 1pc

12

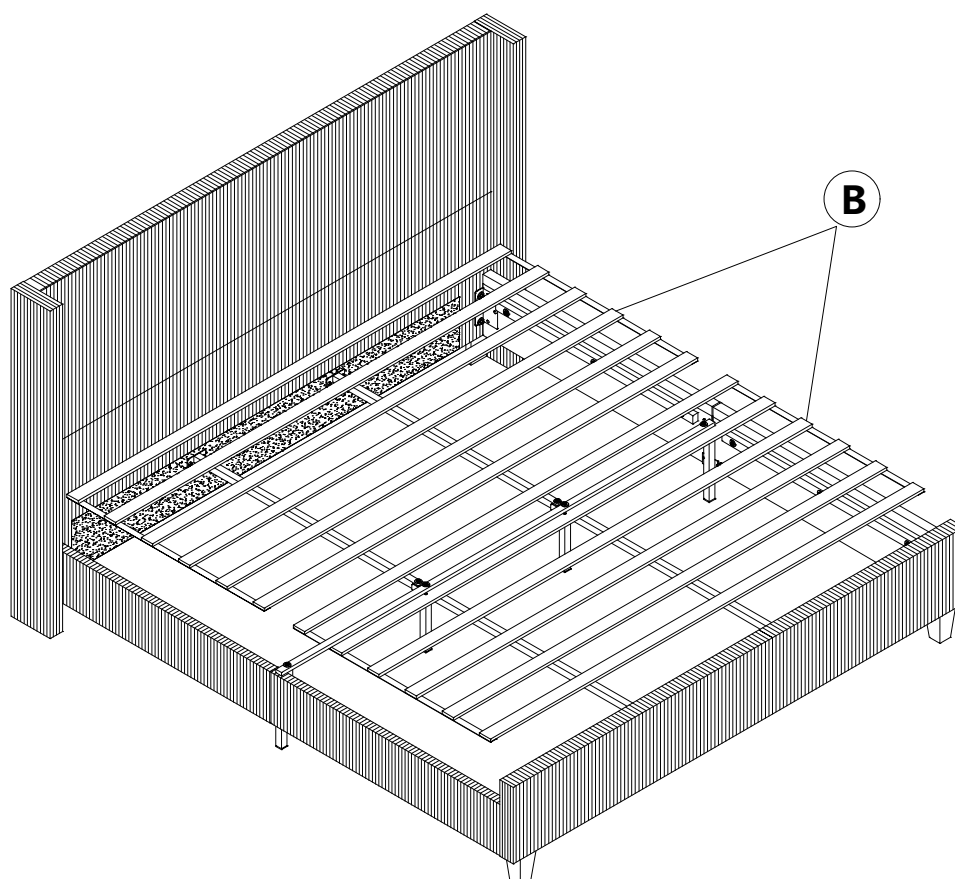

13

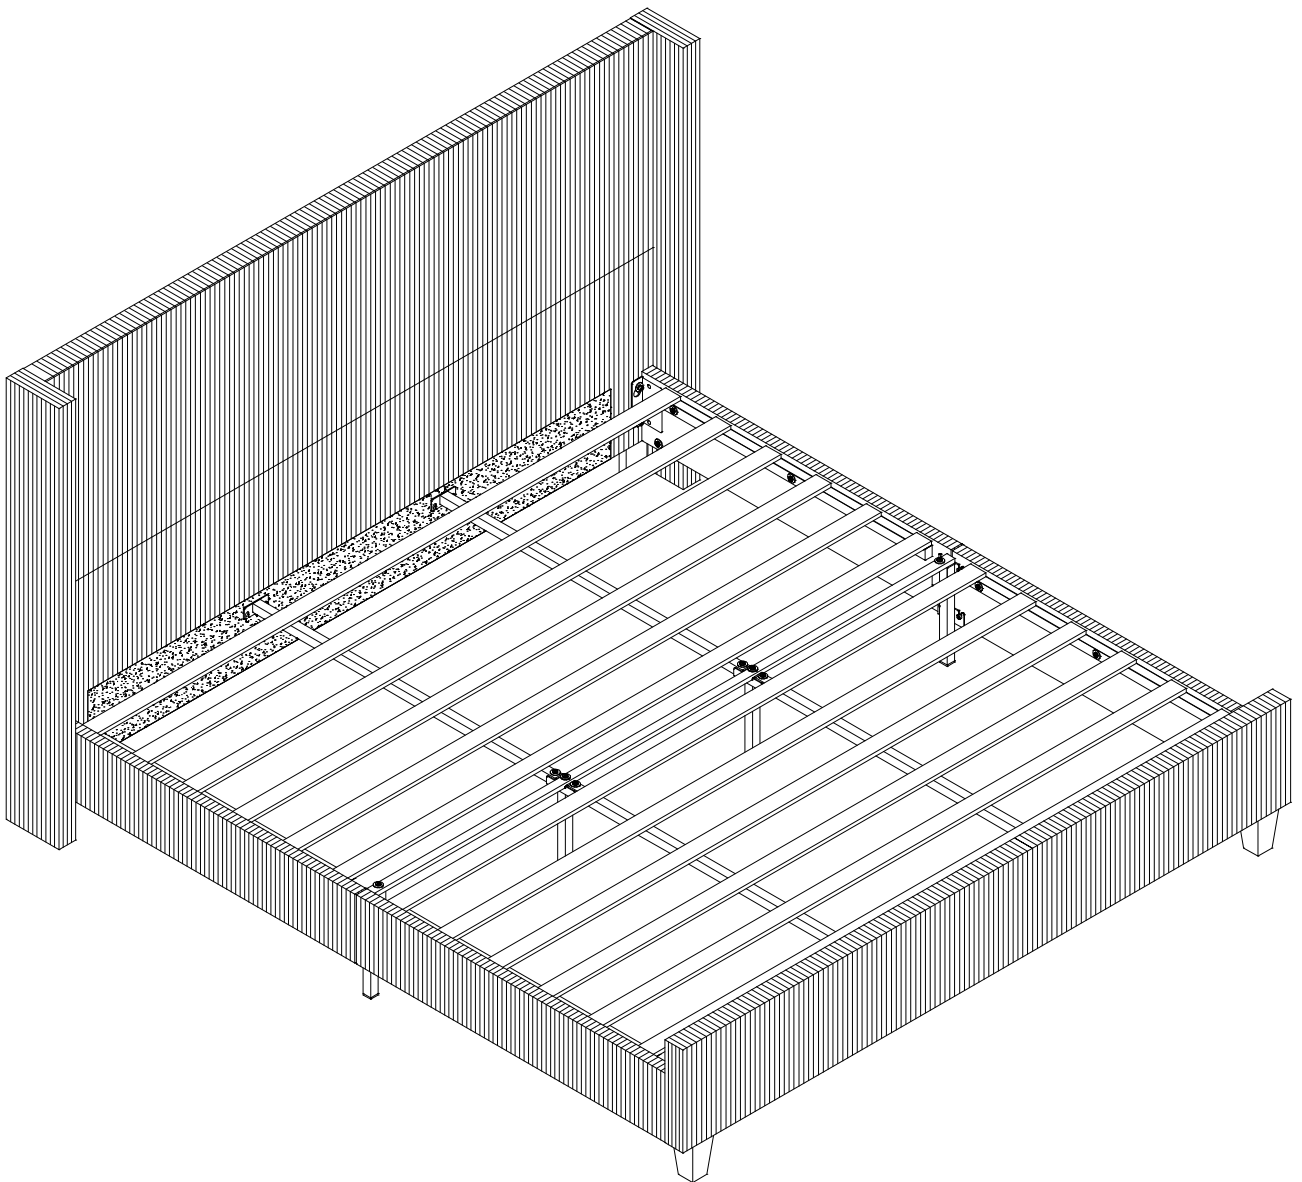

Installation Complete