


ASSEMBLY INSTRUCTIONS

V-CB25-1292-30

PF021

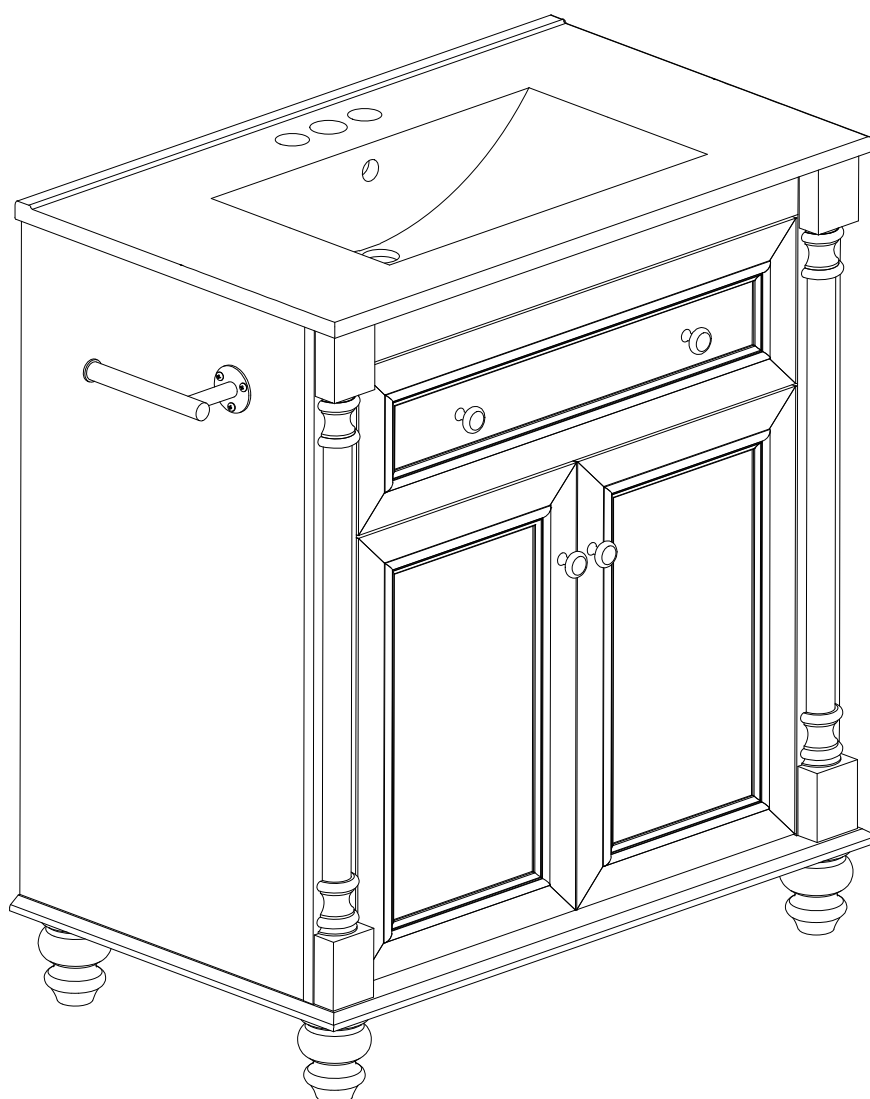




WARNING !

MAXIMUM LOAD
220 lb/ 100kg




Estimated Time for Assembly

60 mins

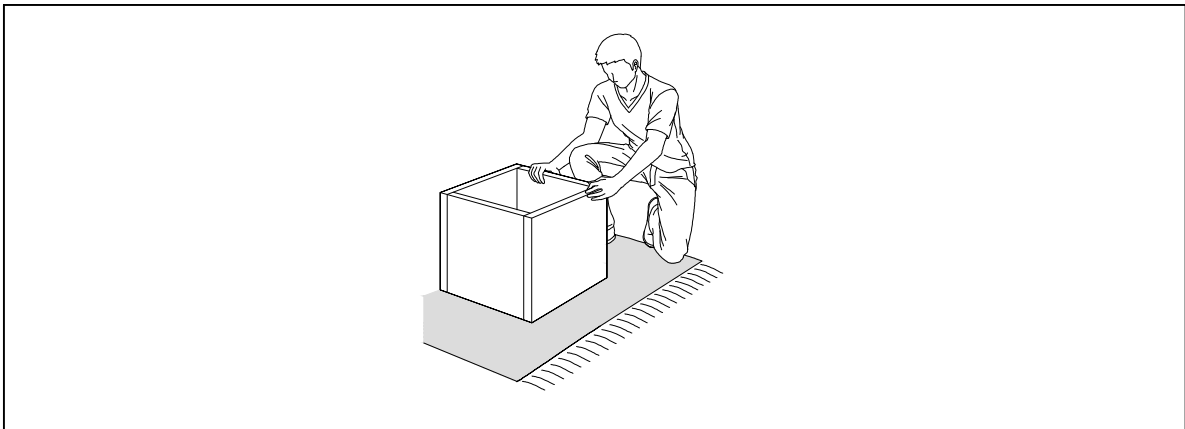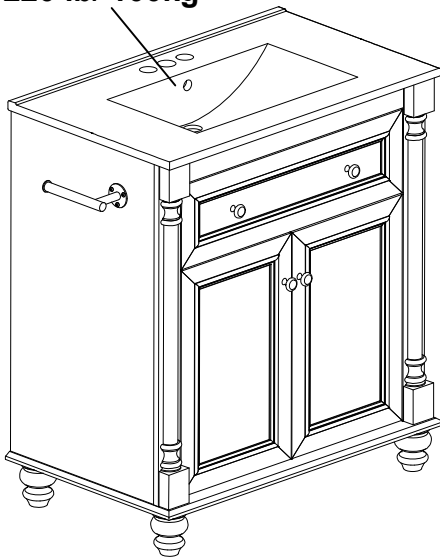

Assembly the furniture on empty carton, carpet, or rug to prevent scratches or damage.

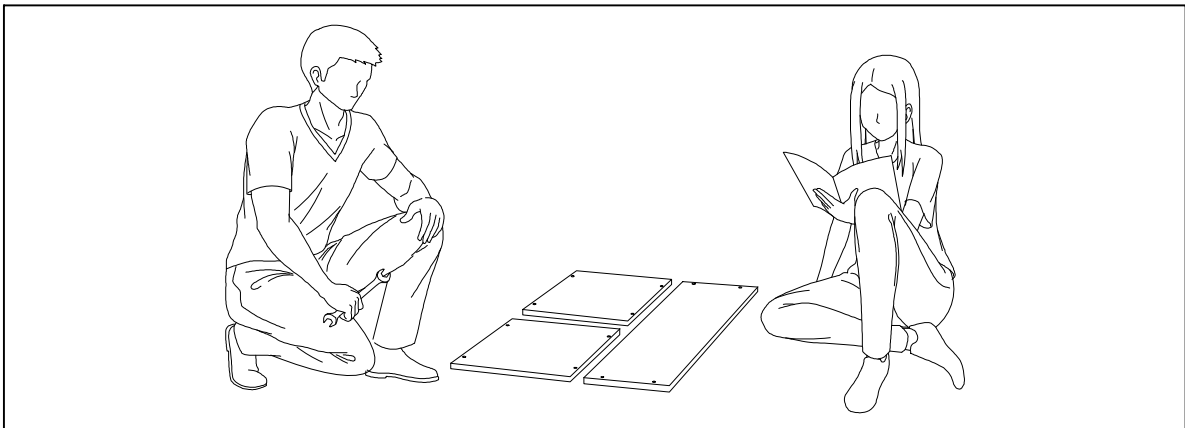


This furniture requires 2 people to assembly.

Make sure no parts are missing or damaged before assembly.

PACKAGE CONTENT


Board Identification

Not actual size

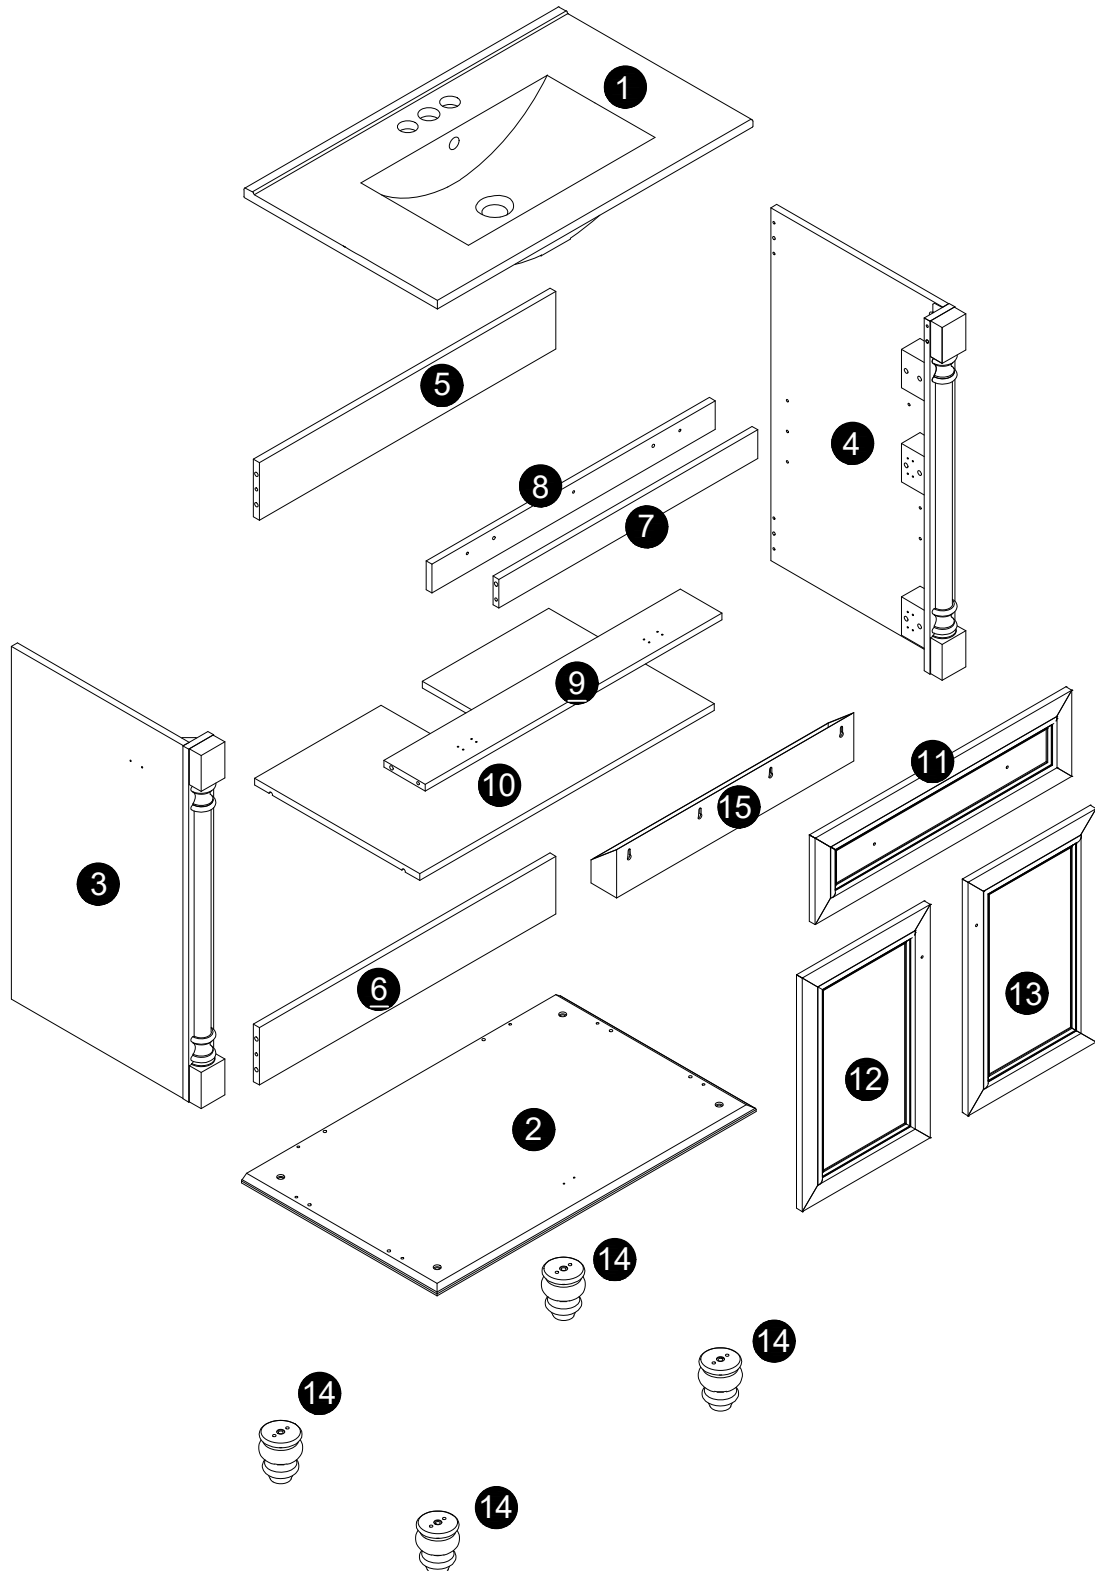


BOARD IDENTIFICATION


Not actual size

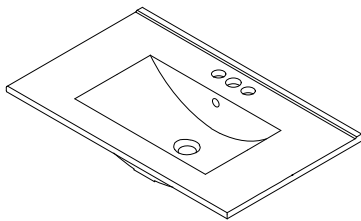


① x1

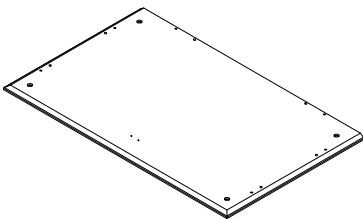


② x1

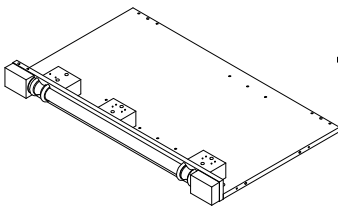


③ x1

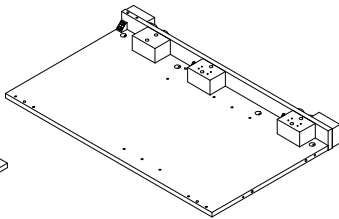


④ x1

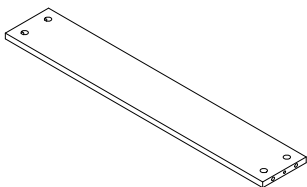


⑤ x1

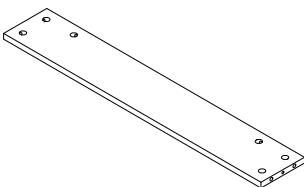


⑥ x1

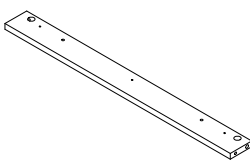


⑦ x1

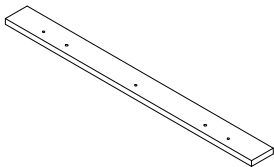


⑧ x1

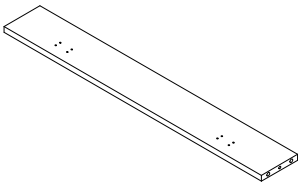


⑨ x1

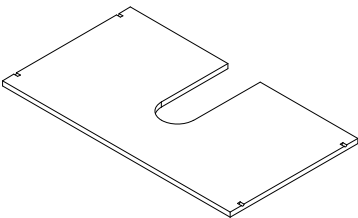


⑩ x1

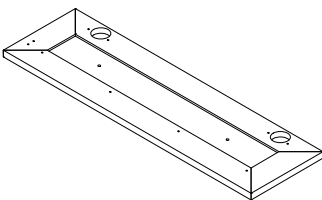


⑪ x1

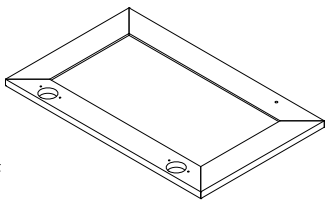

⑫ x1























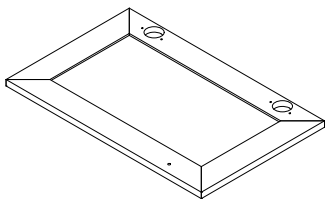


⑬ x1

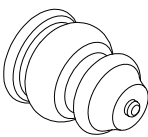





⑭ x4

HARDWARE LIST

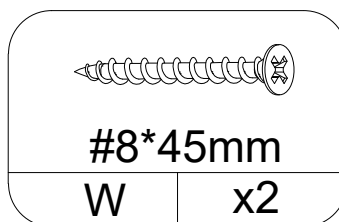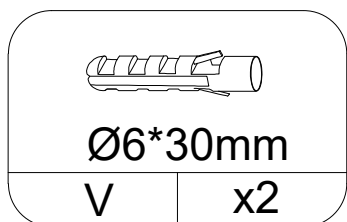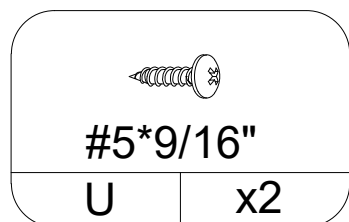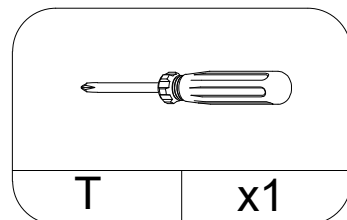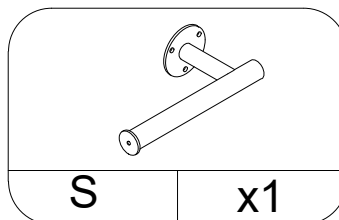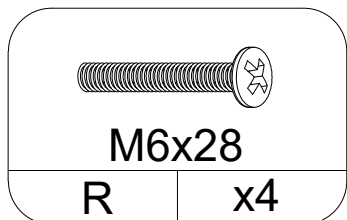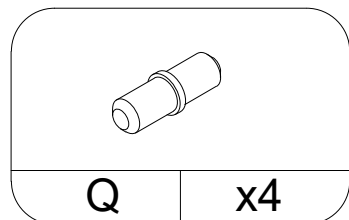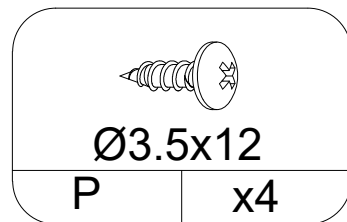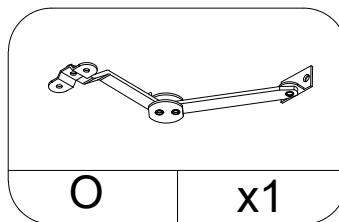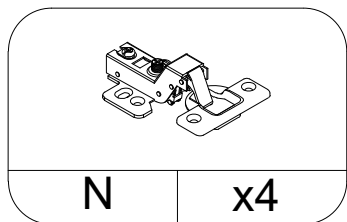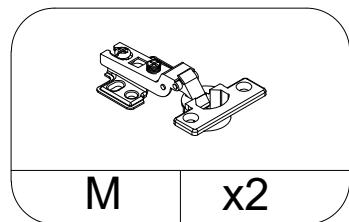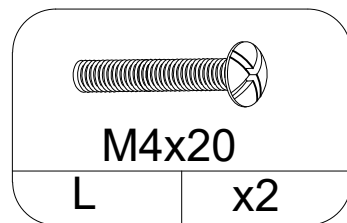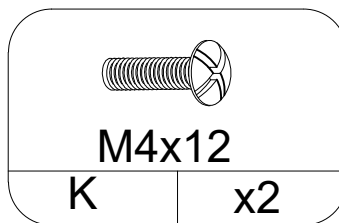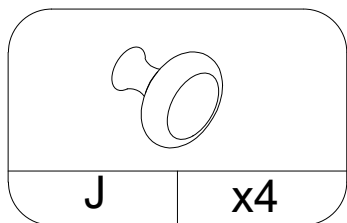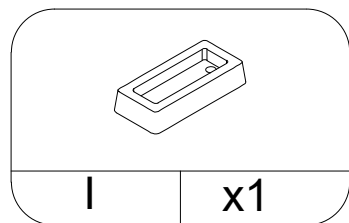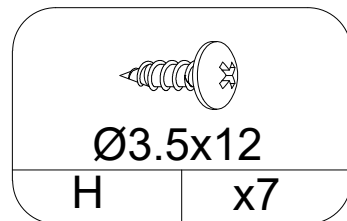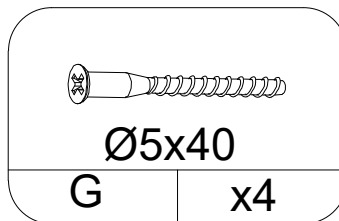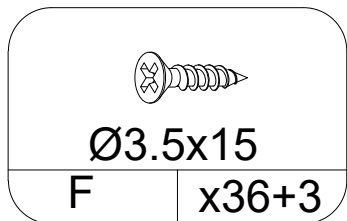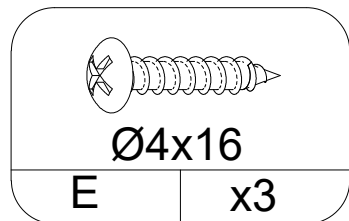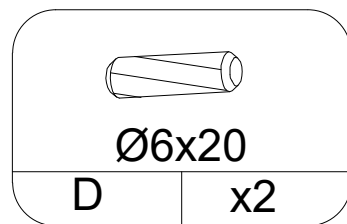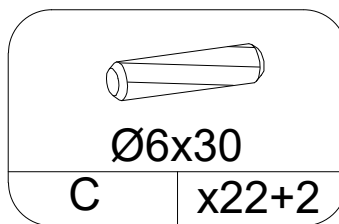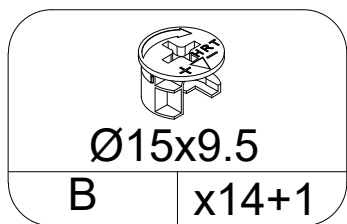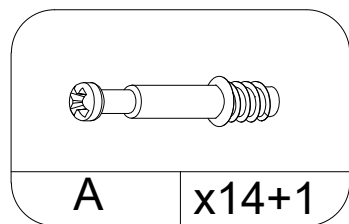



Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

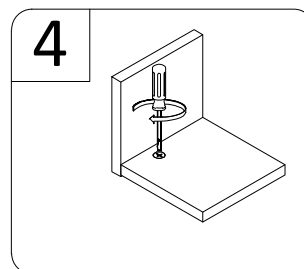
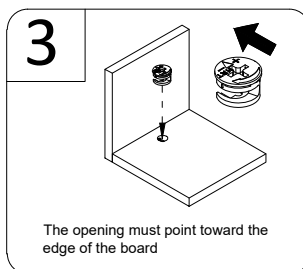
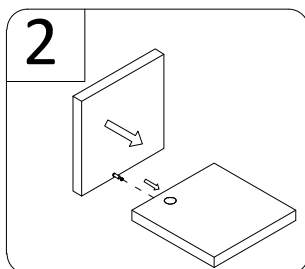
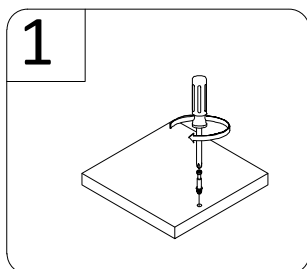


STEP 1

PF021

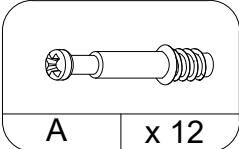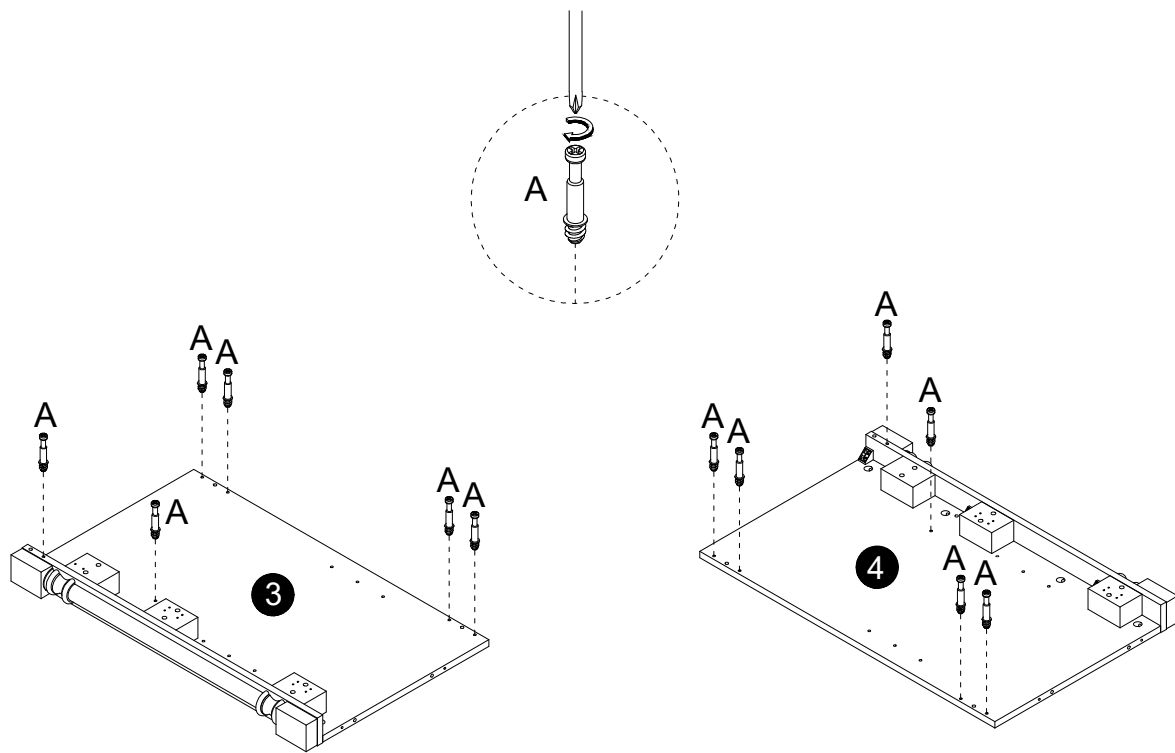


STEP 2

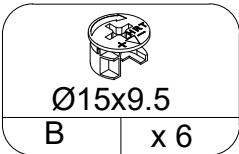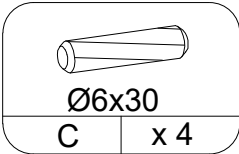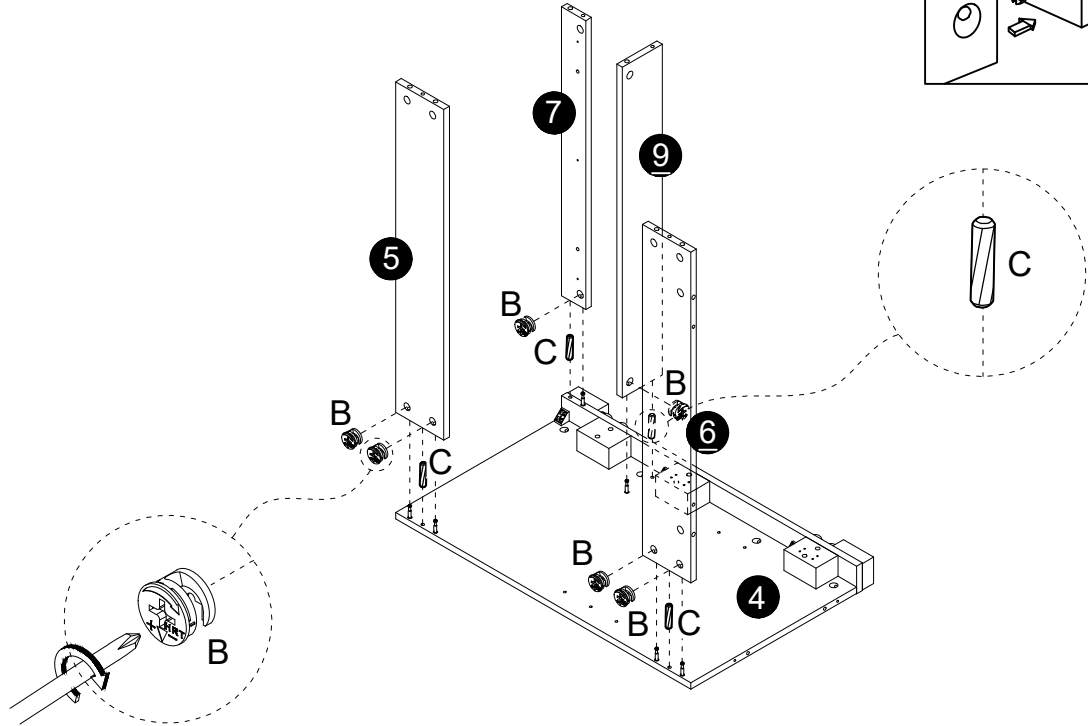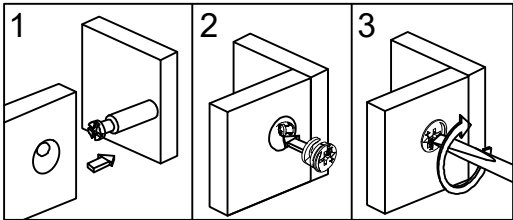


STEP 3

PF021

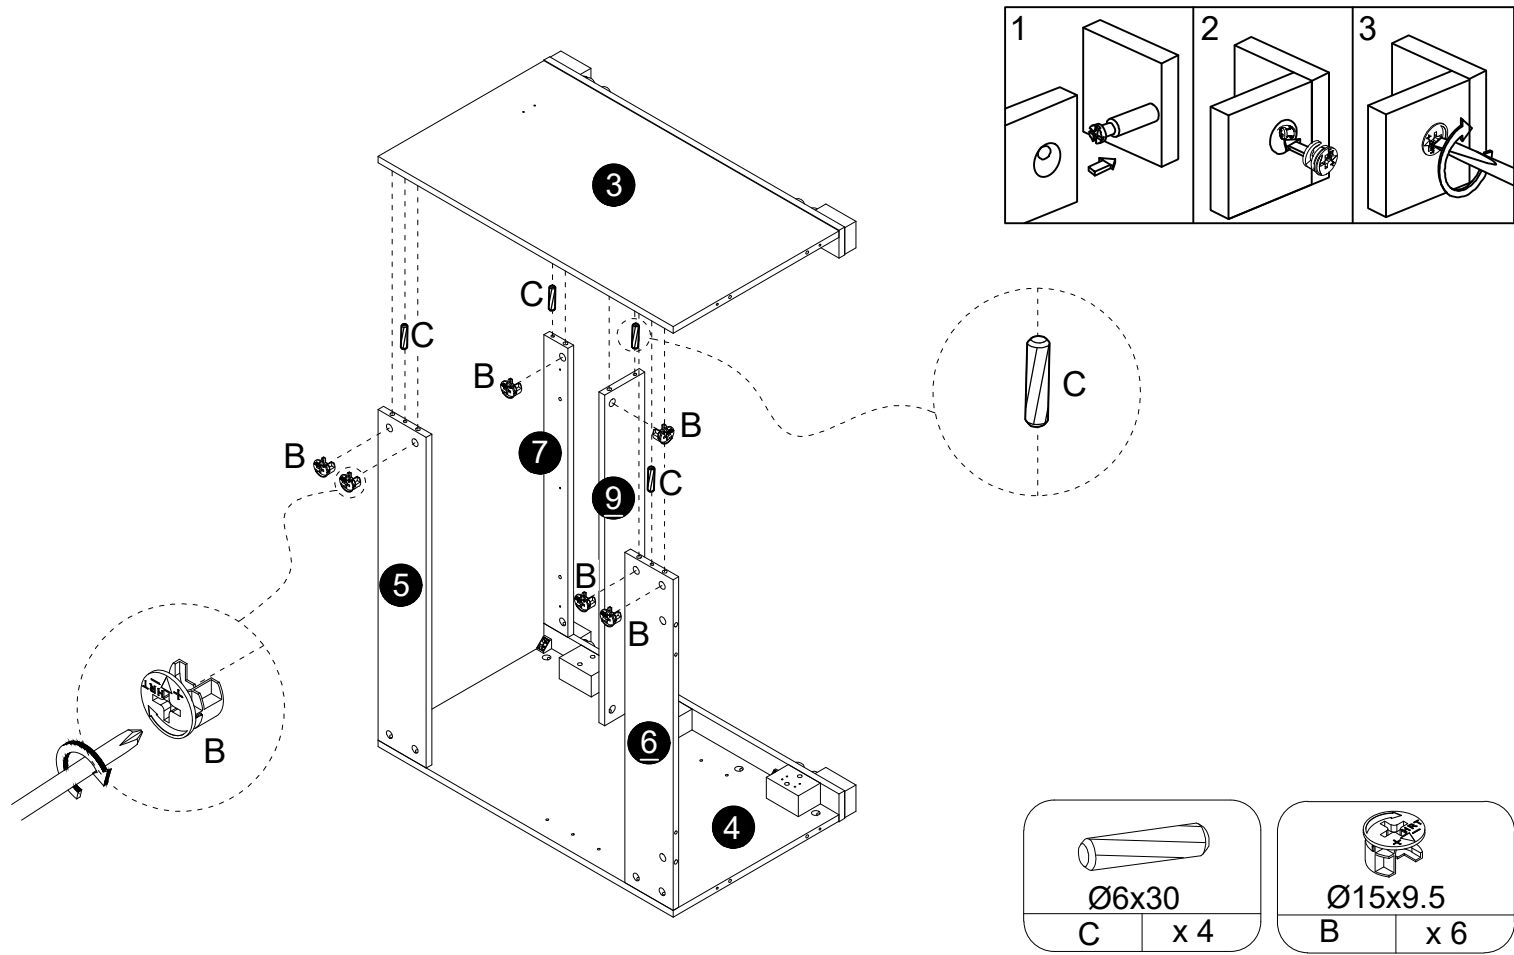


STEP 4

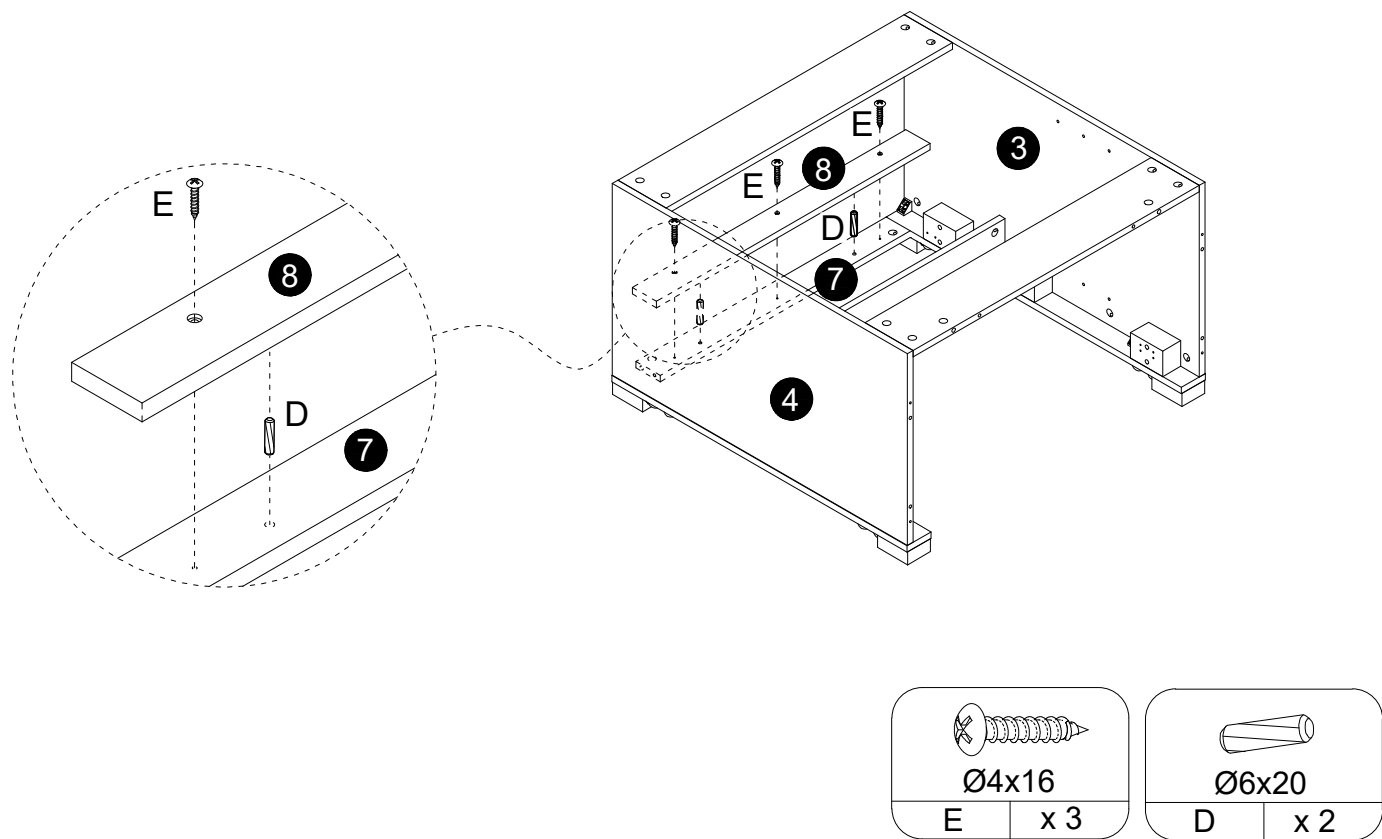


STEP 5

PF021

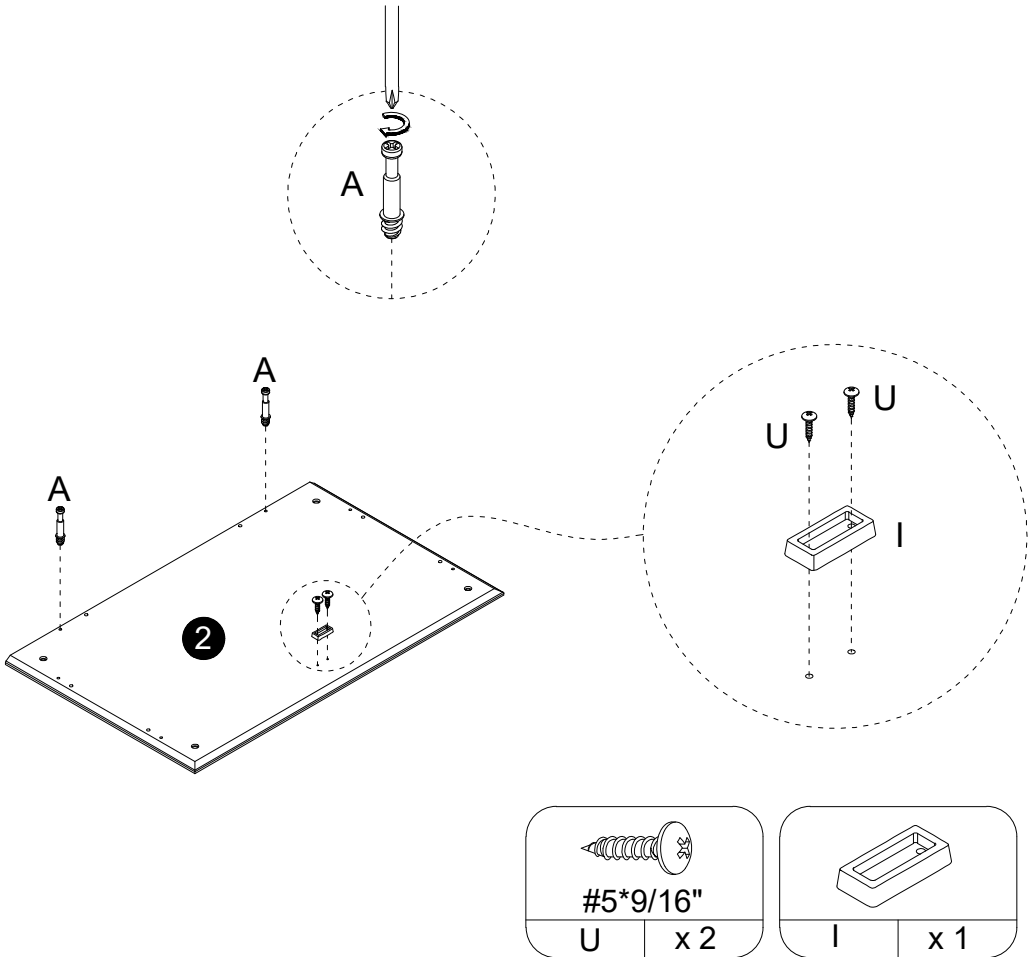


STEP 6



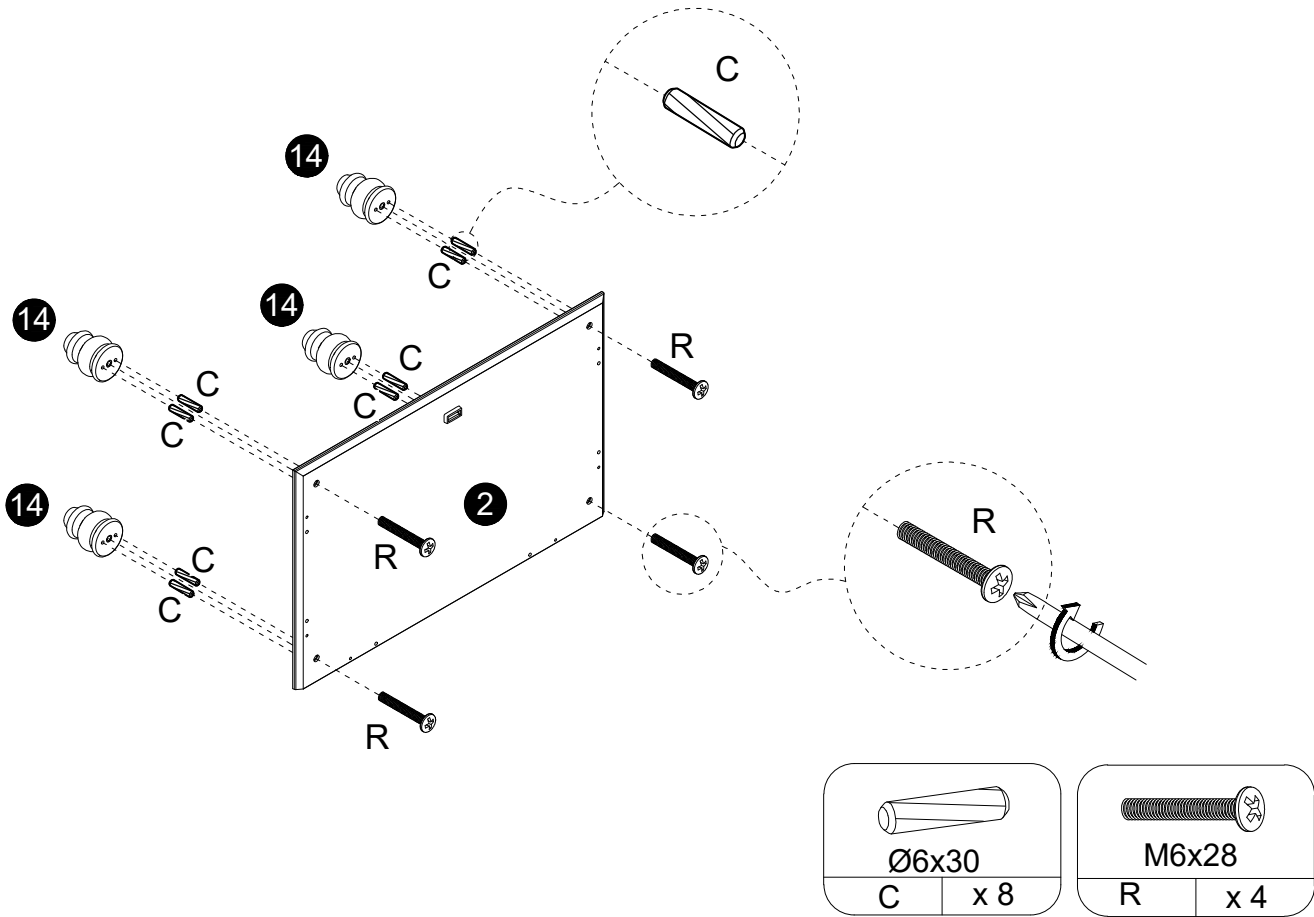


STEP 7

PF021

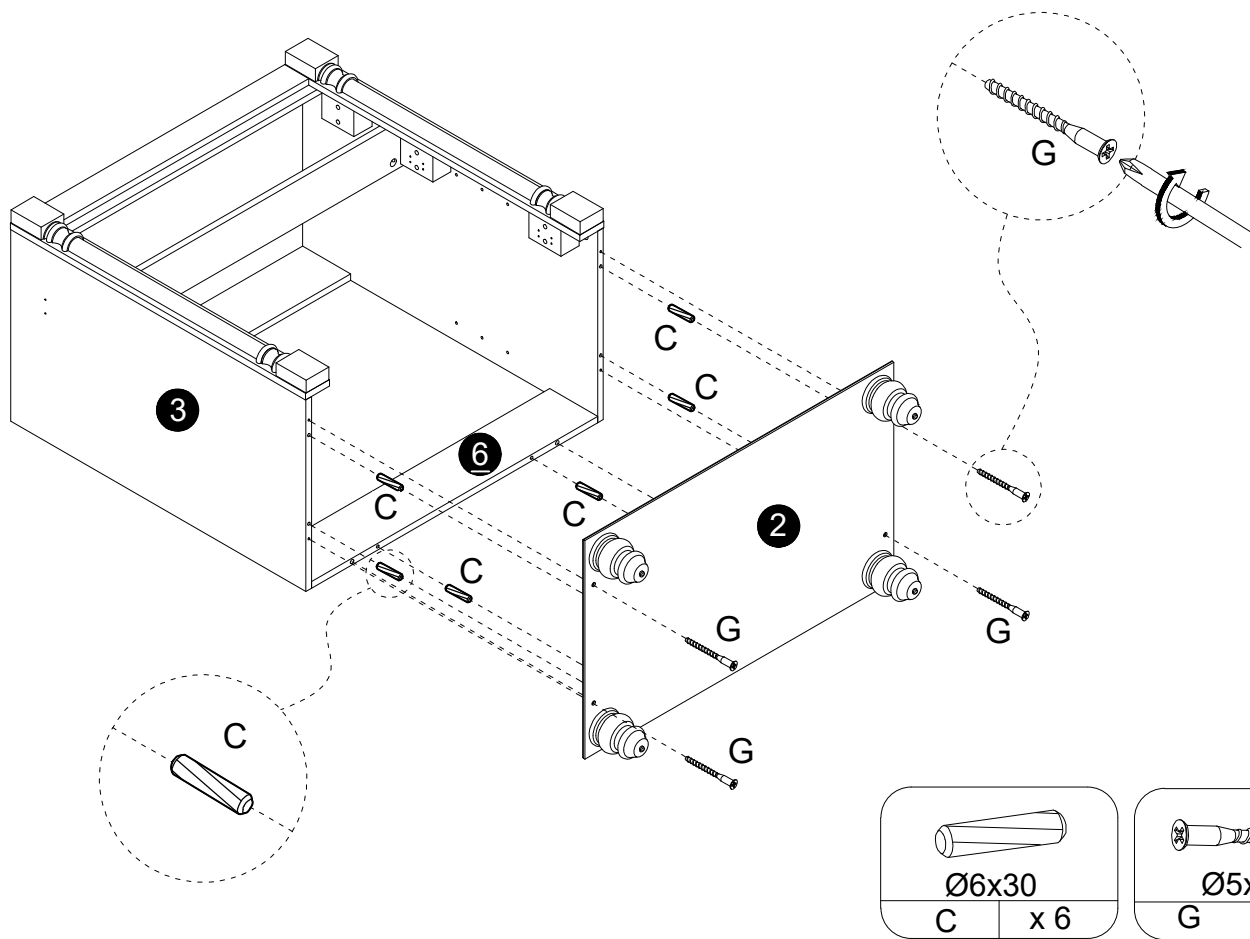


STEP 8

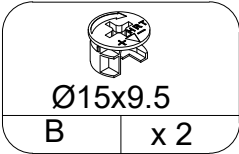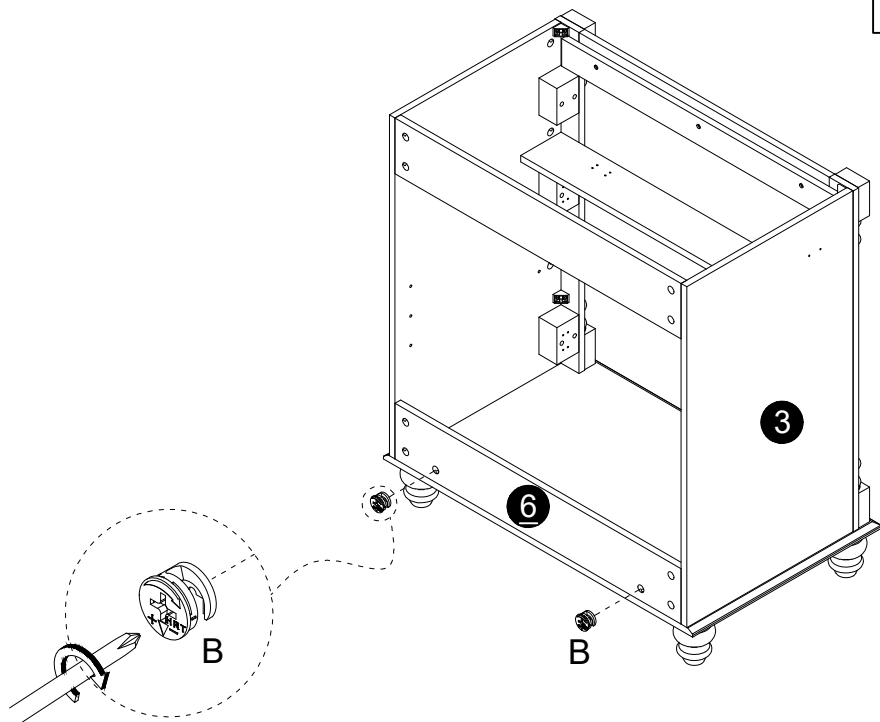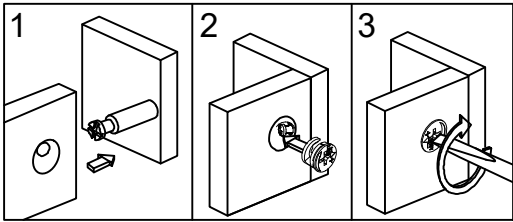


STEP 9


PF021

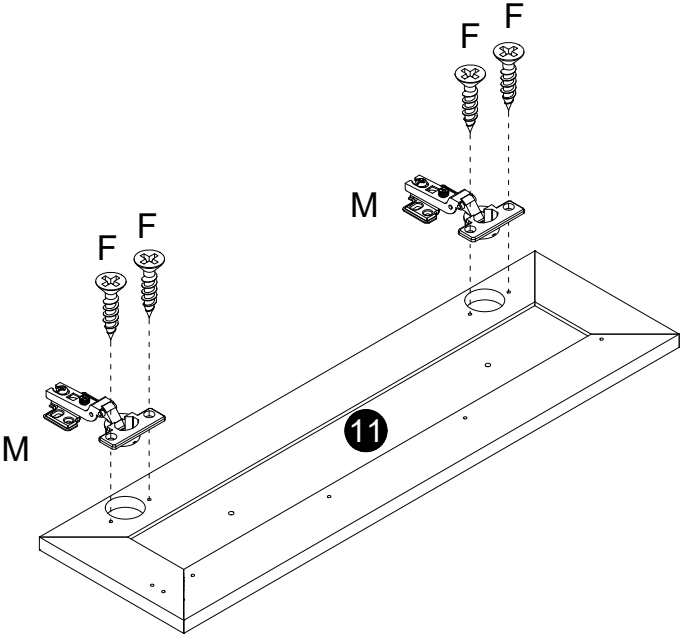

			
M		Ø3.5x15	
x 2		x 4	



STEP 10

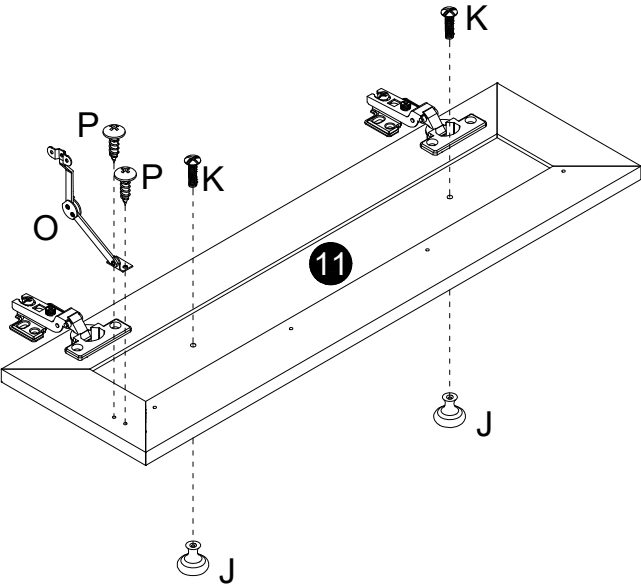



							
M4x12						Ø3.5x12	
K		J		O		P	
x 2		x 2		x 1		x 2	

STEP 11

PF021




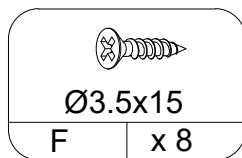
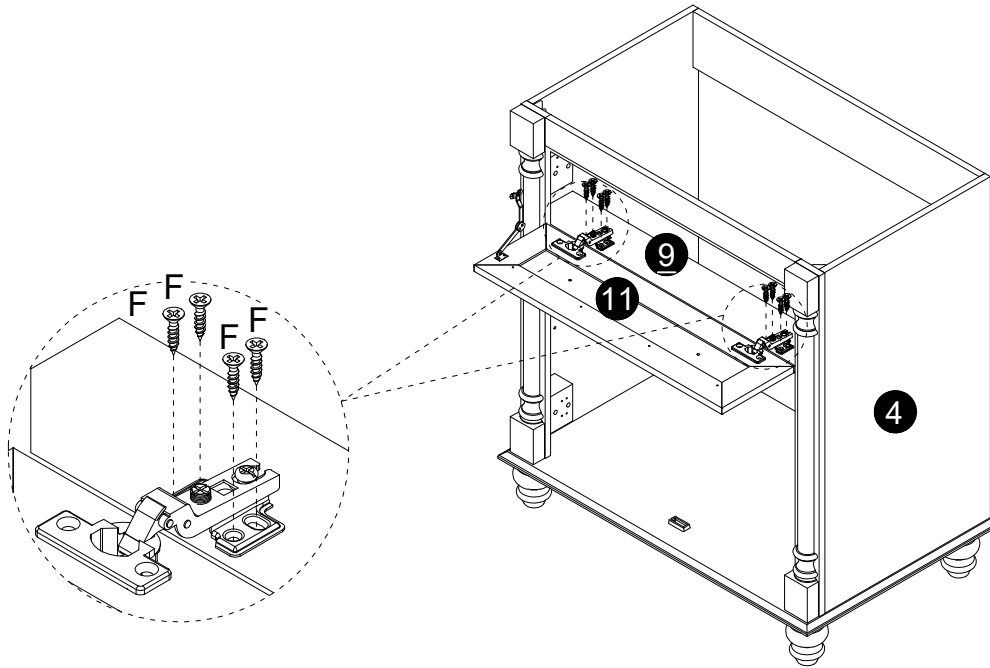


STEP 12

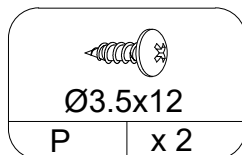
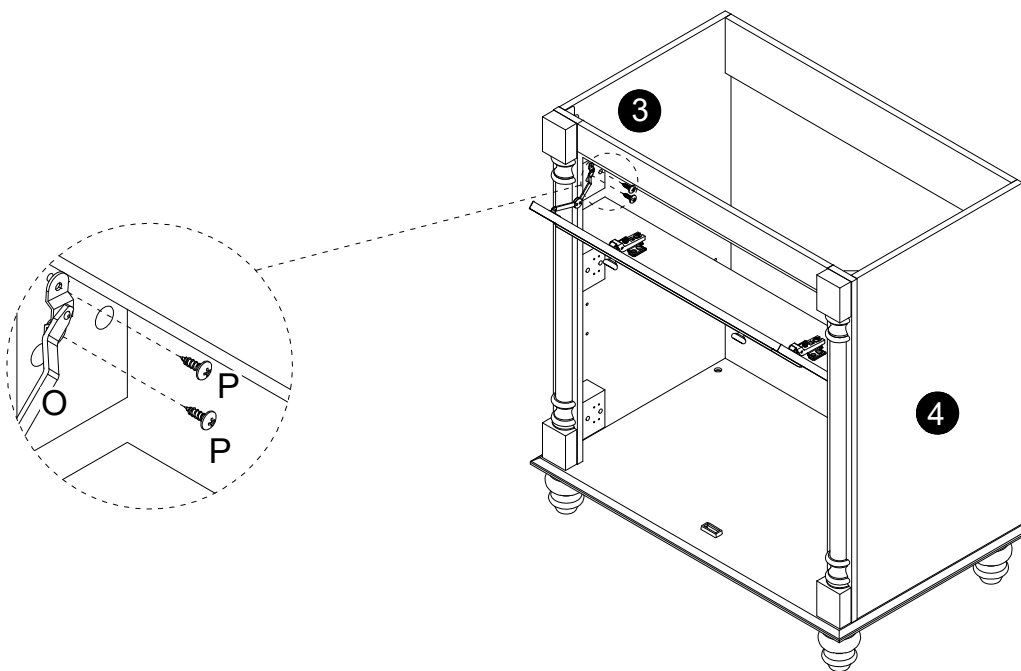


STEP 13

PF021

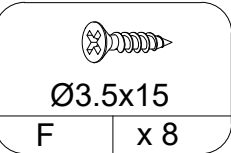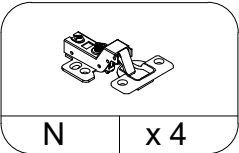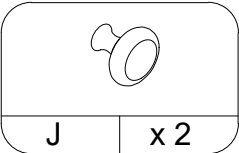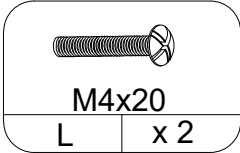
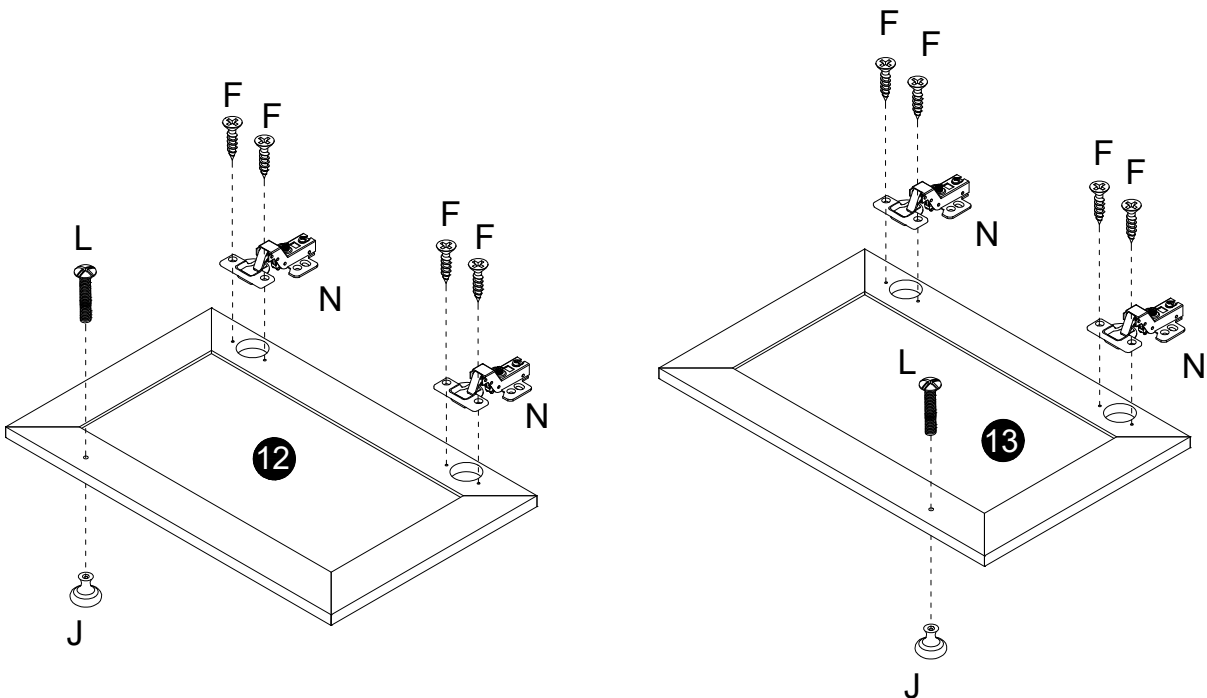


STEP 14


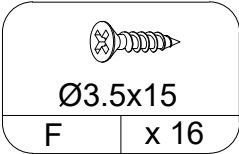
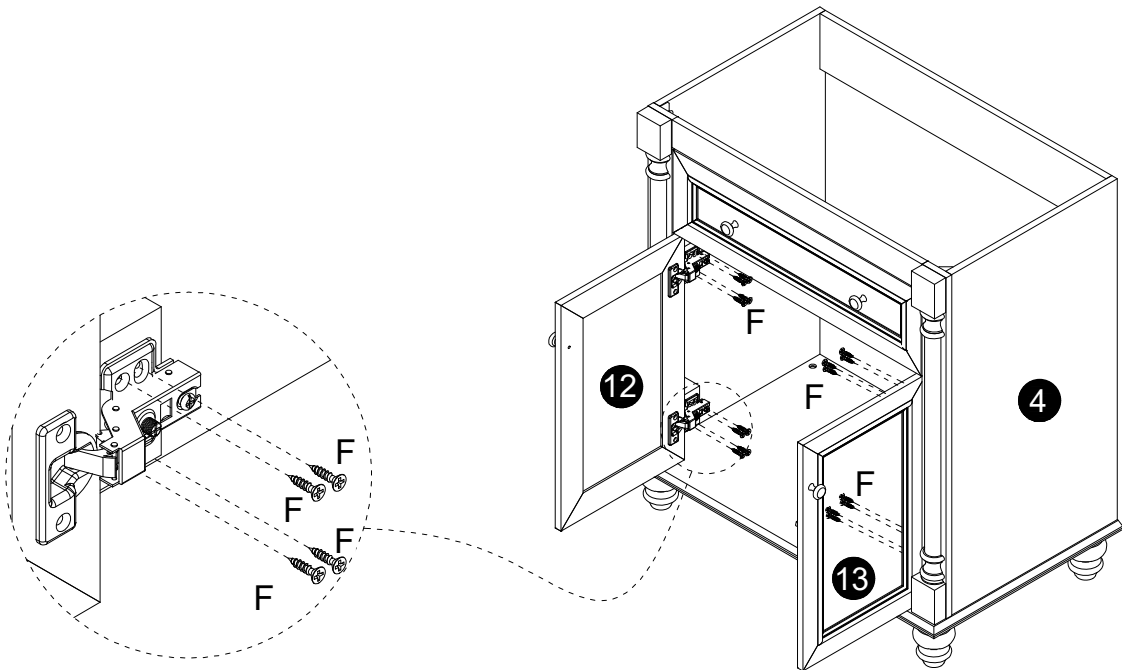


STEP 15

PF021

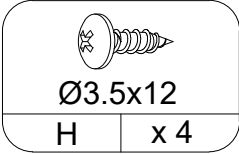
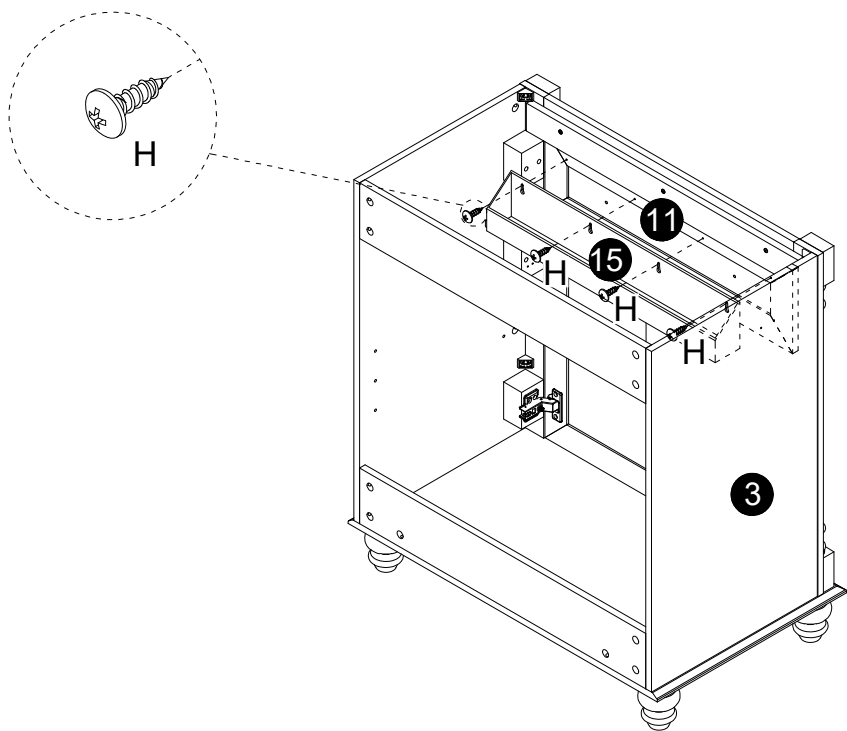


STEP 16

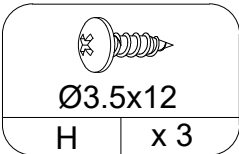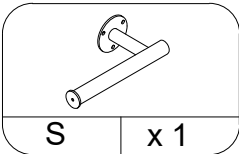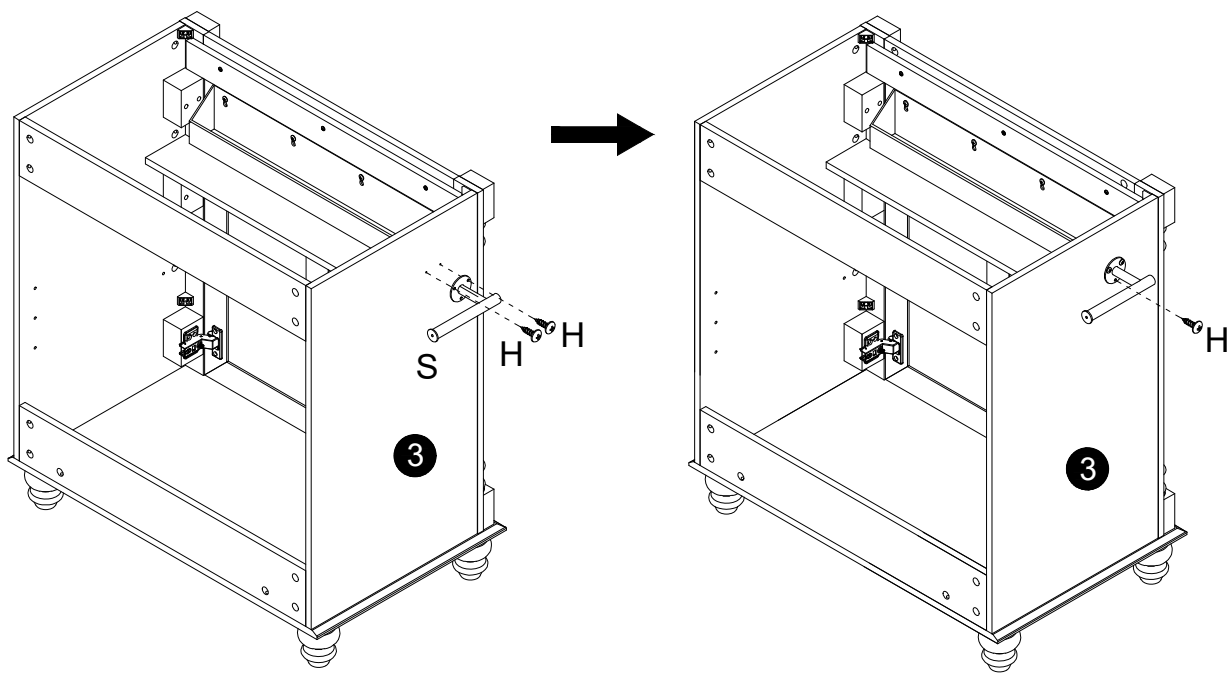


STEP 17

PF021

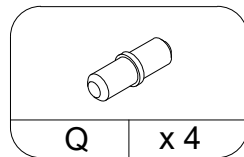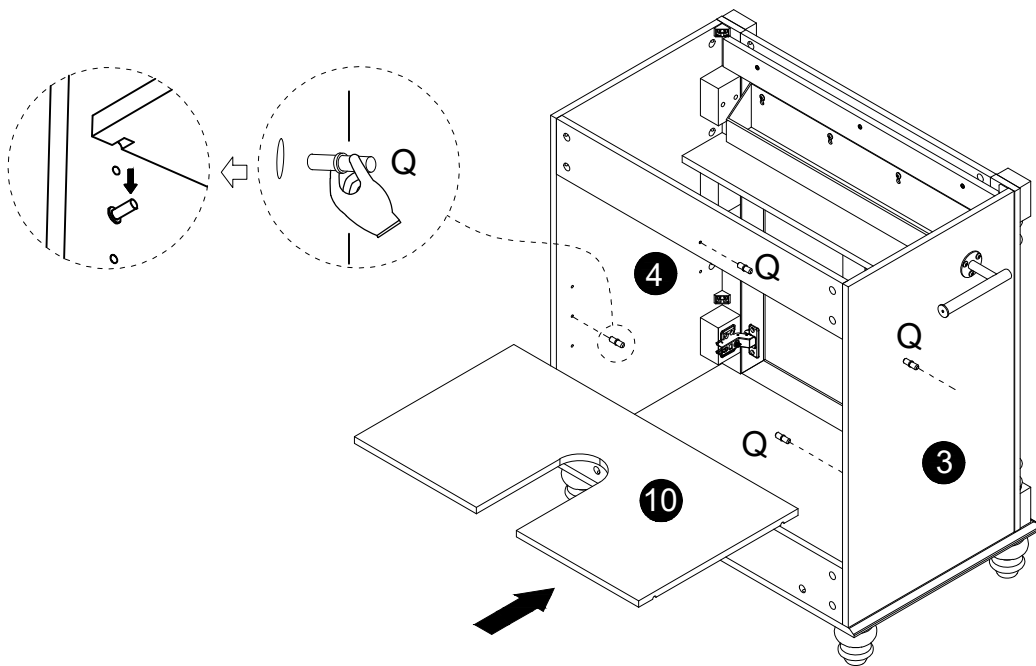

STEP 18



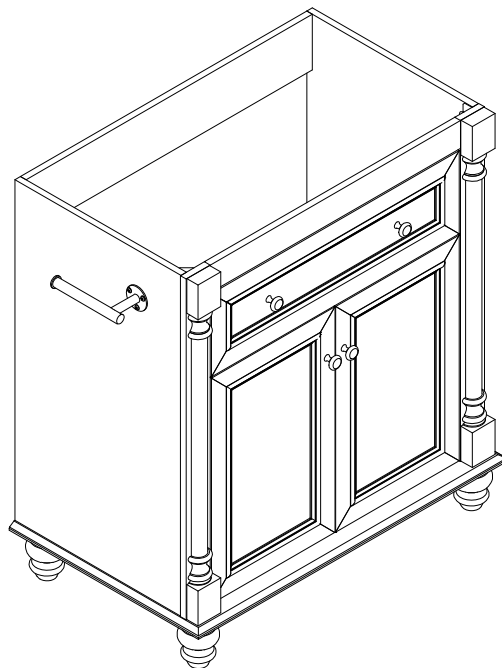


STEP 19

PF021

- *Note:** Clean area where the vanity will be permanently located prior to beginning installation, ensuring the vanity will not interfere with any water supply and drain lines once mounted.
- * With the help of another adult, carefully place vanity against the wall in its final location. From inside vanity, drill hole through vanity mounting area and into wall studs.
- Using mounting hardware (**V**) appropriate for your installation site, secure vanity to wall studs.

*** WARNING**
Vanity **MUST** be secured to wall

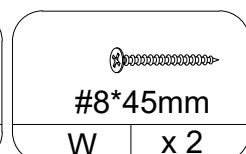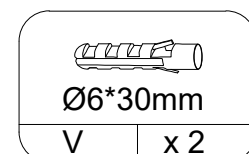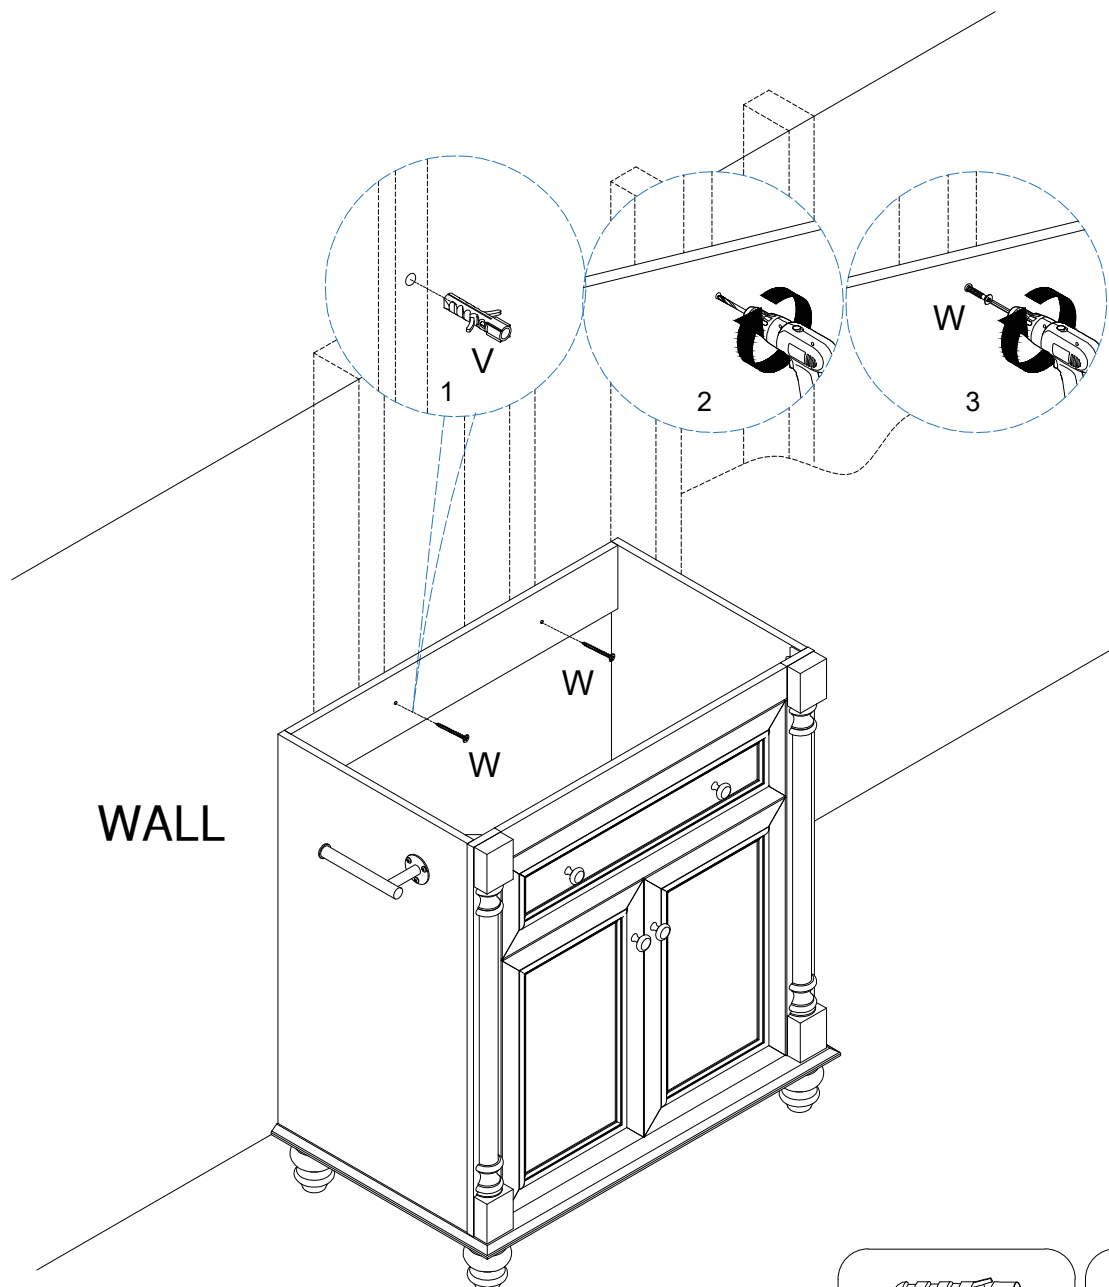


STEP 20

PF021

Note: At this stage it may be easier to install the faucet and drain kit (not included) to top (1) per the manufacturer's instructions.

* Apply stain free silicone or latex silicone caulk (not included) to the top edge of vanity. With the help of another adult, gently lower top (1) onto the vanity. Wipe away any excess caulk with a soft cloth, and wait approximately 24 hours for it to dry.

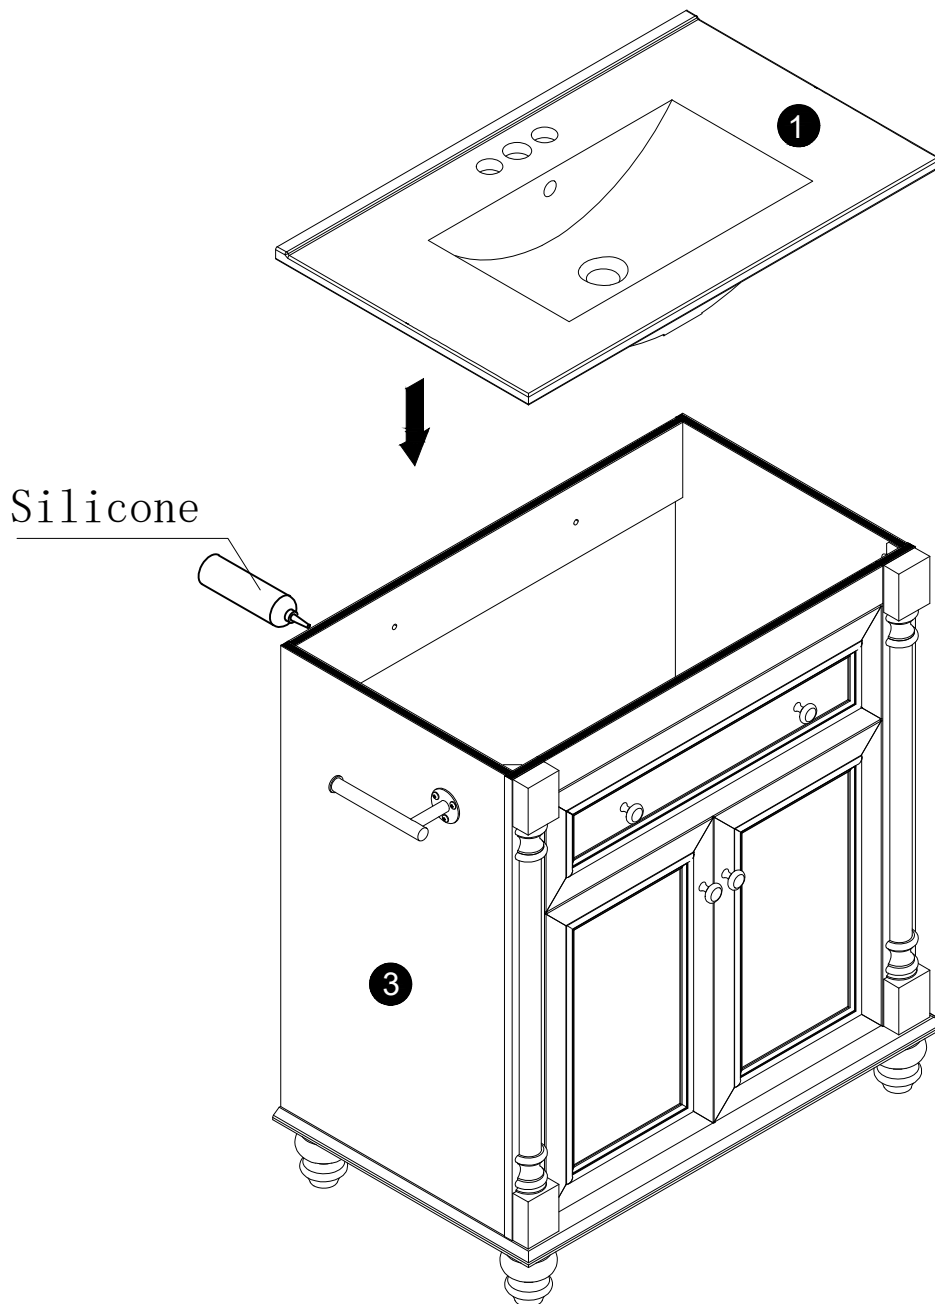

FURNITURE CARE AND MAINTENANCE

Medium - Density Fiberboard and Particle board

Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years of service, please refer to this care and maintenance guide.



MAINTENANCE

- Tighten all bolts and screws again within the first 2 weeks of assembly
- Check the tightness of all bolts every 2 months, tighten them if necessary



CLEANING

- Clean the surface of the MDF (medium - density fiberboard) or PB (particle board) with a lightly dampened cloth.
- Small amount of mild soap can be used if necessary
- Dry the surface immediately after cleaning.

⚠ DO NOT use bleach or alcohol detergent to clean the surface.

⚠ DO NOT apply wood treatment on parts made with MDF and PB.

Medium - density fiberboard and Particle board will swell and distort when suffer from water damage.

Make sure to dry the furniture immediately after cleaning