


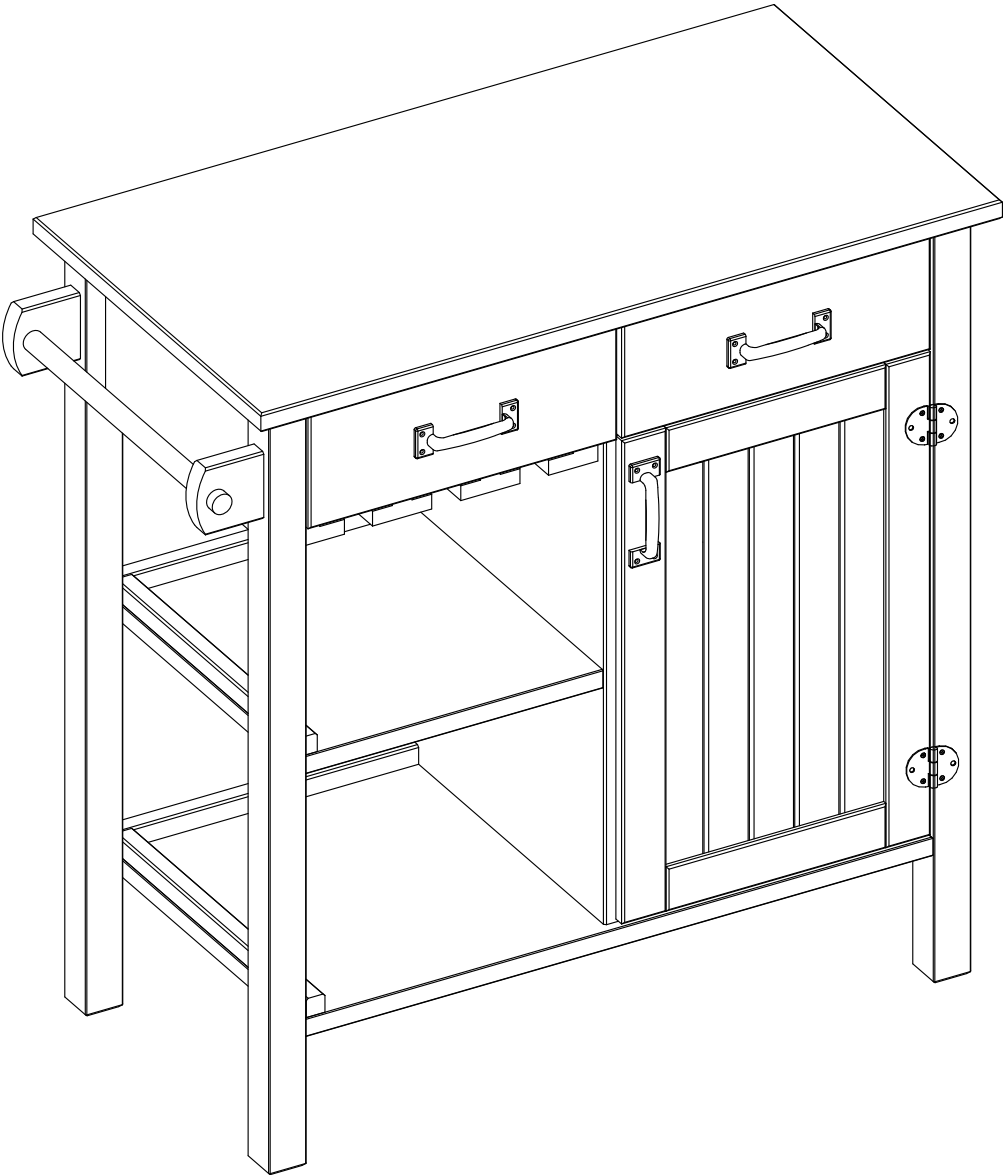
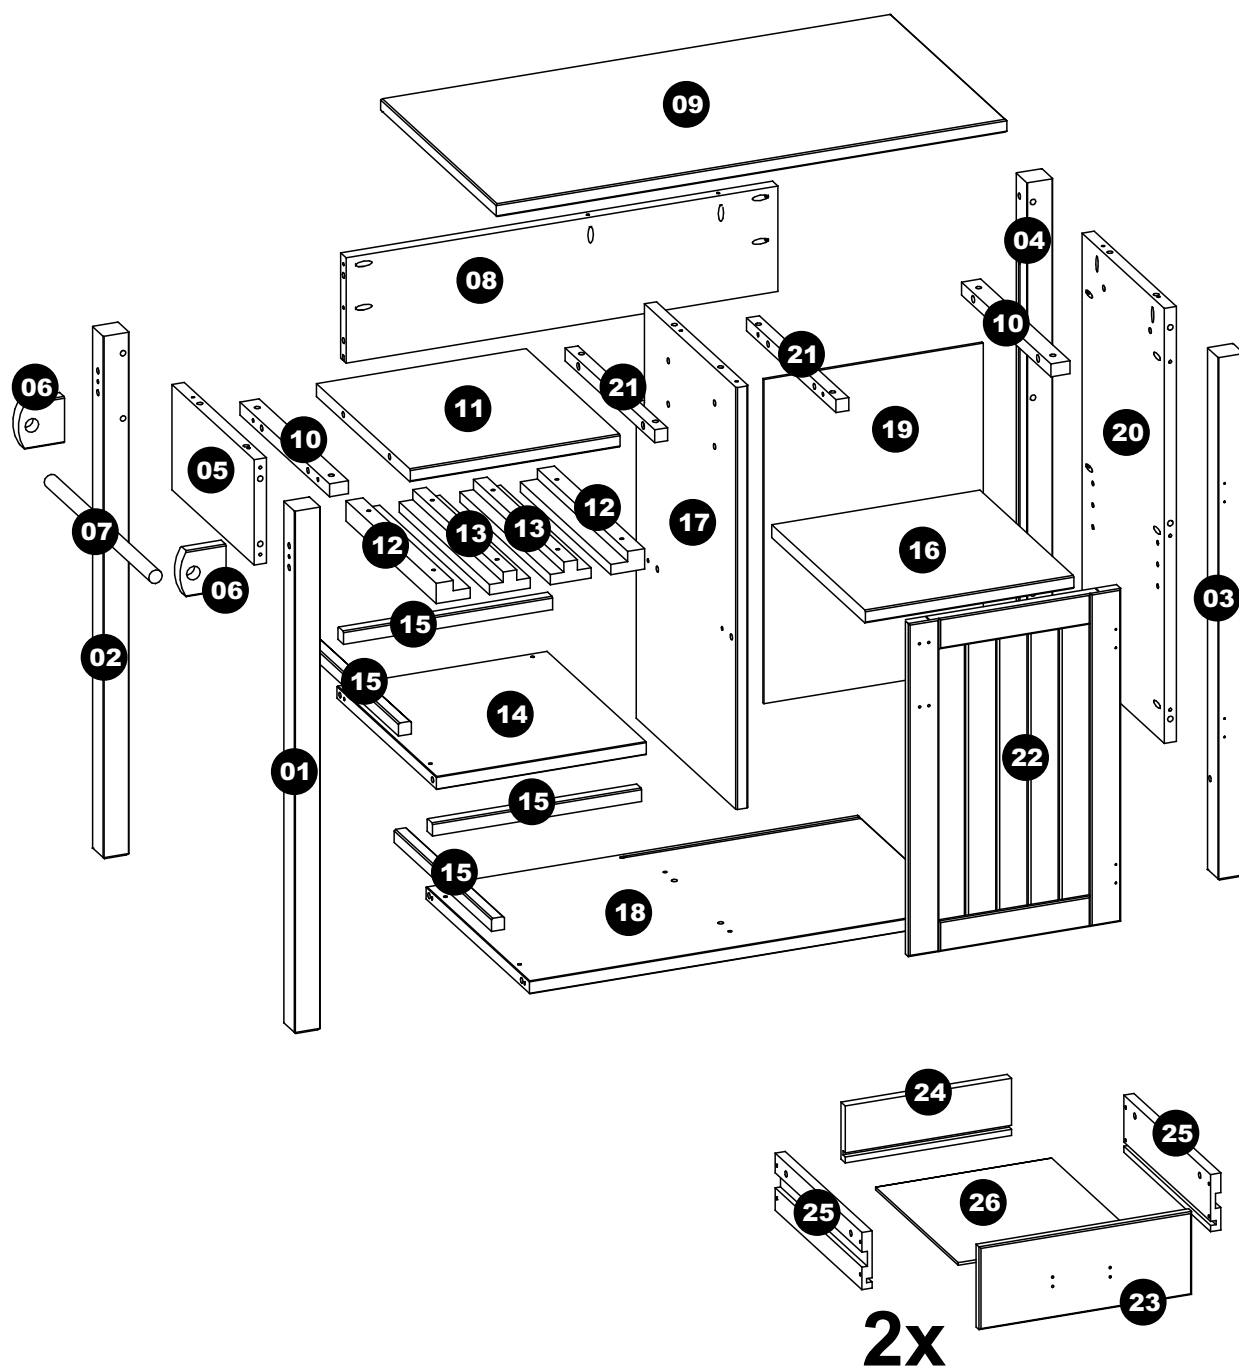



CUPBOARD

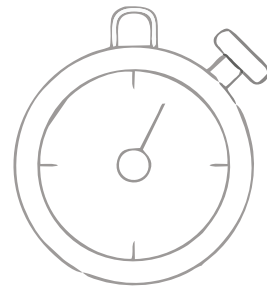


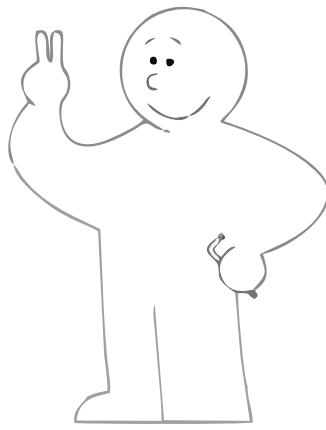


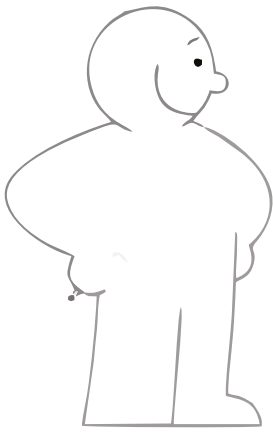


70 Min

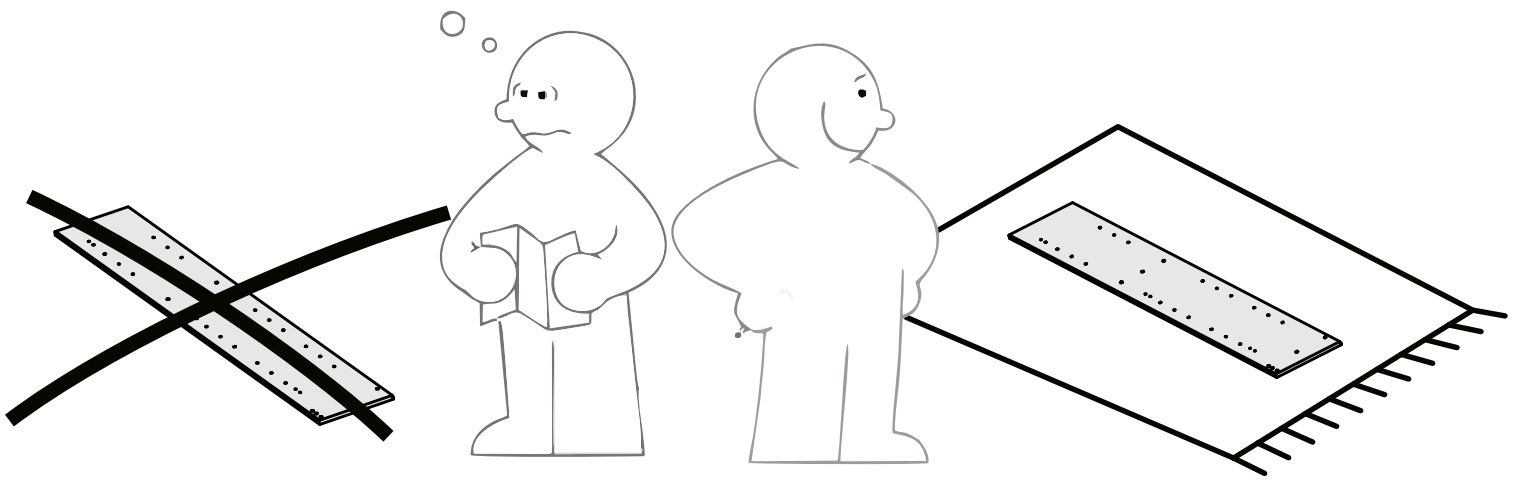

Tools required

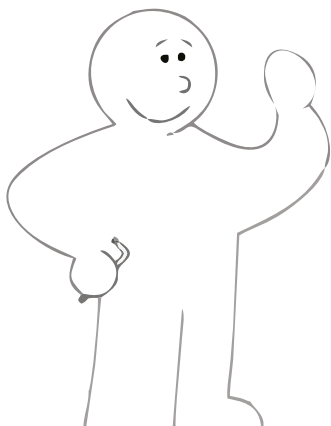


Phillips screwdriver
(medium & large)

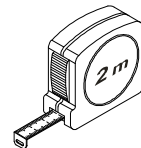









Ruler/tape
measure




Small
hammer












Eye protection
(when using a
hammer or glue)

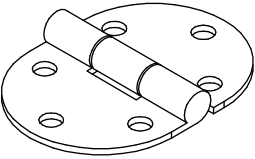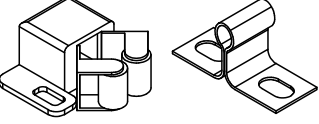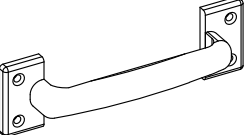A	 8x30mm	50
C	 4,0x35mm	49
E		04
G		02
I	 8x40mm	02
B	 3,5x30mm	24
D	 3,0x16mm	30
F		01
H		01
J		03



Ruler - Use this ruler to help correctly identify the screws






01

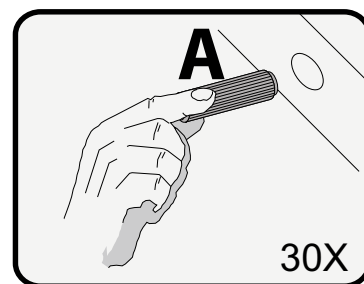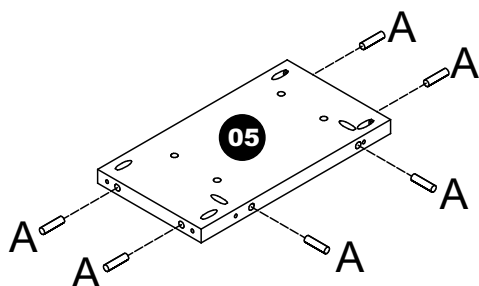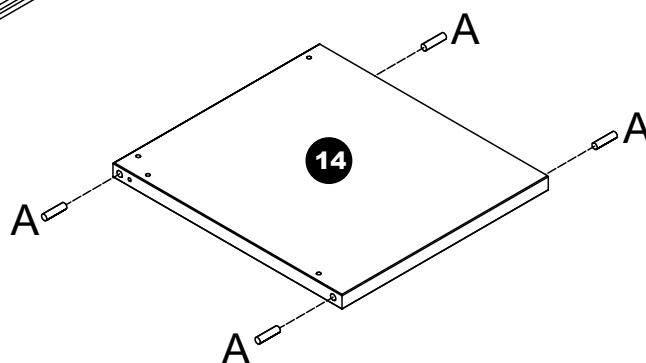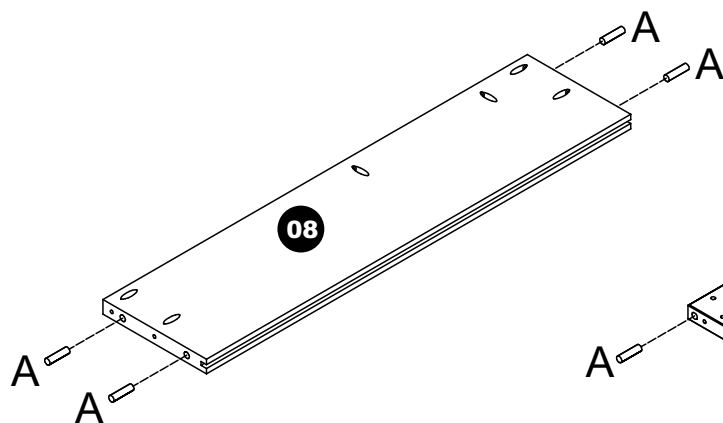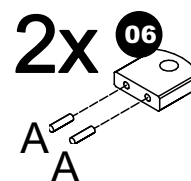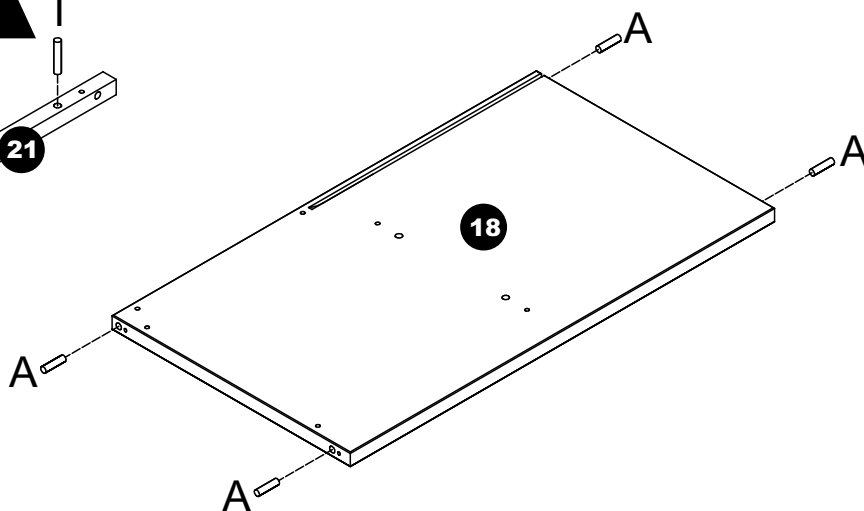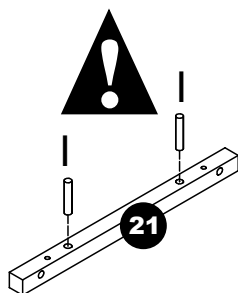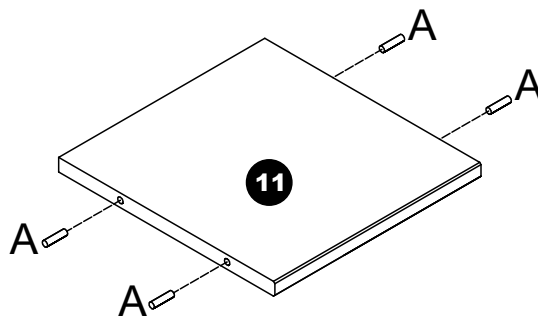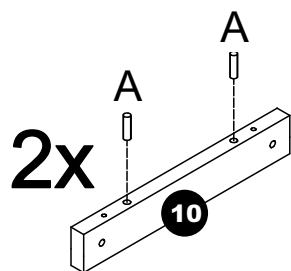



A		30	I		02
---	---	----	---	---	----

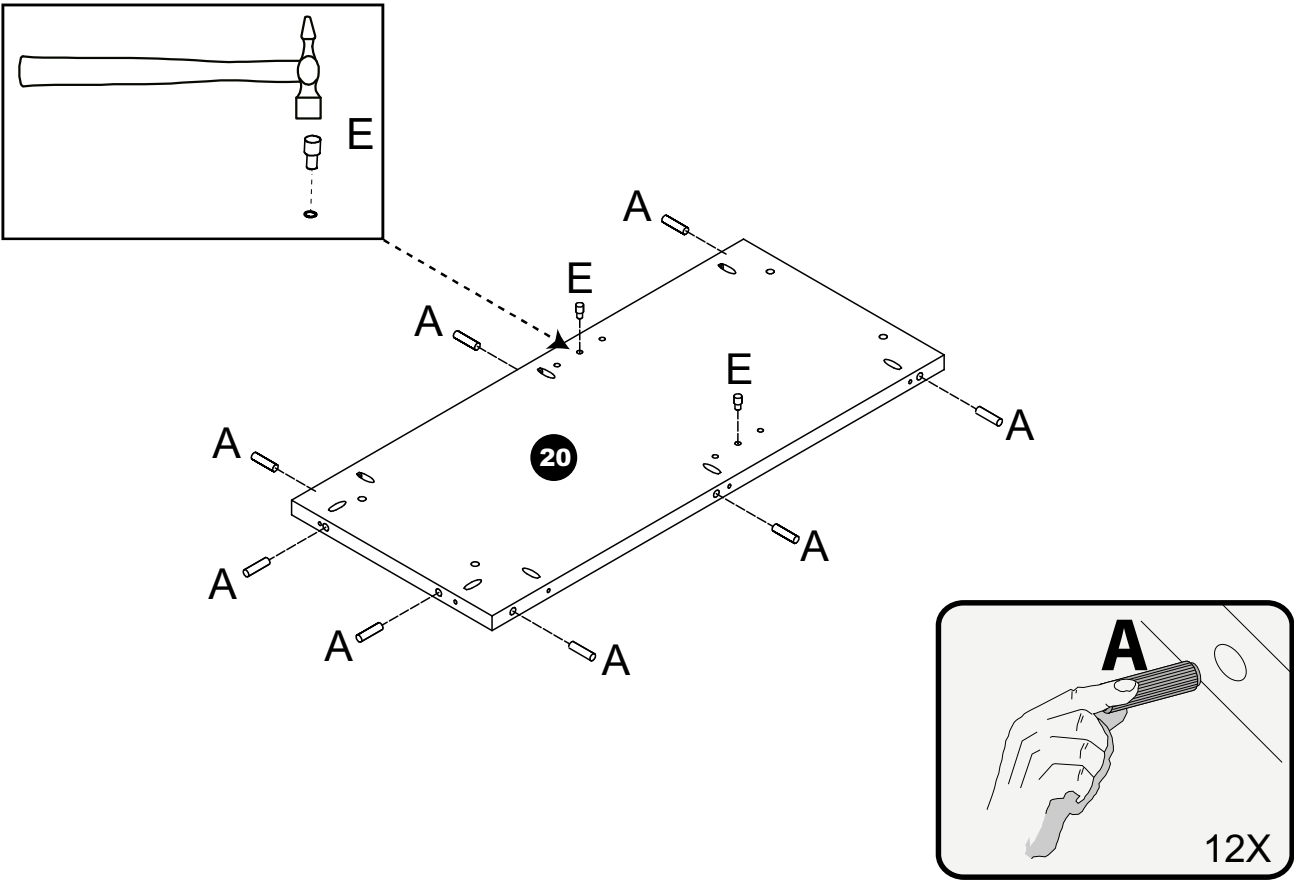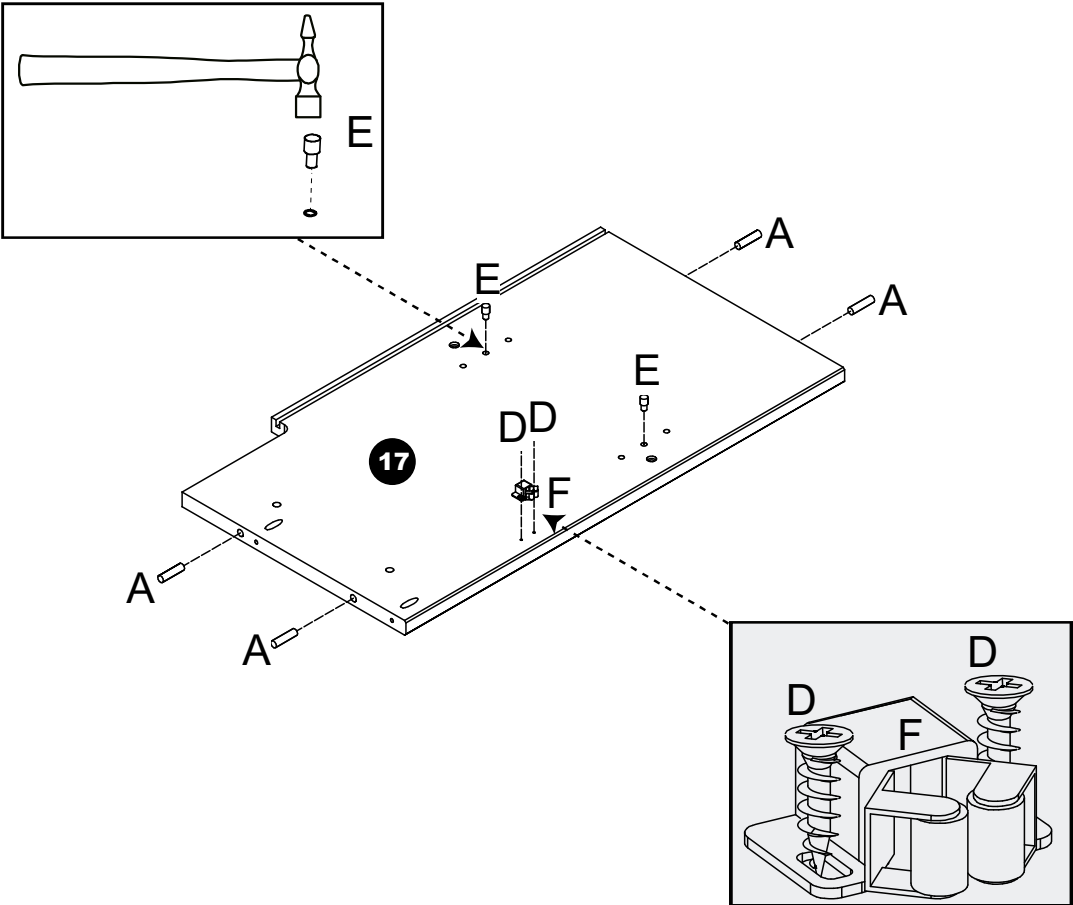

A	 8x30mm	12	D	 3,0x16mm	02	E	 04	F	 01
---	---	----	---	---	----	---	---	---	---

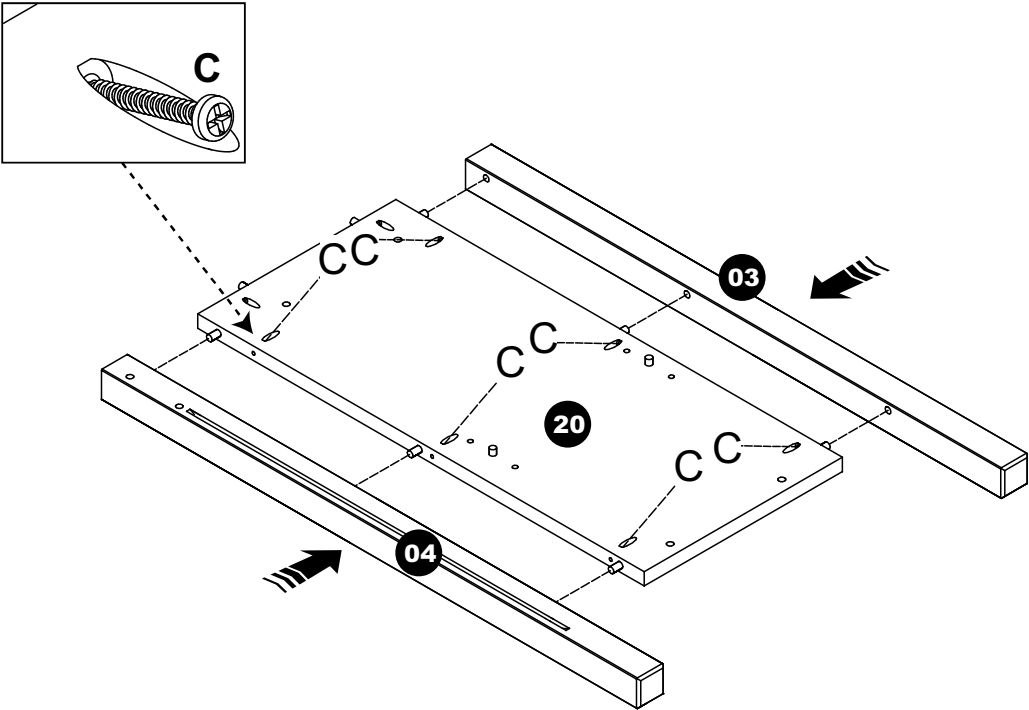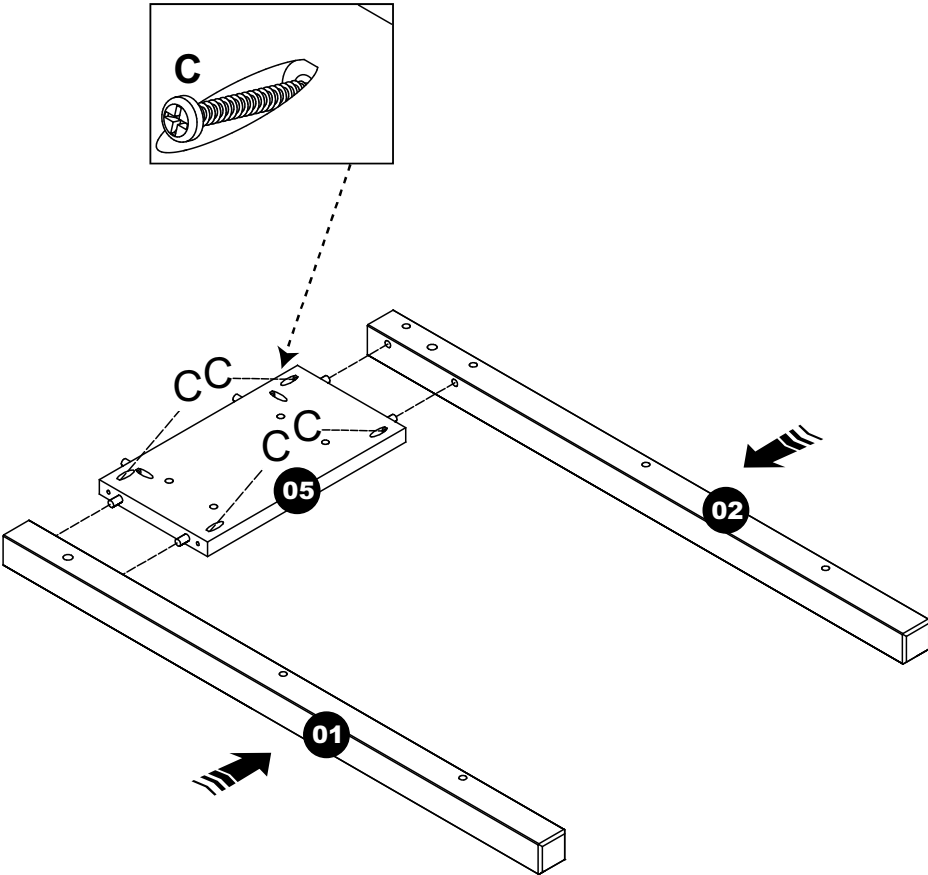


C		10
4,0x35mm		

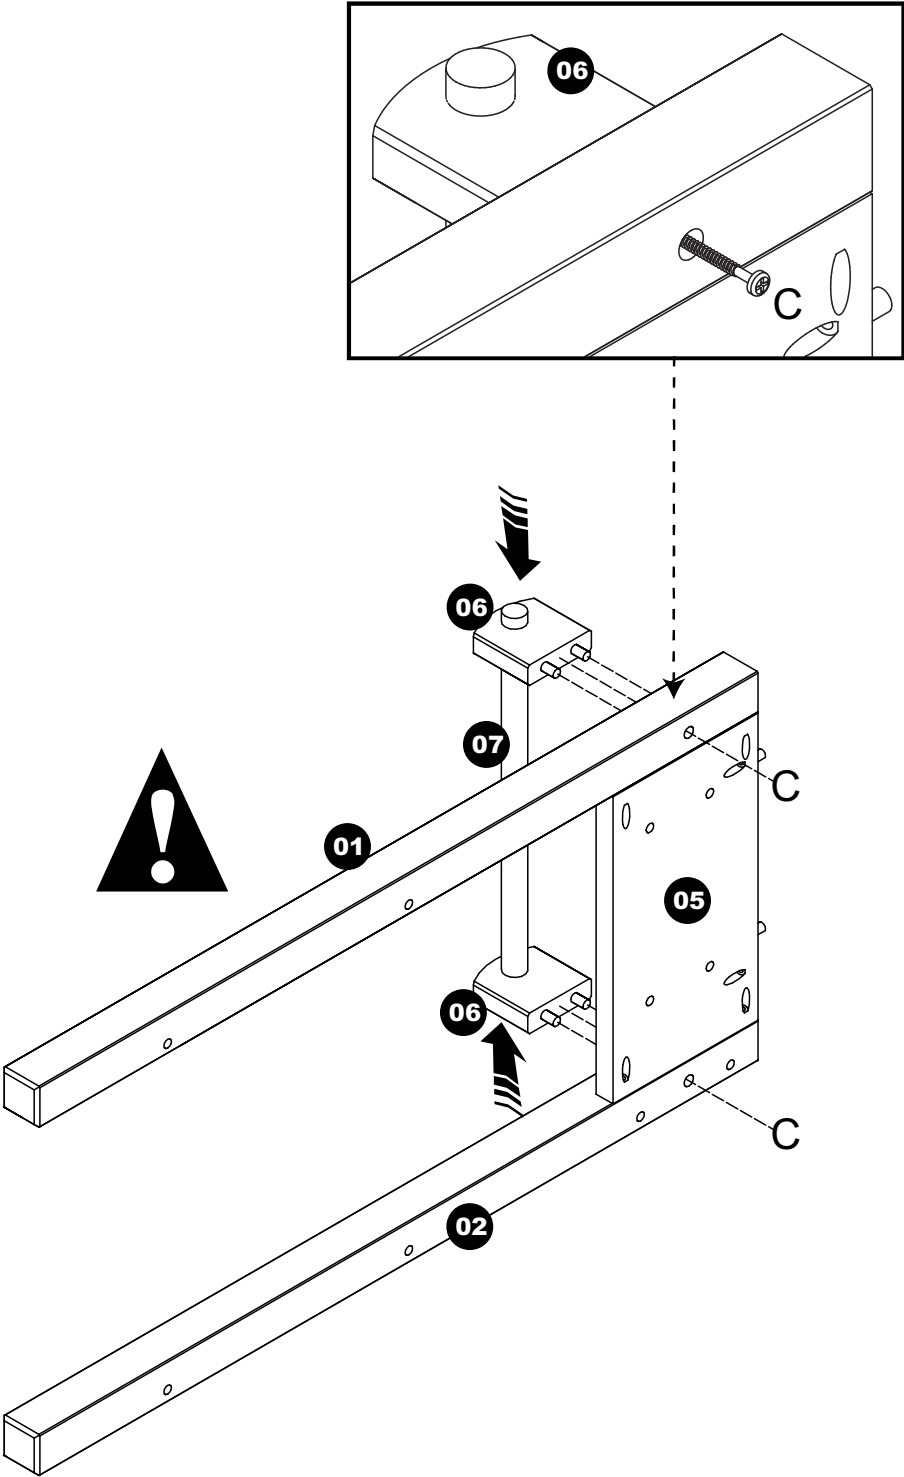



C		02
4,0x35mm		


05

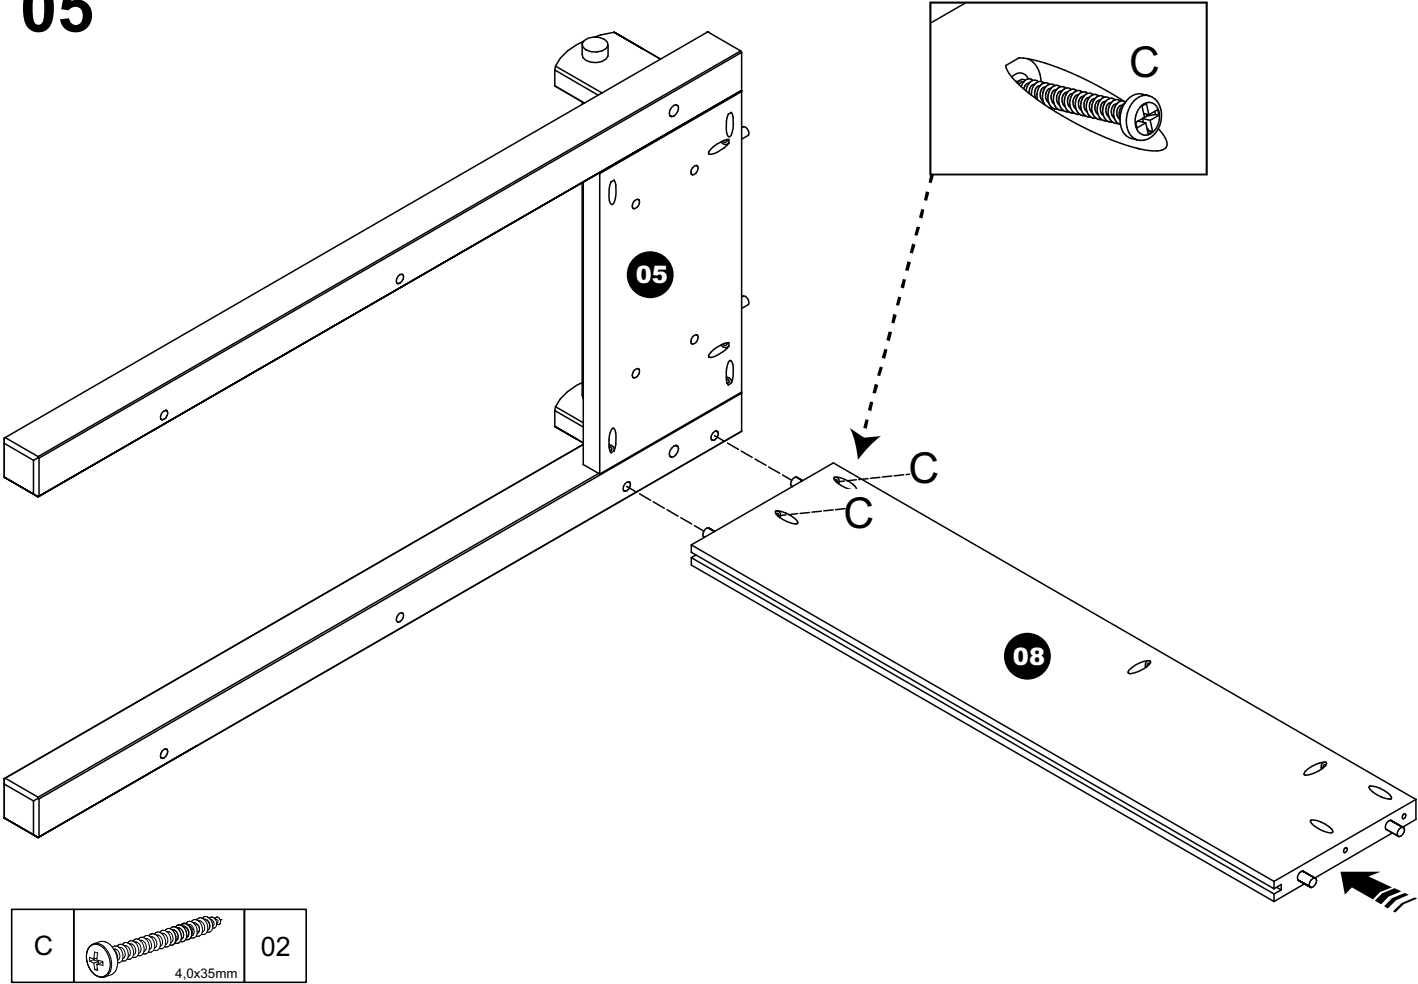


06

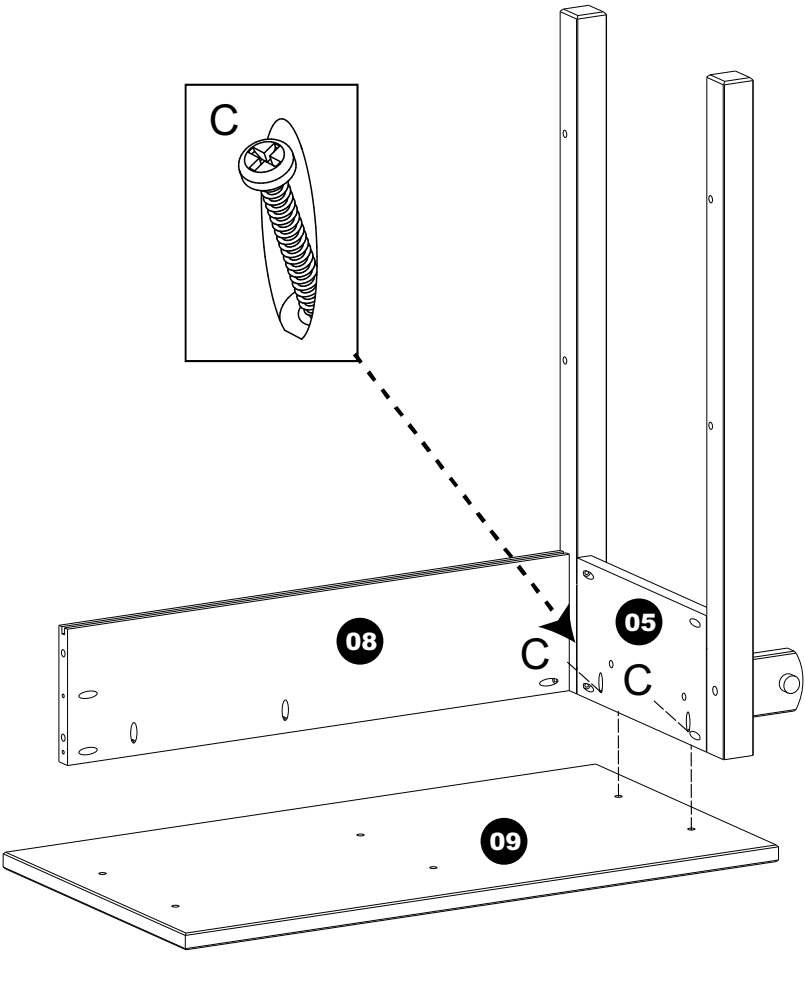


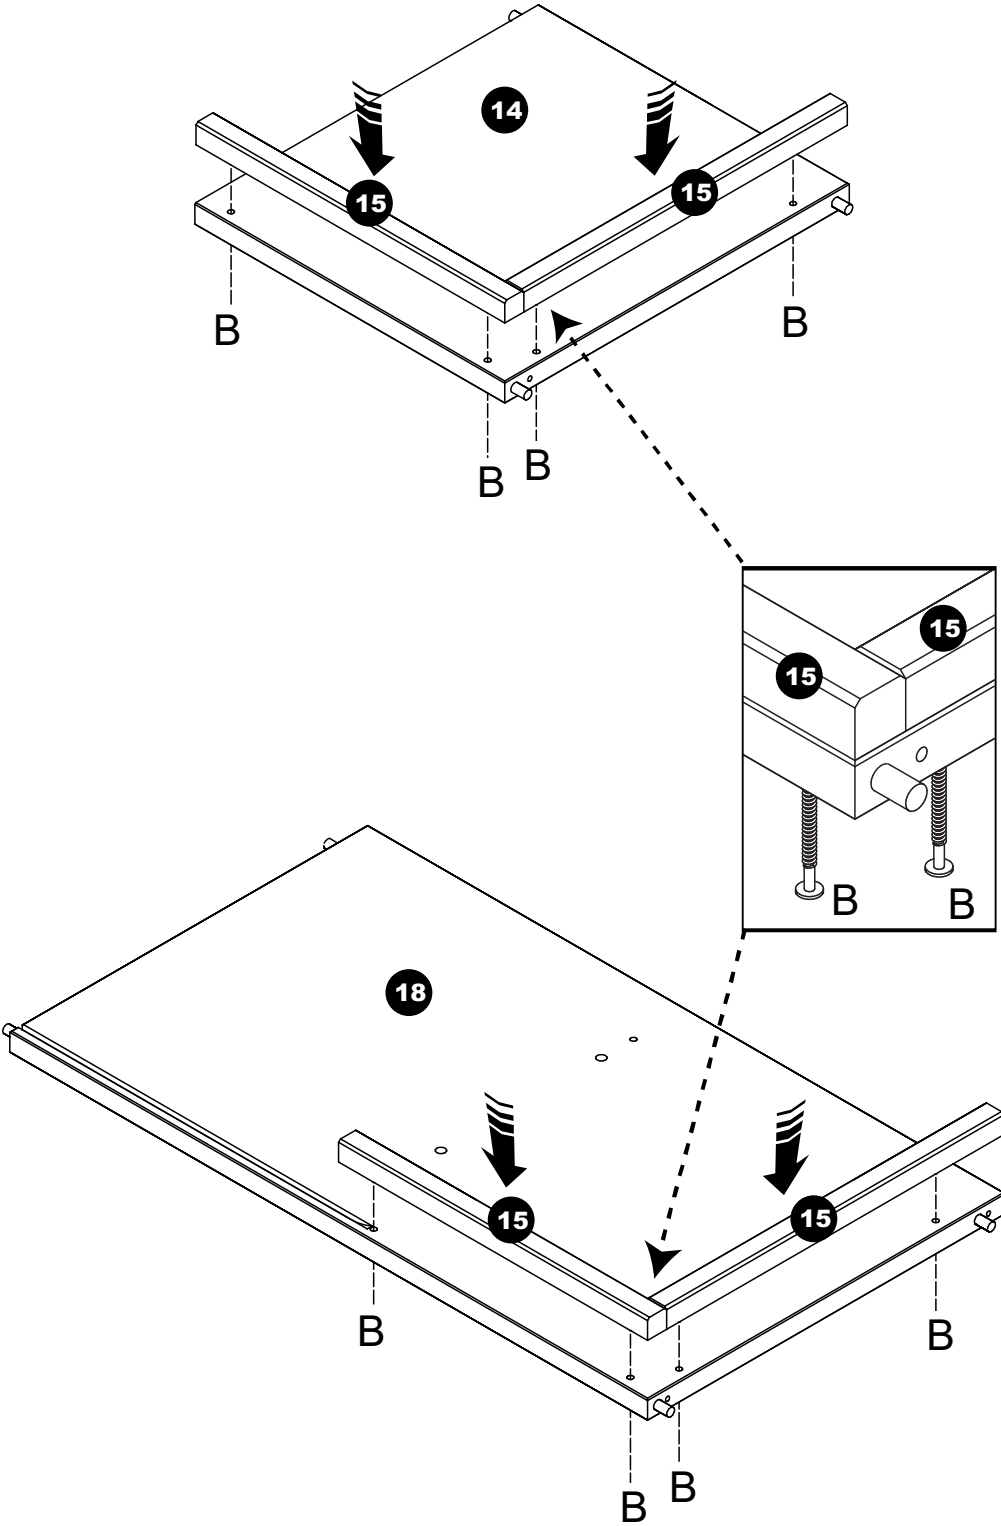


B		08
3,5x30mm		

08

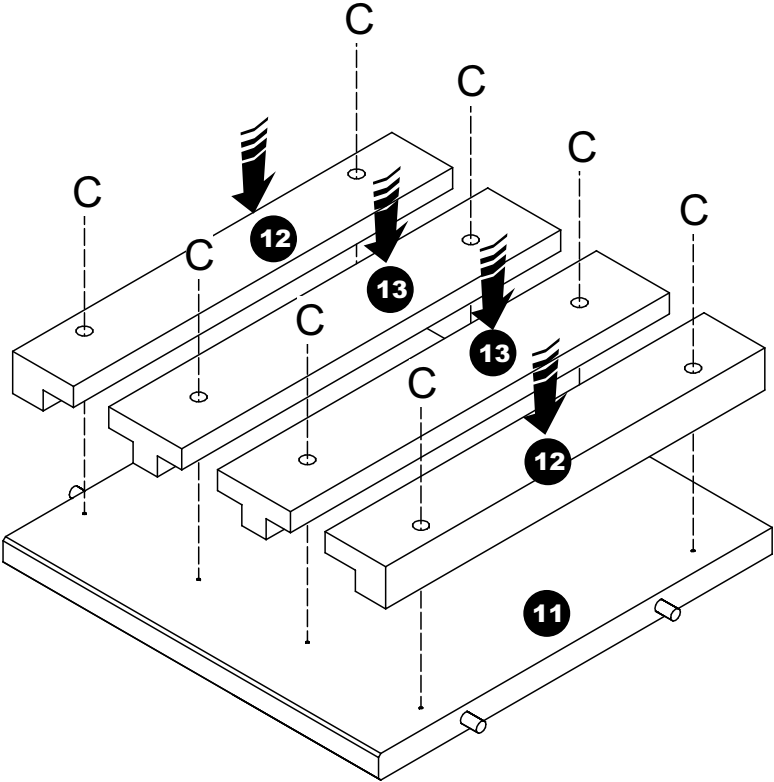



C	 4,0x35mm	08
---	--	----

09

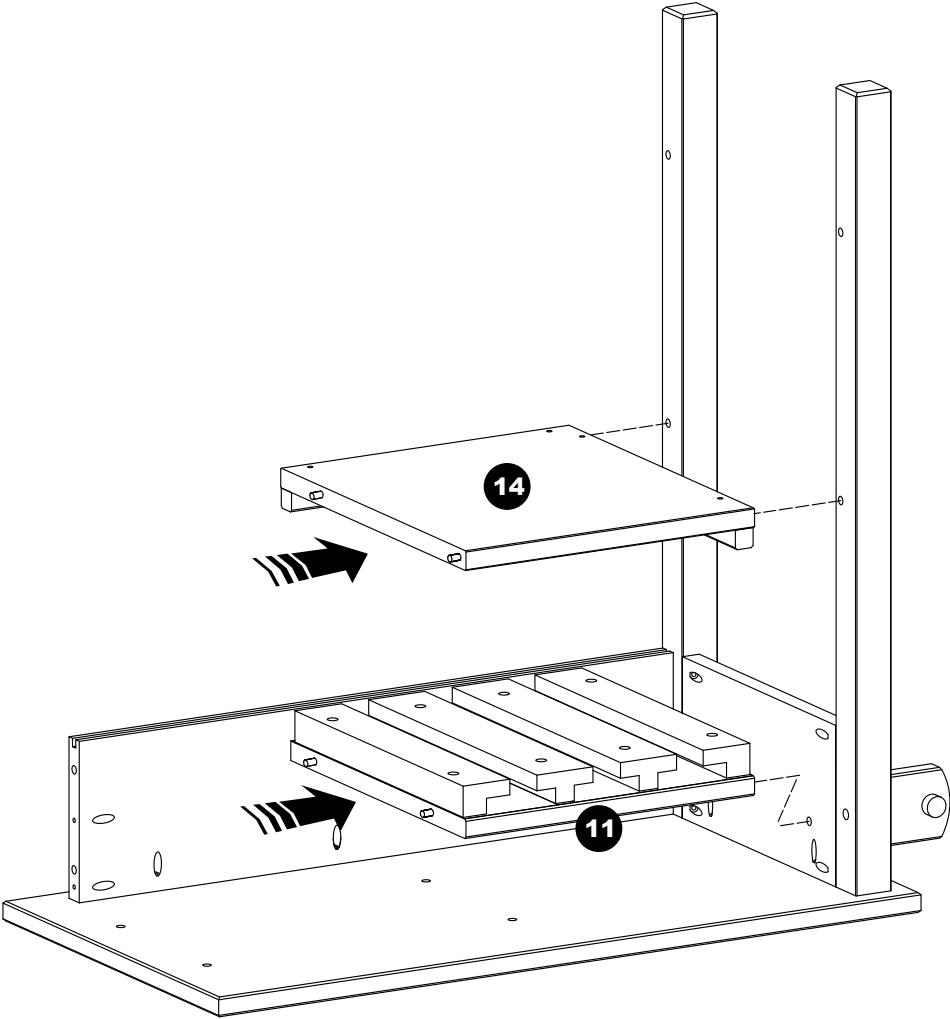



10

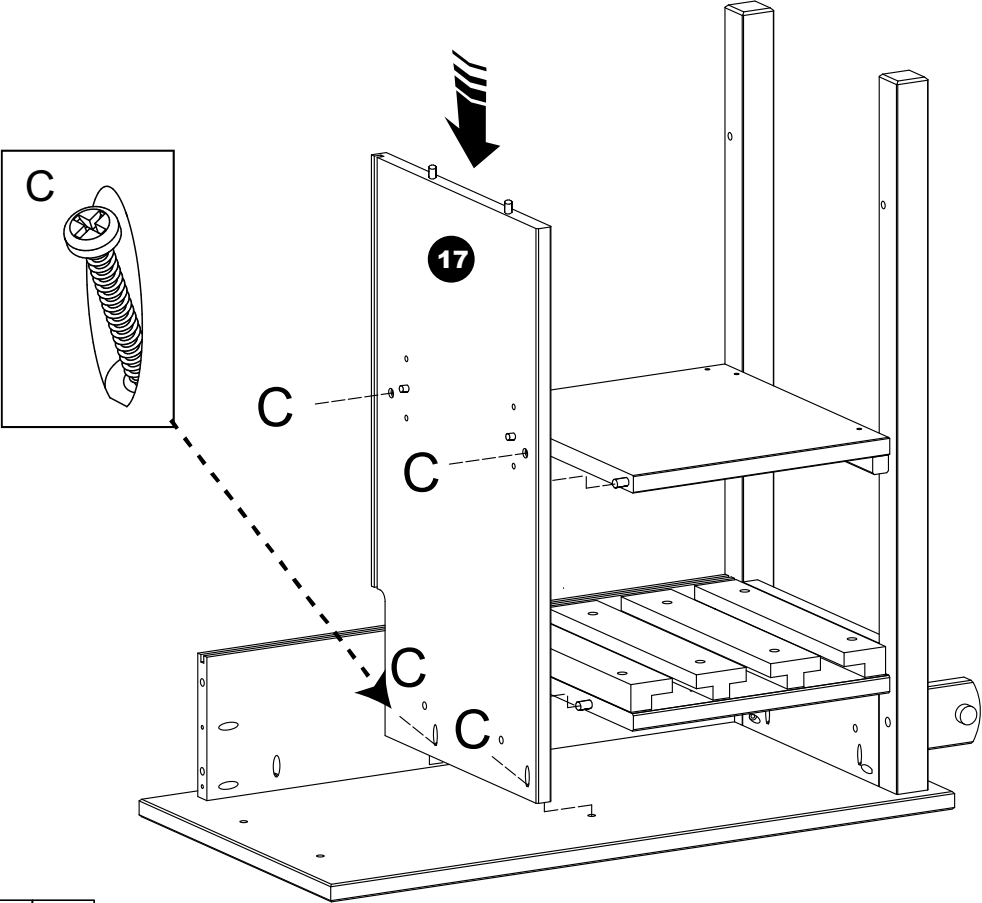



C	 4,0x35mm	04
---	---	----


11

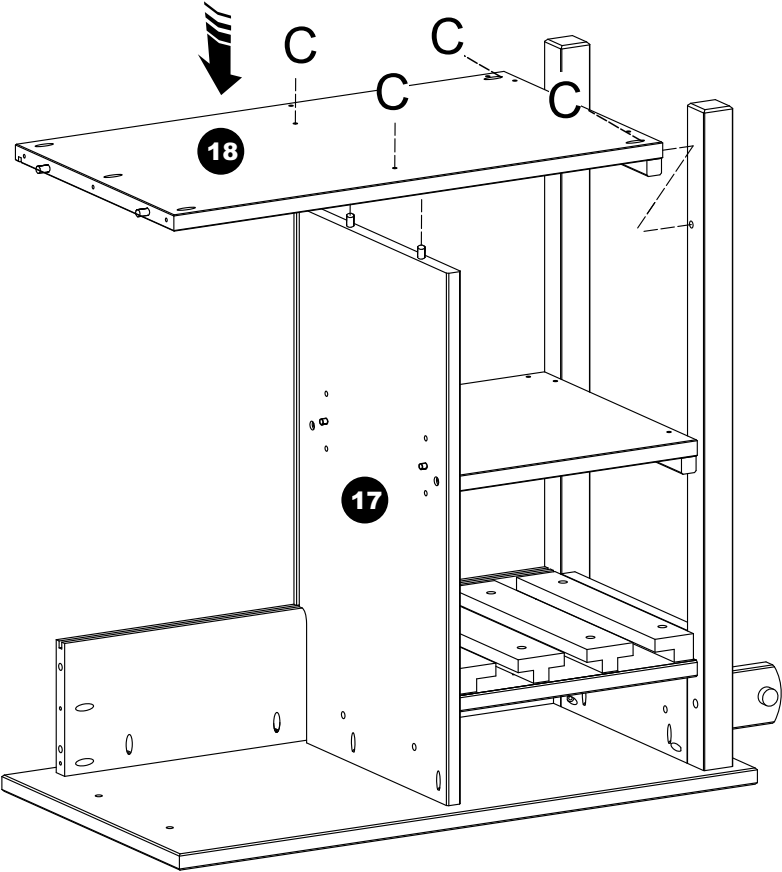


C	 4,0x35mm	04
---	---	----

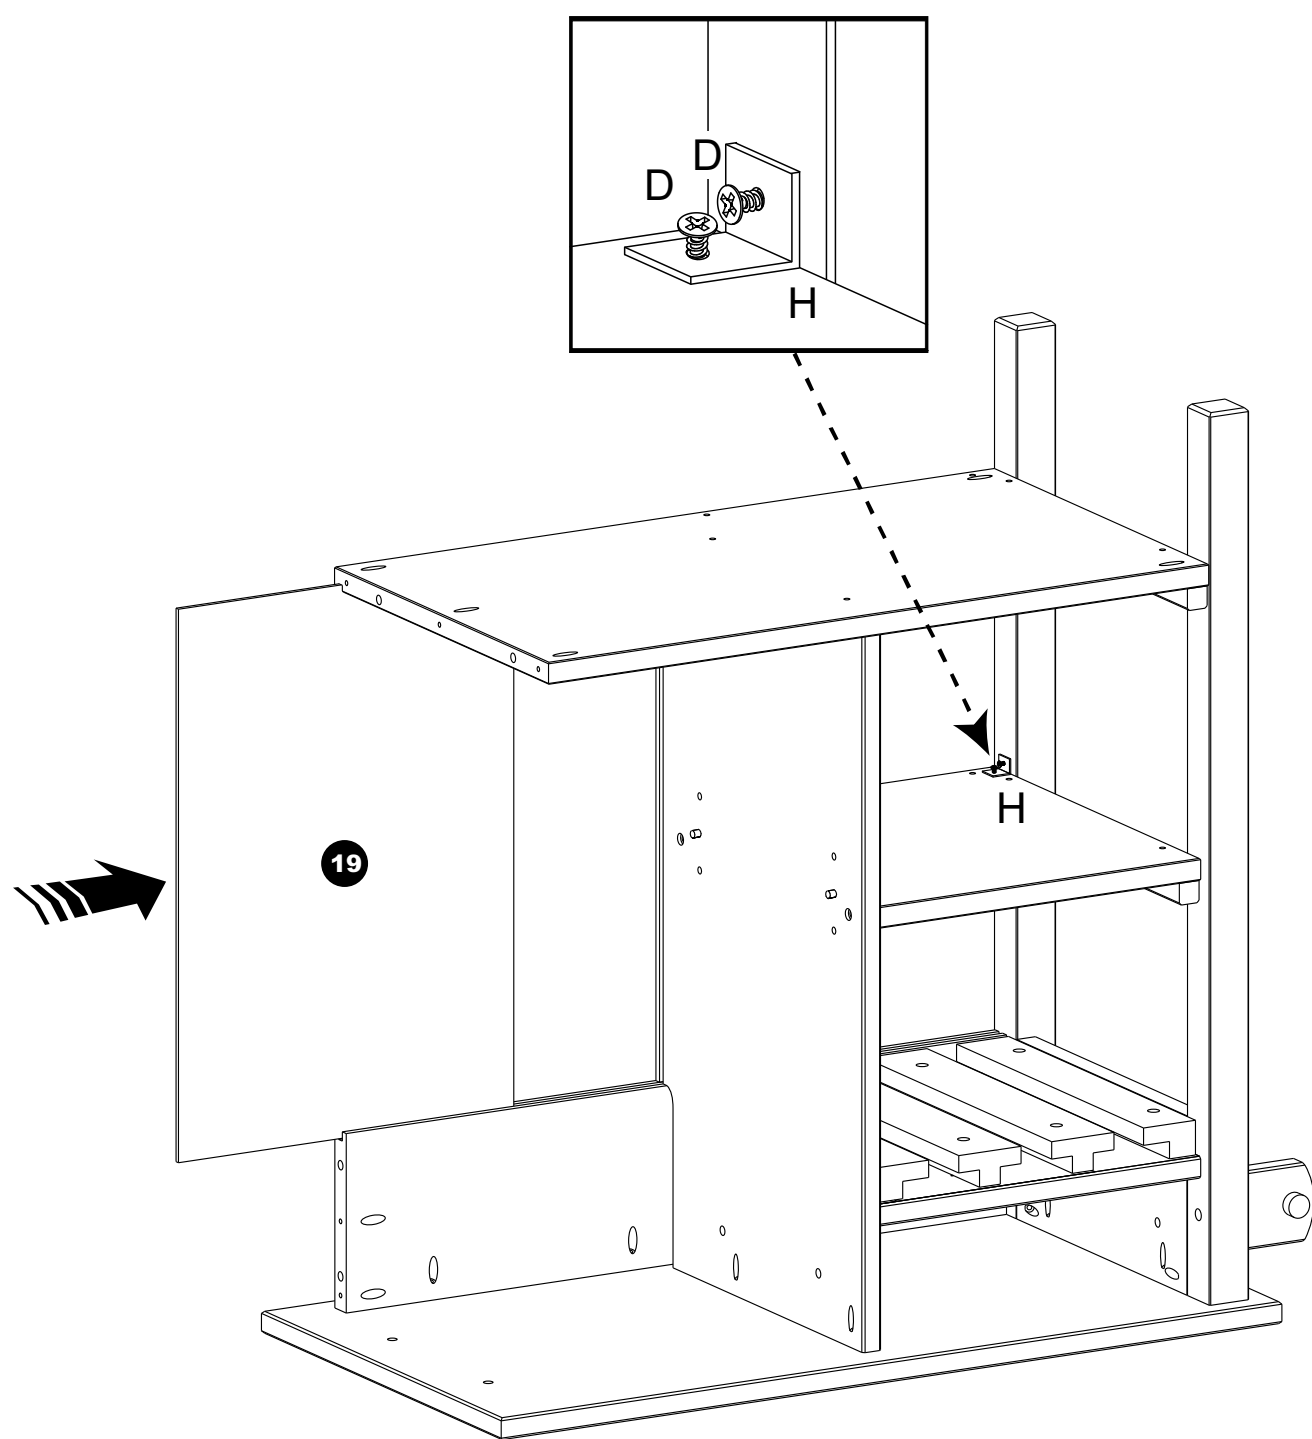


D	 3,0x16mm	02	H		01
---	---	----	---	---	----

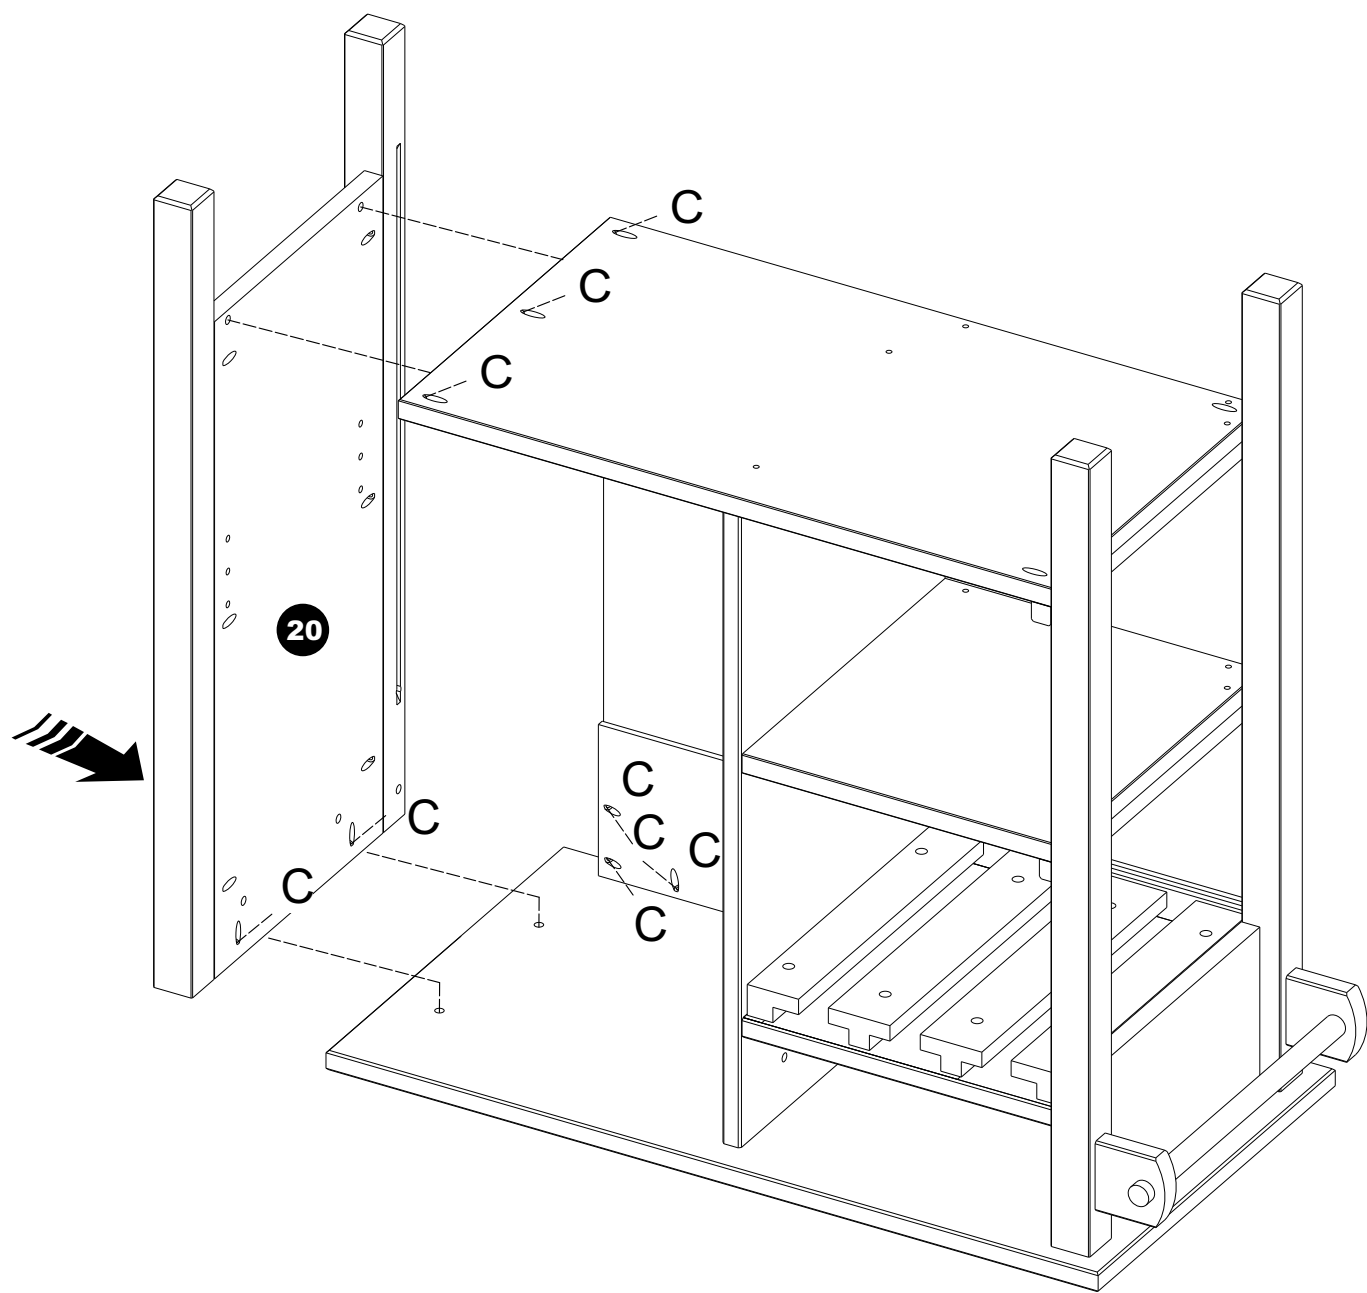



C		09
---	---	----

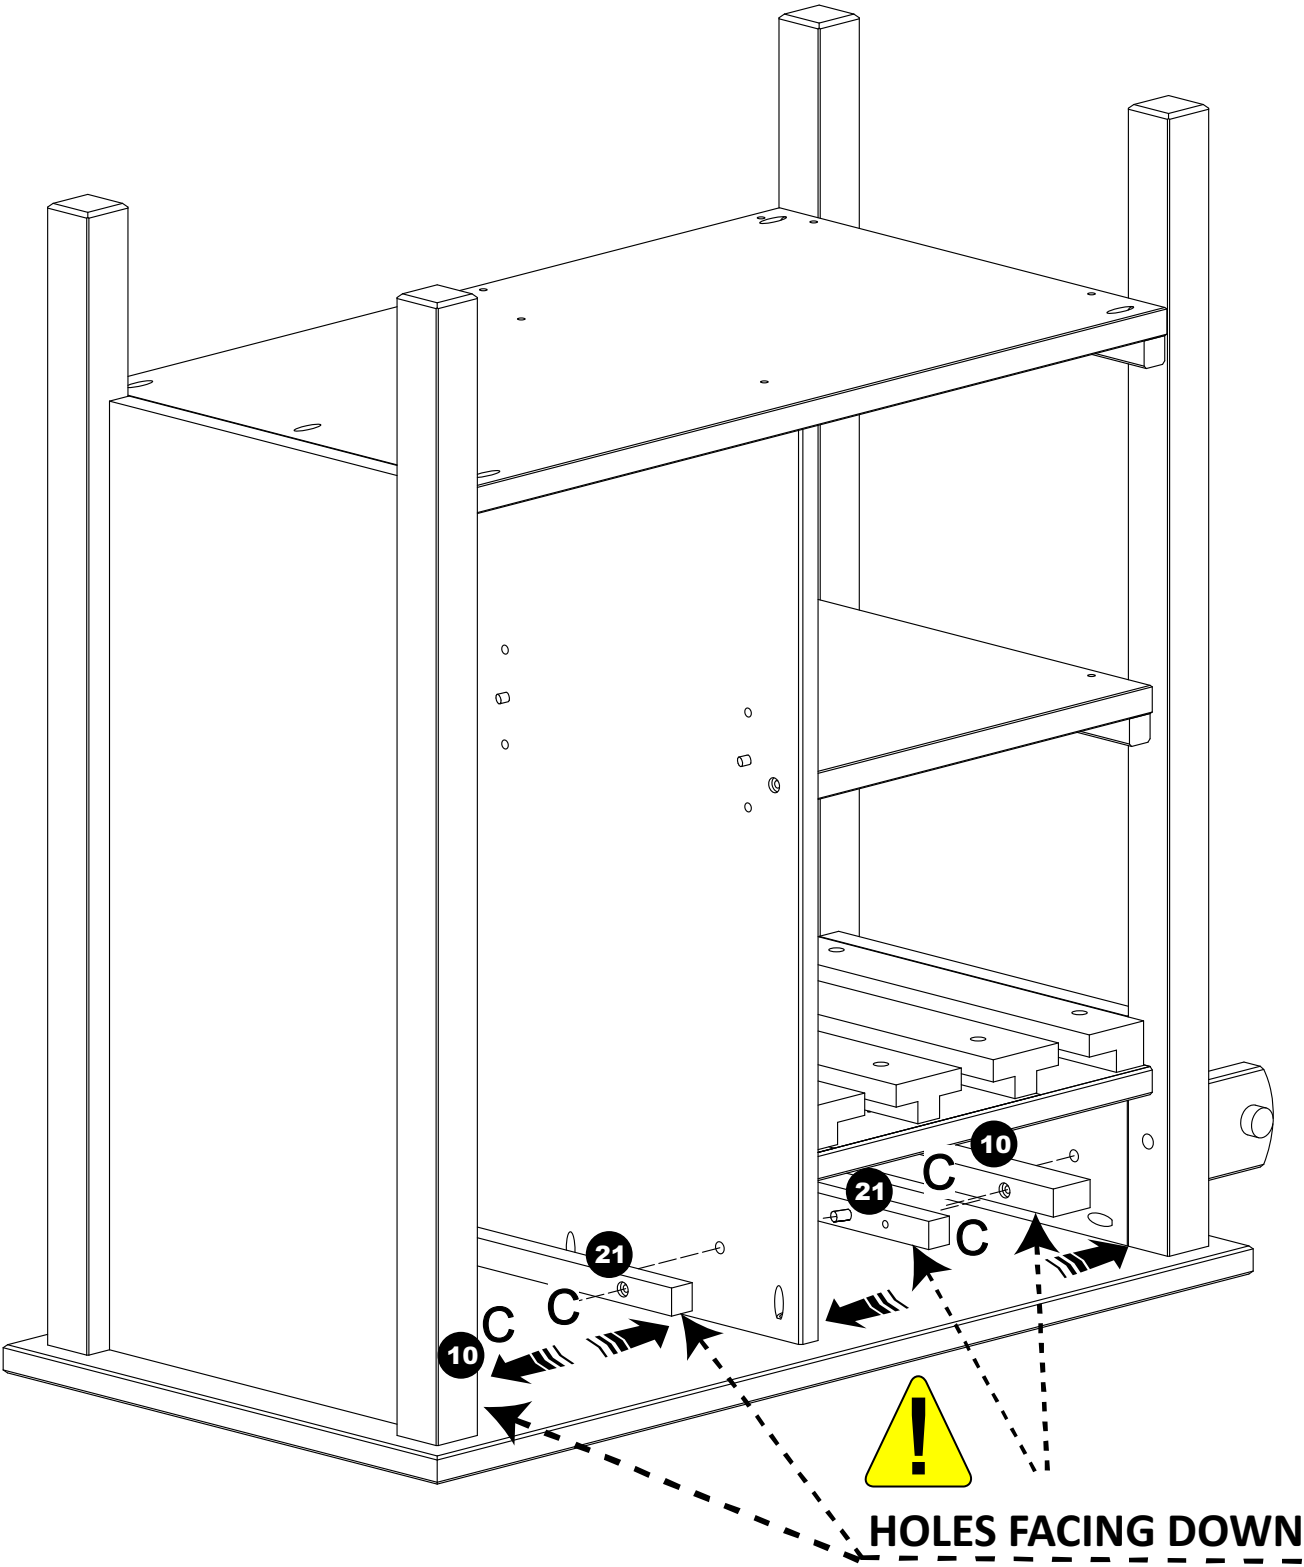

C		08
---	---	----

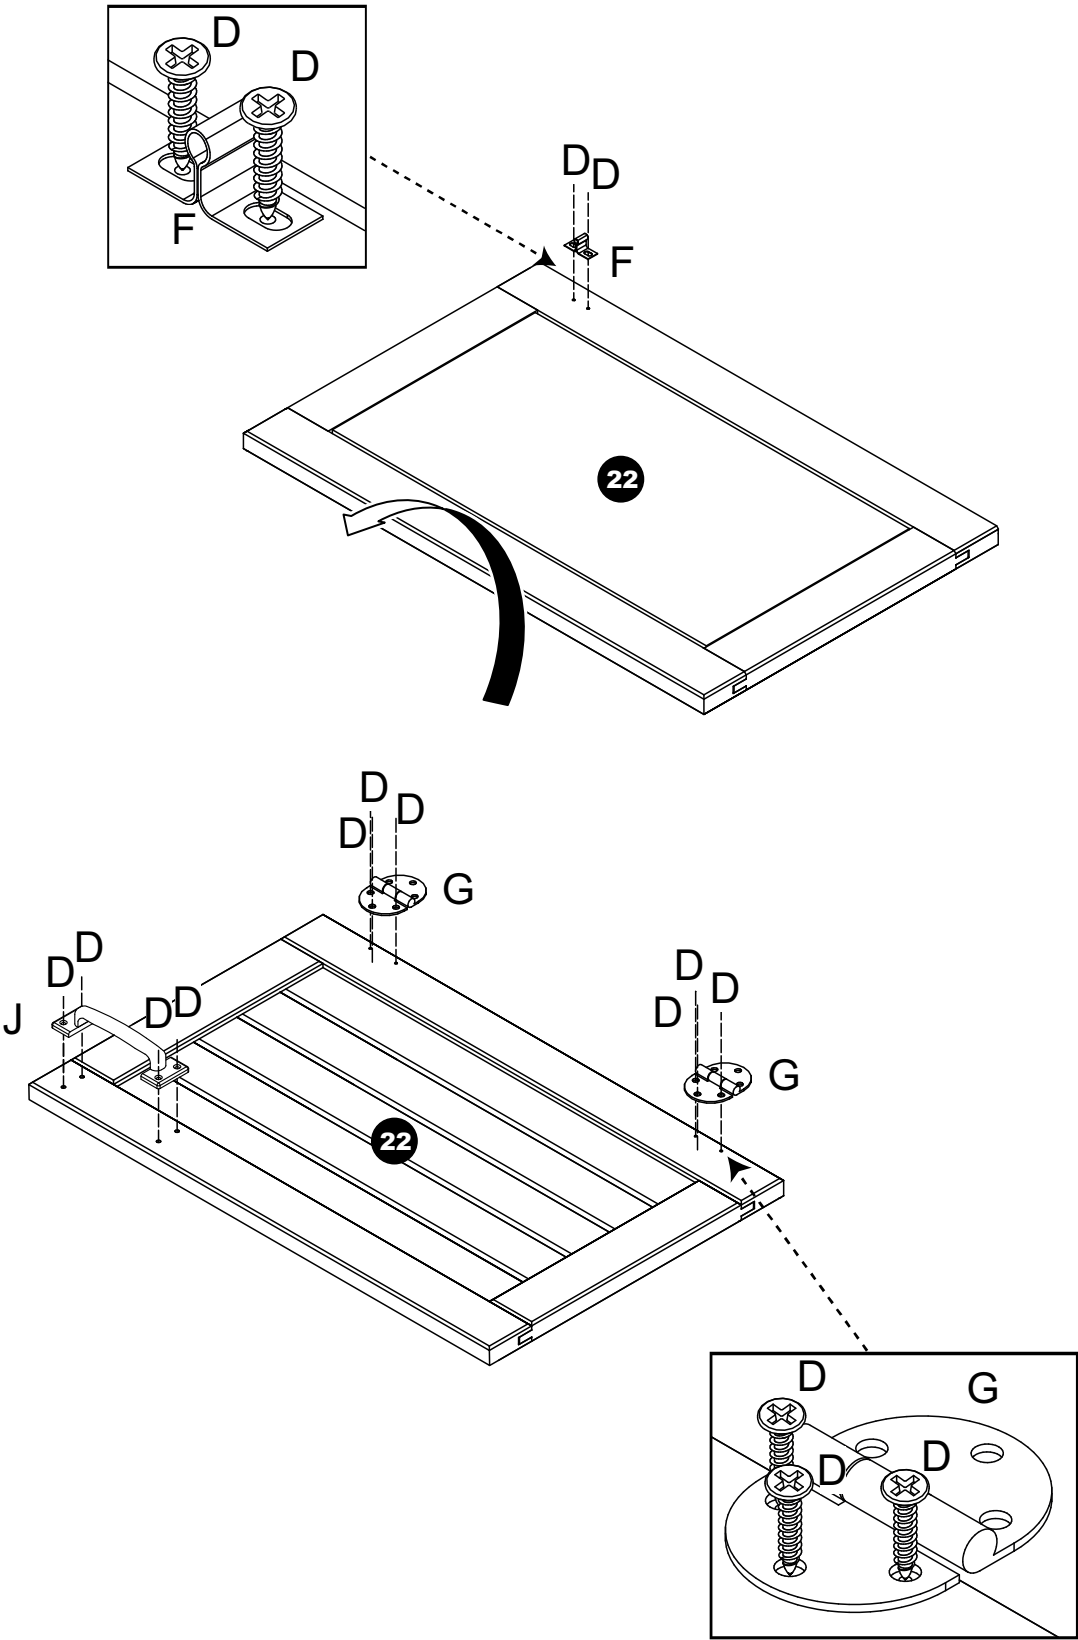


D	 3,0x16mm	12	F		01	G		02	J		01
---	---	----	---	---	----	---	---	----	---	---	----

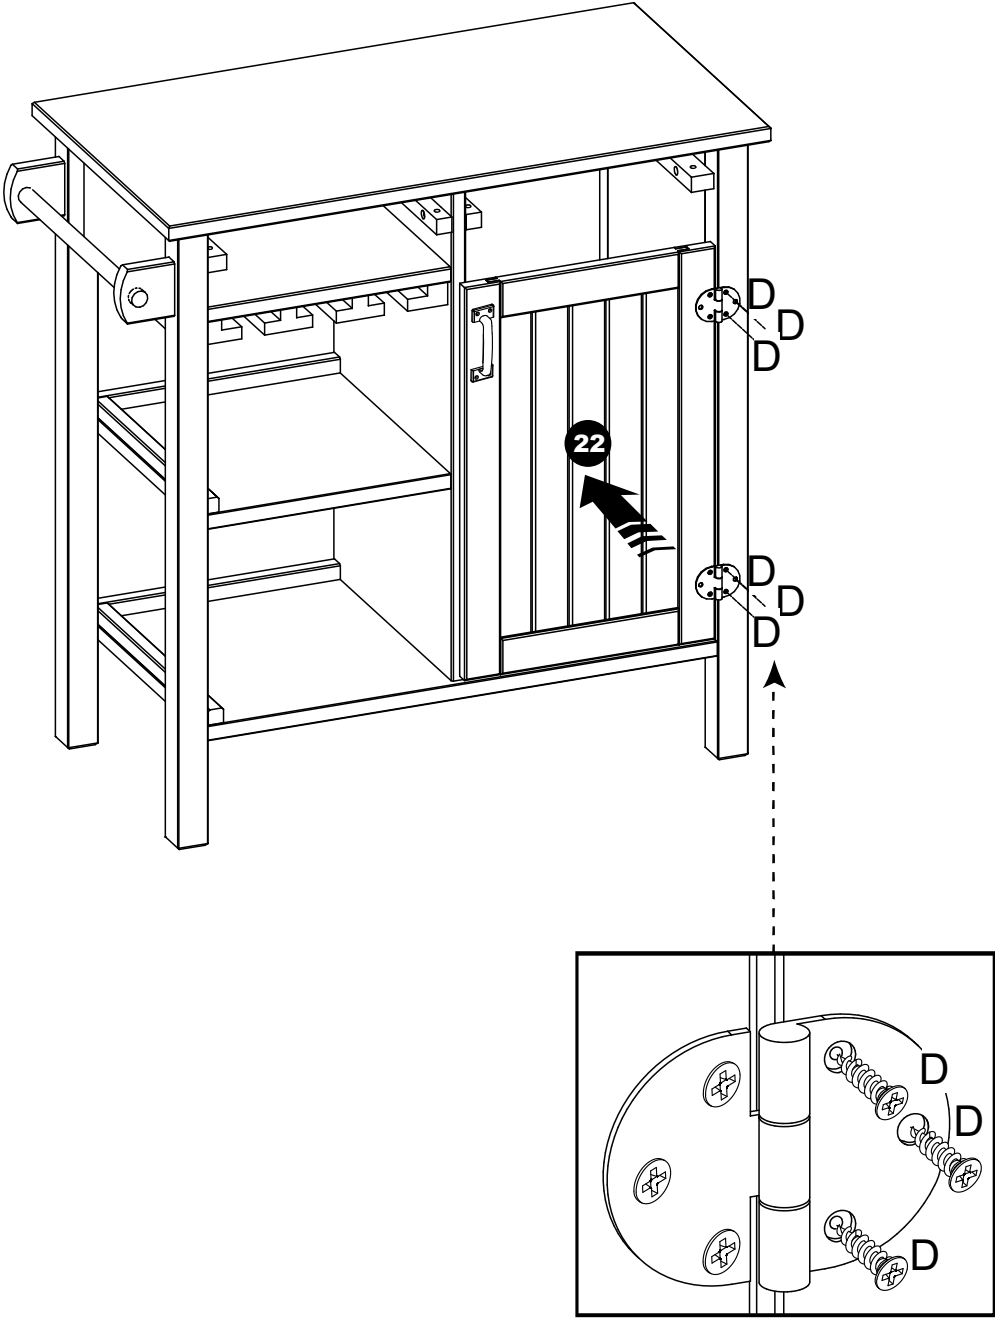



D		06
3,0x16mm		


17


2x

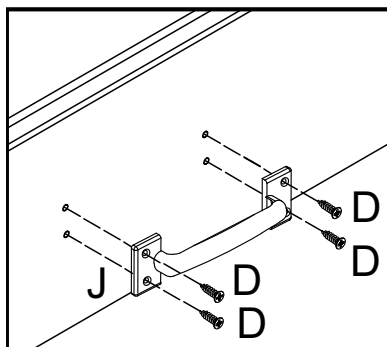



B		16	D		08	J		02
	3,5x30mm			3,0x16mm				

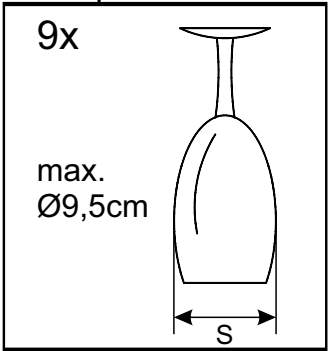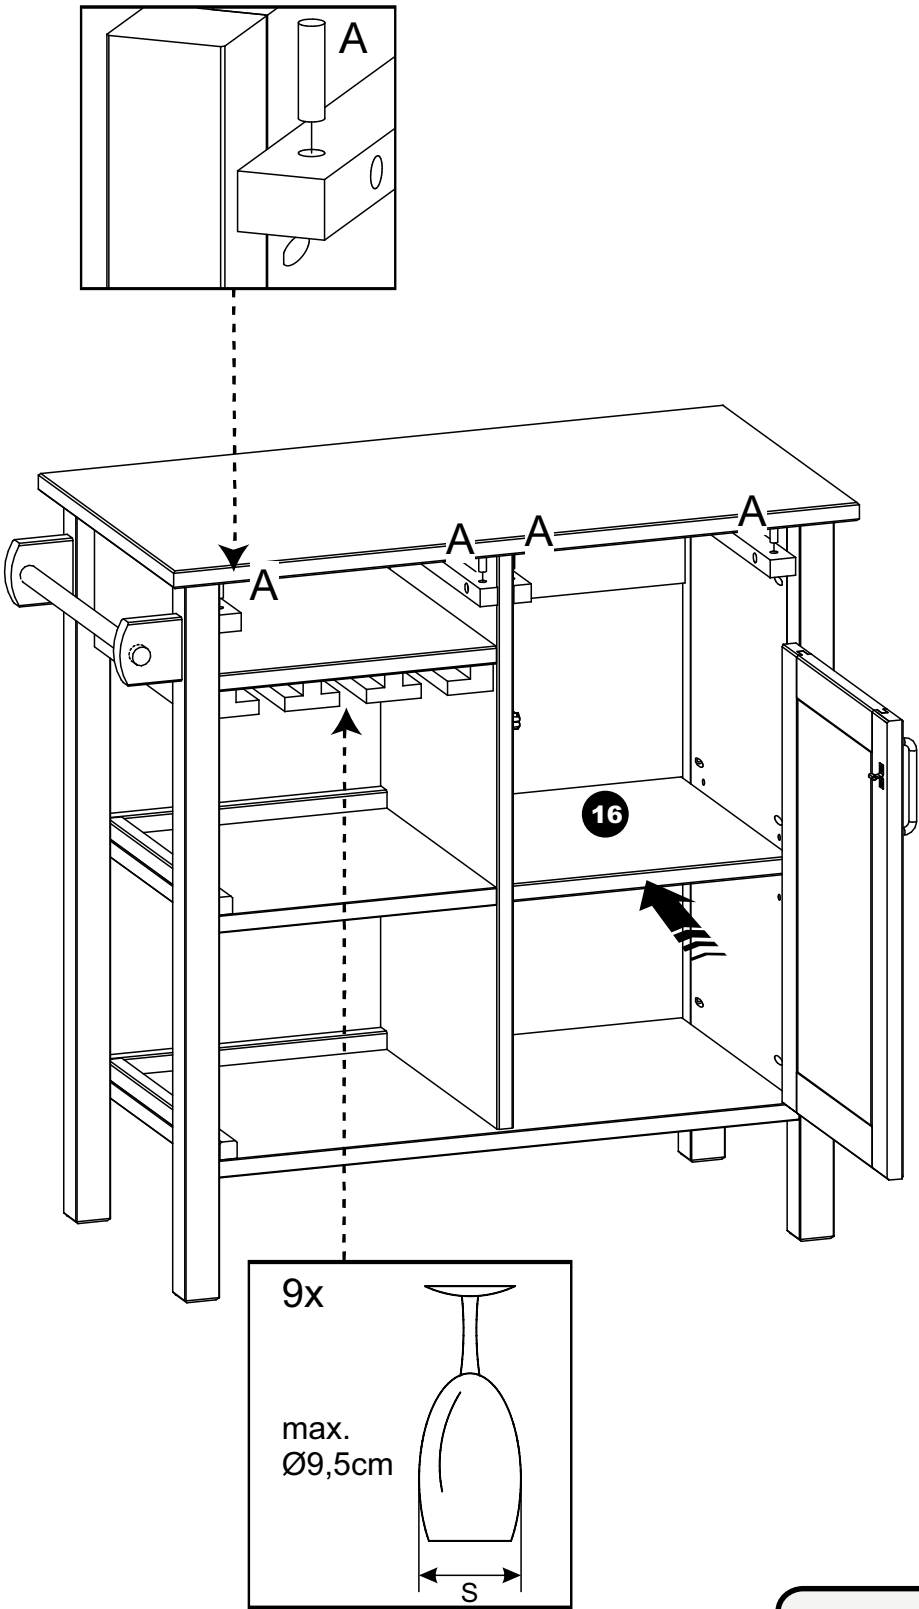

A		04
8x30mm		

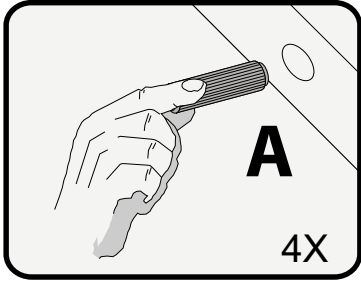

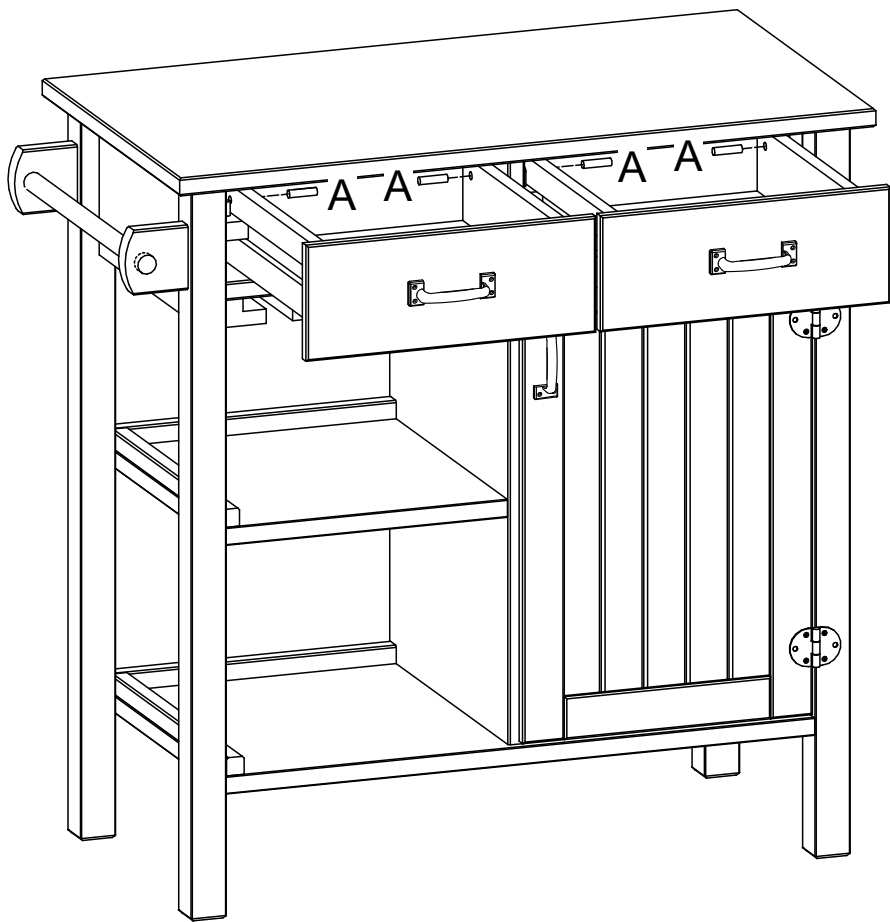

A	 8x30mm	04
---	---	----

