



ASSEMBLY INSTRUCTIONS












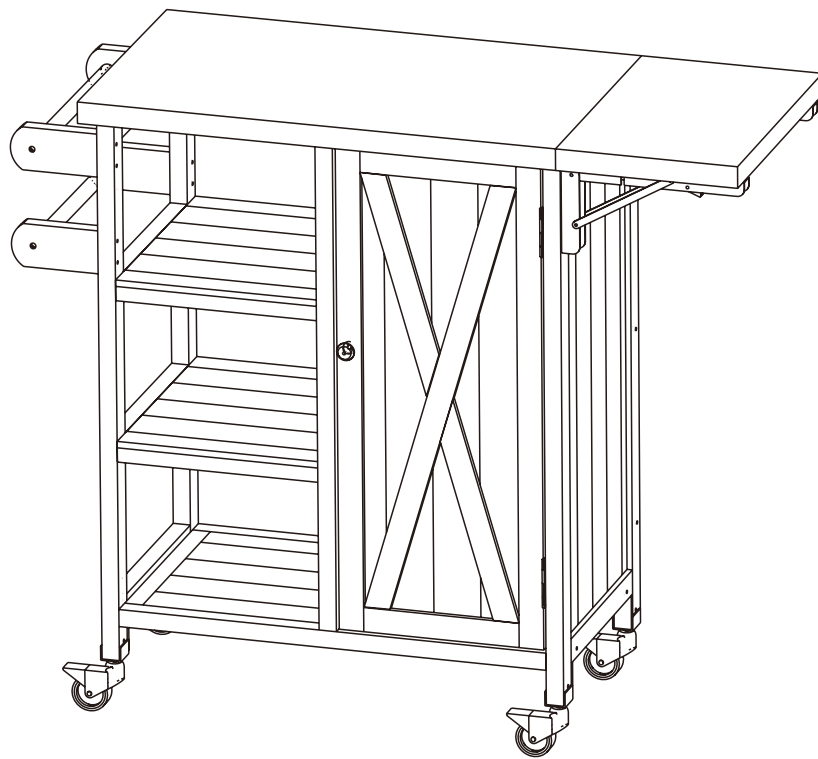


IMPORTANT NOTE:


- ① PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- ② BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- ③ DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THIS ITEM IS FULLY SET-UP.

Detail View

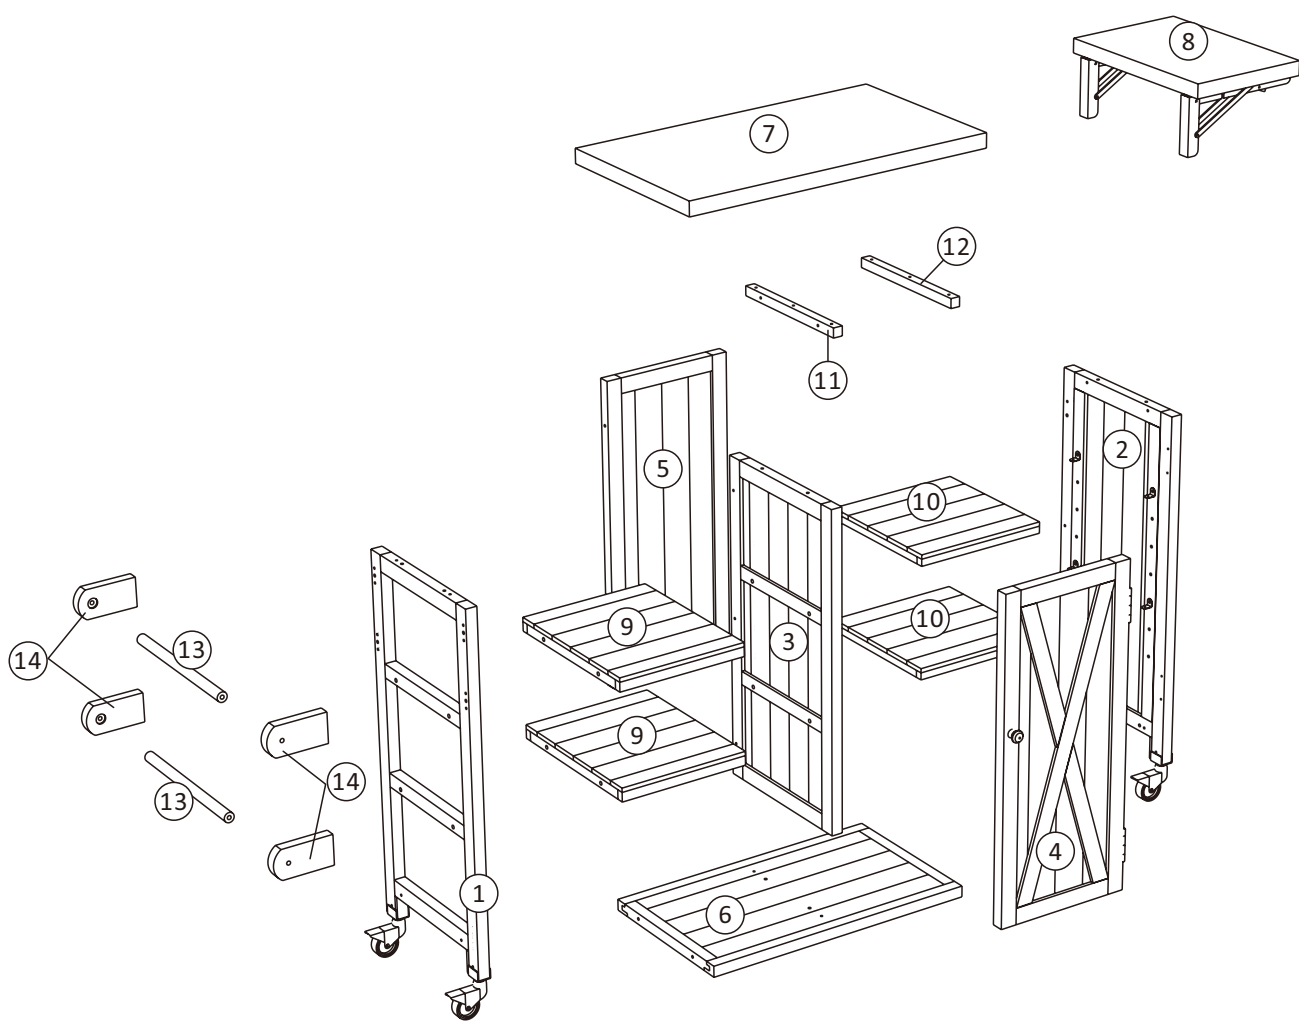

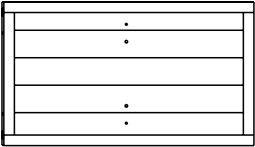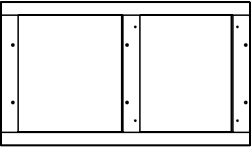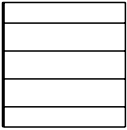1		2		3		4	
	1x		1x		1x		1x
5		6		7		8	
	1x		1x		1x		1x
9		10		11		12	
	2x		2x		1x		1x
13		14					
	2x		4x				

Hardware List





A	 Ø 3.5*50 10x	B	 Ø 3.5*45 12x	C	 Ø 3.5*40 10x	D	 Ø 3.5*25 10x
E	 Ø 3.0*16 10x	F	 Ø 6.0*50 8x	G	 Ø 6.0*30 4x	H	 Ø 4.0*35 4x
I	 20x	J	 8x	K	 2x	L	 1x
M	 4x	N	 2x	O	 1x	P	 1x


ASSEMBLY TOOLS REQUIRED(NOT INCLUDED)





PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWERTOOLS !

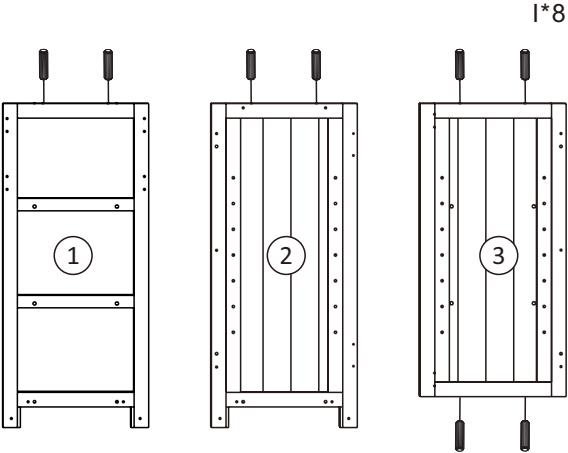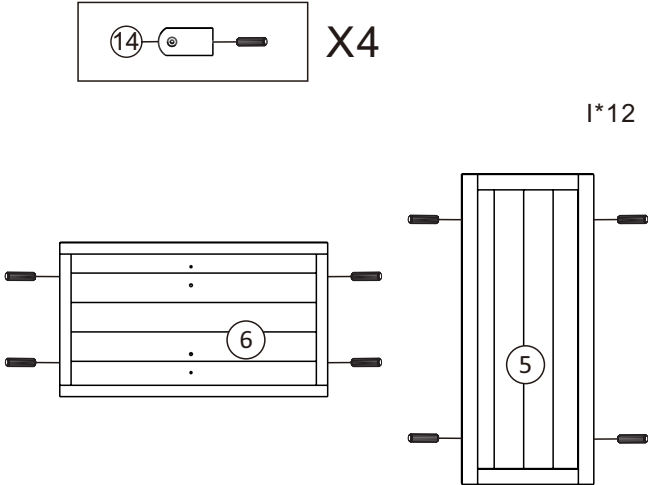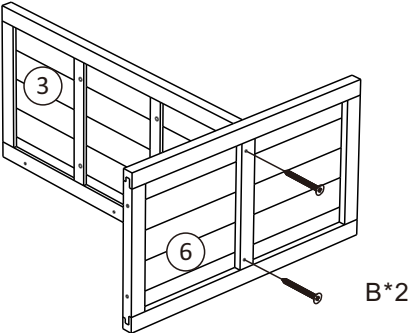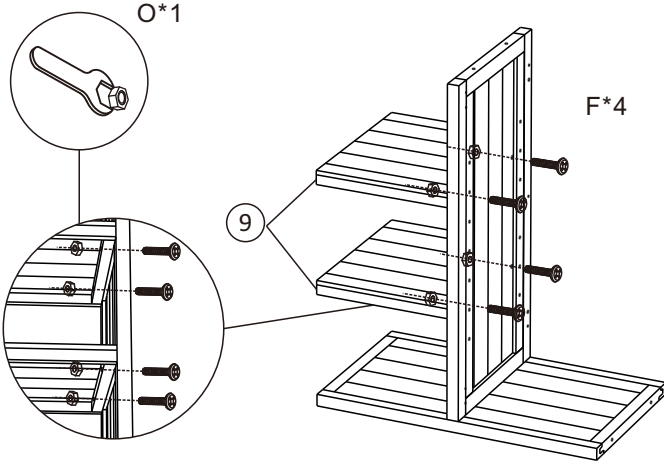	
1	2
	
3	4

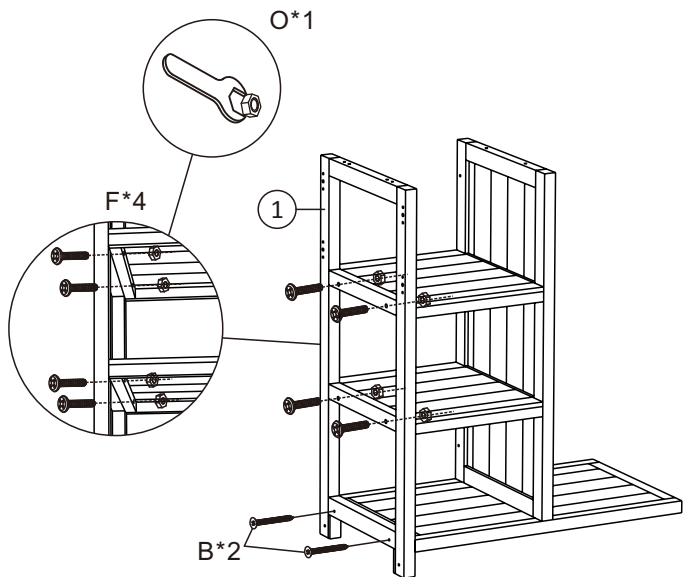


5

	3.5*45MM
B*2	


	6.0*50MM
F*4	

	O*1
---	-----

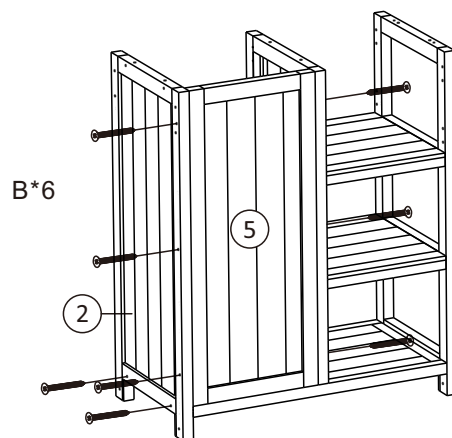


6

	3.5*45MM
B*8	

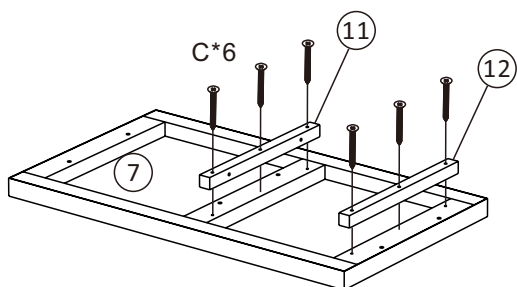

7


	3.5*40MM
C*6	

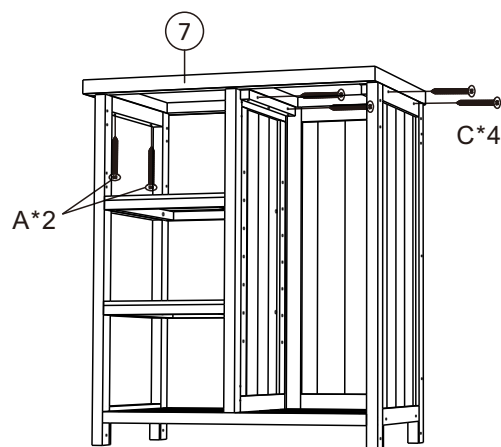


8

	3.5*50MM
A*2	

	3.5*40MM
C*4	

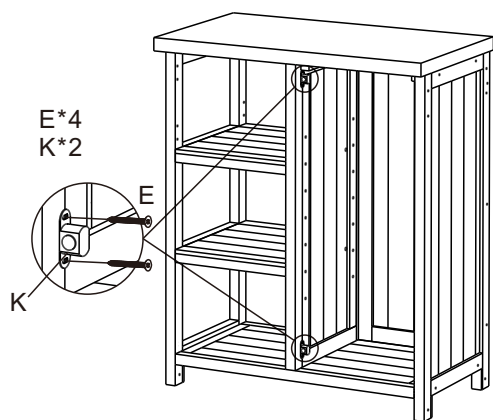

E*4
K*2

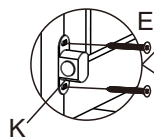


9

3.0*16MM

E*4



K*2

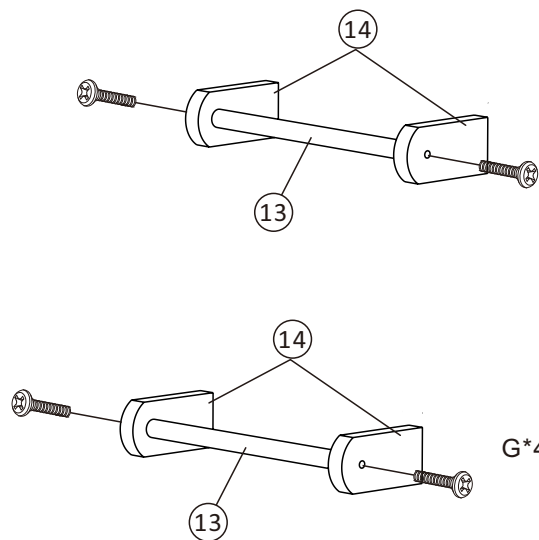


G*4

10


6.0*30MM

G*4

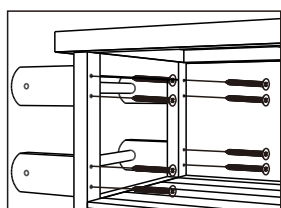

A*8


14

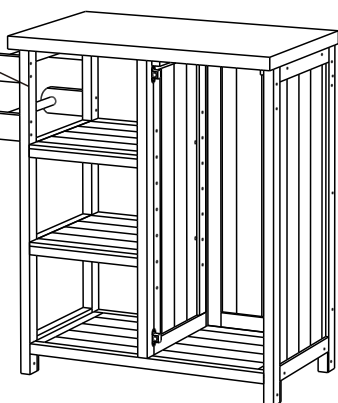

11

3.5*50MM

A*8

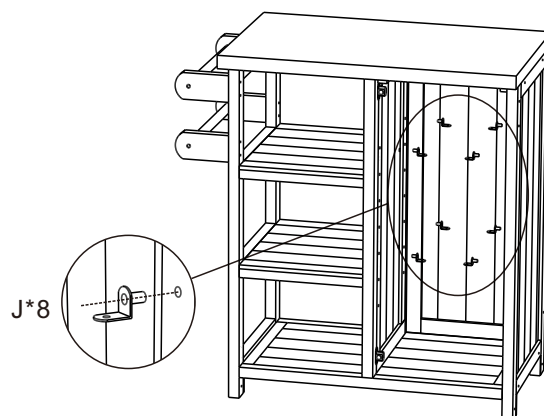


J*8


12



J*8

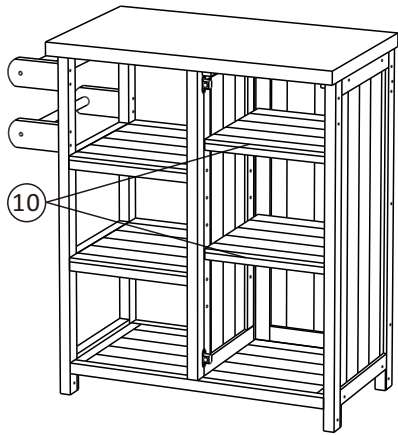


13

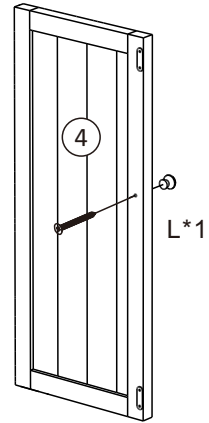

14



L*1

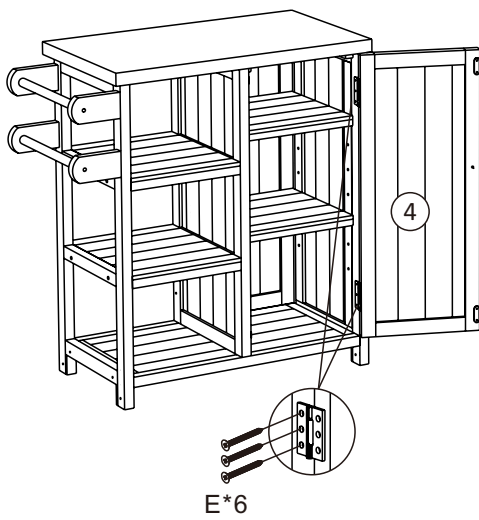


15



3.0*16MM

E*6

16

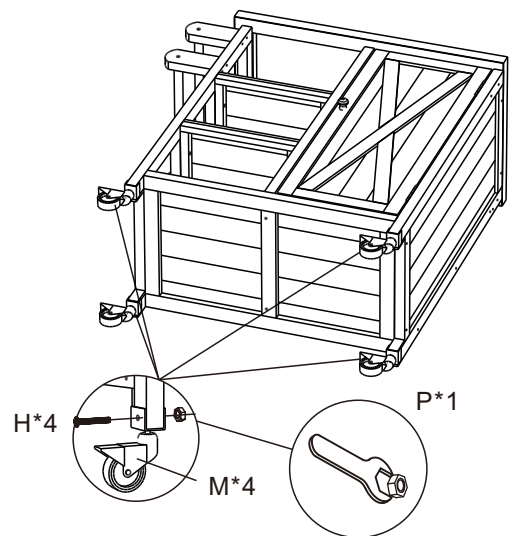

4.0*35MM


H*4




M*4





P*1

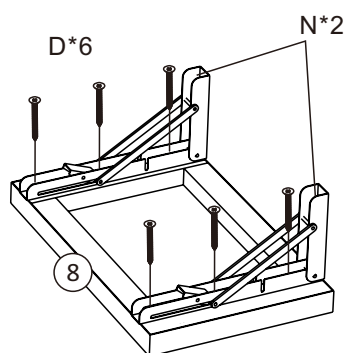


	
3.5*25MM	
D*6	N*2

17

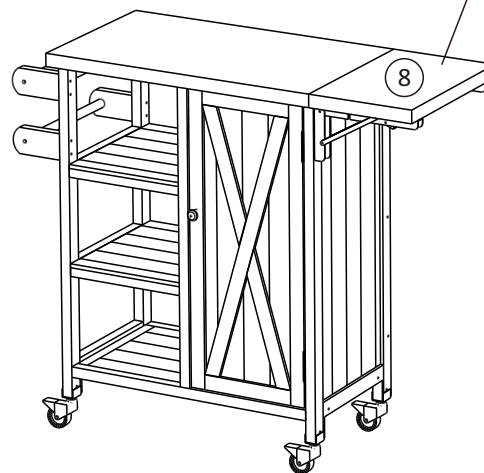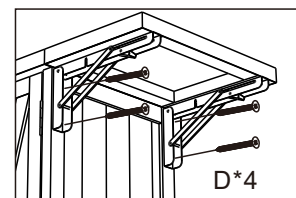


3.5*25MM
D*4

18

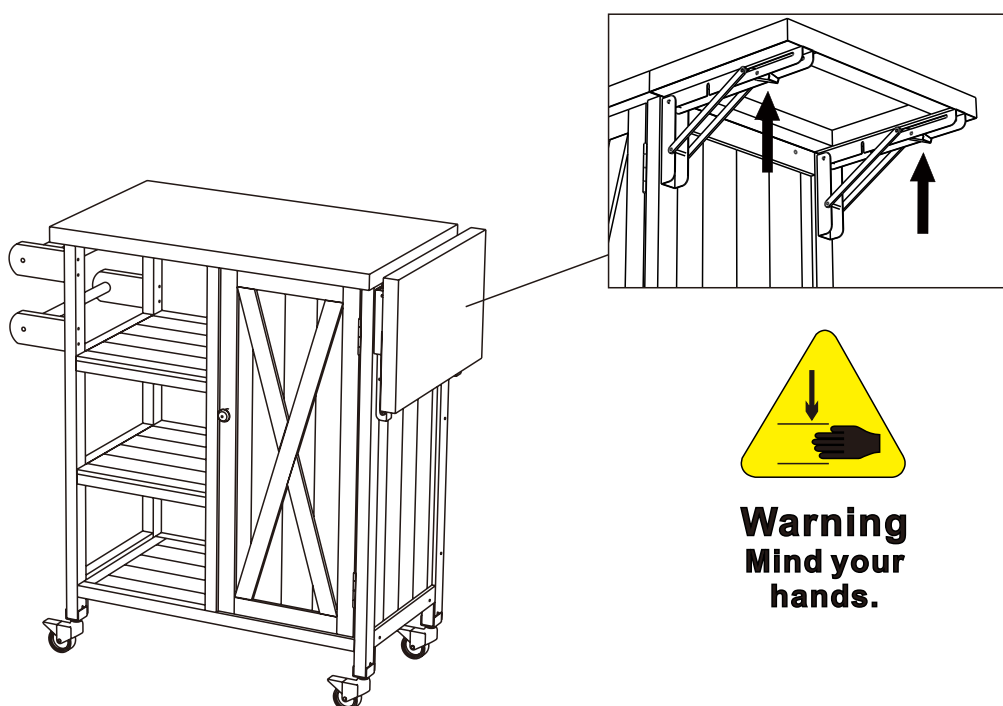

Warning
Mind your
hands.

19