

STORAGE CABINET

User Manual

INTRODUCTION

Thank you for choosing the Storage Cabinet. Please read this user manual carefully and keep it for future reference. If you need any assistance, please contact us by email with your order number and details.

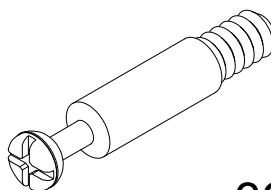
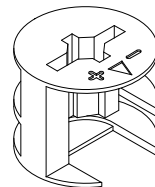
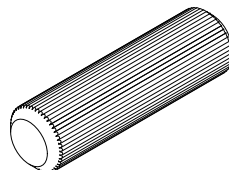
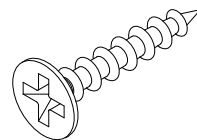


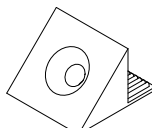
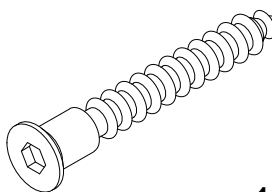
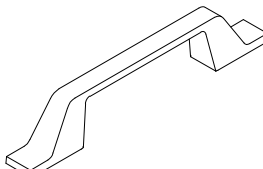
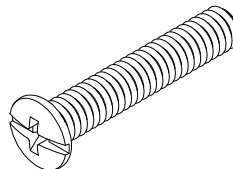
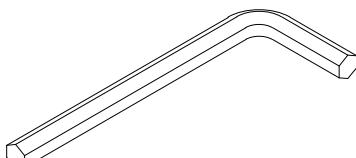
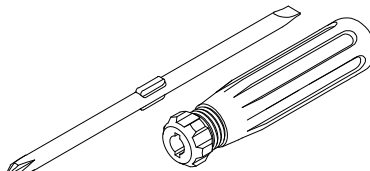
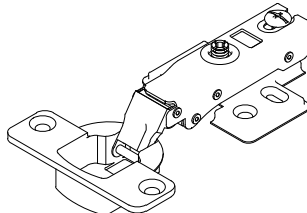
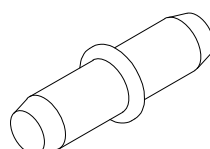
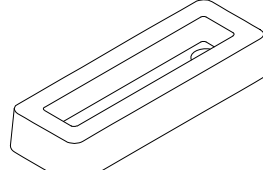


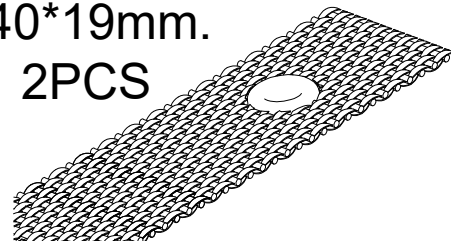


PACKAGE CONTENTS


- ☐ 1 x Storage Cabinet
- ☐ 1 x Pack of Accessories
- ☐ 1 x User Manual









PRODUCT CARE












- ☐ Please follow the instruction to assemble this item correctly.
- ☐ Don't make the screws be too loose or too tight.
- ☐ Please put the screws into the holes' position just as shown in the arrows of the image, and then clockwise rotate 90° or 180°
- ☐ More product parts, it is recommended that two people install
- ☐ The fittings pack contains small accessories that should be kept away from small children.

HARDWARE SUPPLIED


A. 6.5x35mm  39PCS	B. 15x9.8mm  39PCS	C. Ø6x30mm  22PCS	D. M3.5x14mm  64PCS	E. Ø13.8*18*4mm  4PCS
F.  F.1 20PCS	F.2  20PCS	G. #9.5xM5x46mm  10PCS	H. 142*10*27mm  4PCS	I. M4*16mm  8PCS
J. Φ4*57*21mm  1PC	K. 140mm  1PC	L.  10PCS	M. Φ5*7*17mm  4PCS	N. 37*13*7mm  1PC
O.1  Ø6x35mm. 2PCS	O.2  Ø8xM4x35mm. 2PCS	P.1 140*19mm. 2PCS 	P.2  Ø8xM4x16mm. 2PCS	P.3  Ø16xØ6x1mm. 4PCS

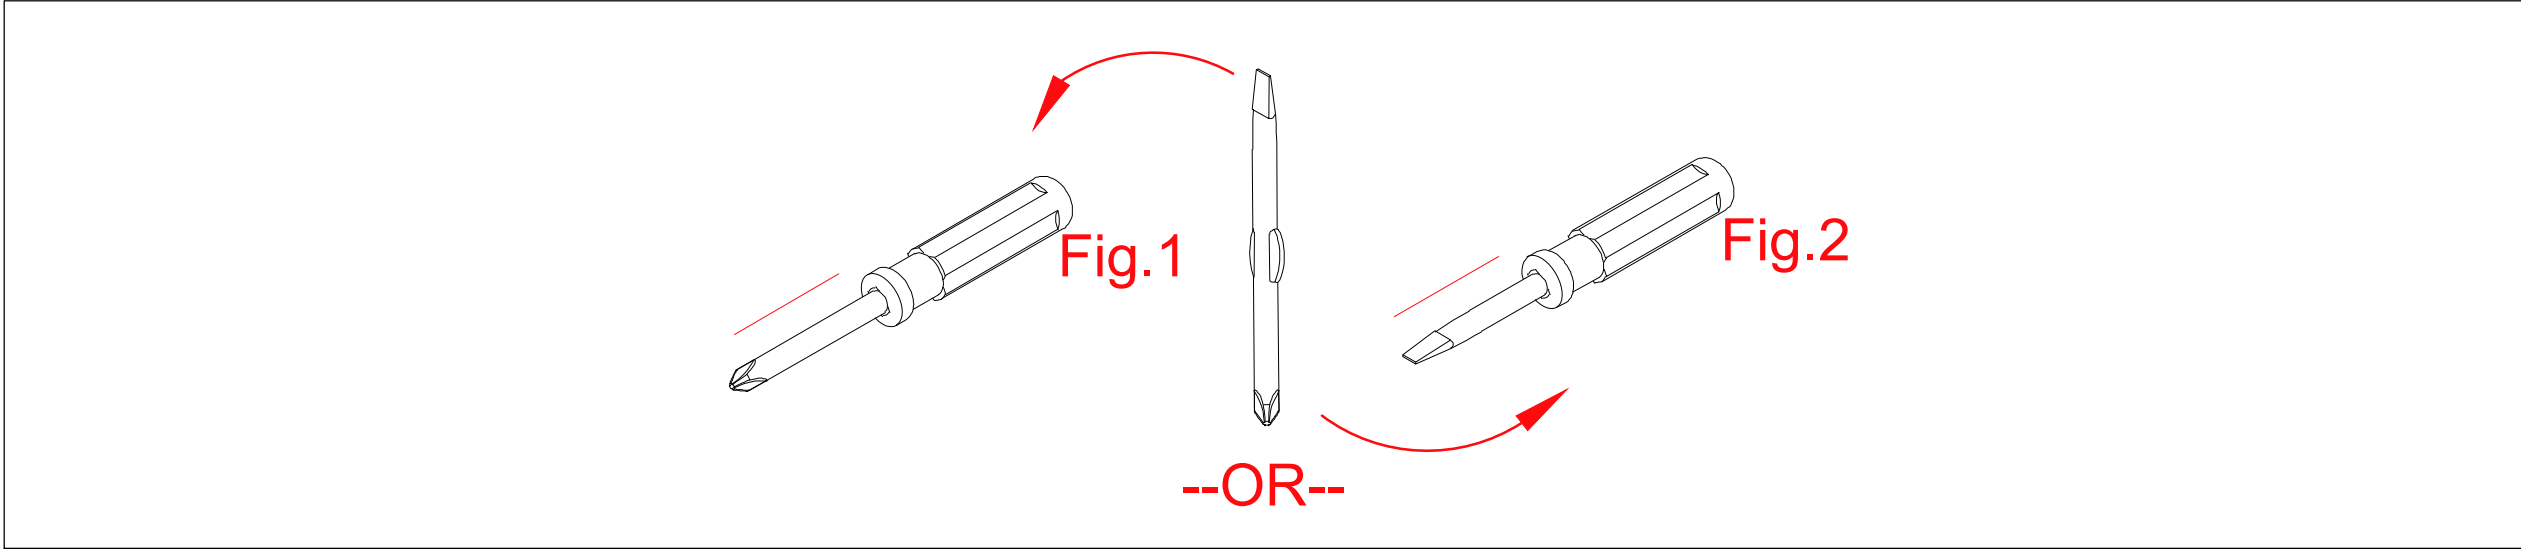

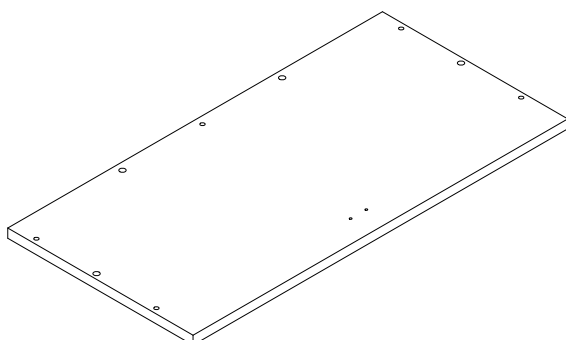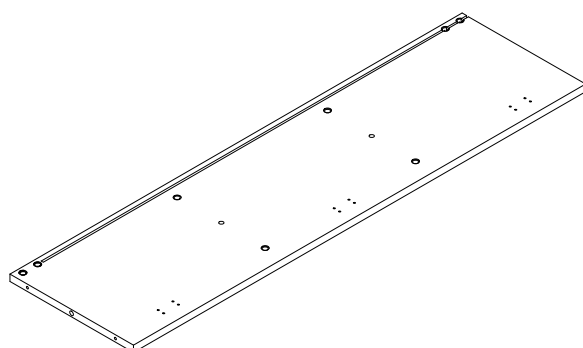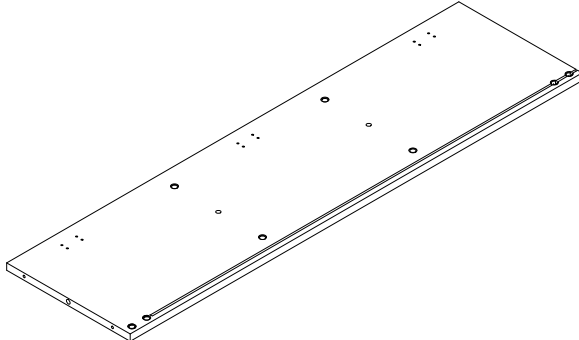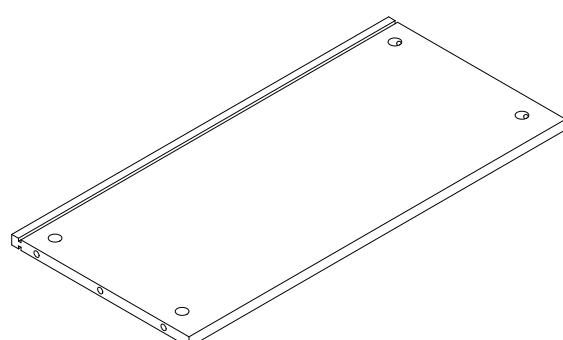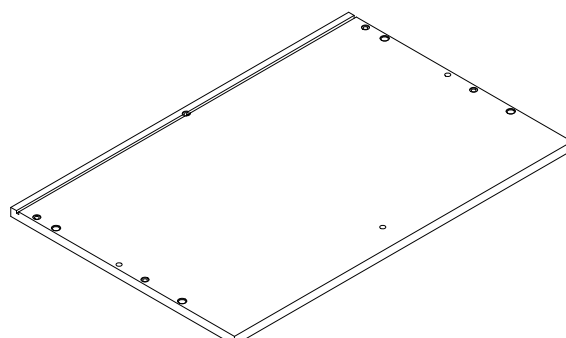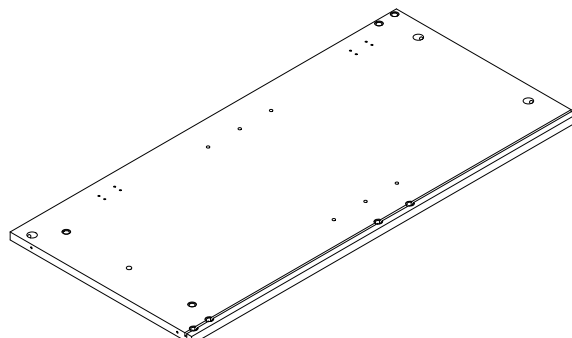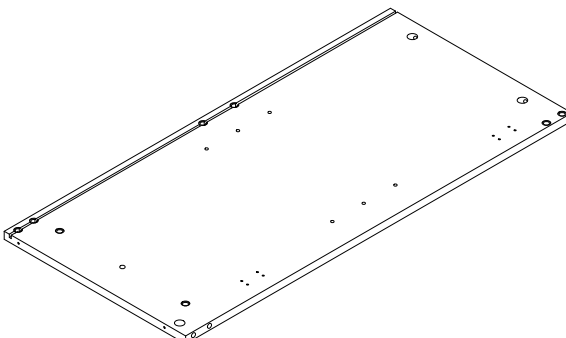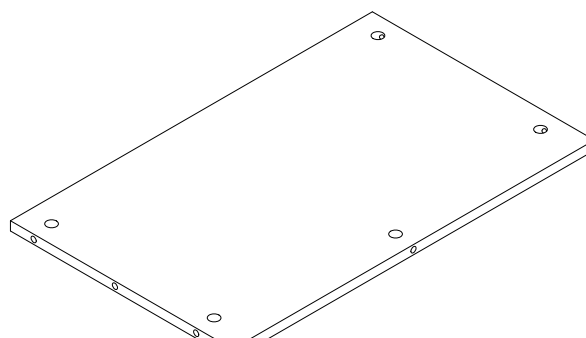PARTS LIST			
Unit: (mm)			
<div>1</div> <div>600*297</div> <div></div> <div>1PC</div>	<div>2</div> <div>986*269</div> <div></div> <div>1PC</div>	<div>3</div> <div>986*269</div> <div></div> <div>1PC</div>	<div>4</div> <div>568*268</div> <div></div> <div>2PCS</div>
<div>5</div> <div>600*397</div> <div></div> <div>1PC</div>	<div>6</div> <div>786*369</div> <div></div> <div>1PC</div>	<div>7</div> <div>786*369</div> <div></div> <div>1PC</div>	<div>8</div> <div>568*350</div> <div></div> <div>1PC</div>

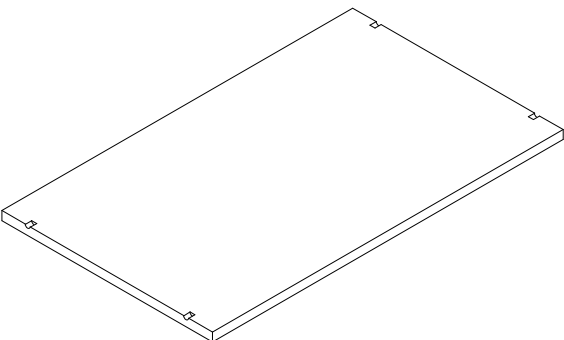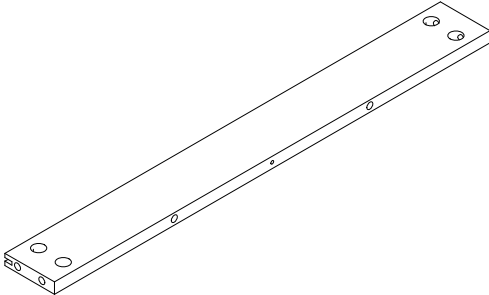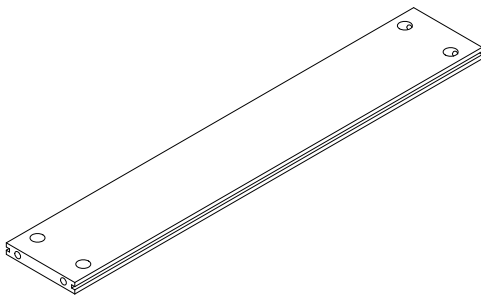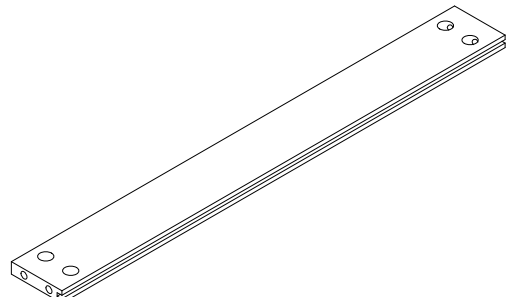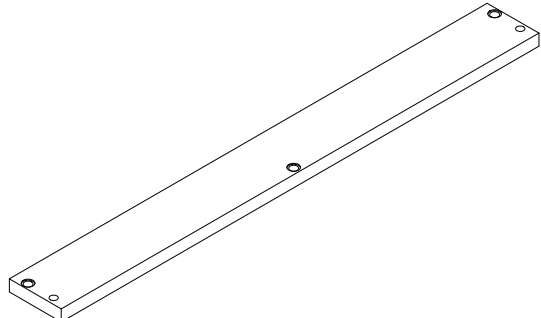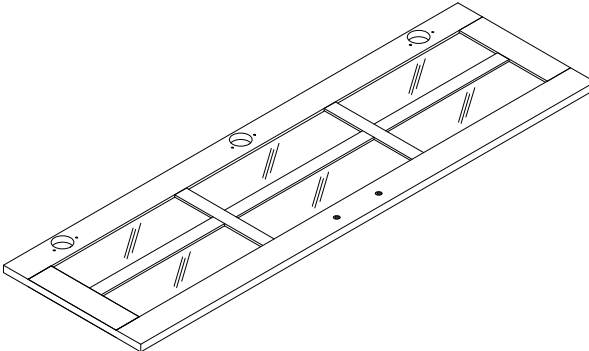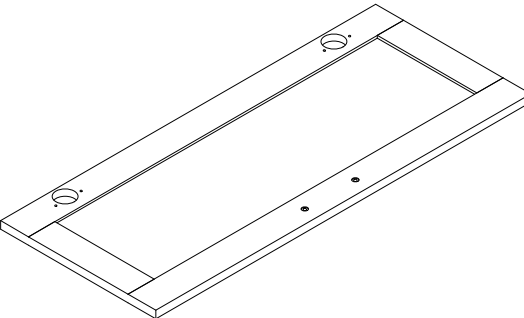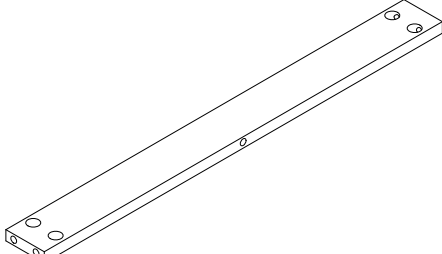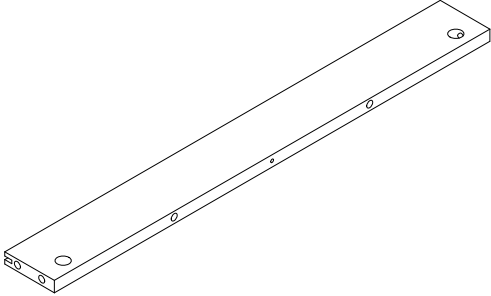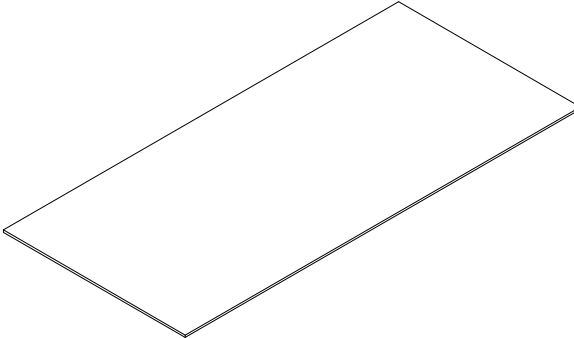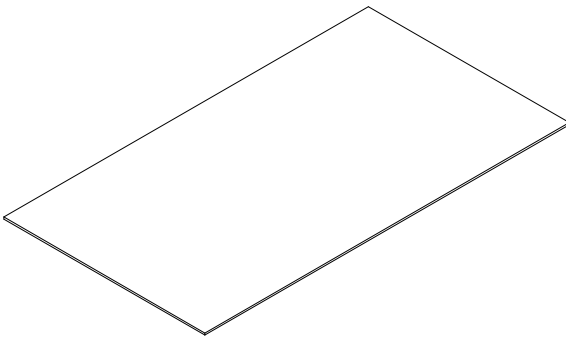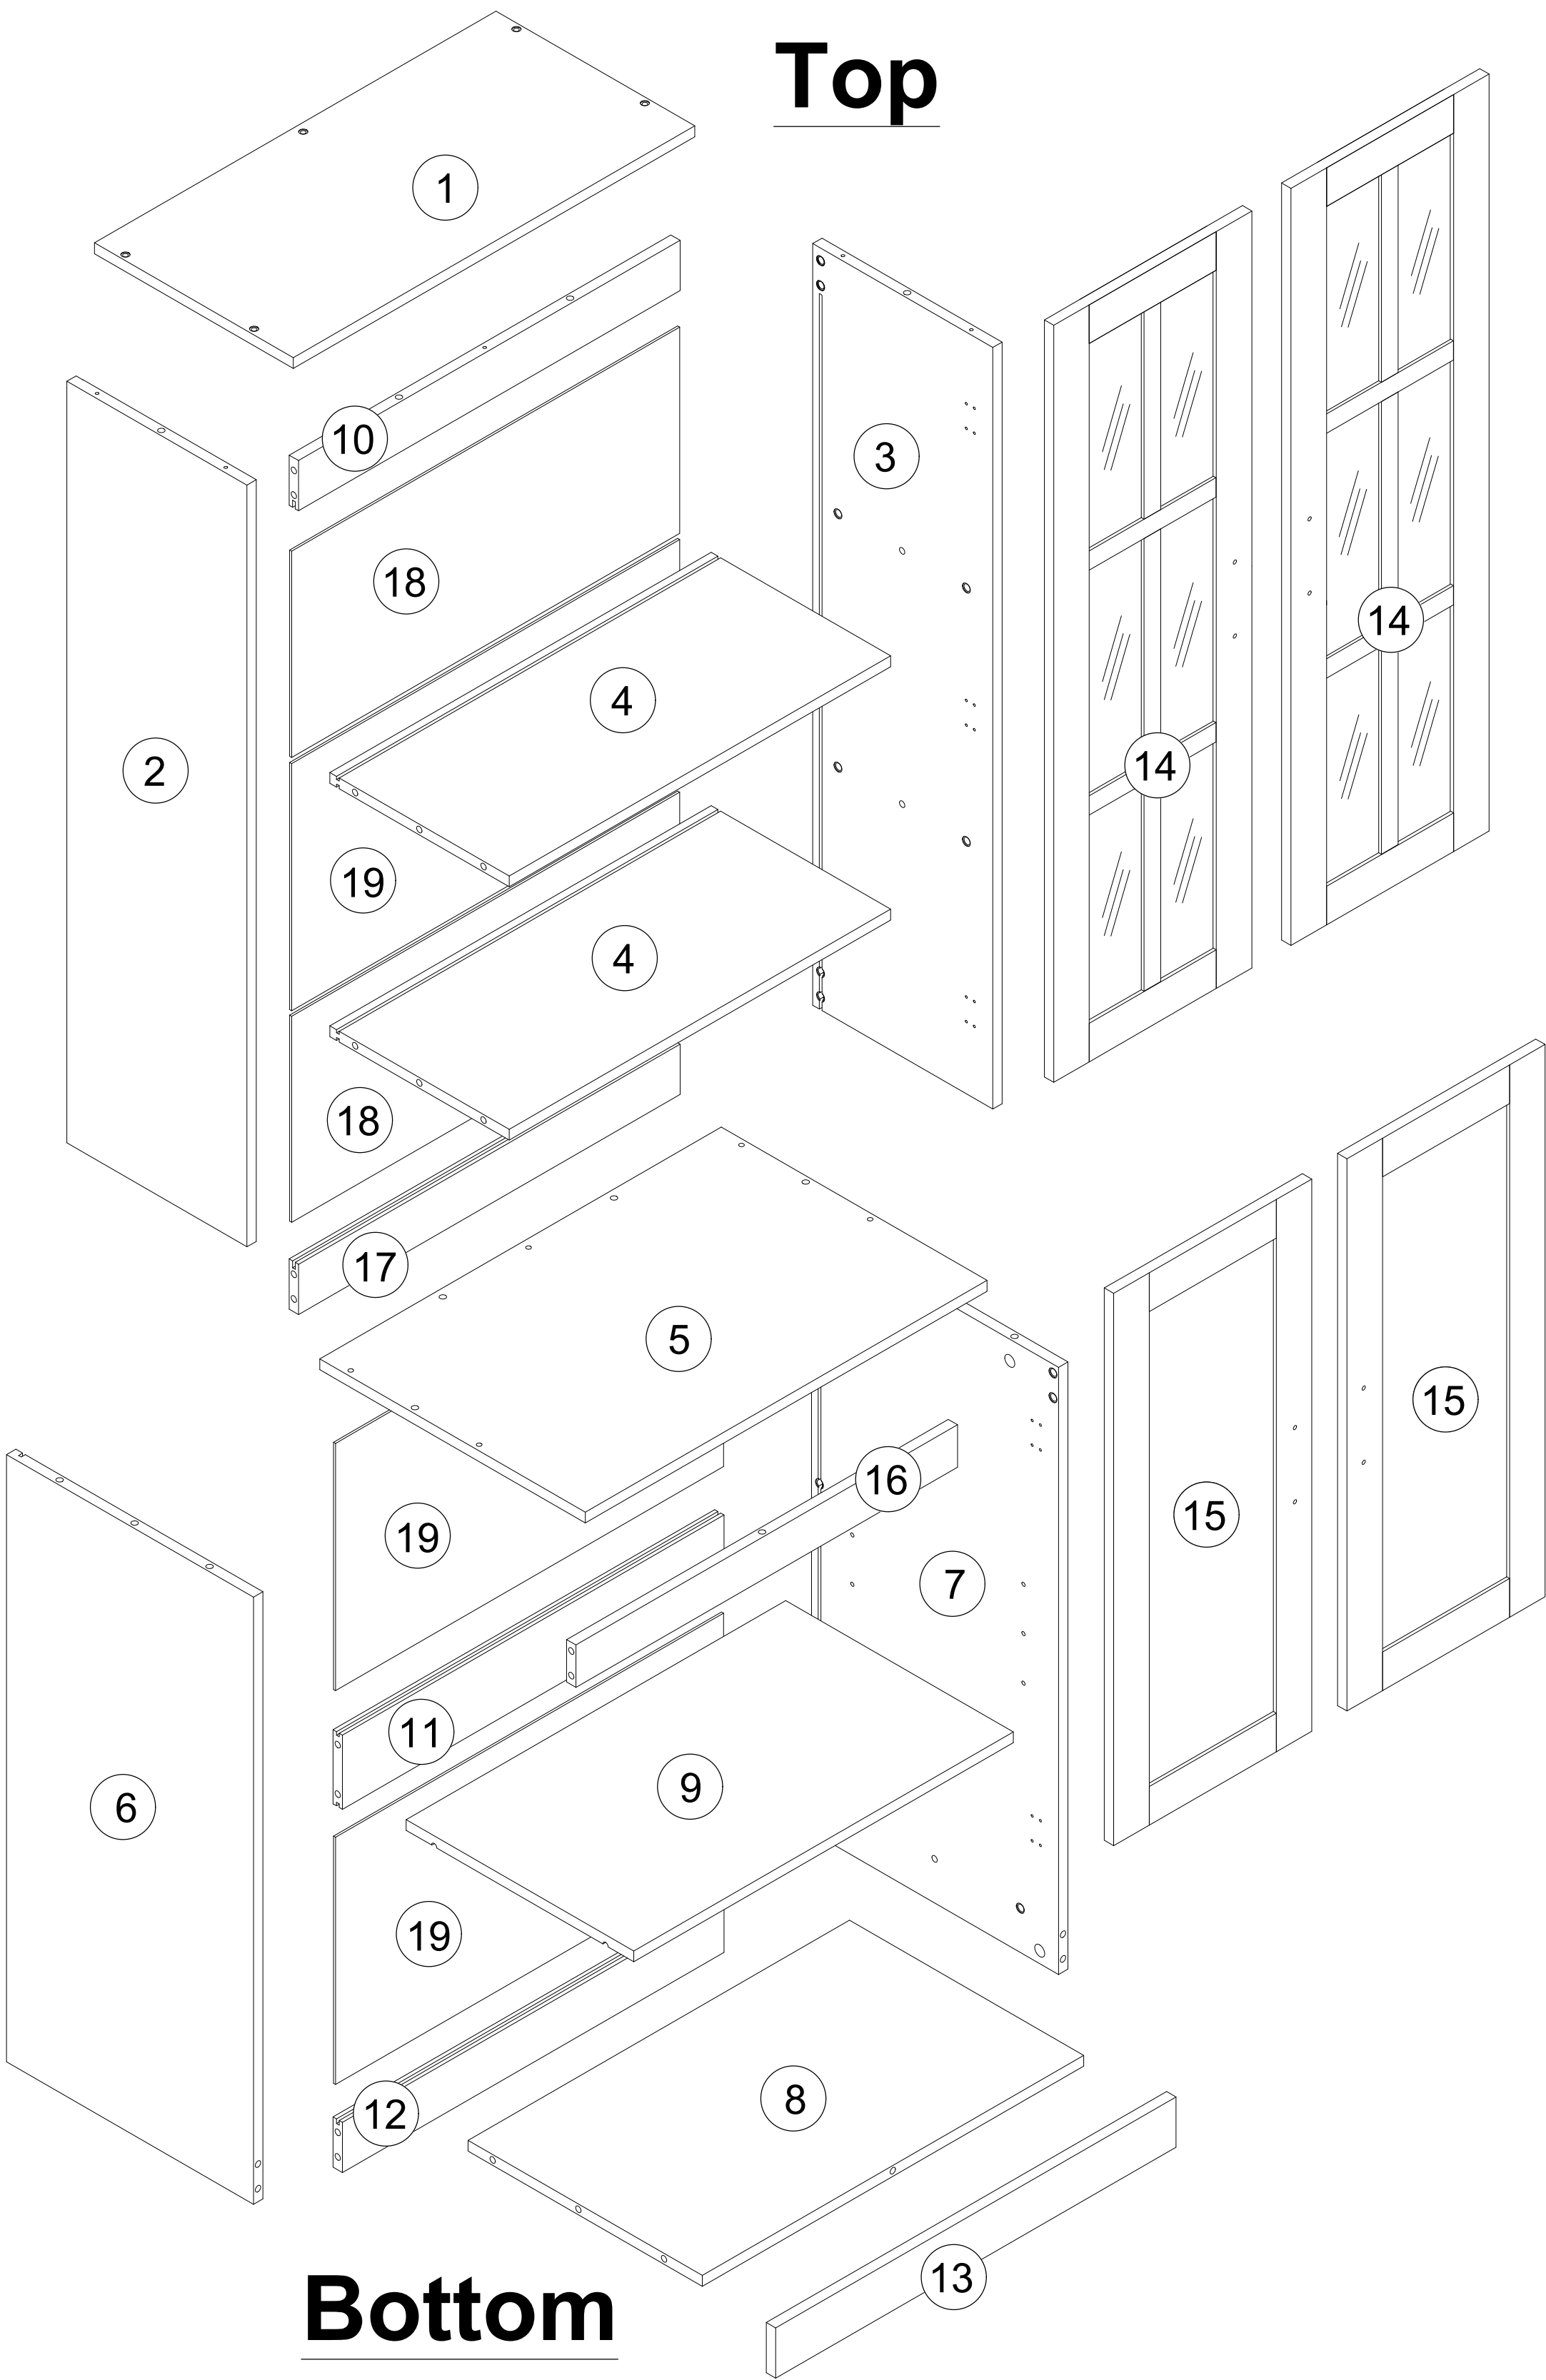
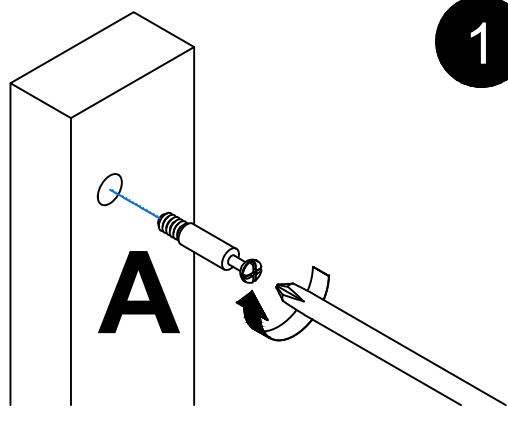
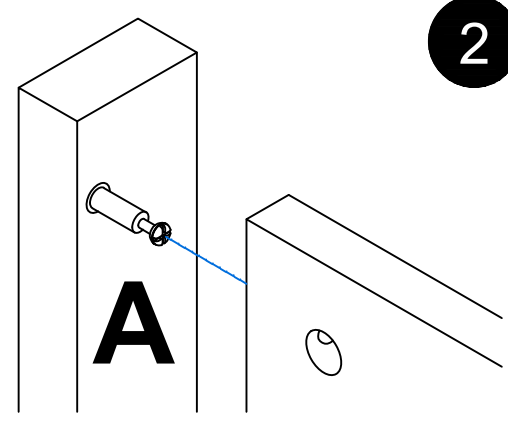
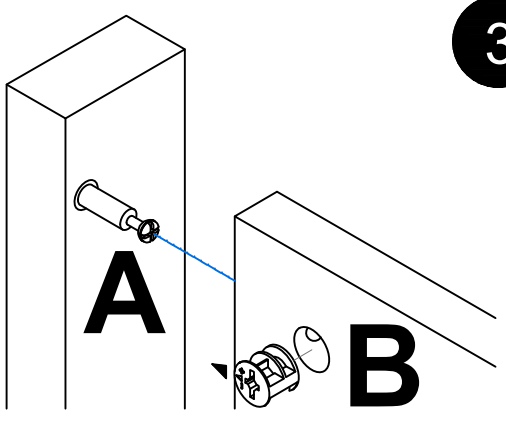
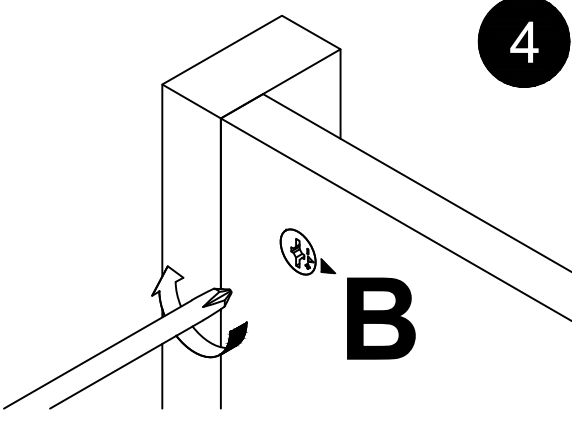
<p>9 565*340</p>  <p>1PC</p>	<p>10 568*65</p>  <p>1PC</p>	<p>11 568*96</p>  <p>1PC</p>	<p>12 568*65</p>  <p>1PC</p>
<p>13 598*65</p>  <p>1PC</p>	<p>14 980*296.5</p>  <p>2PCS</p>	<p>15 715*296.5</p>  <p>2PCS</p>	<p>16 568*55</p>  <p>1PC</p>
<p>17 568*65</p>  <p>1PC</p>	<p>18 578*267</p>  <p>2PCS</p>	<p>19 578*320</p>  <p>3PCS</p>	

PANEL LAYOUT



Top

Bottom


<p>HOW TO</p>  <p>Cam lock</p> <p>Cam bolt</p>	<p>1</p>  <p>A</p> <p>1. Screw Cam Bolt into panel</p>	<p>2</p>  <p>A</p> <p>2. Insert Cam Bolt into bolt hole of joining panel.</p>	<p>3</p>  <p>A B</p> <p>3. Insert Cam Lock with arrow facing bolt.</p>	<p>4</p>  <p>B</p> <p>4. Gently turn Cam Lock 180° clockwise to lock into position.</p>
---------------------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

1

YOU WILL NEED

A x14

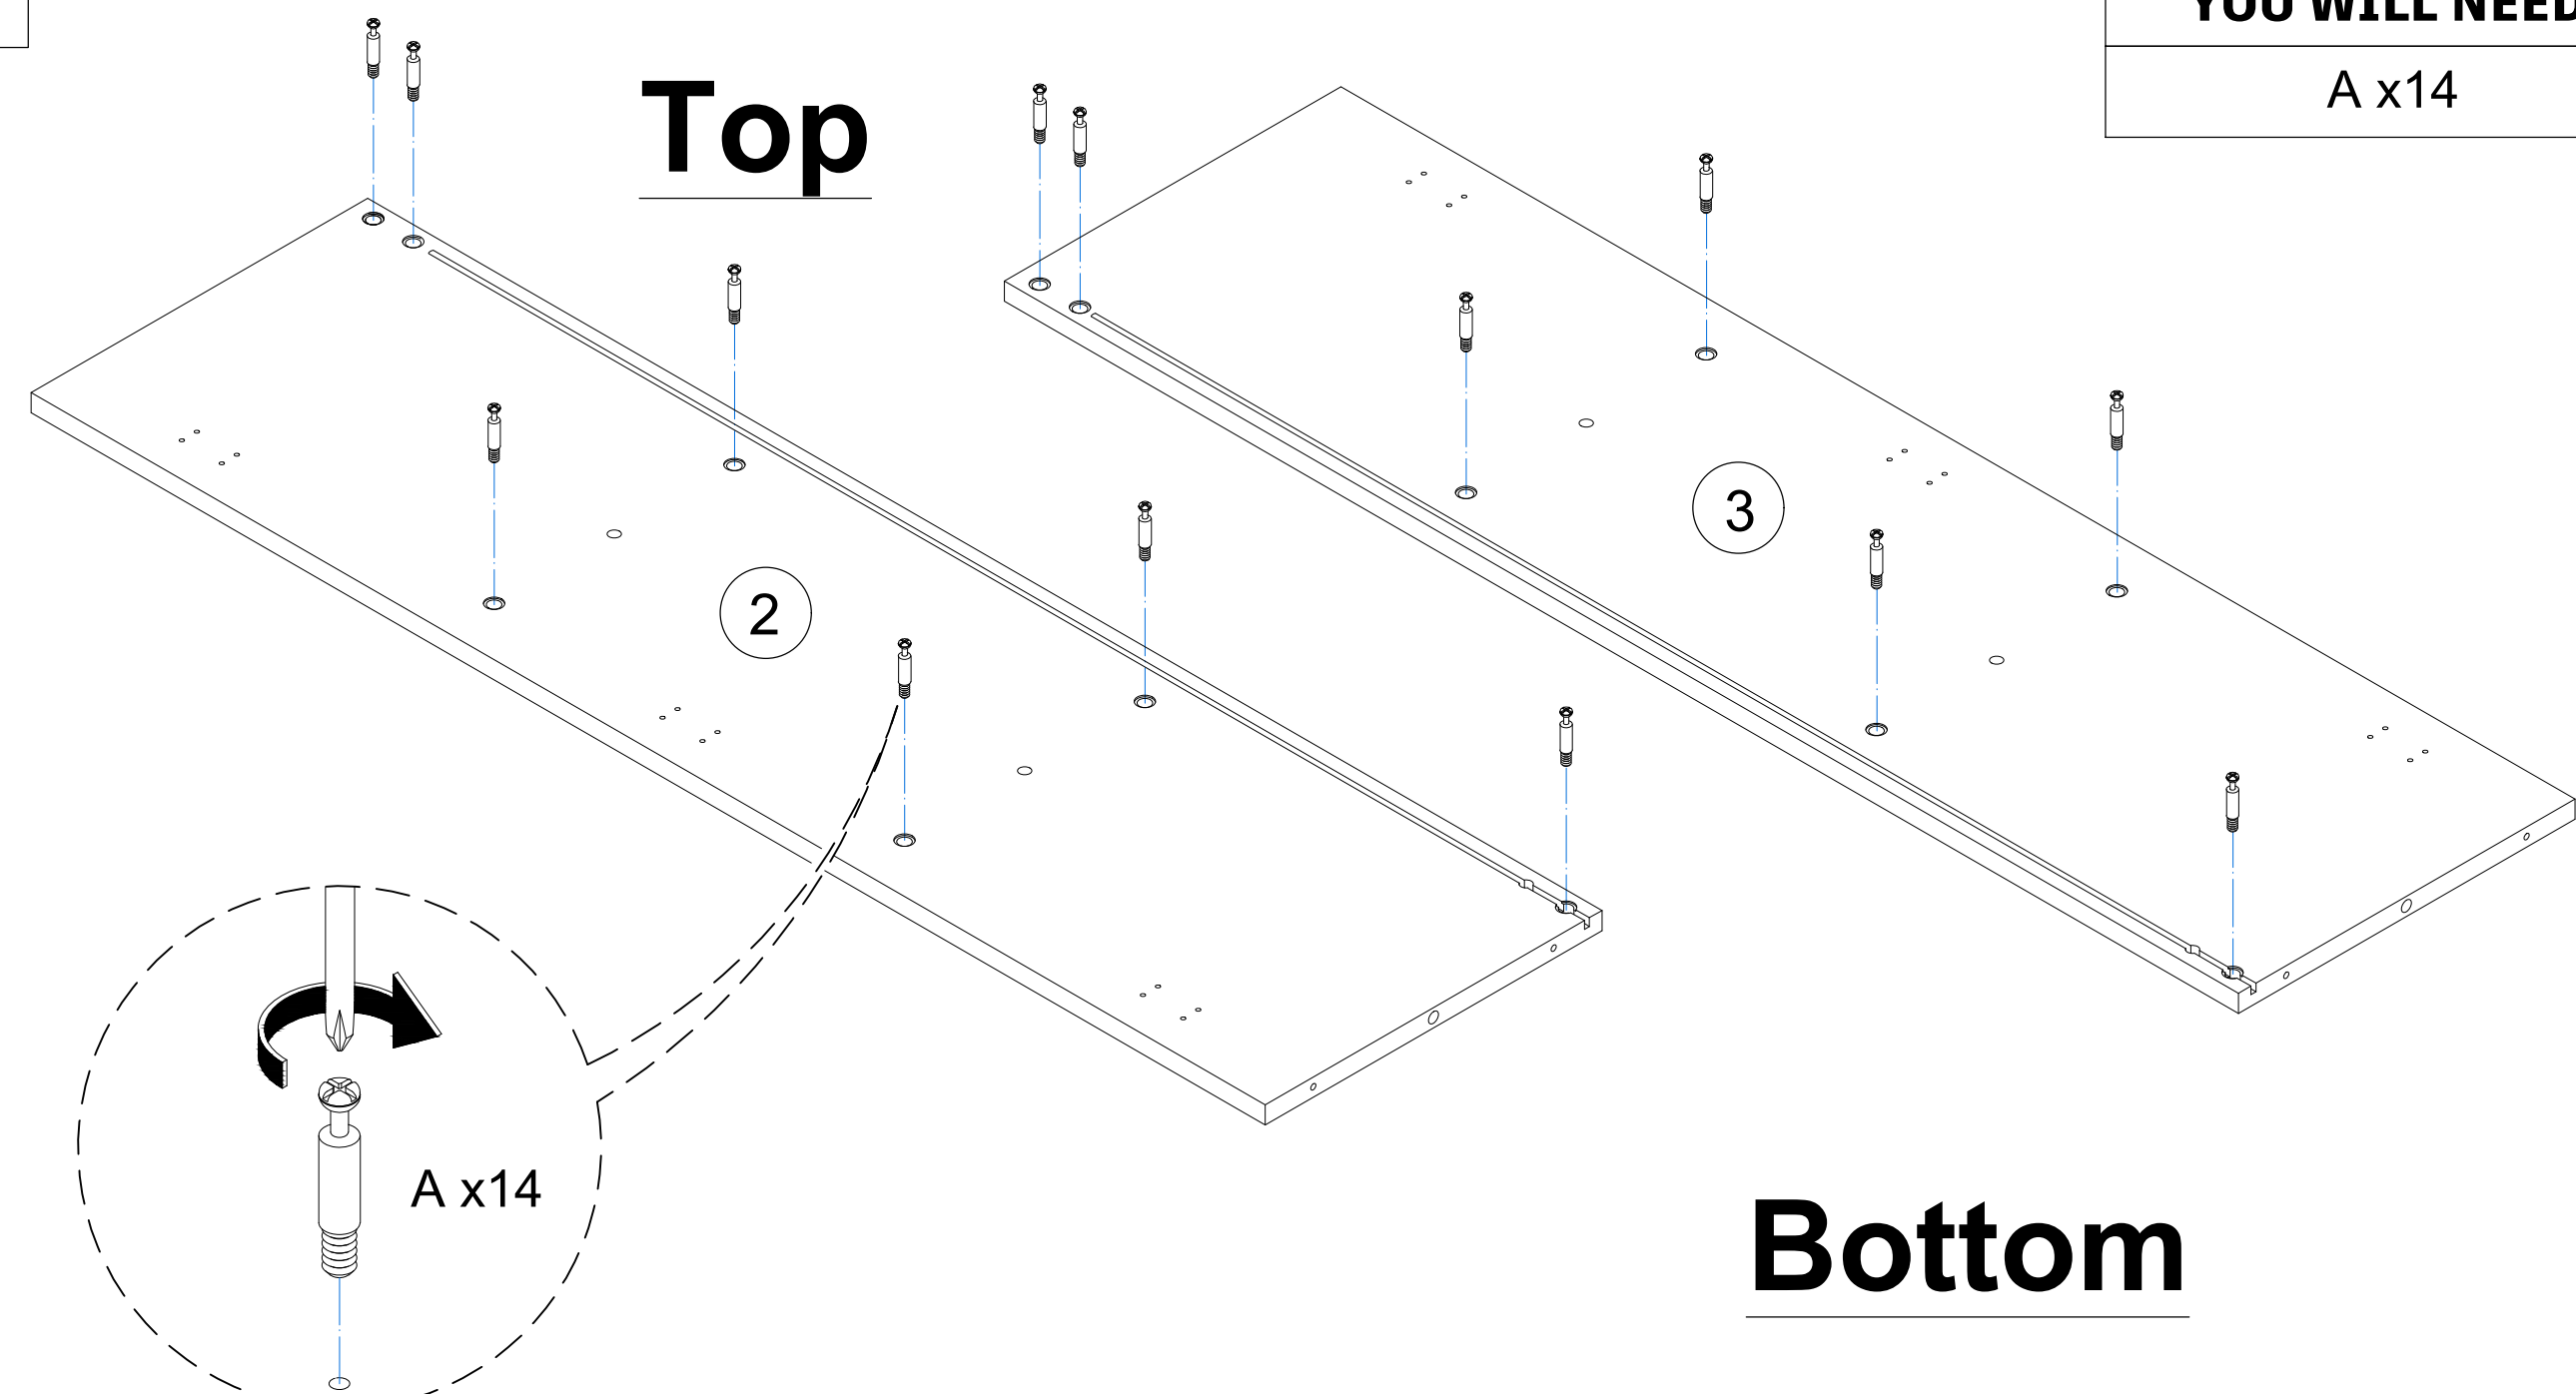Top



Bottom

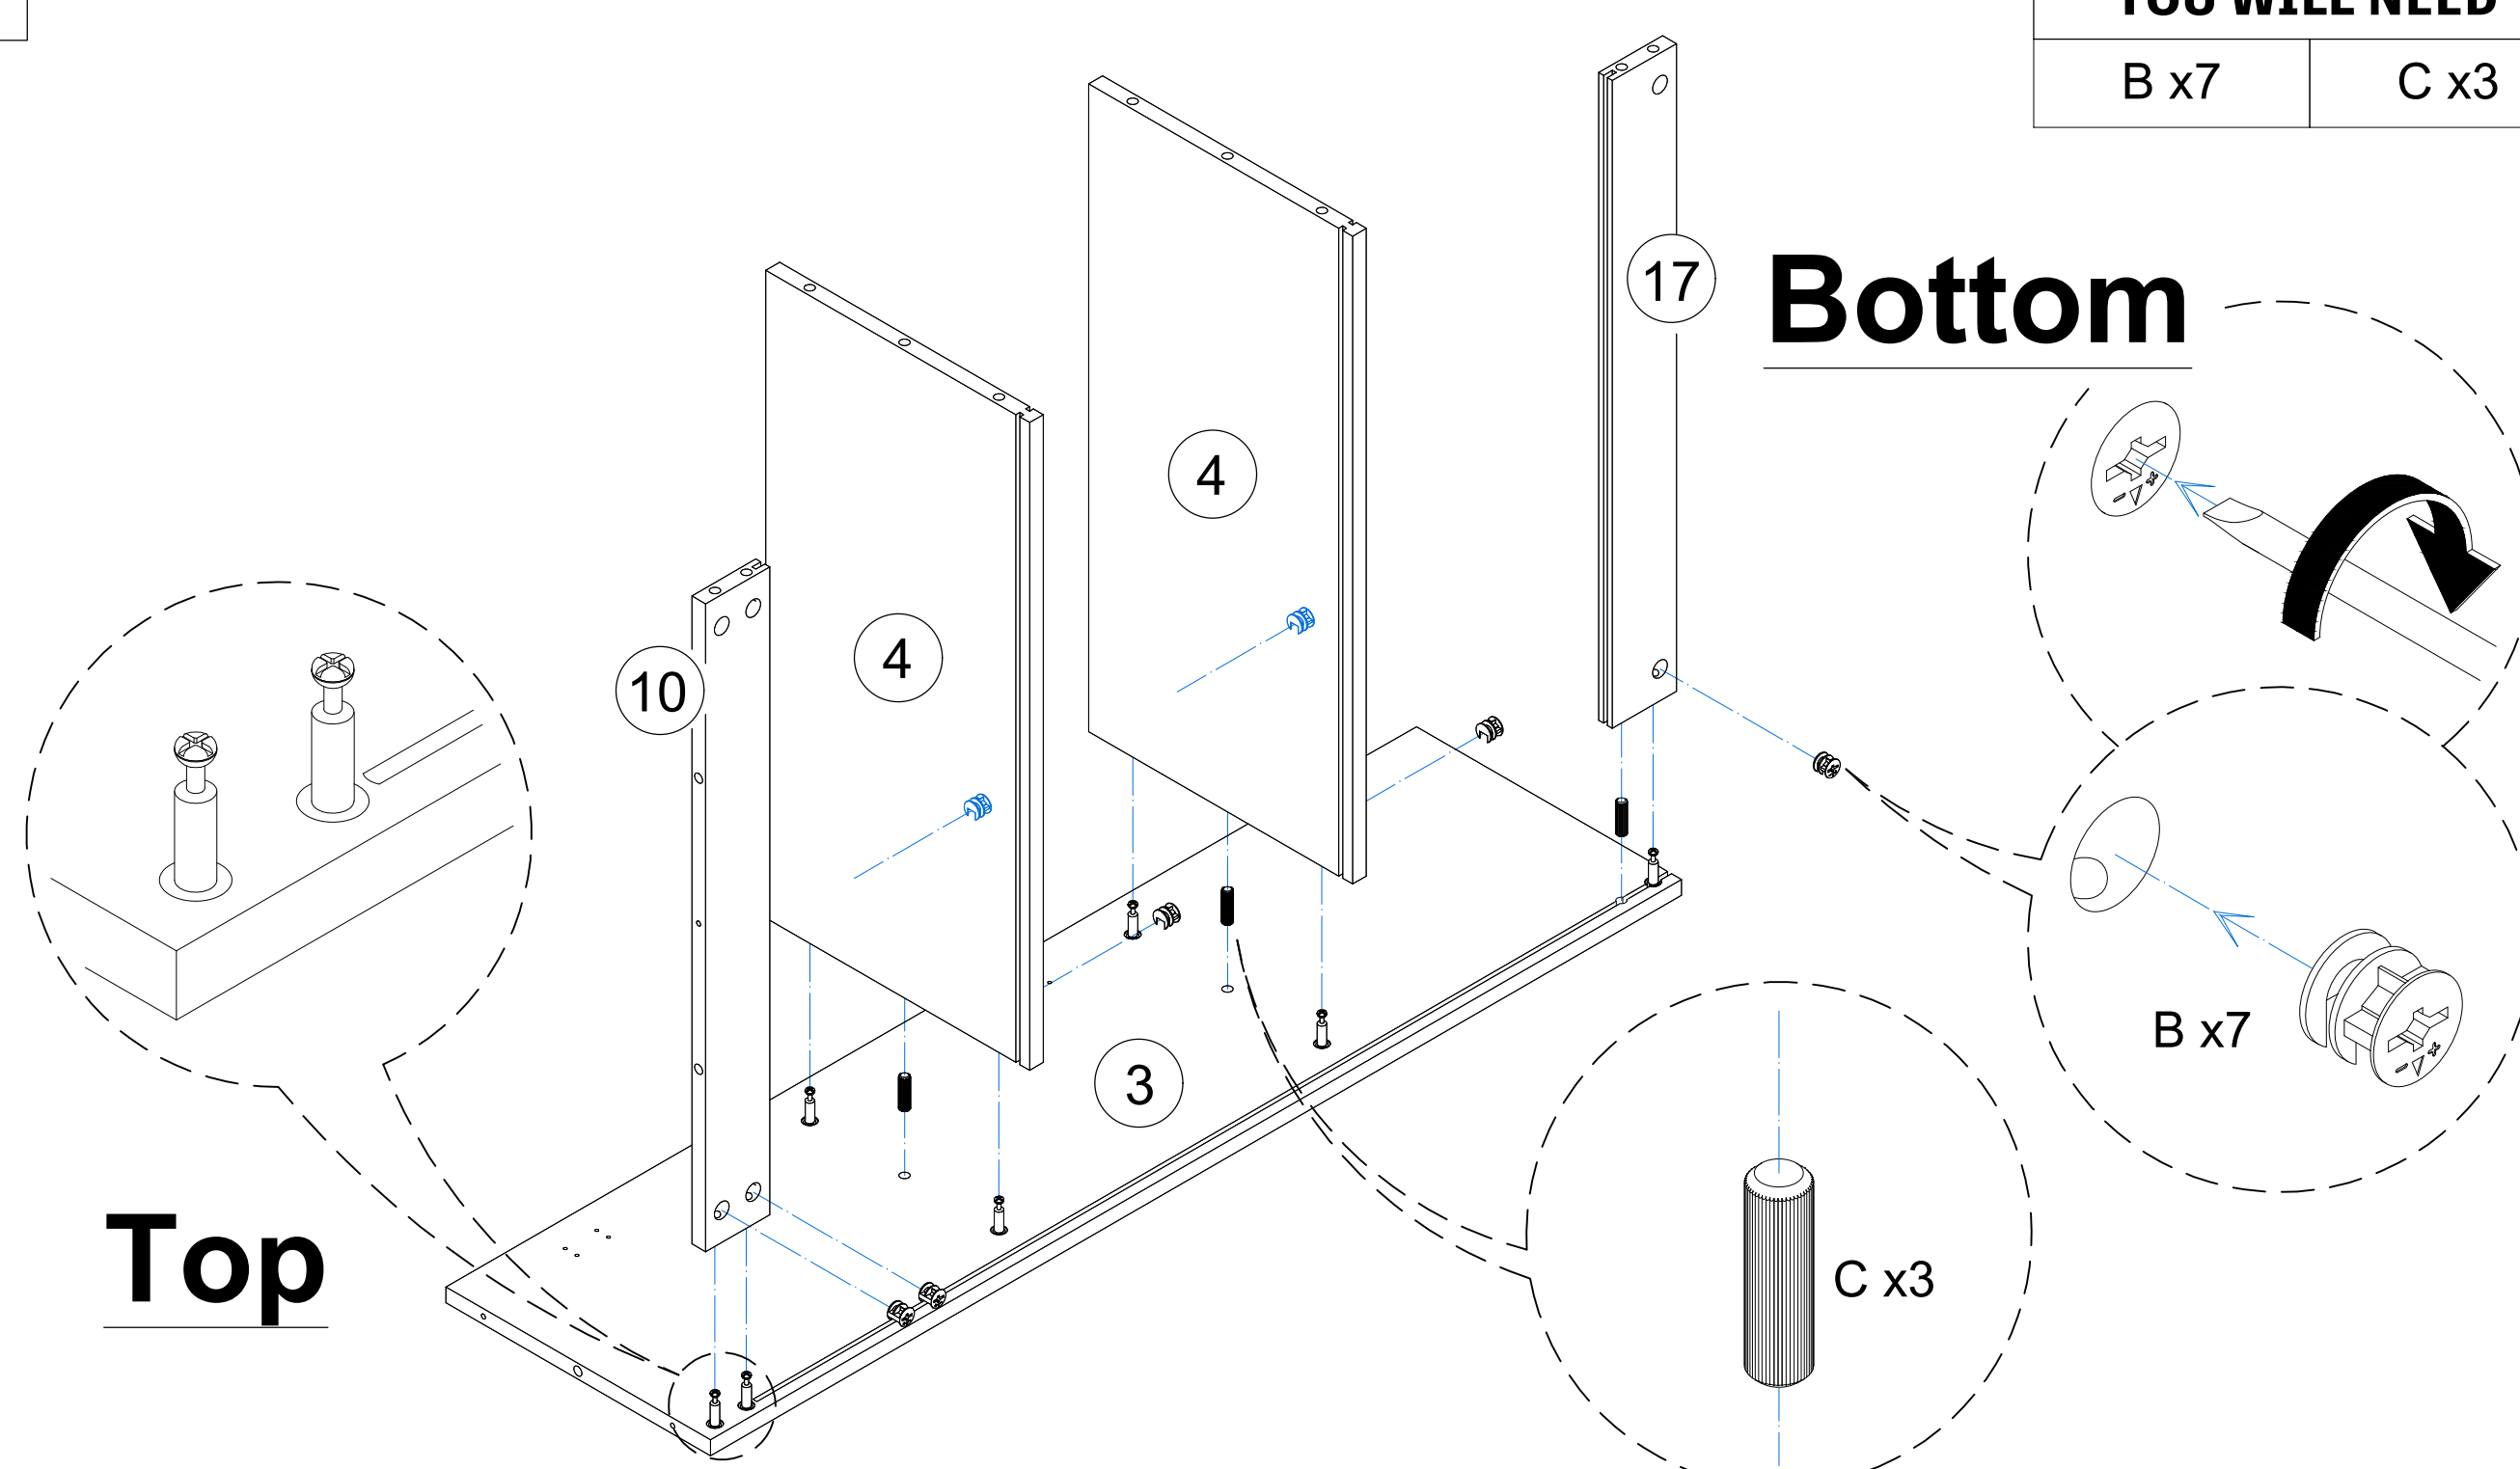
2

YOU WILL NEED


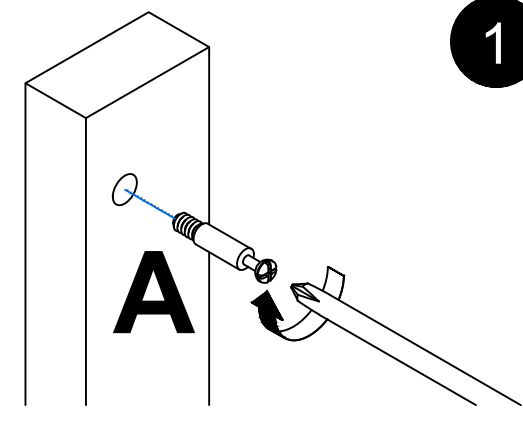
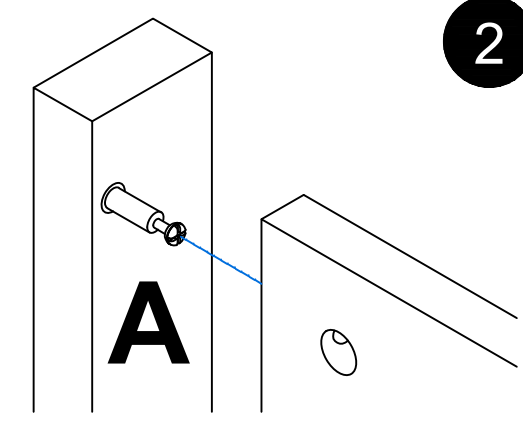
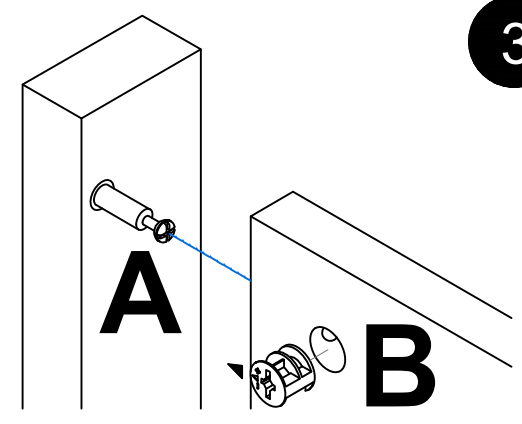
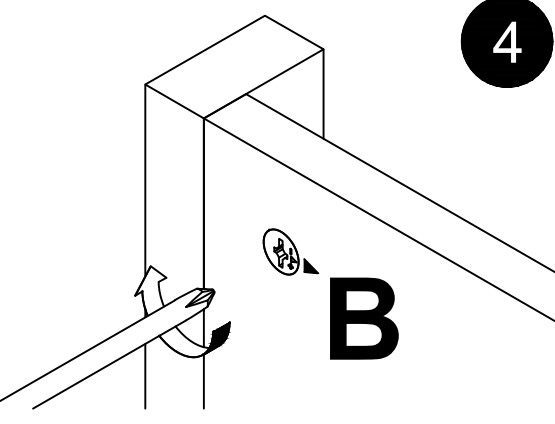
B x7



C x3

Top




Bottom

<p>HOW TO</p>  <p>Cam lock</p> <p>Cam bolt</p>	<p>1</p>  <p>A</p> <p>1. Screw Cam Bolt into panel</p>	<p>2</p>  <p>A</p> <p>2. Insert Cam Bolt into bolt hole of joining panel.</p>	<p>3</p>  <p>A B</p> <p>3. Insert Cam Lock with arrow facing bolt.</p>	<p>4</p>  <p>B</p> <p>4. Gently turn Cam Lock 180° clockwise to lock into position.</p>
---------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

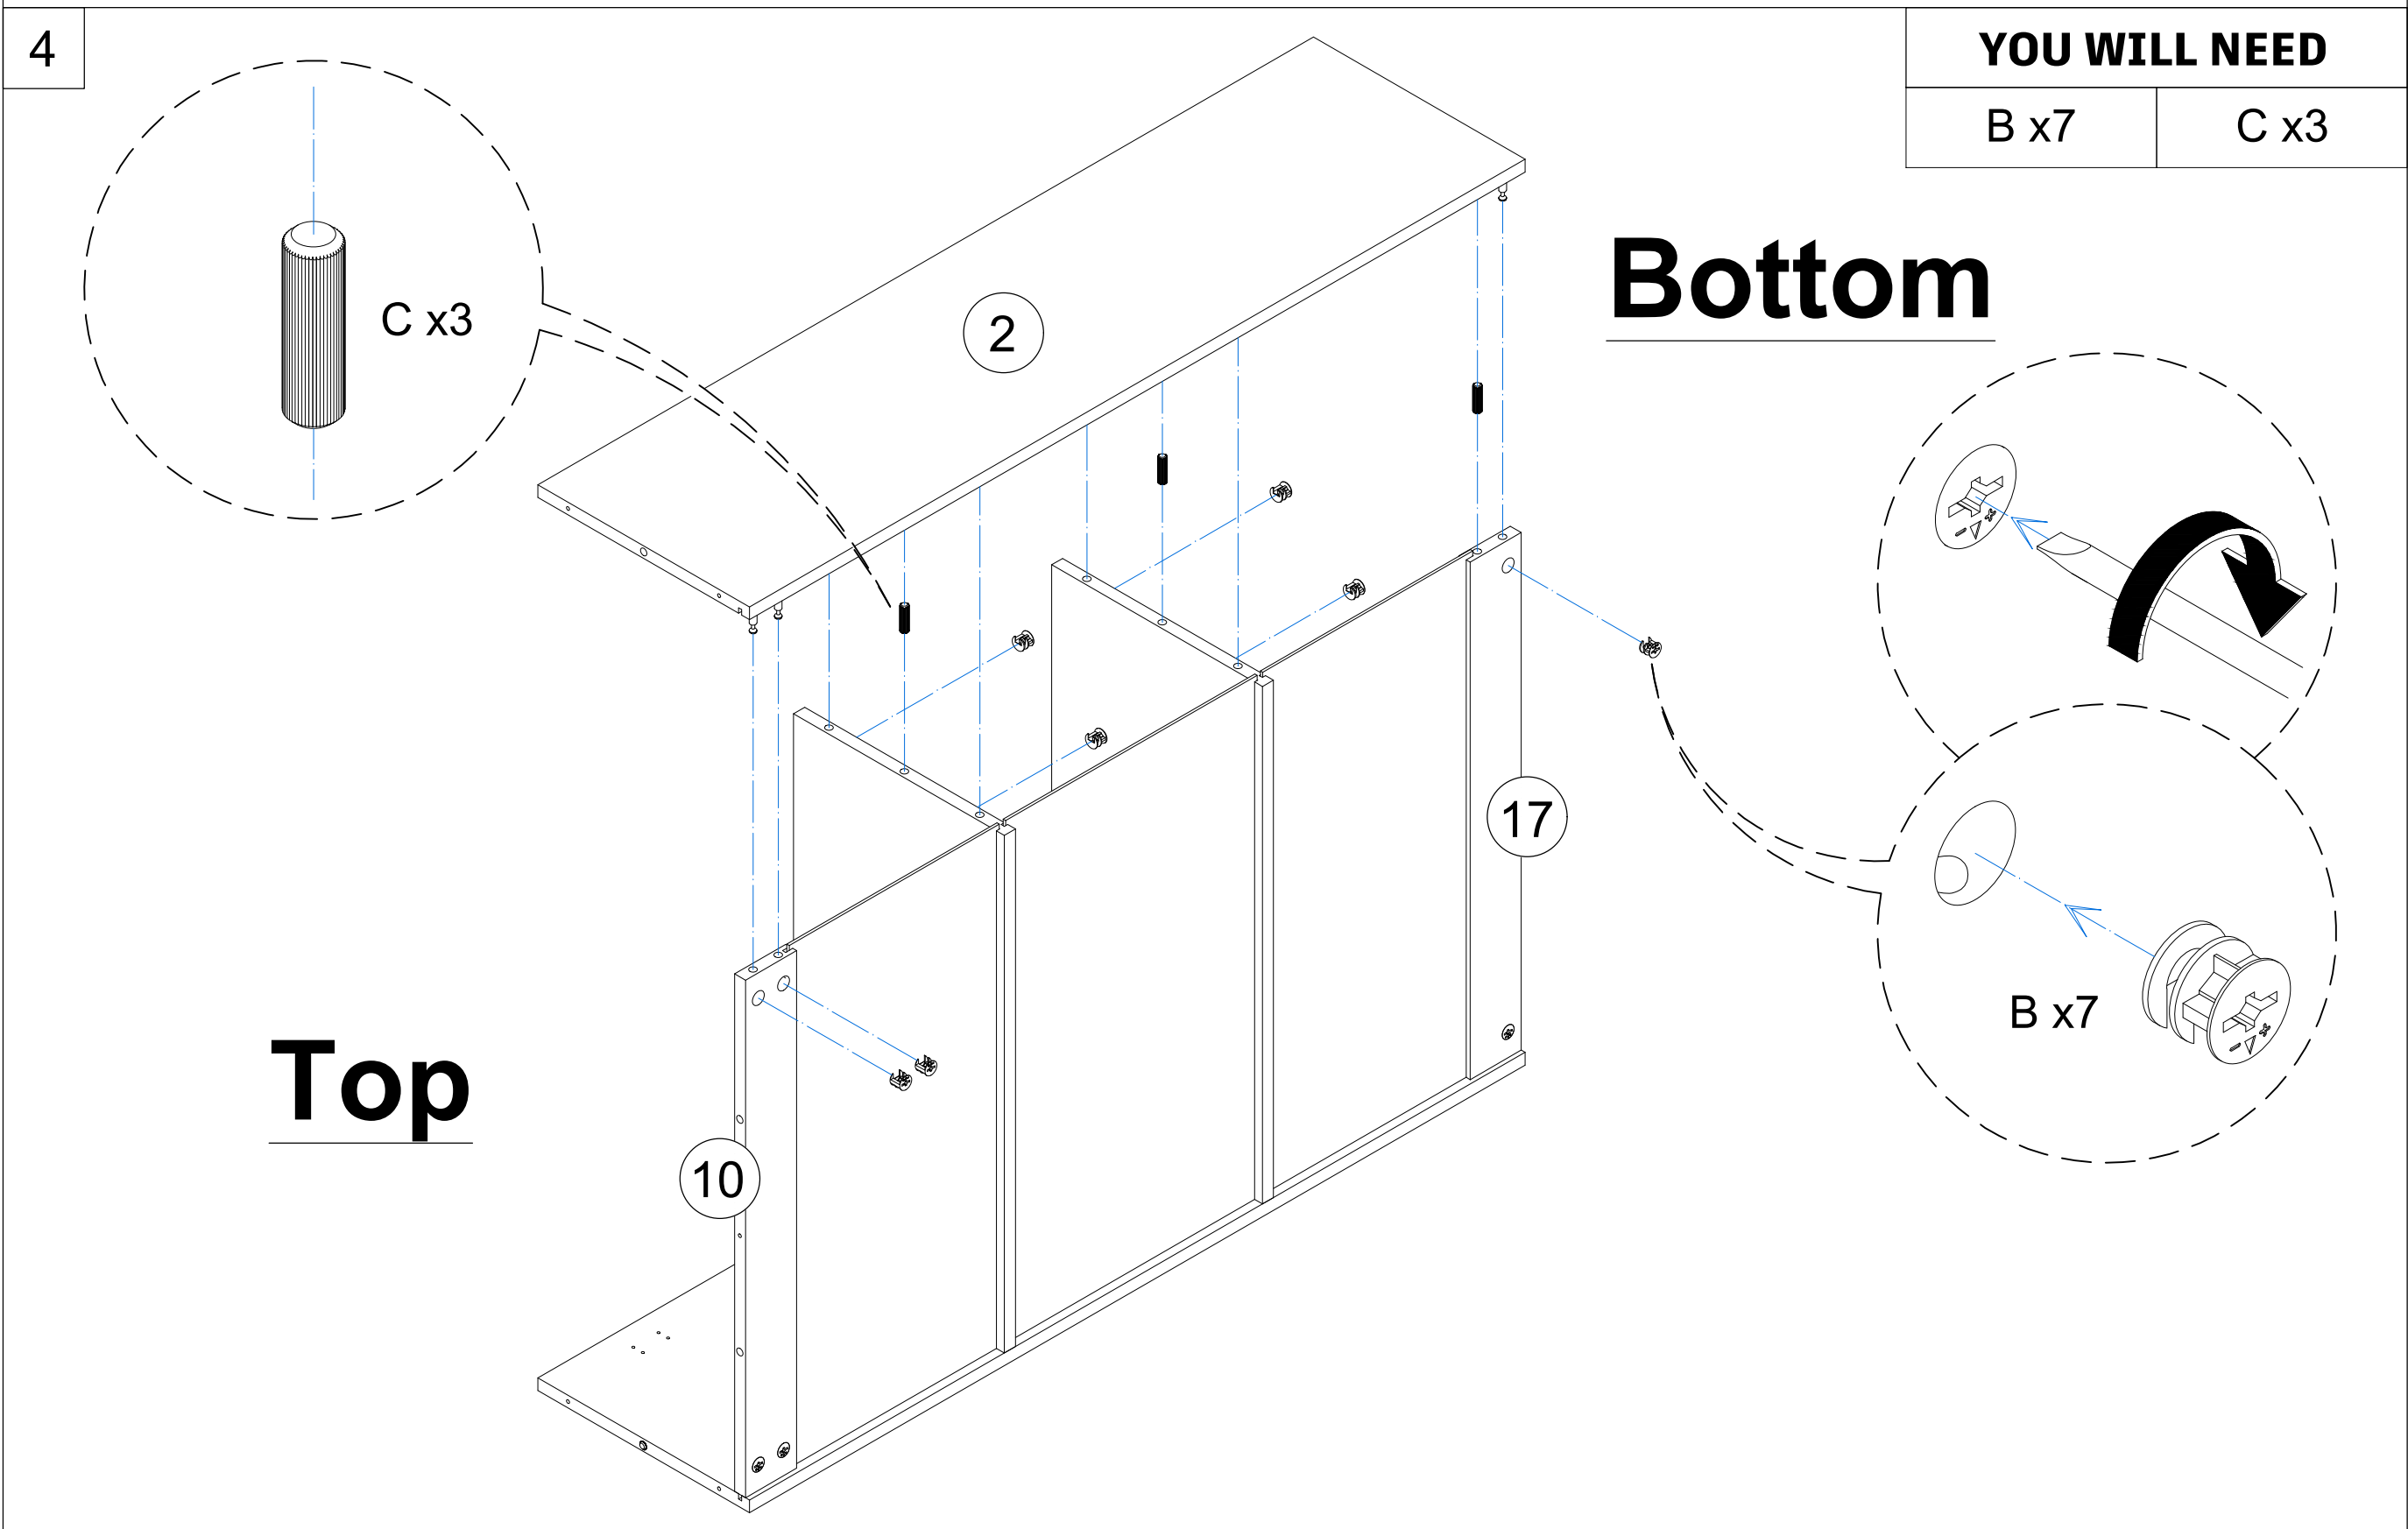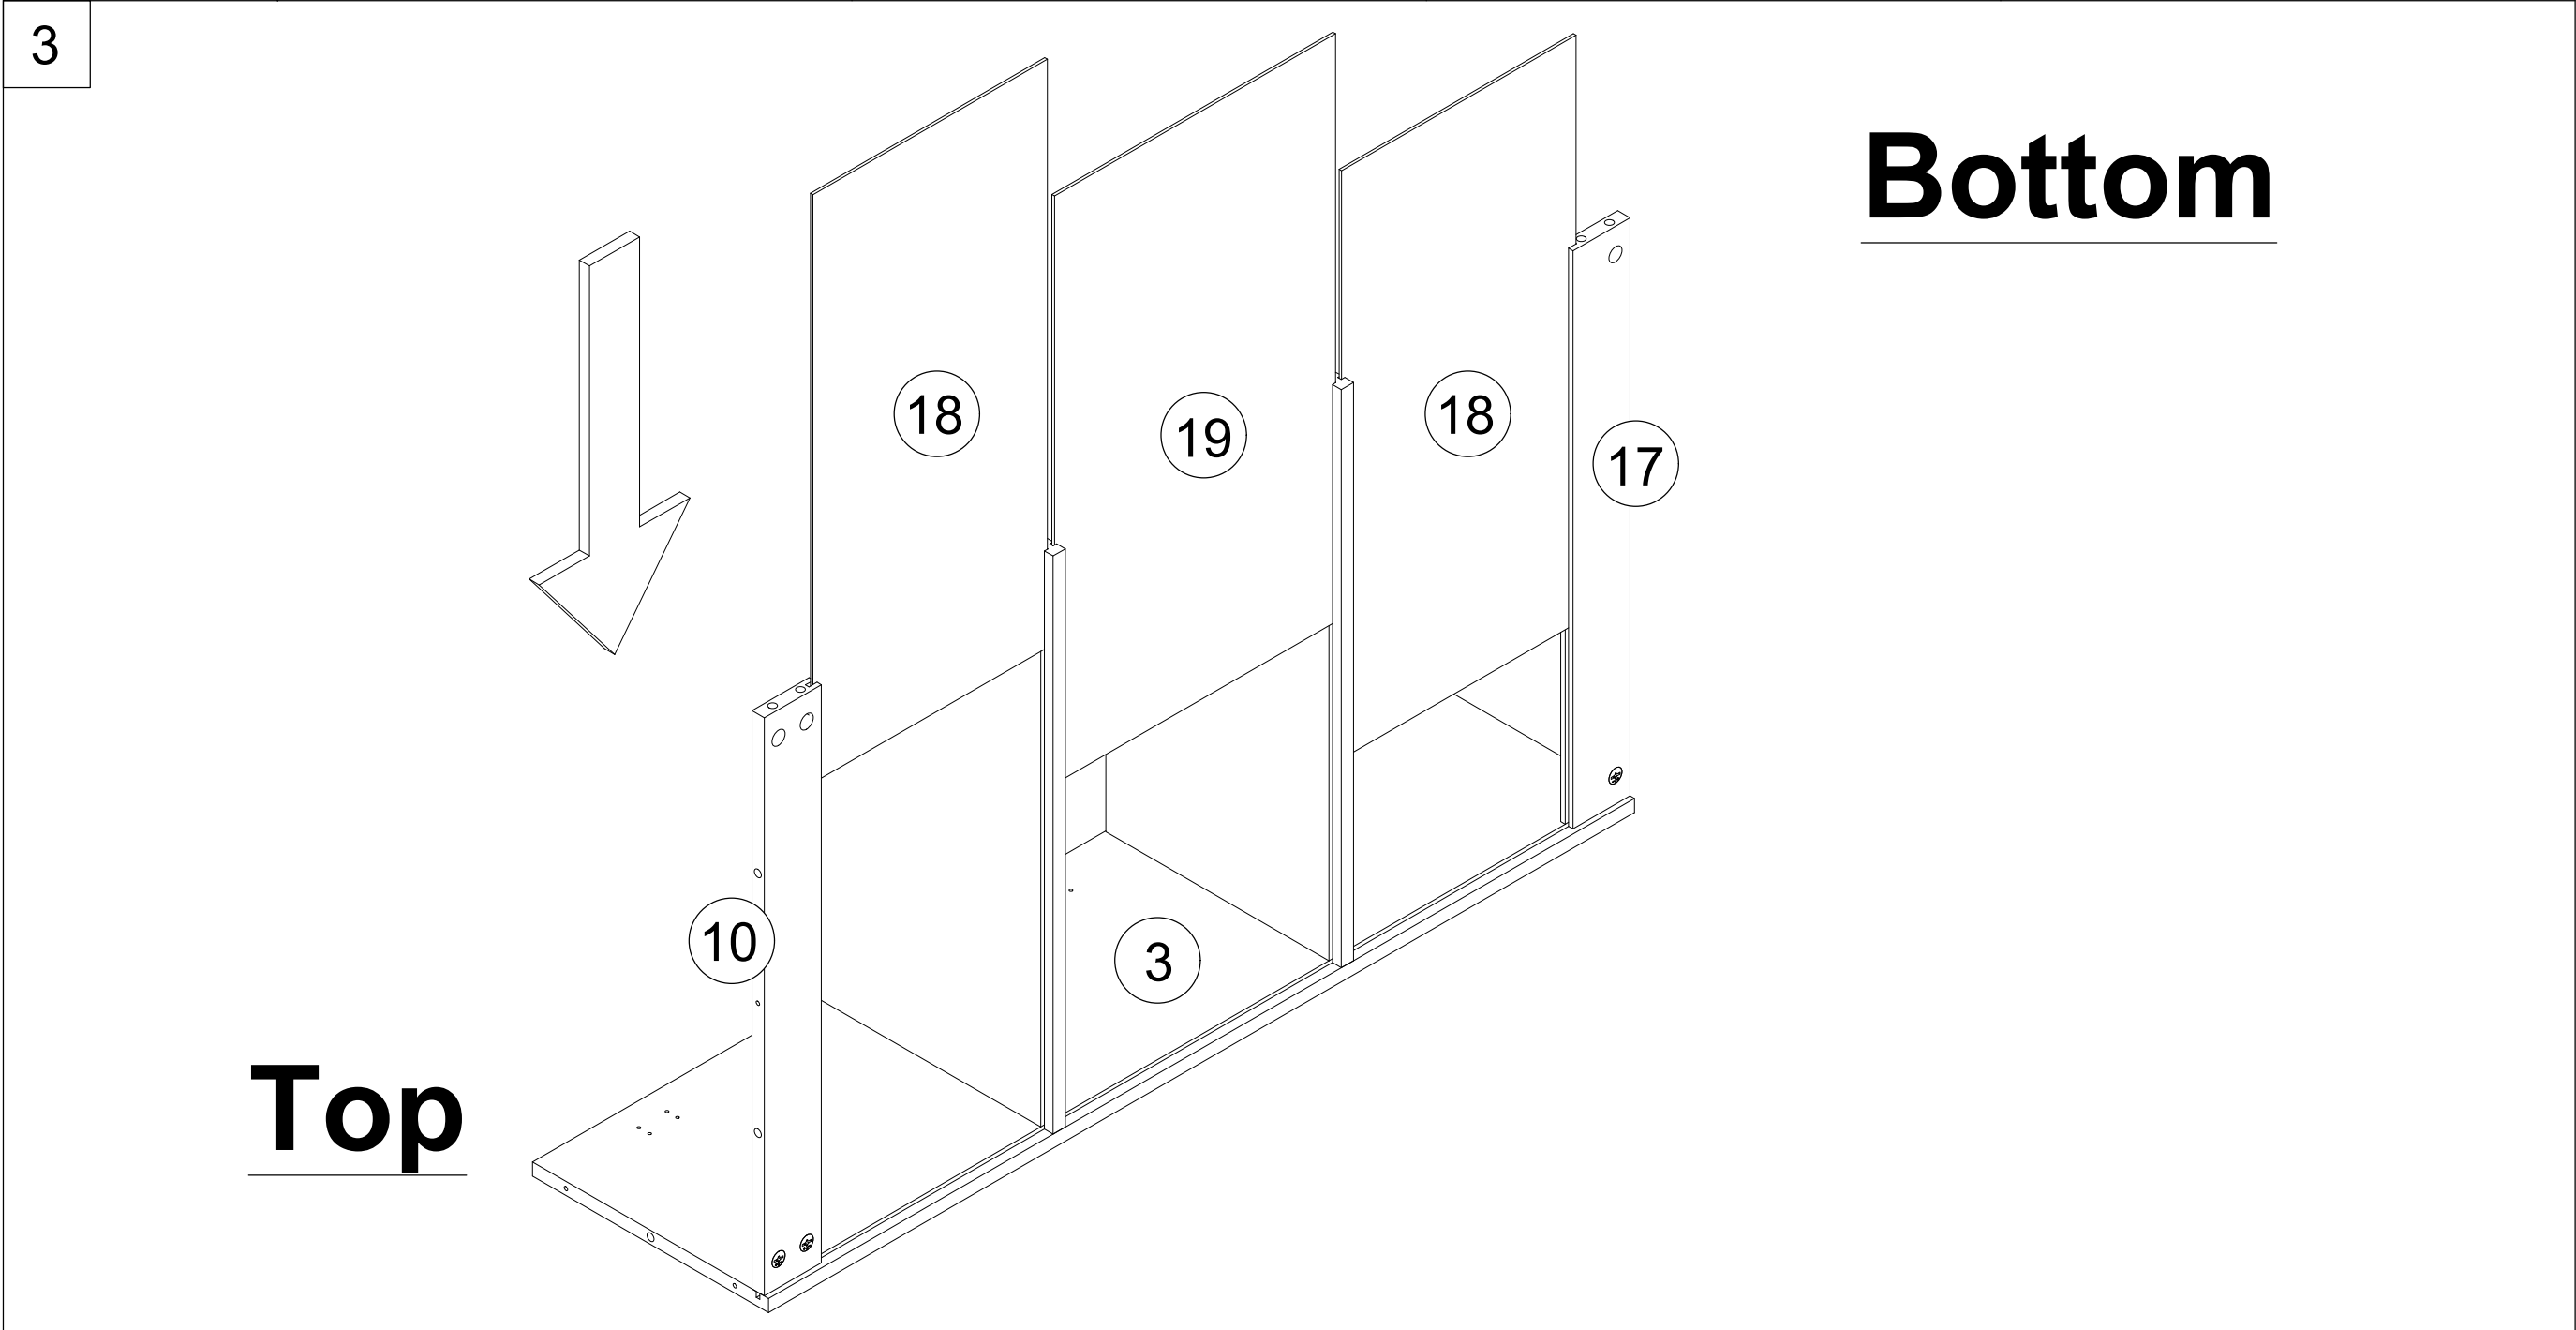


5

YOU WILL NEED	
D x2	N x1

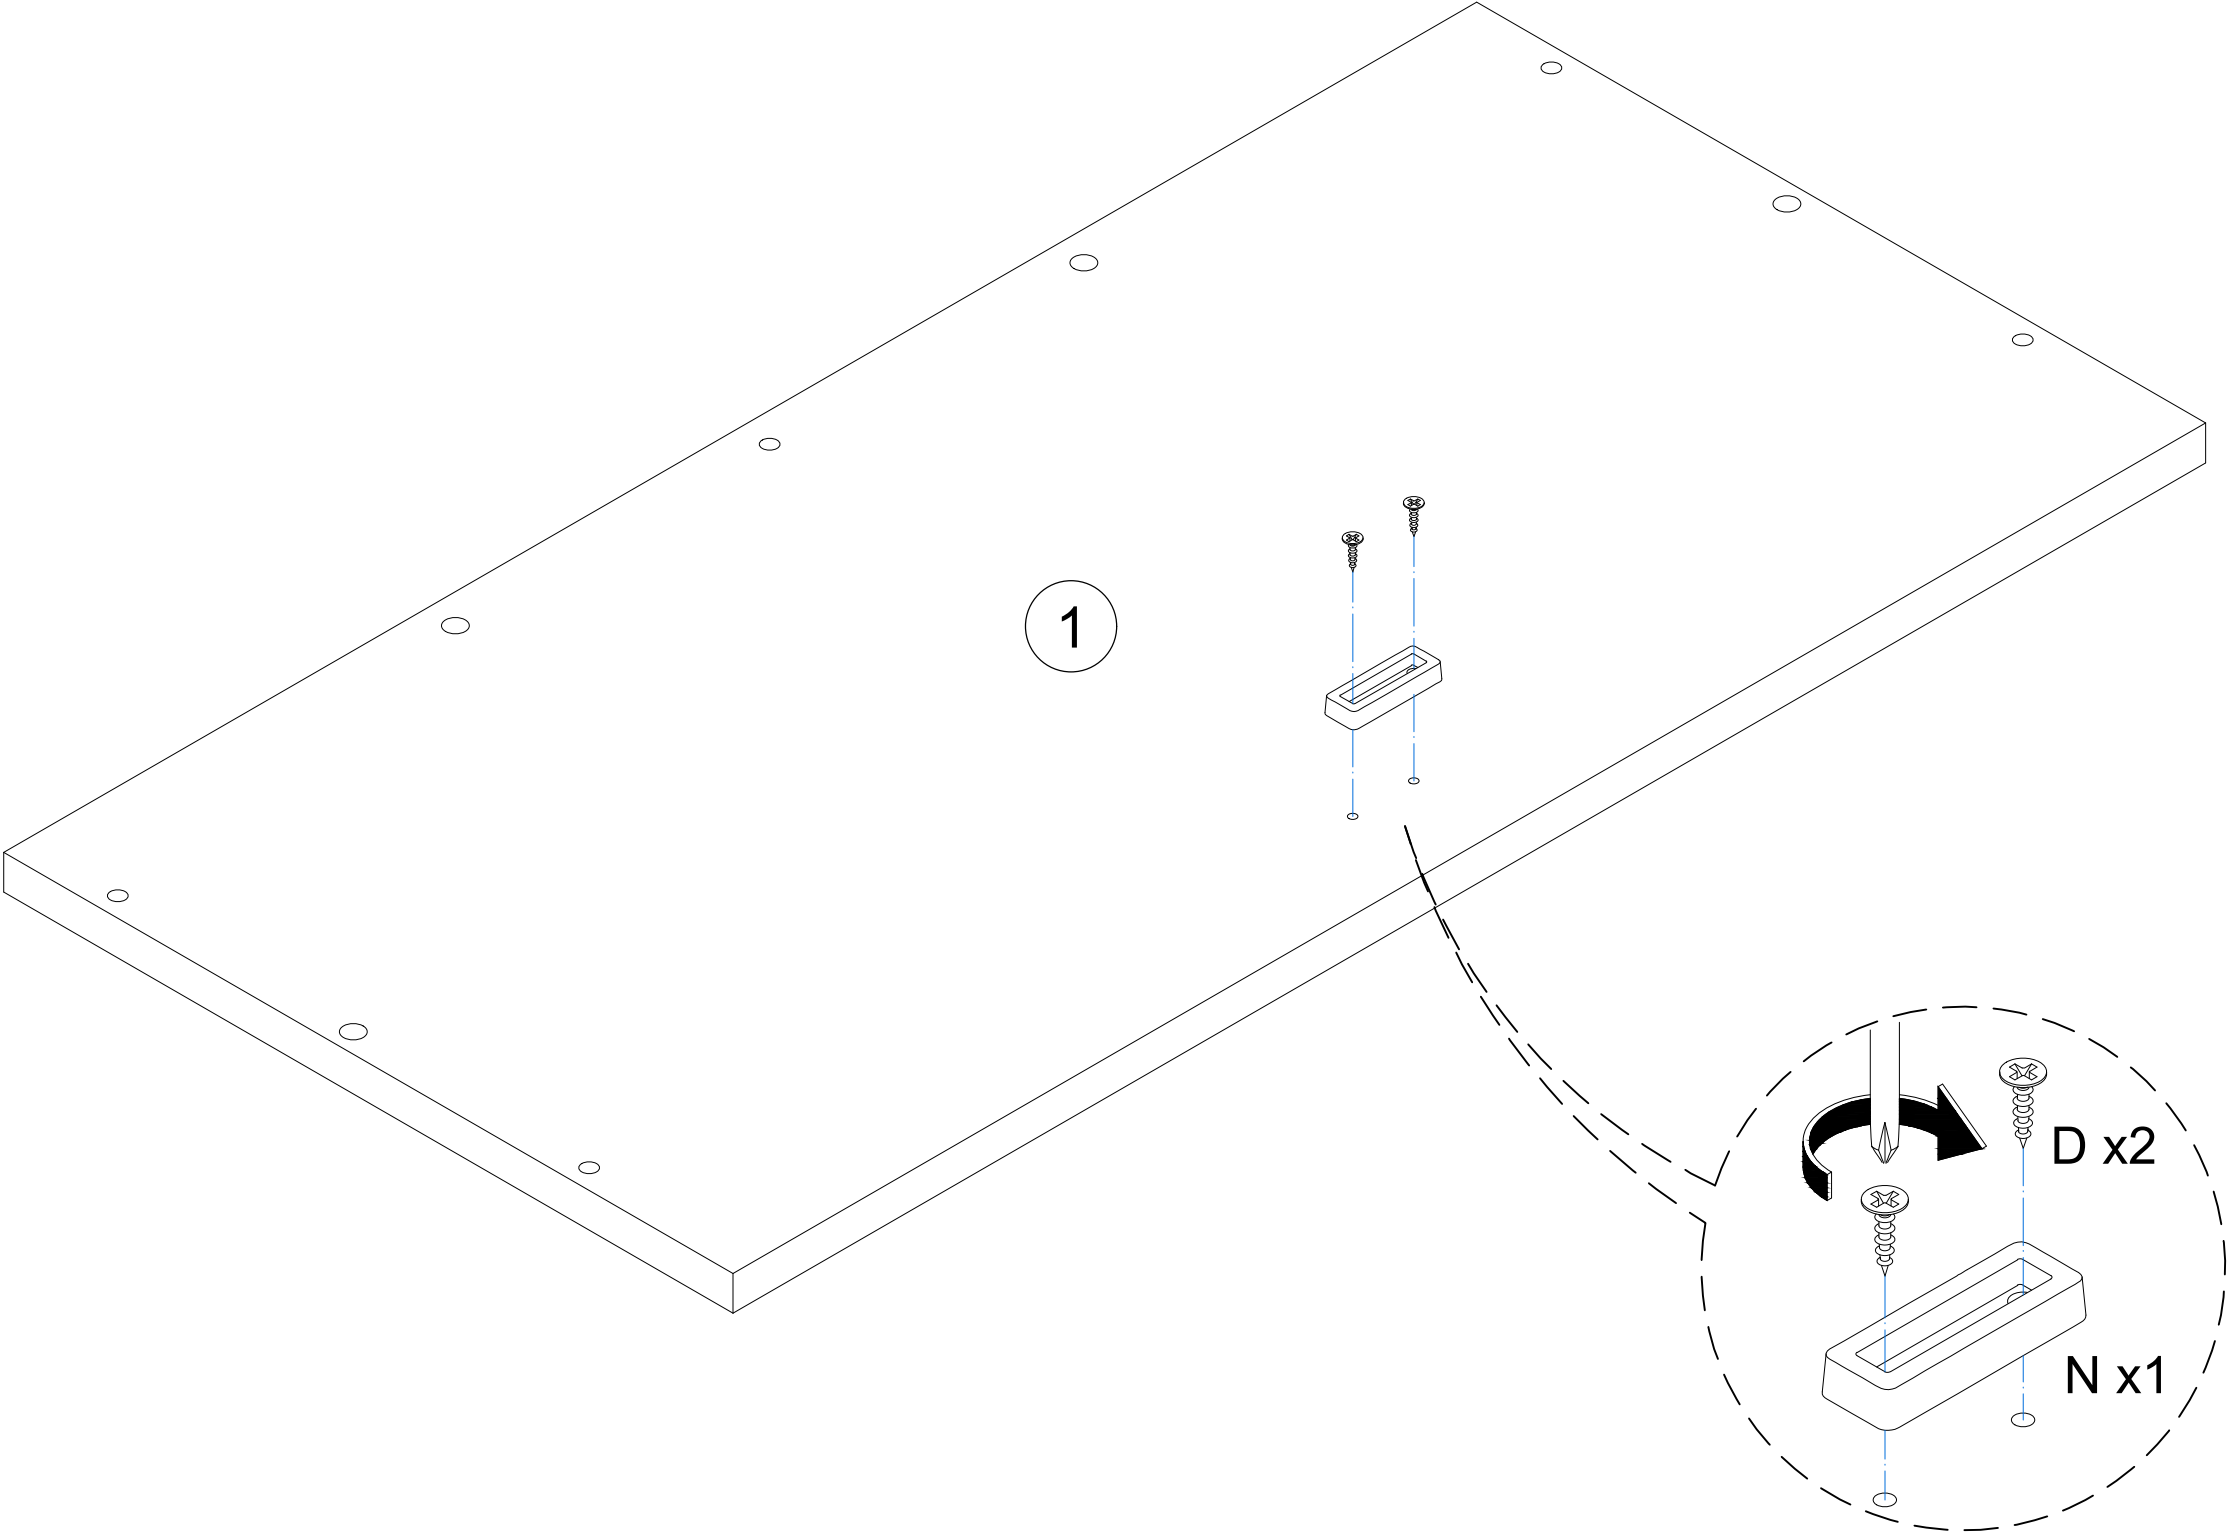

6

YOU WILL NEED	
C x4	G x5

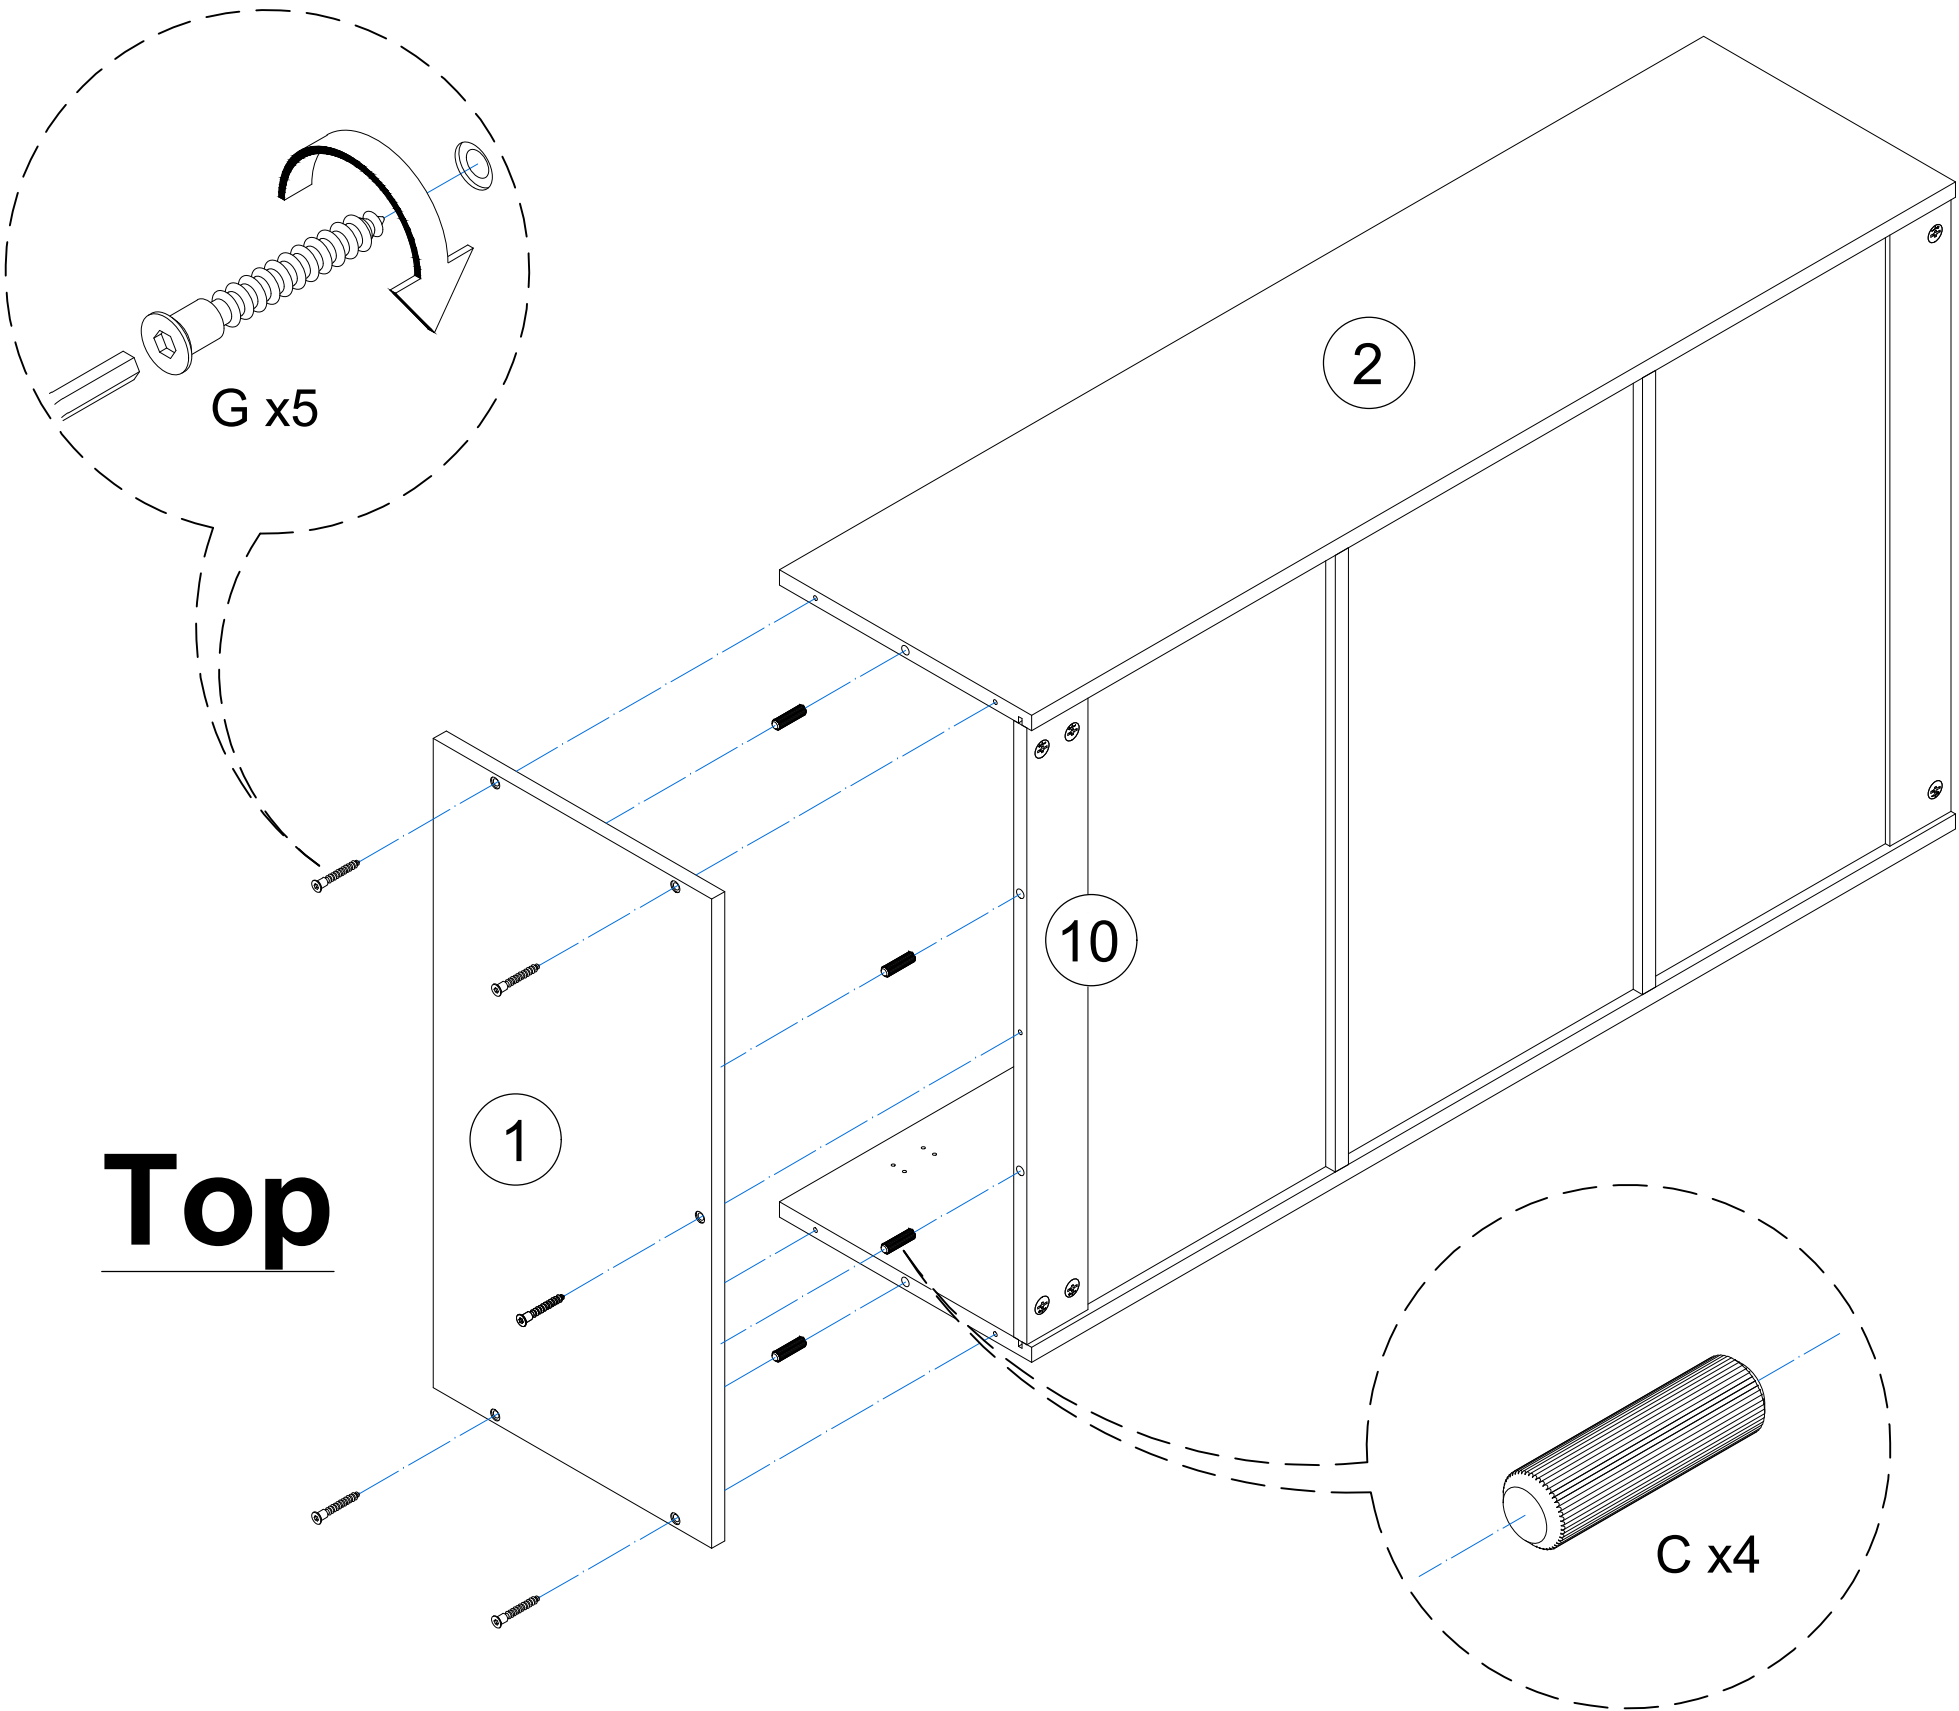

Bottom

Top

7

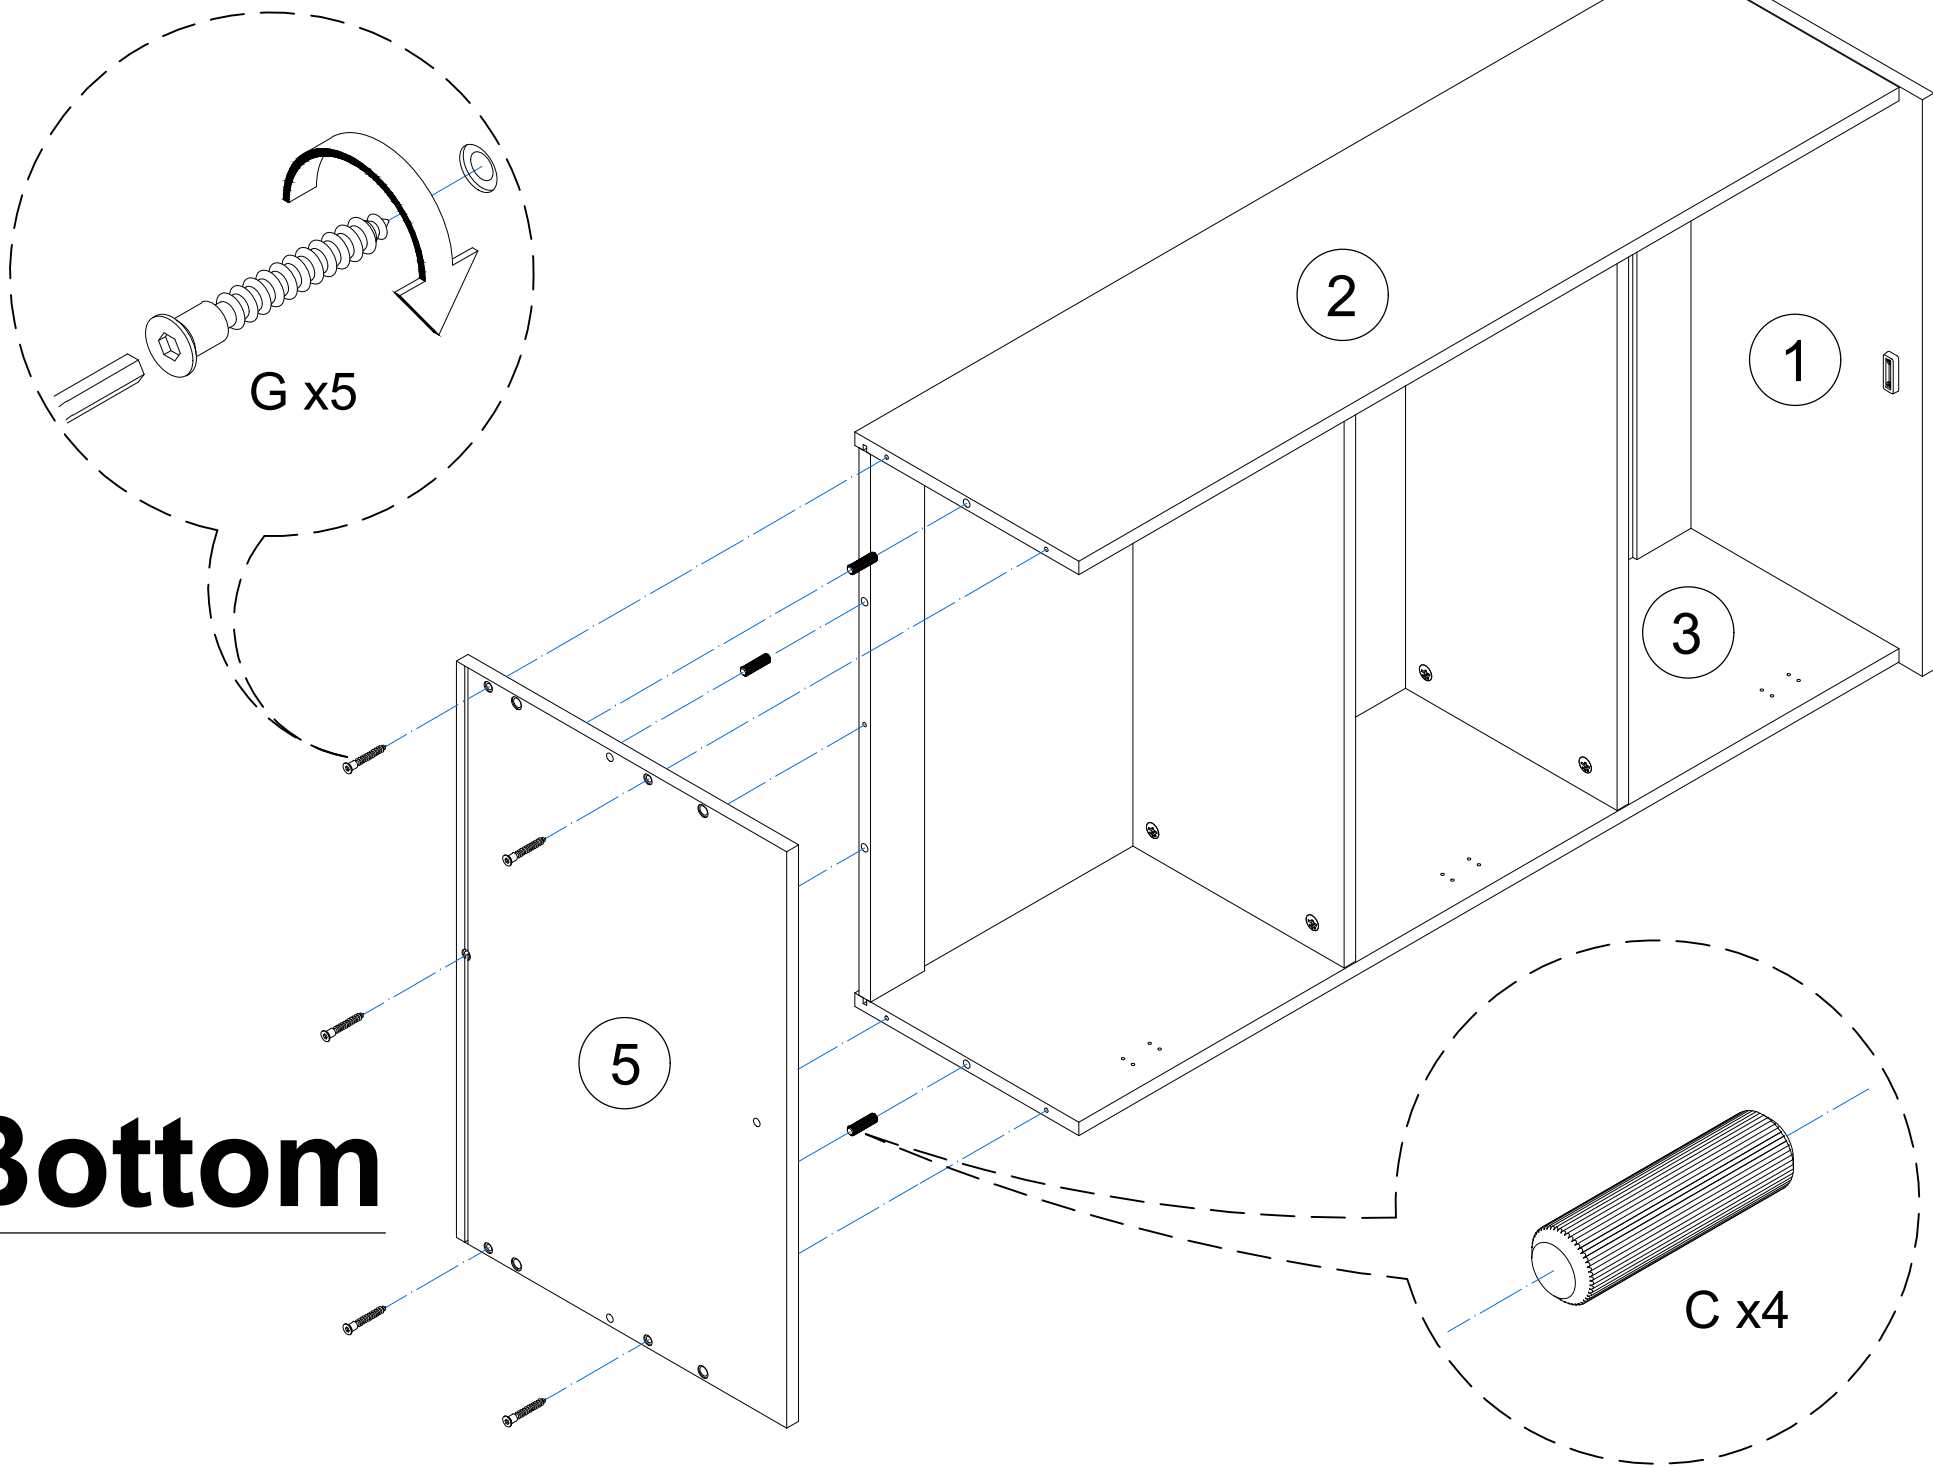
YOU WILL NEED

C x4


G x5





Top

Bottom



HOW TO

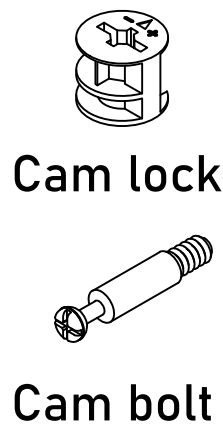

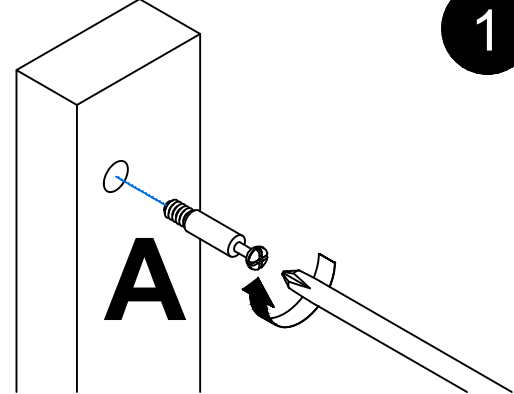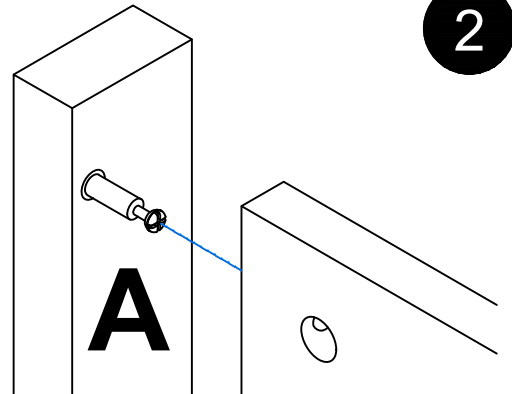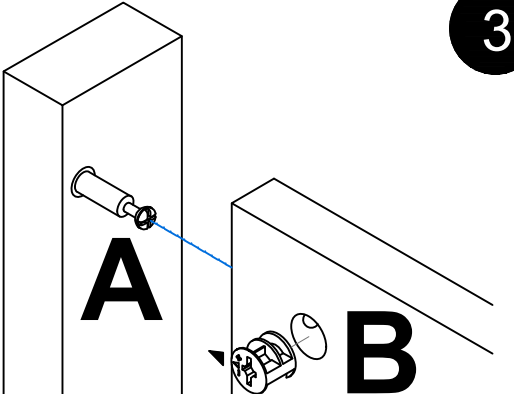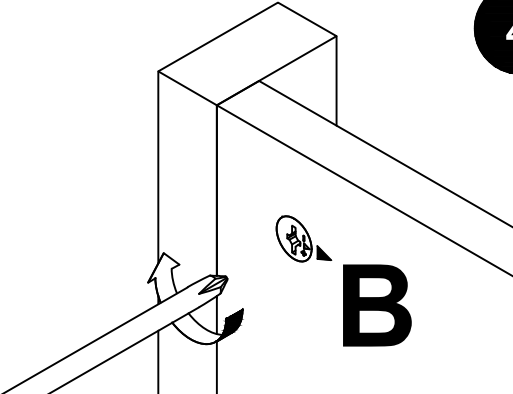
- | 1 | 2 | 3 | 4 |
|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
|  |  |  |  |
| 1. Screw Cam Bolt into panel | 2. Insert Cam Bolt into bolt hole of joining panel. | 3. Insert Cam Lock with arrow facing bolt. | 4. Gently turn Cam Lock 180° clockwise to lock into position. |

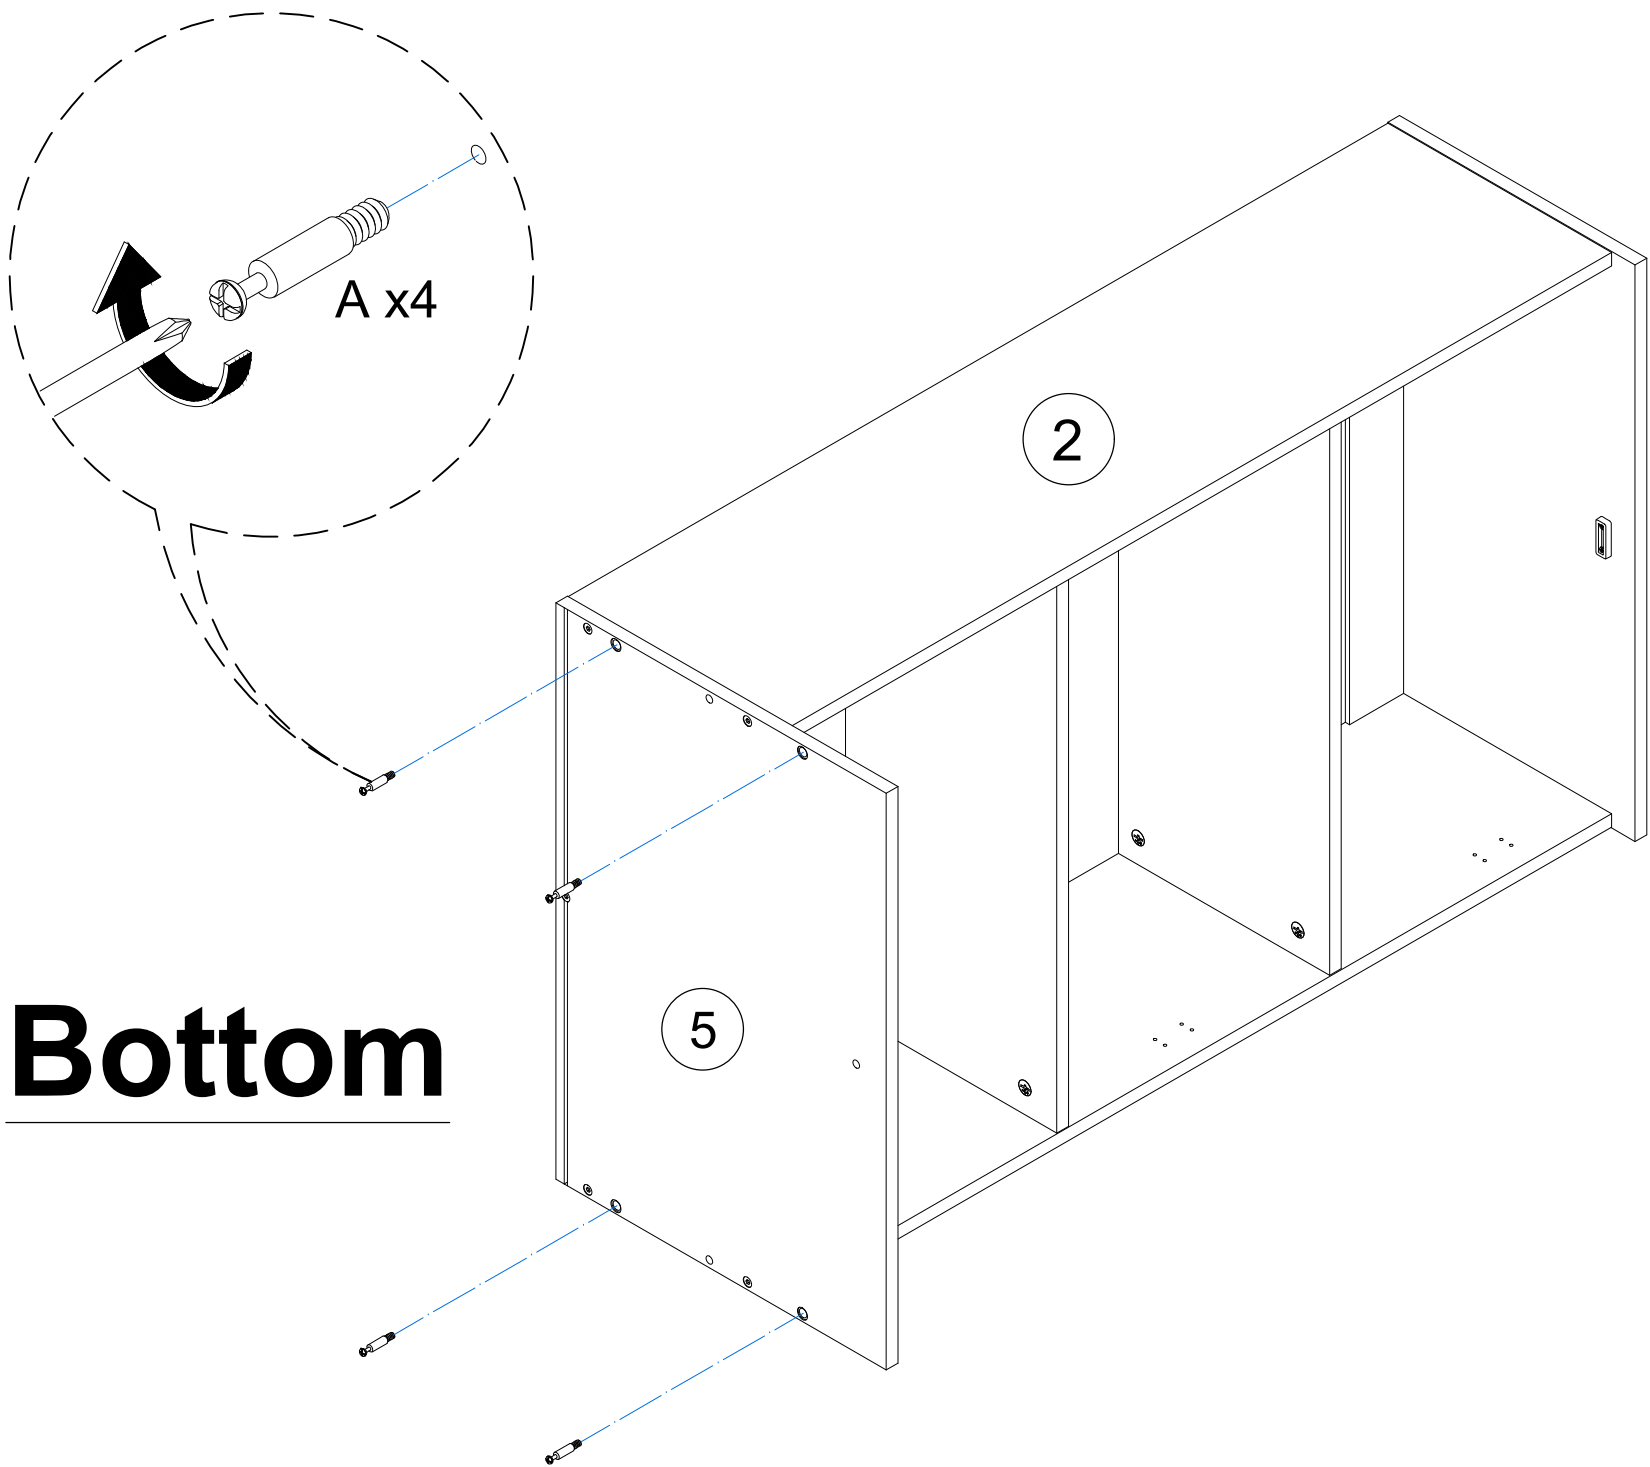
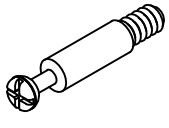
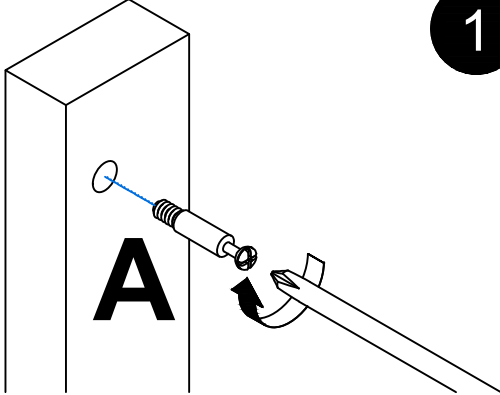
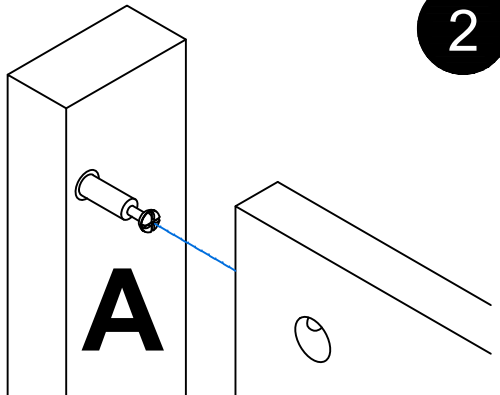
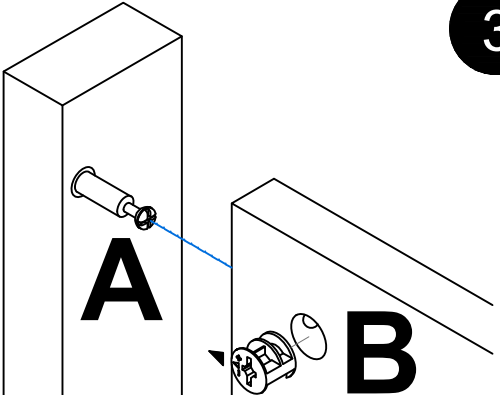
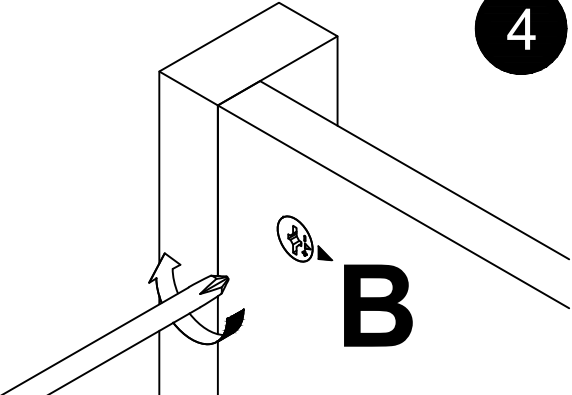
8

YOU WILL NEED

A x4

Bottom



<p>HOW TO</p>  <p>Cam lock</p>  <p>Cam bolt</p>	<p>1</p>  <p>A</p> <p>1. Screw Cam Bolt into panel</p>	<p>2</p>  <p>A</p> <p>2. Insert Cam Bolt into bolt hole of joining panel.</p>	<p>3</p>  <p>A B</p> <p>3. Insert Cam Lock with arrow facing bolt.</p>	<p>4</p>  <p>B</p> <p>4. Gently turn Cam Lock 180° clockwise to lock into position.</p>
-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

9

YOU WILL NEED	
A x16	E x4

Use a hammer to close anchor (**E**)

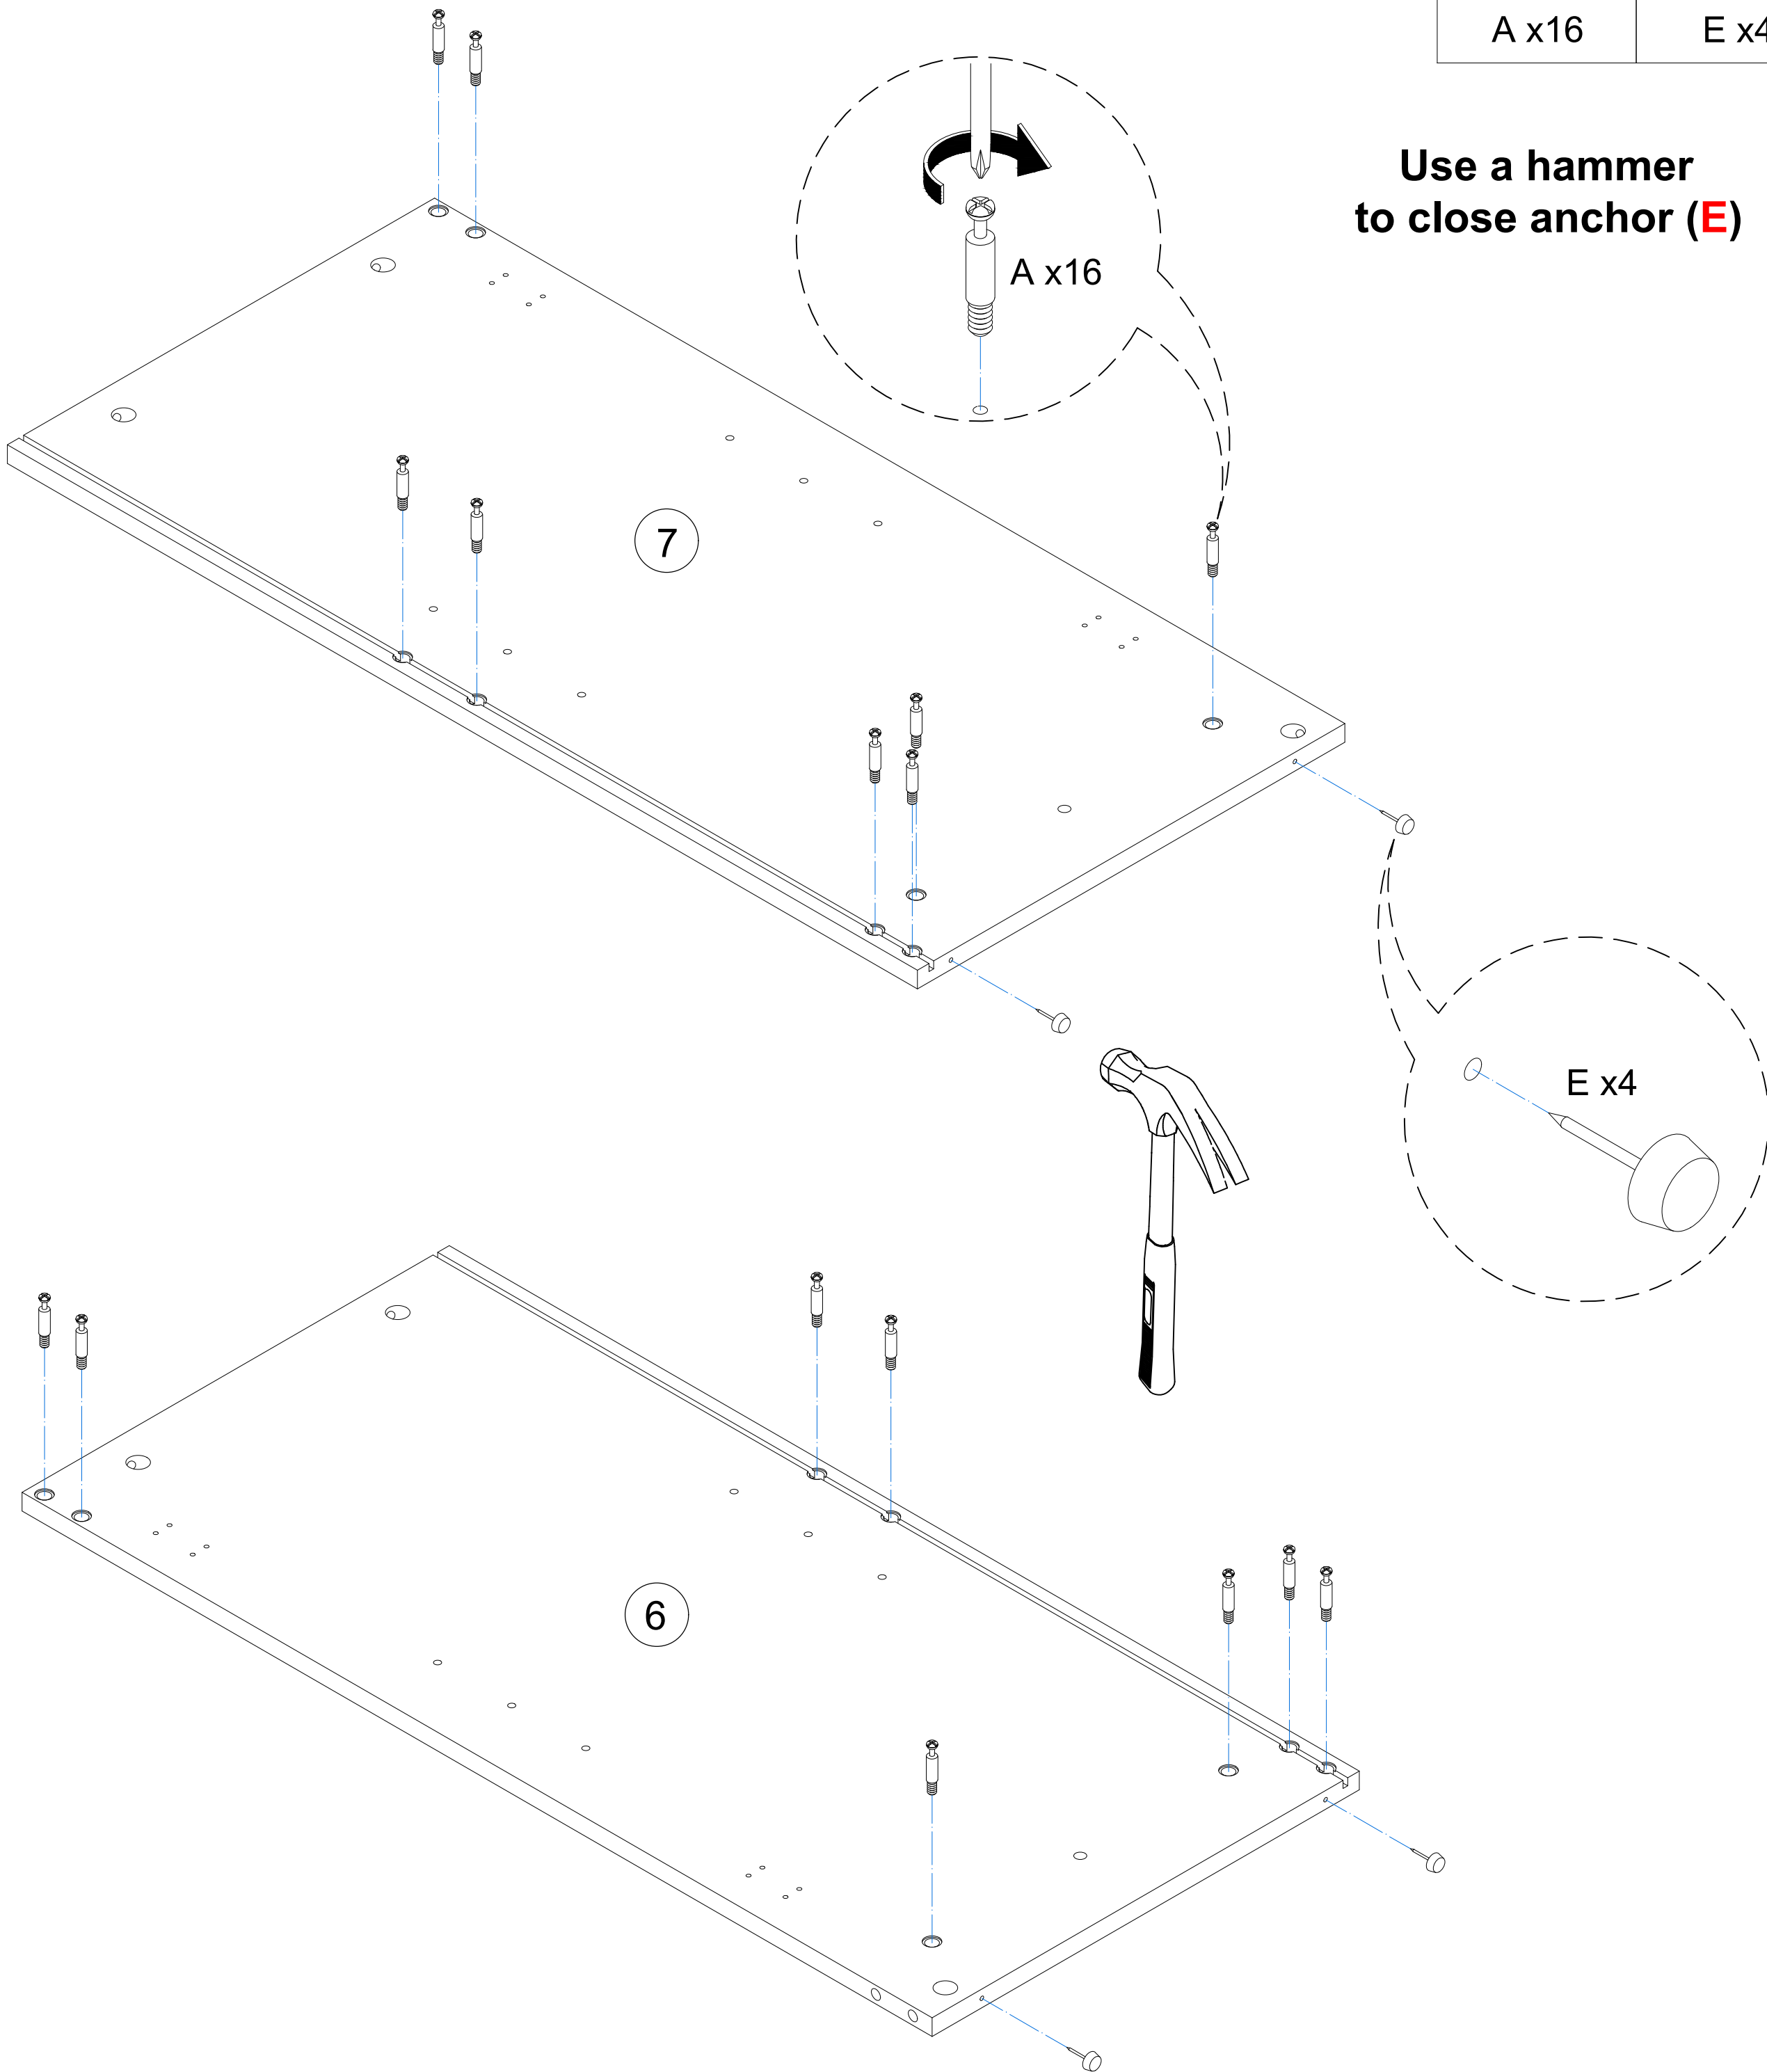

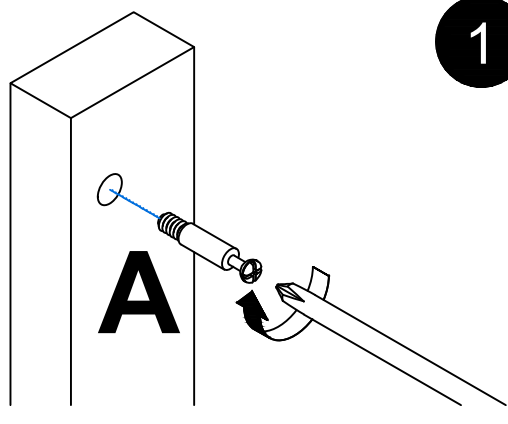
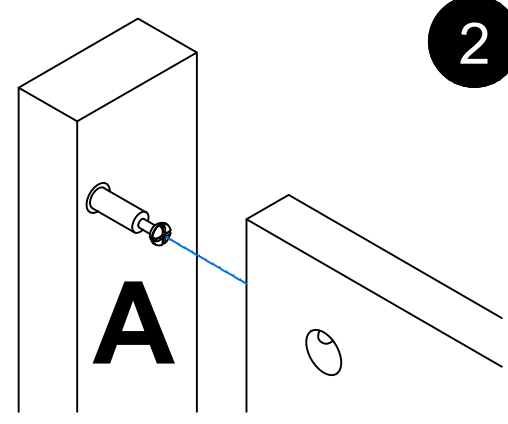
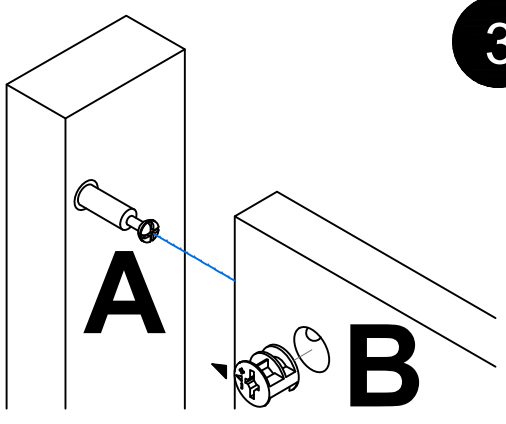
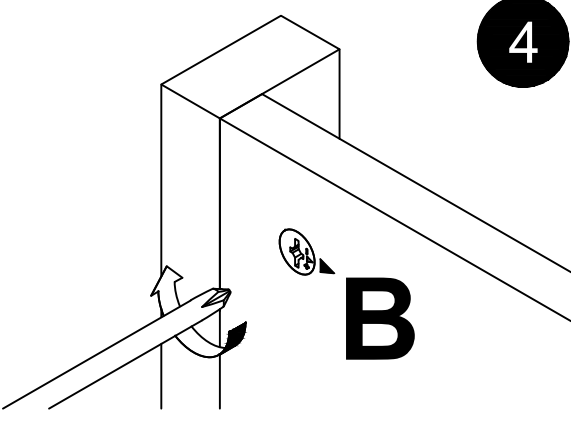


Diagram illustrating the assembly of a door or panel using cam bolts and cam locks. The assembly involves two panels, labeled 6 and 7, which are joined together. The process is shown in four steps: 1. Screwing the cam bolt (A) into the panel. 2. Inserting the cam bolt into the bolt hole of the joining panel. 3. Inserting the cam lock (B) with the arrow facing the bolt. 4. Gently turning the cam lock 180° clockwise to lock into position. The diagram also shows the use of a hammer to close the anchor (E) and the required hardware: A x16 and E x4.


<p>HOW TO</p>  <p>Cam lock</p> <p>Cam bolt</p>	<p>1</p>  <p>A</p> <p>1. Screw Cam Bolt into panel</p>	<p>2</p>  <p>A</p> <p>2. Insert Cam Bolt into bolt hole of joining panel.</p>	<p>3</p>  <p>A B</p> <p>3. Insert Cam Lock with arrow facing bolt.</p>	<p>4</p>  <p>B</p> <p>4. Gently turn Cam Lock 180° clockwise to lock into position.</p>
---------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

10


YOU WILL NEED






B x8

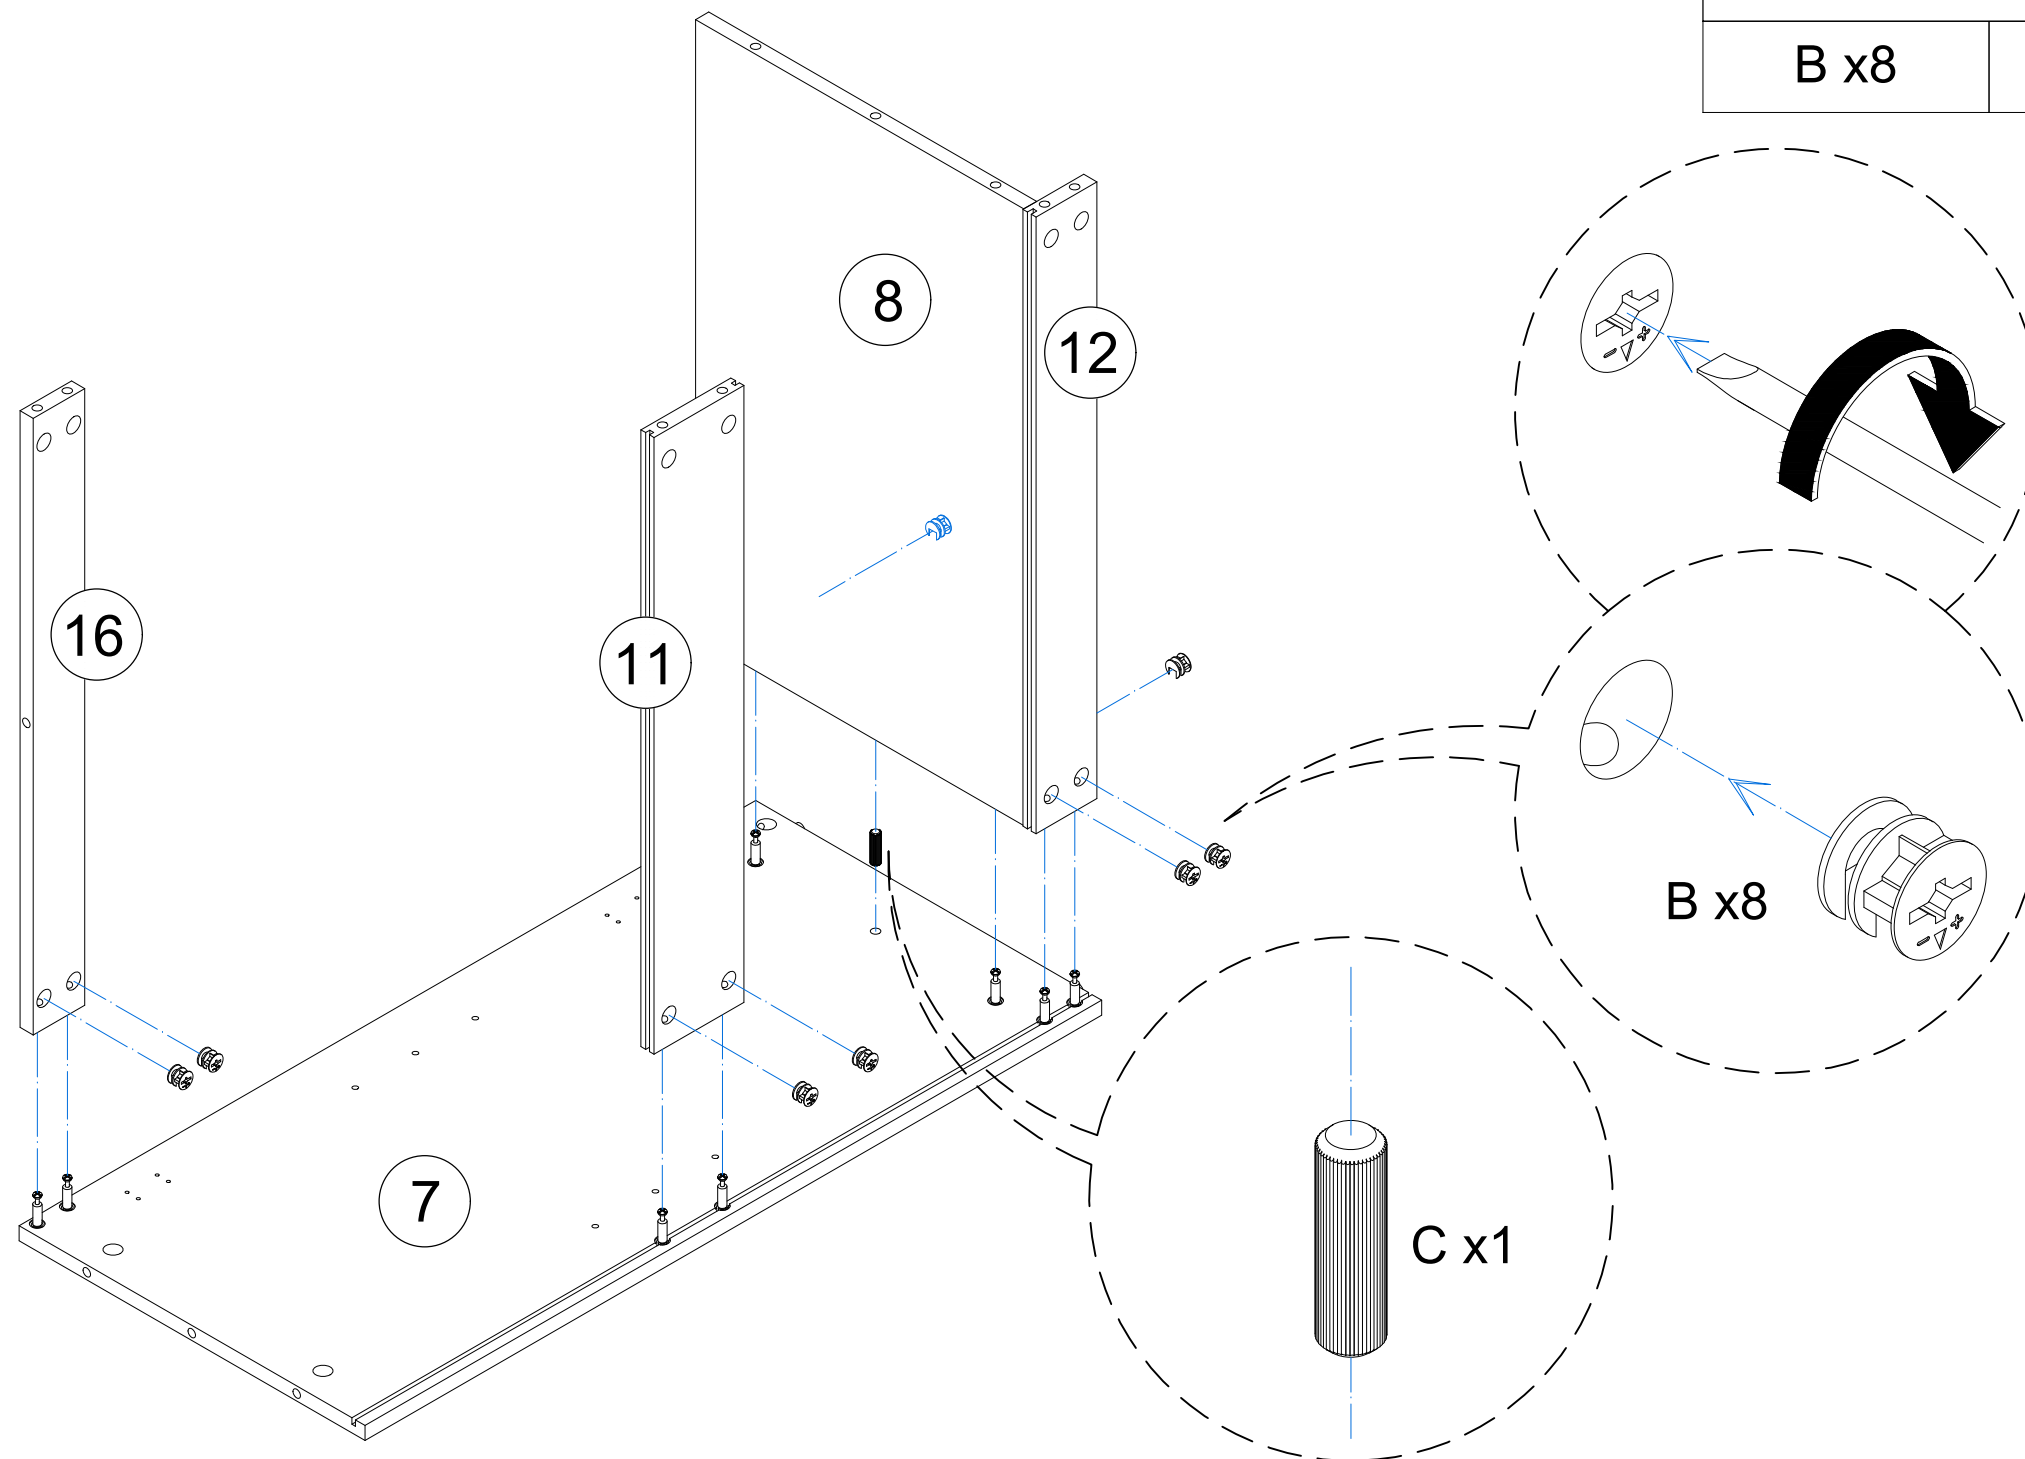C x1



11

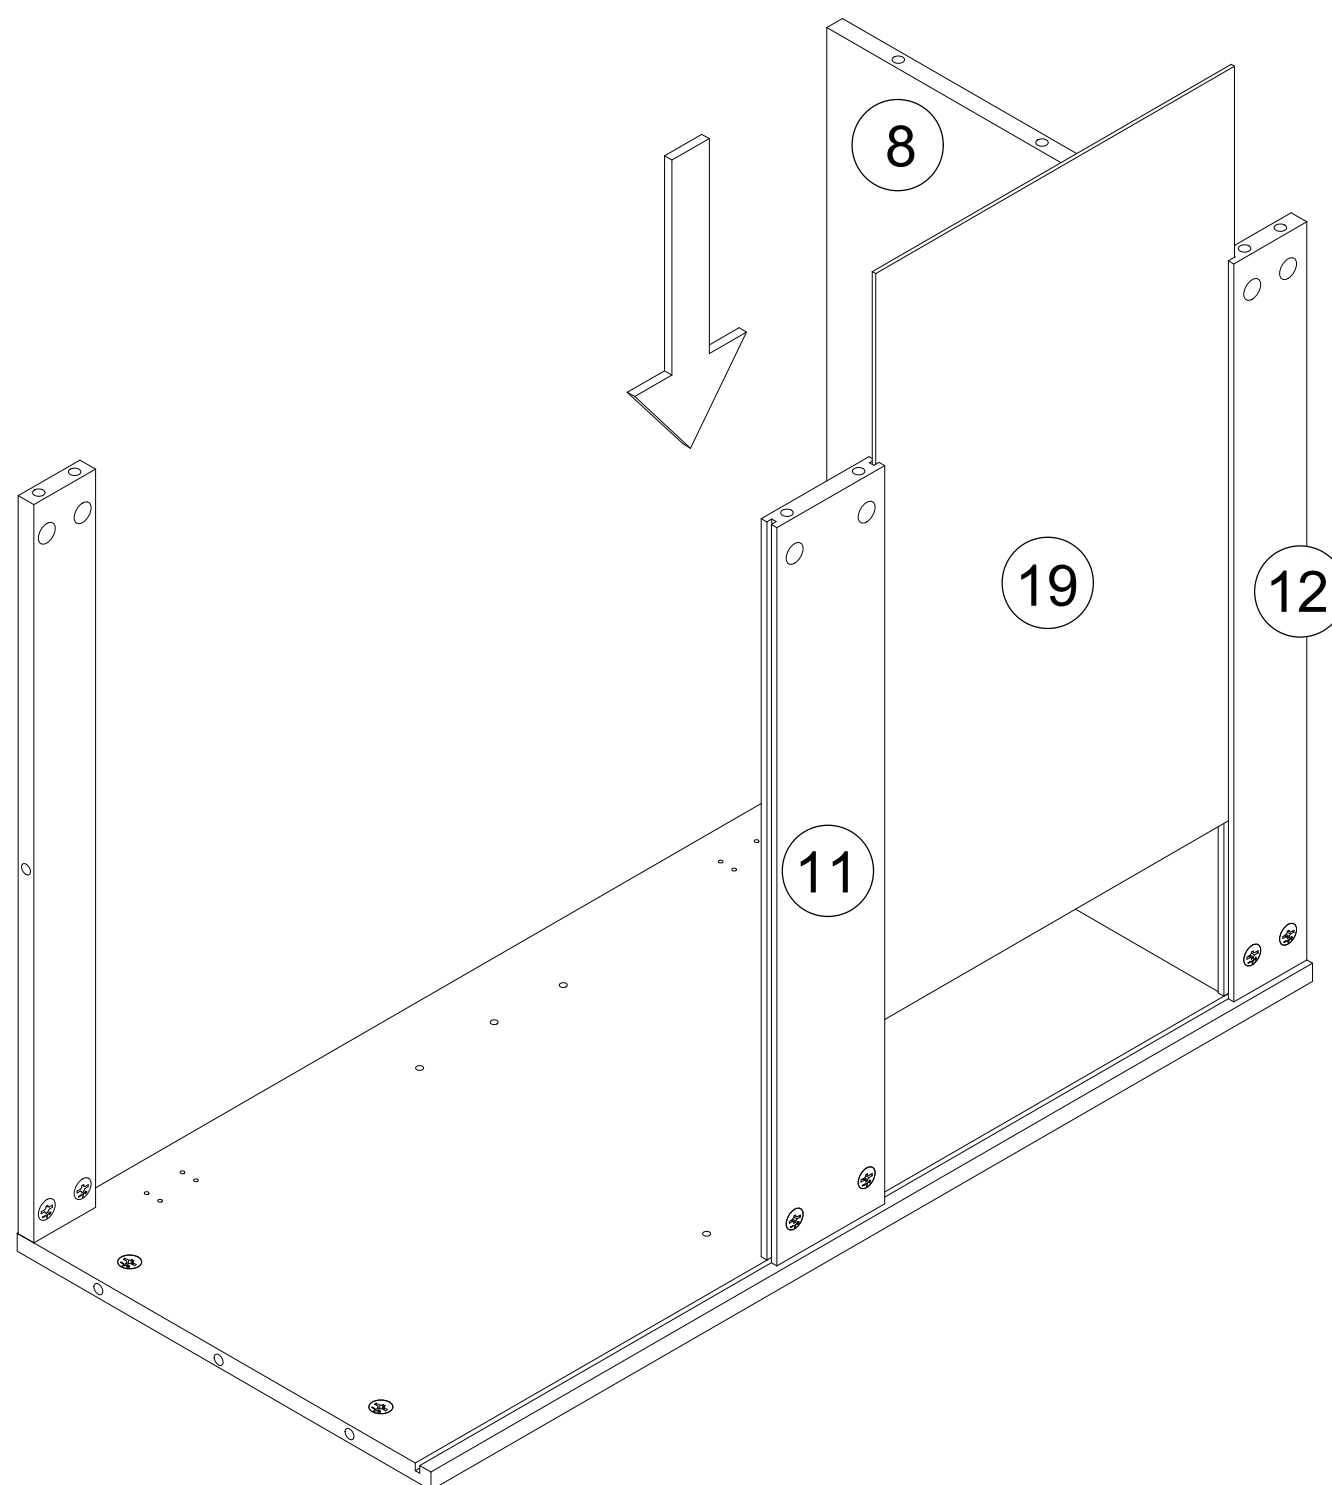

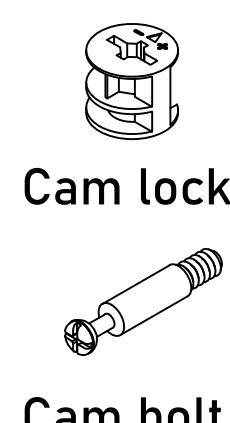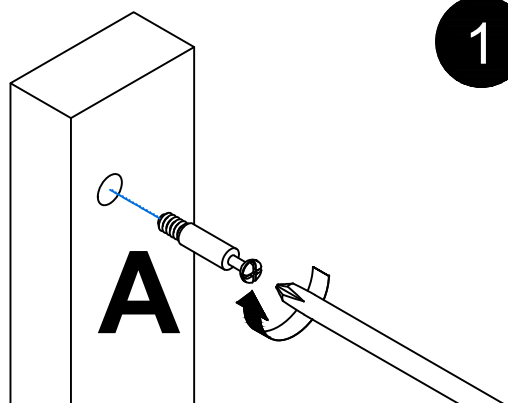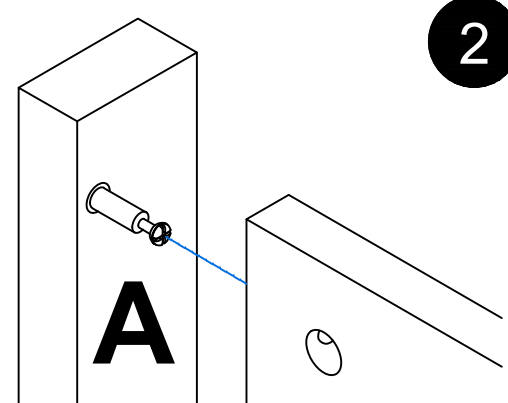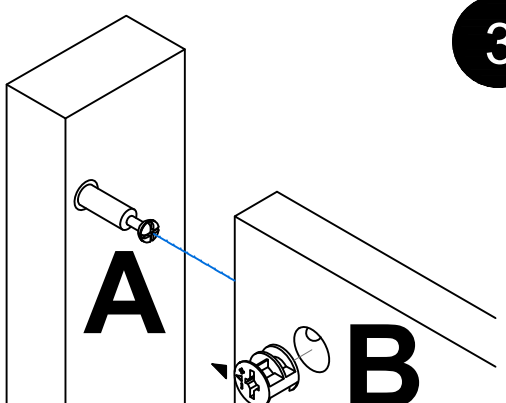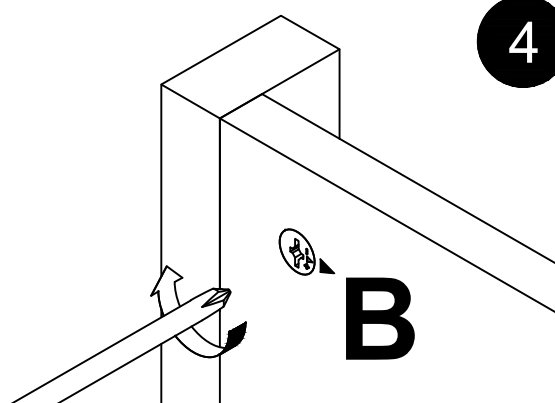
<p>HOW TO</p>  <p>Cam lock</p> <p>Cam bolt</p>	<p>1</p>  <p>A</p> <p>1. Screw Cam Bolt into panel</p>	<p>2</p>  <p>A</p> <p>2. Insert Cam Bolt into bolt hole of joining panel.</p>	<p>3</p>  <p>A B</p> <p>3. Insert Cam Lock with arrow facing bolt.</p>	<p>4</p>  <p>B</p> <p>4. Gently turn Cam Lock 180° clockwise to lock into position.</p>
---------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

12

YOU WILL NEED

B x8

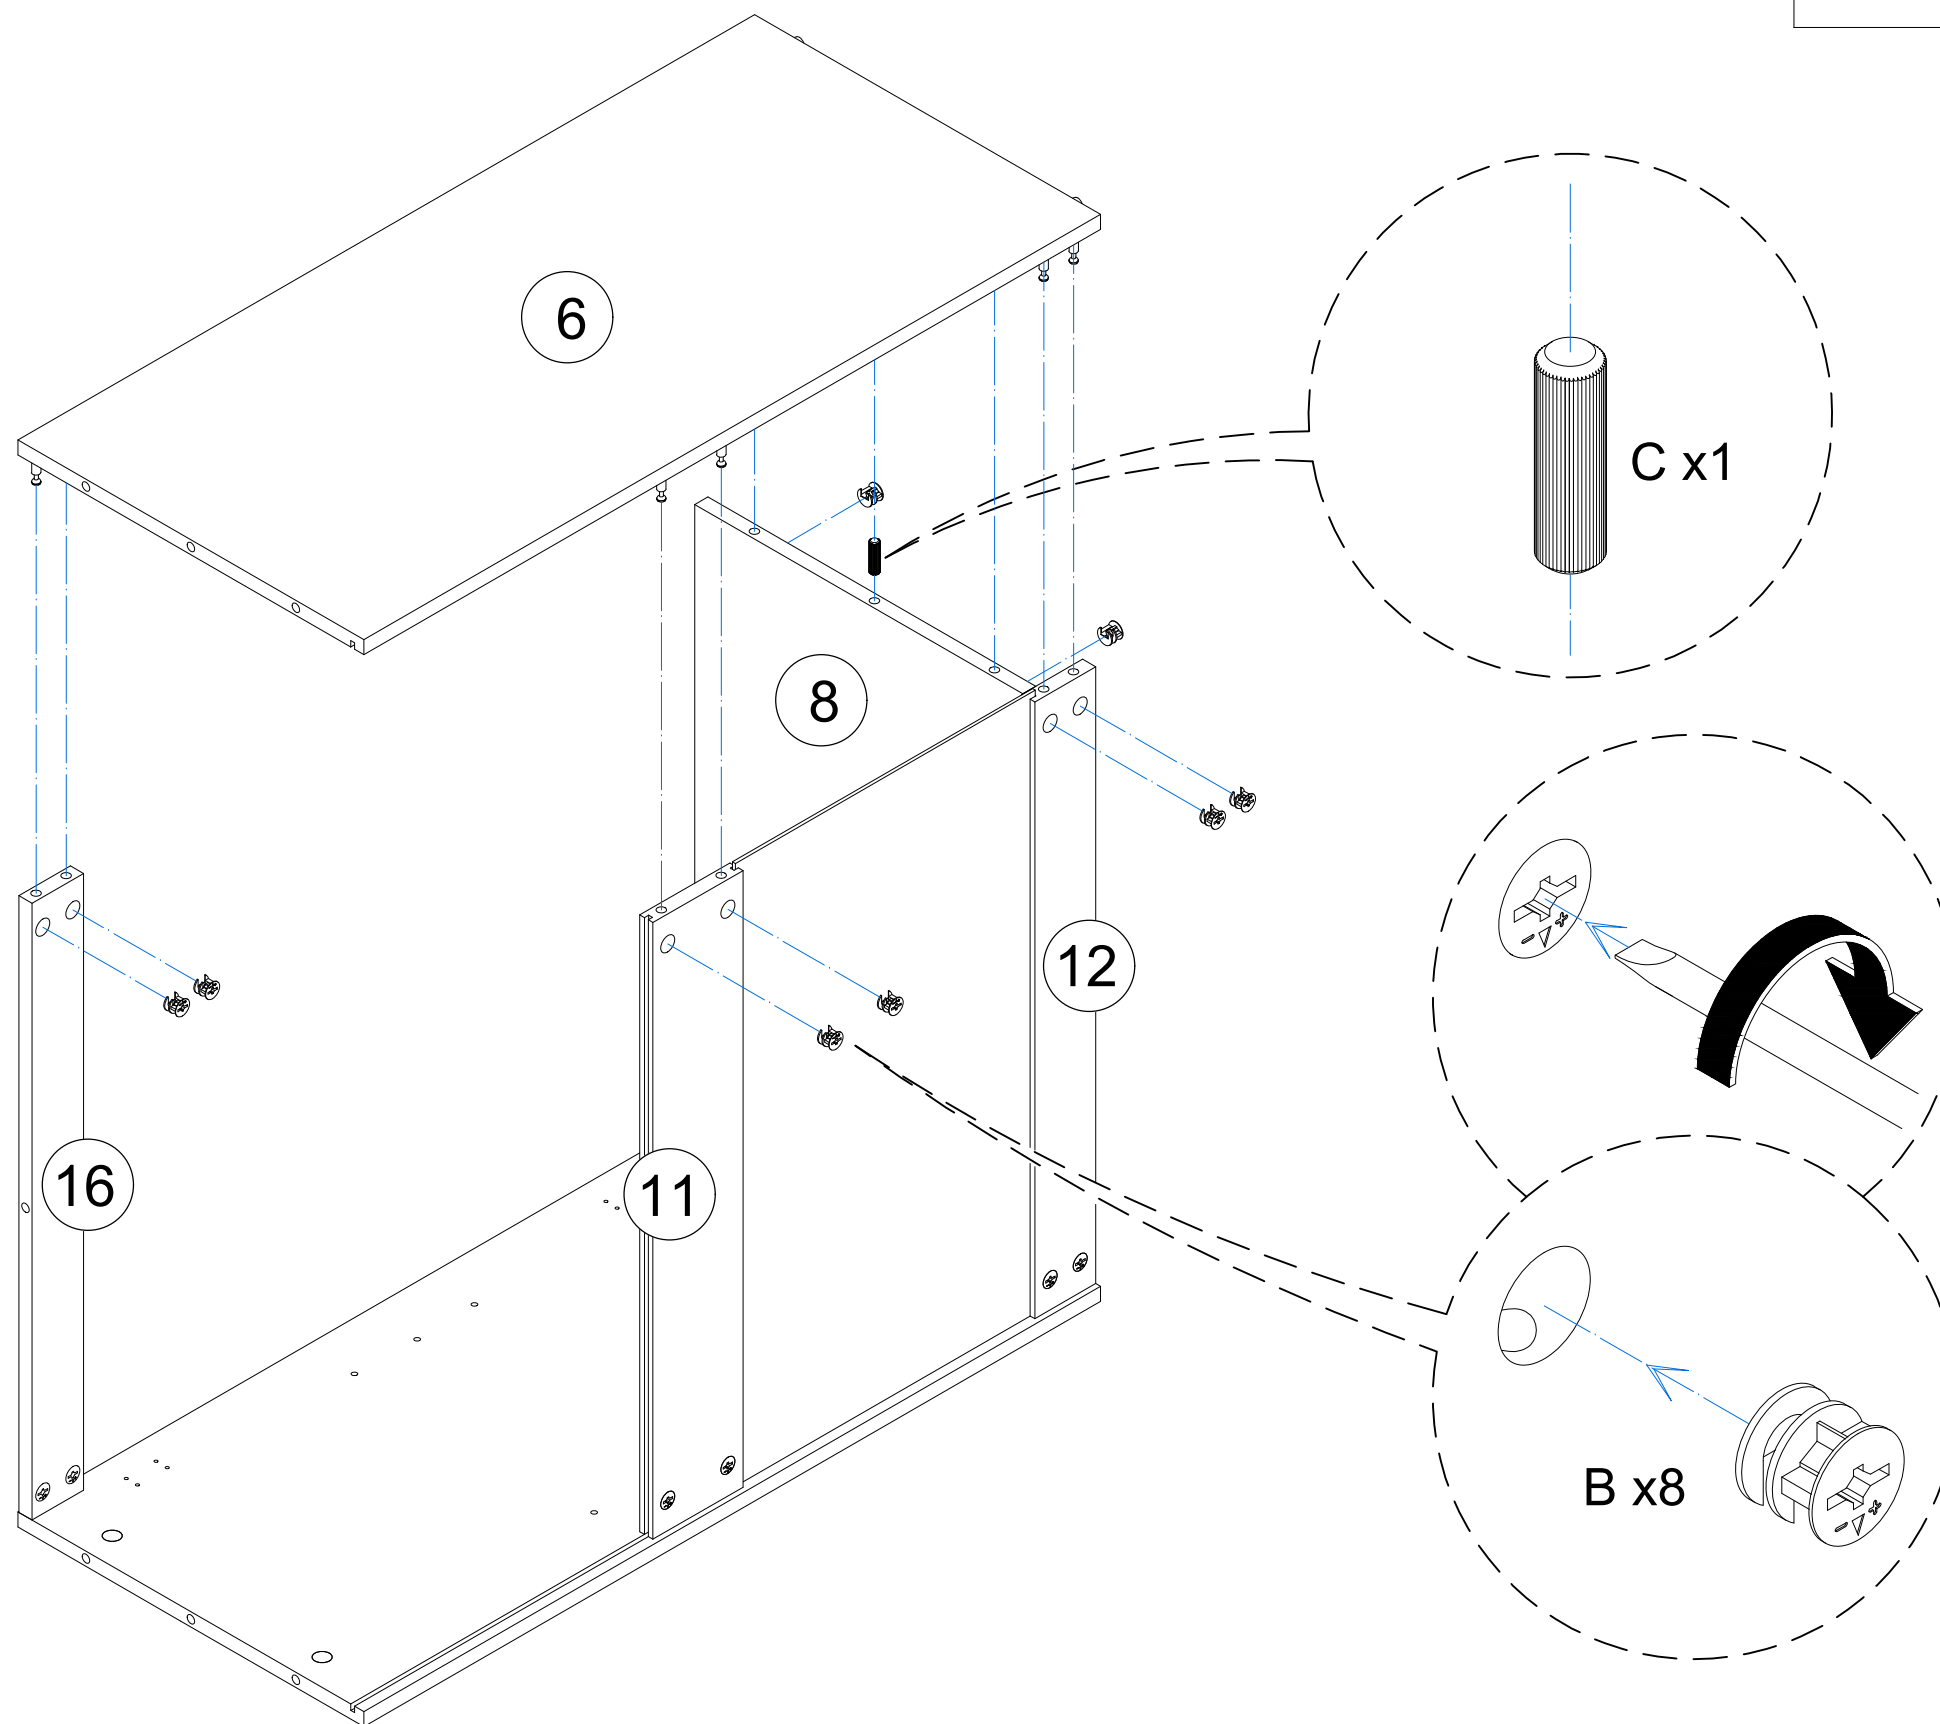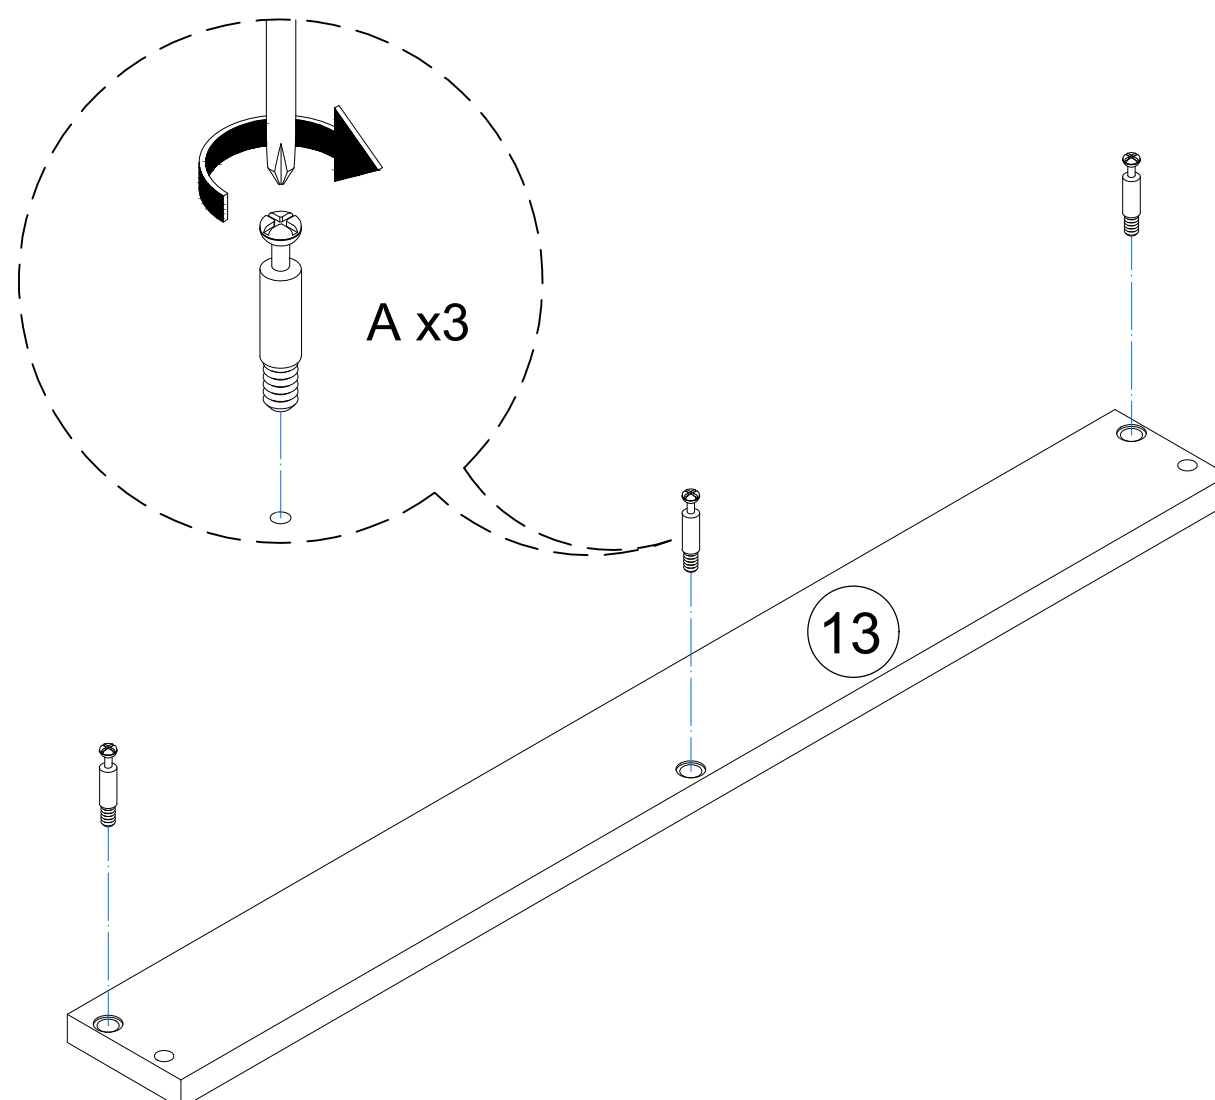
C x1


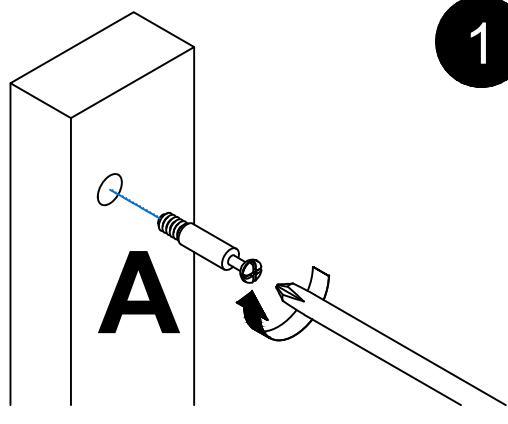
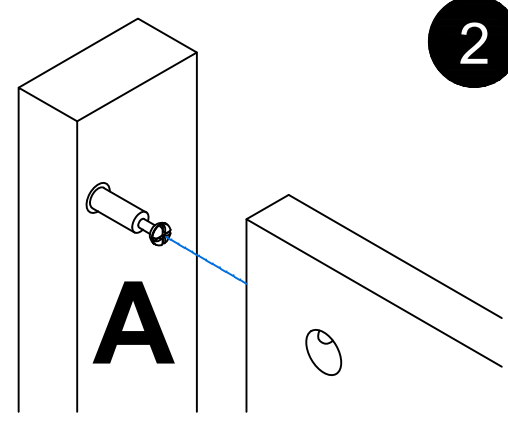
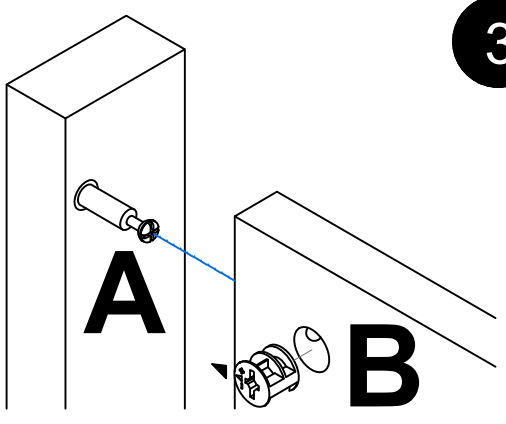
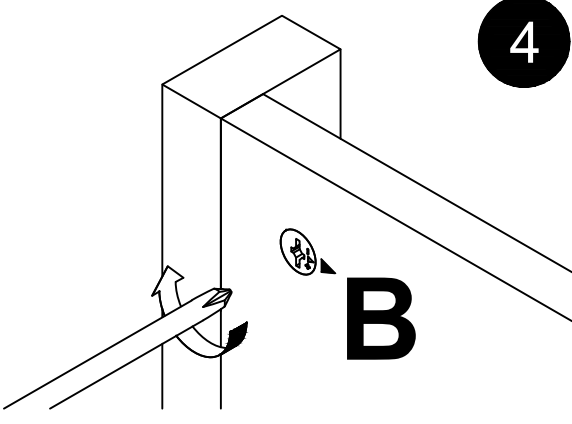


13

YOU WILL NEED

A x3




<p>HOW TO</p>  <p>Cam lock</p> <p>Cam bolt</p>	<p>1</p>  <p>A</p> <p>1. Screw Cam Bolt into panel</p>	<p>2</p>  <p>A</p> <p>2. Insert Cam Bolt into bolt hole of joining panel.</p>	<p>3</p>  <p>A B</p> <p>3. Insert Cam Lock with arrow facing bolt.</p>	<p>4</p>  <p>B</p> <p>4. Gently turn Cam Lock 180° clockwise to lock into position.</p>
---------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

14

YOU WILL NEED

B x3

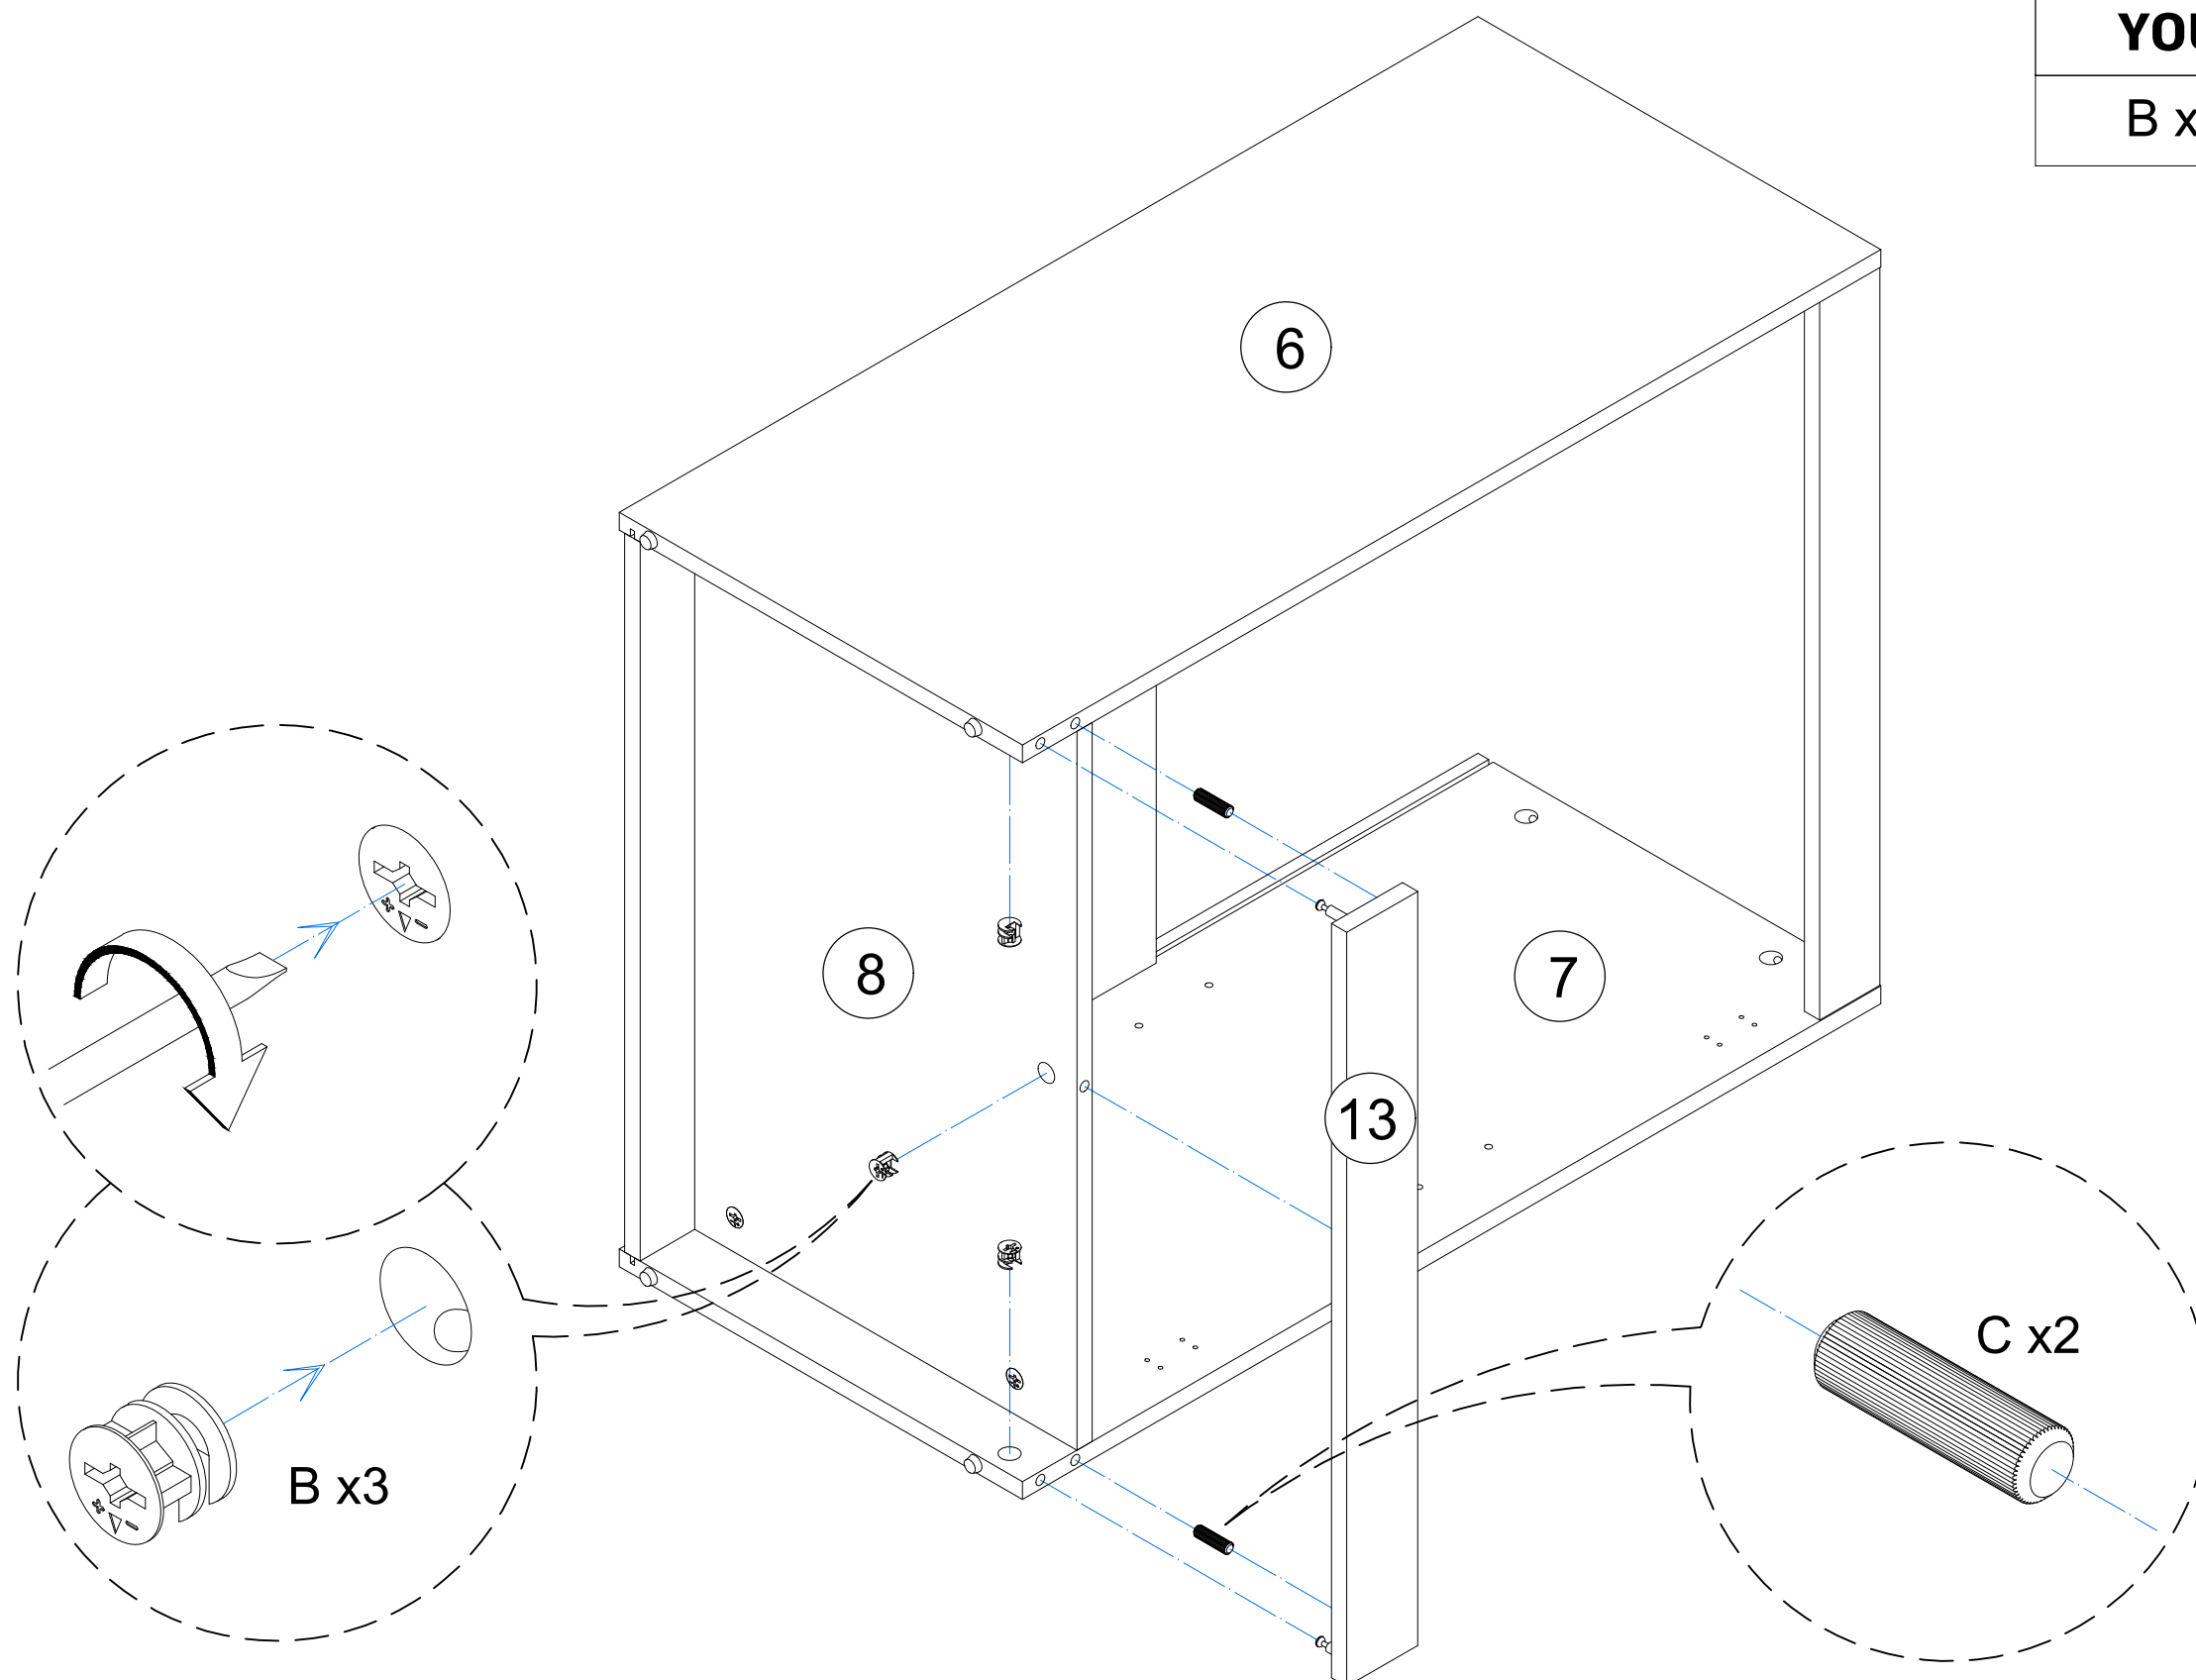
C x2








15

YOU WILL NEED

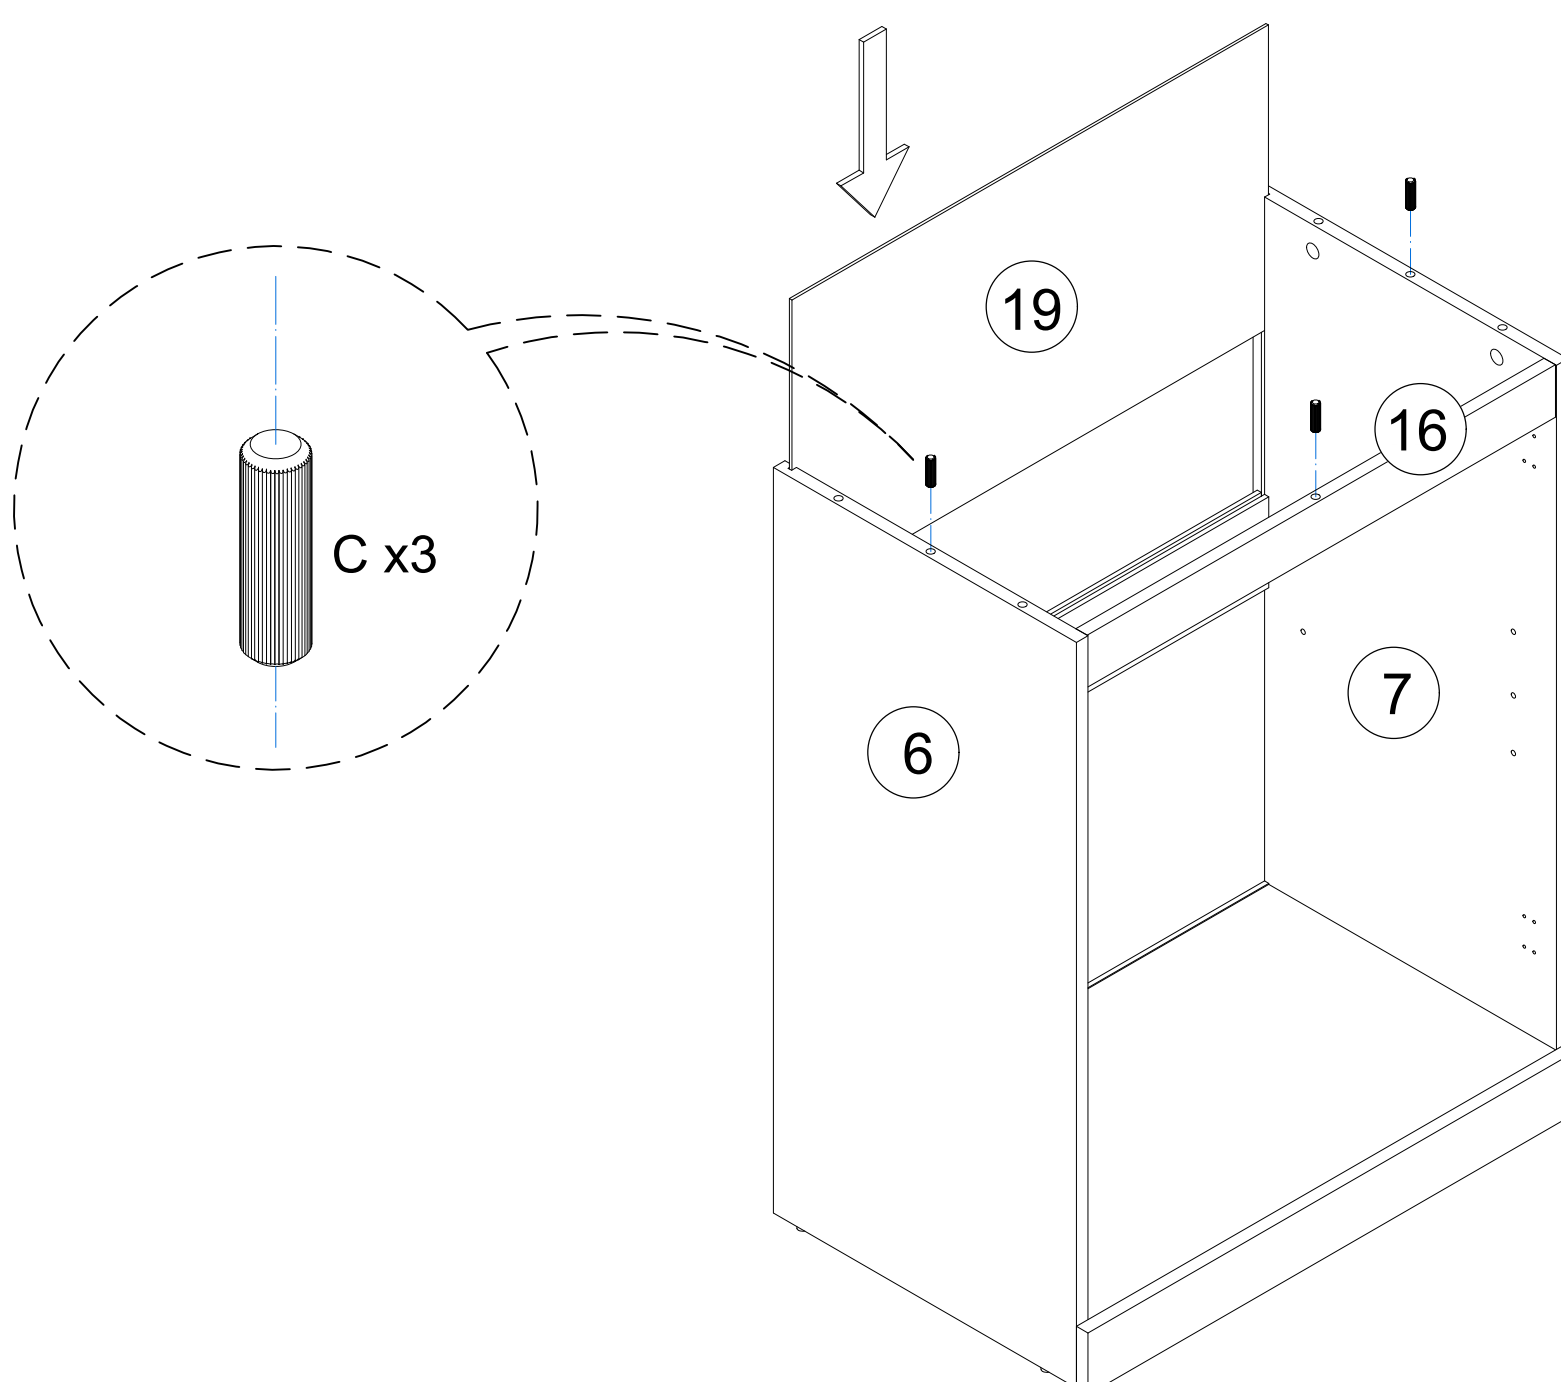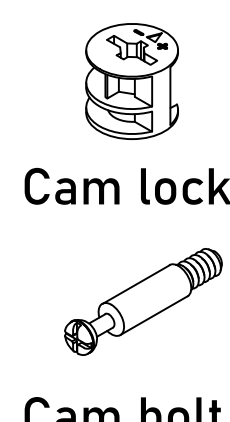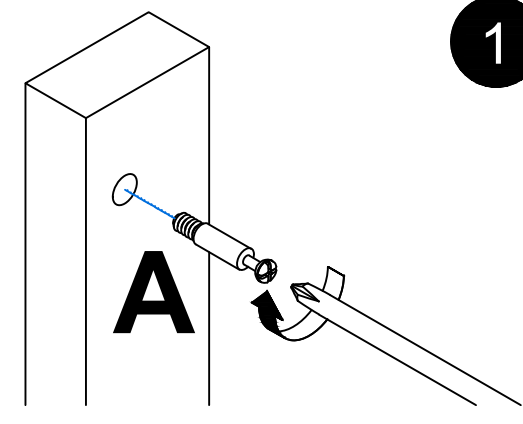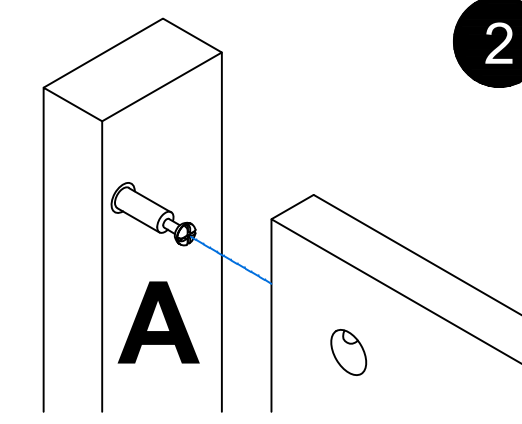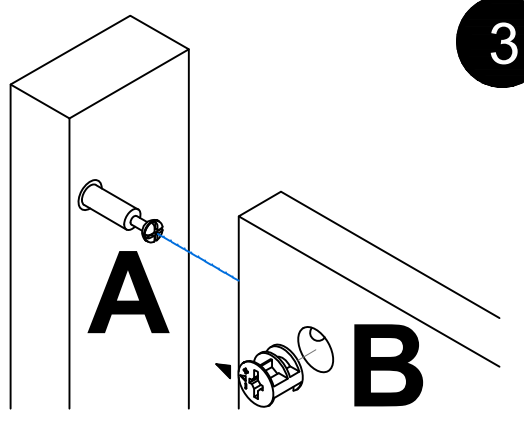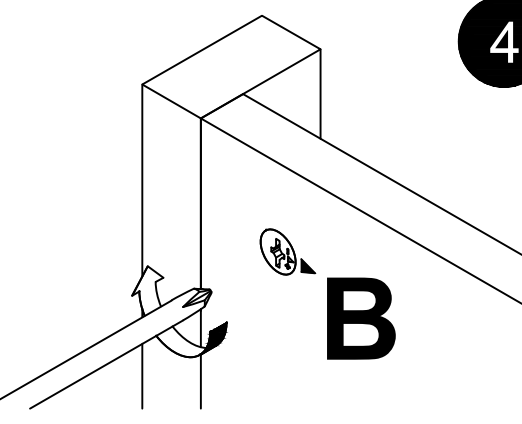C x3




<p>HOW TO</p>  <p>Cam lock</p> <p>Cam bolt</p>	<p>1</p>  <p>A</p> <p>1. Screw Cam Bolt into panel</p>	<p>2</p>  <p>A</p> <p>2. Insert Cam Bolt into bolt hole of joining panel.</p>	<p>3</p>  <p>A B</p> <p>3. Insert Cam Lock with arrow facing bolt.</p>	<p>4</p>  <p>B</p> <p>4. Gently turn Cam Lock 180° clockwise to lock into position.</p>
---------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

16

YOU WILL NEED

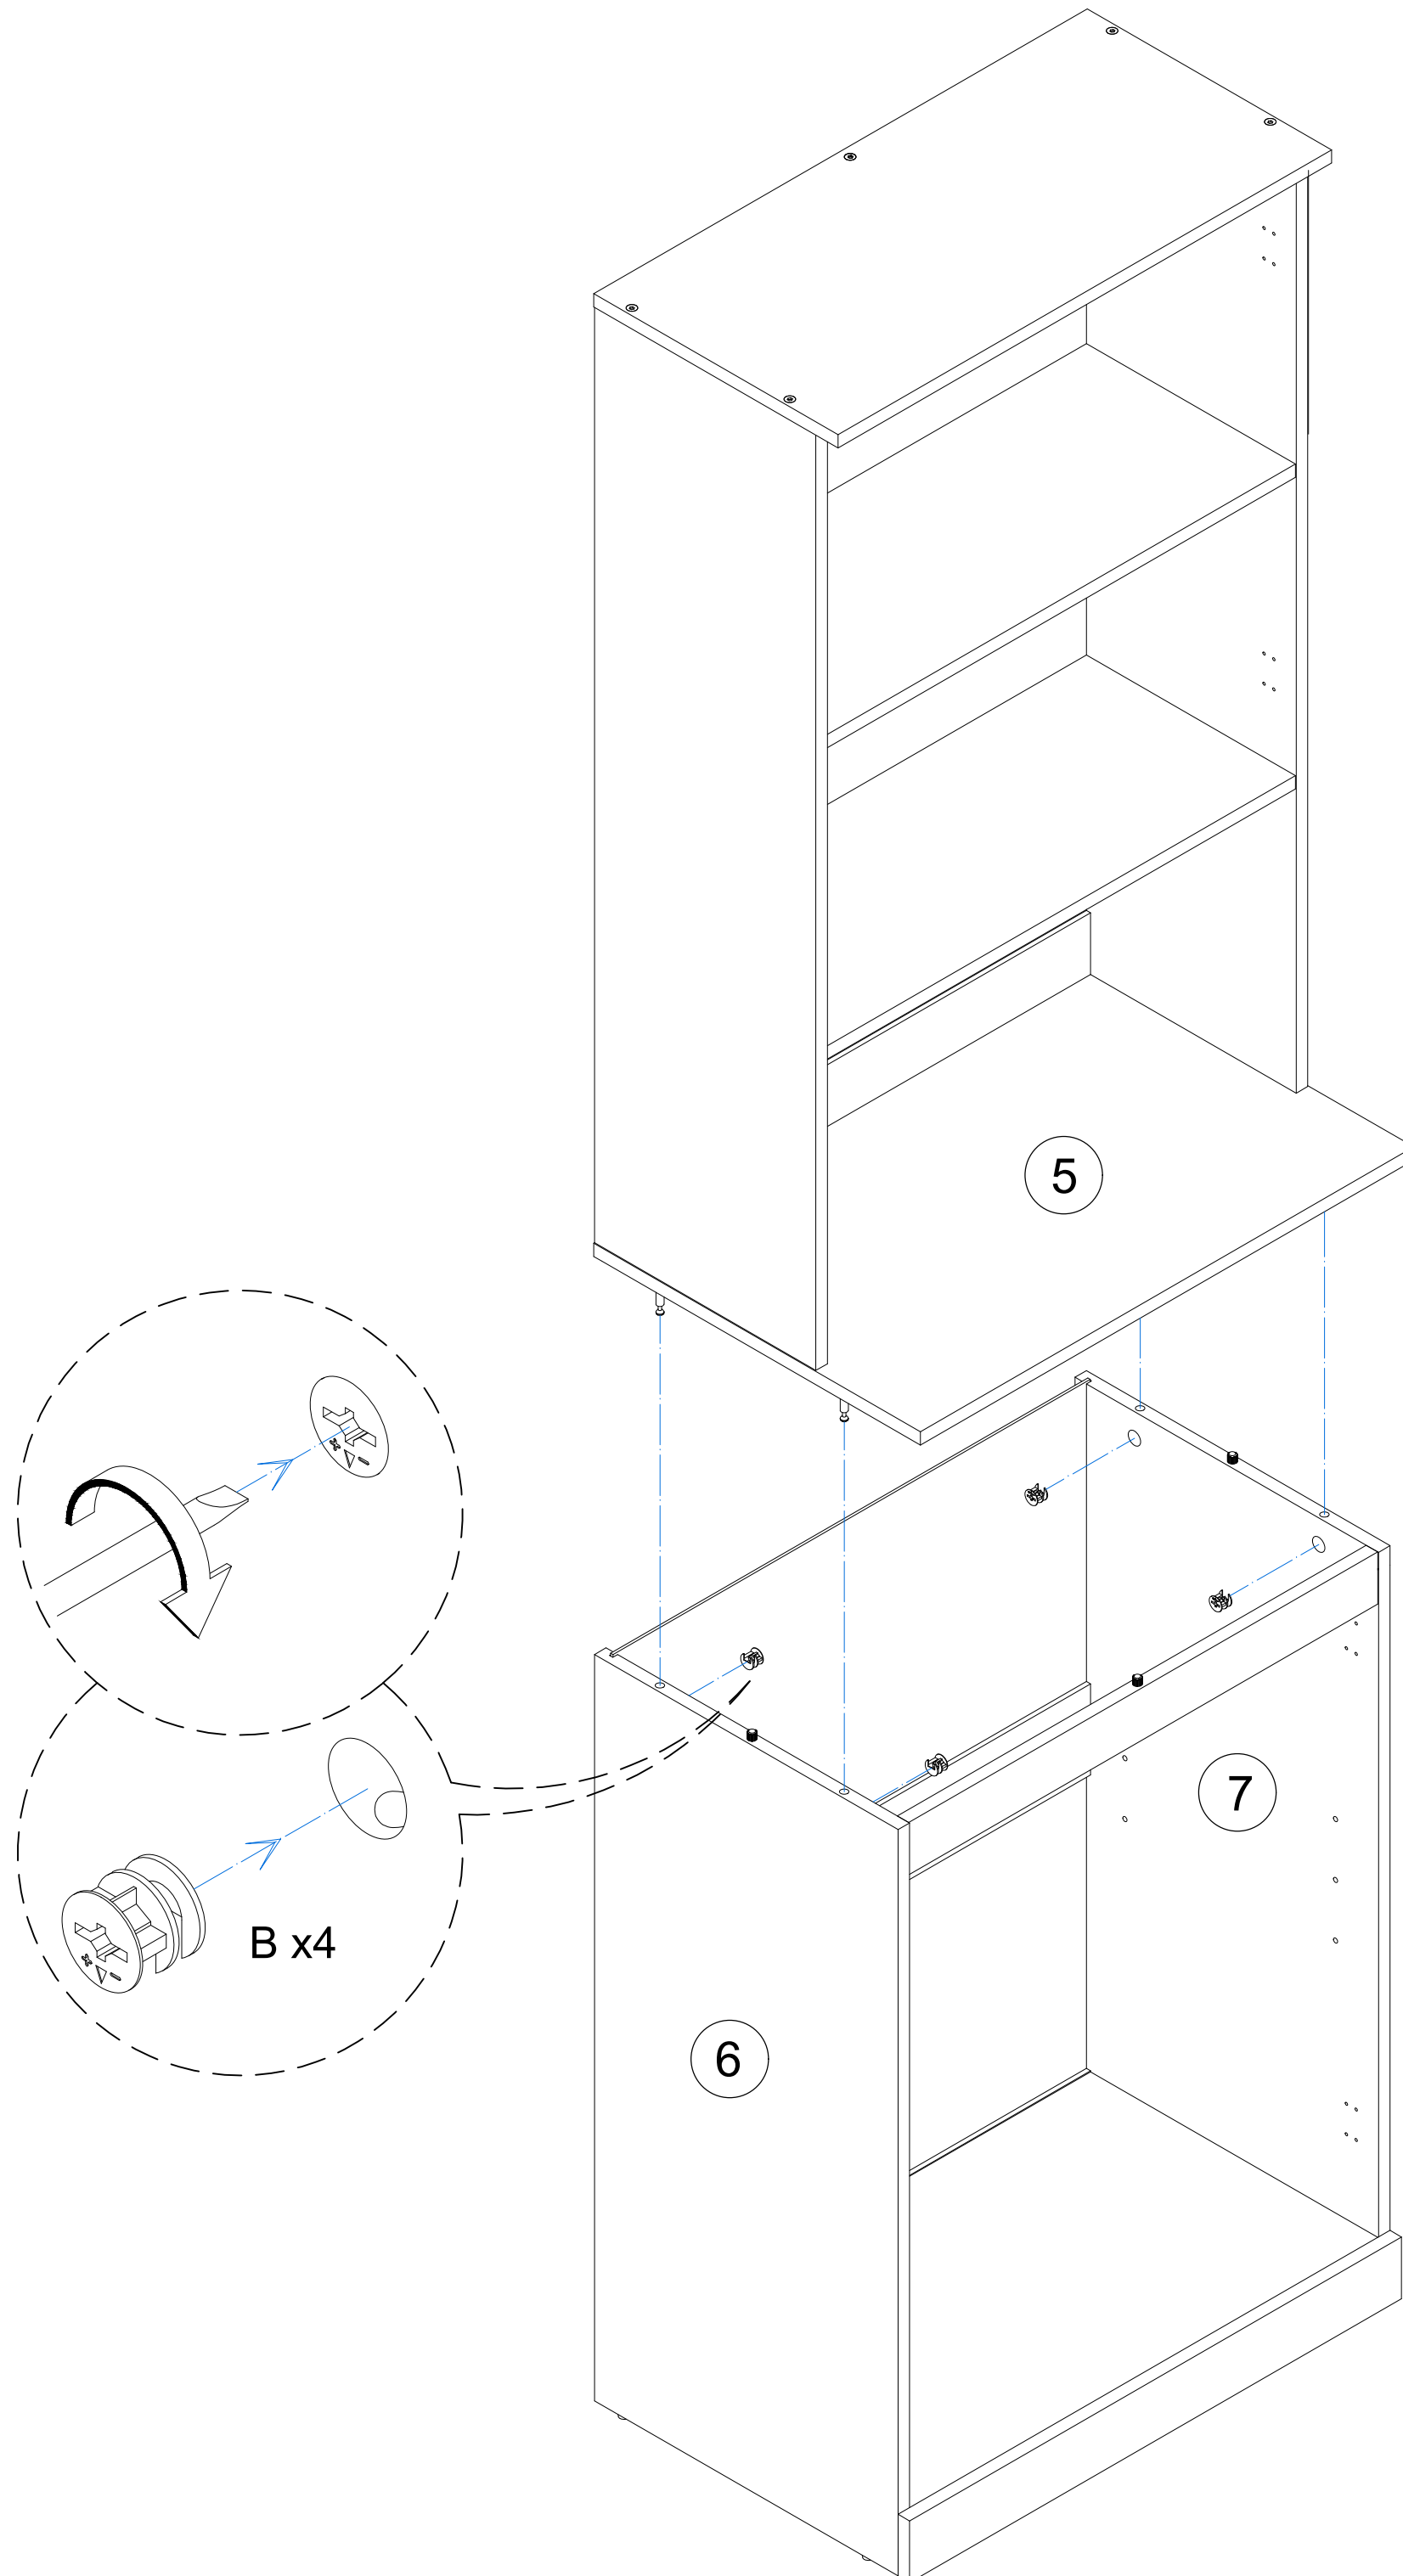
B x4



17

YOU WILL NEED

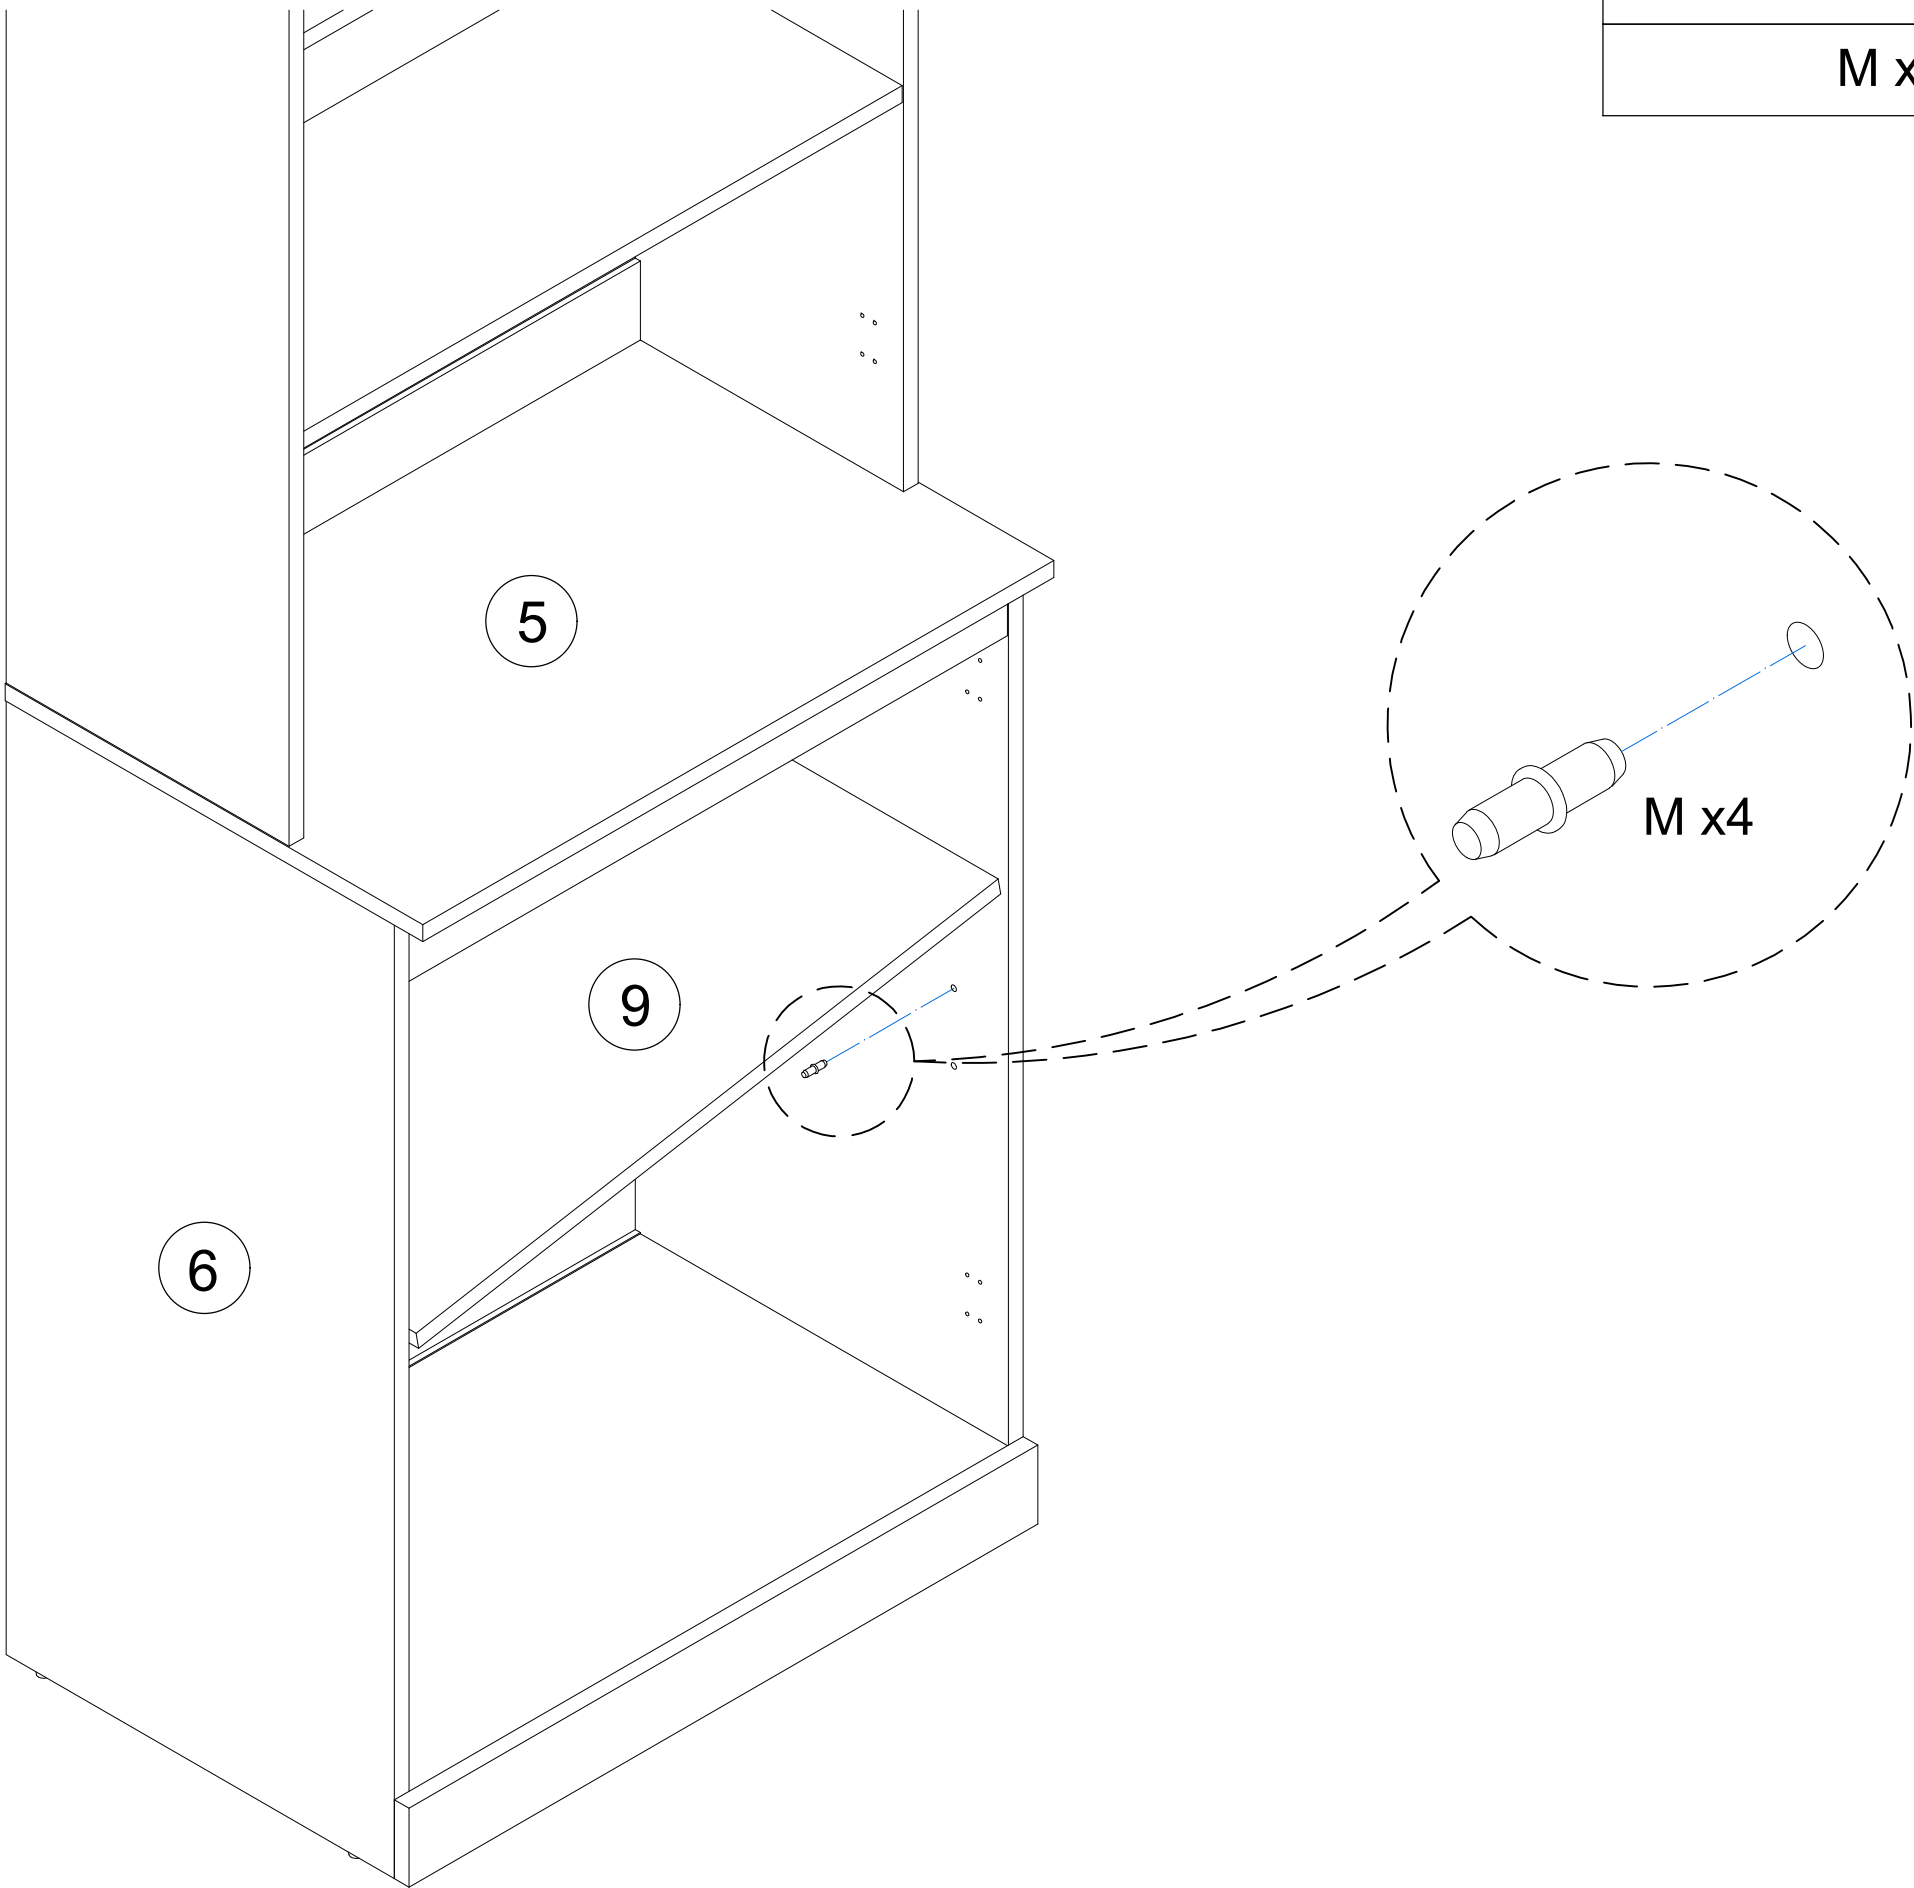M x4




18


YOU WILL NEED

D x20

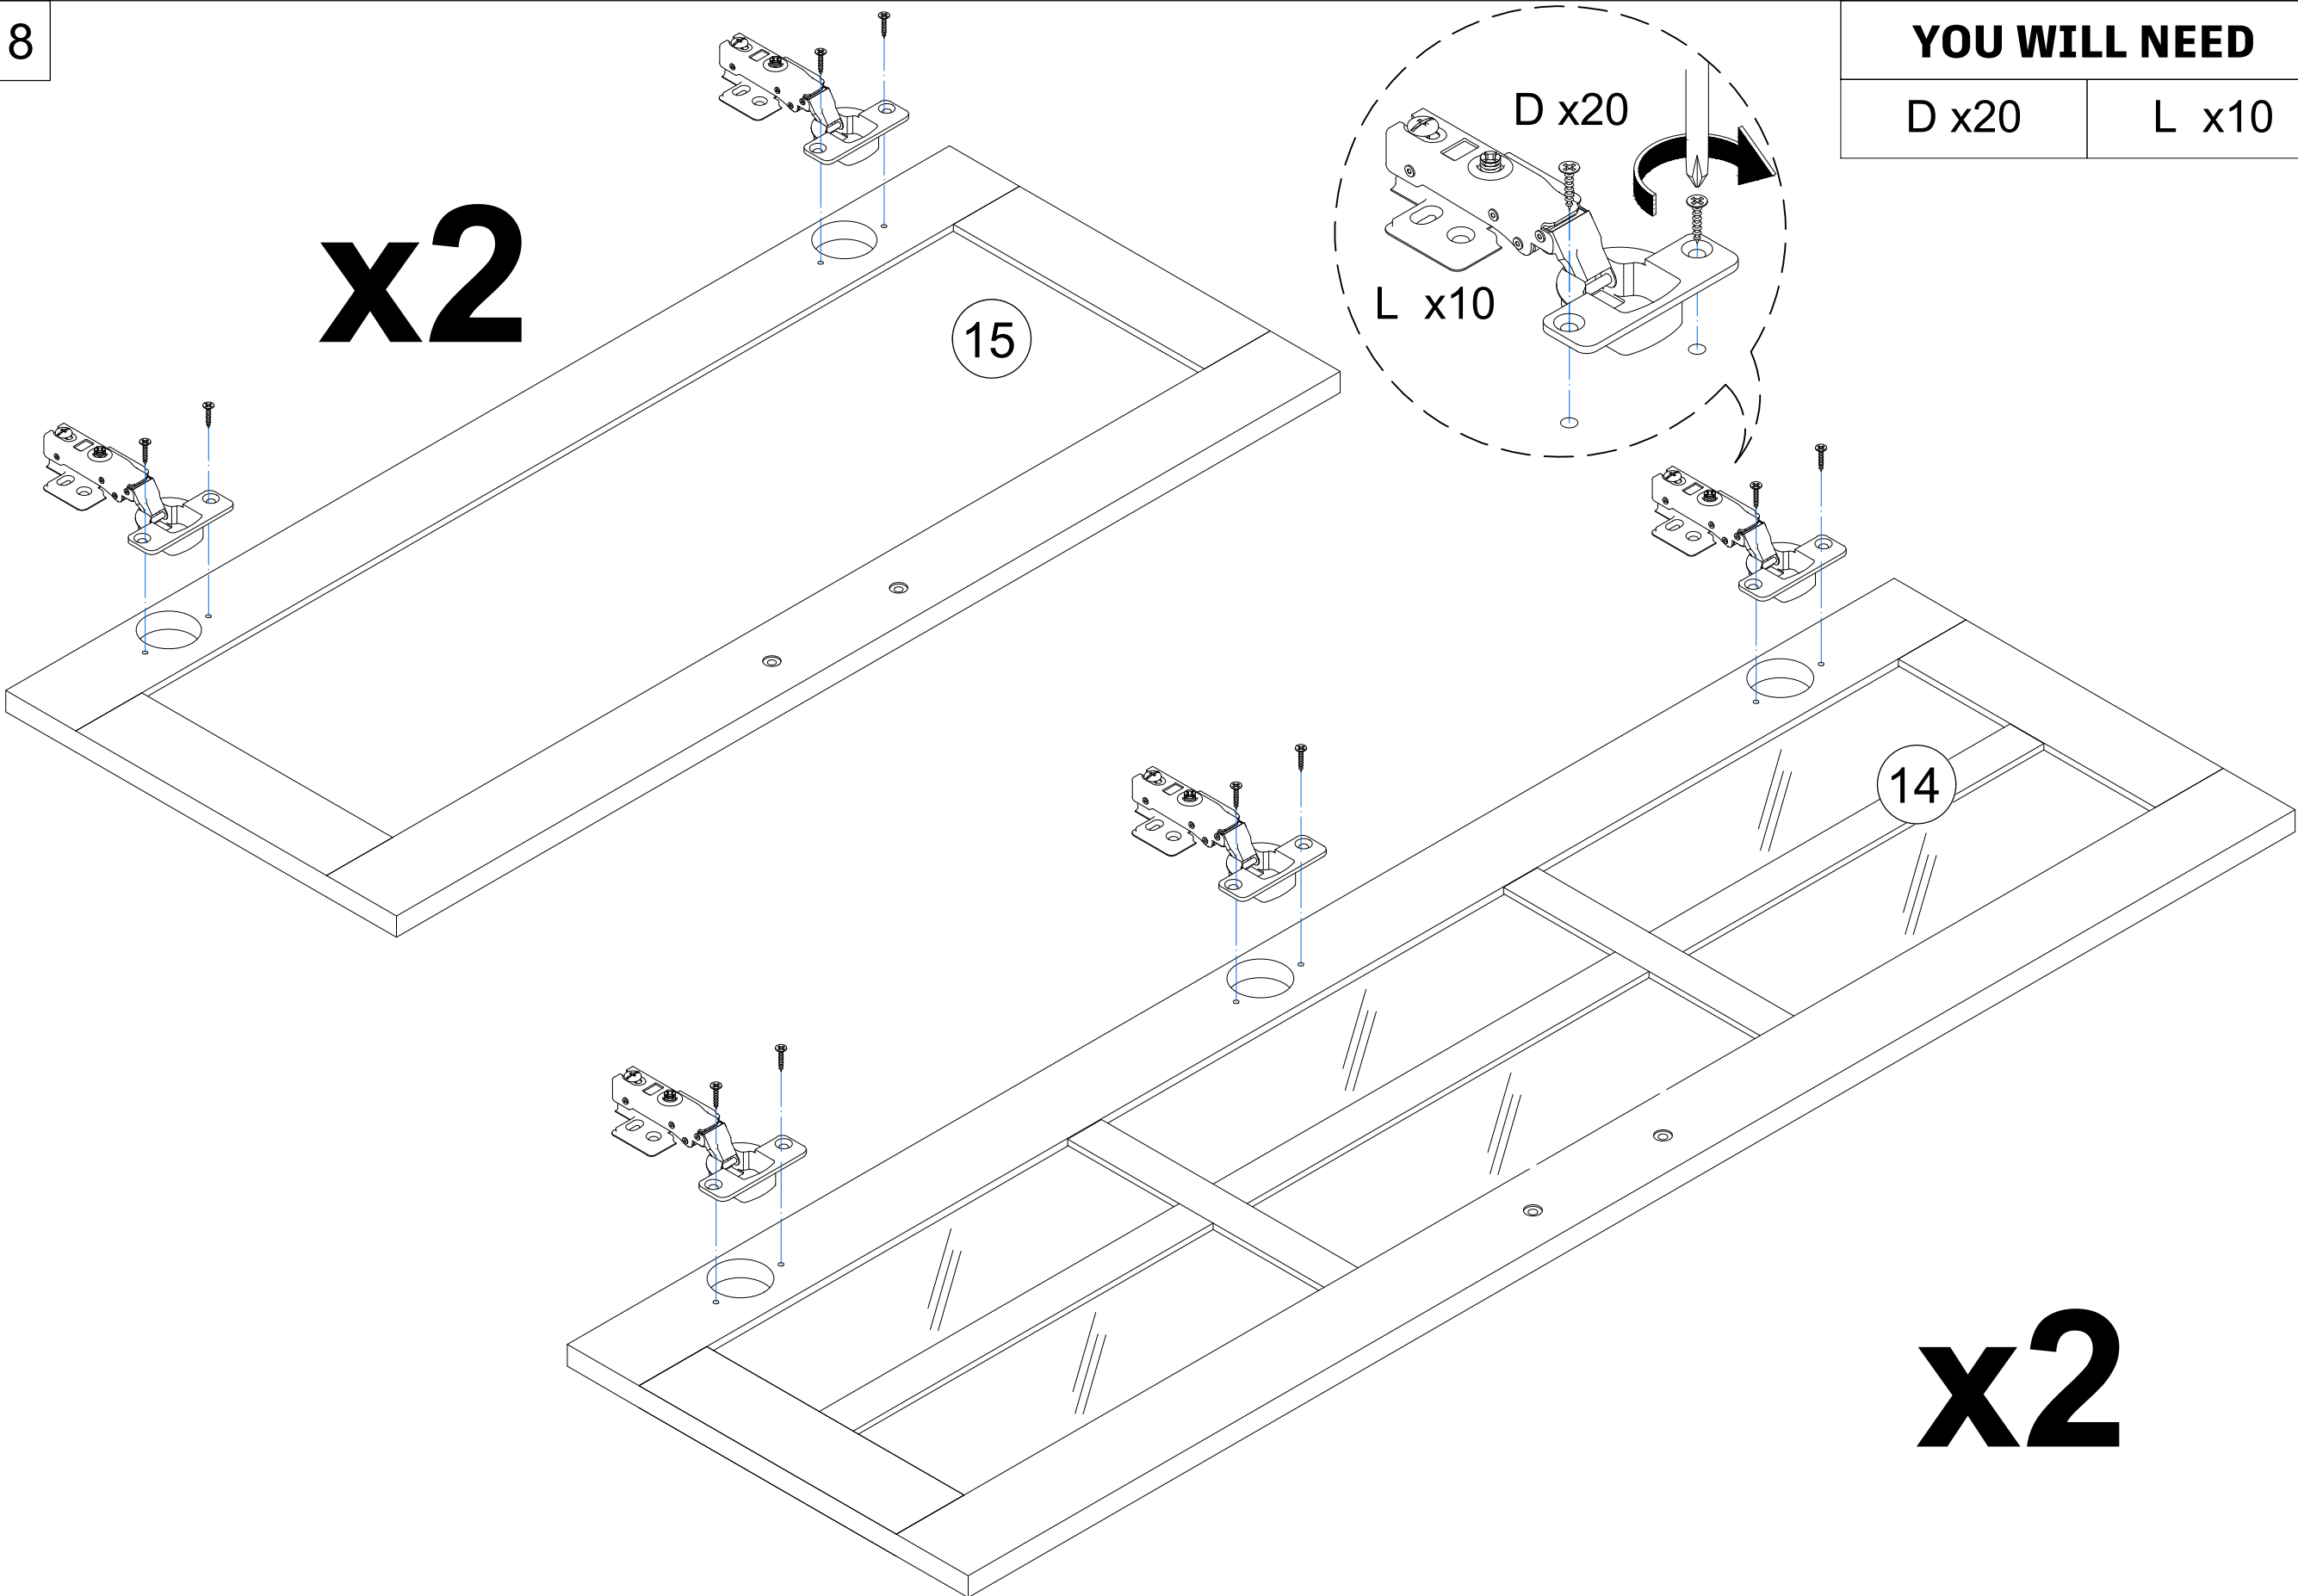
L x10




YOU WILL NEED	
D x20	H x2
I x4	Q x1

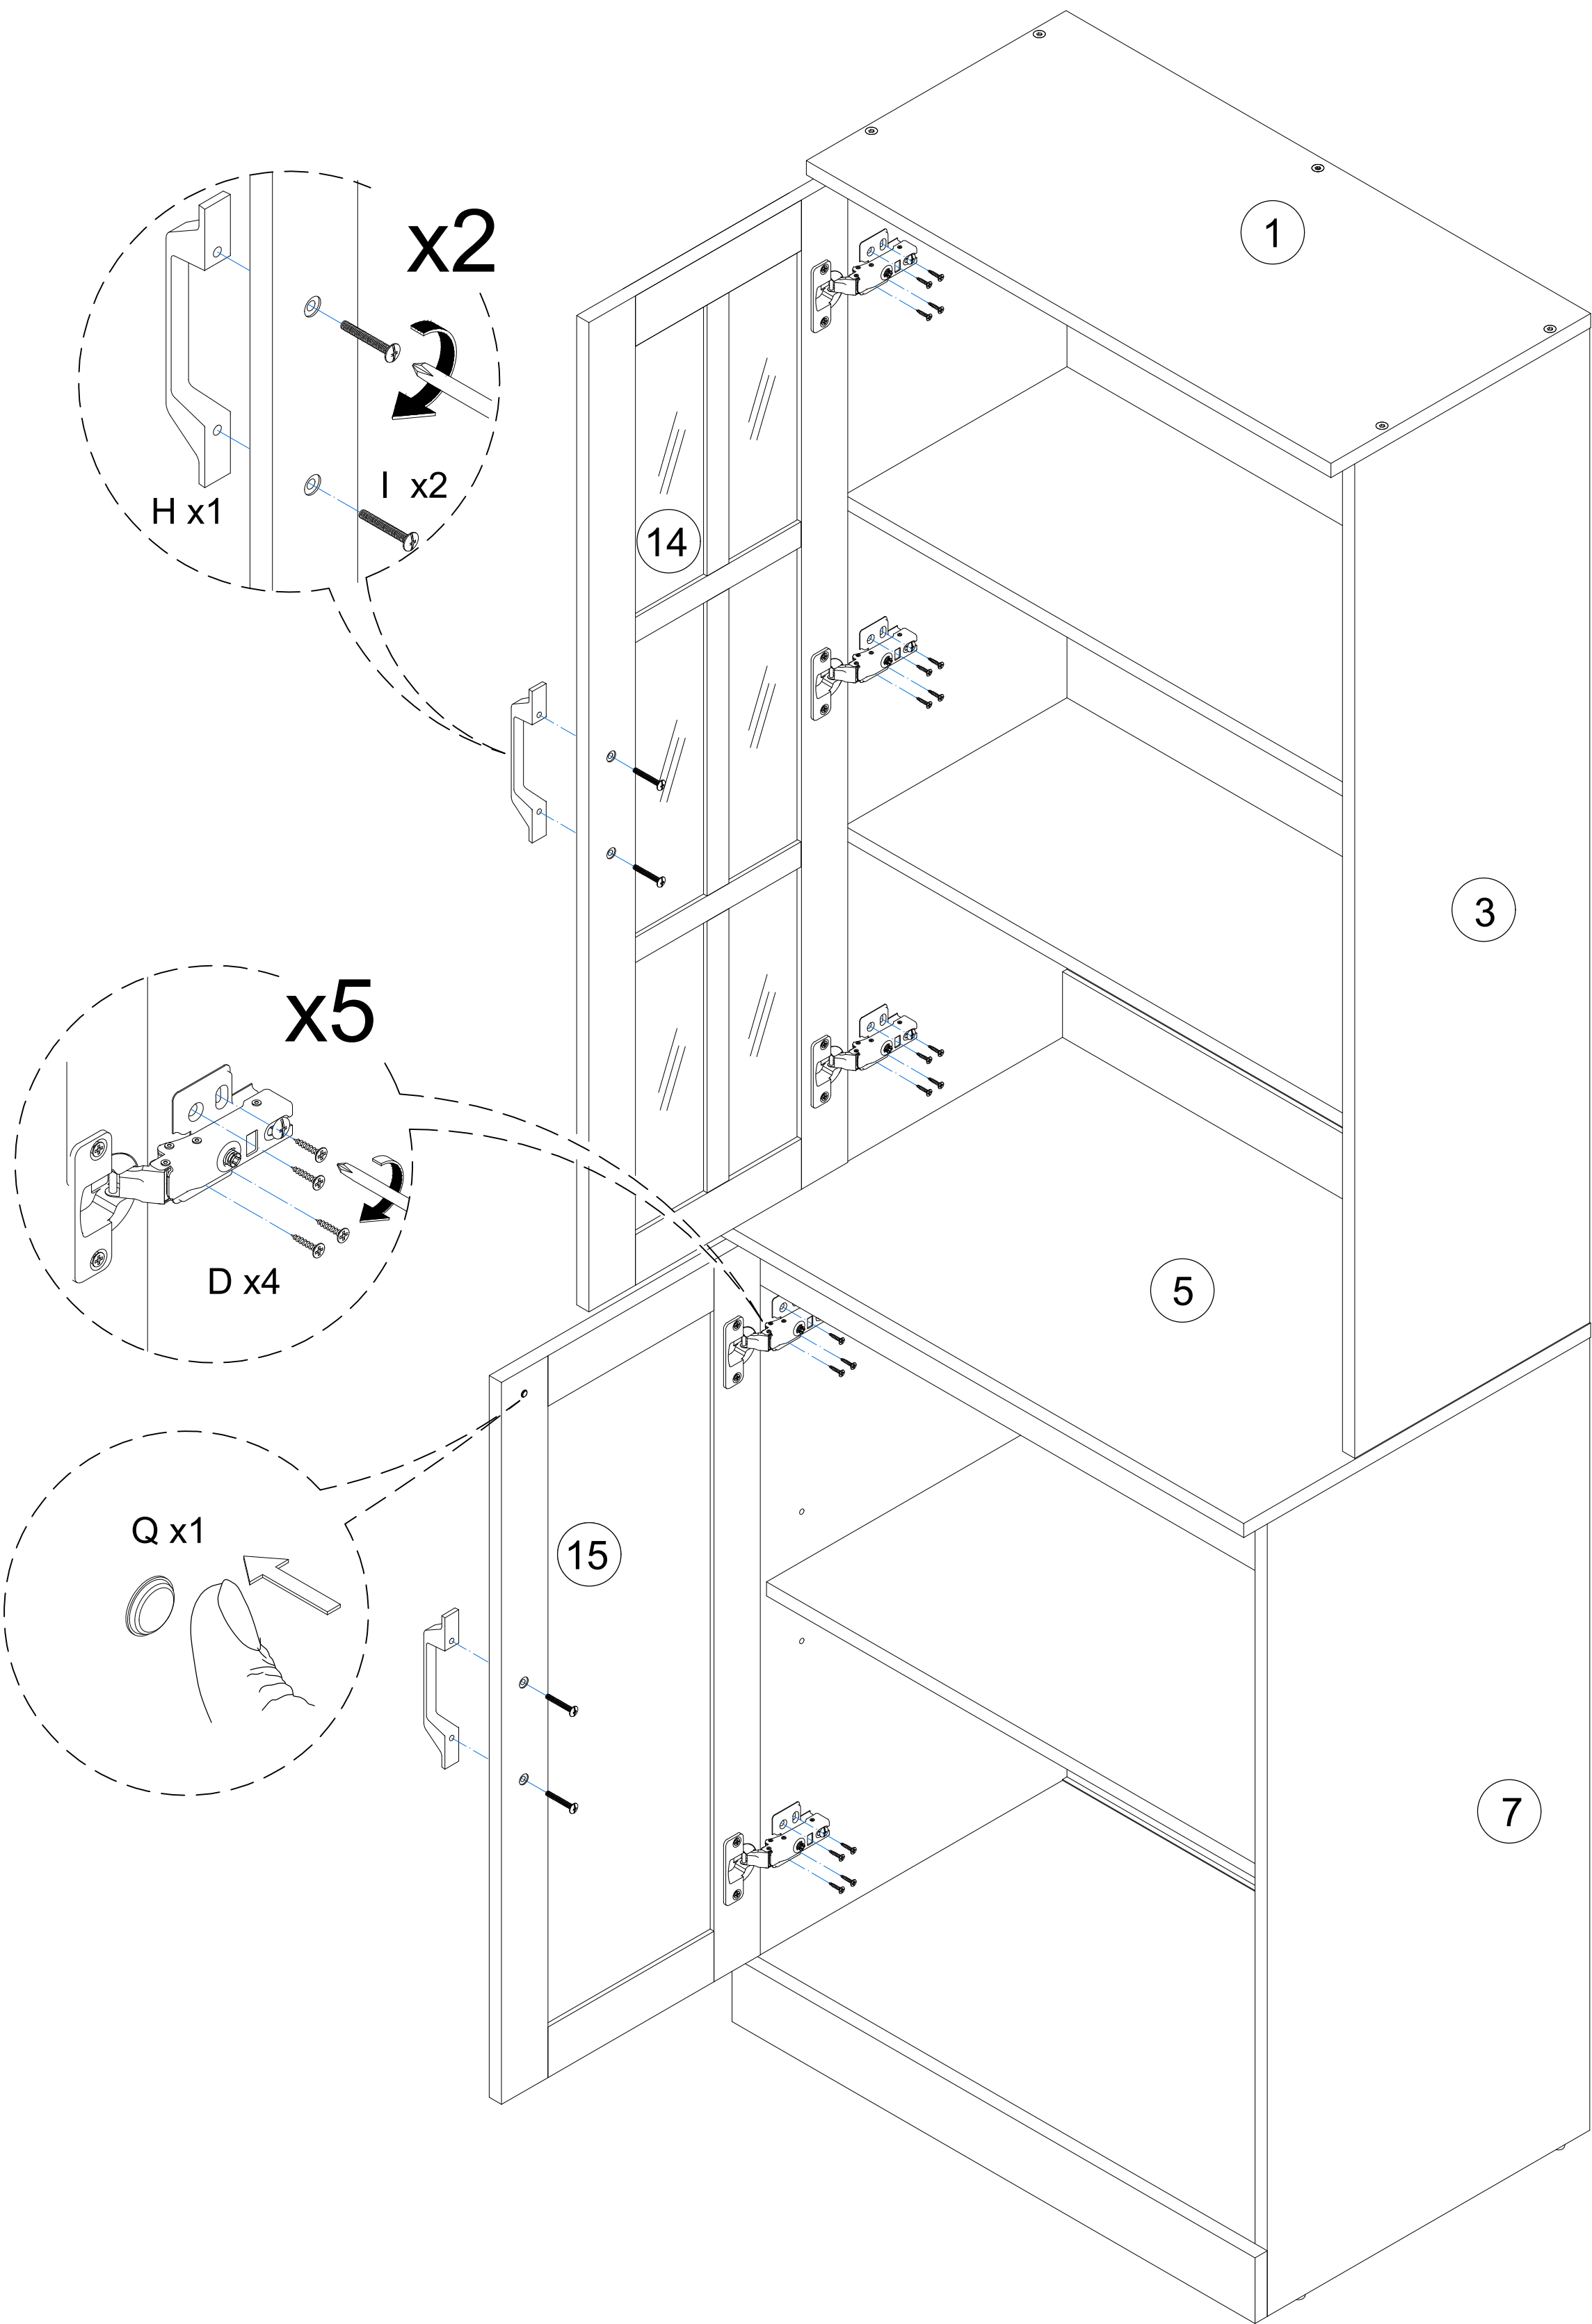

YOU WILL NEED	
D x20	H x2
I x4	Q x1

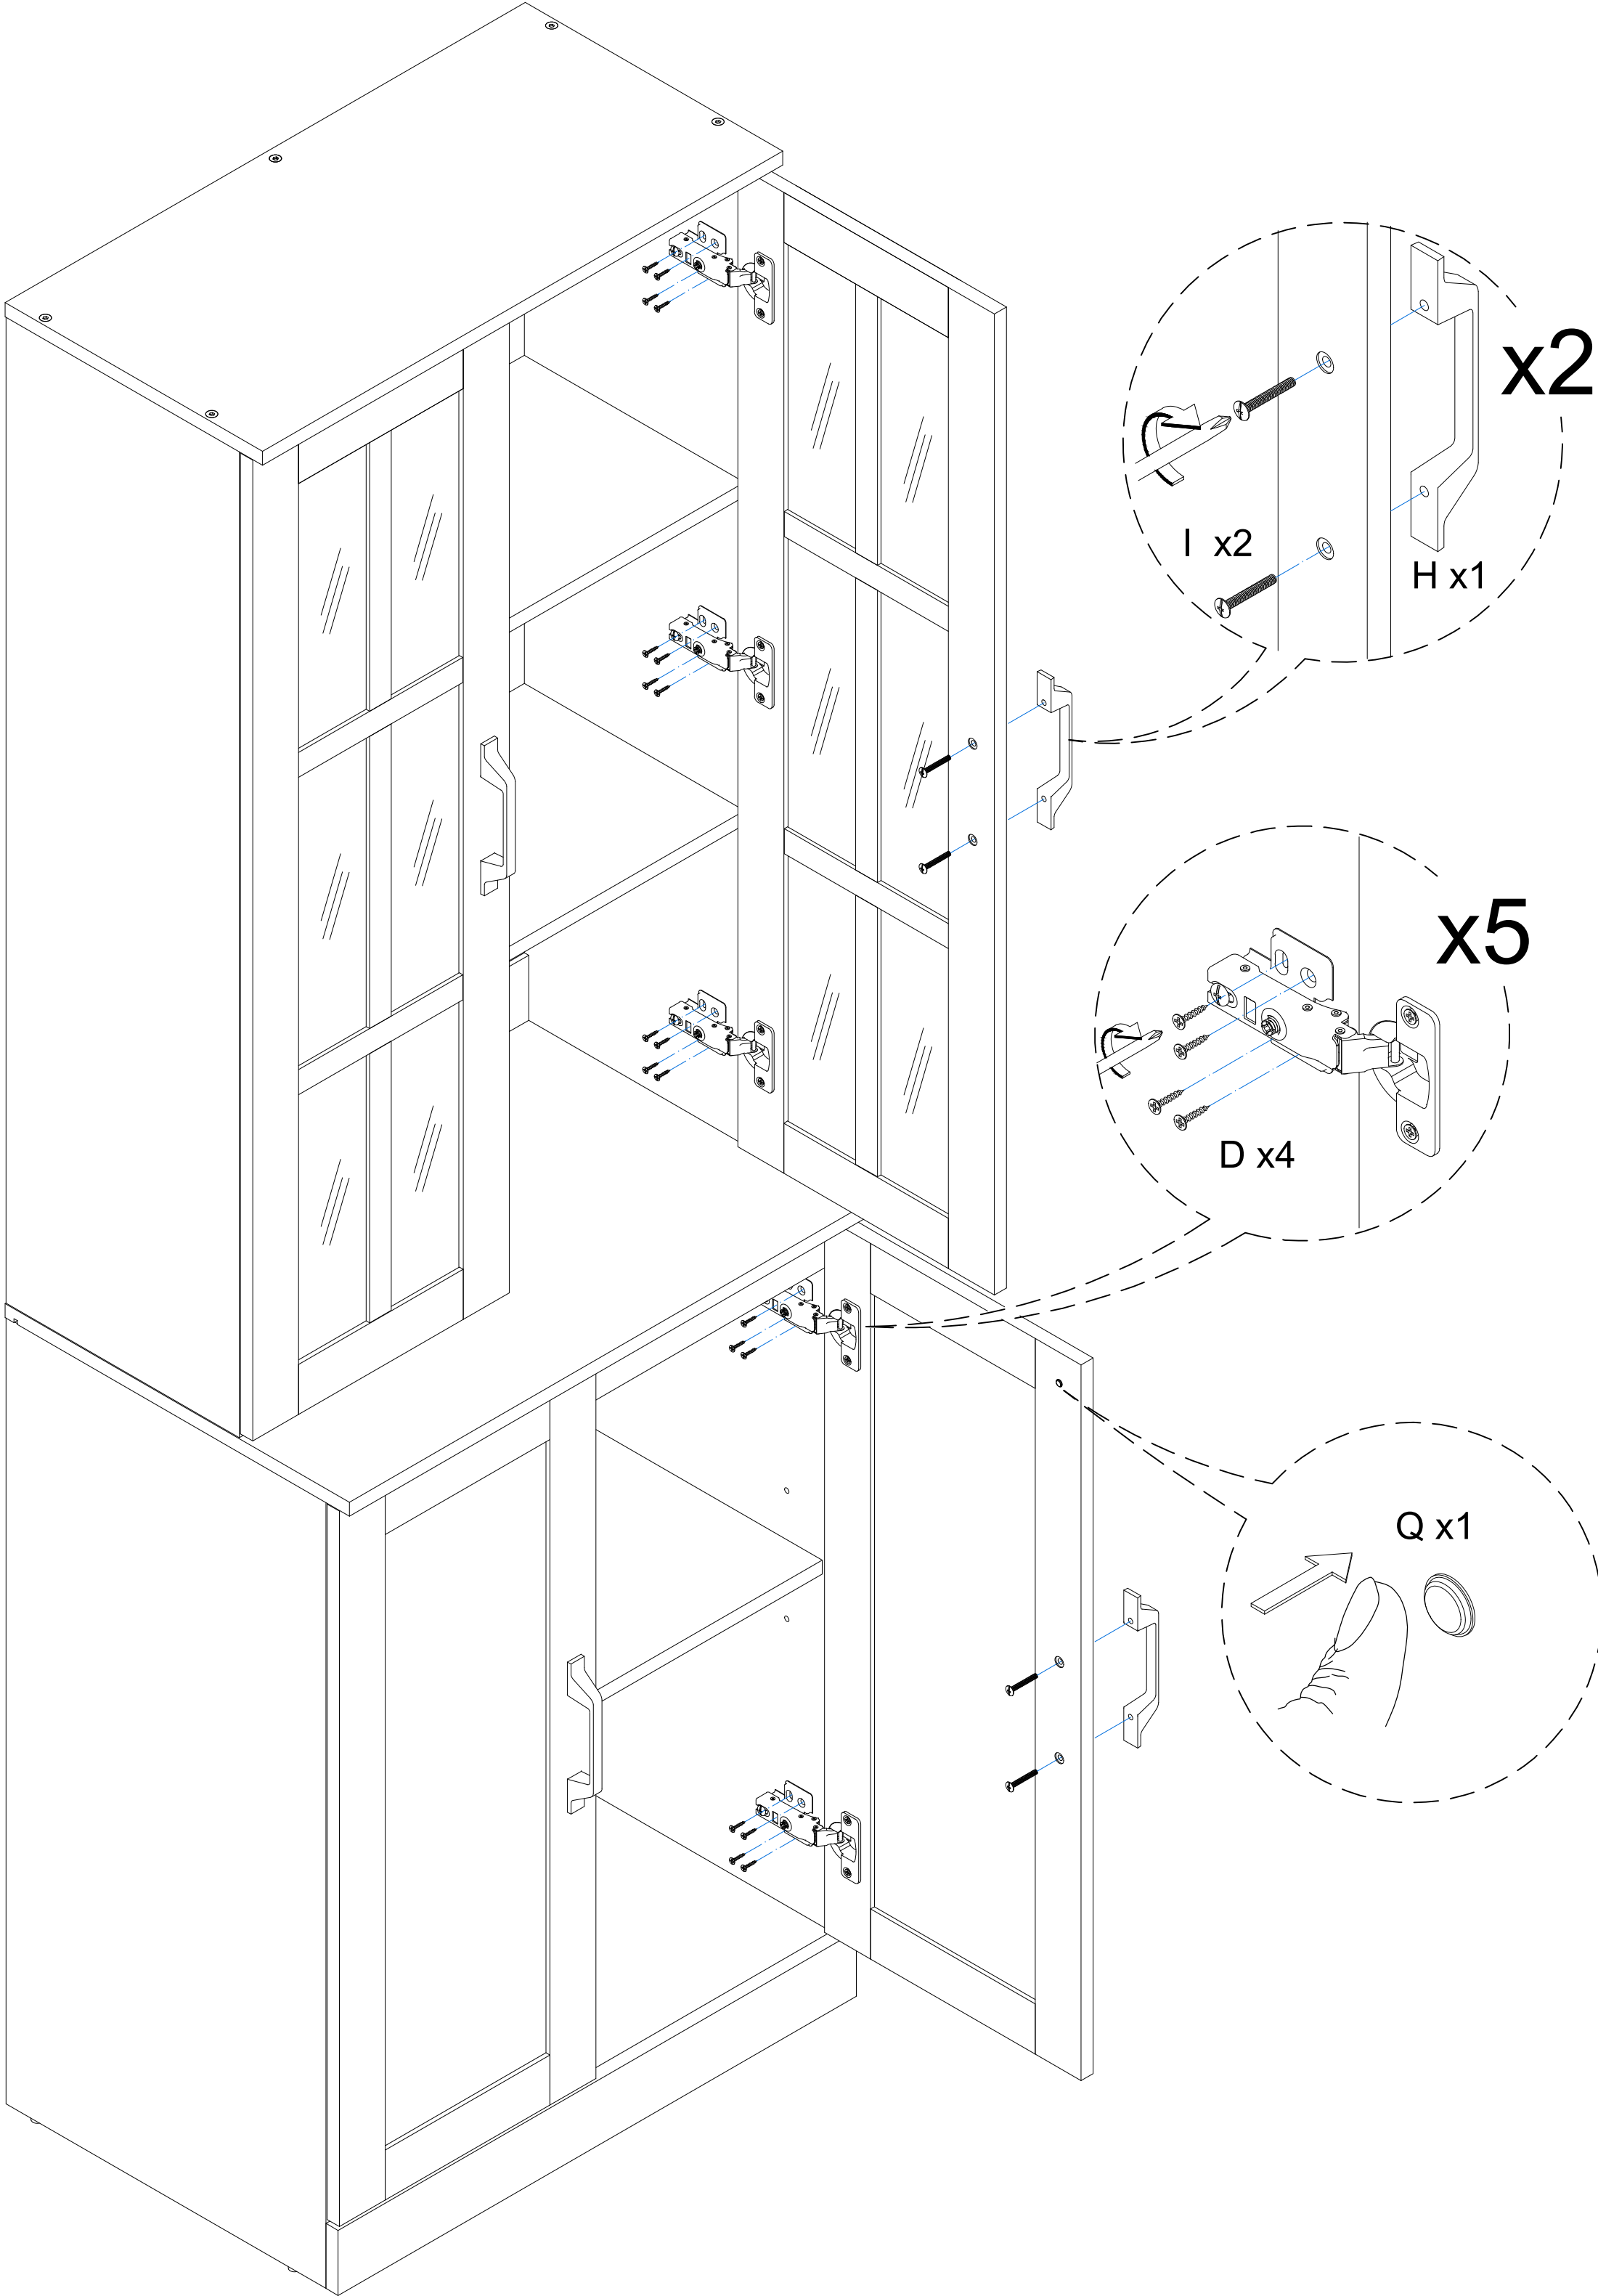

YOU WILL NEED		
F.1 x20	F.2 x20	P.1 x2
P.2 x2		P.3 x2

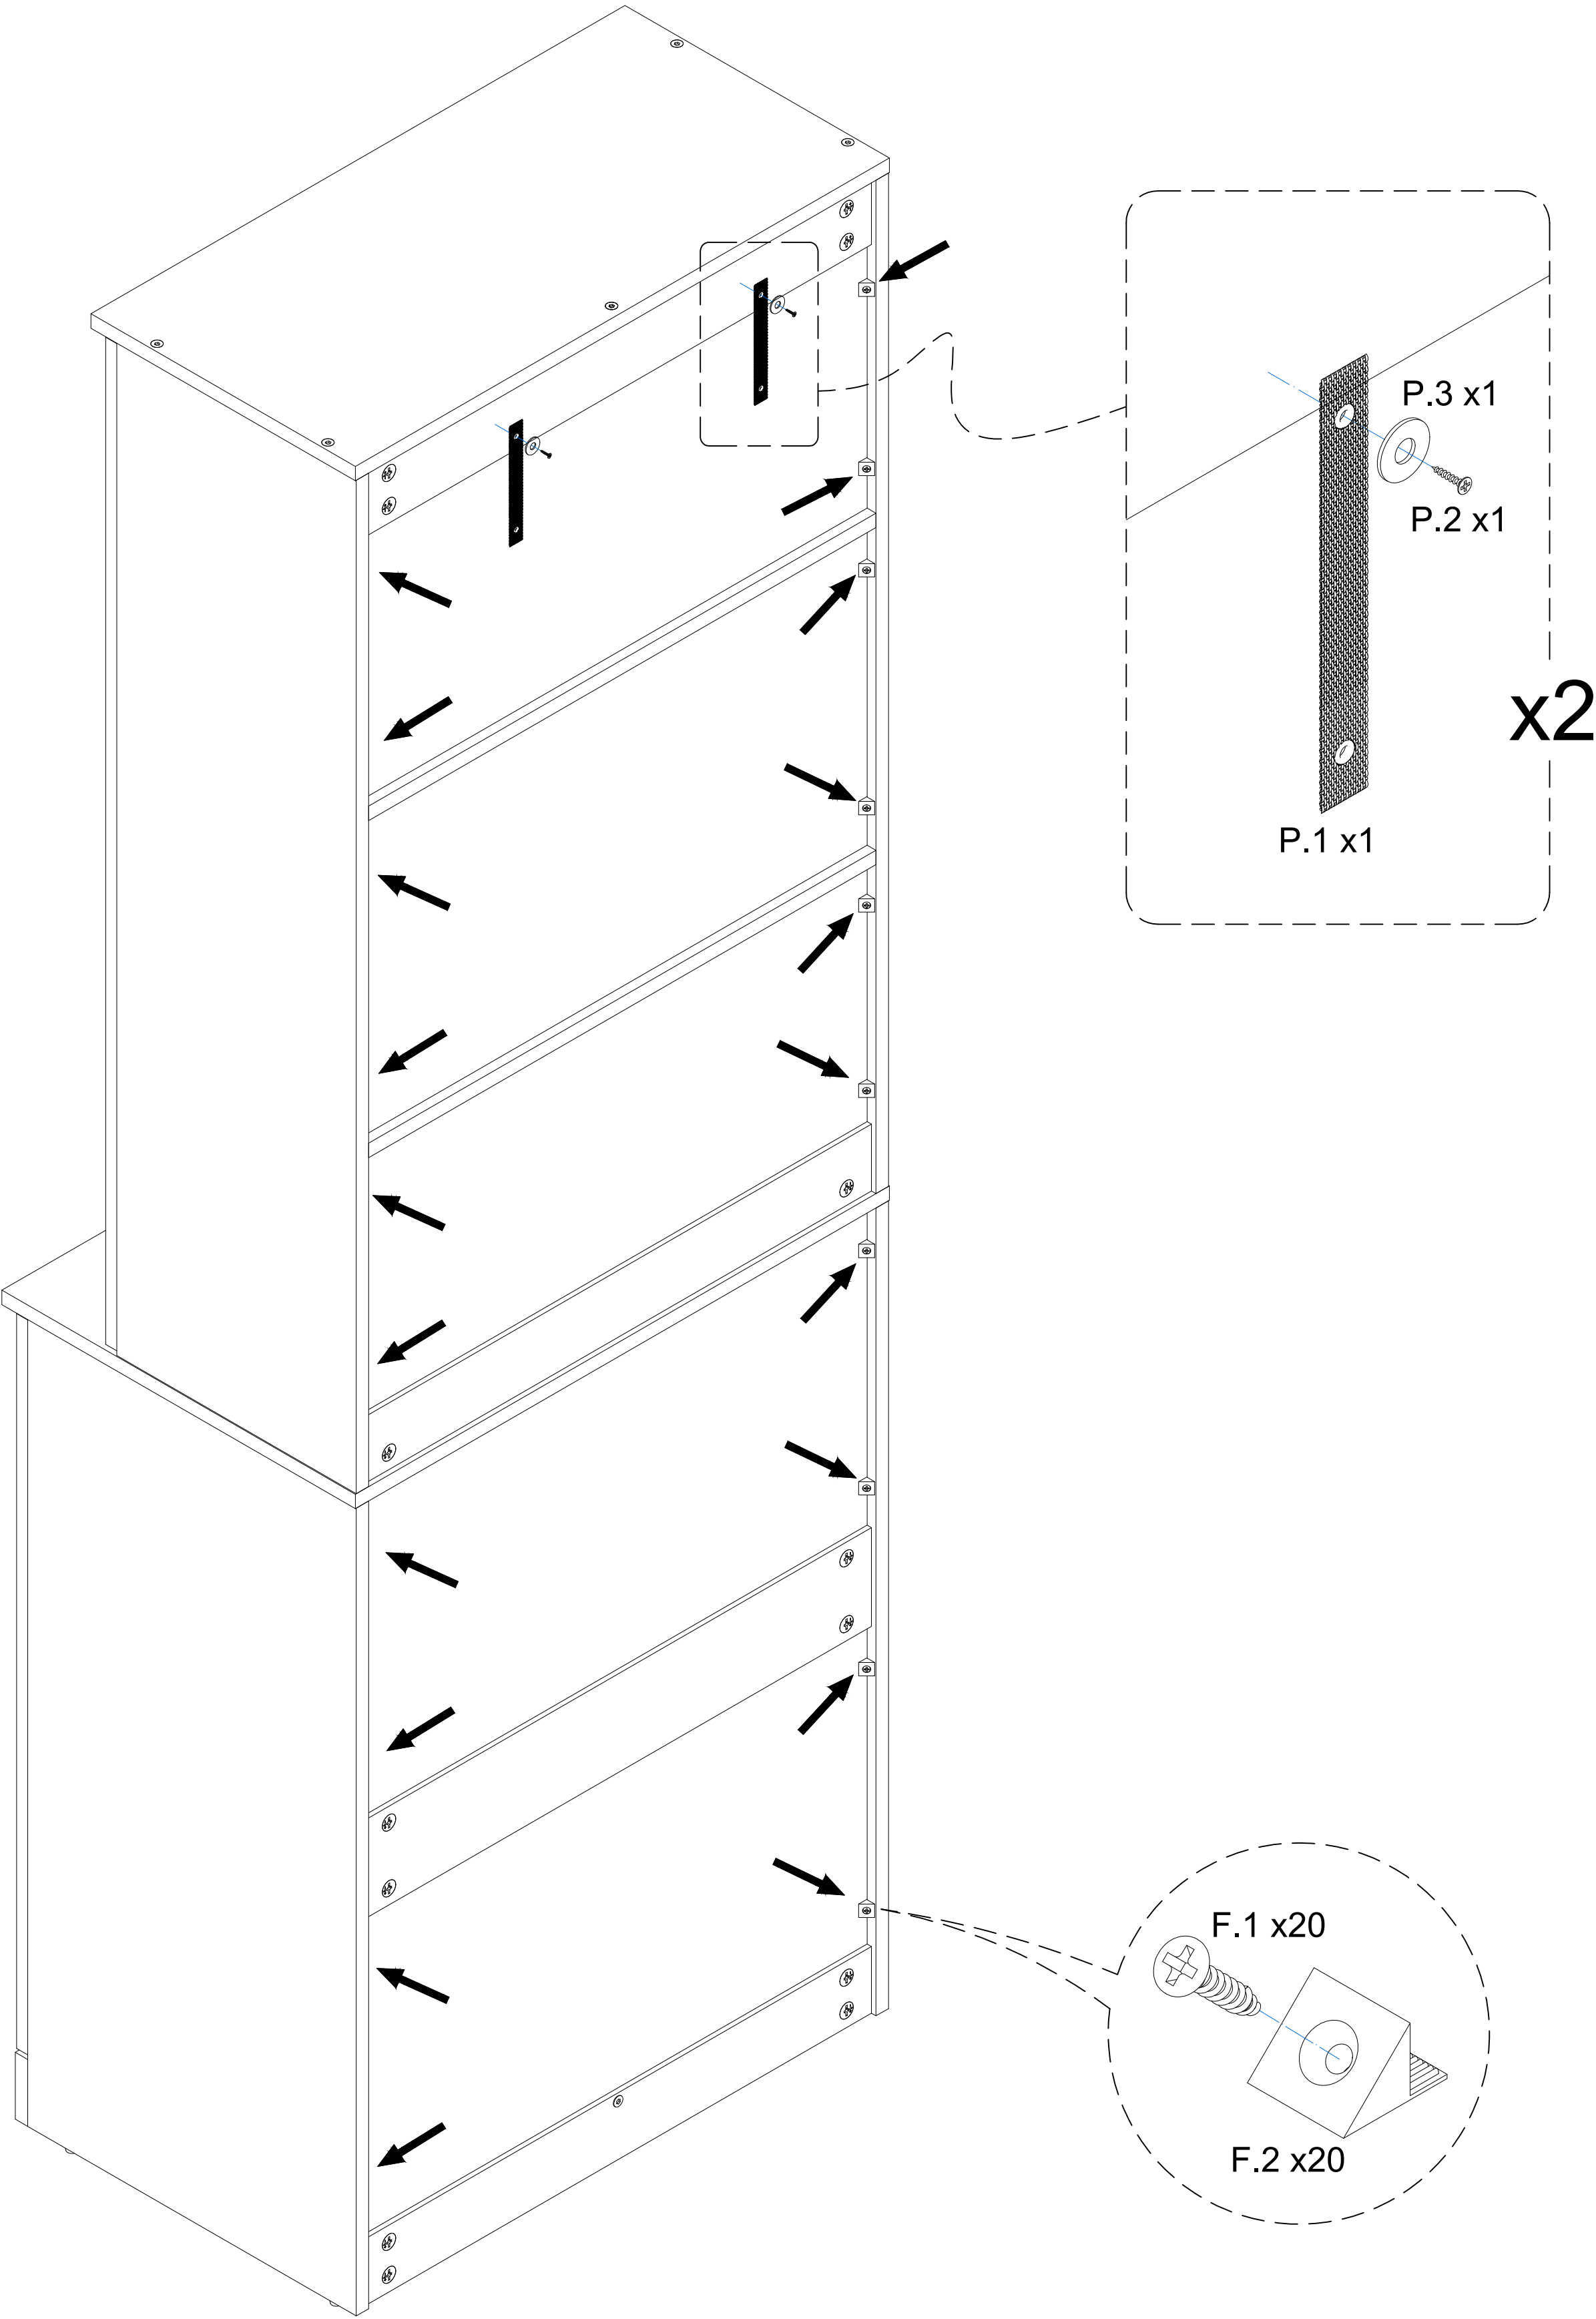


YOU WILL NEED

O.1 x2

O.2 x2

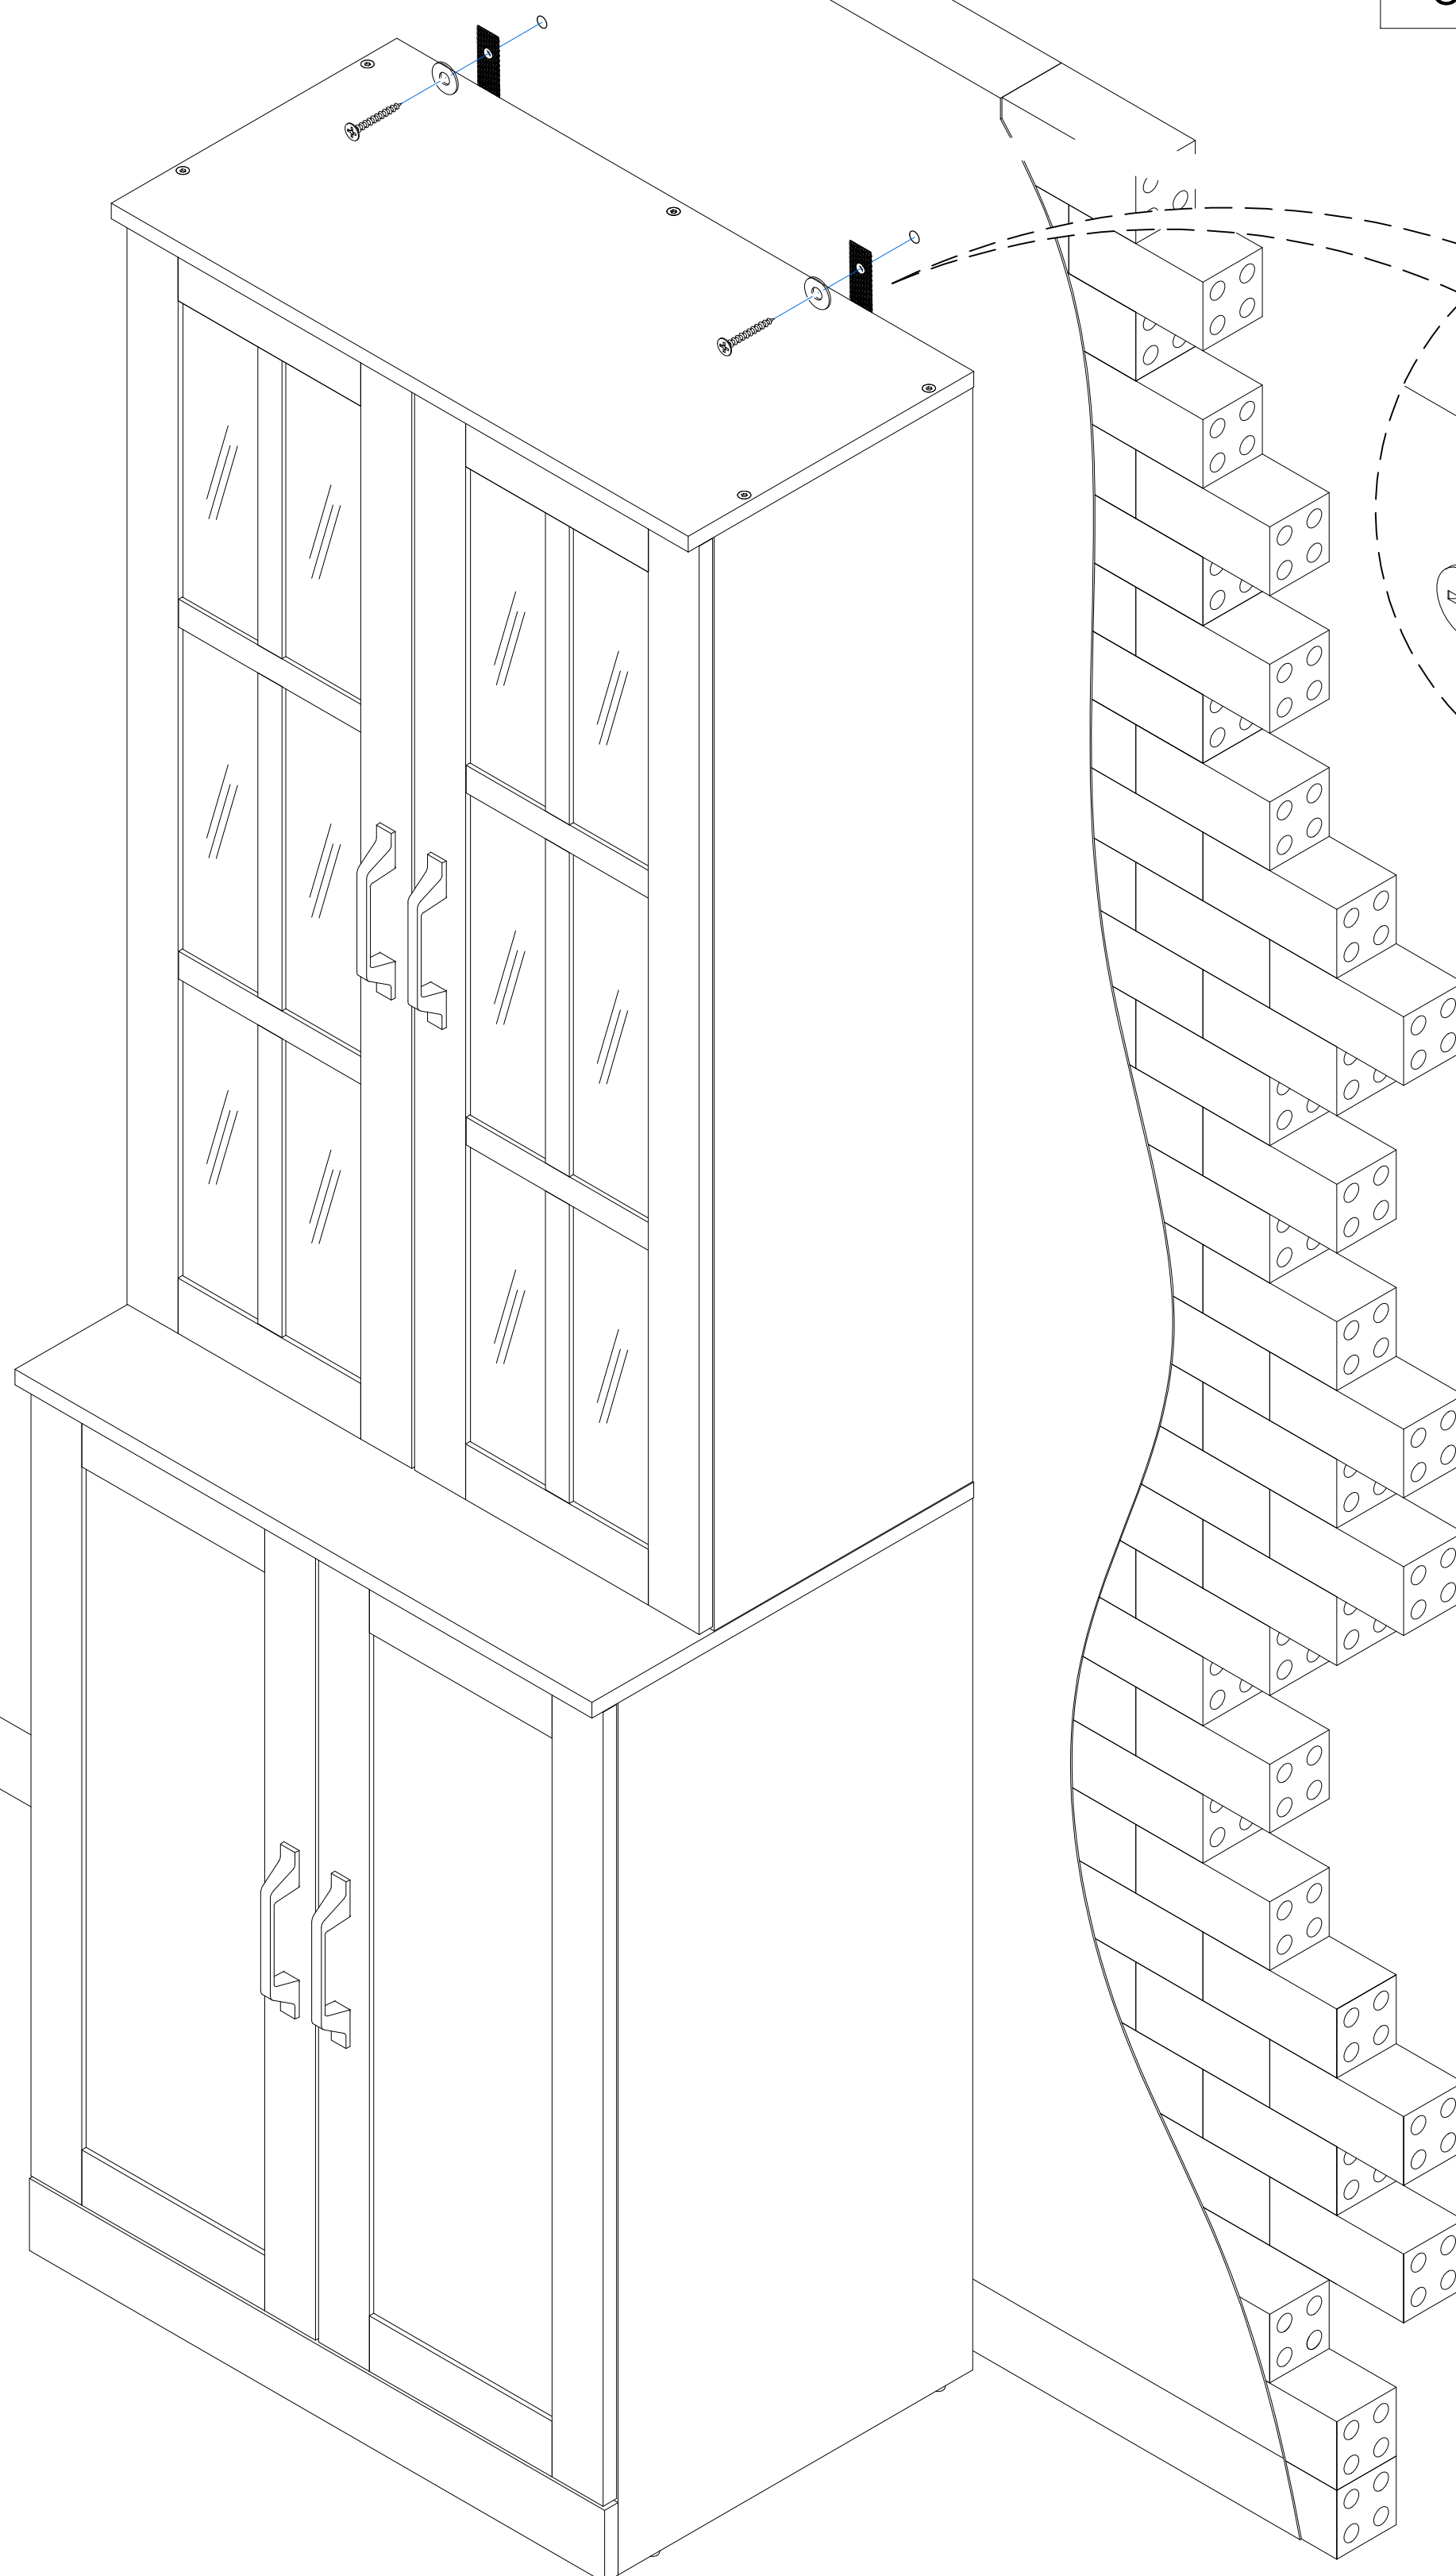P.3 x2



x2

P.1 x1

P.3 x1

O.2 x1

WALL

Mark the
hole drilling
location

I x2

WALL

Drill a hole

II x2

WALL

Use a hammer
to close
anchor (O.1)


III x2

Step1: determine the location of the anti-overturning on the wall and then mark the position after confirming the product has been balanced.
Step 2: drill the hole and then fixed the anchor (O.1) on the wall
Step 3: use screw (O.2) to fix the strap (P.1), and washers (P.3) on the wall


***IF THE DOOR ARE NOT BALANCE**

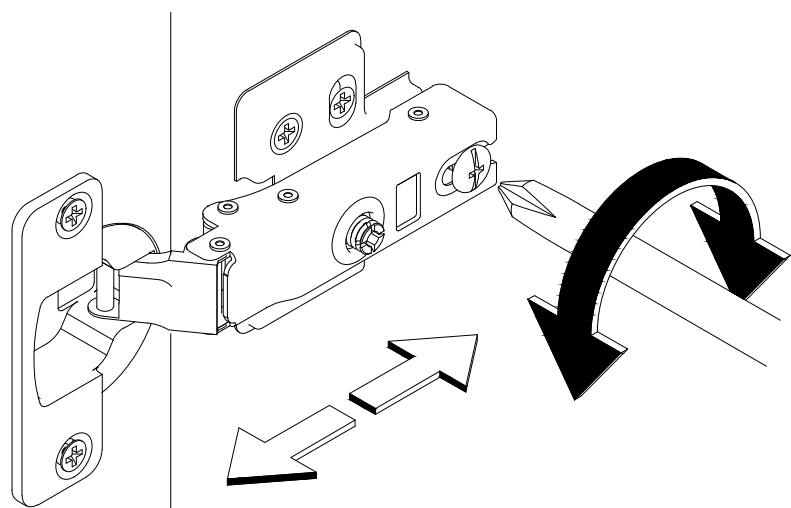Before
adjustment


After
adjustment




Adjust the
door to run
back and
forth

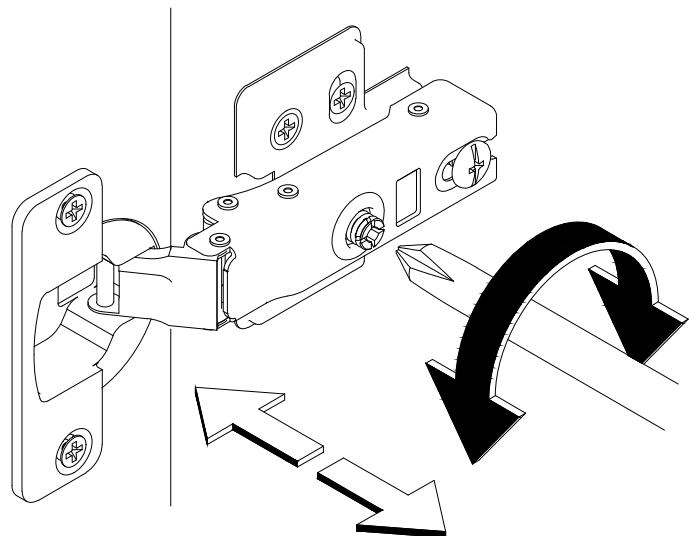

Adjust the
door left
and right

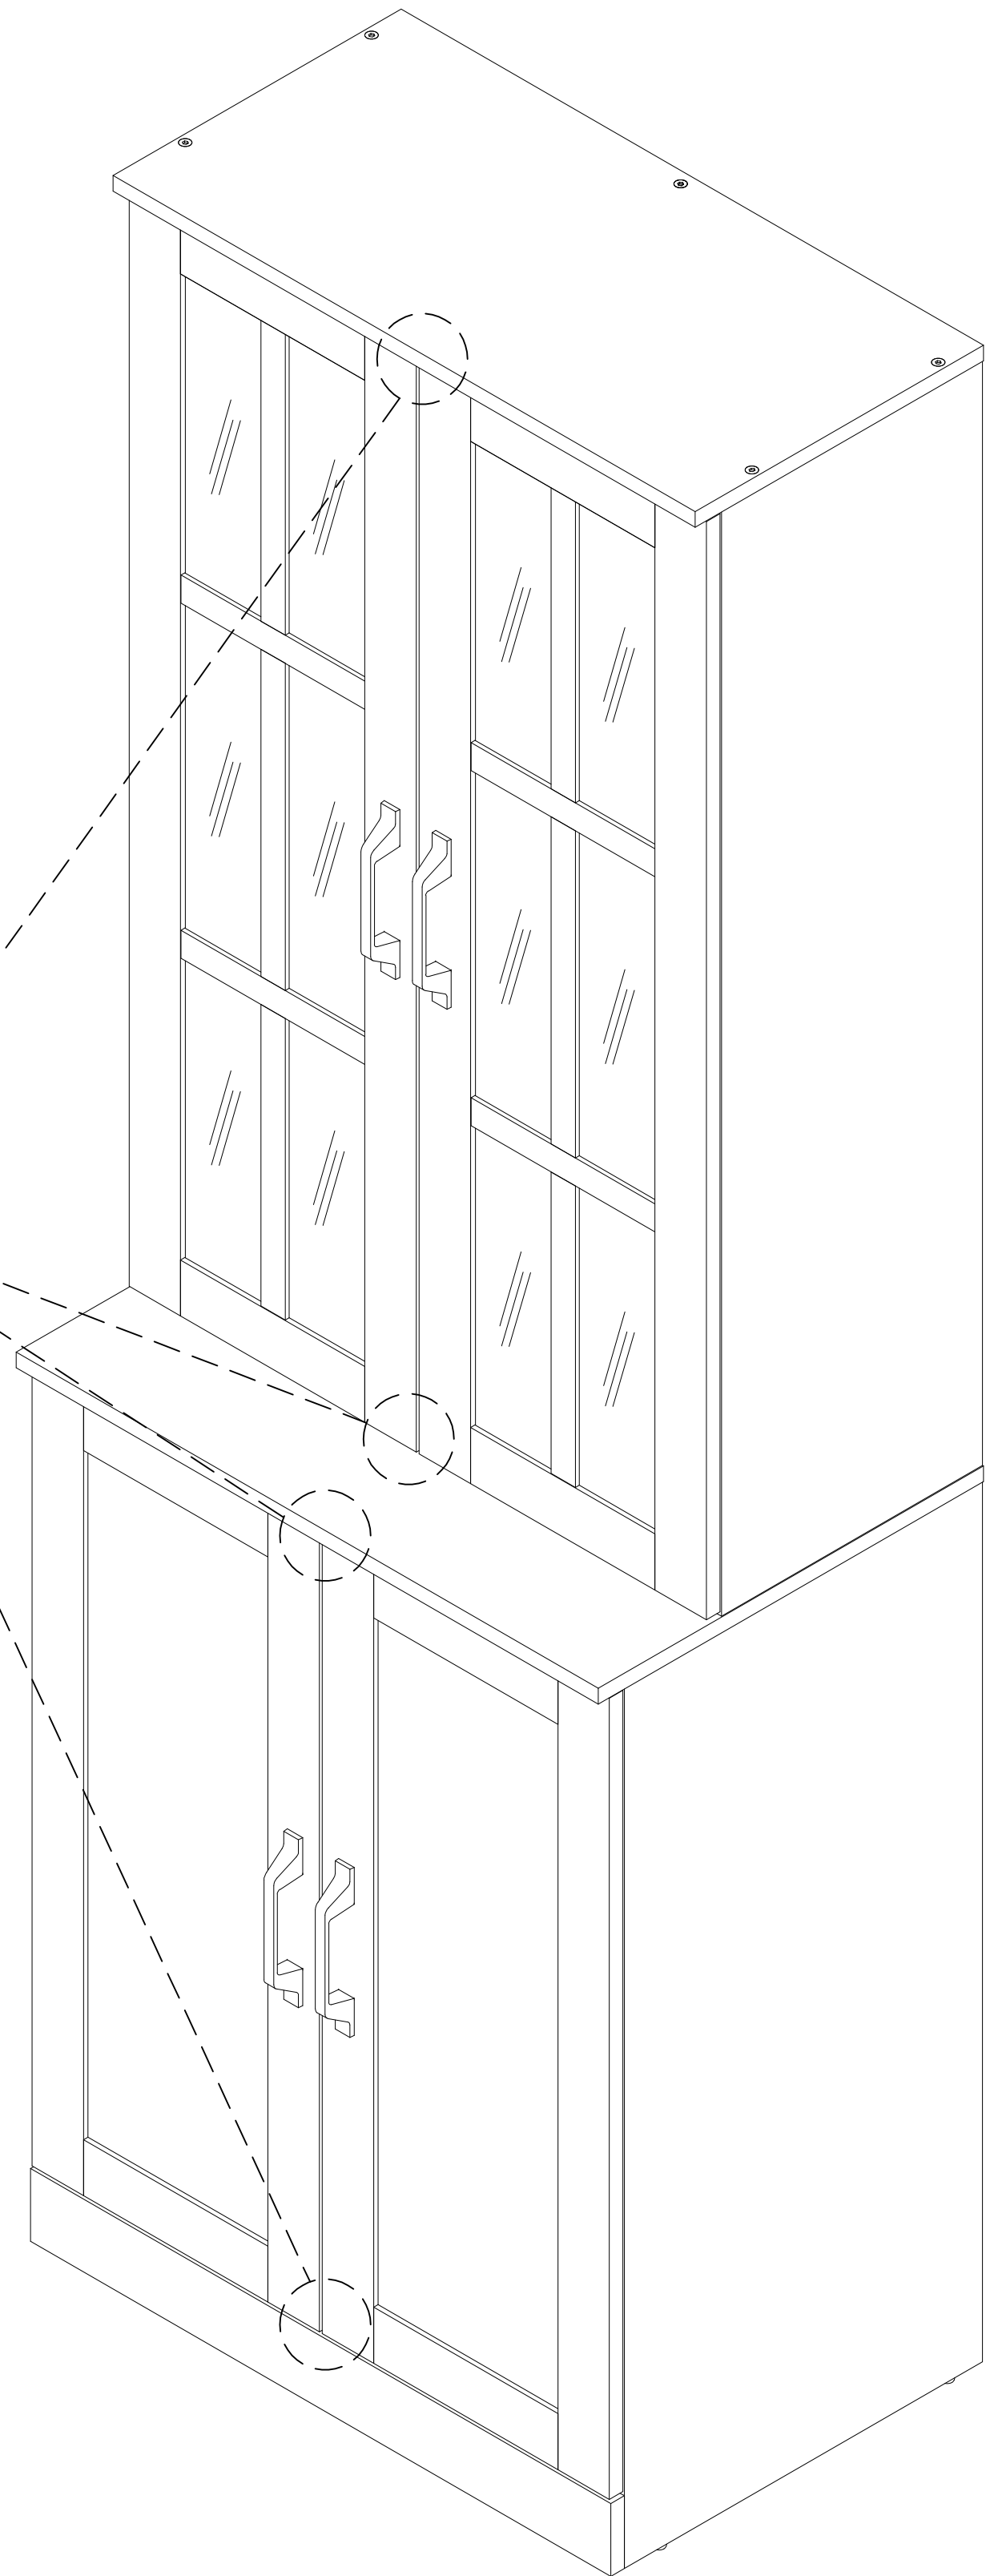

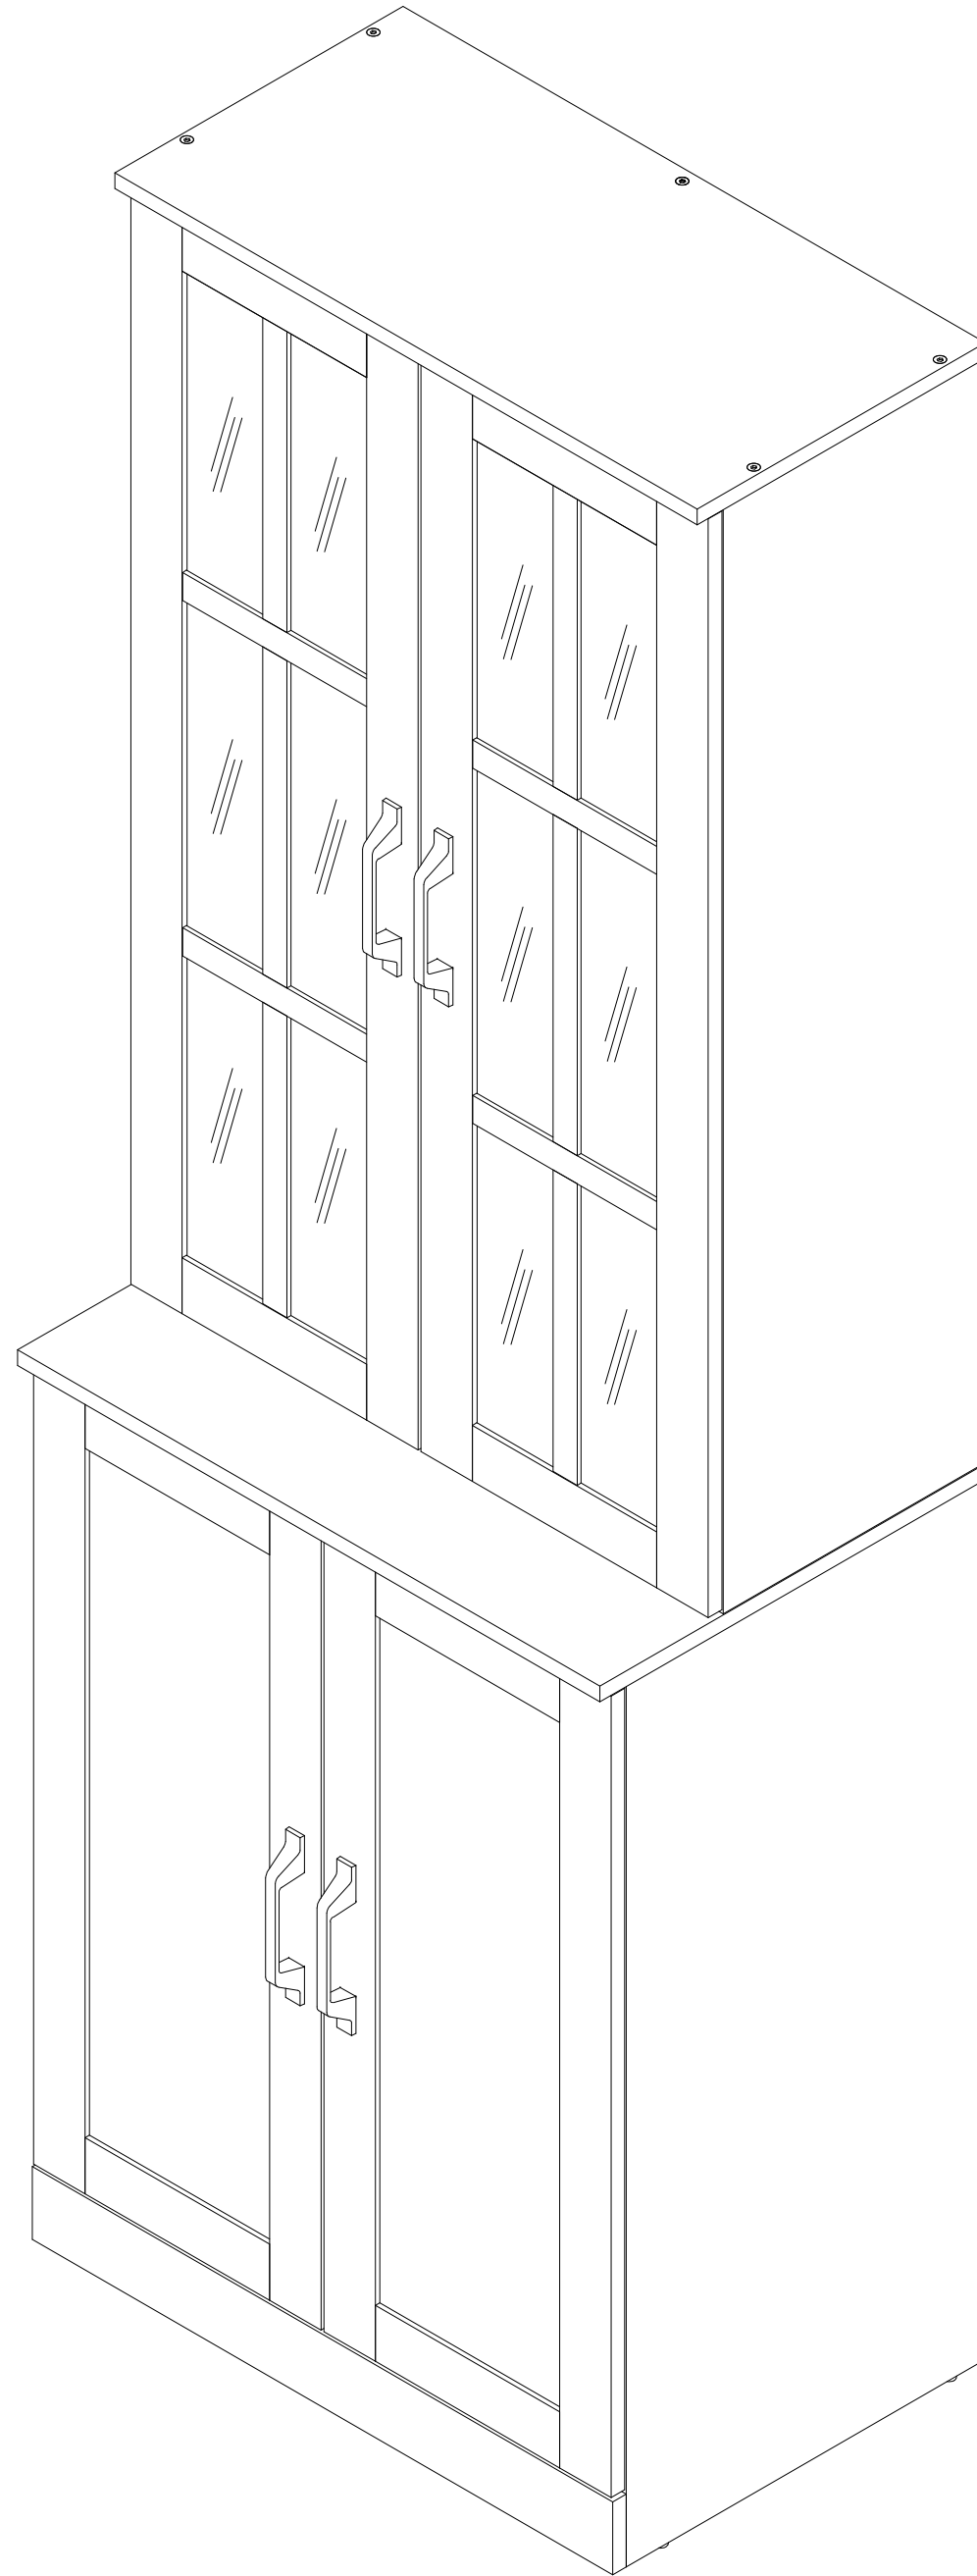

GUARANTEE

Storage Cabinet offers a **90-days** warranty that begins on the date of the original purchase and applies to problems caused by the manufacturer. For questions, assistance, or support, please contact the Customer Service by e-mail with your order number and details. We will send you further information about the solution.

Model: SZG-002

Made in VIETNAM

