

Installation Information

Item #P1093

Exposed Shower Set, 7" Centers


PLEASE NOTE BEFORE INSTALLATION: To insure proper installation, you must establish the installation location and the positioning of the valve unit and shower riser, taking into consideration the personal preferences of the users height, the ceiling height and any applicable local plumbing codes.

Warranted only if installed by a qualified licensed plumber.

1. Shut off the water supply before installation.
2. Rough-in $\frac{1}{2}$ " Male IPS with $\frac{1}{2}$ " of threads past the finished wall at 7" centers.
3. Thread on the straight wall mount couplers to the $\frac{1}{2}$ " nipples extending out from finished wall, use Teflon paste or tape.
4. Connect the main valve body to the wall mount couplers.
5. Insert the riser into the valve body and tighten the compression nut to seal the riser connection.
6. Attach the wall bracket escutcheon to the wall at desired height. *Wall support may need to be cut to length, cut non-threaded end only.* Secure to riser with the c-clamp provided.
7. Attach shower head to the shower arm using Teflon paste or tape.

Parts Included:

- (1) Valve body, 7" centers
- (1) 2" Wall Mount Couplers
- (1) 36" Hook Riser
- (1) 12" Wall Support
- (1) Shower Head

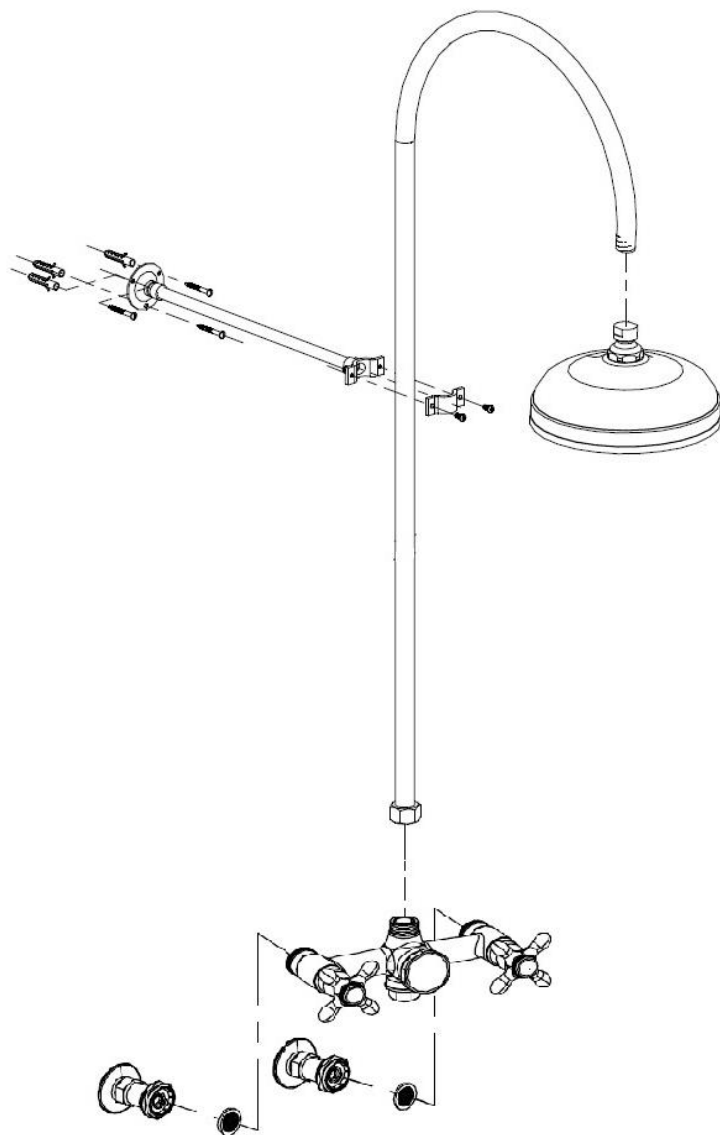

NOTE:

THIS UNIT IS NOT WARRANTED FOR OUTDOOR USE.

ITEM #
P1093

Extension from wall
to Spout or Head
17"

Body C to C
7"

Total height
from Inlet
38"

Bottom of Head
or spout to Inlet
25"