

Instruction Manual


















Product Name:	Bathroom Cabinet
---------------	------------------


Thank you for purchasing this product. This product has been manufactured with the highest standards of safety and quality.

PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLY.

Unpack all parts from Styrofoam and bubble wrap inside the carton to ensure there are no missing or damaged parts. If any parts are missing or damaged, do not attempt to assemble or use the product.

Hardware:

①×12	②×12	③×12	④×2	⑤×2	⑥×1
					
⑦×4	⑧×3	⑨×8	⑩×2	⑪×2	⑫×2
					
⑬×2	⑭×1	⑮×1	⑯×2	⑰×1	
					

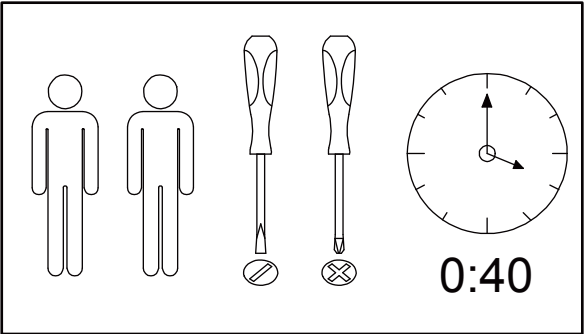


Tools required for assembly: Philips screwdriver and Flathead Screwdriver (if using power tools, use with care)

Instruction Manual

Product Name:	Bathroom Cabinet
---------------	------------------

Panels:

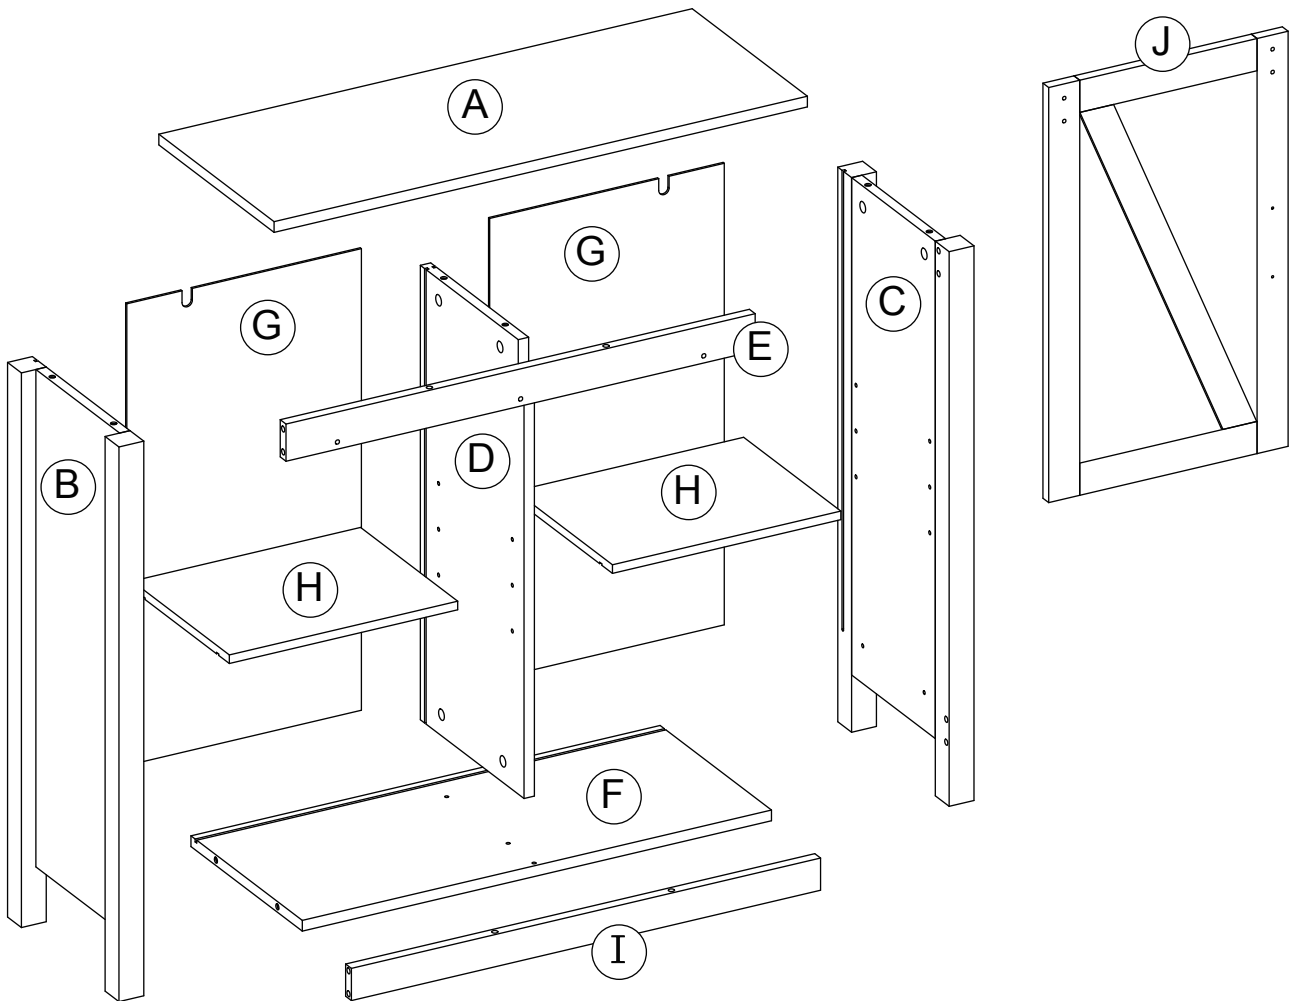


Instruction Manual


Product Name:	Bathroom Cabinet
----------------------	------------------

Step 1




Make sure the pins are installed correctly as shown with the “check mark” below:

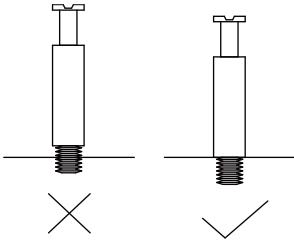

Below shows how the pins are used to assemble the panels together.

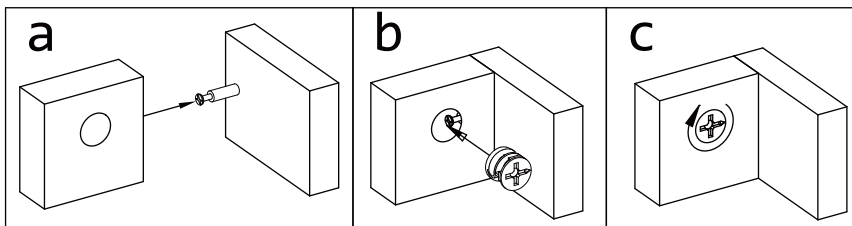

Screw cam bolts (1) onto (F), attach panel (I) as shown, tighten the cam lock (2) clockwise to secure.


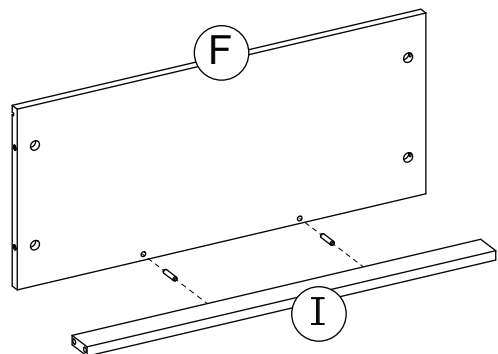
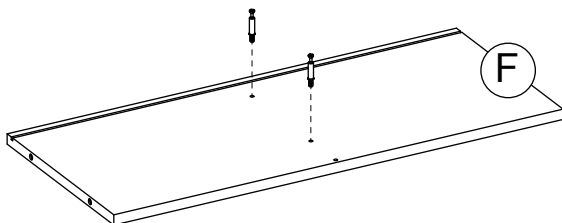
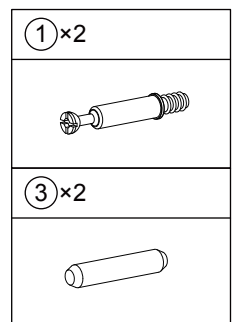


Instruction Manual

Product Name:	Bathroom Cabinet
---------------	------------------

Step 2

Attach (D) to (F) as shown, tighten the cam lock (2) clockwise to secure.
Screw cam bolts (1) onto (B)&(C)

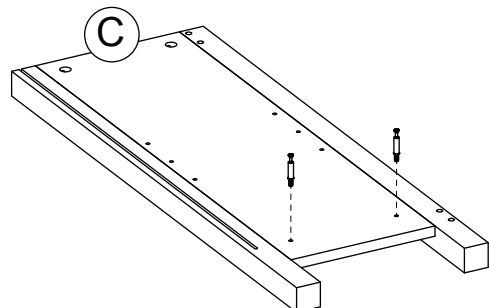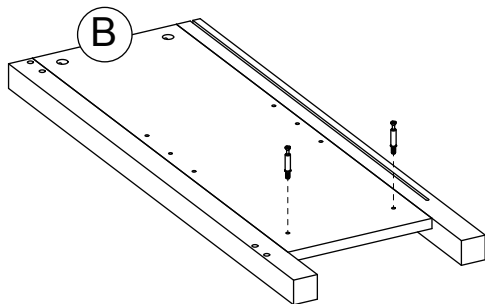
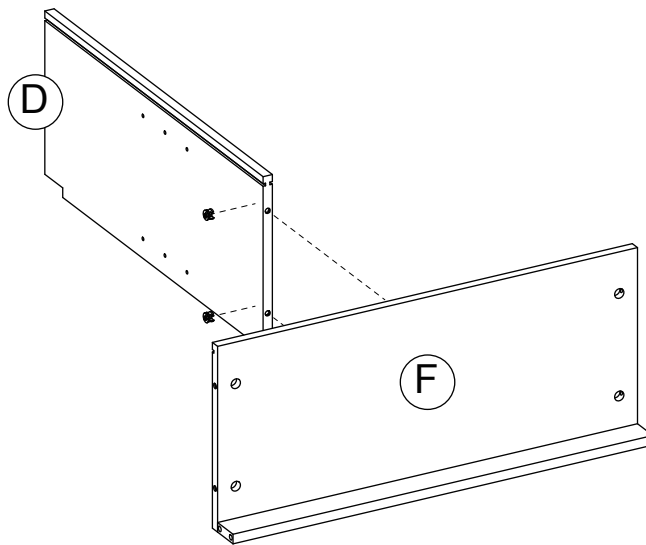
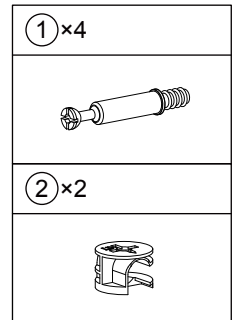


Instruction Manual

Product Name:	Bathroom Cabinet
---------------	------------------

Step 3

Insert wooden dowel (3) onto (E), attach it to (B)&(C) .
tighten the cam lock (2) clockwise to secure

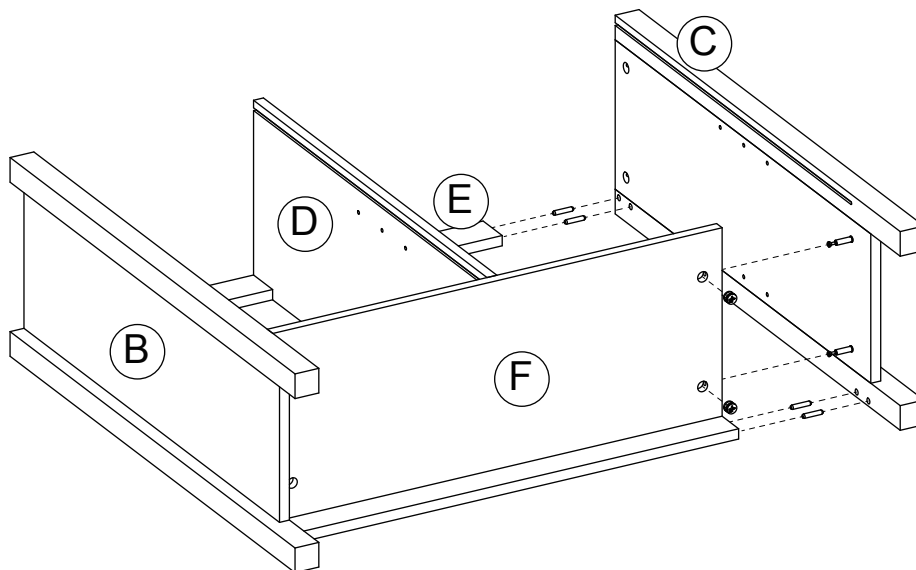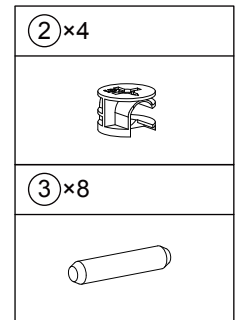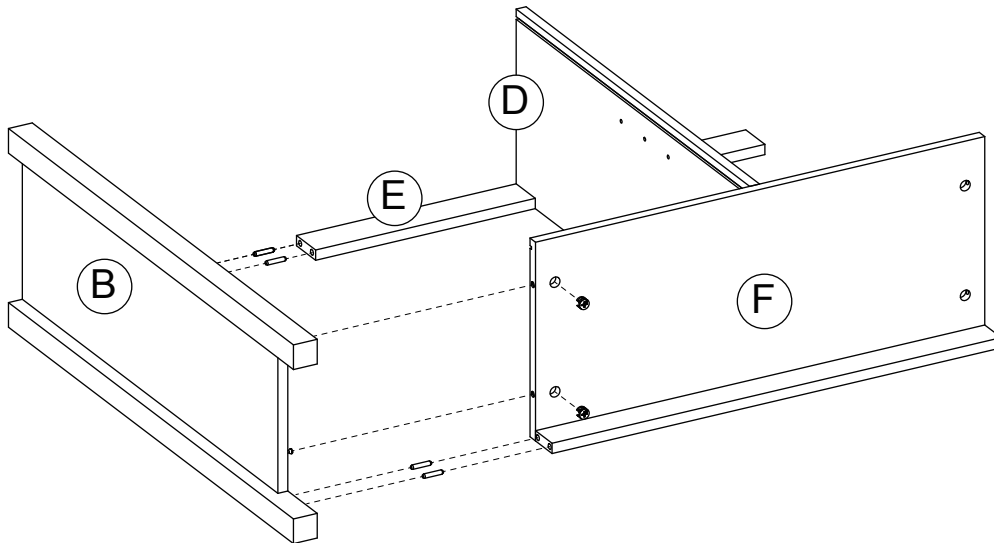









Instruction Manual

Product Name:	Bathroom Cabinet
---------------	------------------

Step 4

Screw cam bolts (1) onto (A) ,
attach metal bracket (12) onto (A) with screws (13).
Insert back panels (G) onto unit, Insert wooden dowel (3) onto (E),
tighten the cam lock (2) clockwise to secure.

①×6	②×6
	
③×2	⑫×2
	
	⑬×2
	

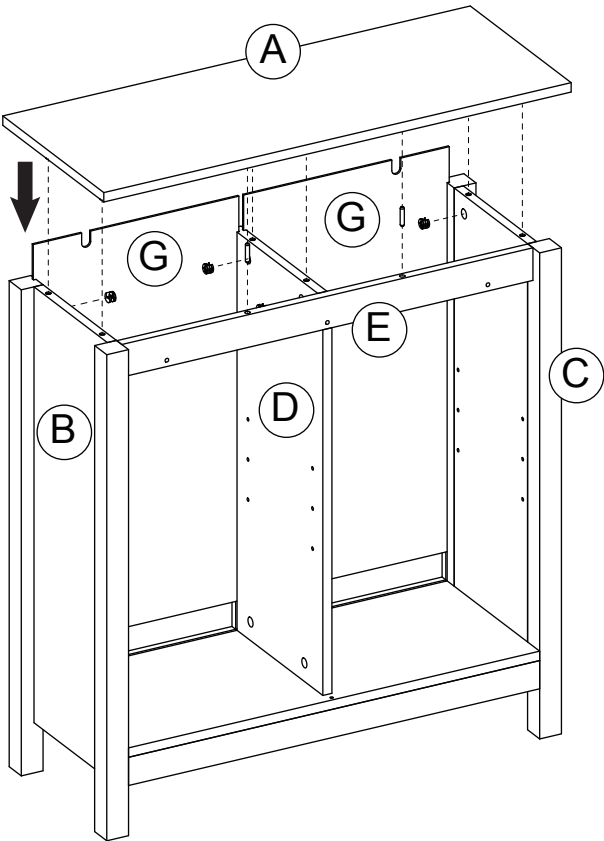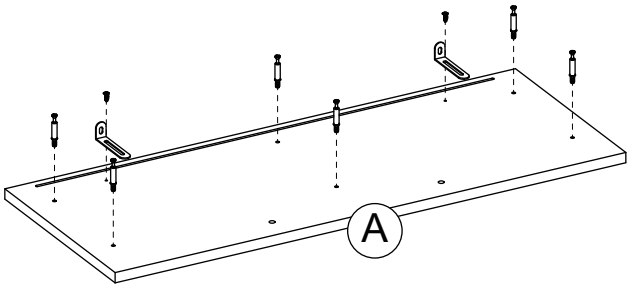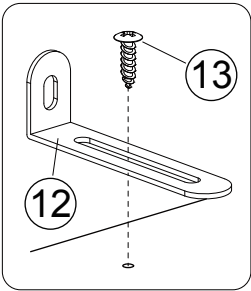






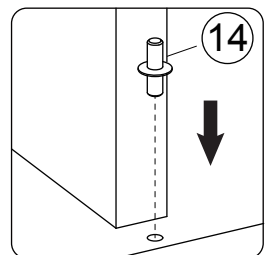
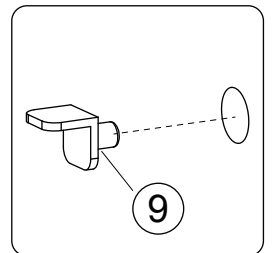
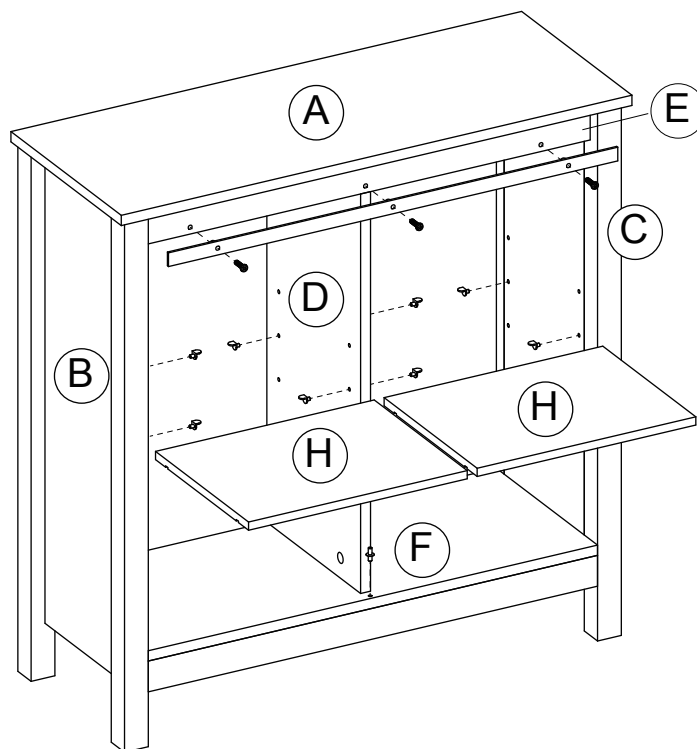
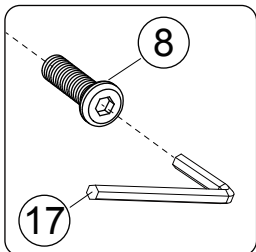
Instruction Manual

Product Name:	Bathroom Cabinet
---------------	------------------

Step 5

Attach metal runner(15) onto unit with bolt (8) as shown with tool (17).
Insert layer supports (9) into unit, then put on the adjustable shelves.
Insert bolt(14) onto panel (F) as shown.

⑧×3	⑨×8
	
⑭×1	⑮×1
	
	⑰×1
	




Instruction Manual






Product Name:	Bathroom Cabinet
---------------	------------------

Step 6

Drill holes on the wall to input Wall plug (11).
Fix the unit to the wall with Screw (10)
and through (12) as shown.
Fix the handle (6) on the door (J) with bolts (4).
Attach wheels (16) onto door (J) with screws (7) as shown.

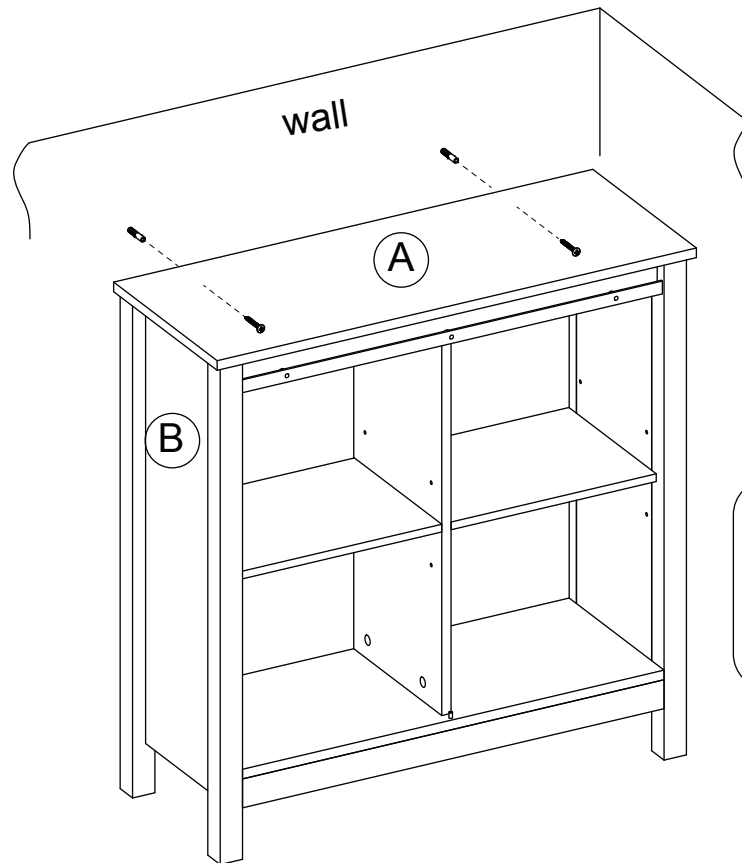

④×2	⑥×1
⑦×4	⑩×2
⑪×2	⑯×2

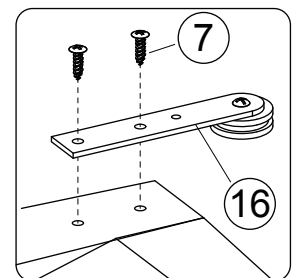
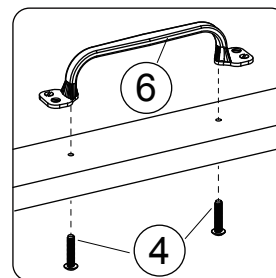
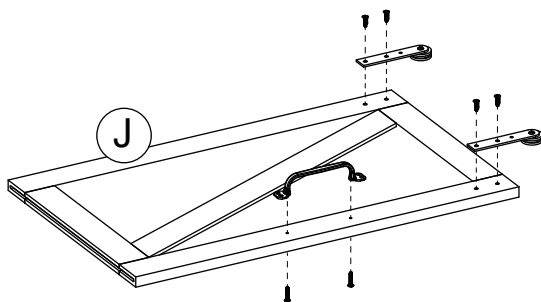
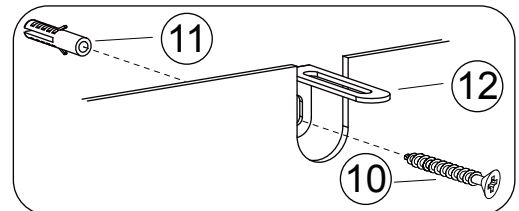
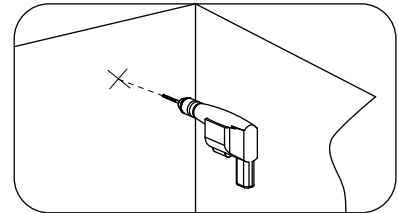


Instruction Manual

Product Name:	Bathroom Cabinet
---------------	------------------

Step 7

Insert the door (J) into the bolt (14), pull up the door a little to hang the wheels (16) onto the metal runner (15).
Screw bolts (5) into the hole as shown.

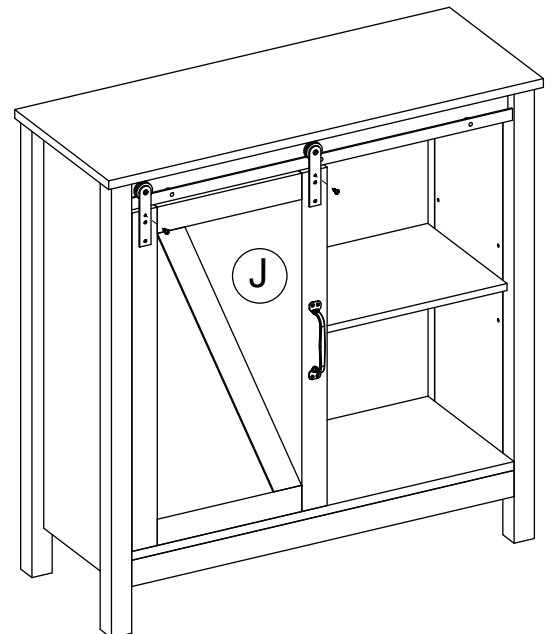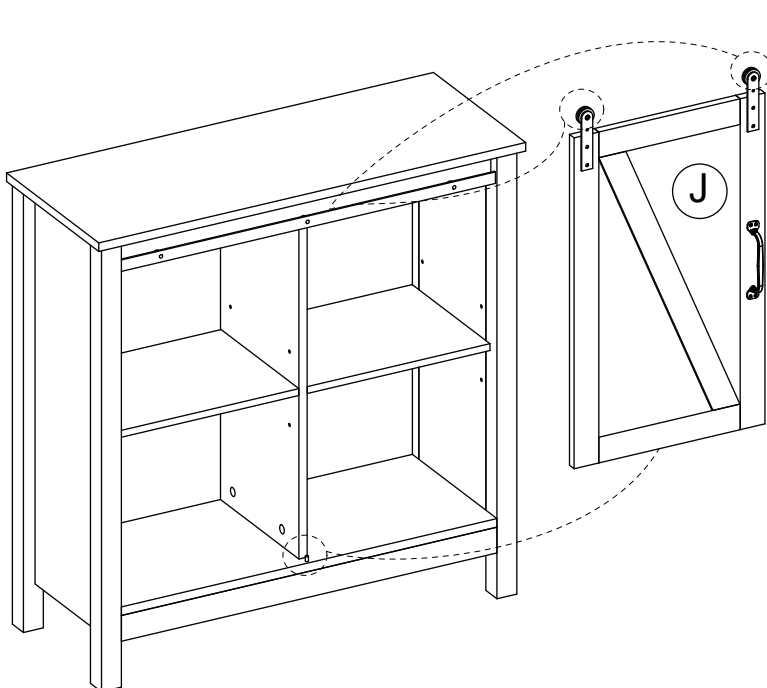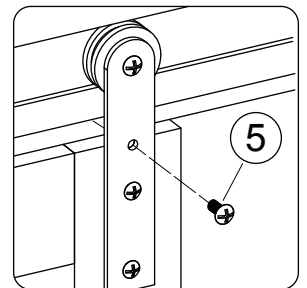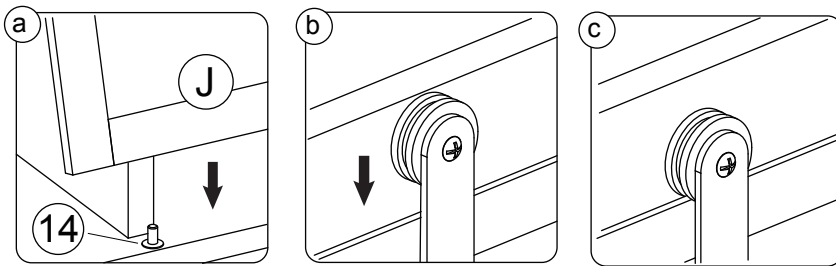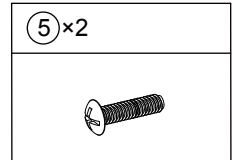

Instruction Manual

Product Name:	Bathroom Cabinet
---------------	------------------

Step 8

