

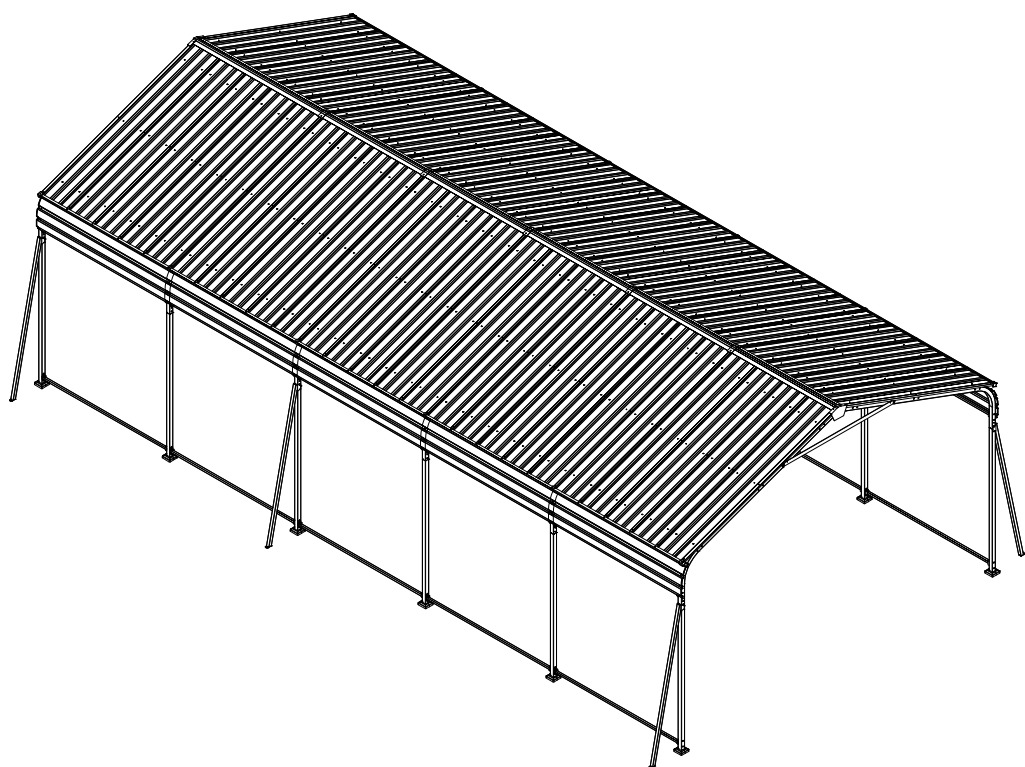
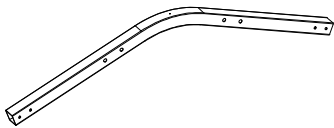






















NO.	PART.	Qty.		NO.	PART.	Qty.
1		6		9	 2066mm	4
2		12		10	 1550mm	20
3	 1620mm	12		14		6
4	 1546mm	30		D1	  1650mm	10
6	 1380.5mm	4		D2	  2058mm	50
7	 1256mm	4		Q1		4
7F	 1274mm	1		Q2		2
7B	 1592mm	1		Q3		8
8	 1574mm	6		Q4		5
8L	 1604.5mm	2		Q5		12
8R	 1604.5mm	2		Q6		12

NO.	PART.	Qty.	NO.	PART.	Qty.
Q7		60	Q19		252+10
Q8	 420mm	4	Q20		156+10
Q9		168	Q21	 M8x50mm	30
Q32	 M4x14mm	260+10	Q22		2
Q13	 M5x16mm	300+10	Q23		1
Q14	 M6x38mm	60+3	Q24		1
Q15	 M6x55mm	108+3	Q25		1
Q16	 M6x65mm	48+2	Q26		1
Q17	 M6	216+5	Q27		1
Q18		260+10			




NO.	PART.	Qty.
1		2
2		4
Q15	 M6x55mm	8
Q17	 M6	8
Q20		8

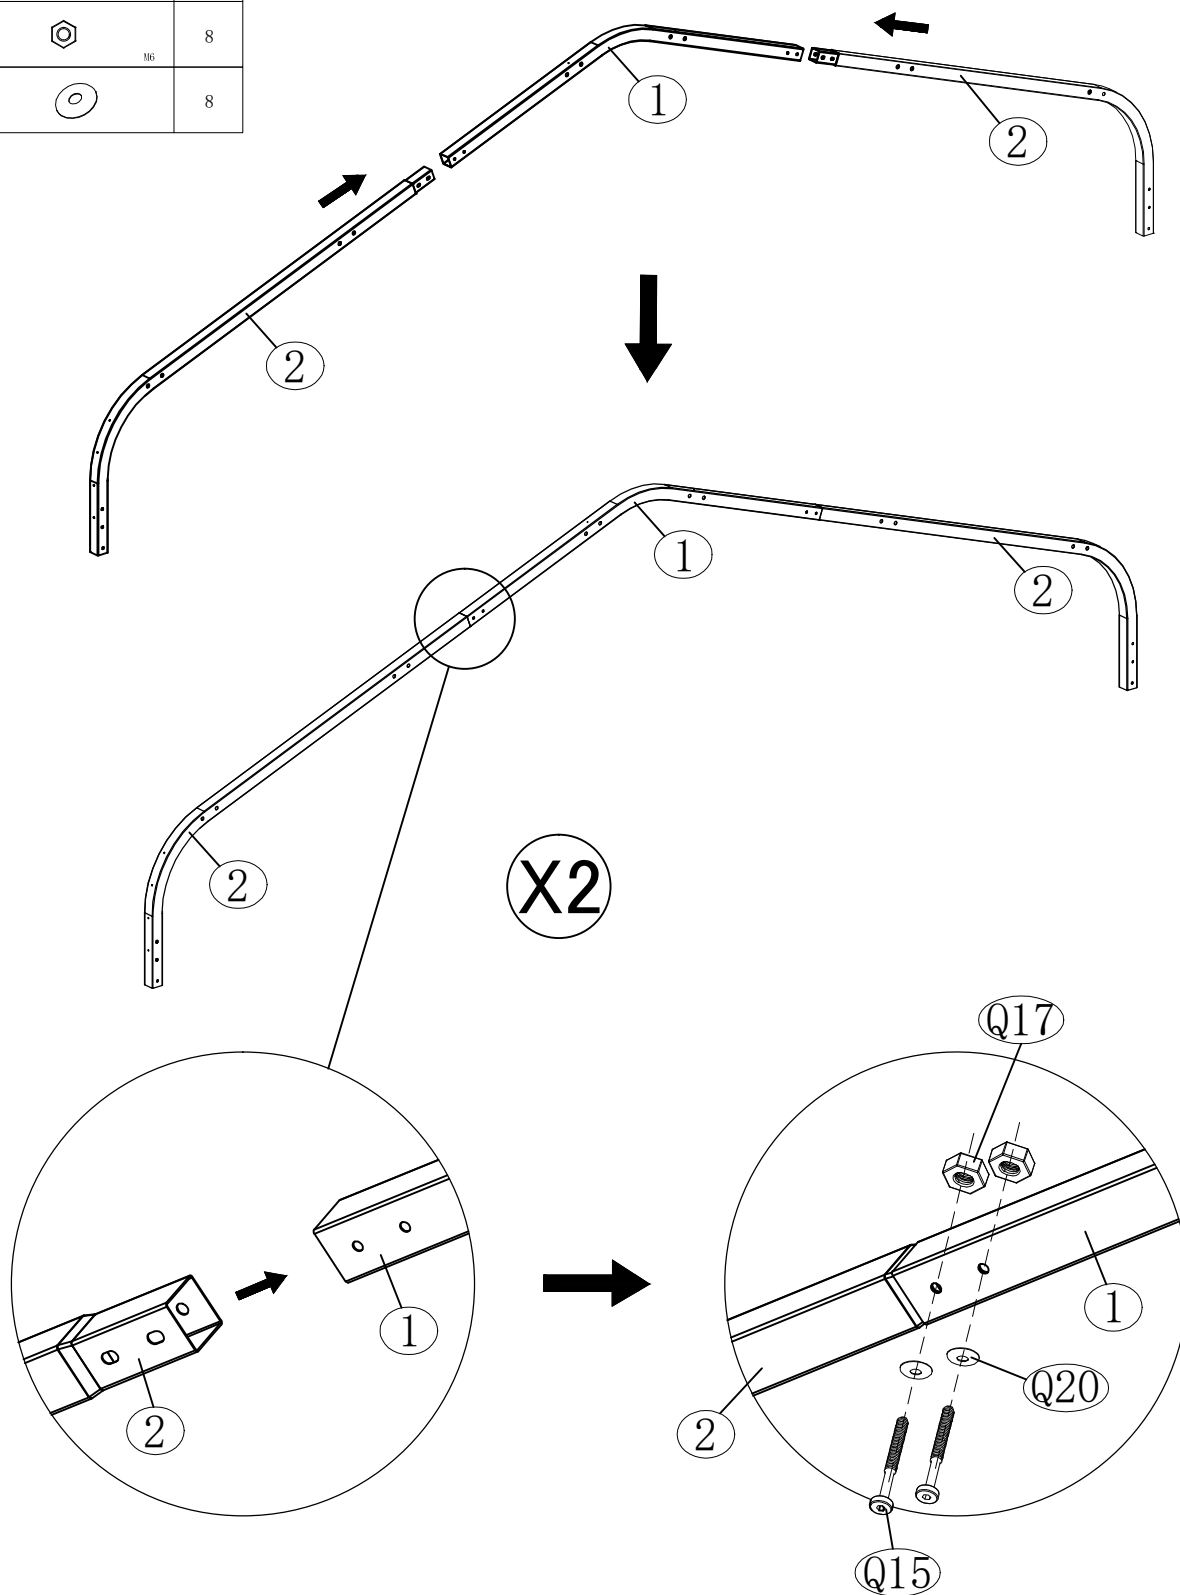


NO.	PART.	Qty.	NO.	PART.	Qty.
1		4	Q15	 M6x55mm	16
2		8	Q17	 M6	16
6	 1380, 5mm	4	Q20		16

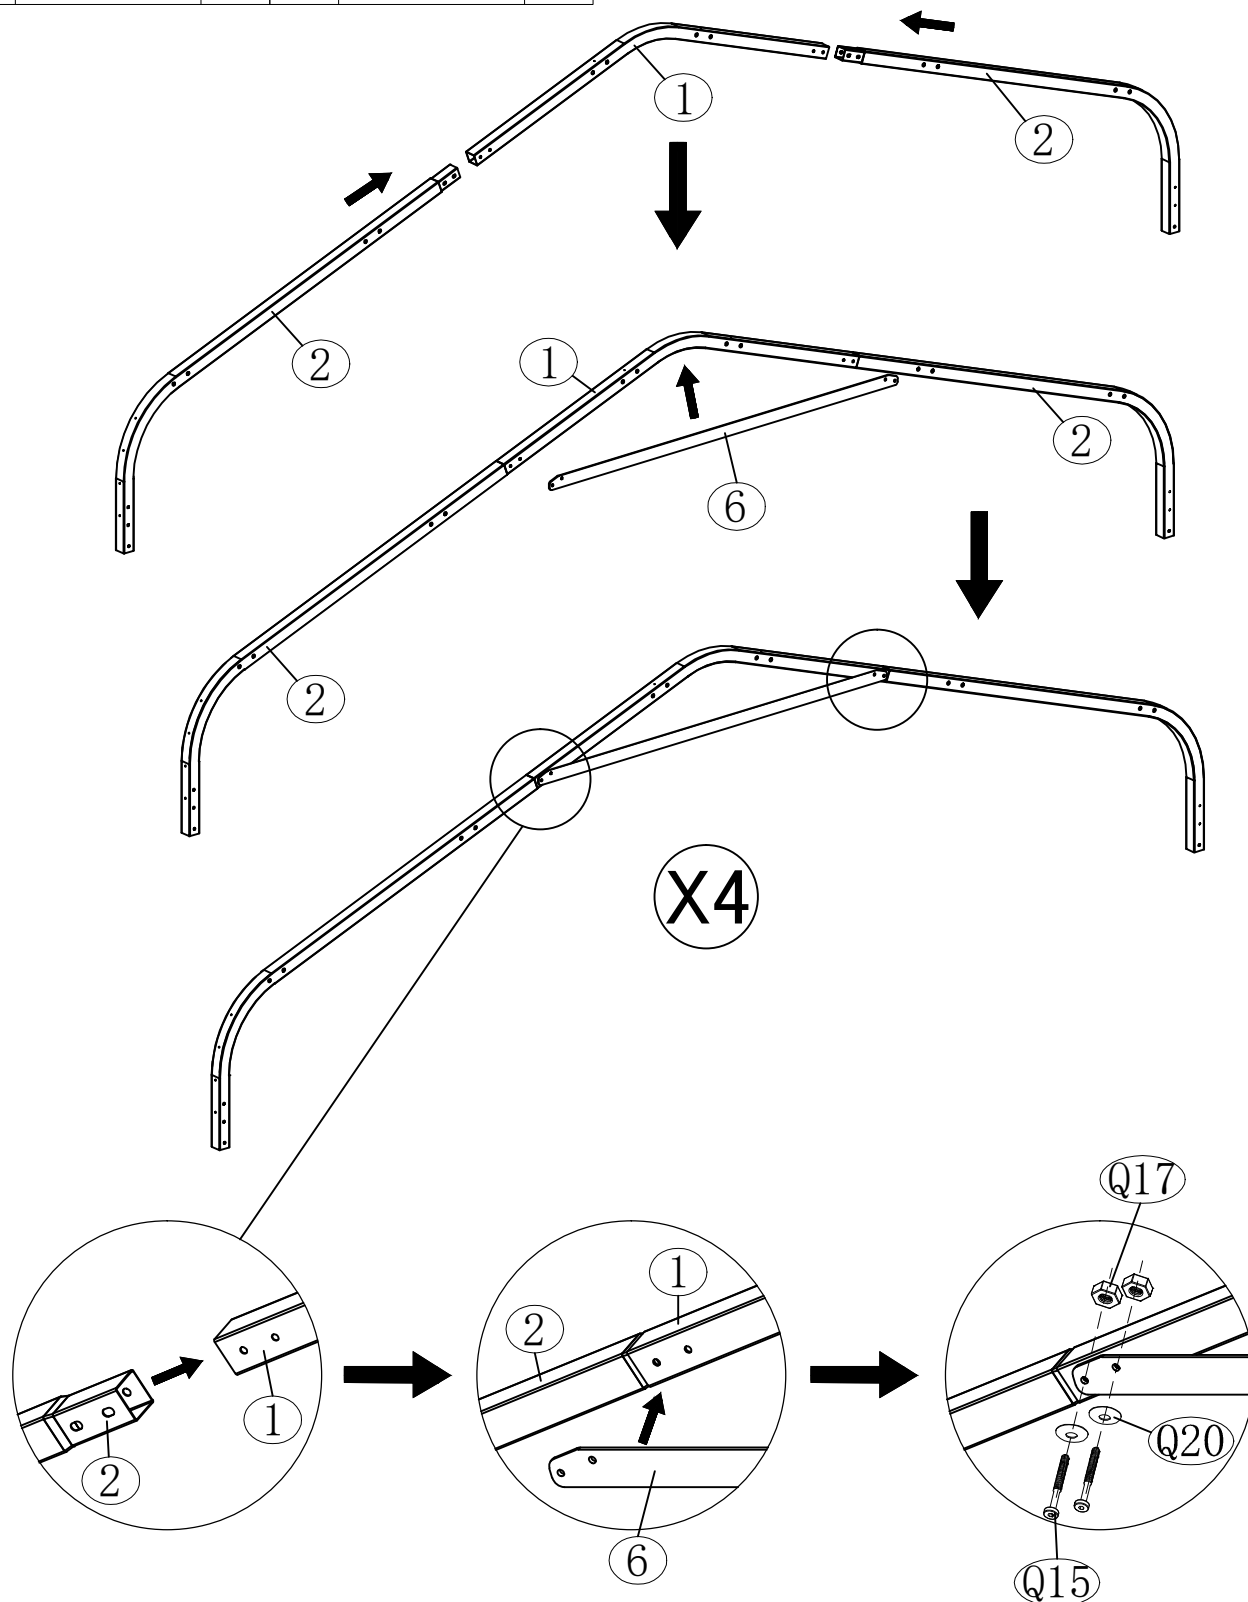



NO.	PART.	Qty.
4	 1546mm	30
Q7		60
Q14	 M6x40mm	60
Q17	 M6	60

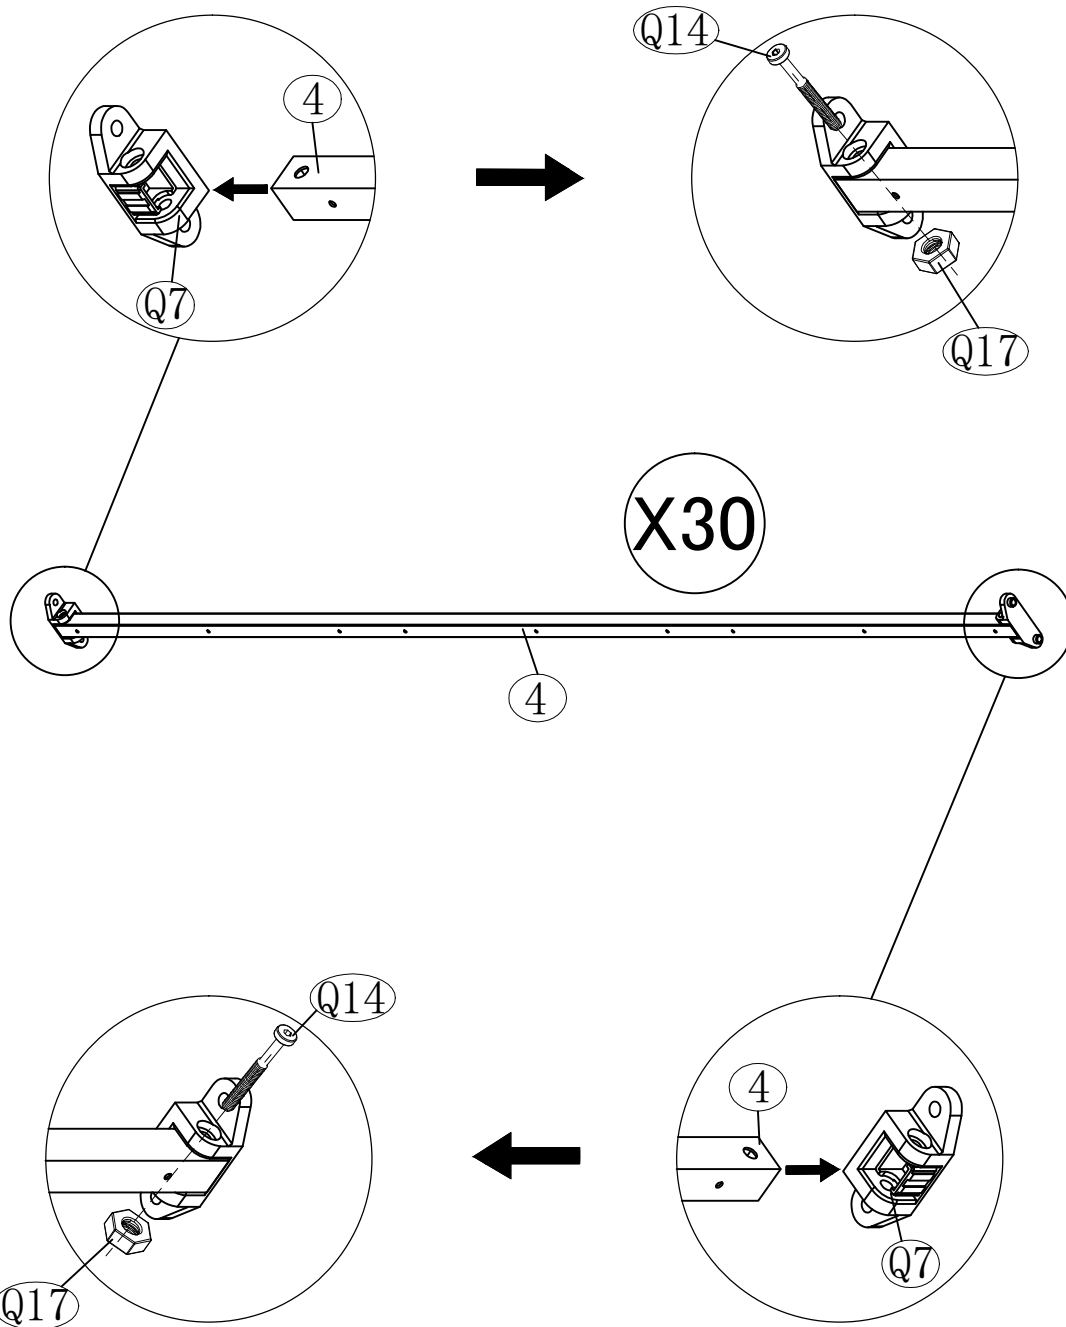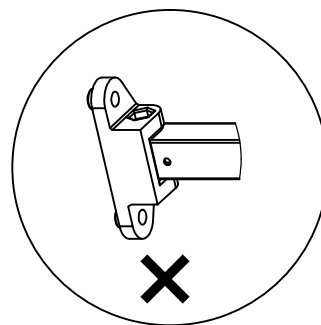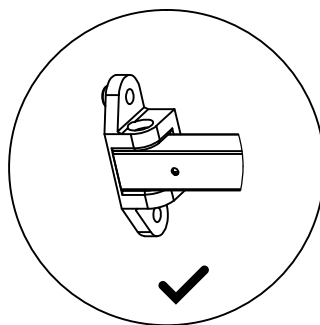


NO.	PART.	Qty.
Q15	 3/6x55mm	8
Q16	 3/6x65mm	16
Q17	 M6	24
Q20		24

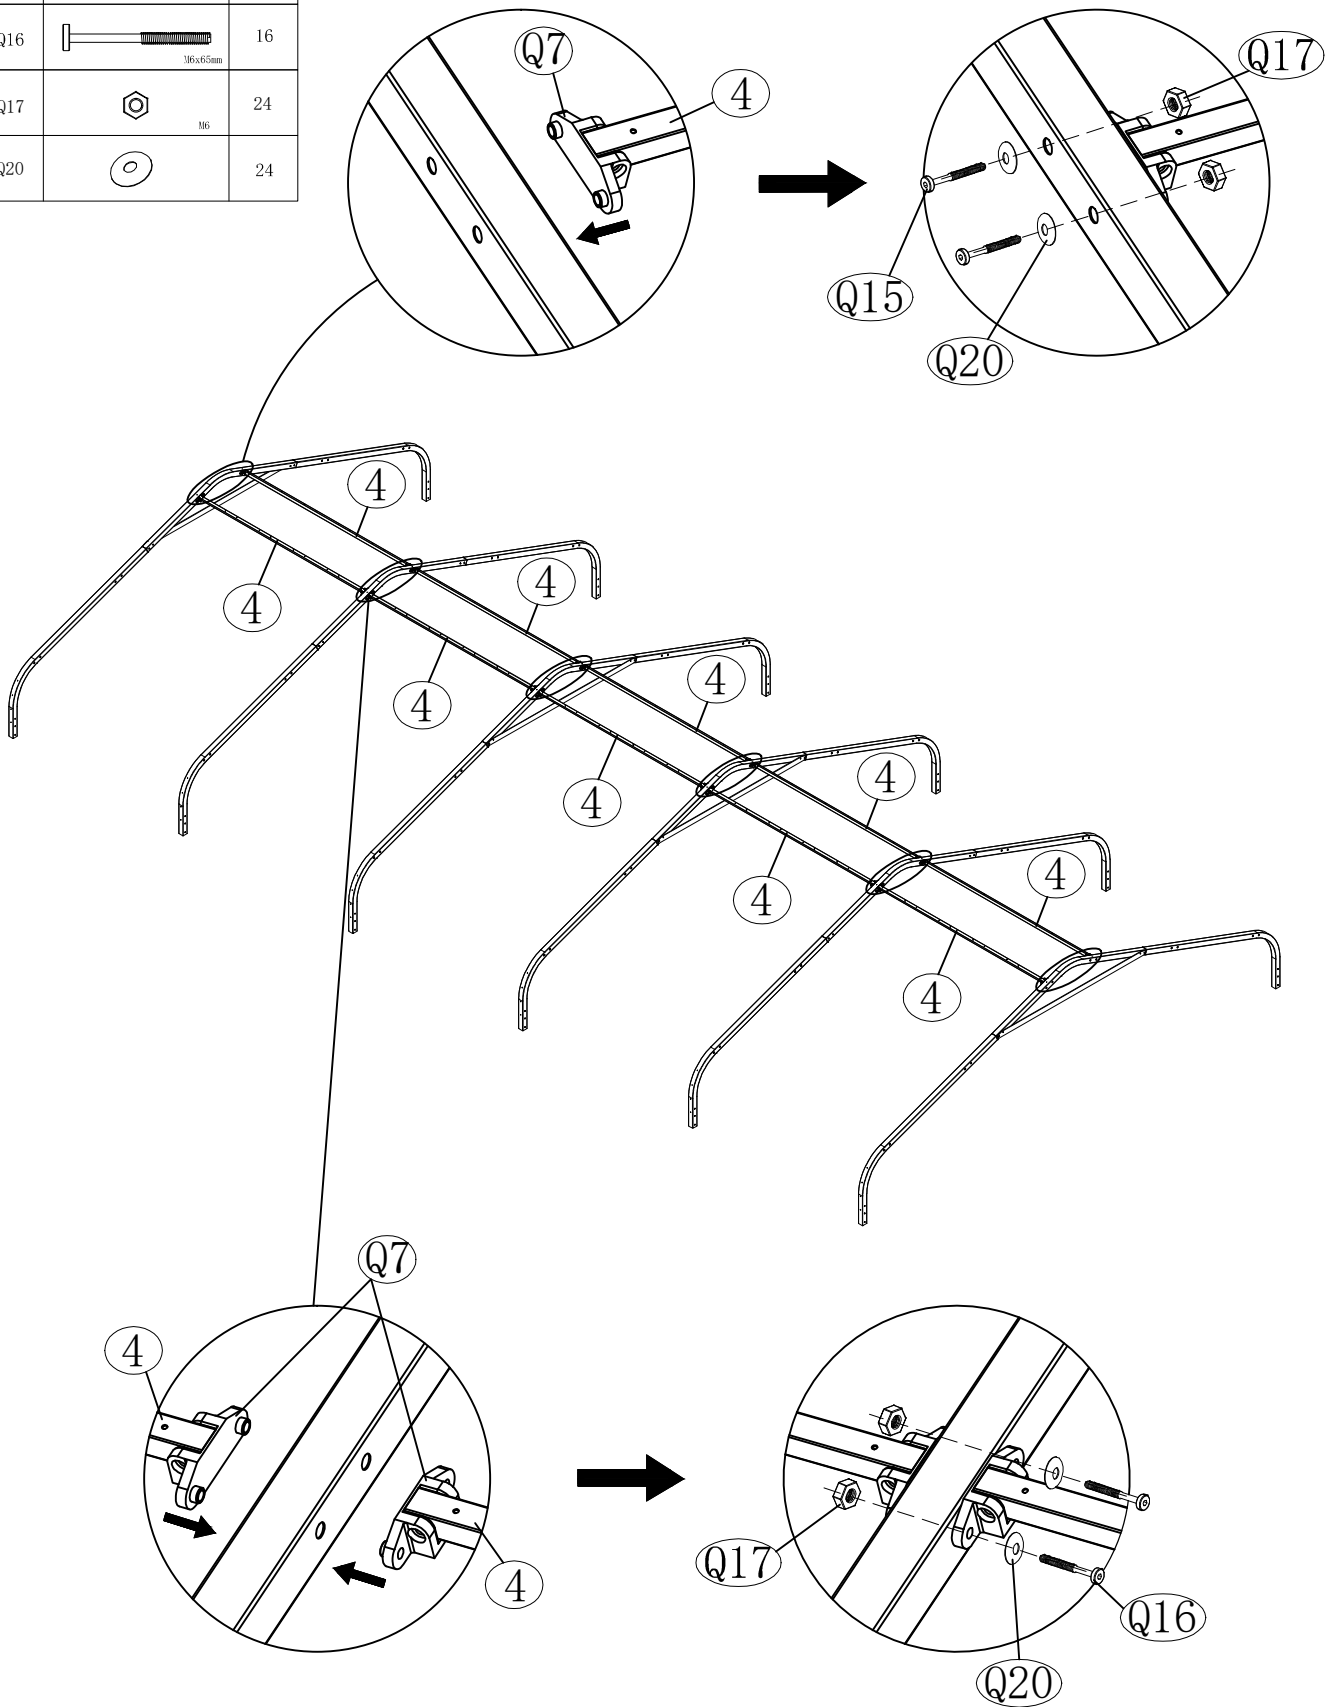



NO.	PART.	Qty.
Q15	 3/6x55mm	8
Q16	 3/6x55mm	16
Q17	 M6	24
Q20		24

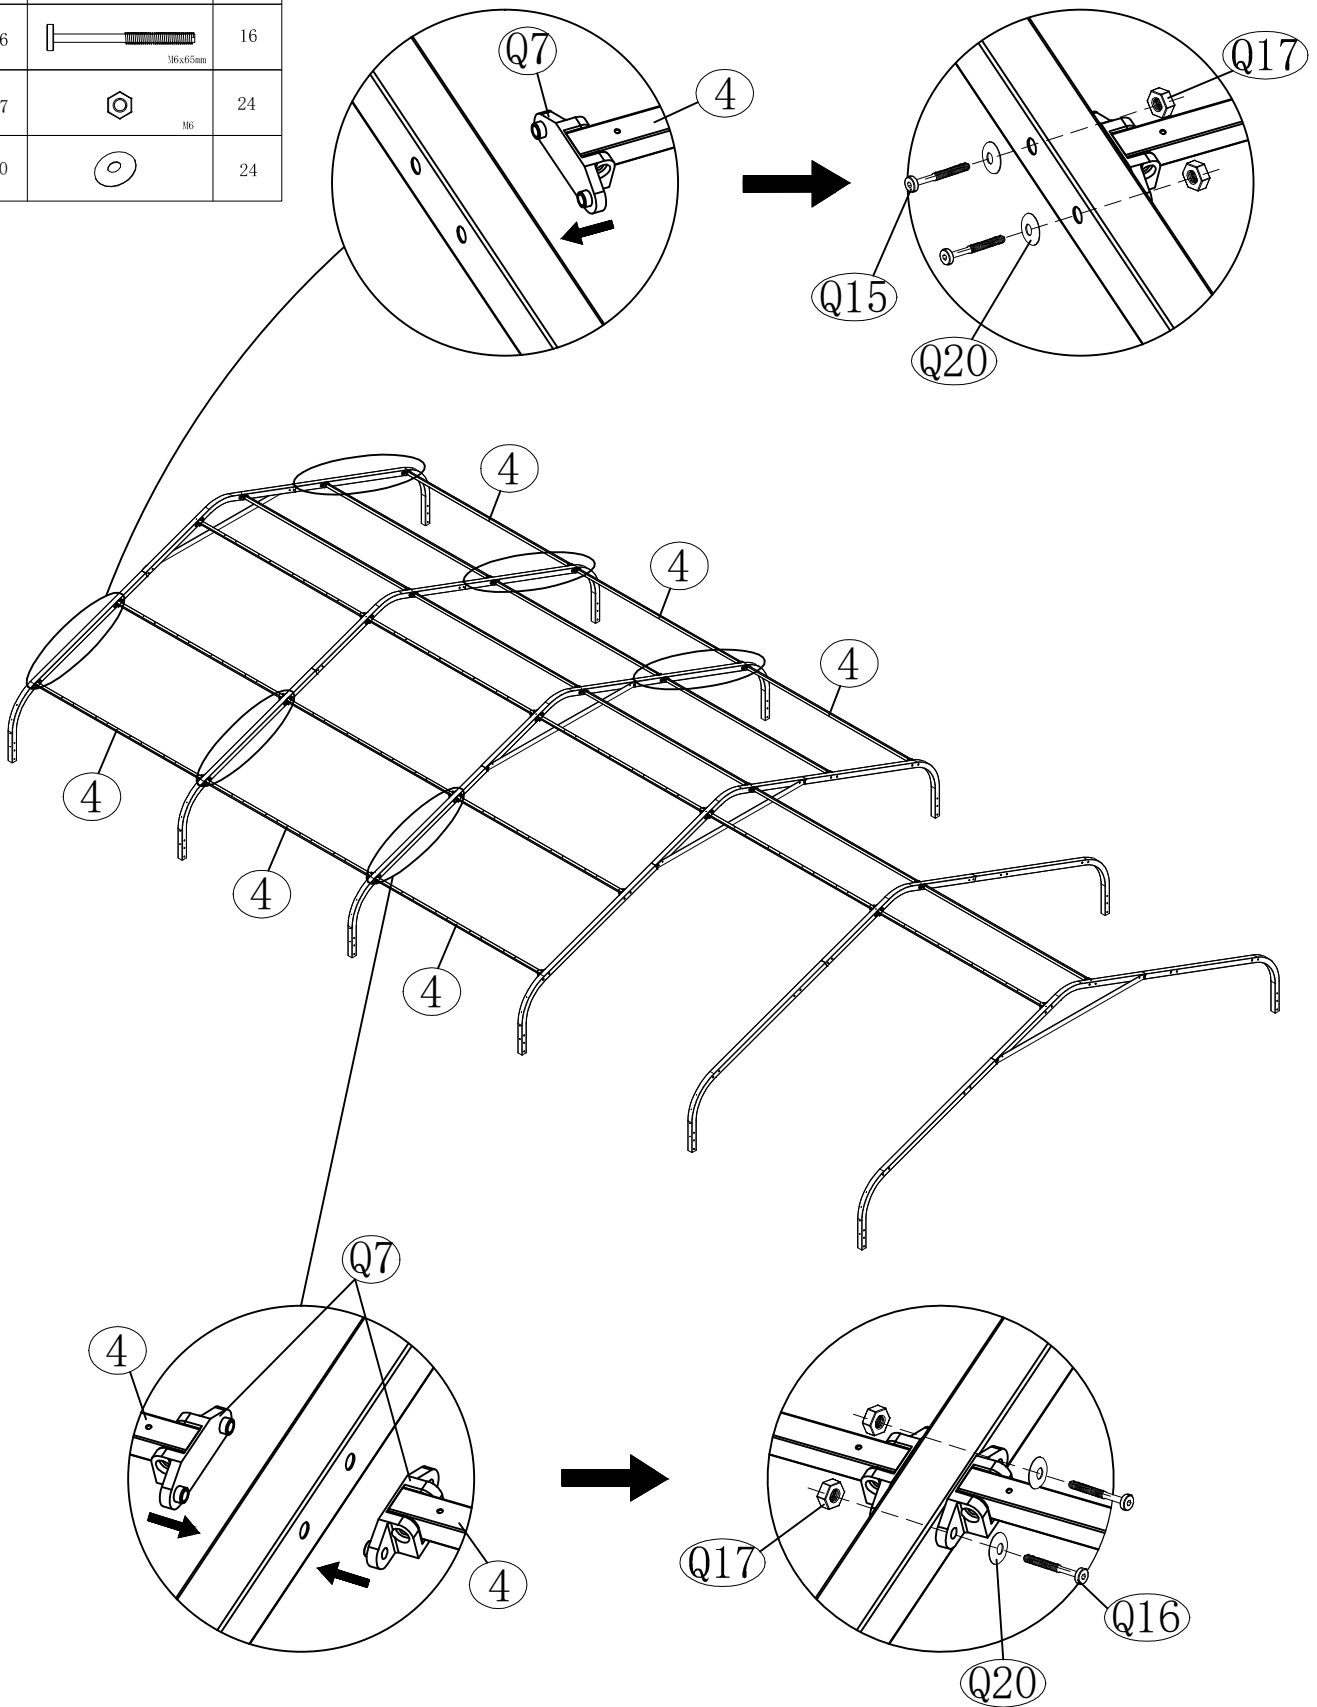



NO.	PART.	Qty.
Q15	 3/6x55mm	8
Q16	 3/6x65mm	16
Q17	 M6	24
Q20		24

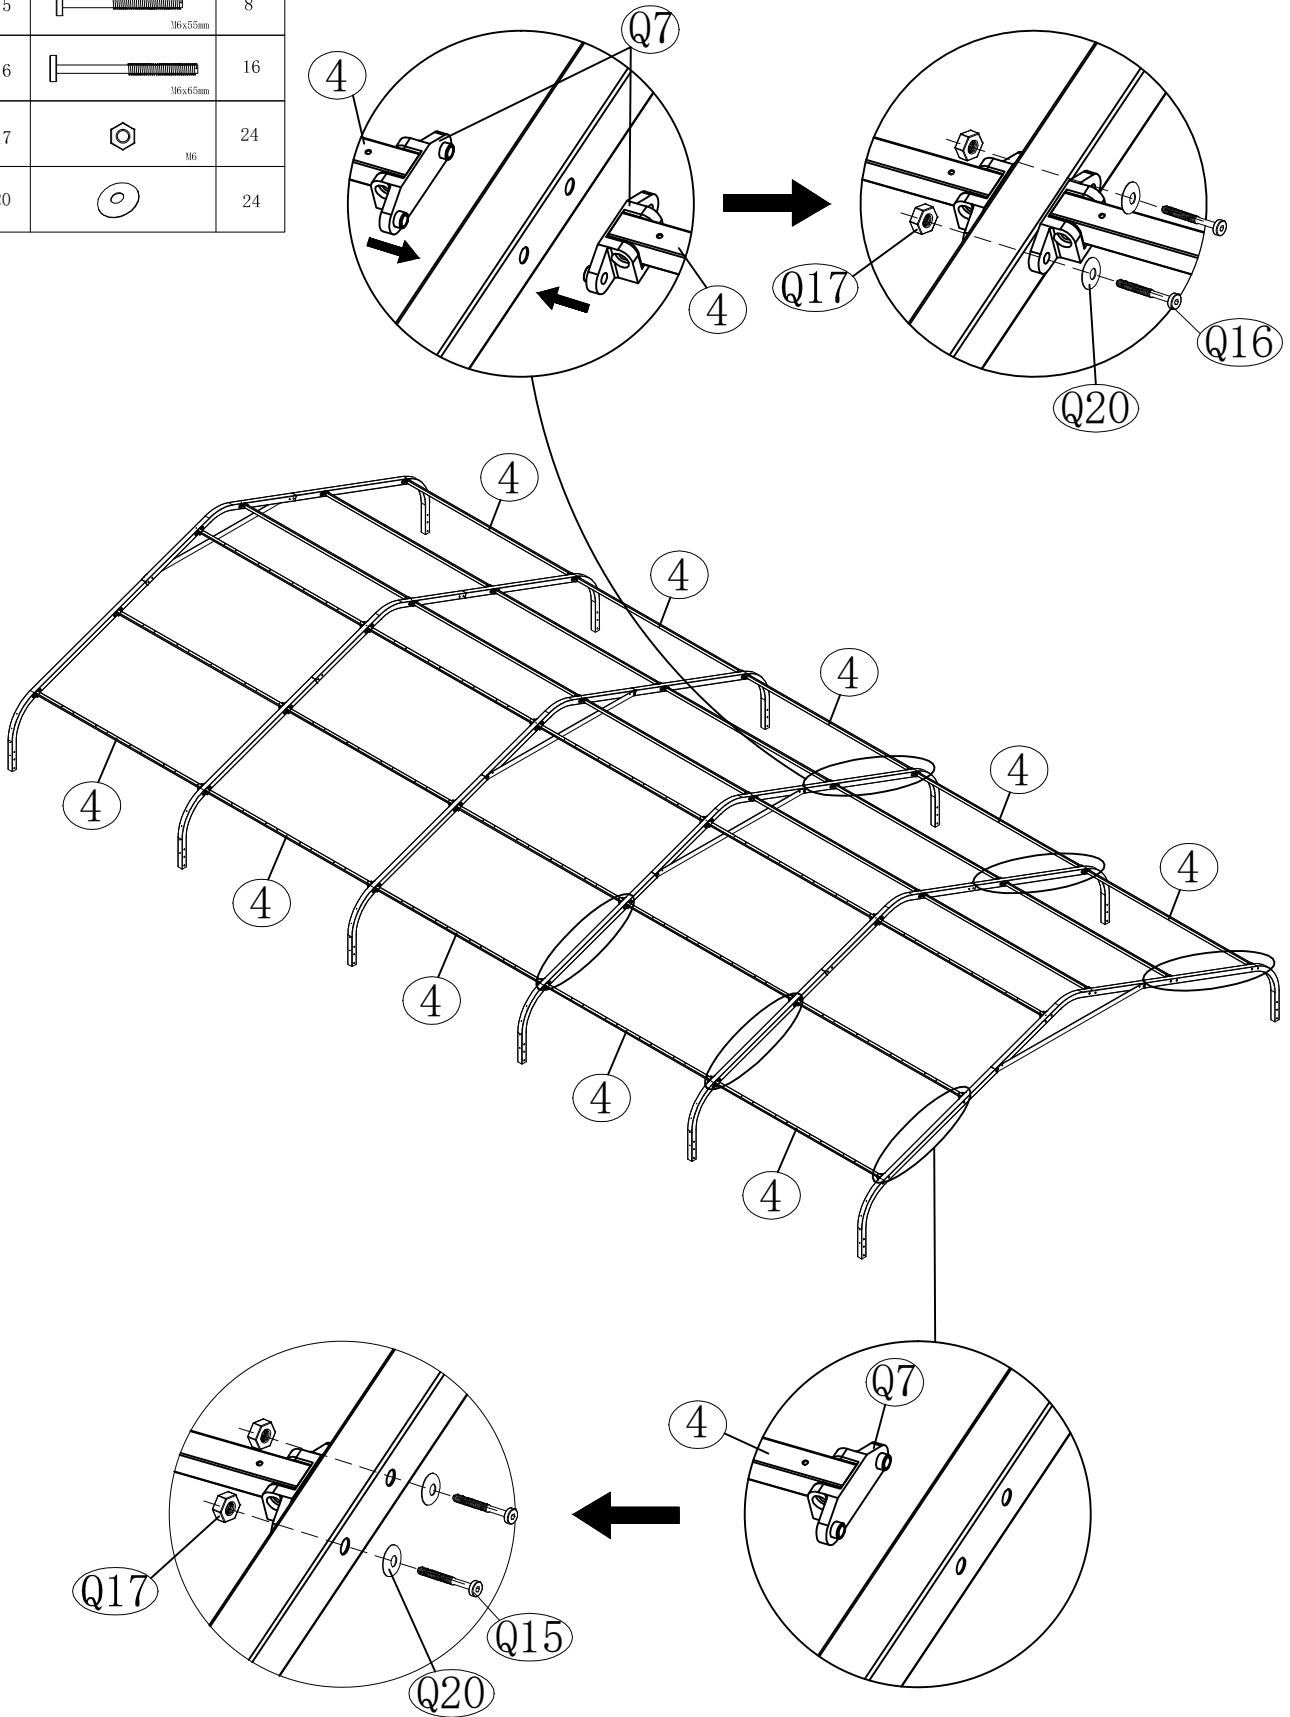


NO.	PART.	Qty.
10	 1550mm	10
Q15	 3/6x55mm	24
Q17	 M6	24
Q20		24

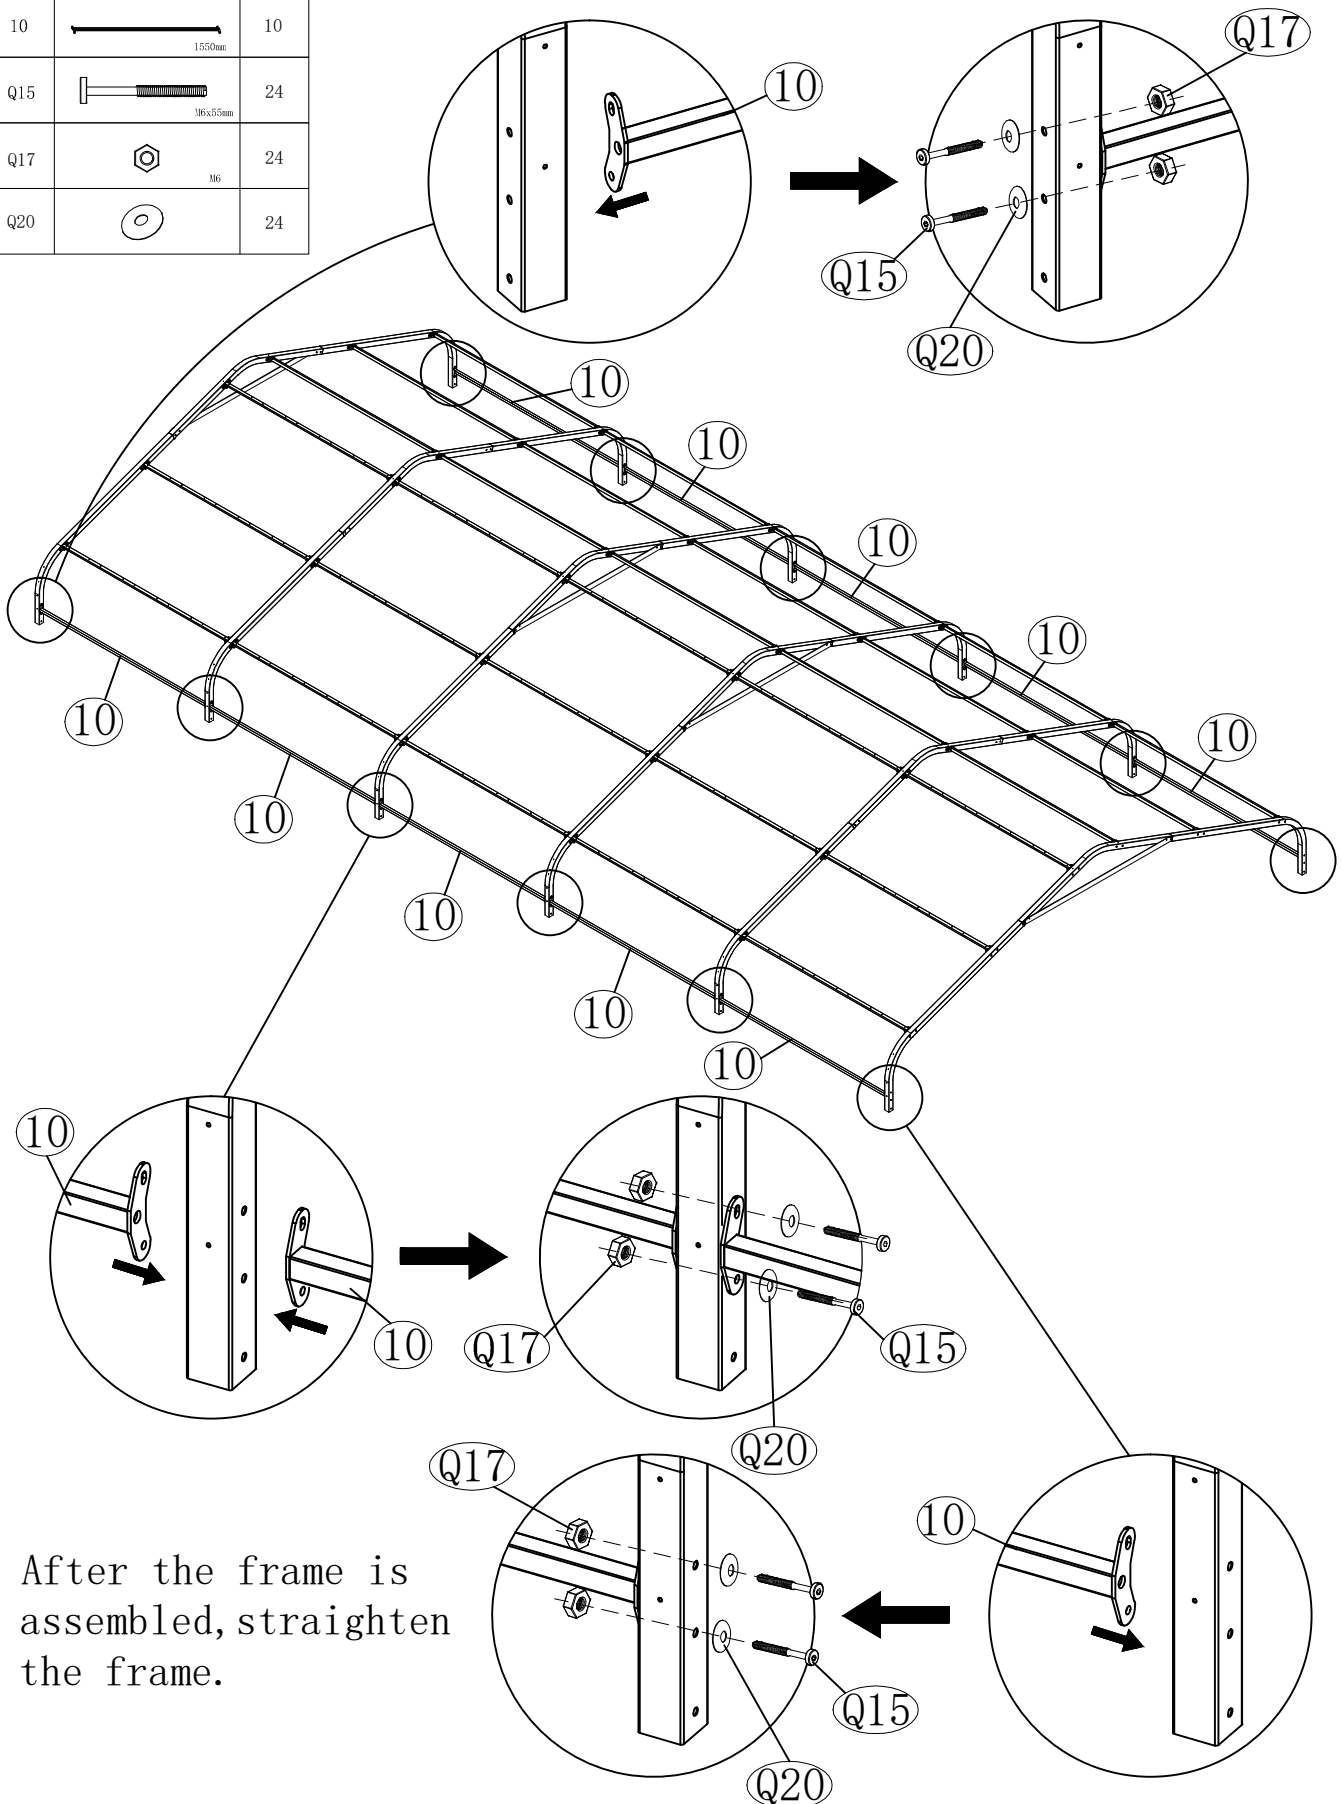


NO.	PART.	Qty.
D1	 1650mm	10
Q13	 M5 x 16mm	48

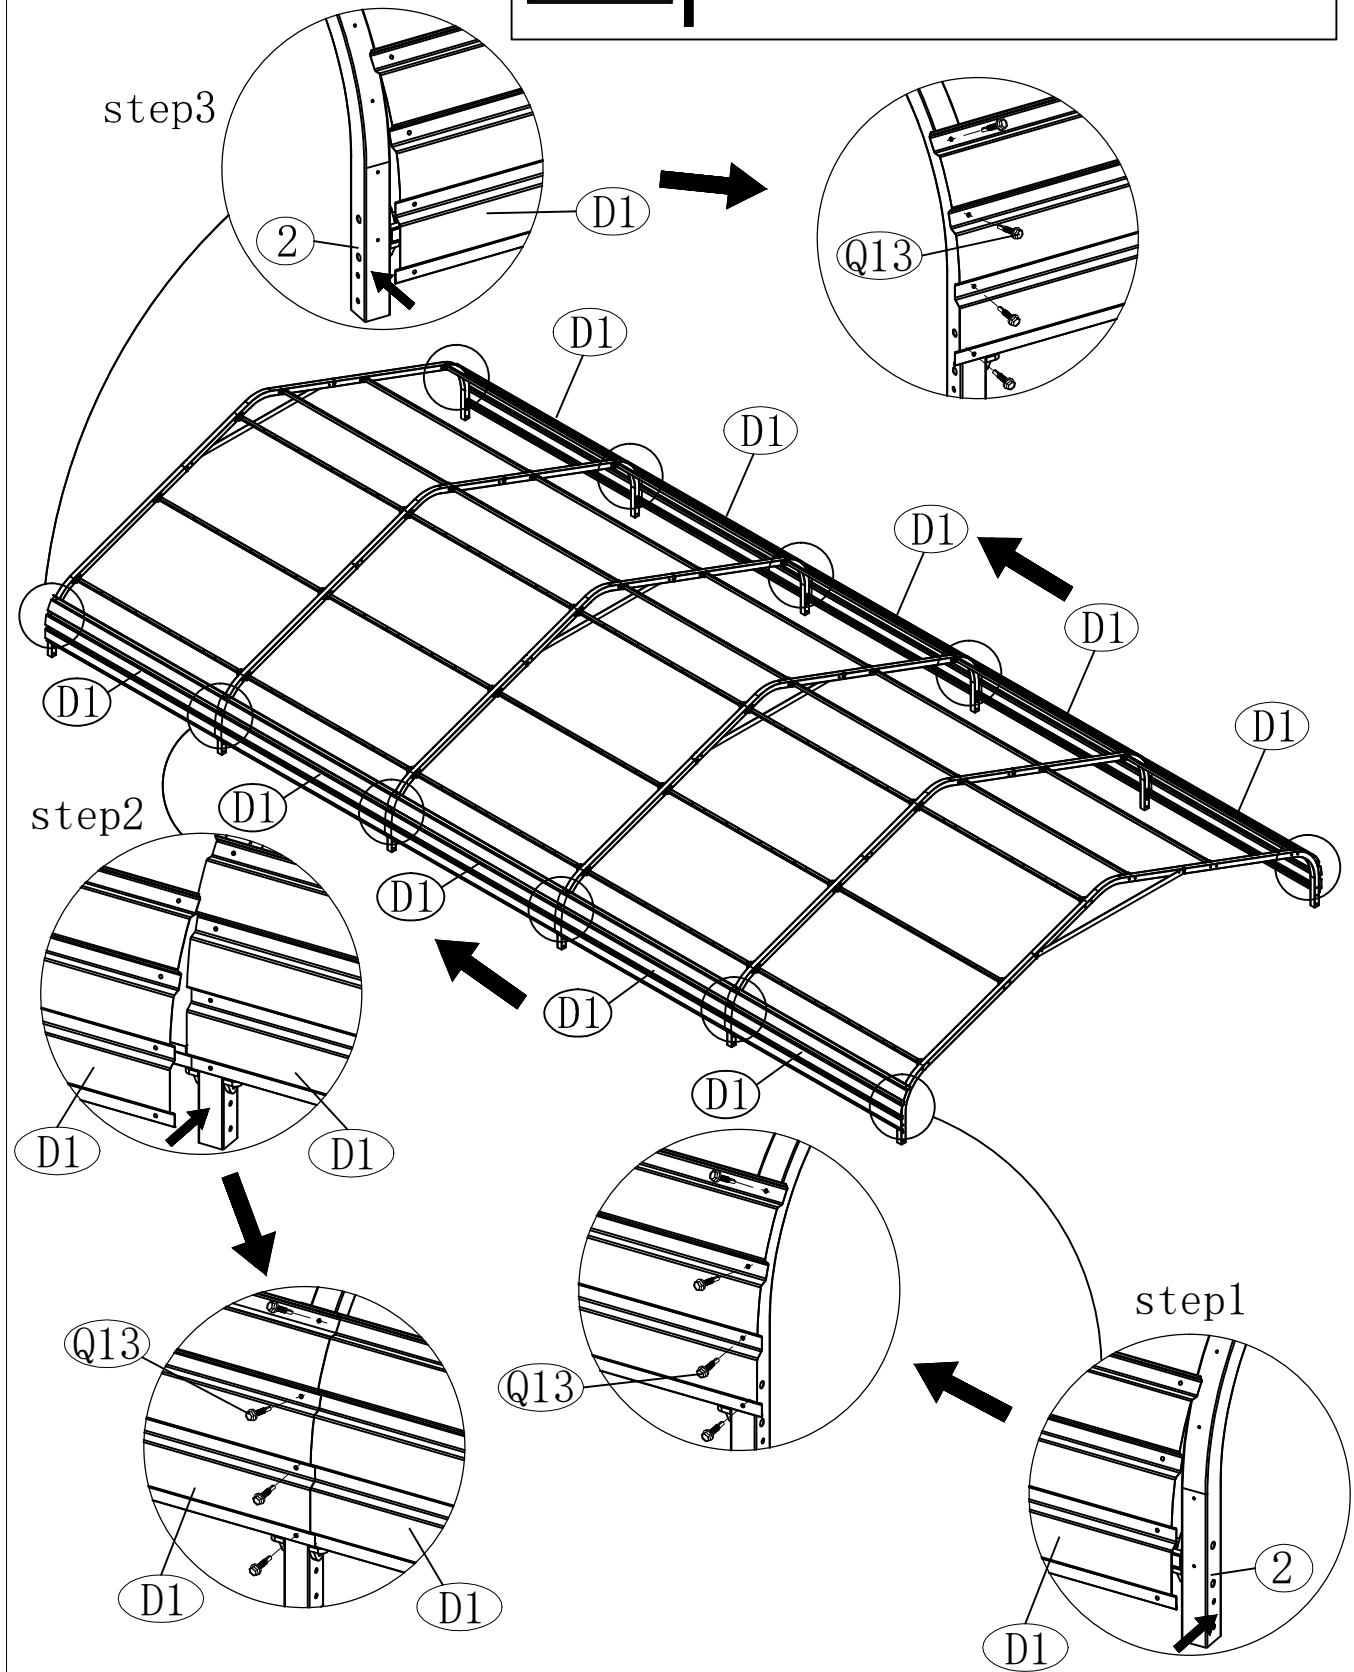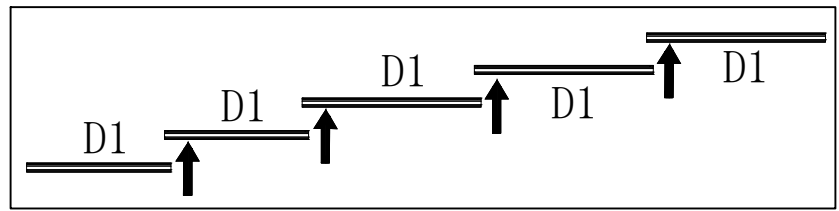

NO.	PART.	Qty.
D2	 2058mm	2
Q13	 M5 x 16mm	10
Q19		10



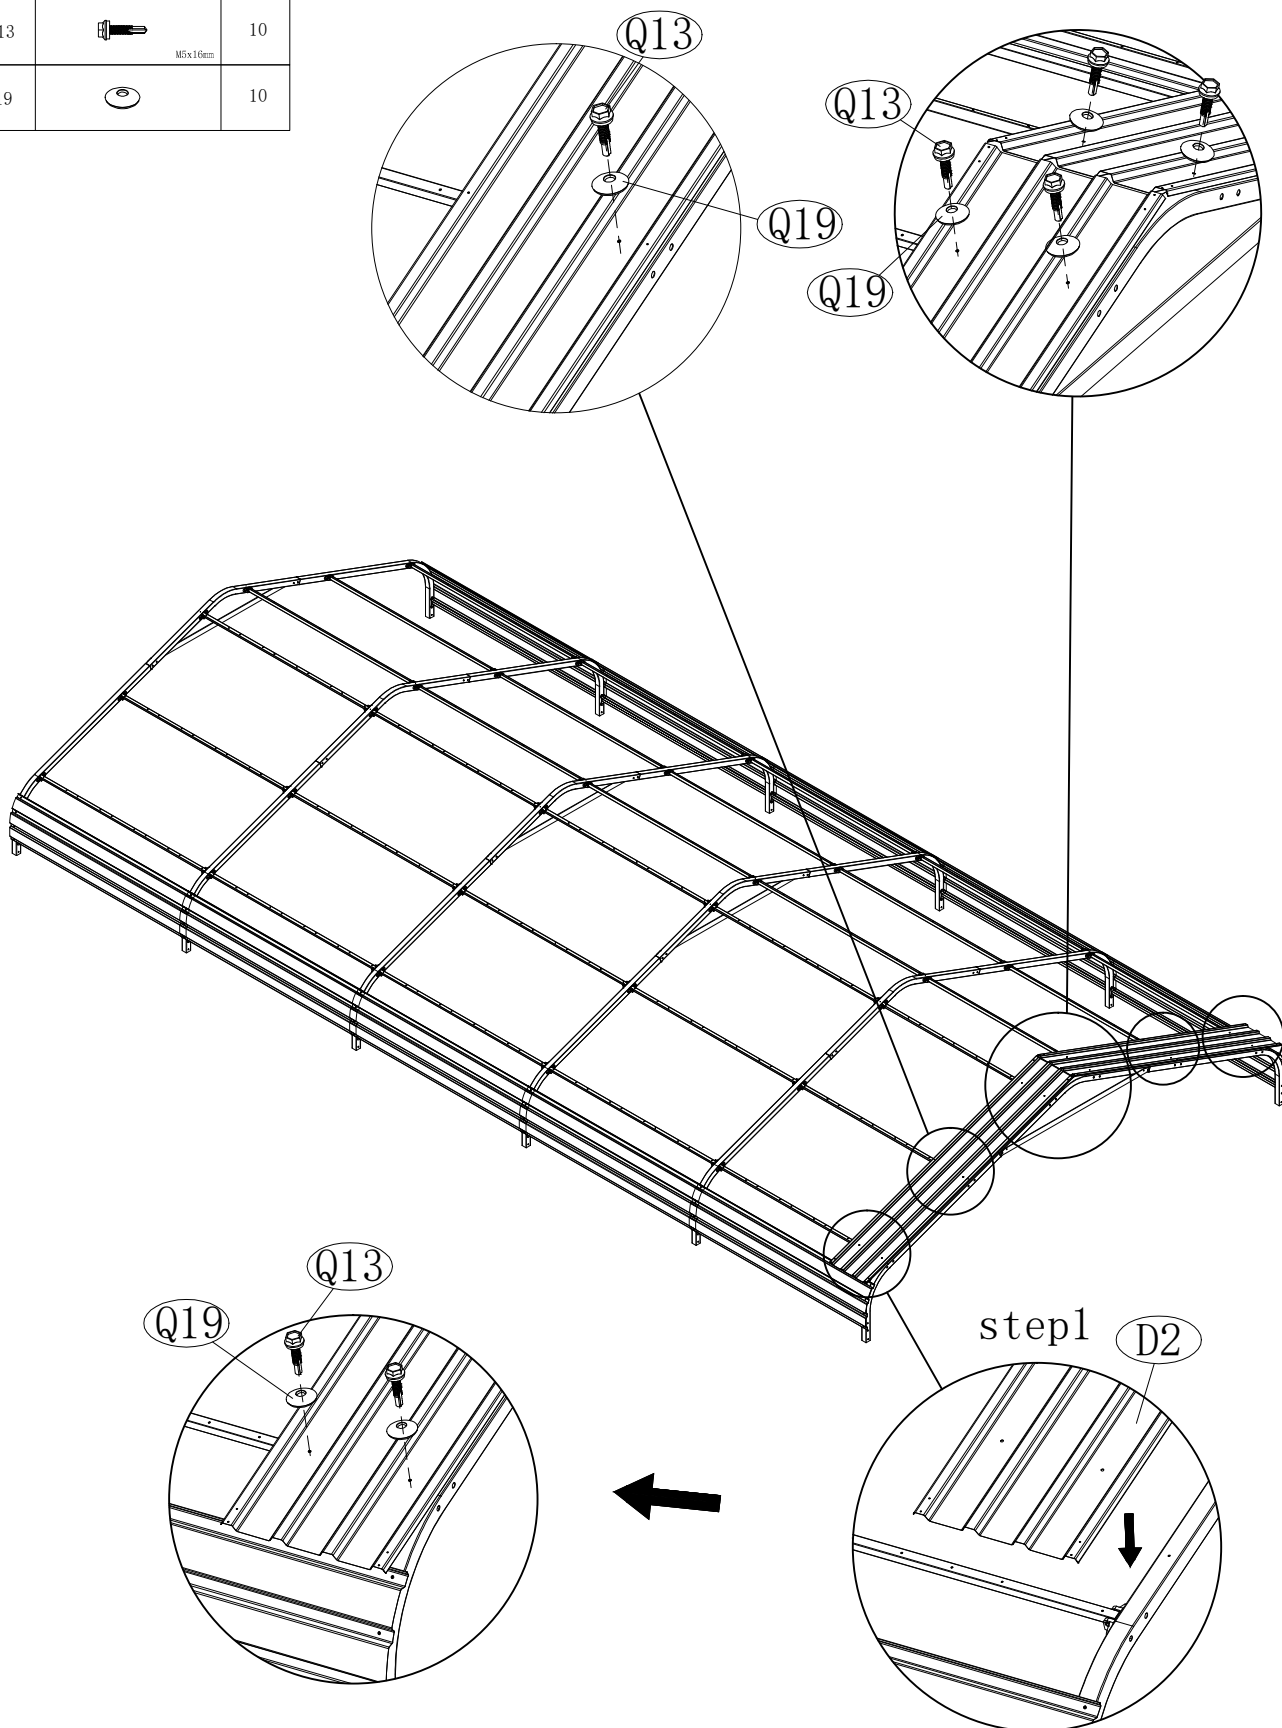


NO.	PART.	Qty.
D2	 2058mm	8
Q32	 M4x14mm	28
Q13	 M5x16mm	40
Q18		28
Q19		40

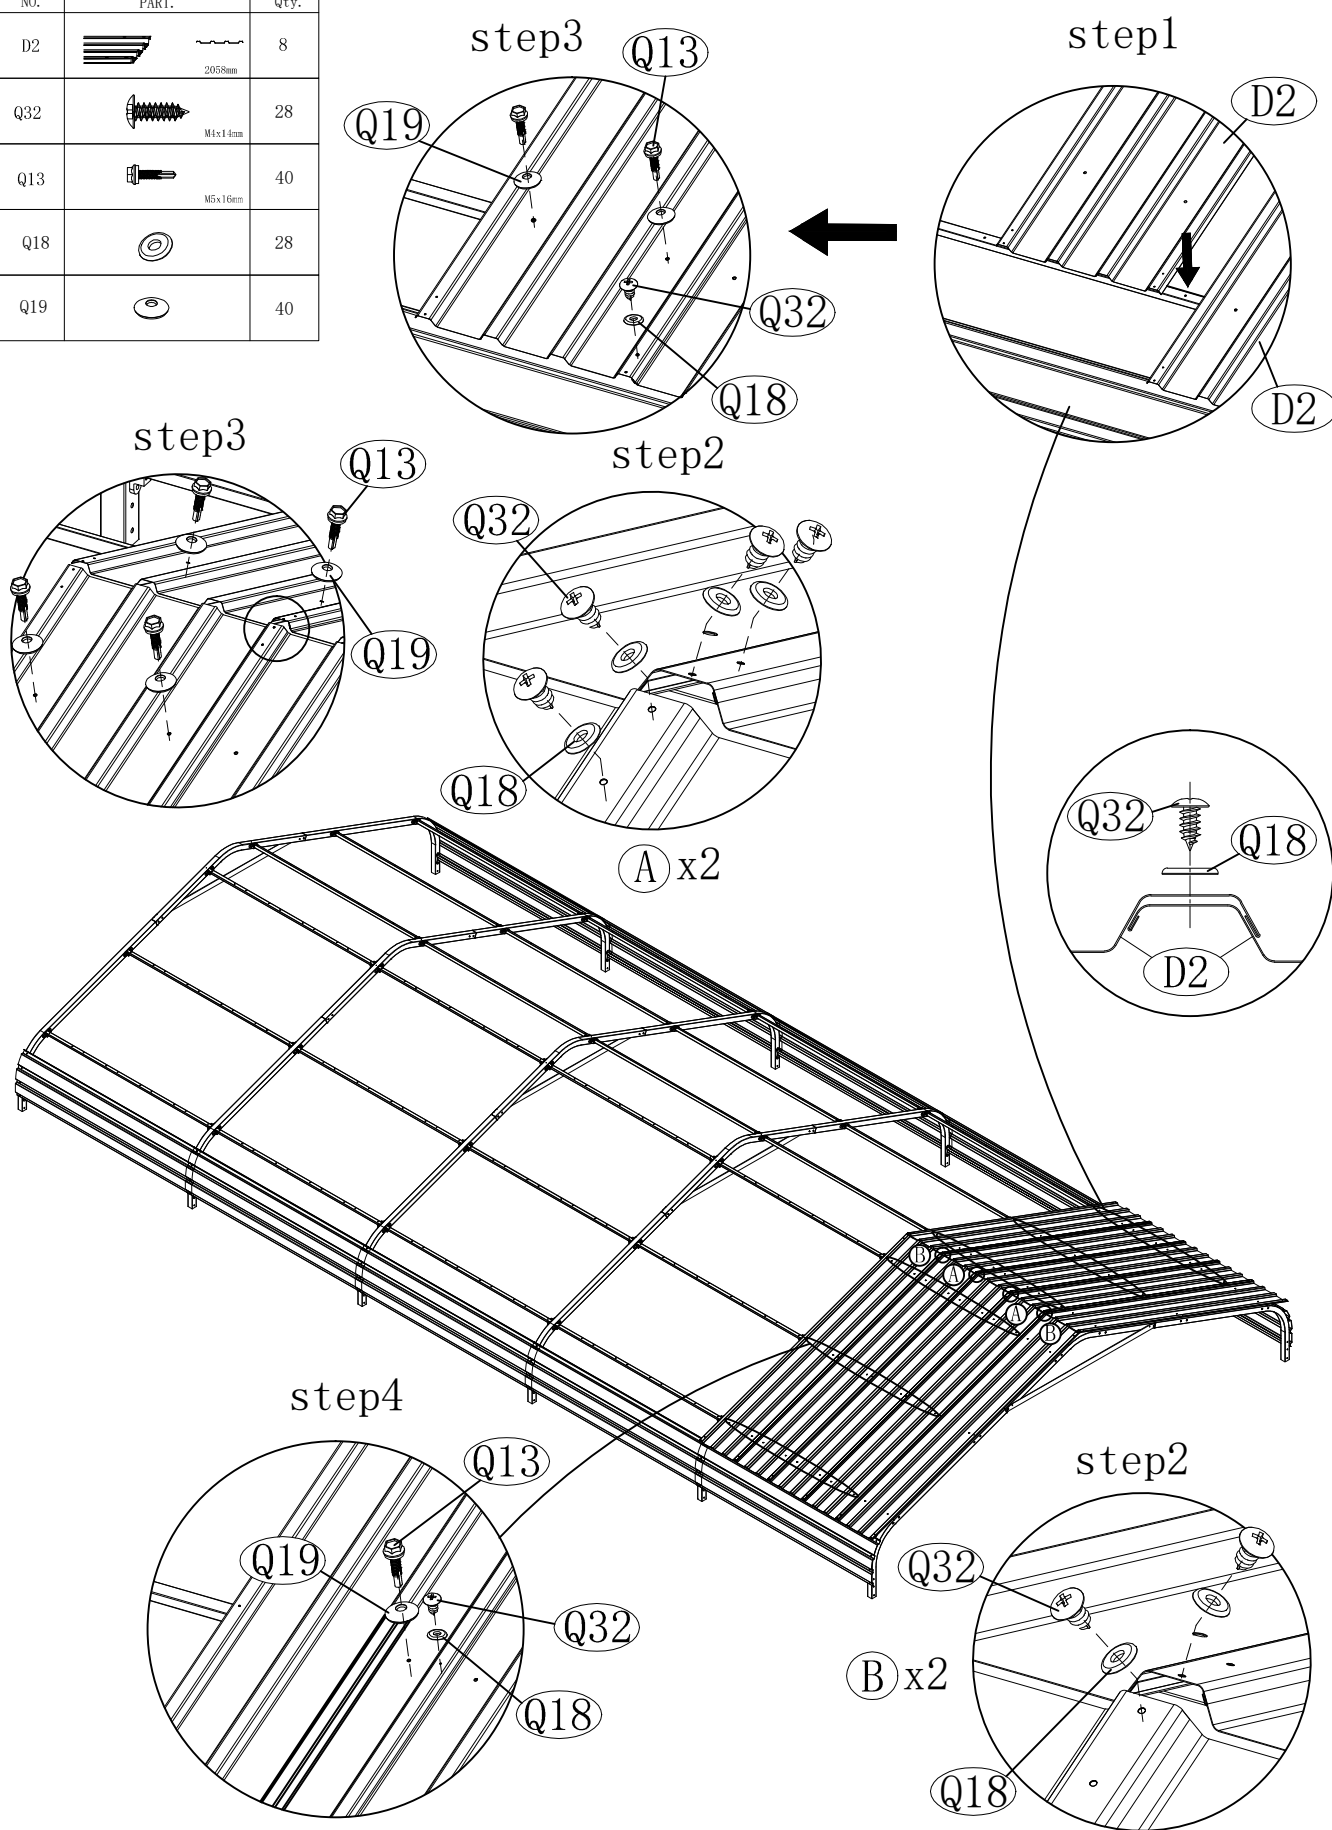


NO.	PART.	Qty.
Q32	 M4x14mm	2
Q18		2
Q4		1


Install plastic Q4 between the
4th and 5th pieces

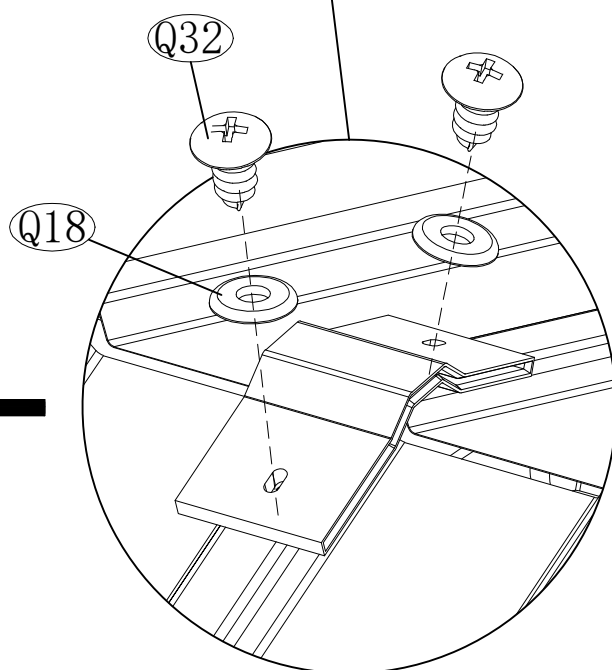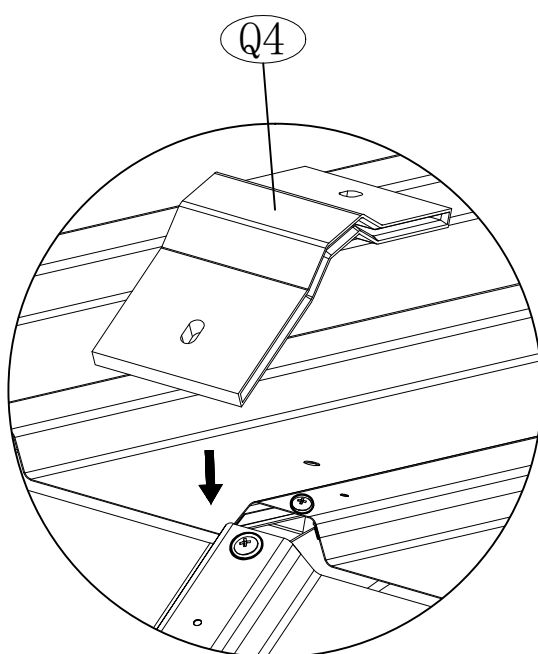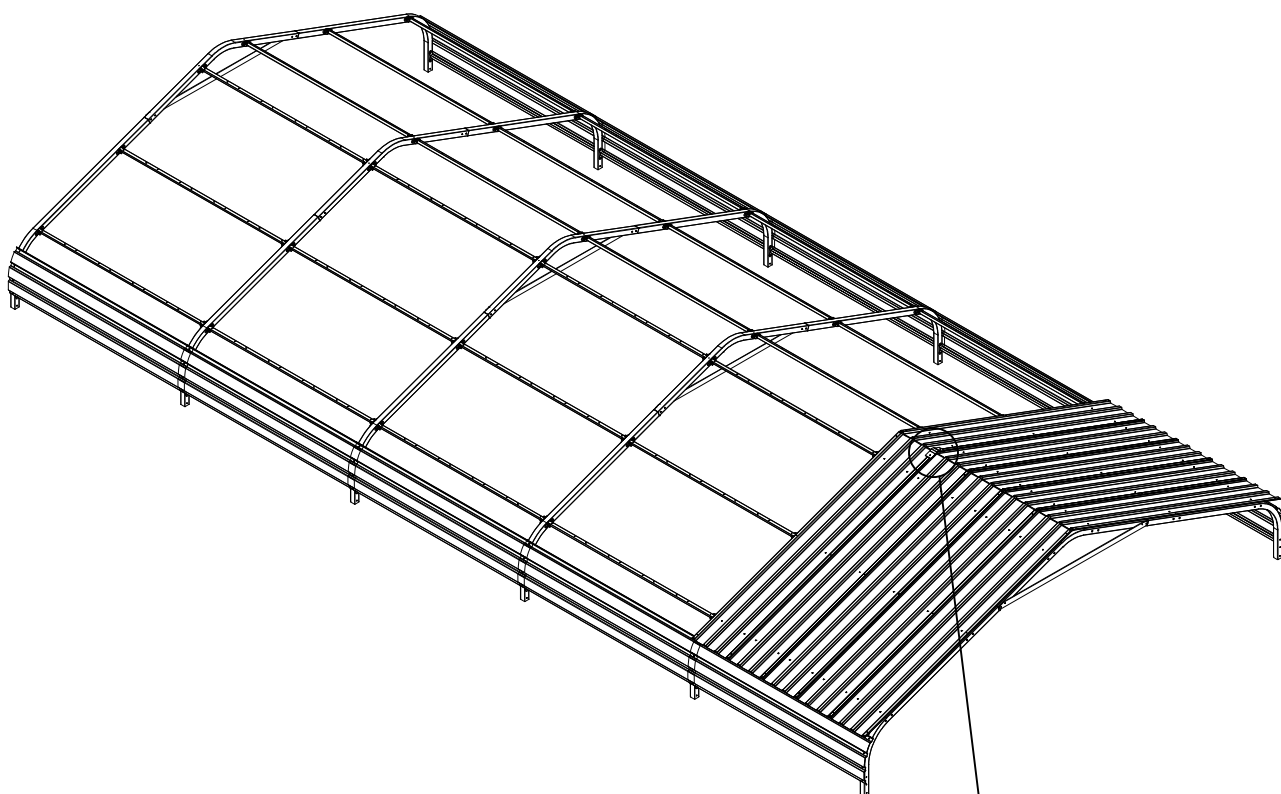


NO.	PART.	Qty.
D2		6
Q32		22
Q13		30
Q18		22
Q19		30

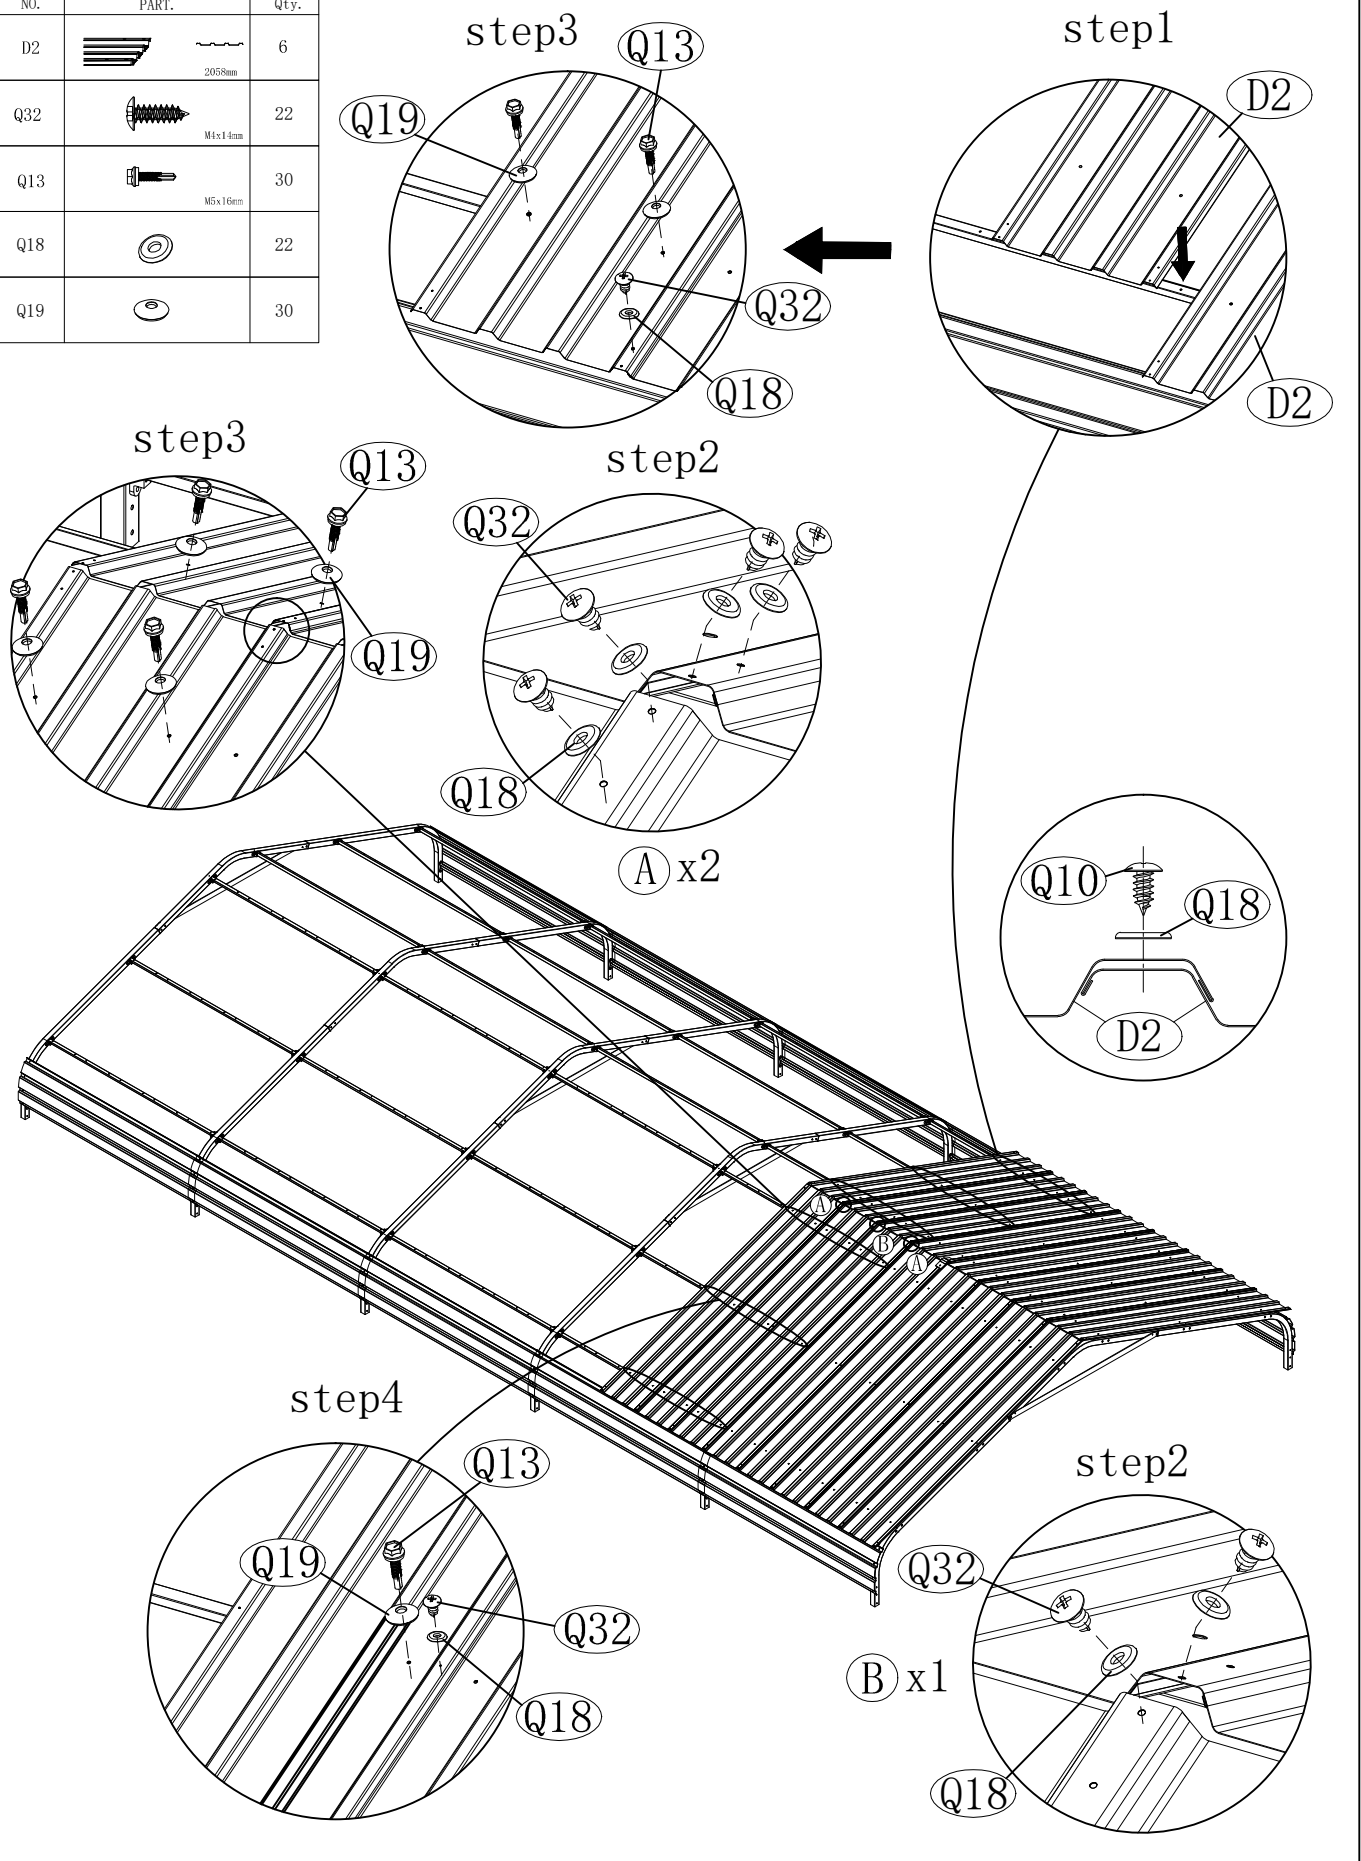


NO.	PART.	Qty.
7	 1256mm	1
Q32	 M4x14mm	2
Q18		2

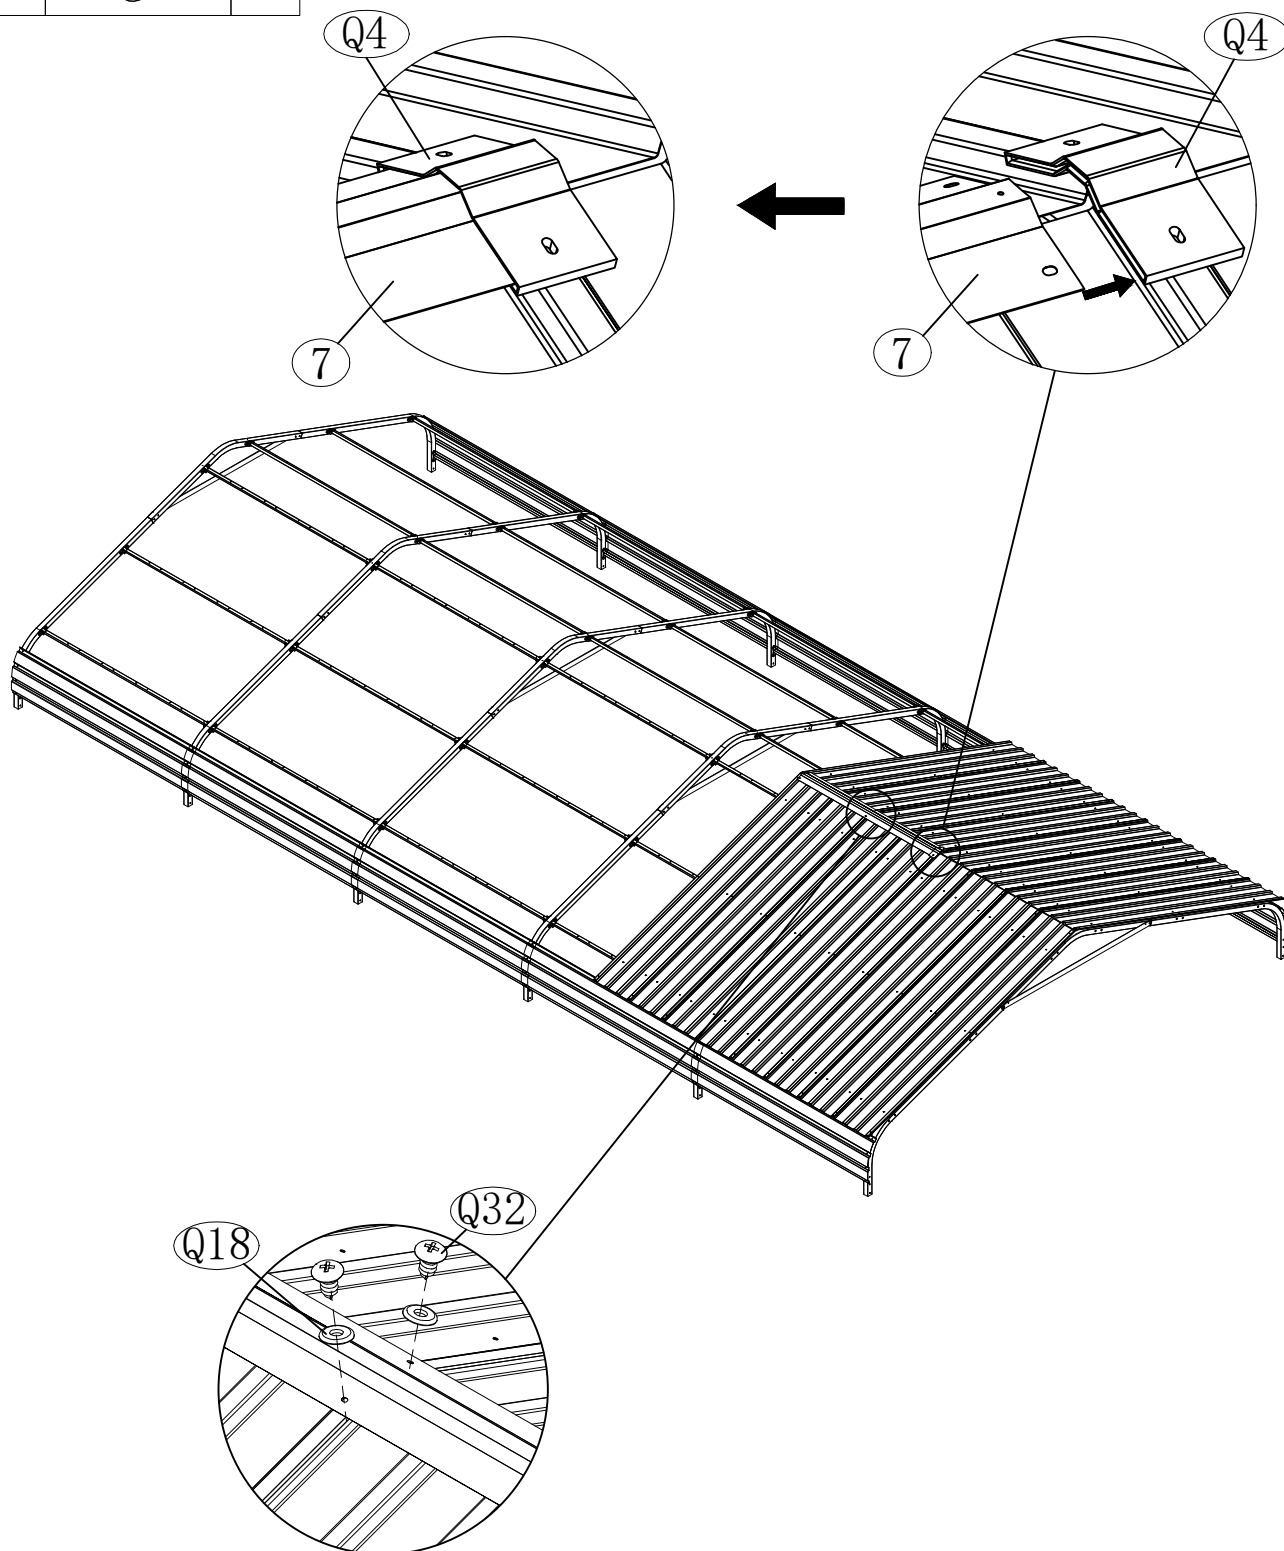


NO.	PART.	Qty.
D2		2
Q4		1
Q32		8
Q13		10
Q18		8
Q19		10

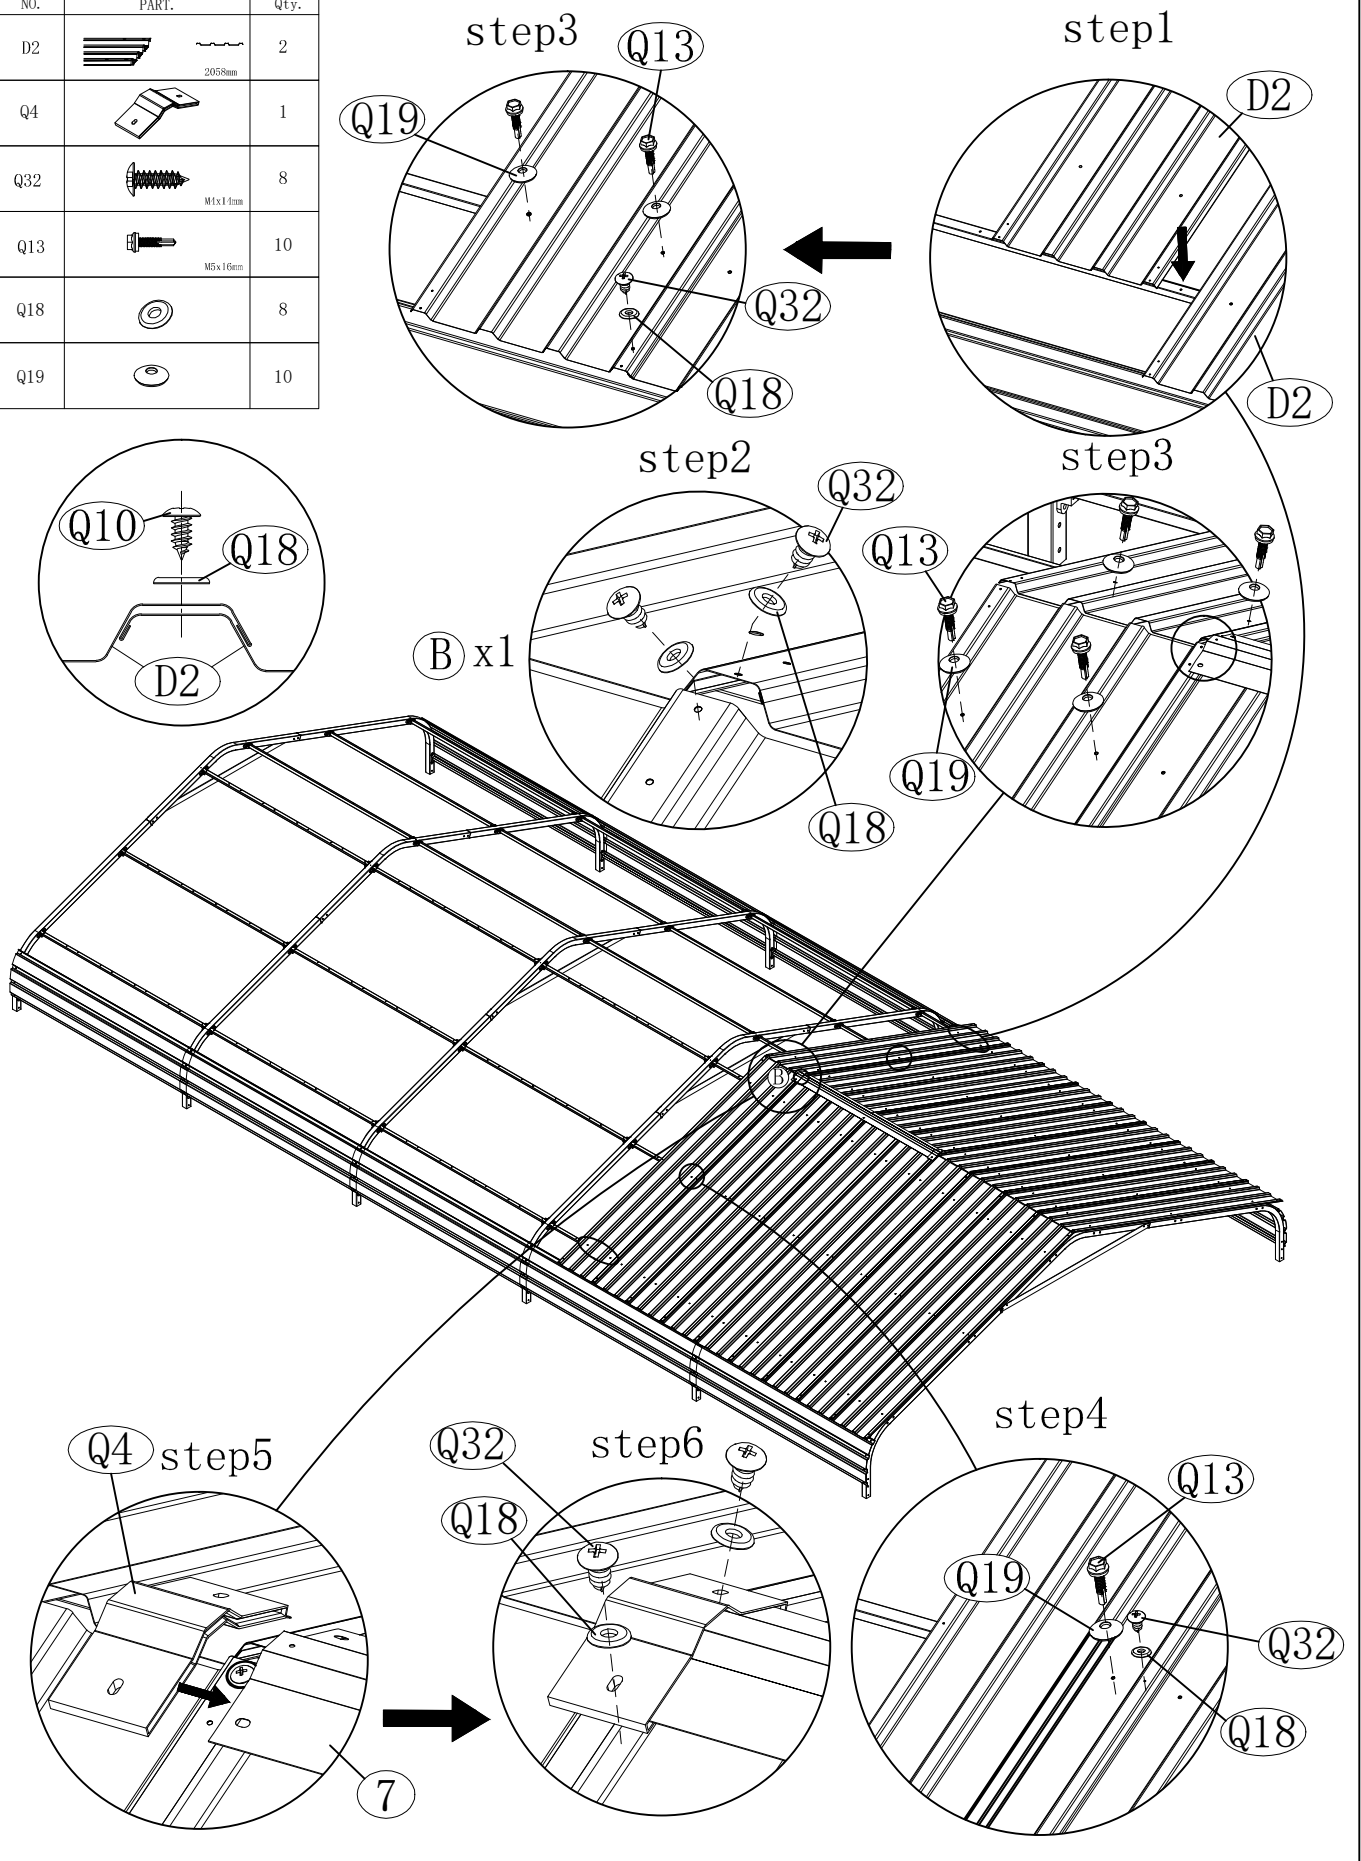


NO.	PART.	Qty.
D2	 2058mm	6
Q32	 M4x14mm	22
Q13	 M5x16mm	30
Q18		22
Q19		30

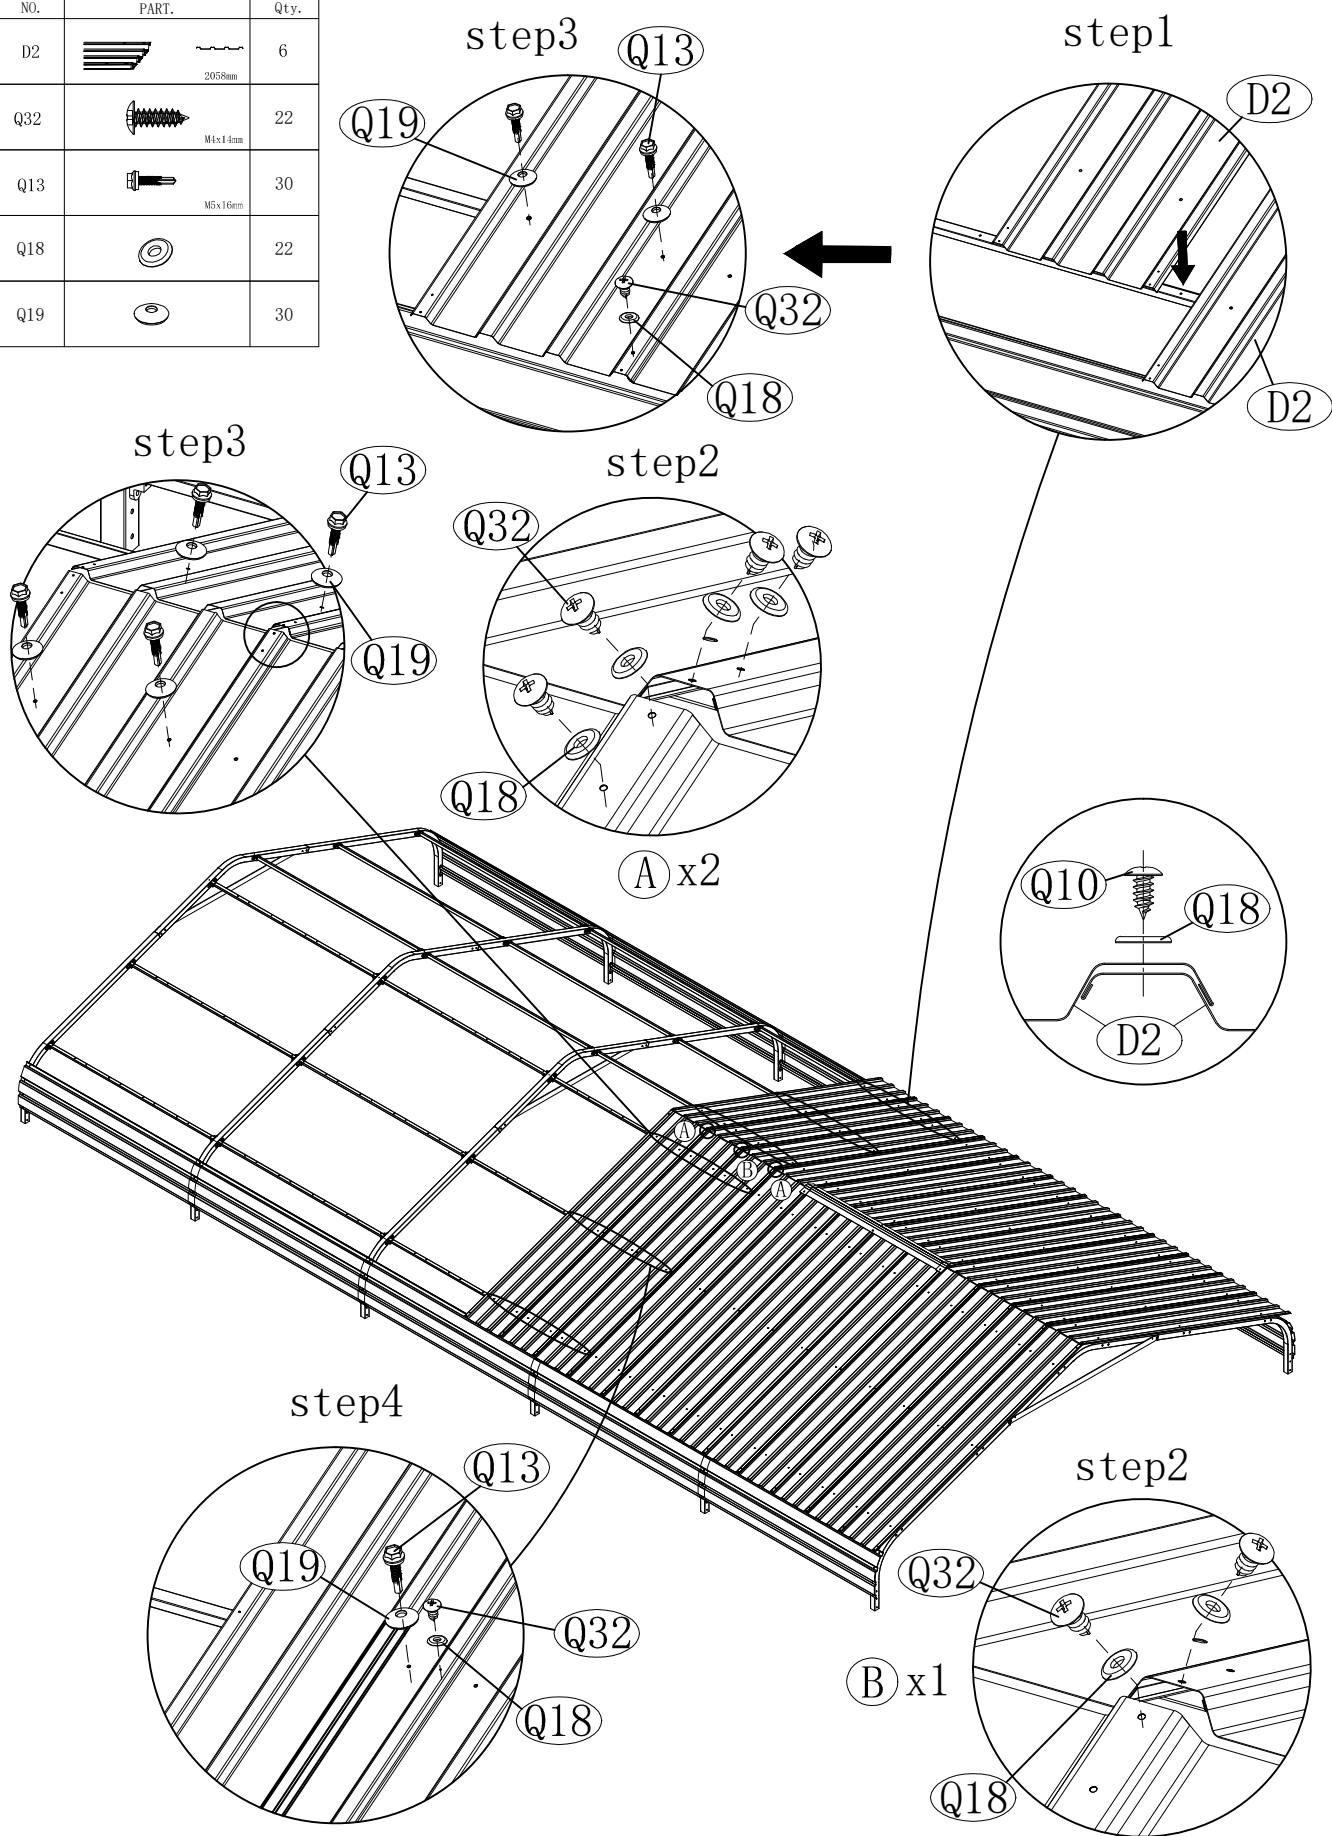


NO.	PART.	Qty.
7	 1256mm	1
Q32	 M4x14mm	2
Q18		2

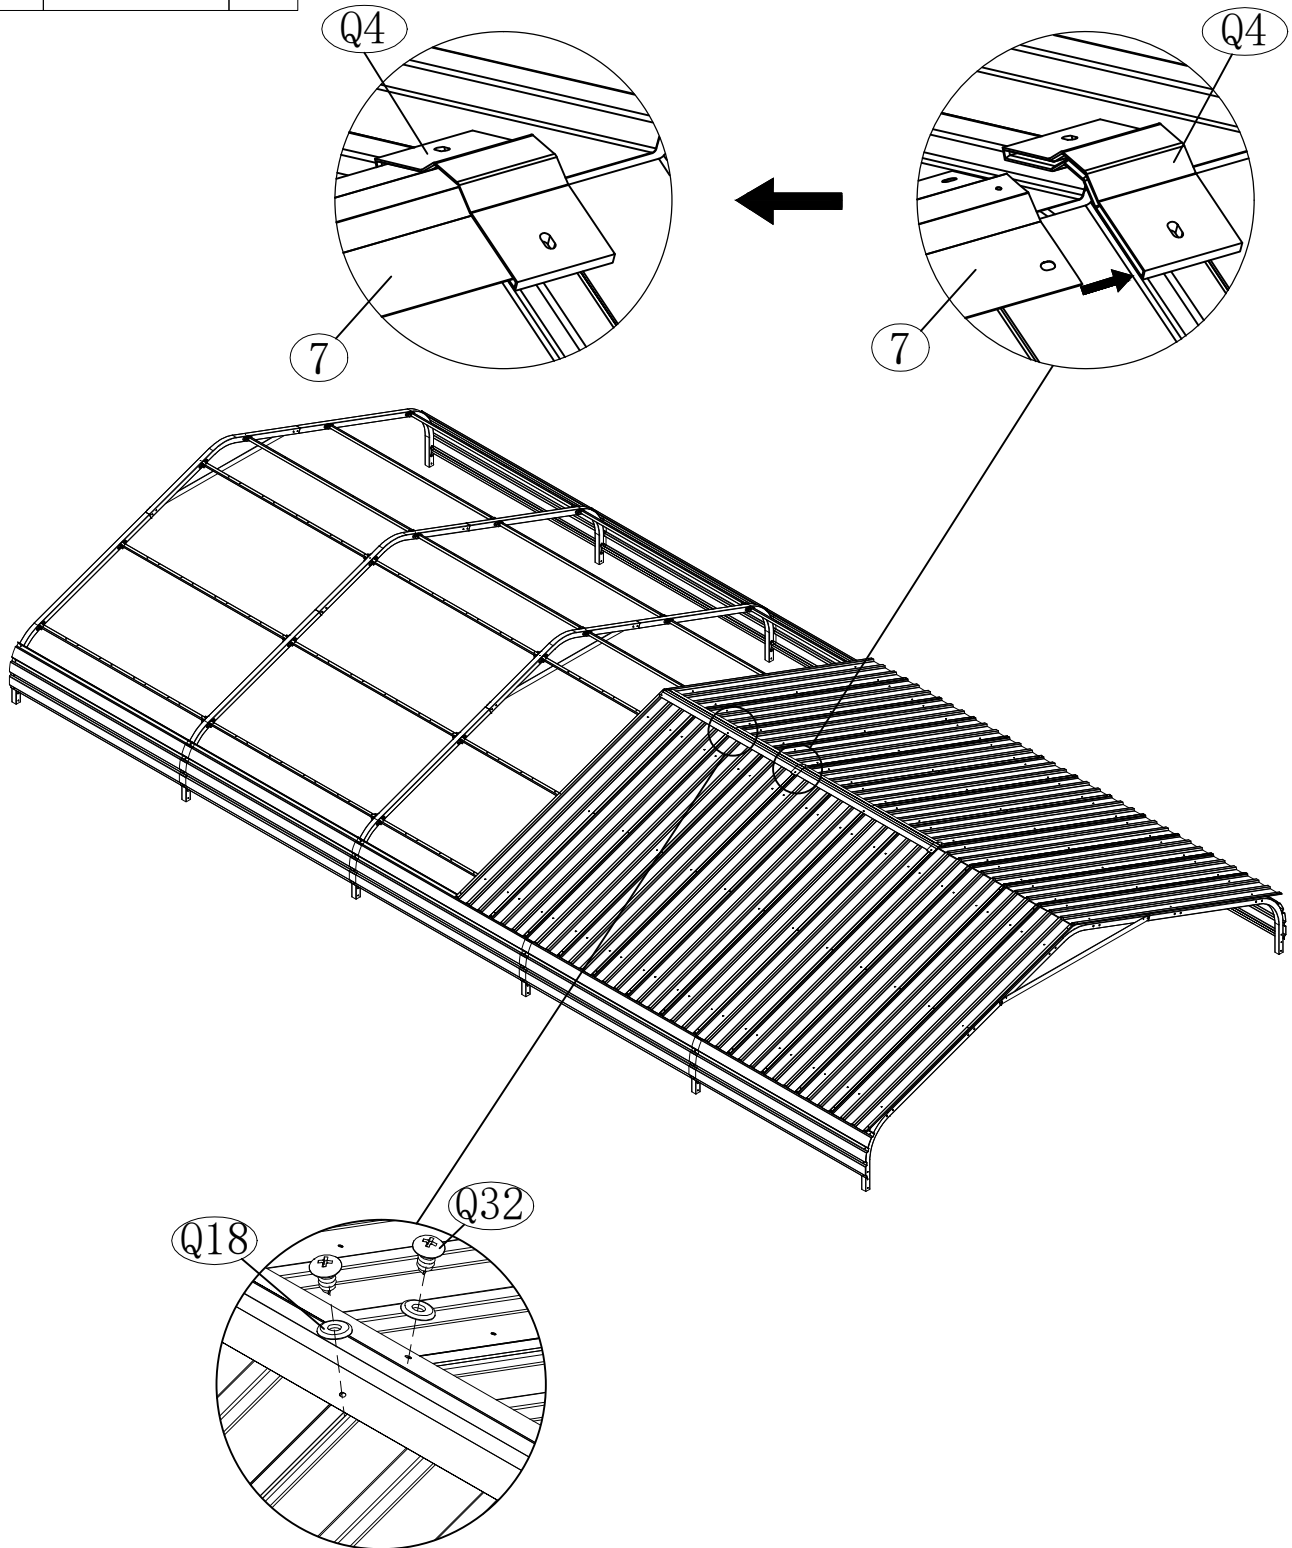


NO.	PART.	Qty.
D2		2
Q4		1
Q32		8
Q13		10
Q18		8
Q19		10

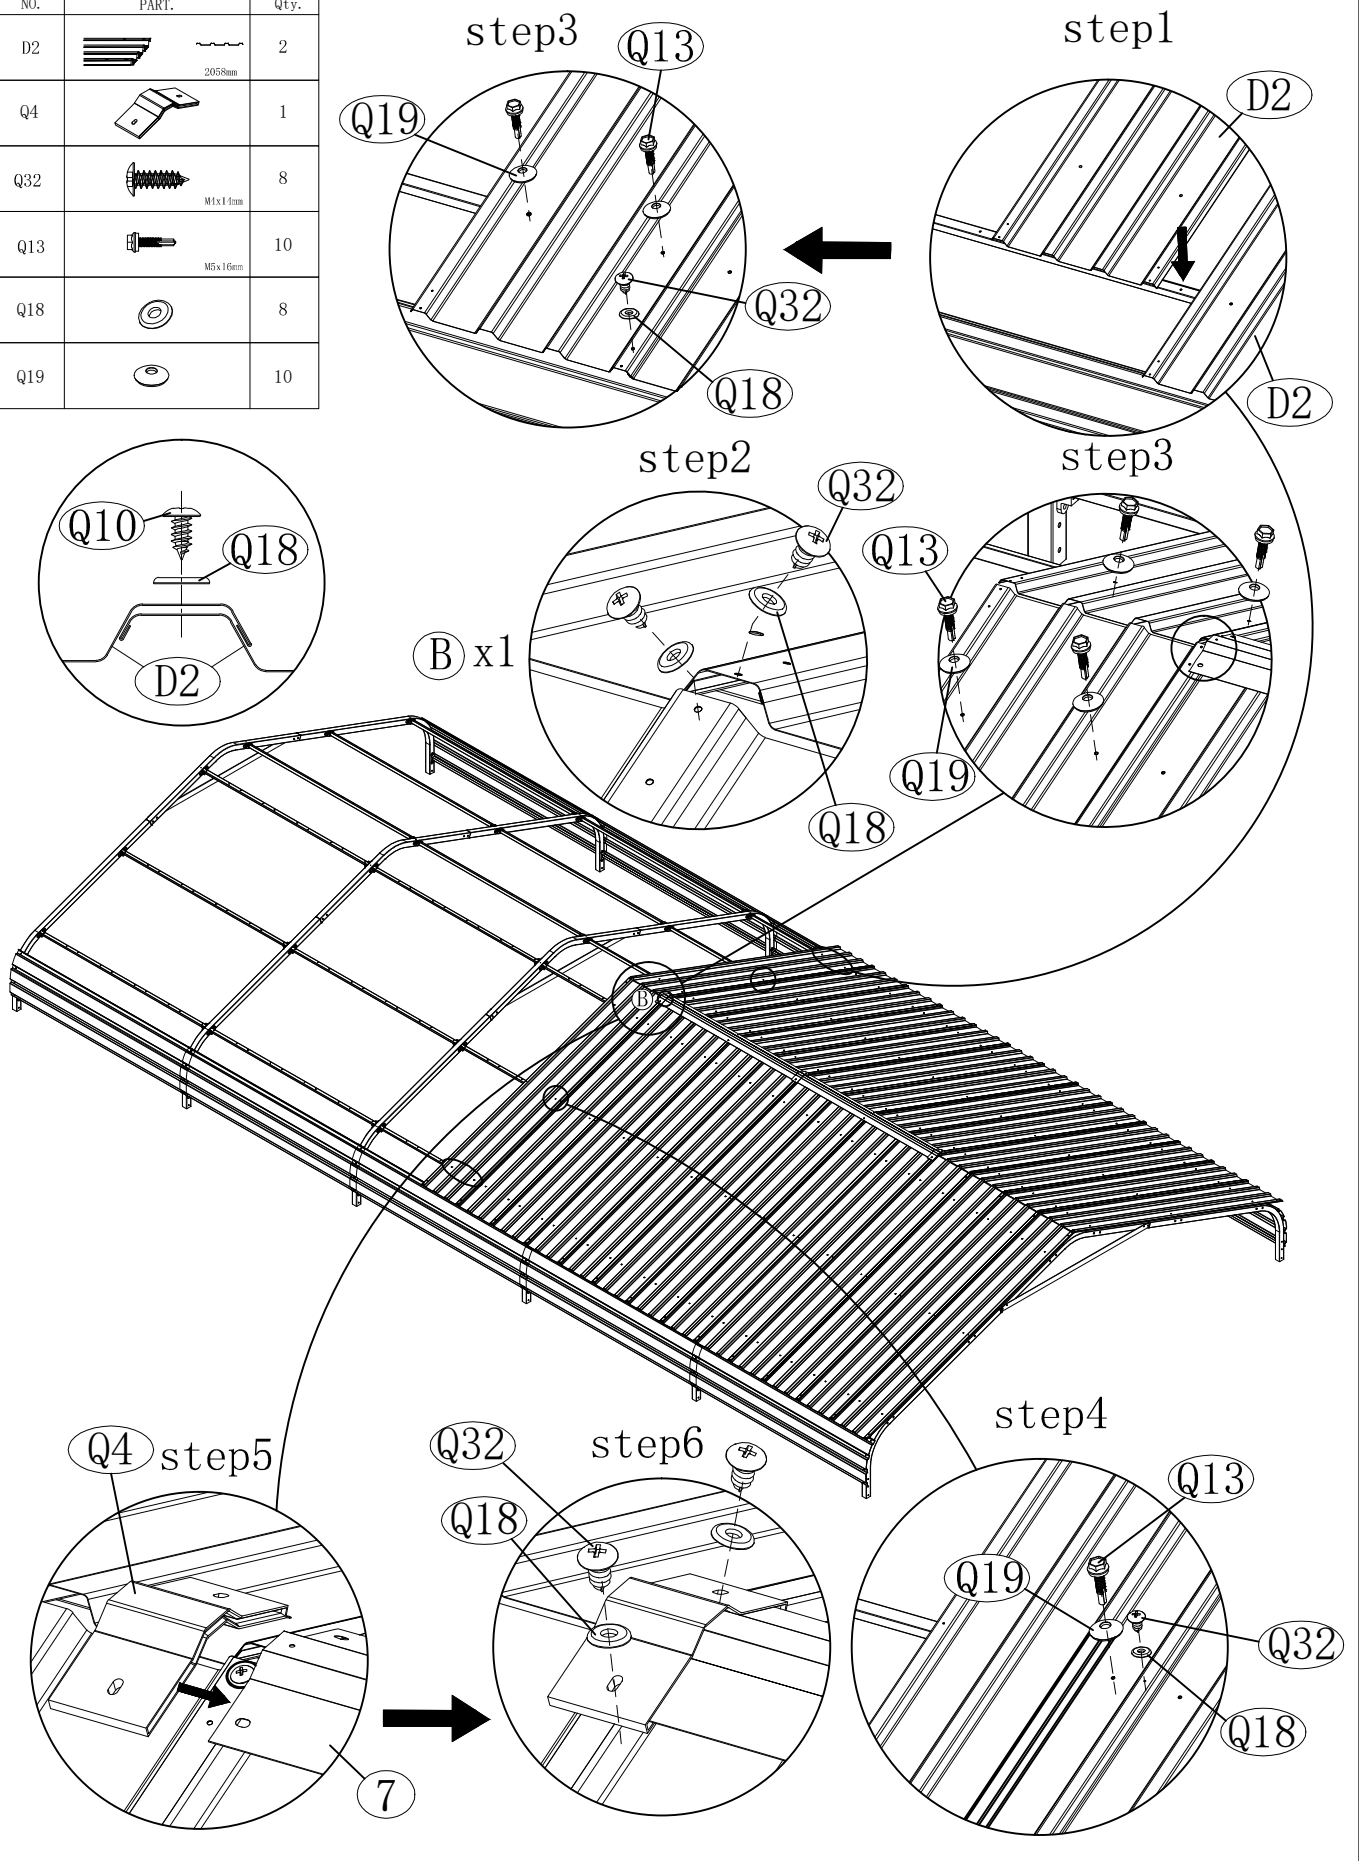


NO.	PART.	Qty.
D2	 2058mm	6
Q32	 M4x14mm	22
Q13	 M5x16mm	30
Q18		22
Q19		30

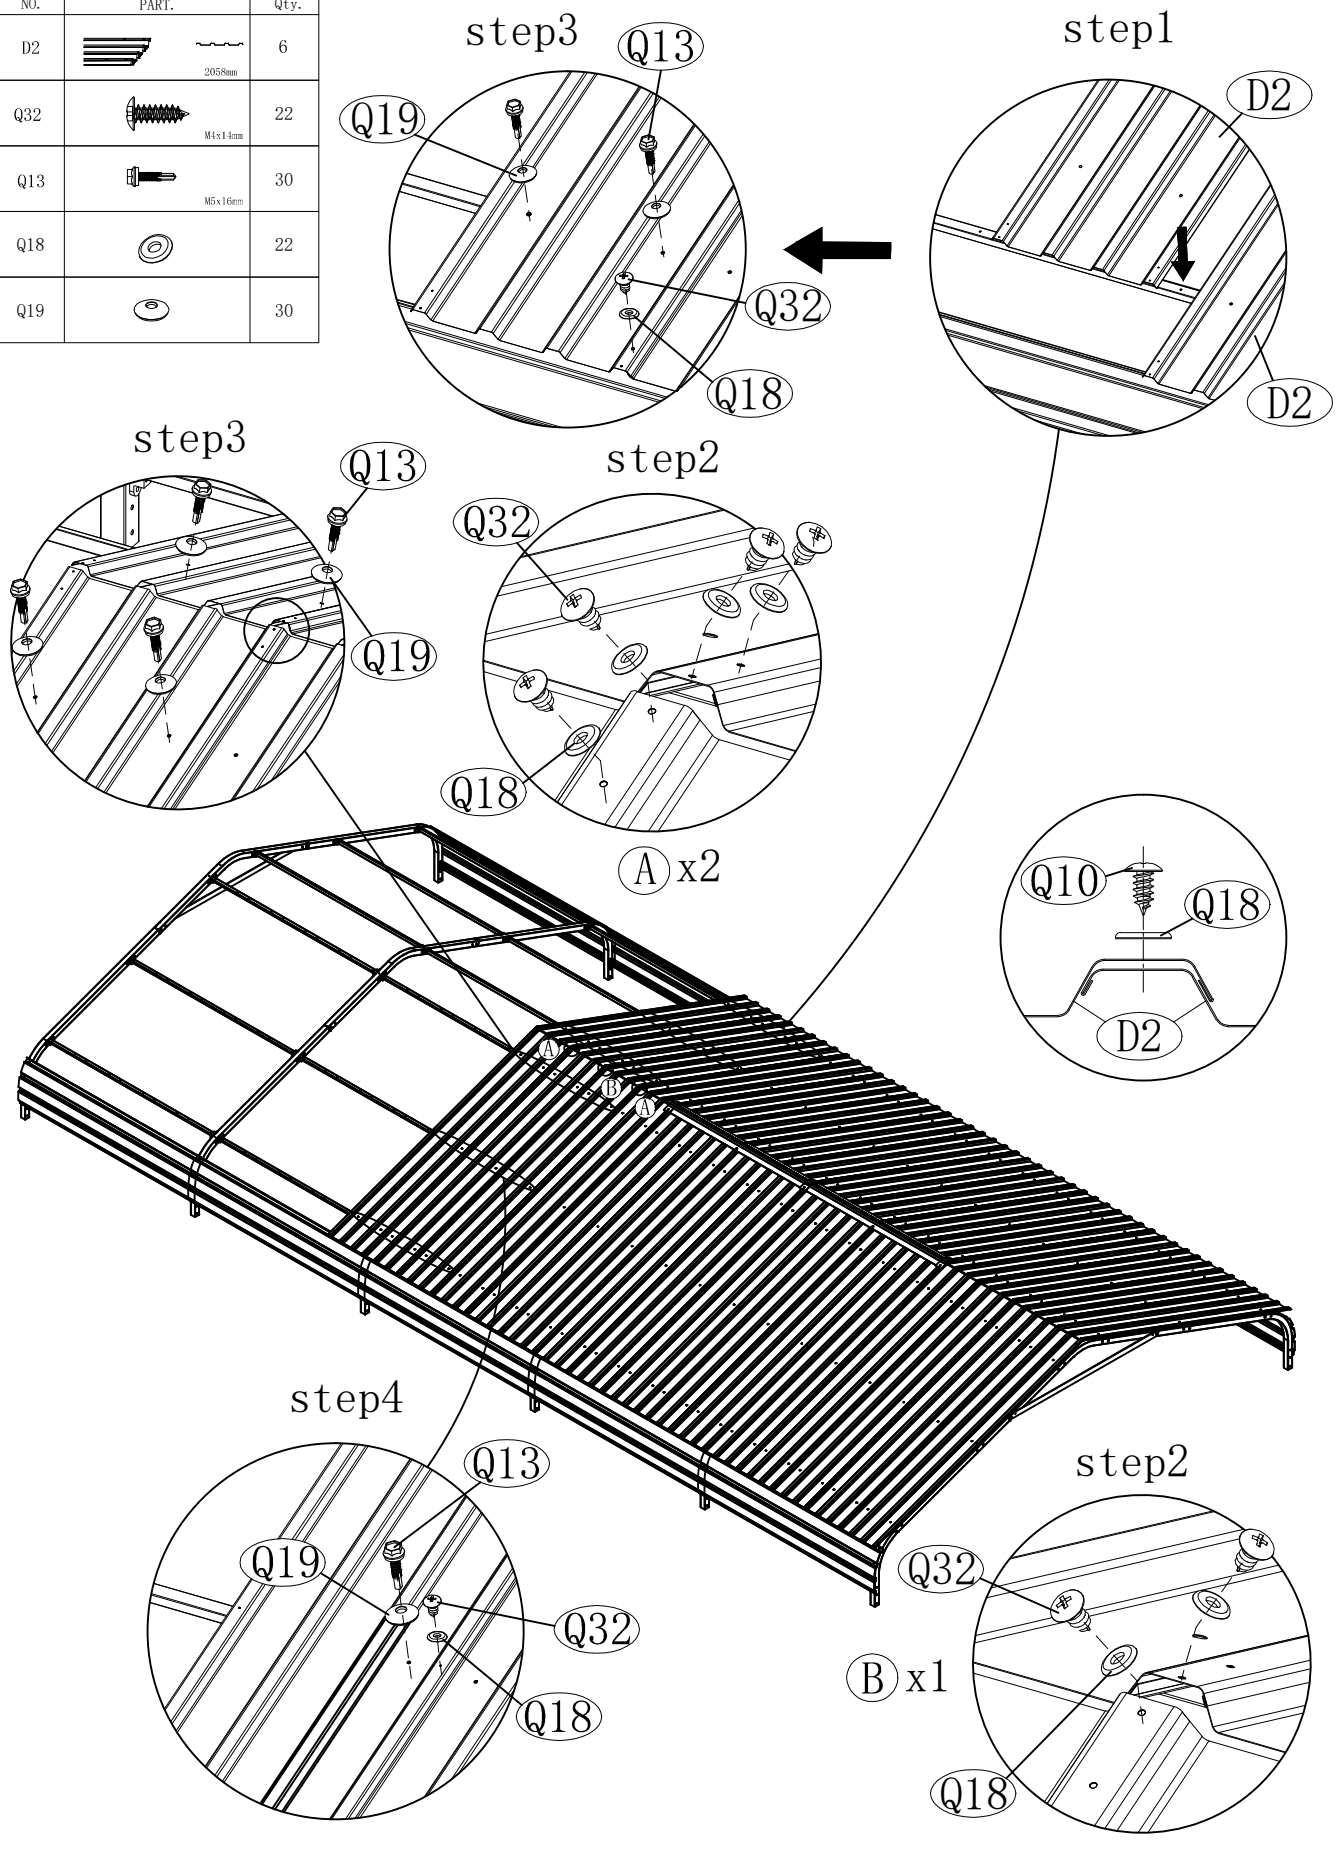


NO.	PART.	Qty.
7	 1256mm	1
Q32	 M4x14mm	2
Q18		2

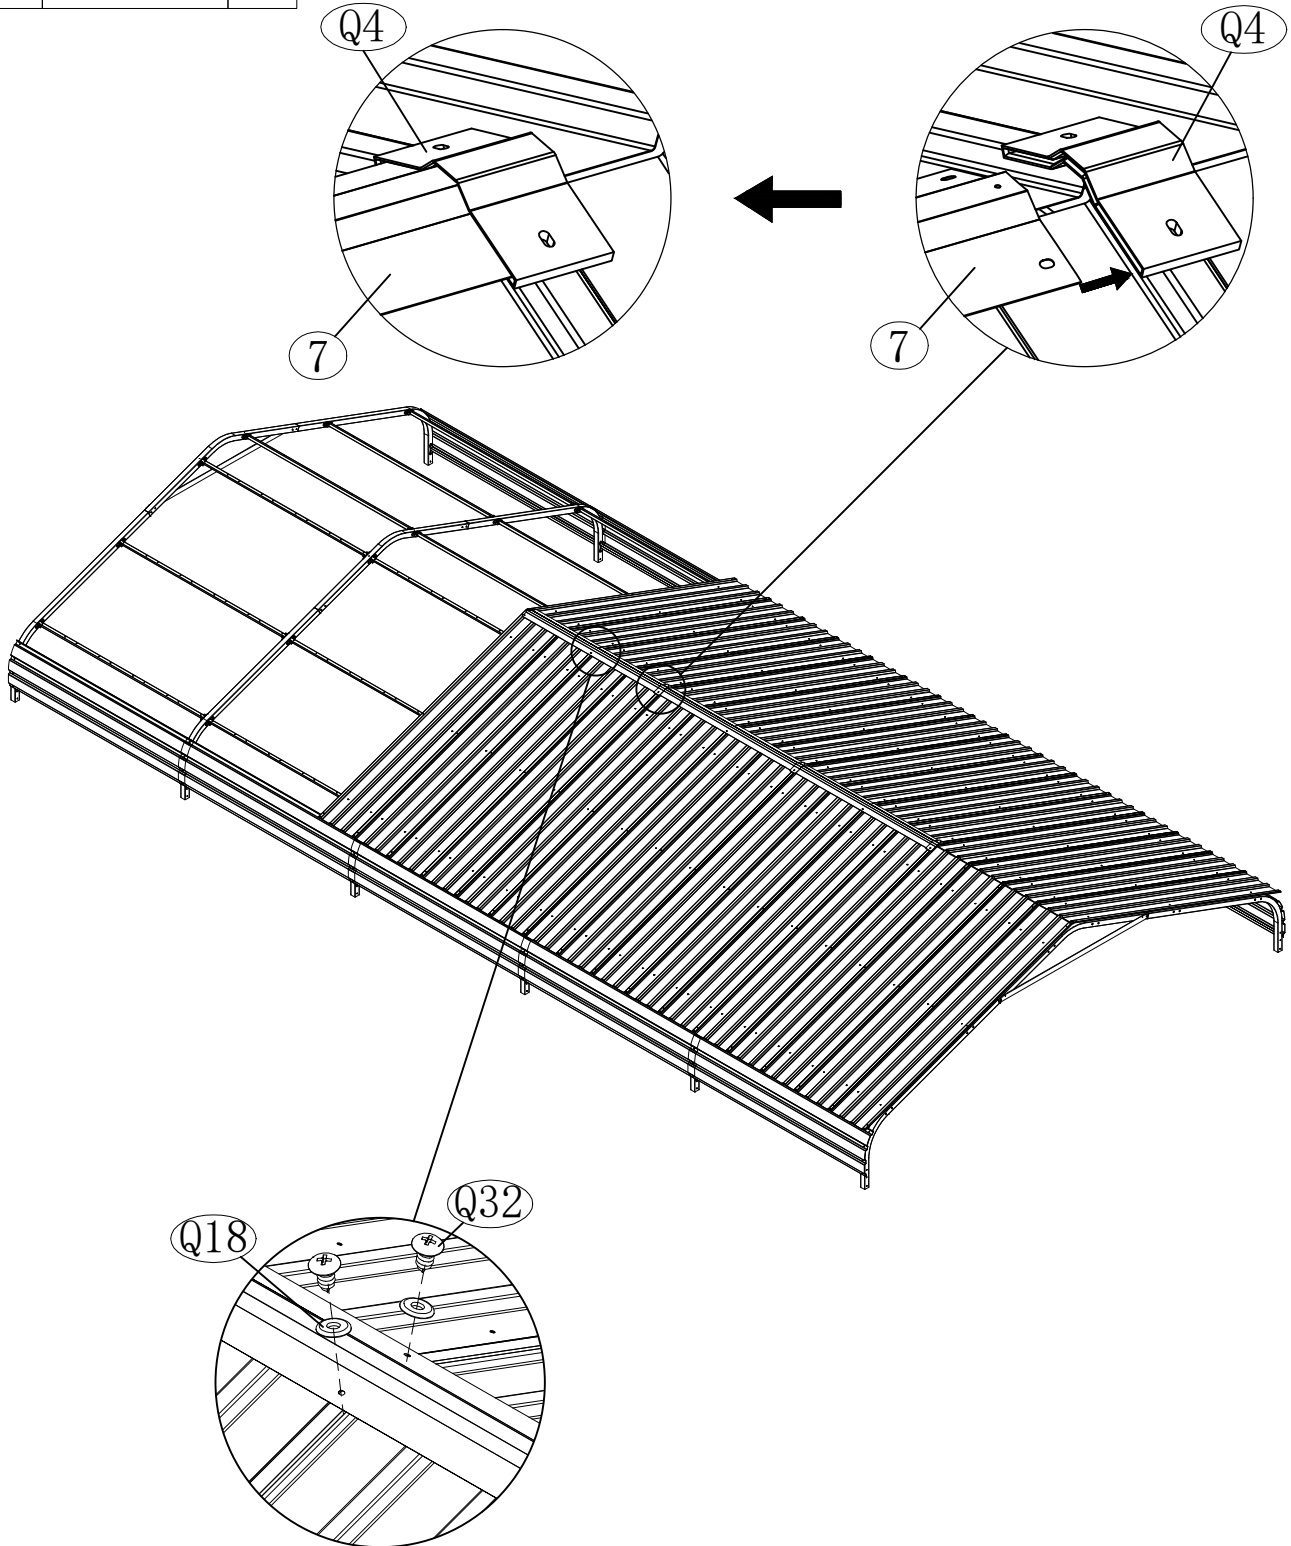




NO.	PART.	Qty.
D2	 2058mm	2
Q4		1
Q32	 M1x11mm	8
Q13	 M5x16mm	10
Q18		8
Q19		10

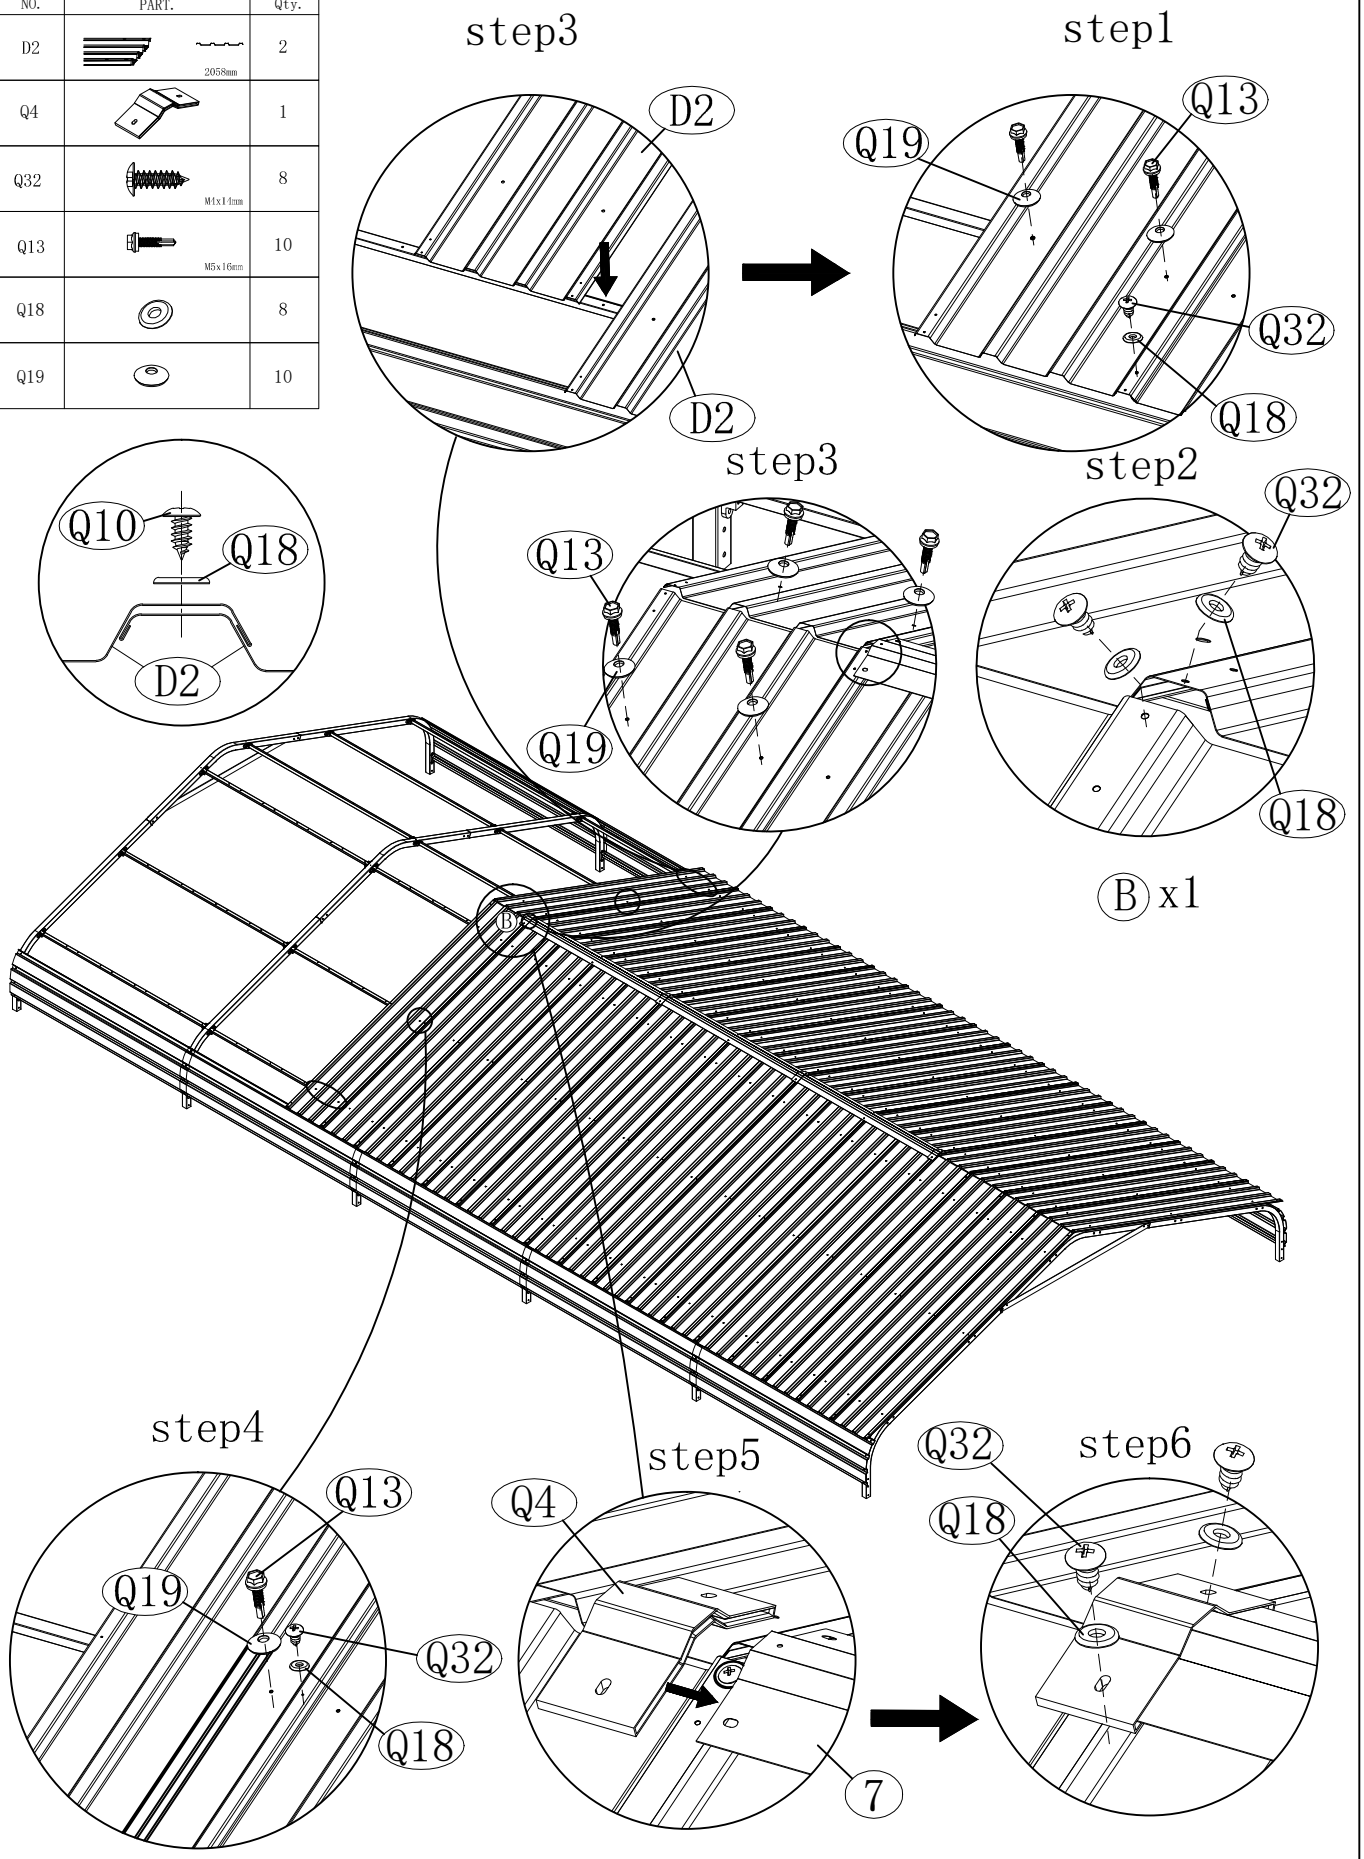


NO.	PART.	Qty.
D2	 2058mm	6
Q32	 M4x14mm	22
Q13	 M5x16mm	30
Q18		22
Q19		30

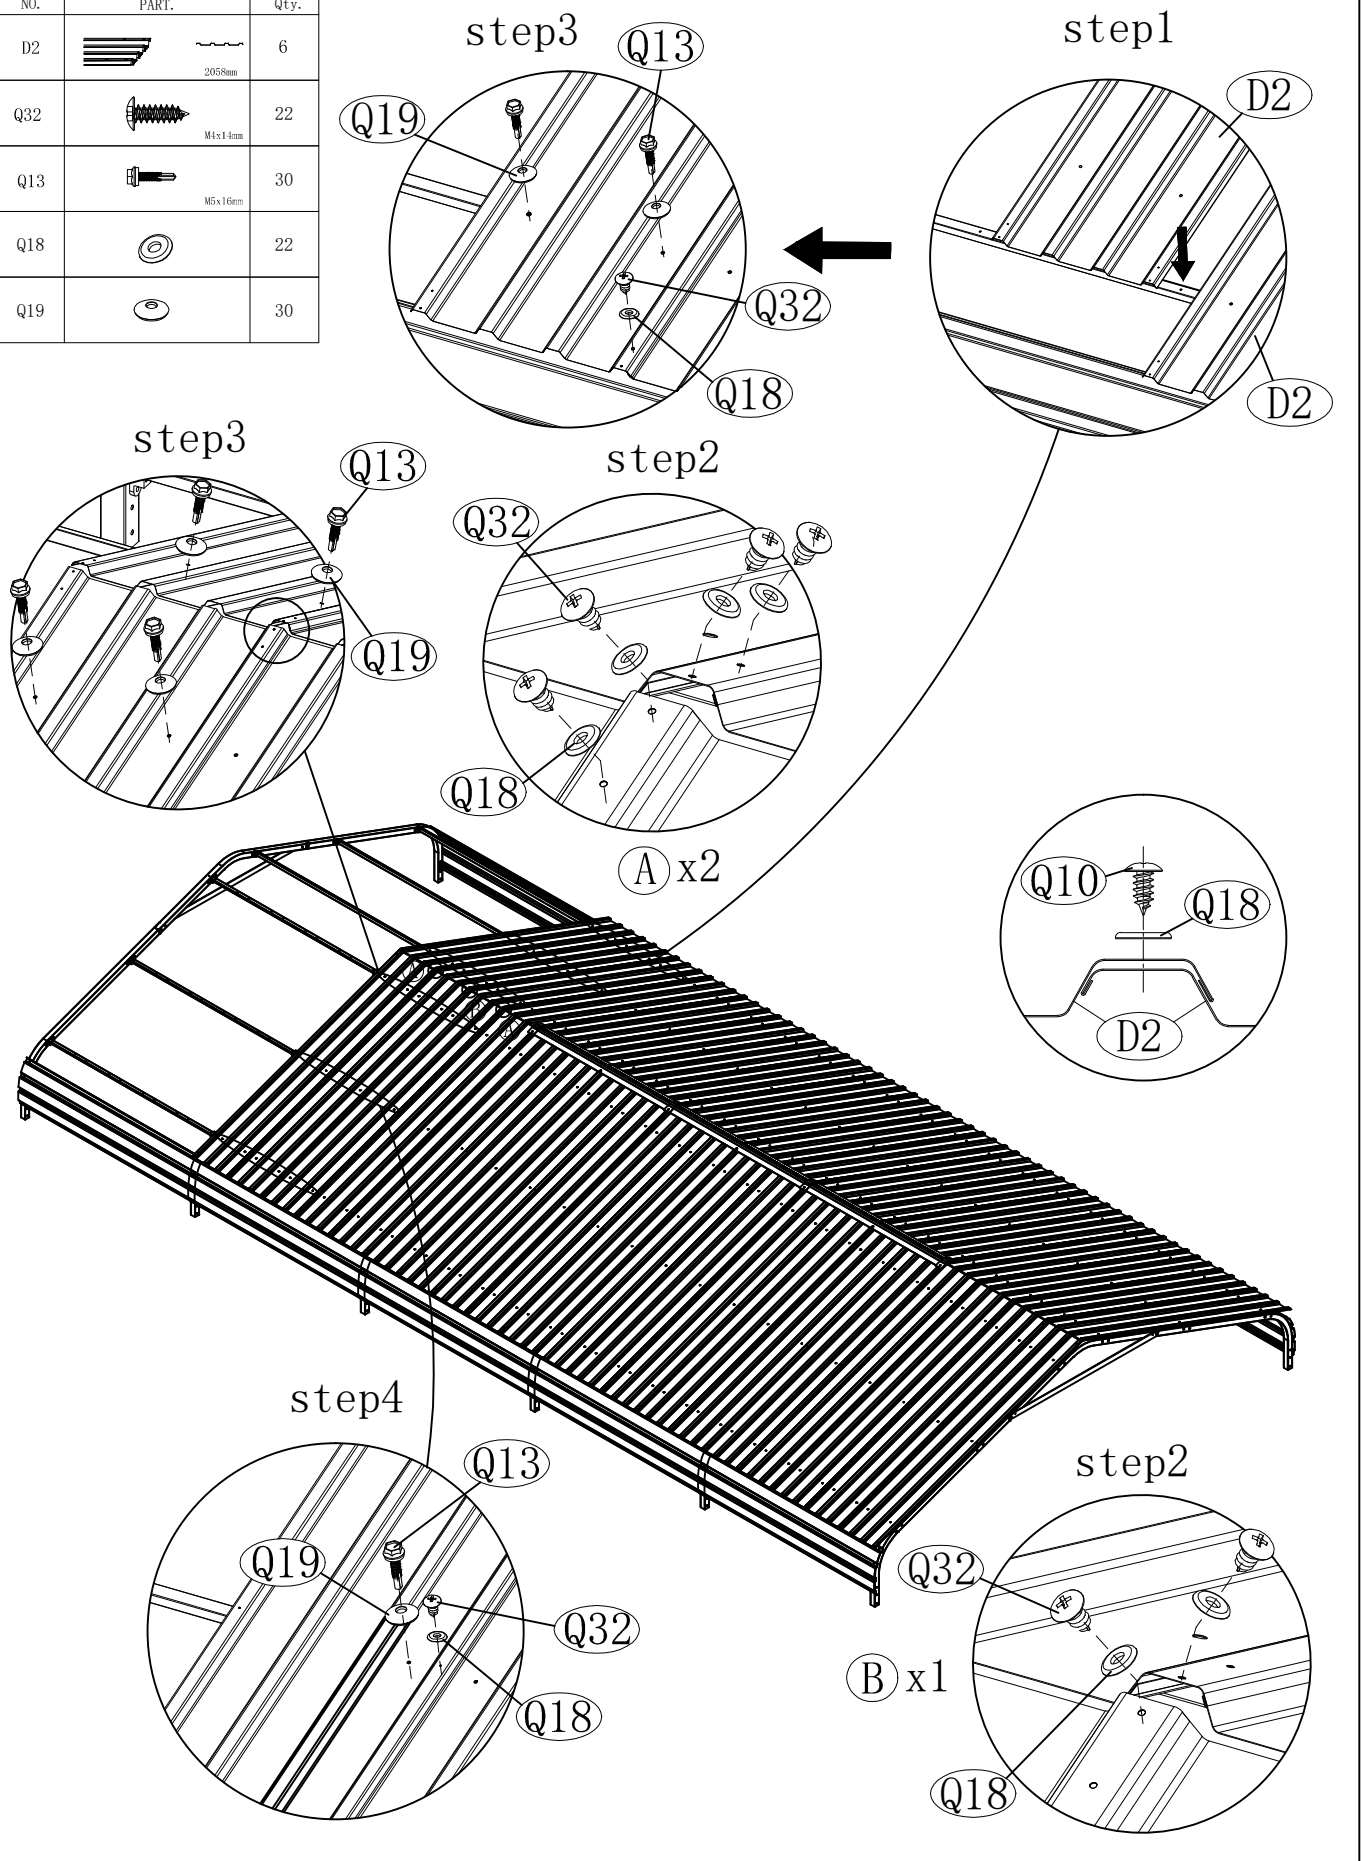


NO.	PART.	Qty.
7	 1256mm	1
Q32	 M4x14mm	2
Q18		2

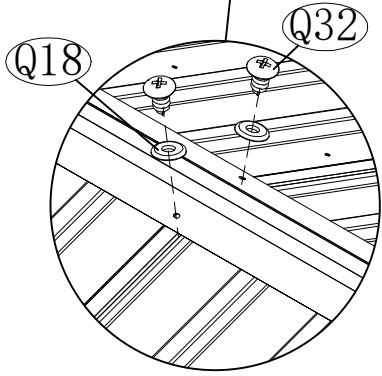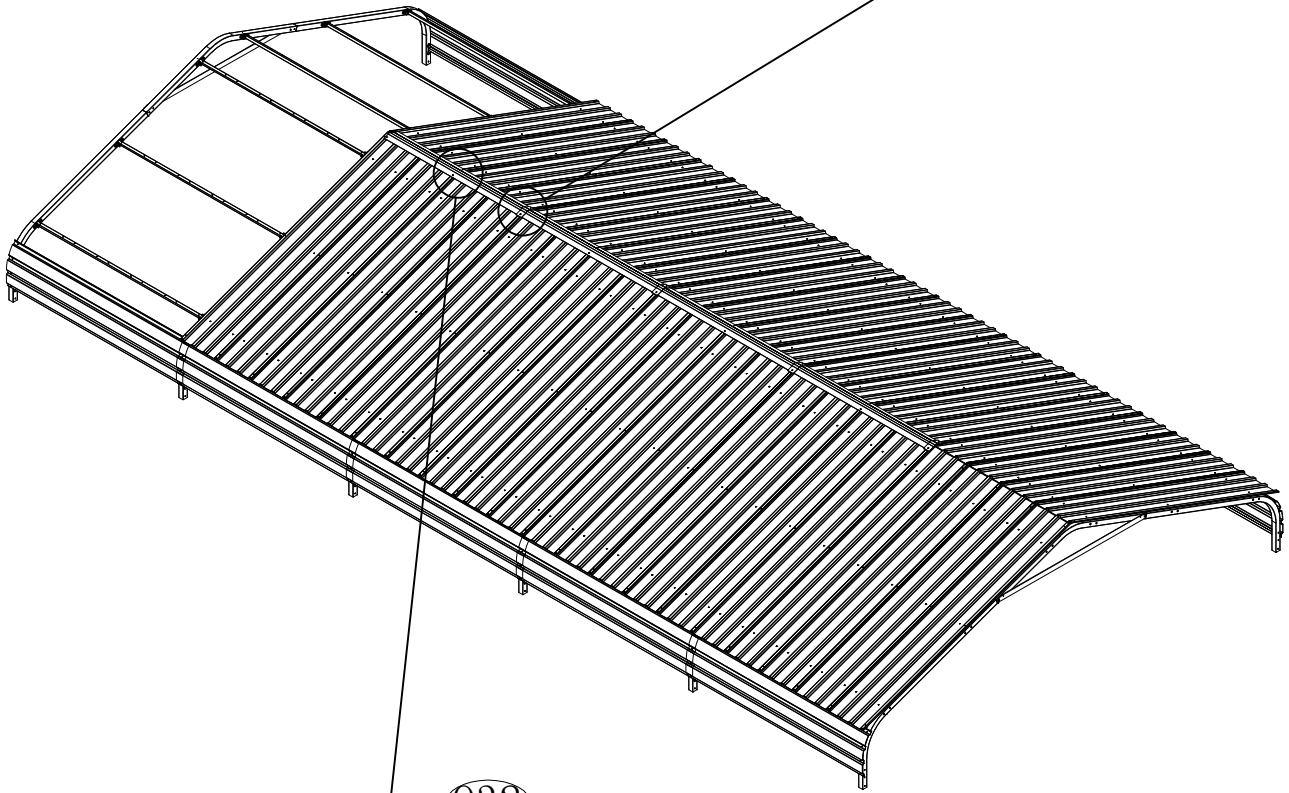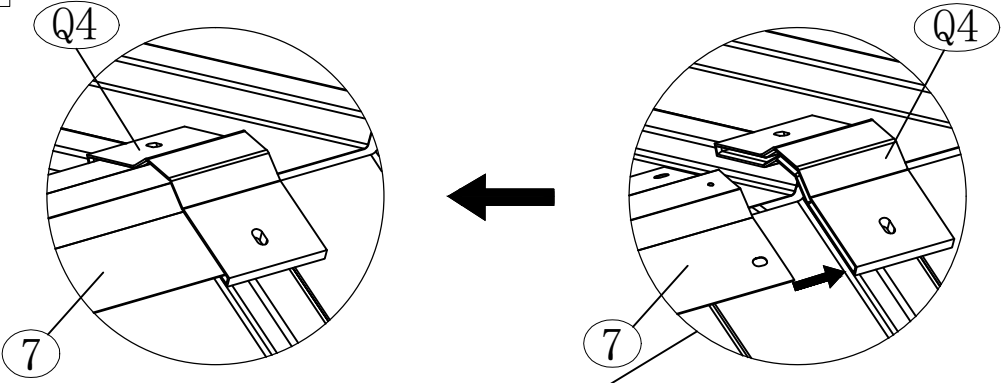

NO.	PART.	Qty.
D2	 2058mm	2
Q4		1
Q32	 M1x11mm	8
Q13	 M5x16mm	10
Q18		8
Q19		10

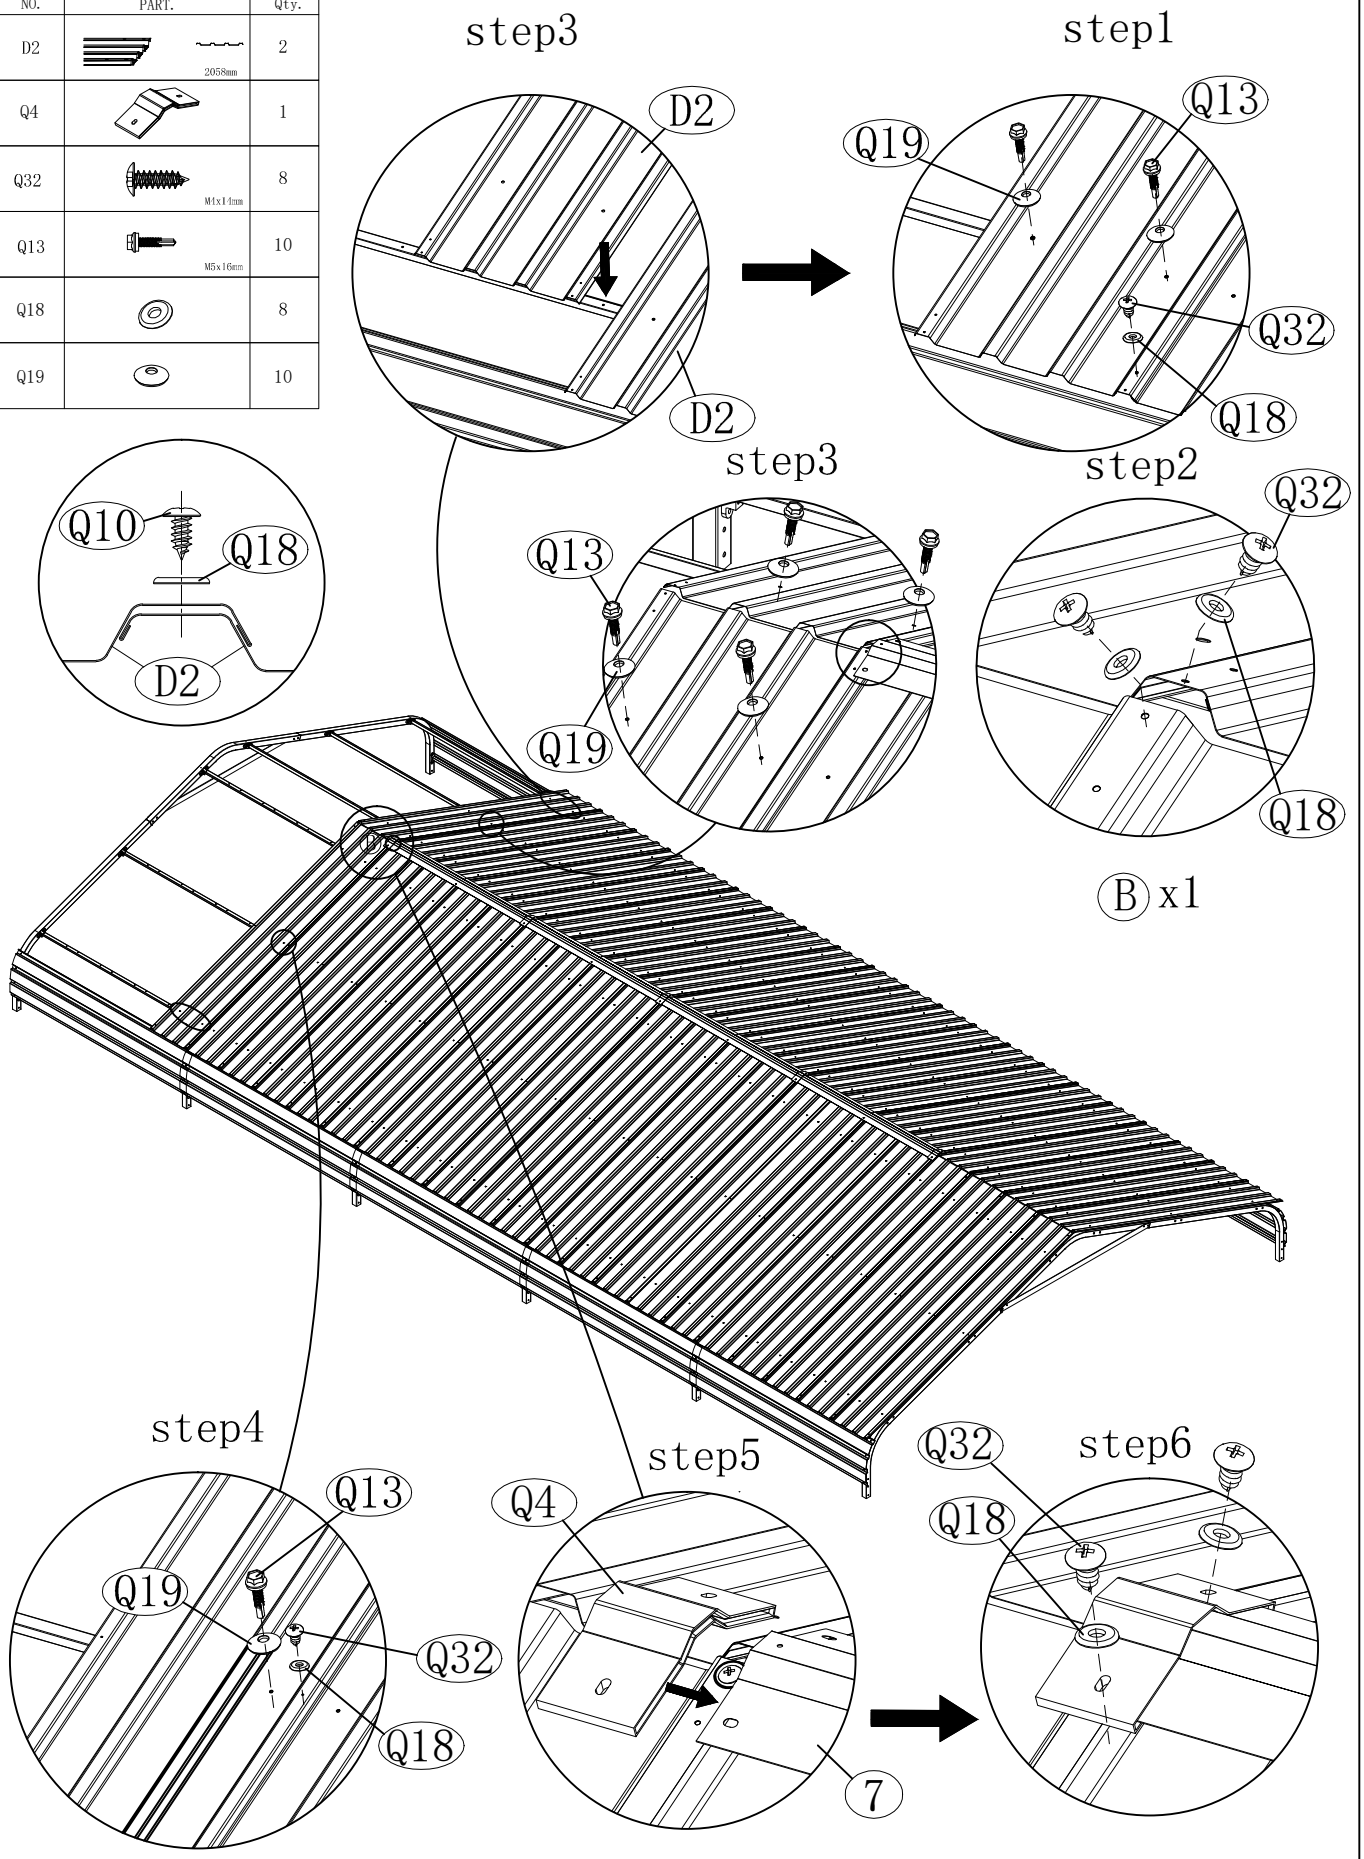


NO.	PART.	Qty.
D2	 2058mm	6
Q32	 M4x14mm	22
Q13	 M5x16mm	30
Q18		20
Q19		30

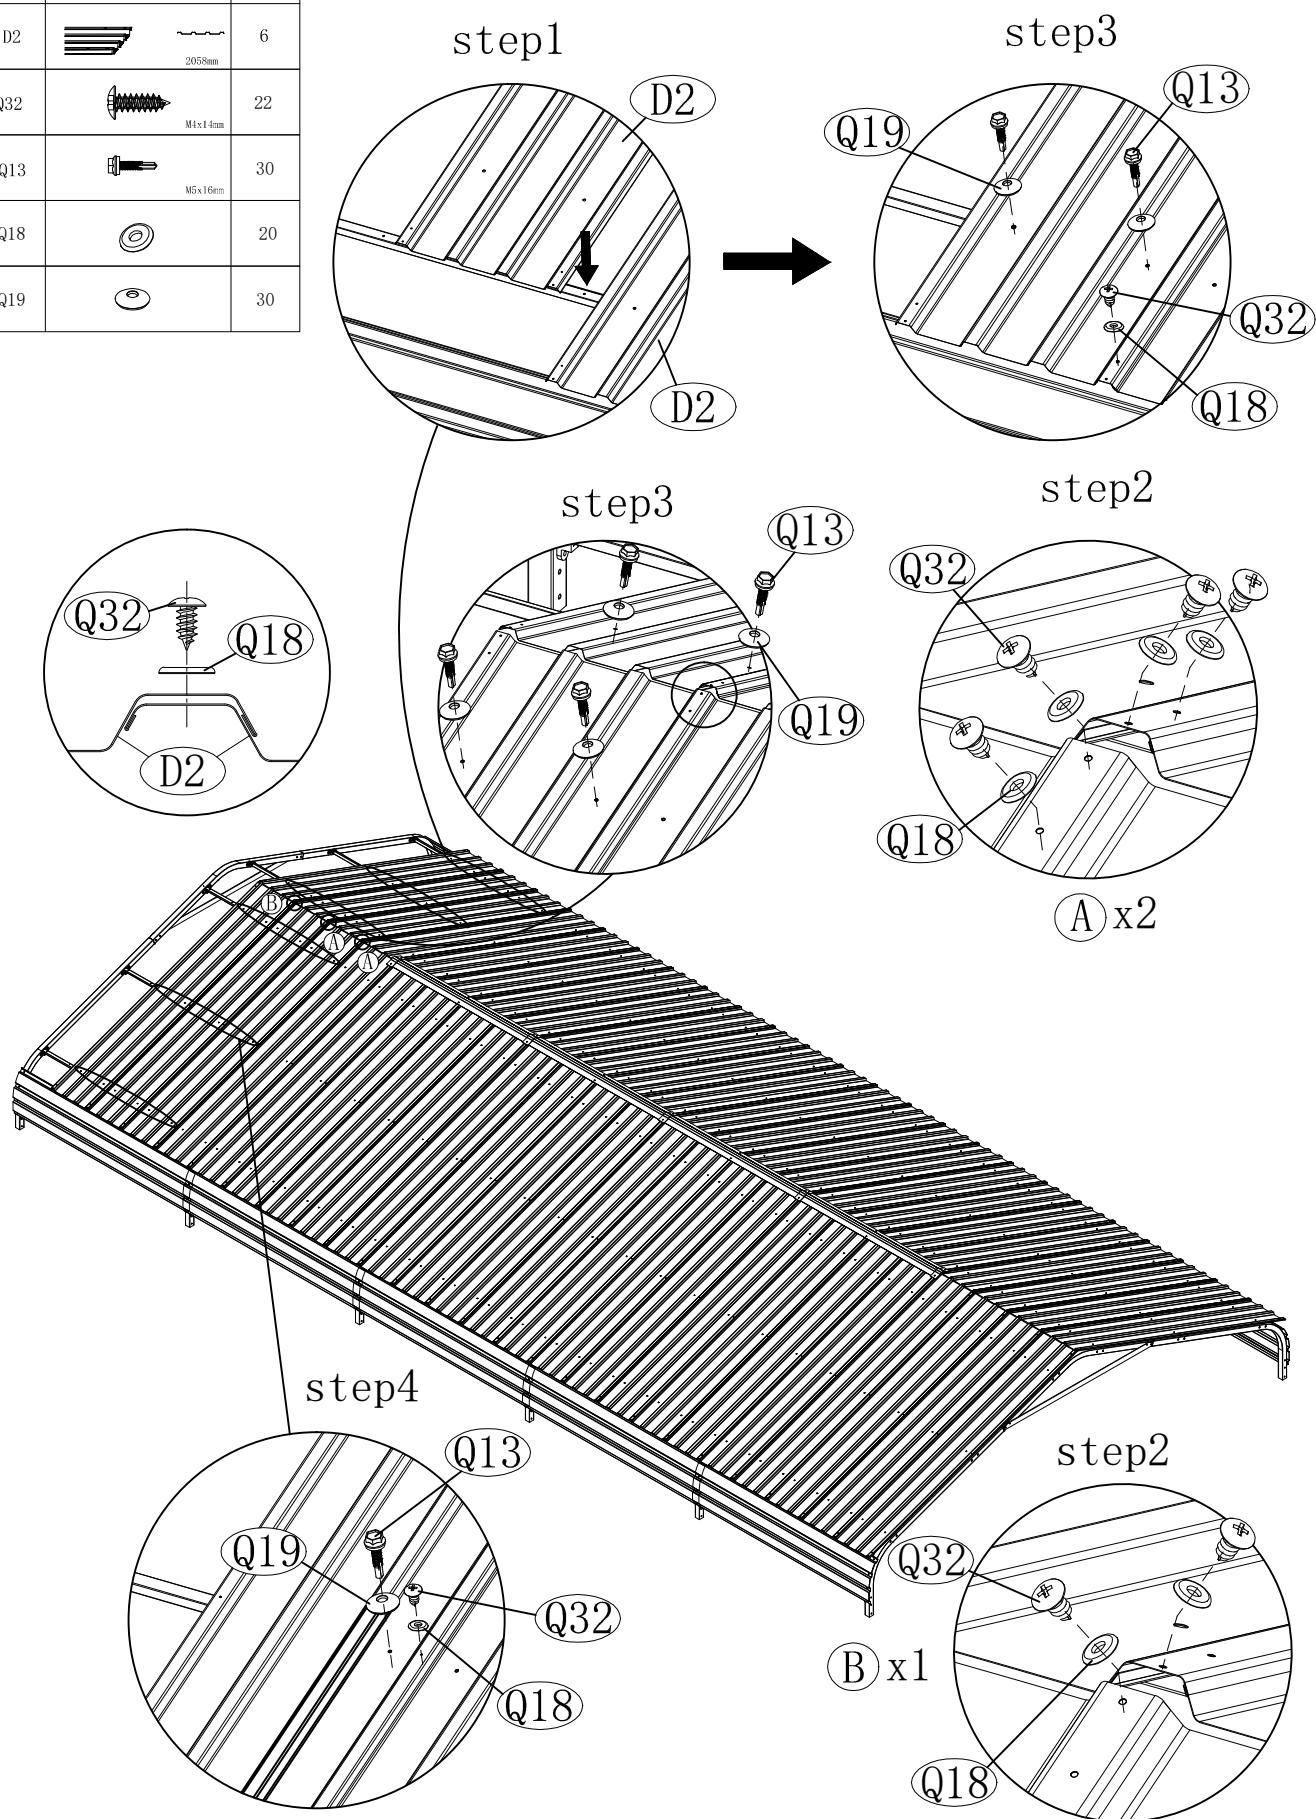


NO.	PART.	Qty.
D2	 2058mm	2
Q32	 M4x14mm	8
Q13	 M5x16mm	10
Q18		8
Q19		10


step1

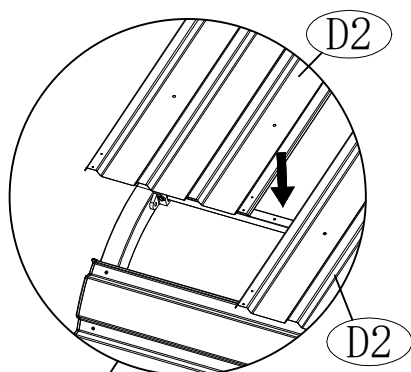



step3

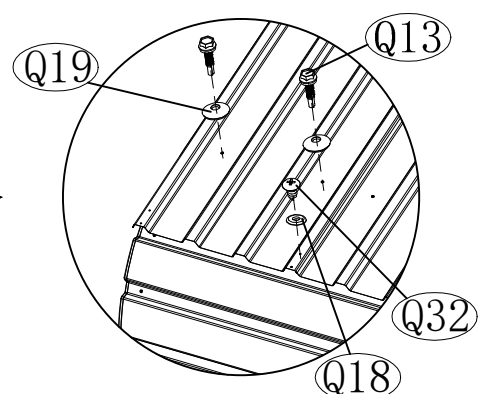



step3

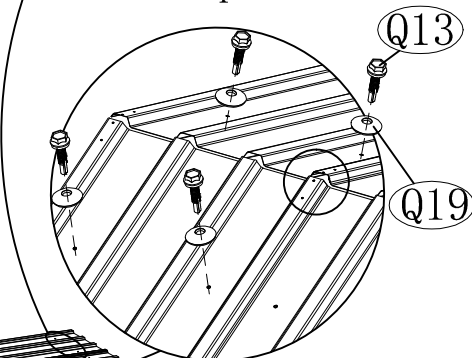


step2

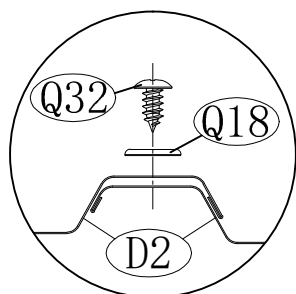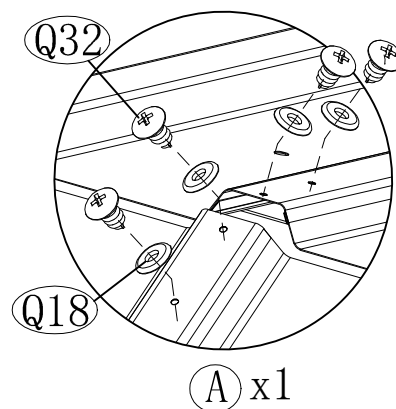



step4

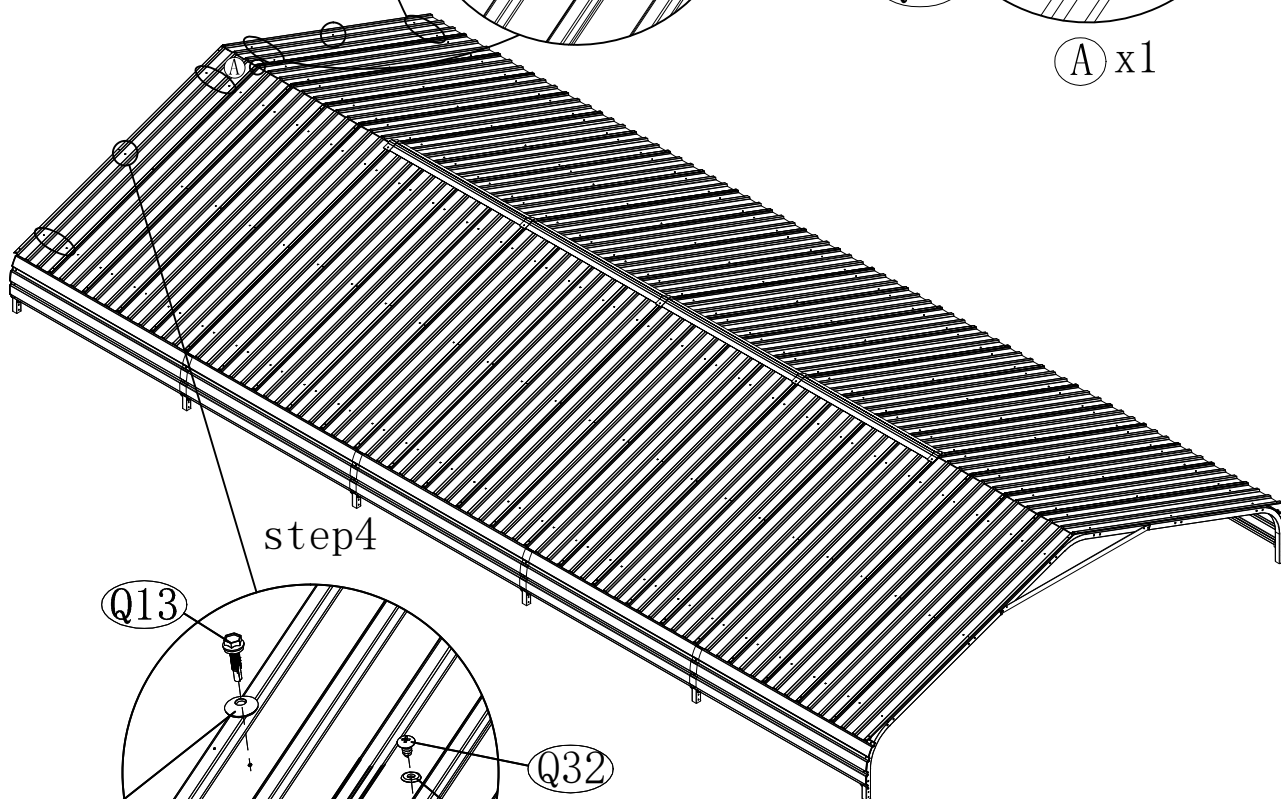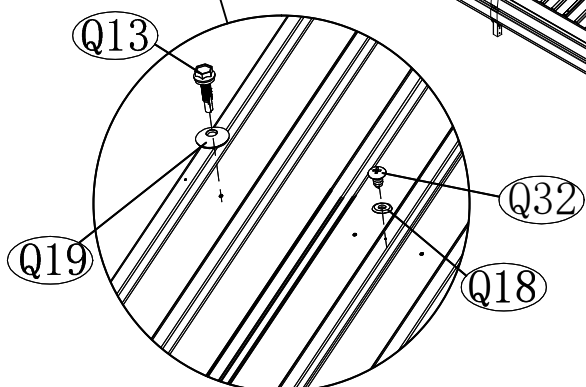

NO.	PART.	Qty.
9	 2066mm	4
Q32	 M4x14mm	12
Q18		12

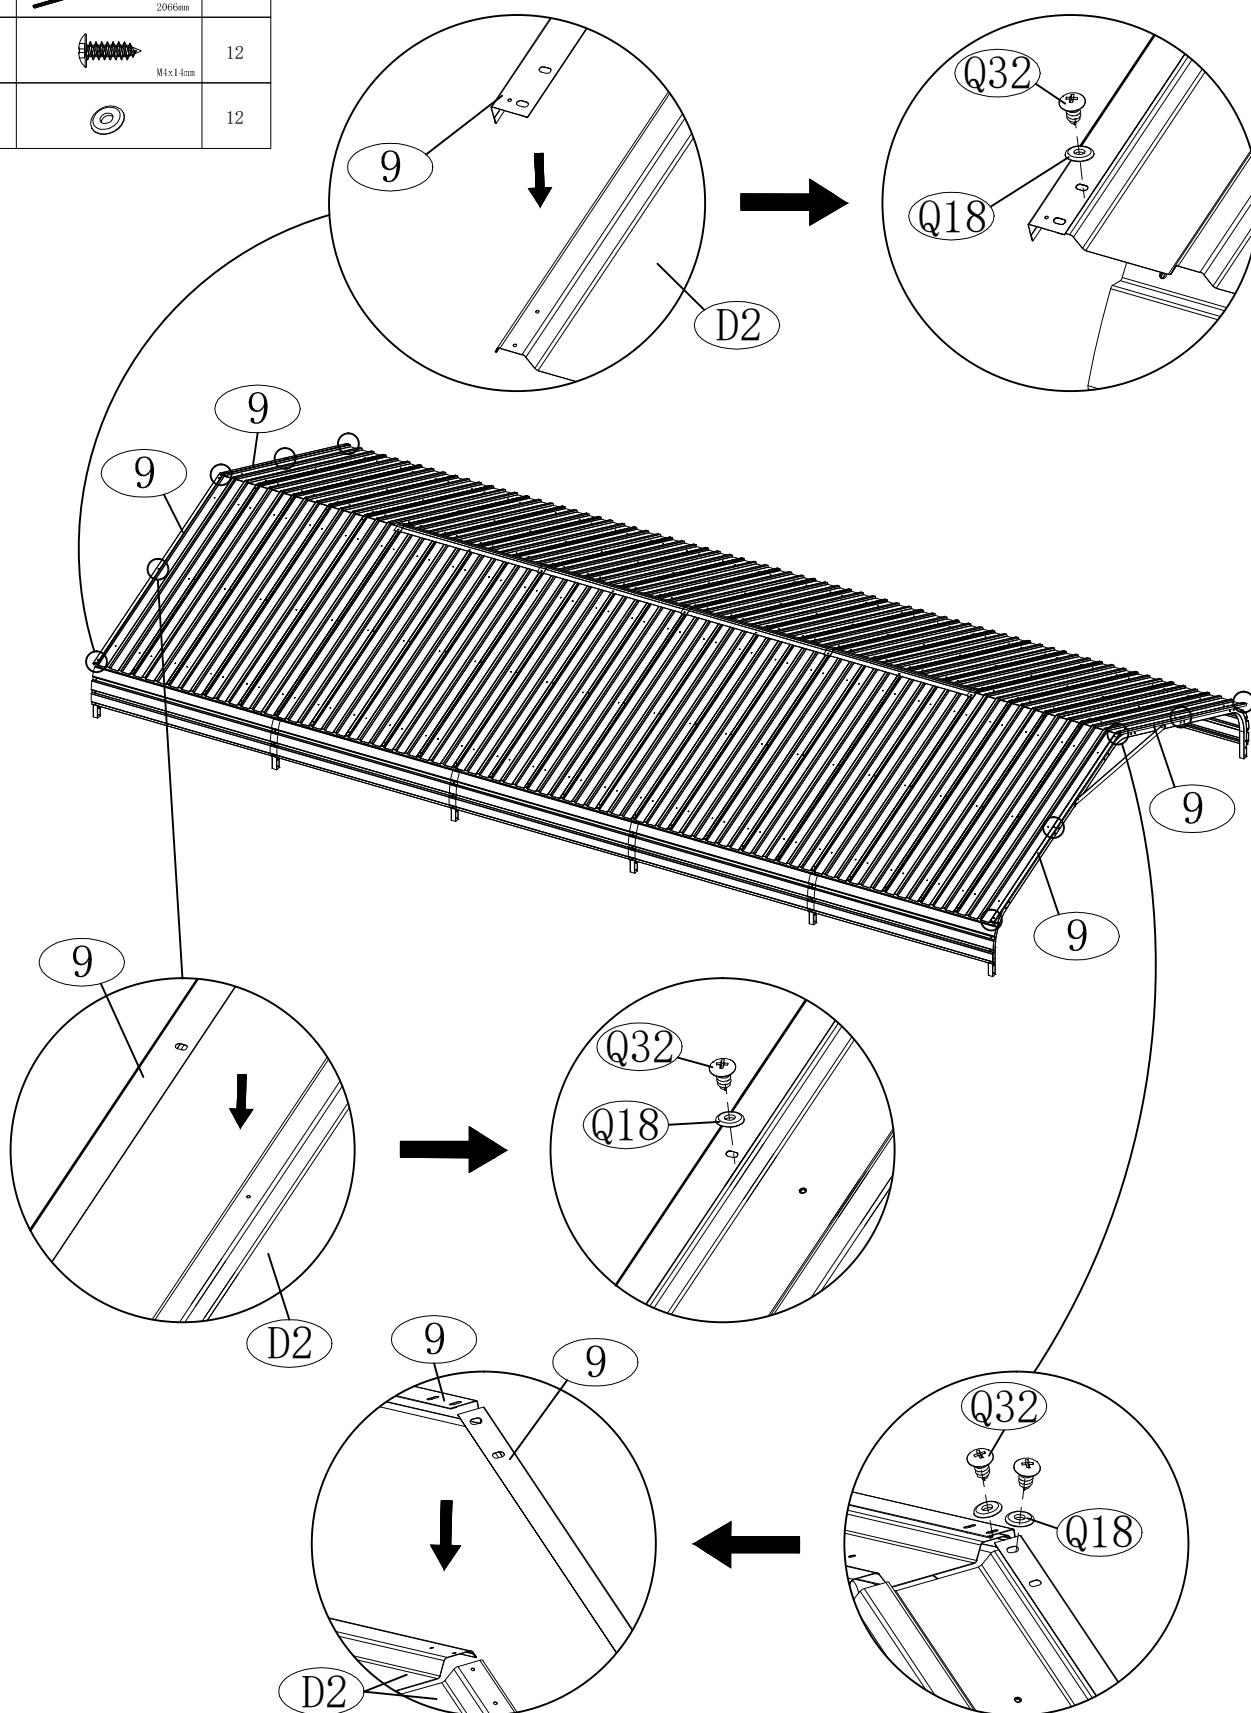


NO.	PART.	Qty.
7F	 1274mm	1
7B	 1592mm	1
Q32	 M1x11mm	4
Q18		4

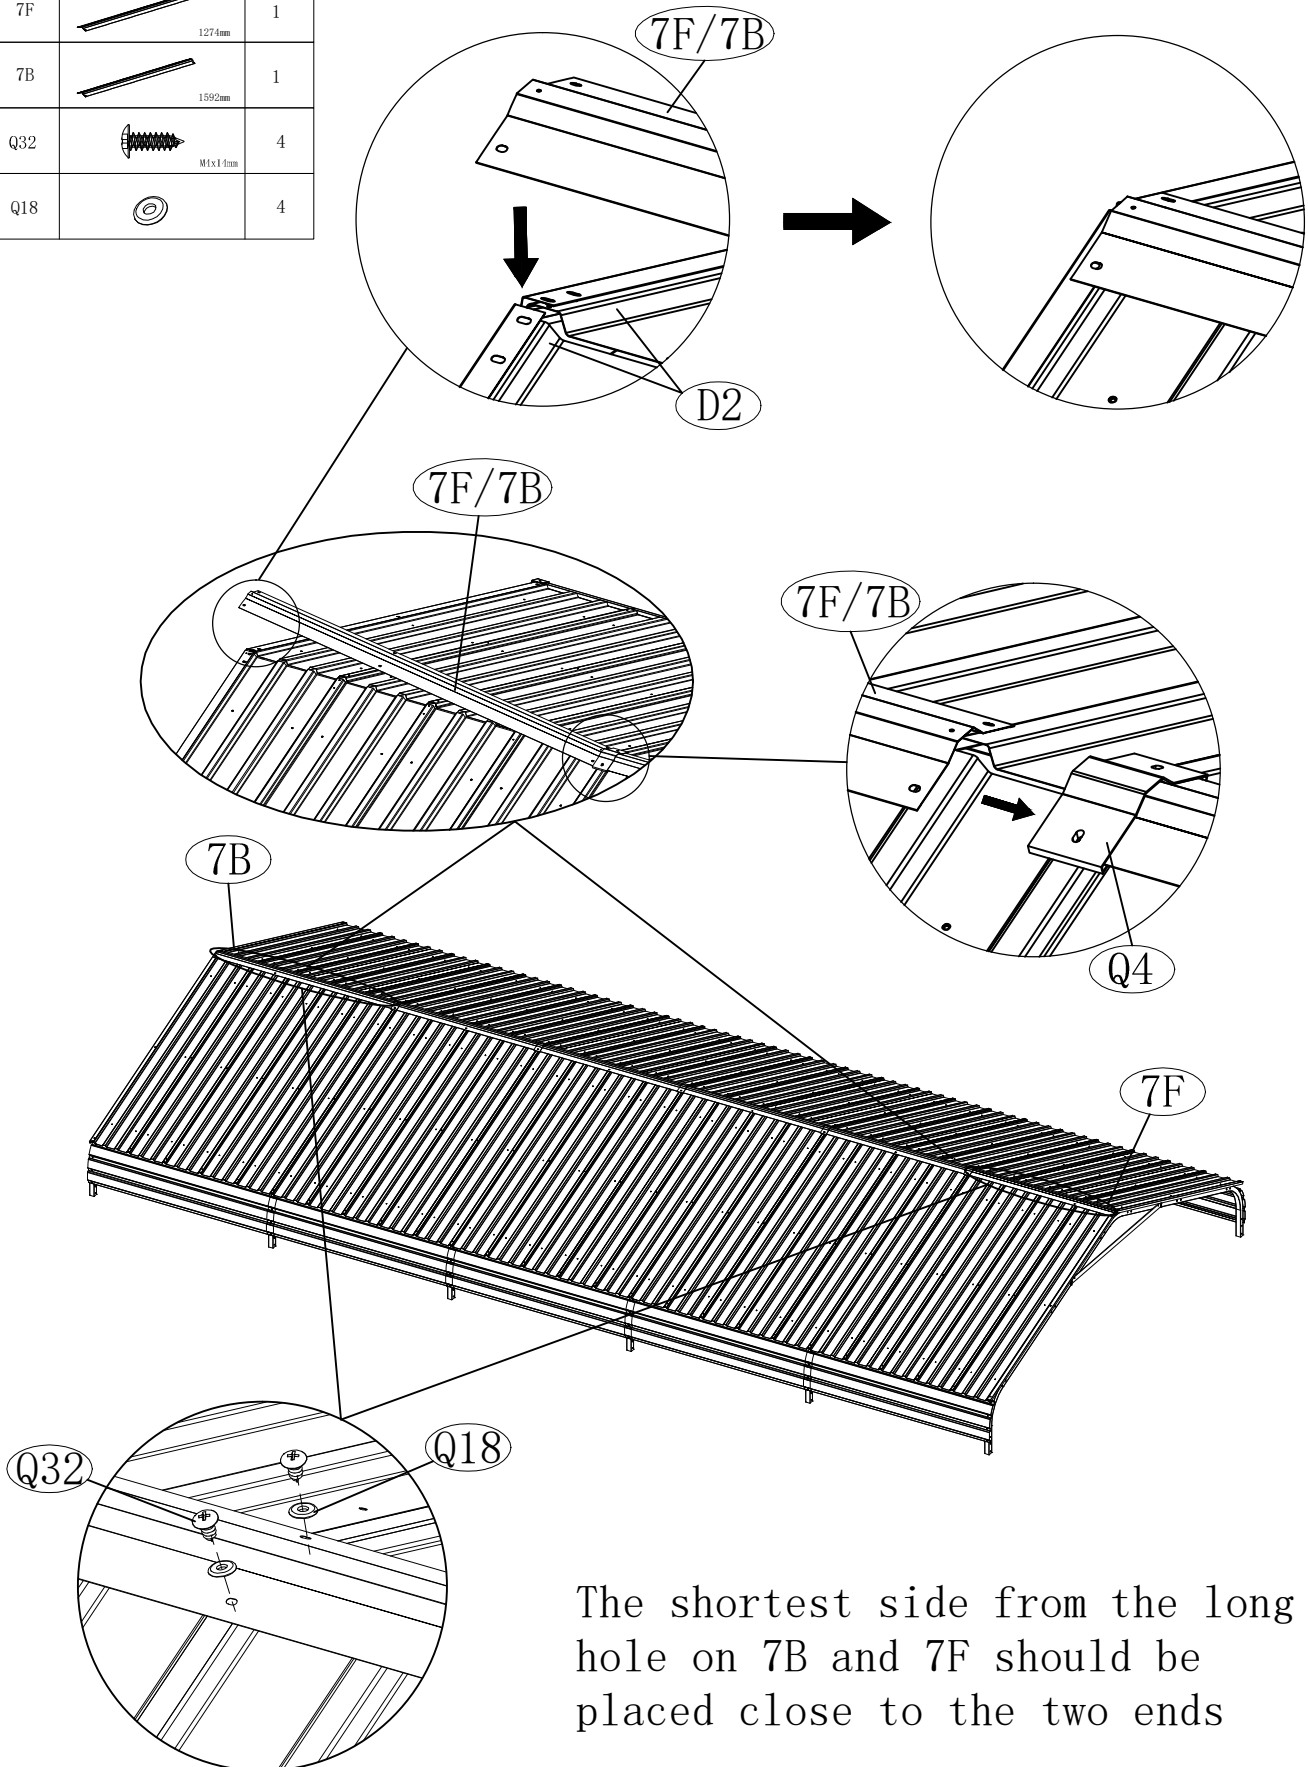


The shortest side from the long hole on 7B and 7F should be placed close to the two ends


NO.	PART.	Qty.
Q2		2
Q32	 M4x14mm	4
Q18		4
Q8	 420mm	4

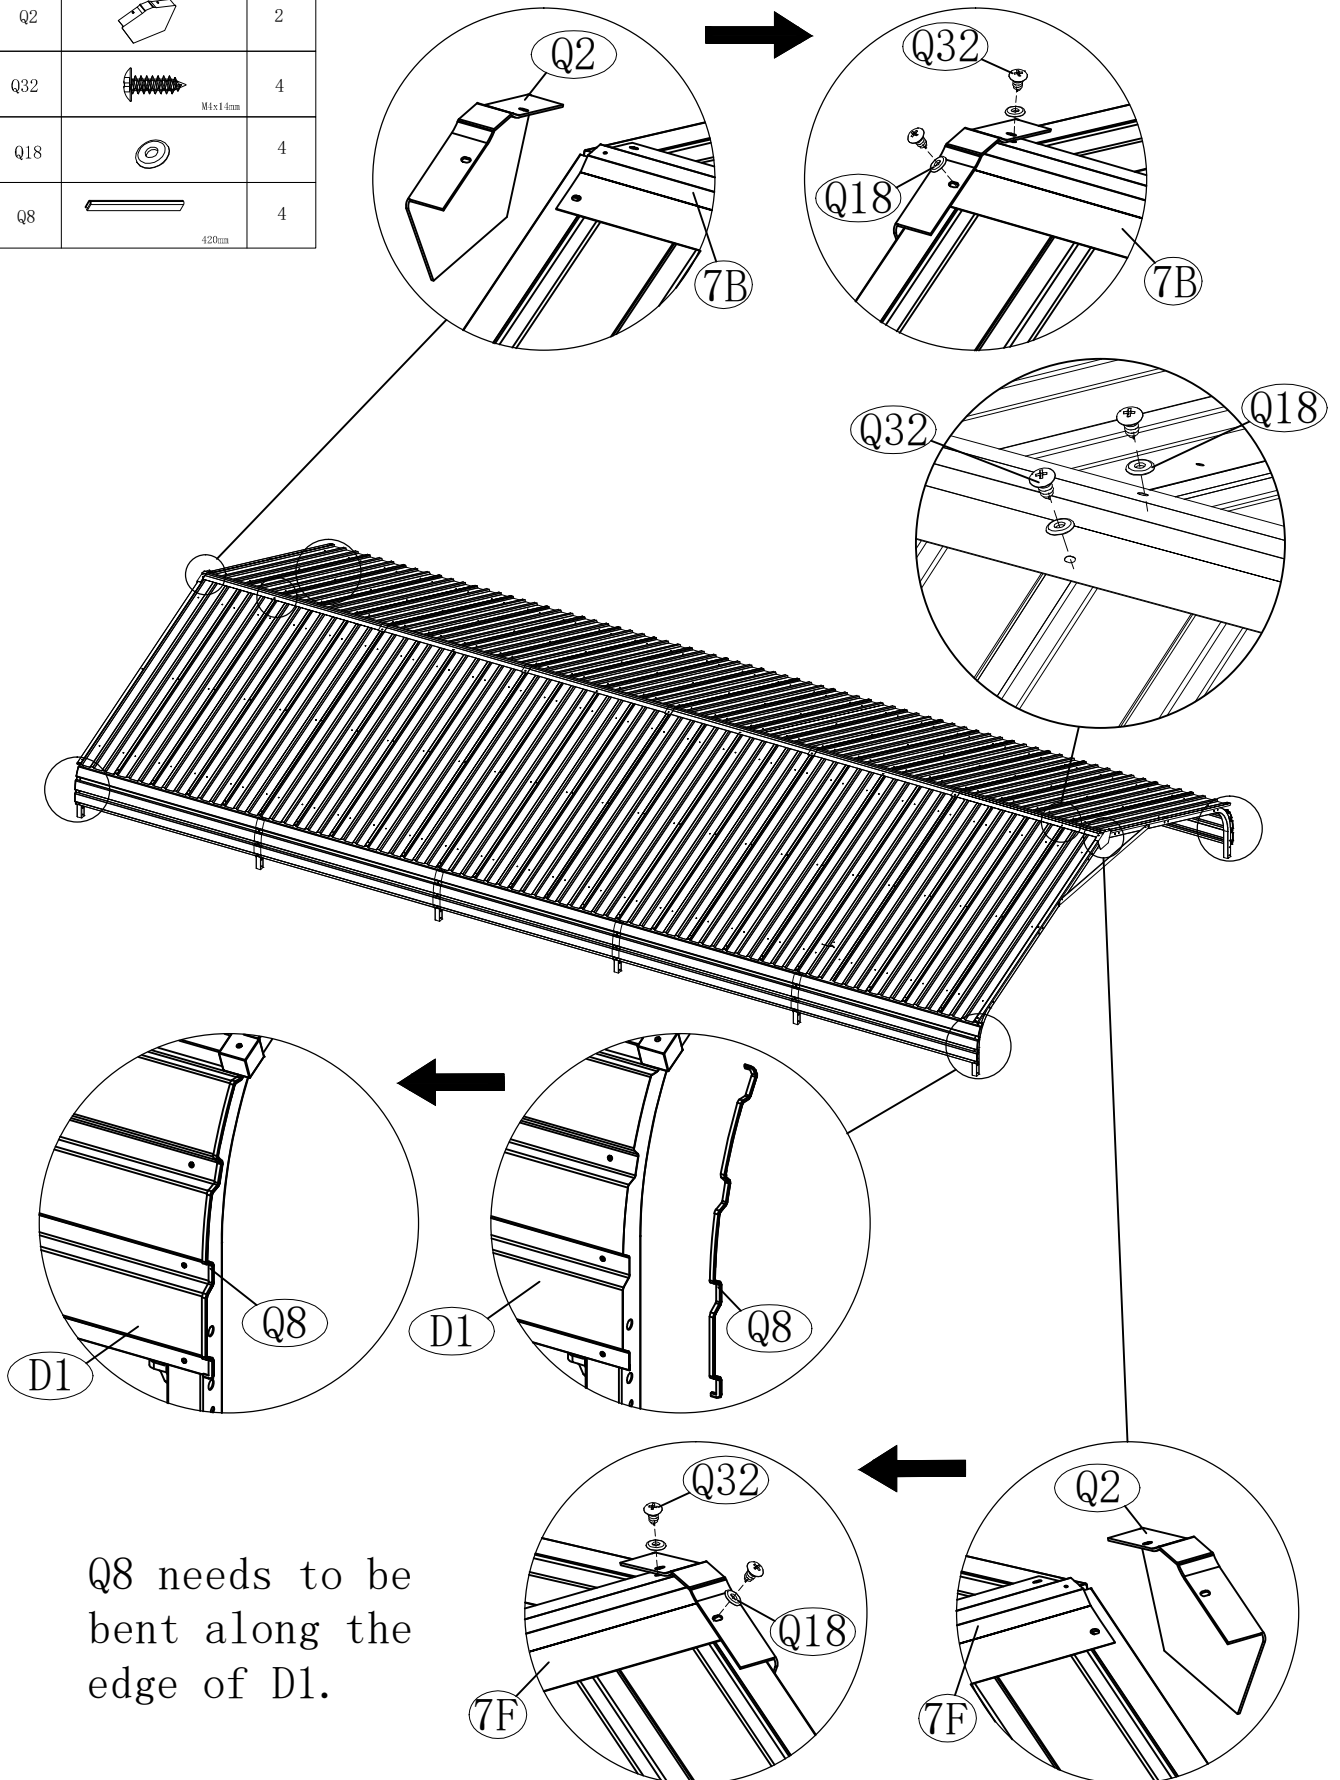

NO.	PART.	Qty.
8	 1574mm	6
Q3		8
Q32	 M1x11mm	32
Q18		32

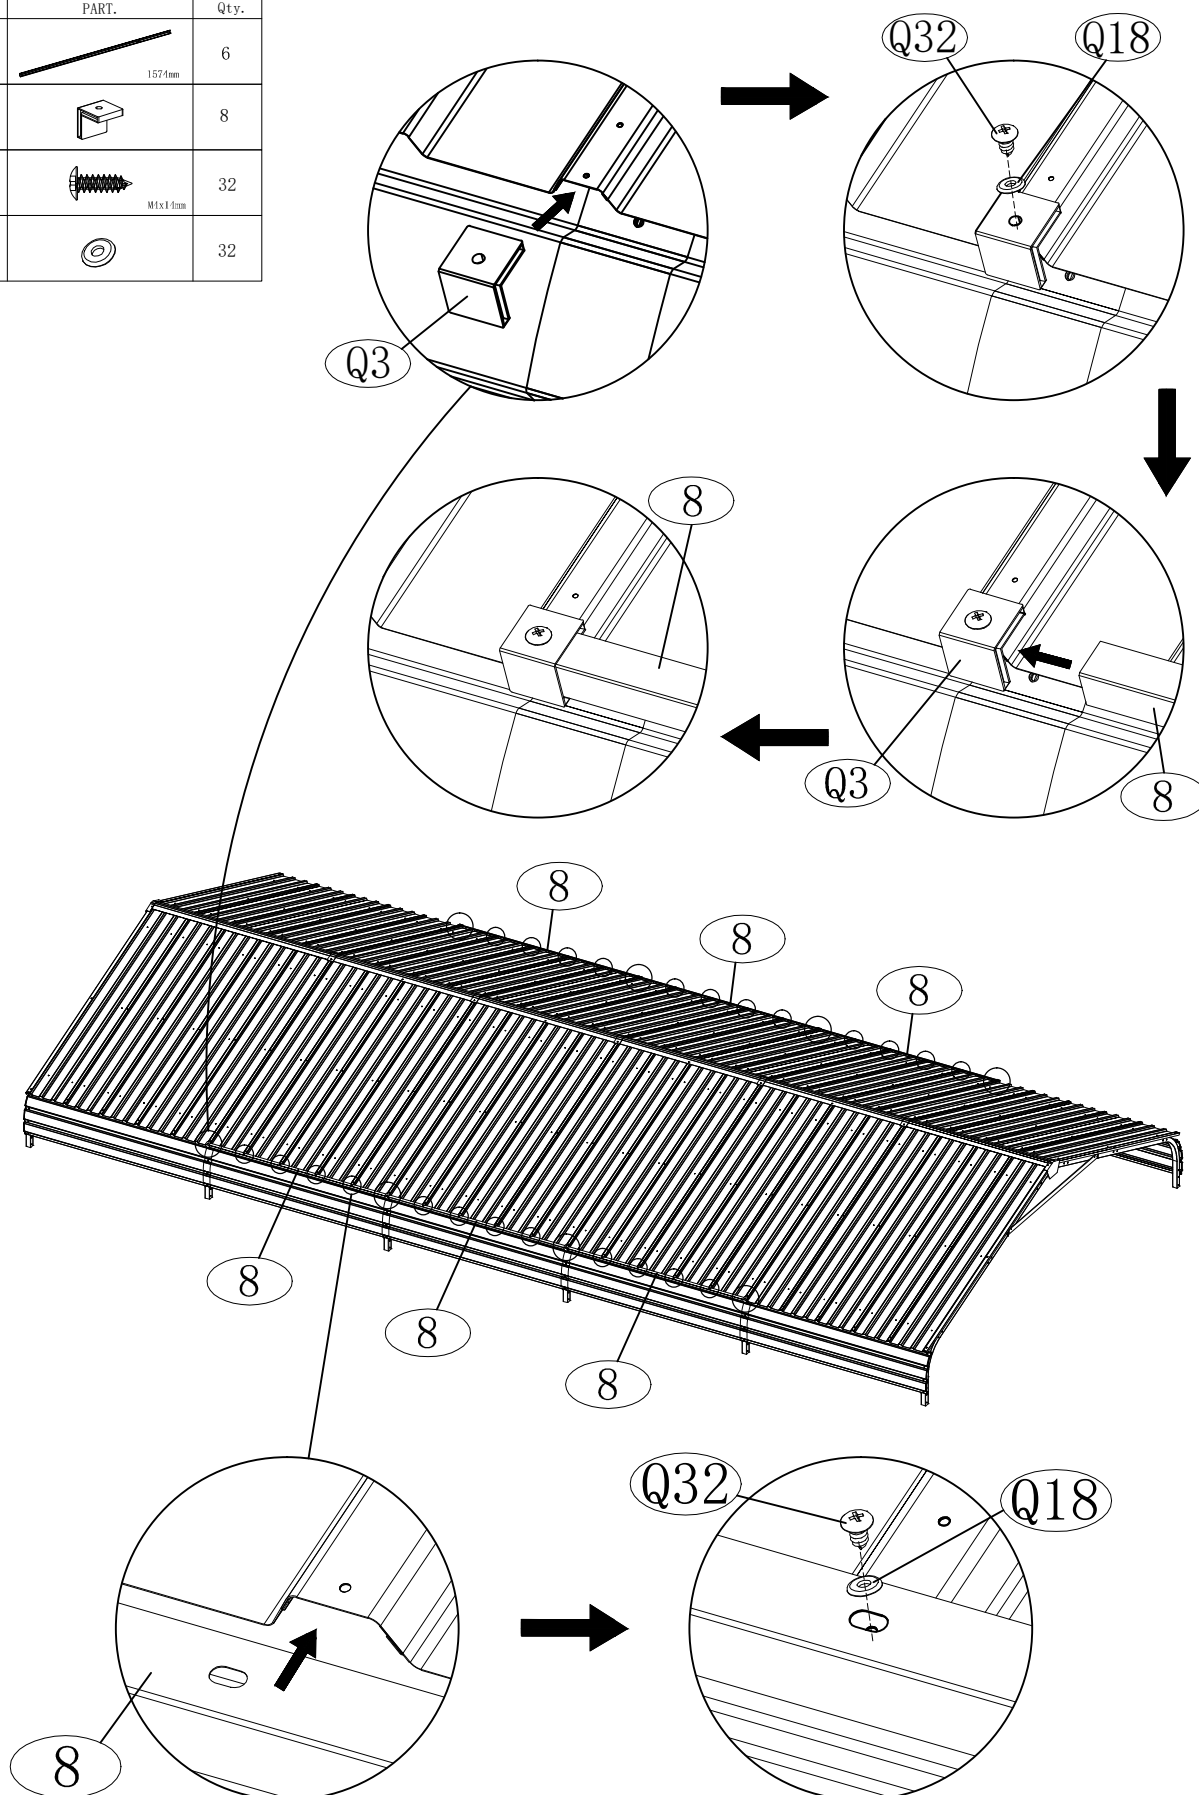


NO.	PART.	Qty.
8L	 1604, 5mm	2
8R	 1604, 5mm	2
Q1		4
Q32	 M4x15mm	20
Q18		20


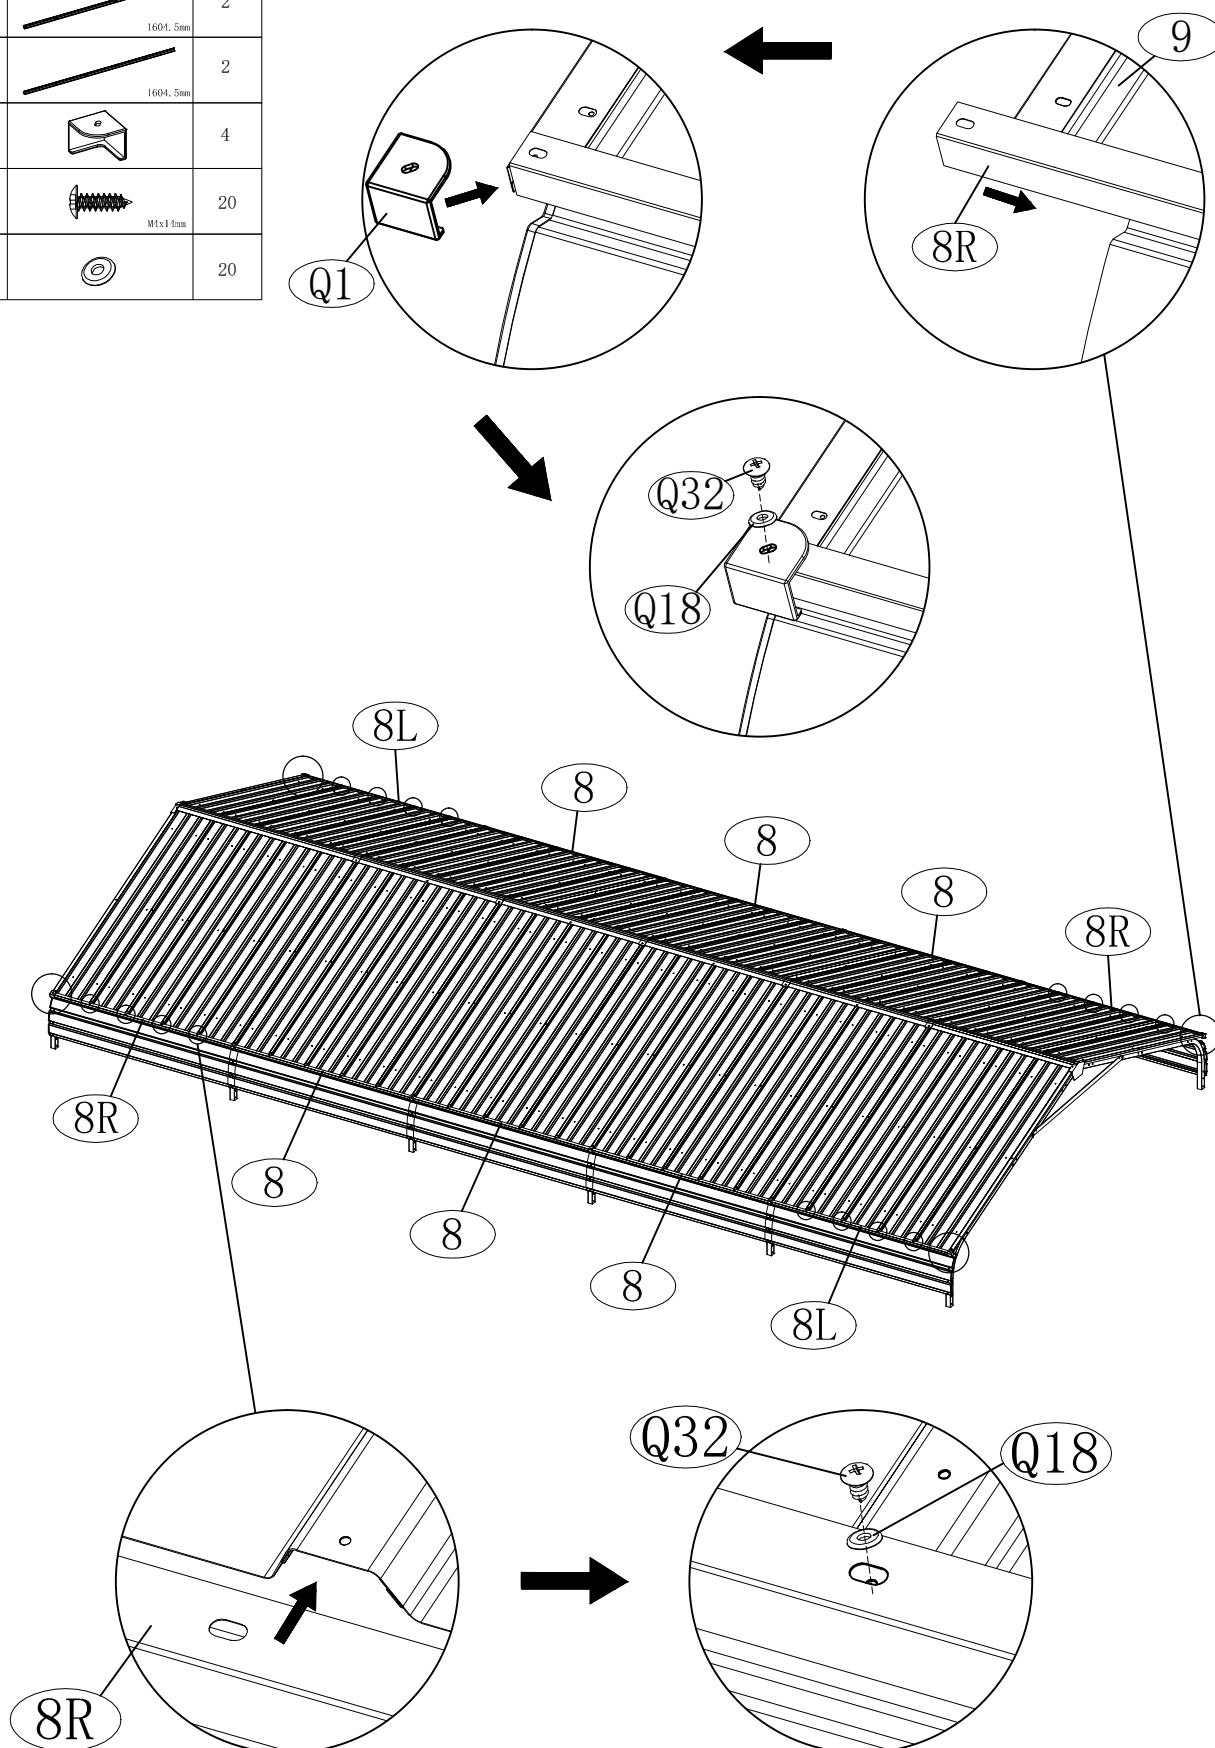



NO.	PART.	Qty.
3	 1620mm	12






Five people are needed to lift the roof and put 3 in.

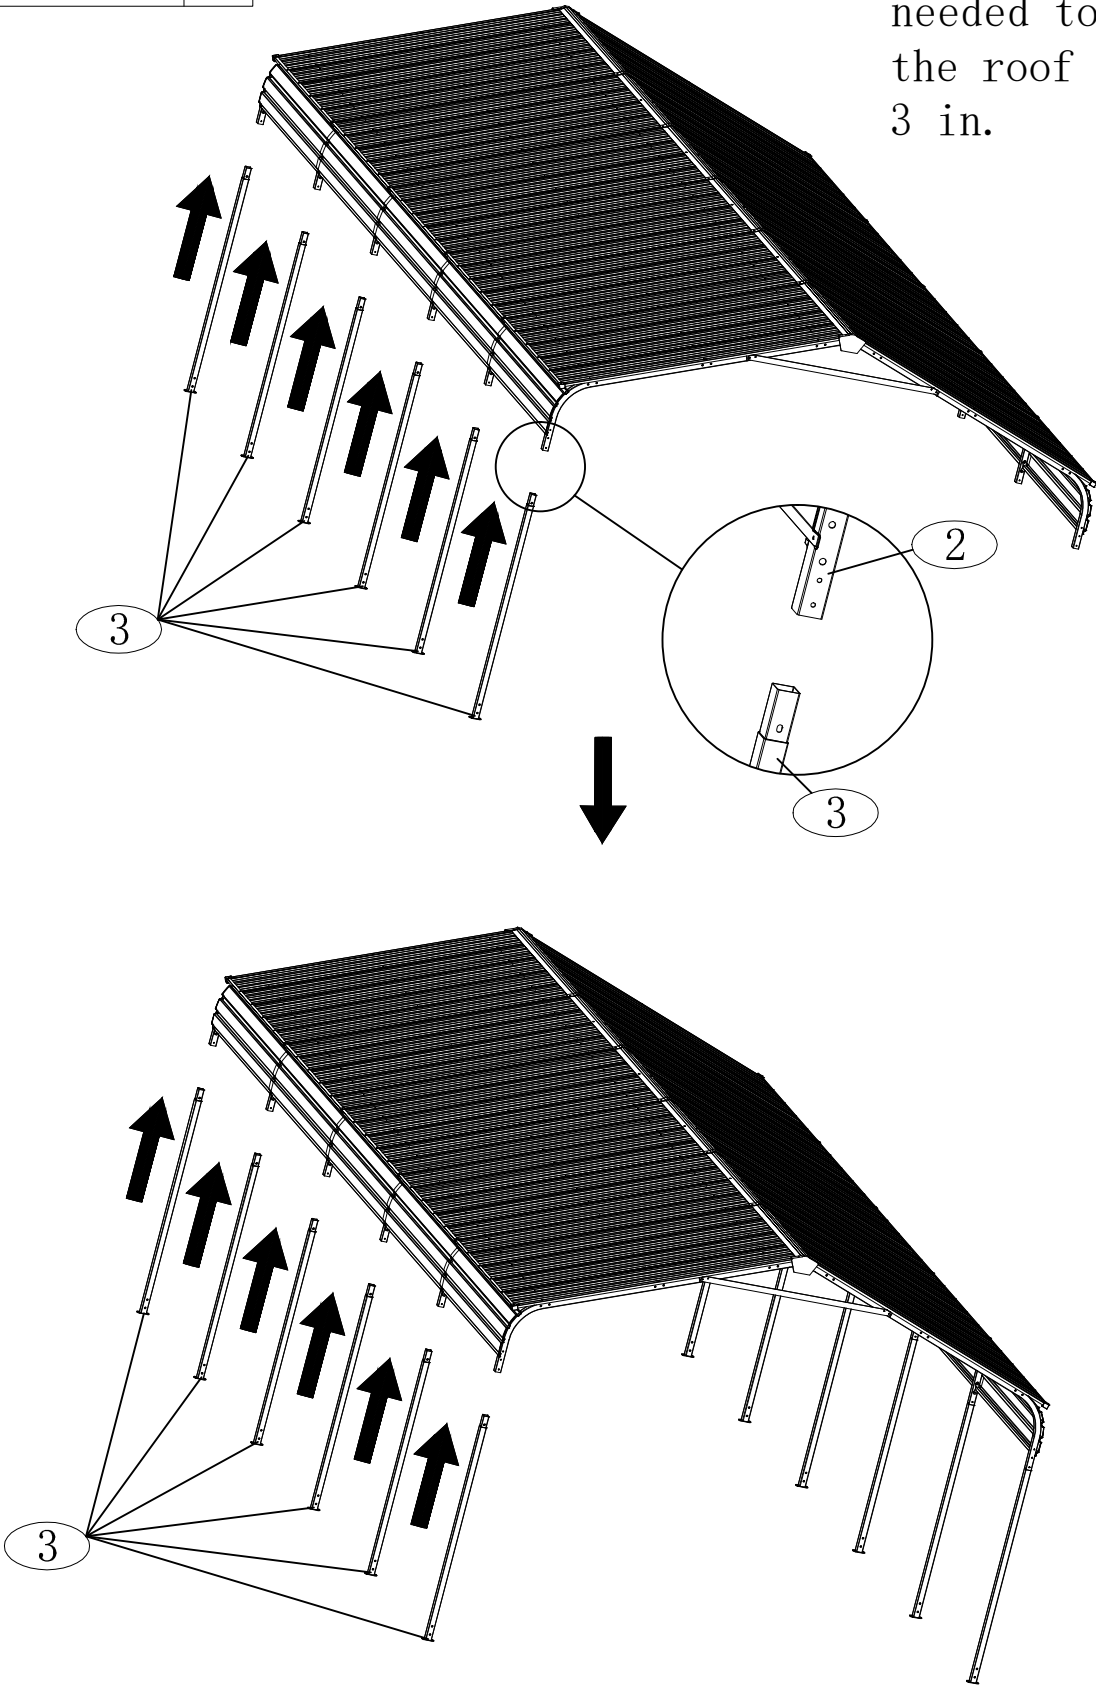


NO.	PART.	Qty.
Q15	 3/6x55mm	6
Q17	 1/6	6
Q20		6

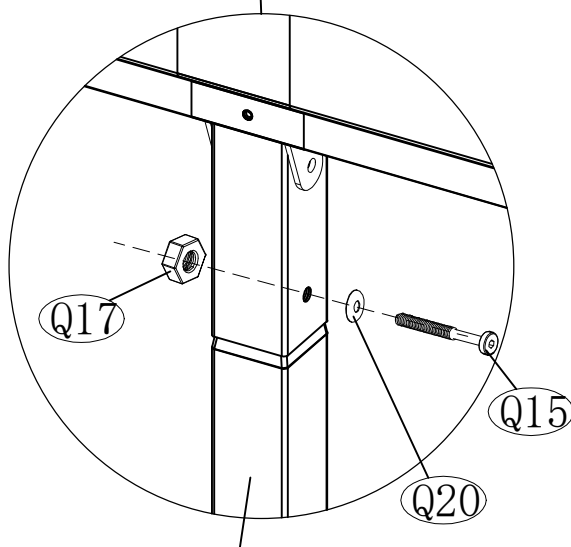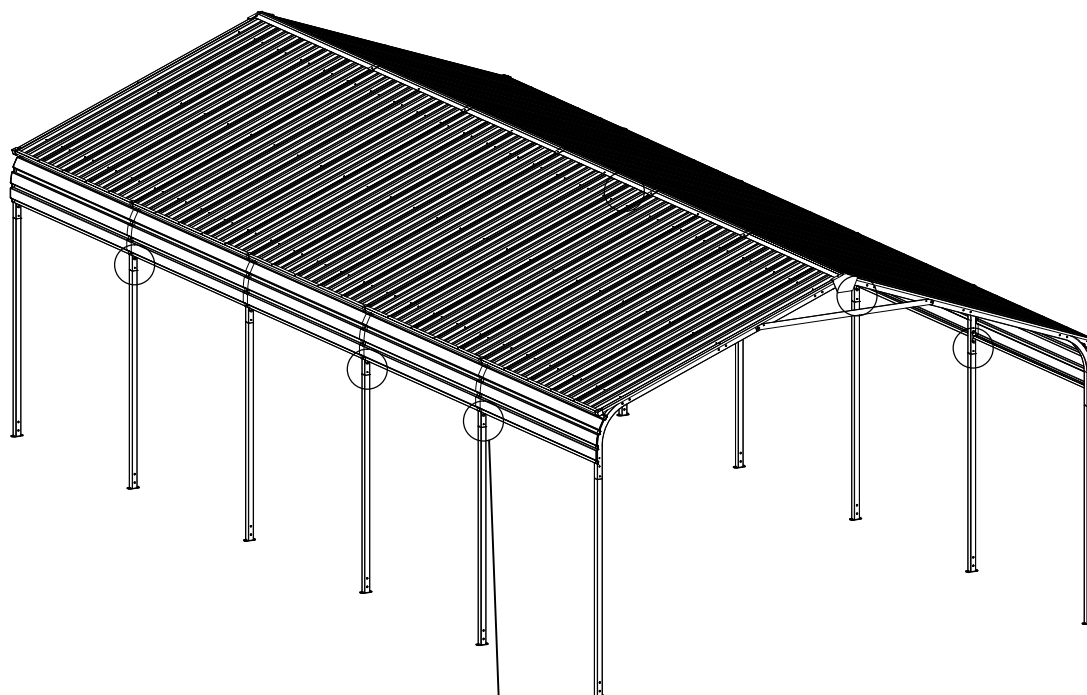



NO.	PART.	Qty.
10	 1550mm	10
Q15	 36x55mm	24
Q17	 M6	24
Q20		24

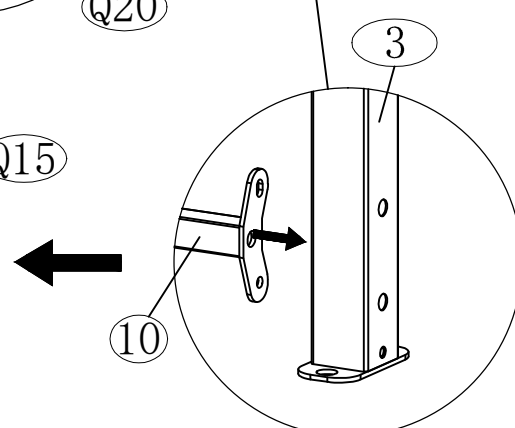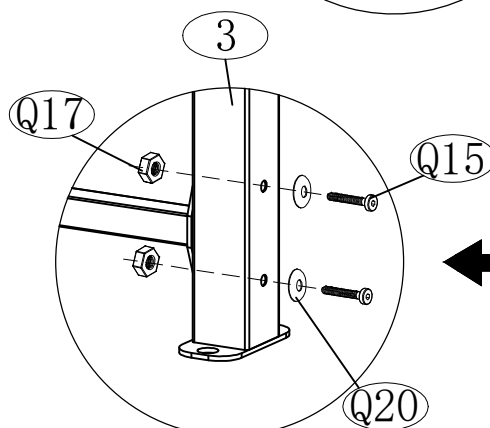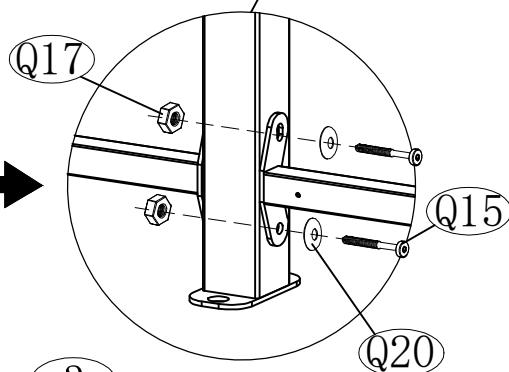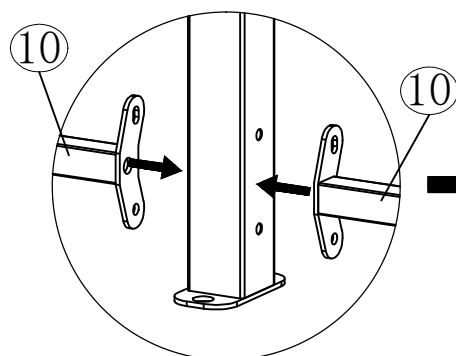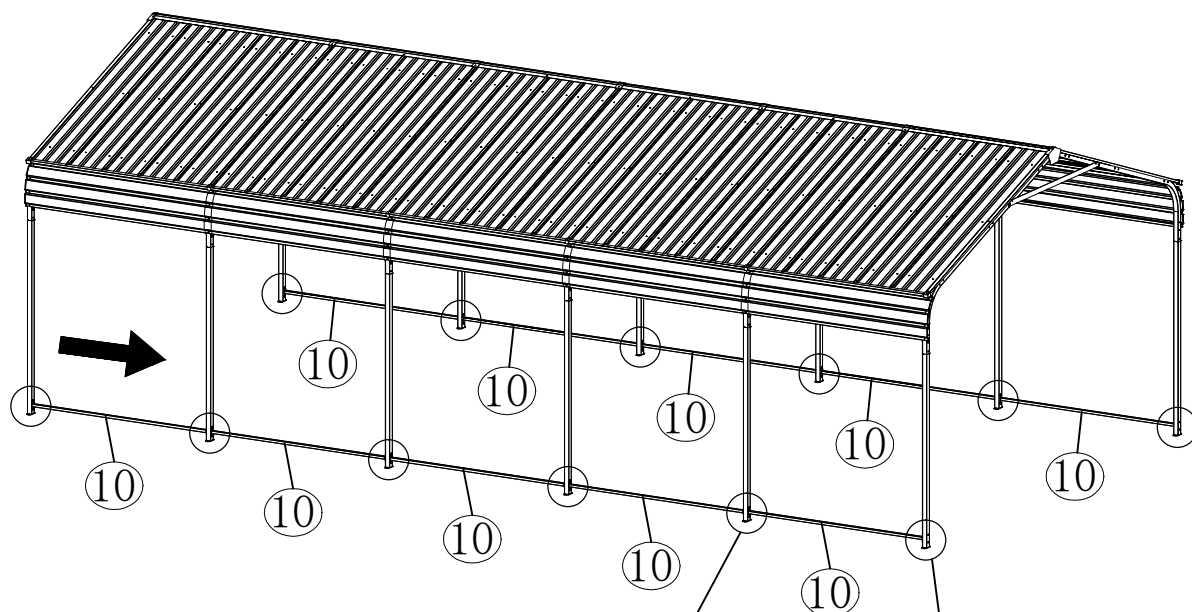



NO.	PART.	Qty.
14		6
Q15	 3/6x55mm	6
Q17	 M6	6
Q20		6

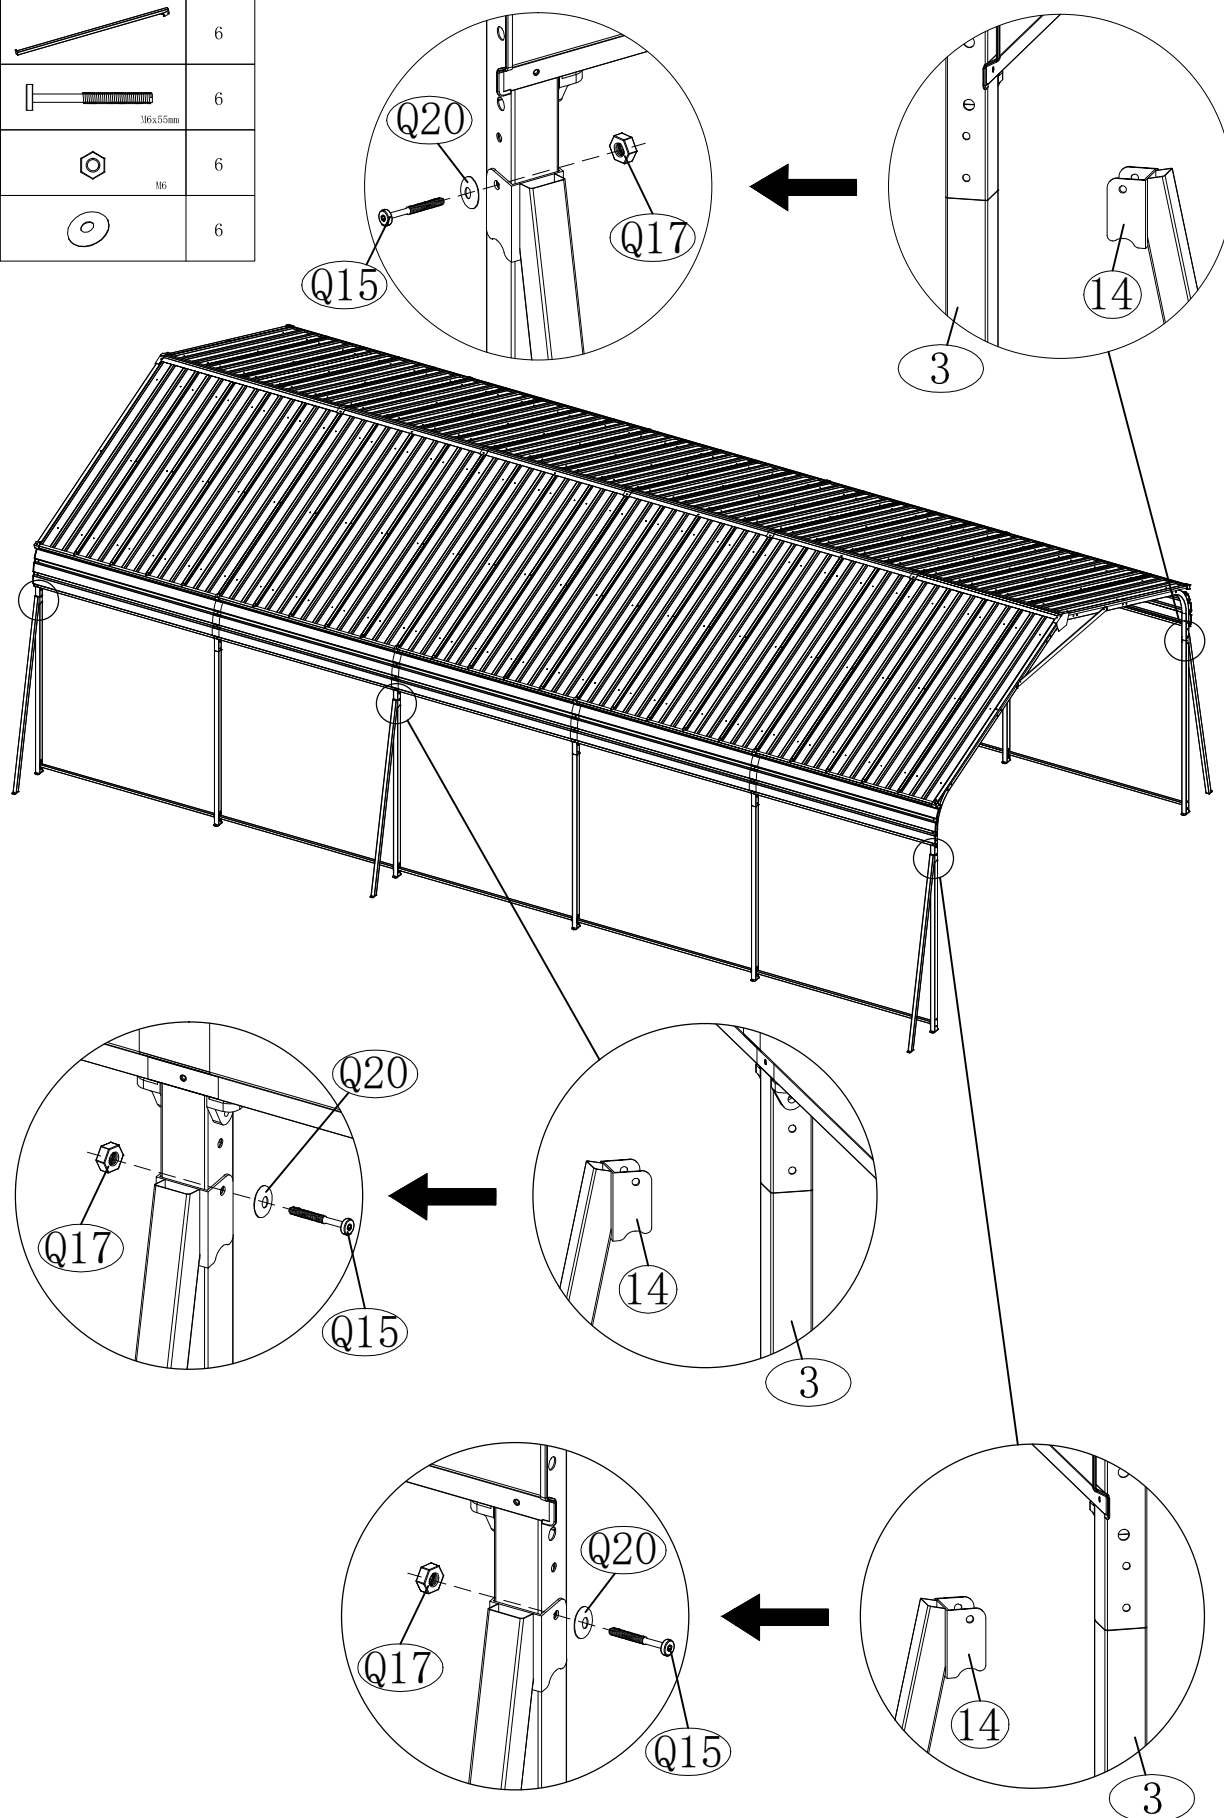

NO.	PART.	Qty.
Q5		12
Q6		12
Q21	 M8 x 50mm	24


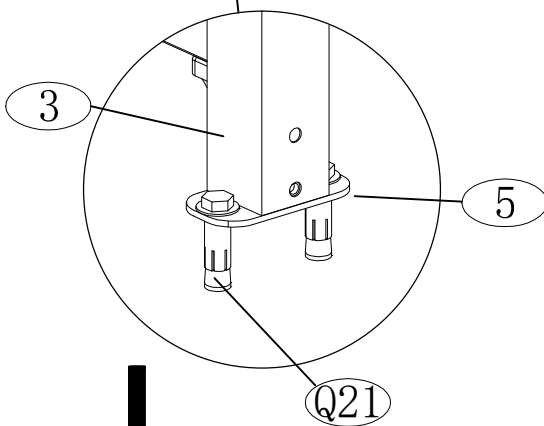
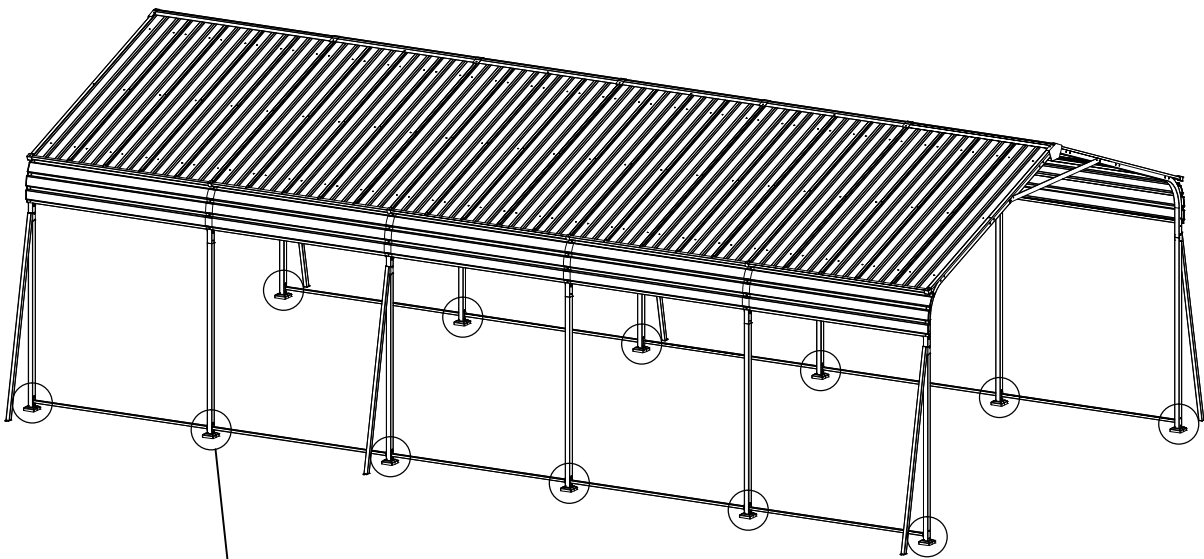


1. It is necessary to use ground nails and expansion screws, whether installed on stable ground, to avoid the collapse of the car shed to the inside or nearby personnel causing devastating injuries and property losses.

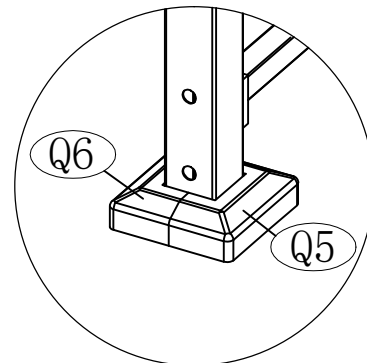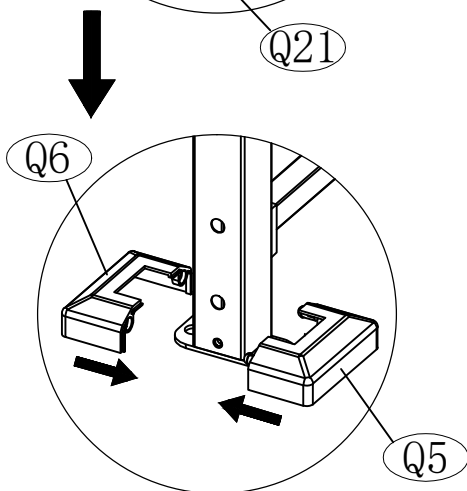

NO.	PART.	Qty.
Q21	 48x50mm	6
Q9		168

Plastic screw cap is used to prevent the sharp end of the screw from scratching people .

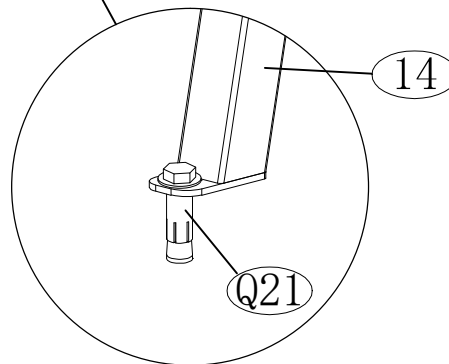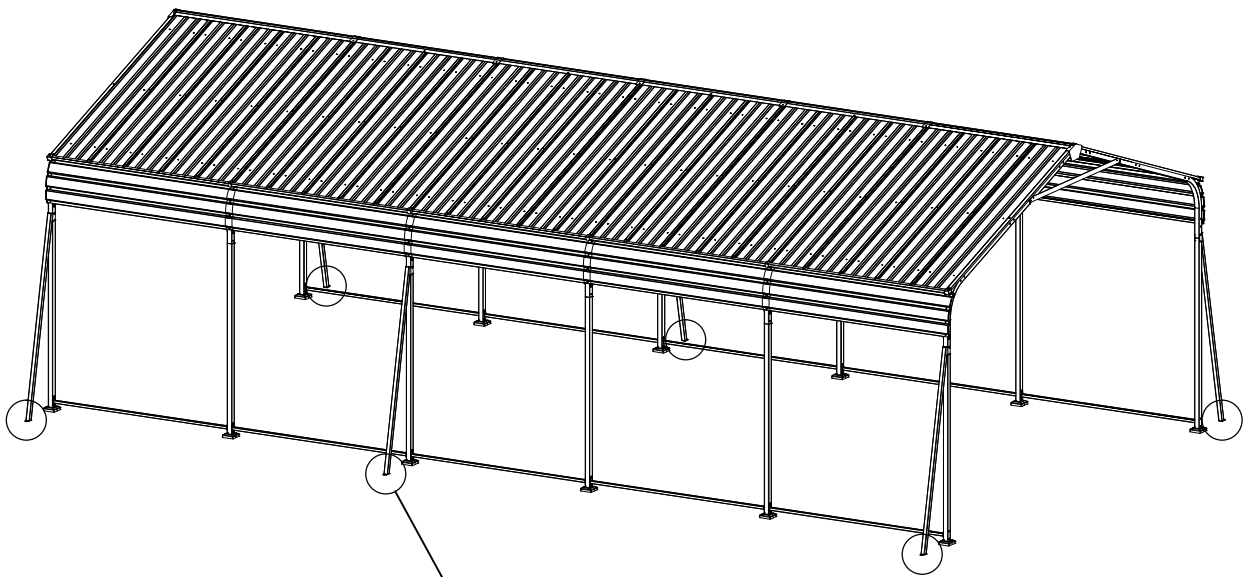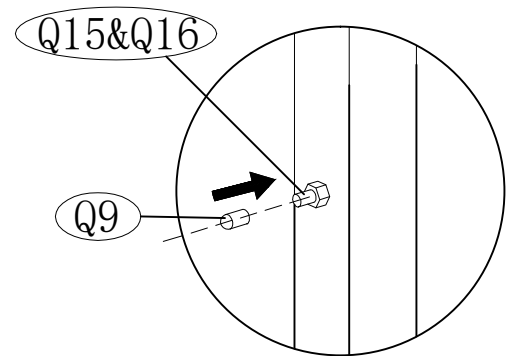

1. It is necessary to use ground nails and expansion screws, whether installed on stable ground, to avoid the collapse of the car shed to the inside or nearby personnel causing devastating injuries and property losses.