


AWF612-SY

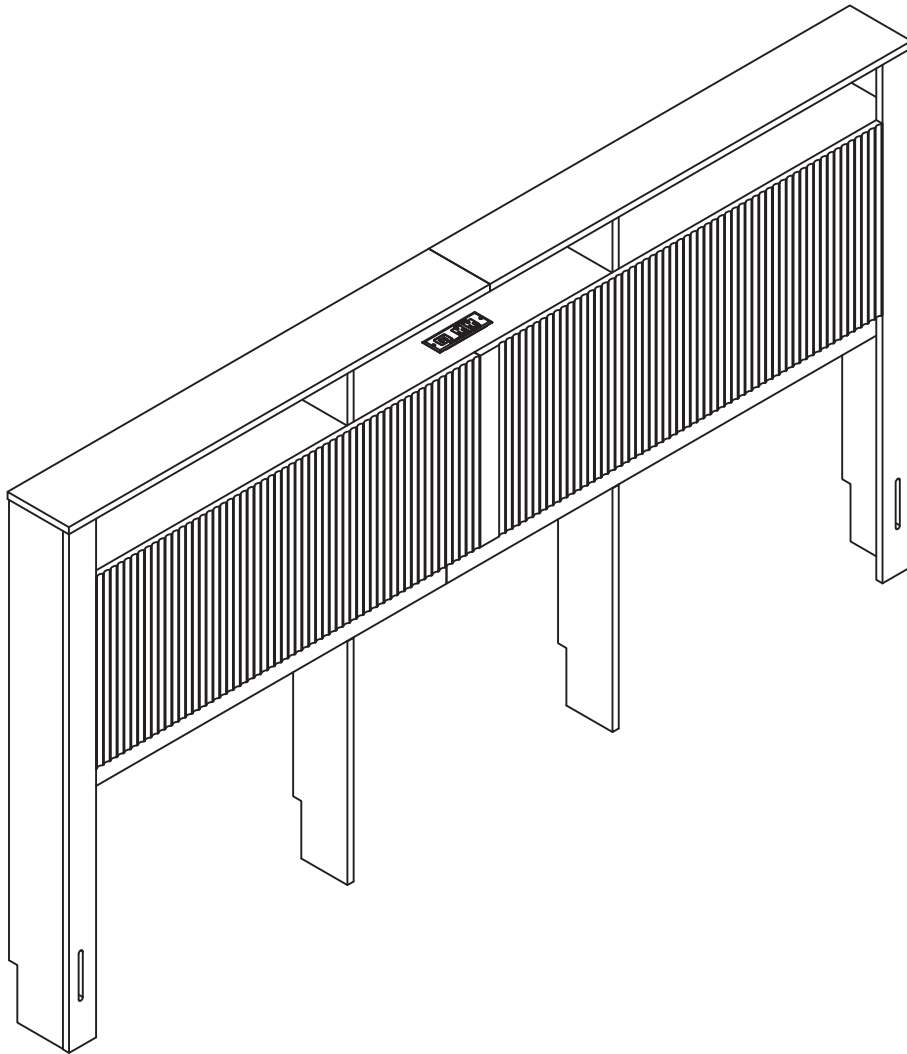

Please thoroughly review the installation instructions prior to commencing the installation process. Ensure that all tools are utilized appropriately and with due care. Should you encounter any questions regarding the product or the installation procedure, do not hesitate to contact us. We will make every effort to assist you in resolving any issues.

We aim to provide you with a distinctive experience.

Before You Start

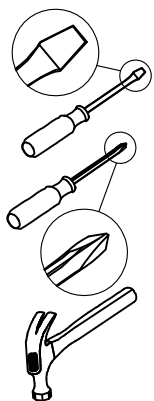

- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.




Board Identification


Not actual size

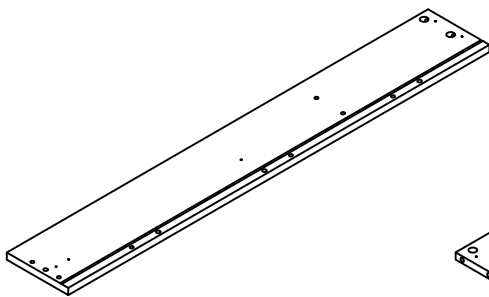


①
LEFT TOP
Qty:1

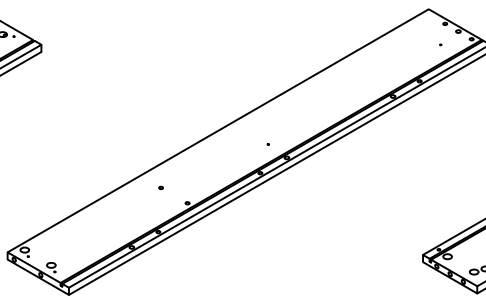


②
RIGHT TOP
Qty:1

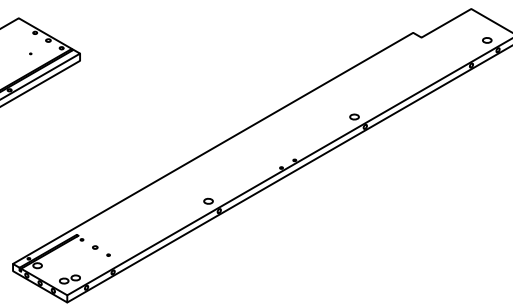


③
LEFT SIDE PANEL
Qty:1

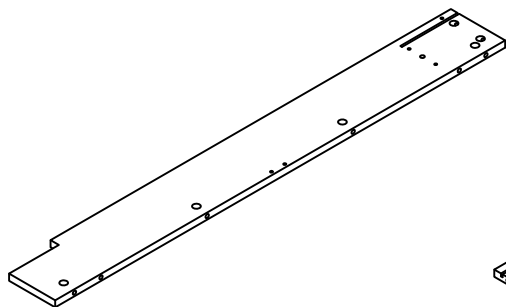


④
RIGHT SIDE PANEL
Qty:1

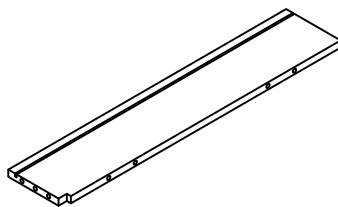


⑤
LEFT FIXED SHELF
Qty:1

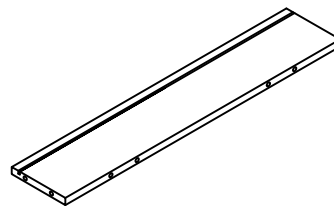


⑥
RIGHT FIXED SHELF
Qty:1

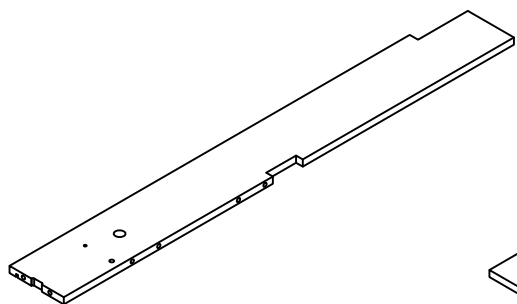

⑦
LEFT MIDDLE PANEL
Qty:1

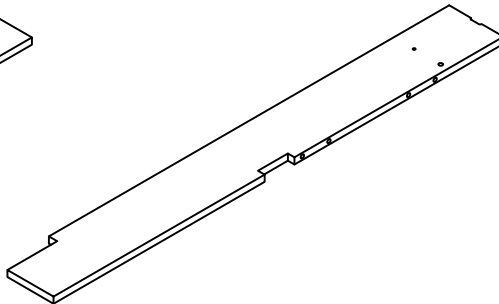


⑧
RIGHT MIDDLE PANEL
Qty:1

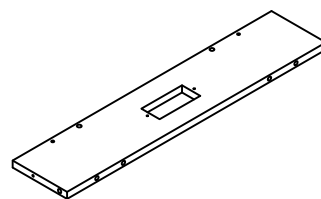


⑨
MIDDLE FIXED SHELF
Qty:1

Board Identification


Not actual size

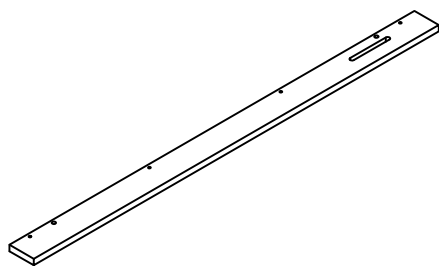


⑩
LEFT RAIL
Qty:1

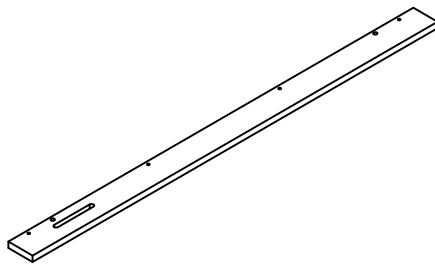


⑪
RIGHT RAIL
Qty:1

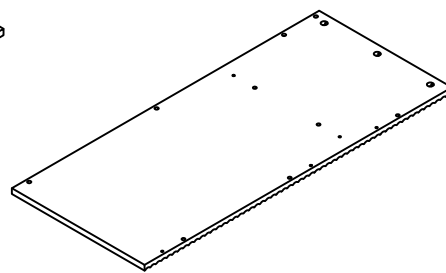


⑫
LEFT PANEL
Qty:1

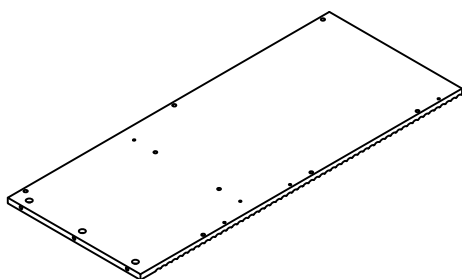


⑬
RIGHT PANEL
Qty:1

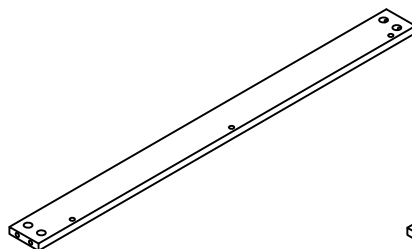


⑭
LEFT RAIL
Qty:1

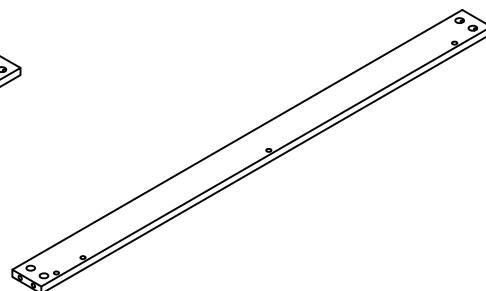


⑮
RIGHT RAIL
Qty:1

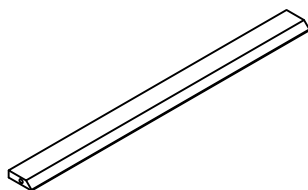


⑯
RAIL
Qty:2

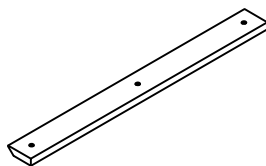

⑰
RAIL
Qty:2











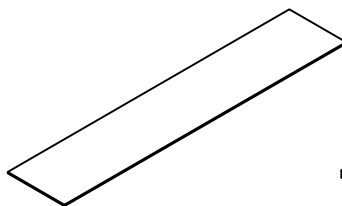


⑱
SIDE BACK
Qty:2

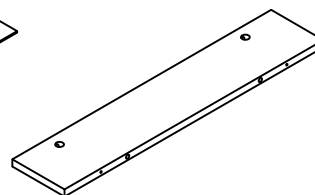

⑲
MIDDLE BACK
Qty:1


Part List

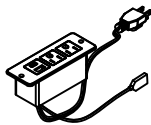 Ø15X9.5mm (A) X60 CAM LOCK spare:2	 Ø6.5X35mm (B) X46 CAM BOLT spare:2	 Ø8X30mm (C) X30 WOODEN DOWEL spare:2	 Ø4X40mm (D) X4 SCREW spare:1	 Ø3.5X14mm (E) X3 SCREW spare:1
 6X25mm (F) X7 BOLT spare:1	 (G) X1 LIGHT STRIP	 (H) X1 ADAPTER	 (I) X1 U-SHAPED PLASTIC CLIP	 (J) X1 HEX KEY
 Ø3X12mm (K) X4 CONNECTING BUCKLE spare:1	 Ø4X14mm (L) X4 SCREW spare:1	 Ø6.5X48mm (M) X7 CAM BOLT spare:1	 (N) X2 CAM BOLT	 Ø4X45mm (O) X6 SCREW spare:1
 (P) X2 FOAM PAD				

Part List


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.






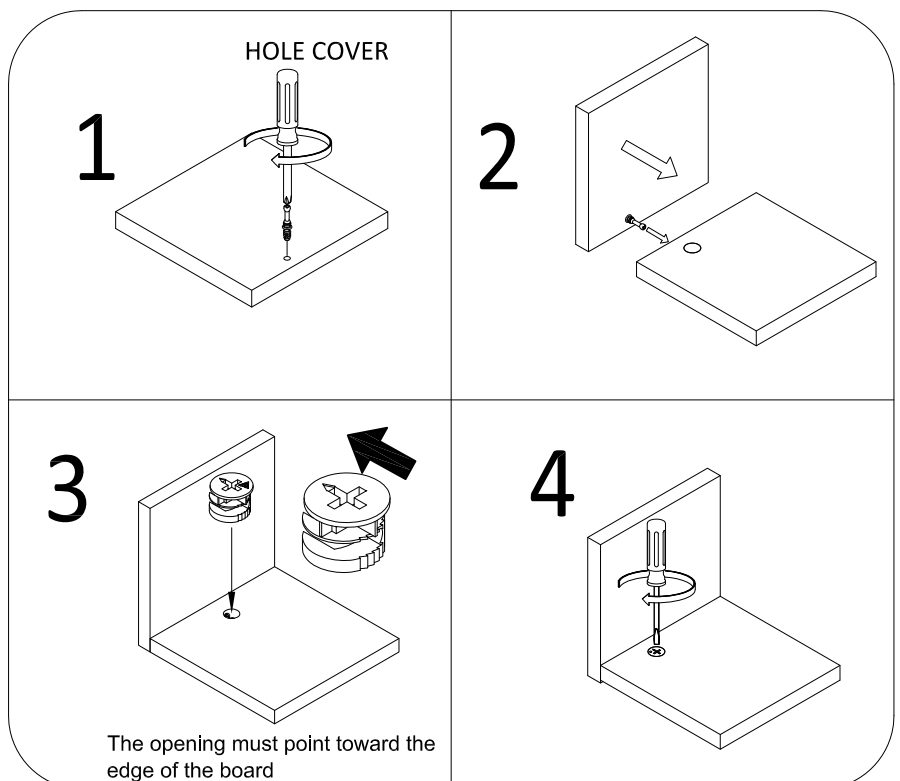


Board Identification




Not actual size

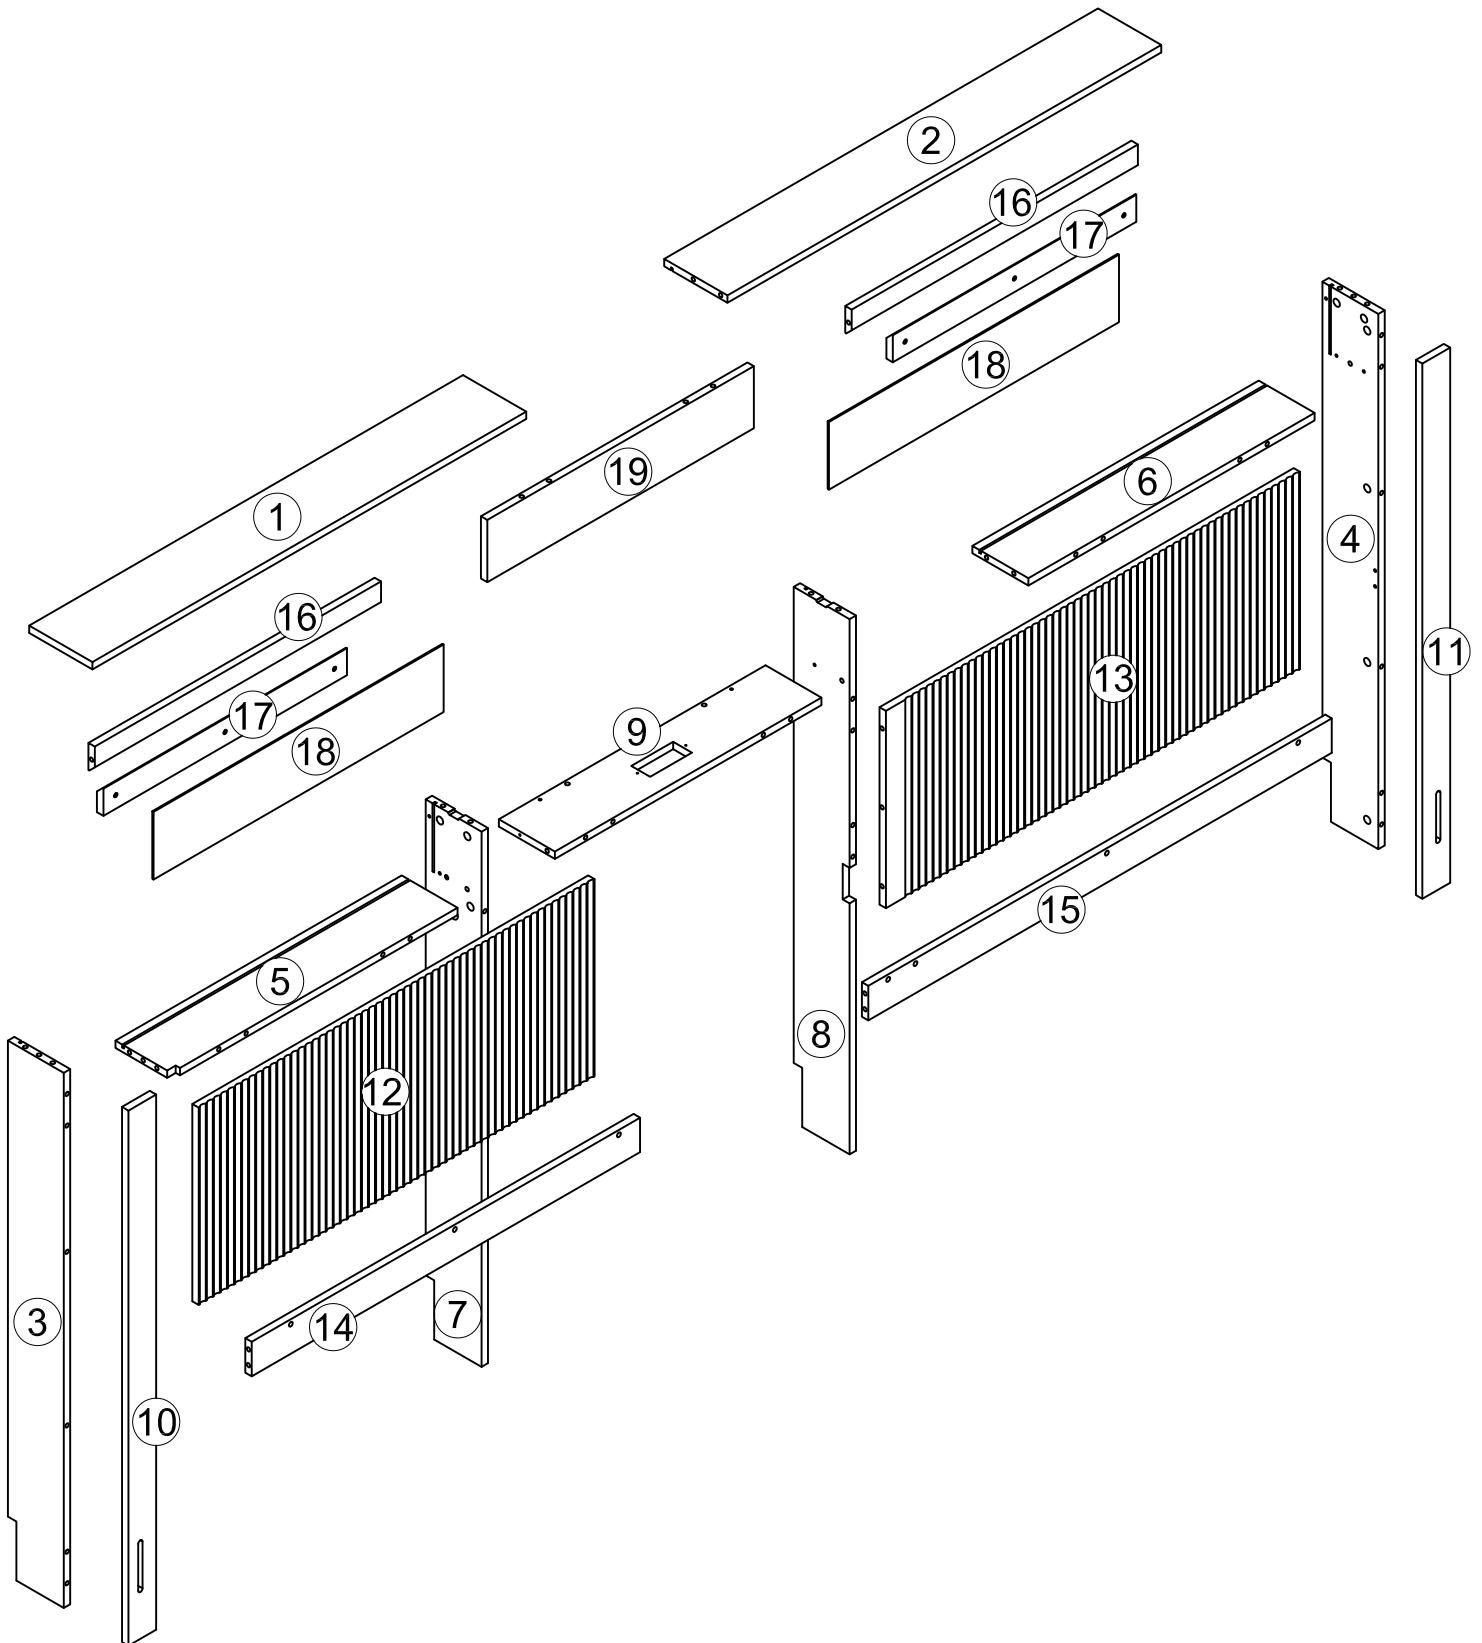


STEP1

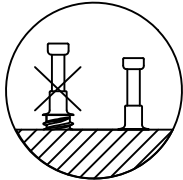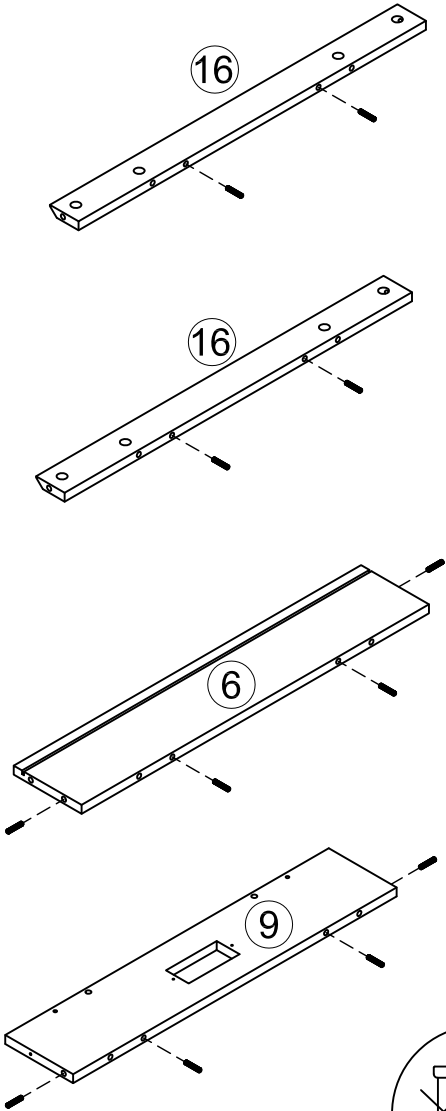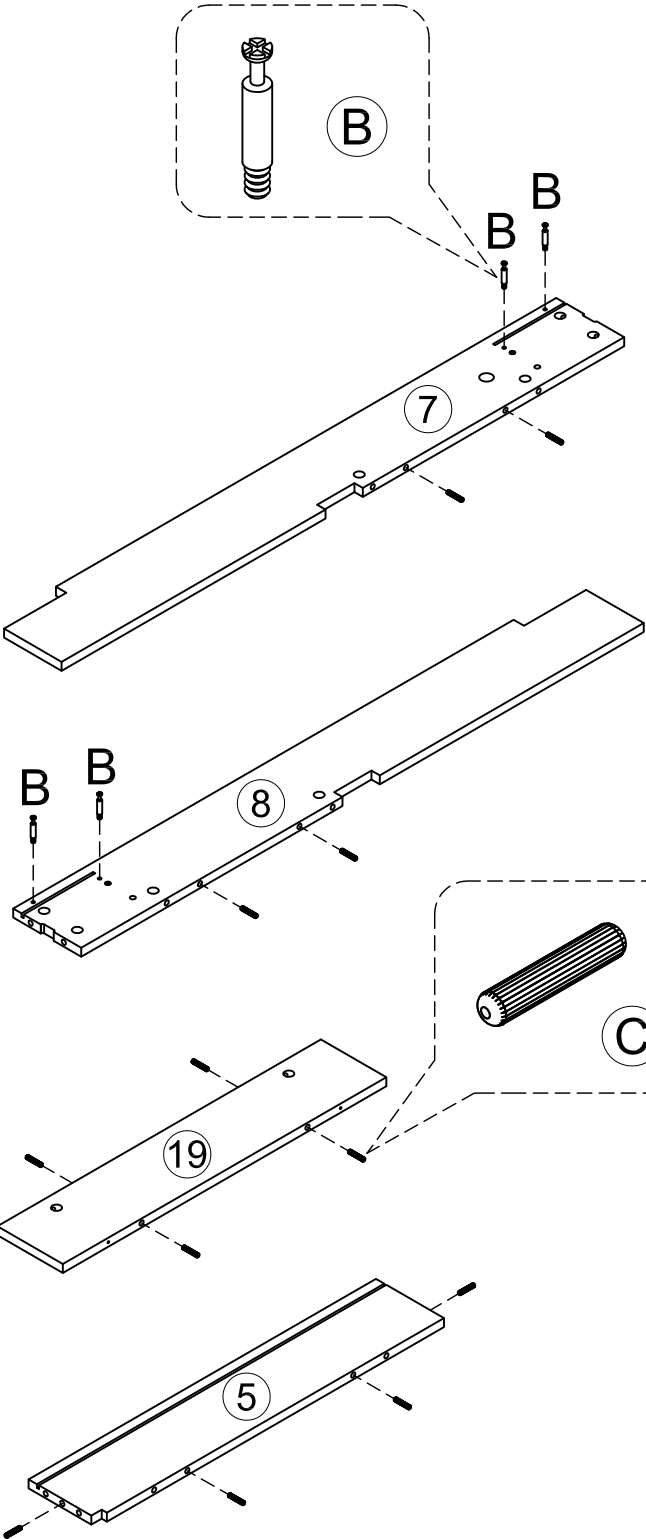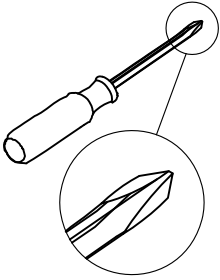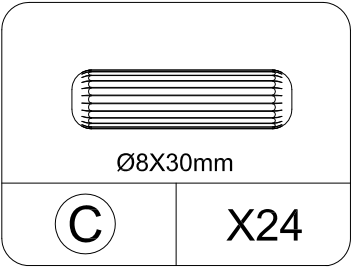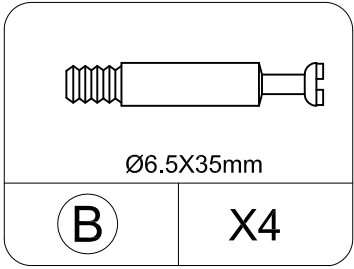







STEP2

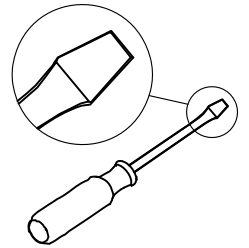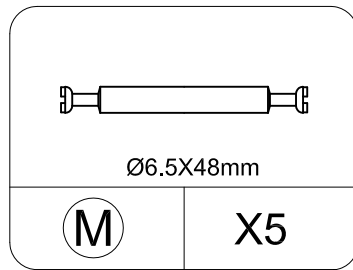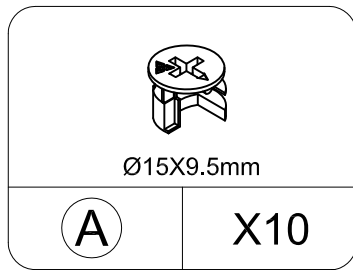










With cam bolt M centered and horizontal, tighten both cam lock A simultaneously.

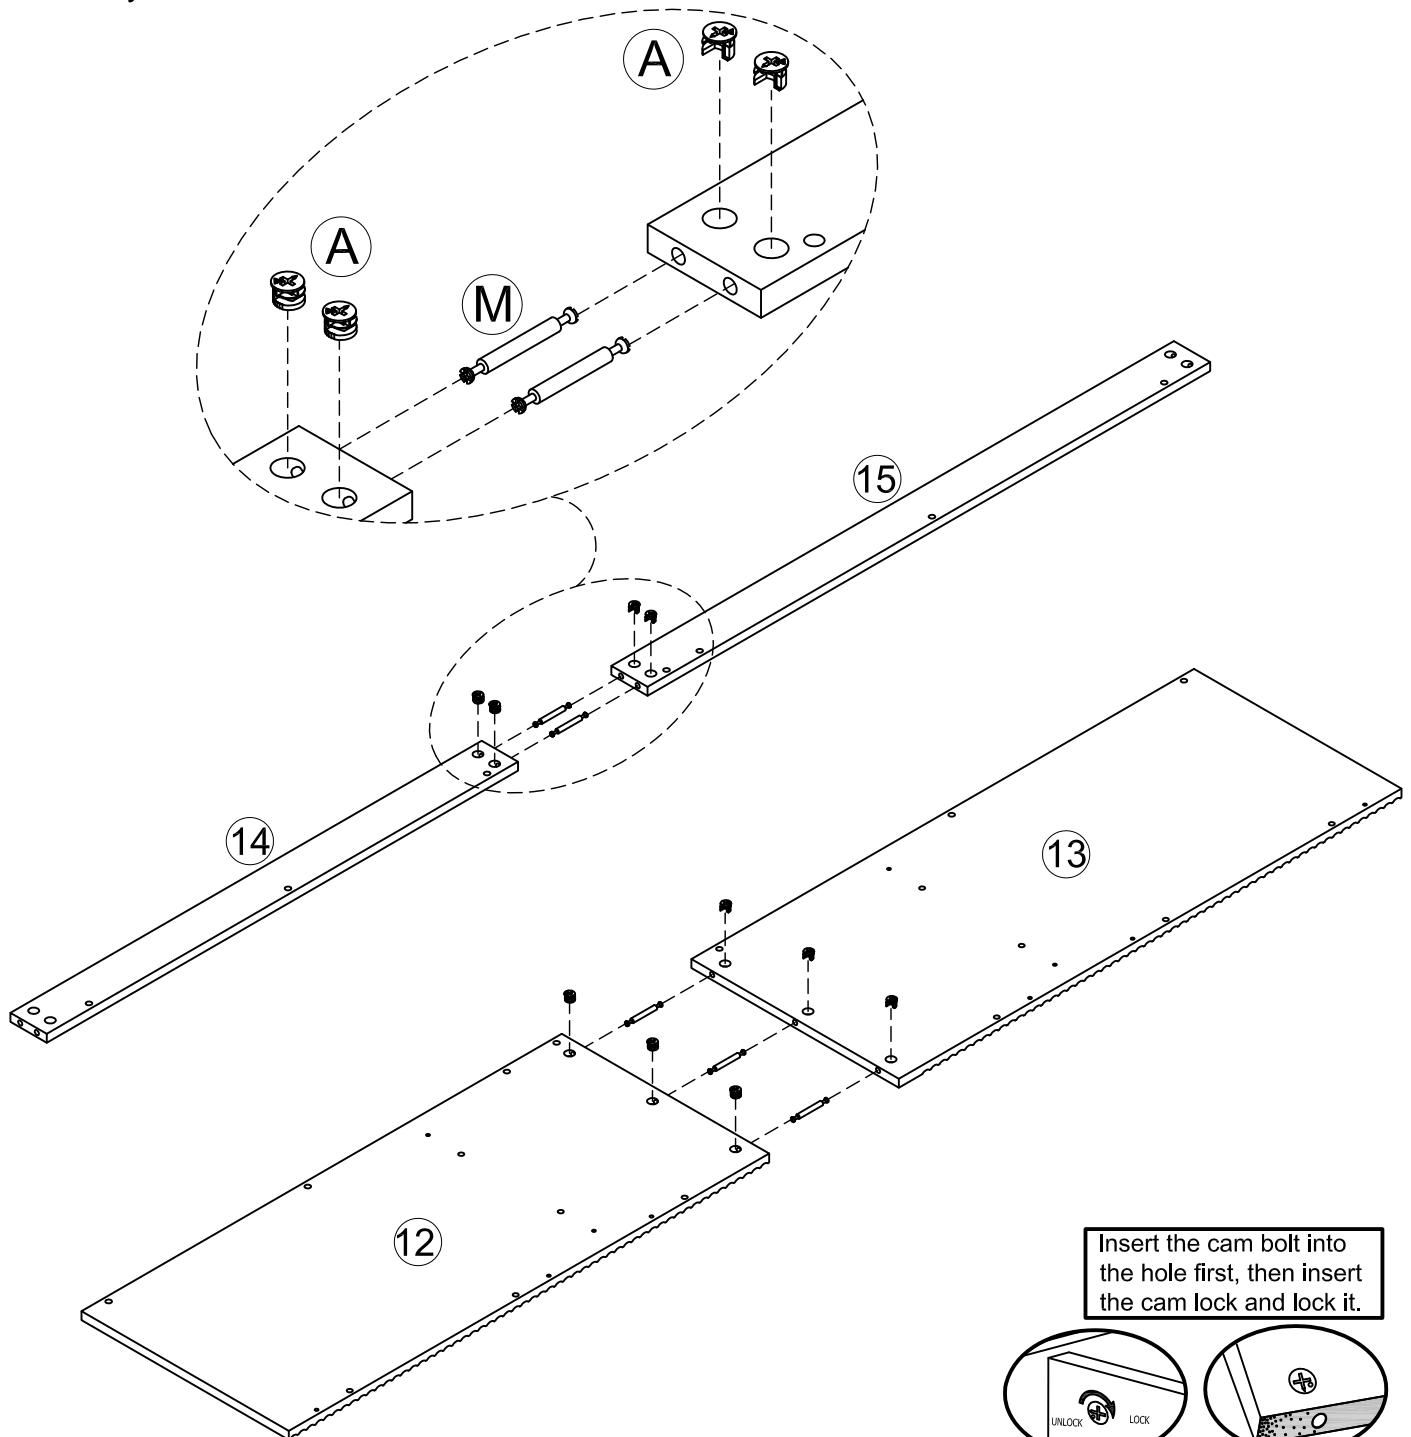

STEP3

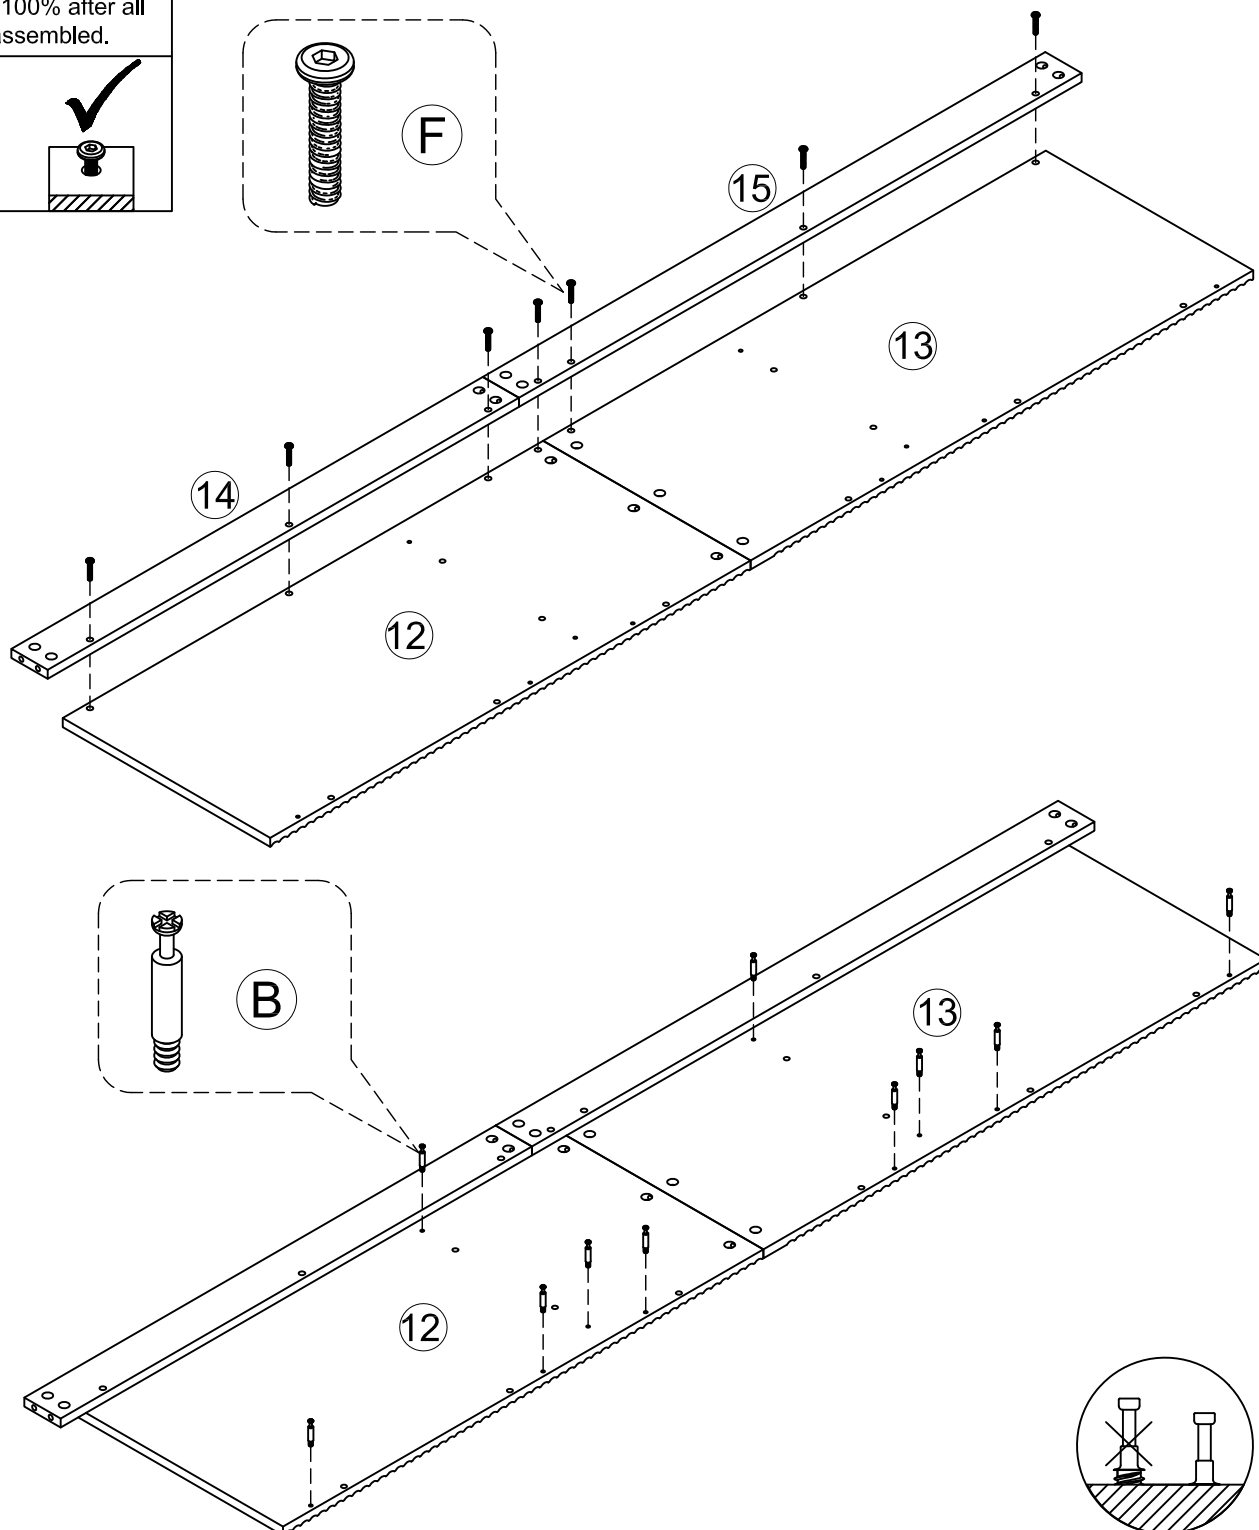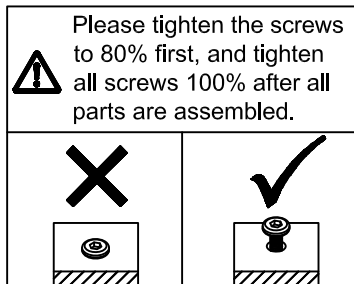
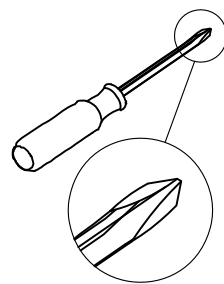
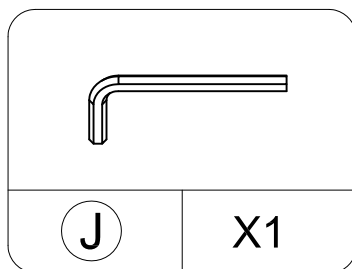
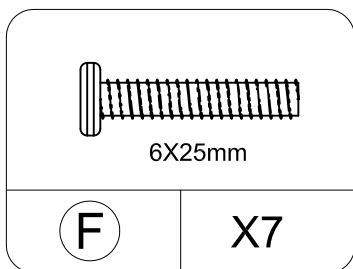
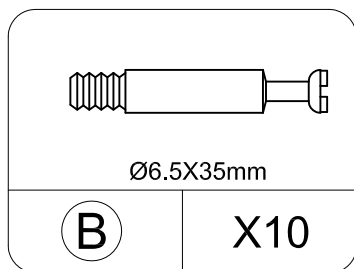


STEP4

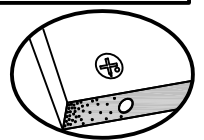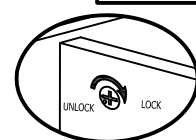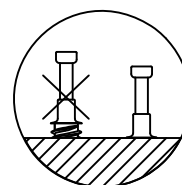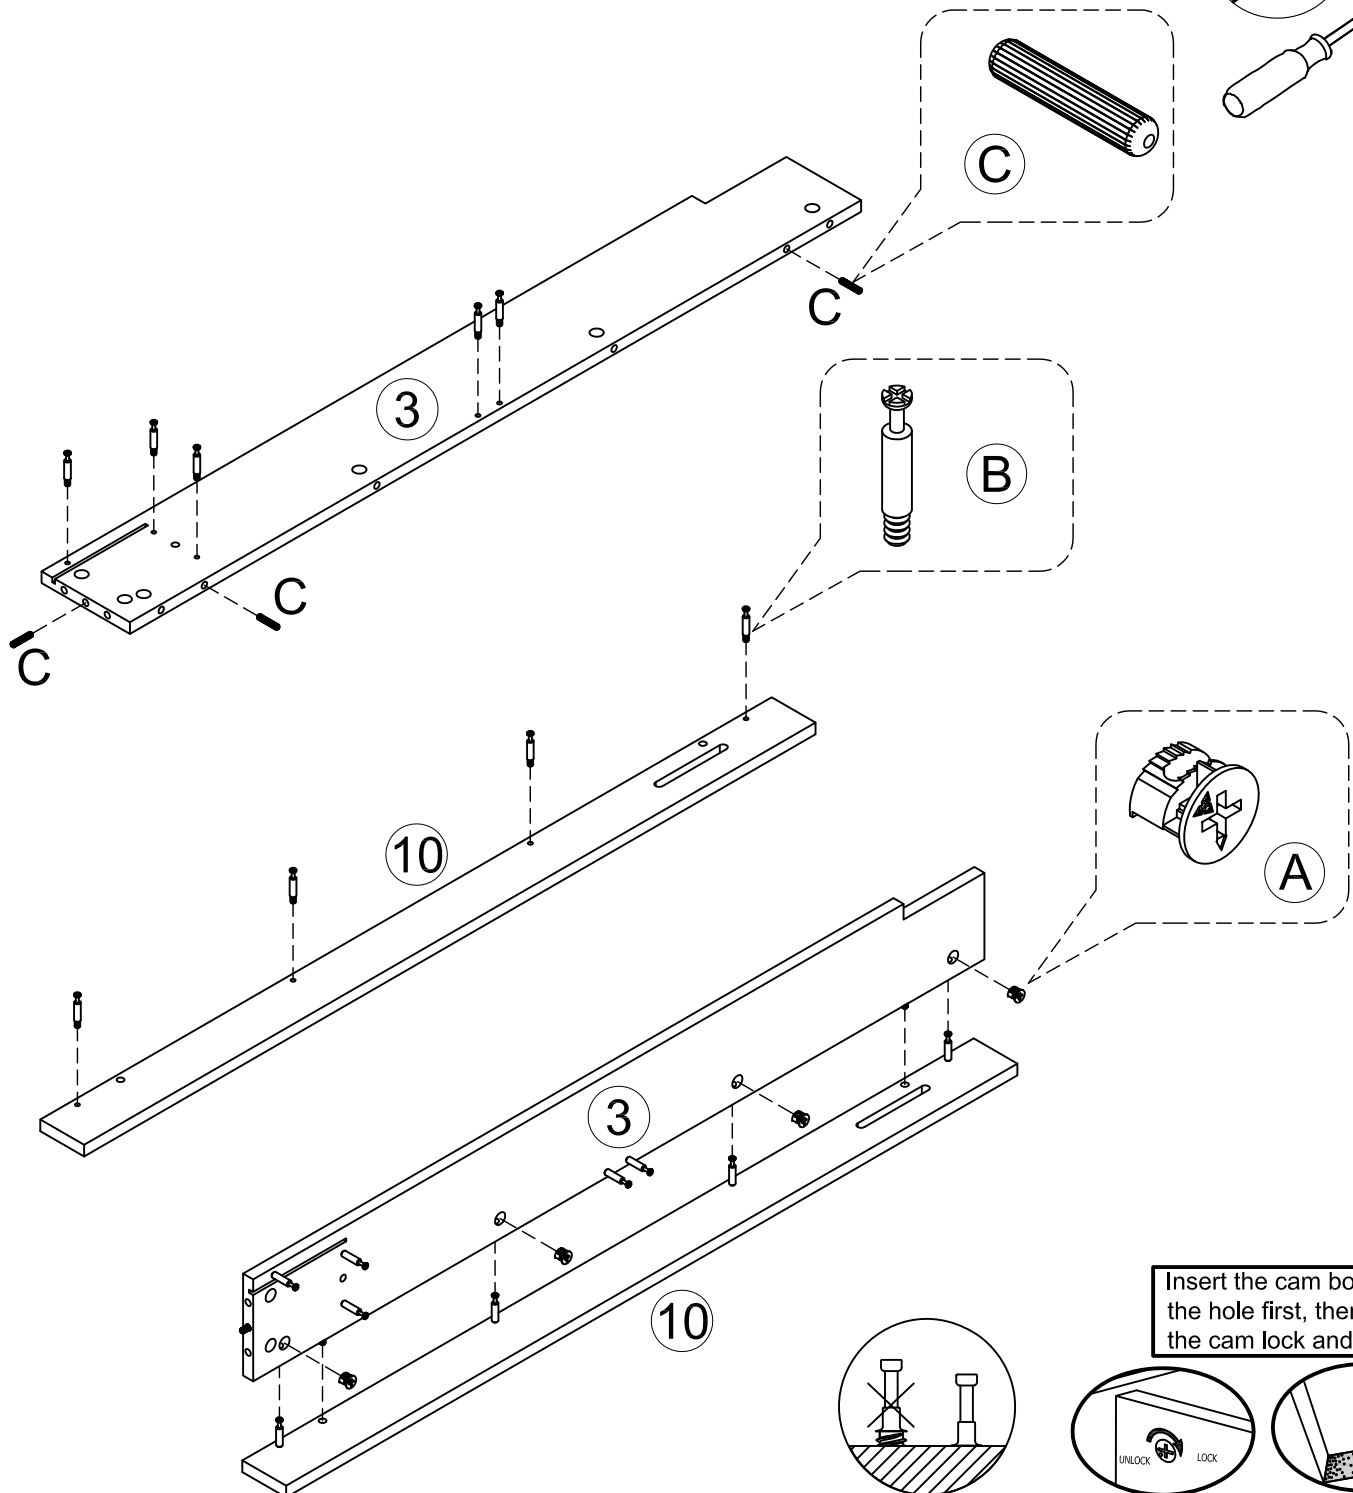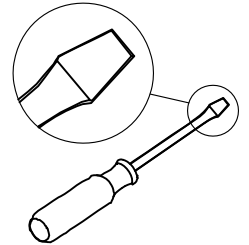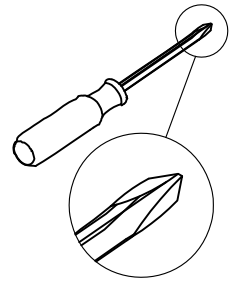
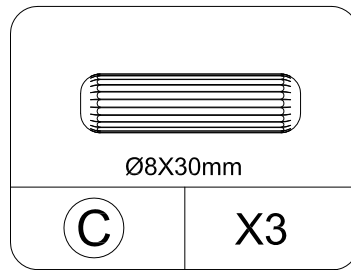
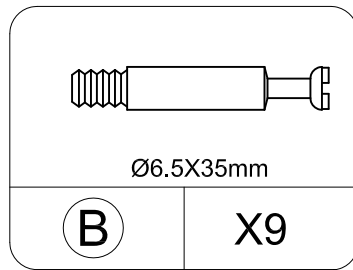
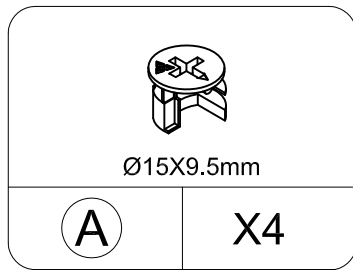


Proper orientation of CAM LOCK

STEP5

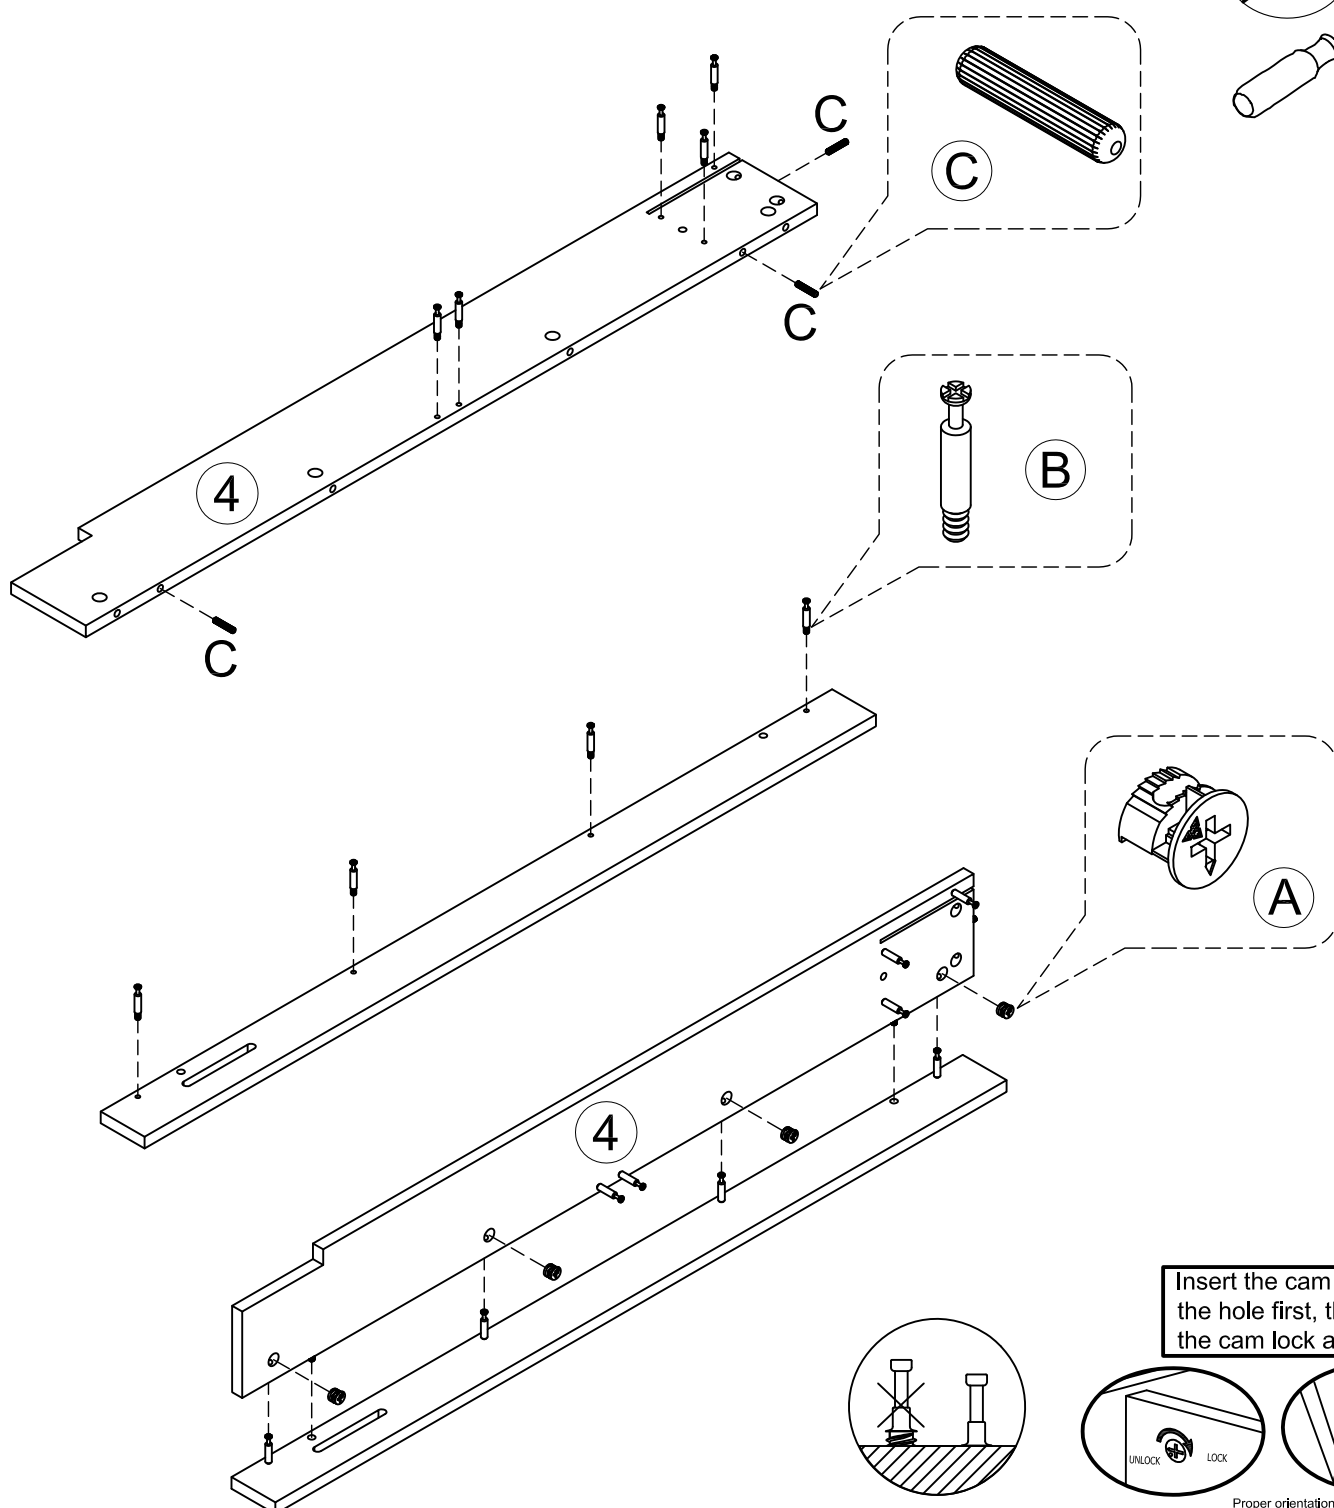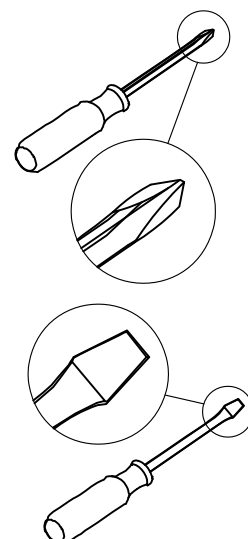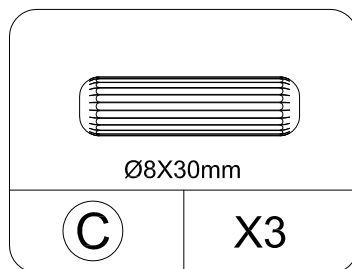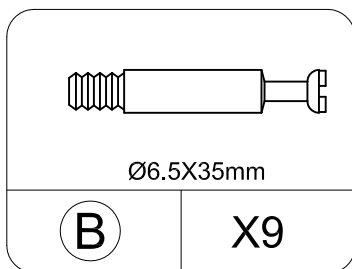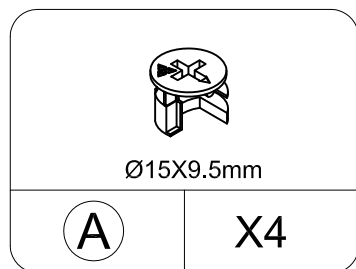

STEP6

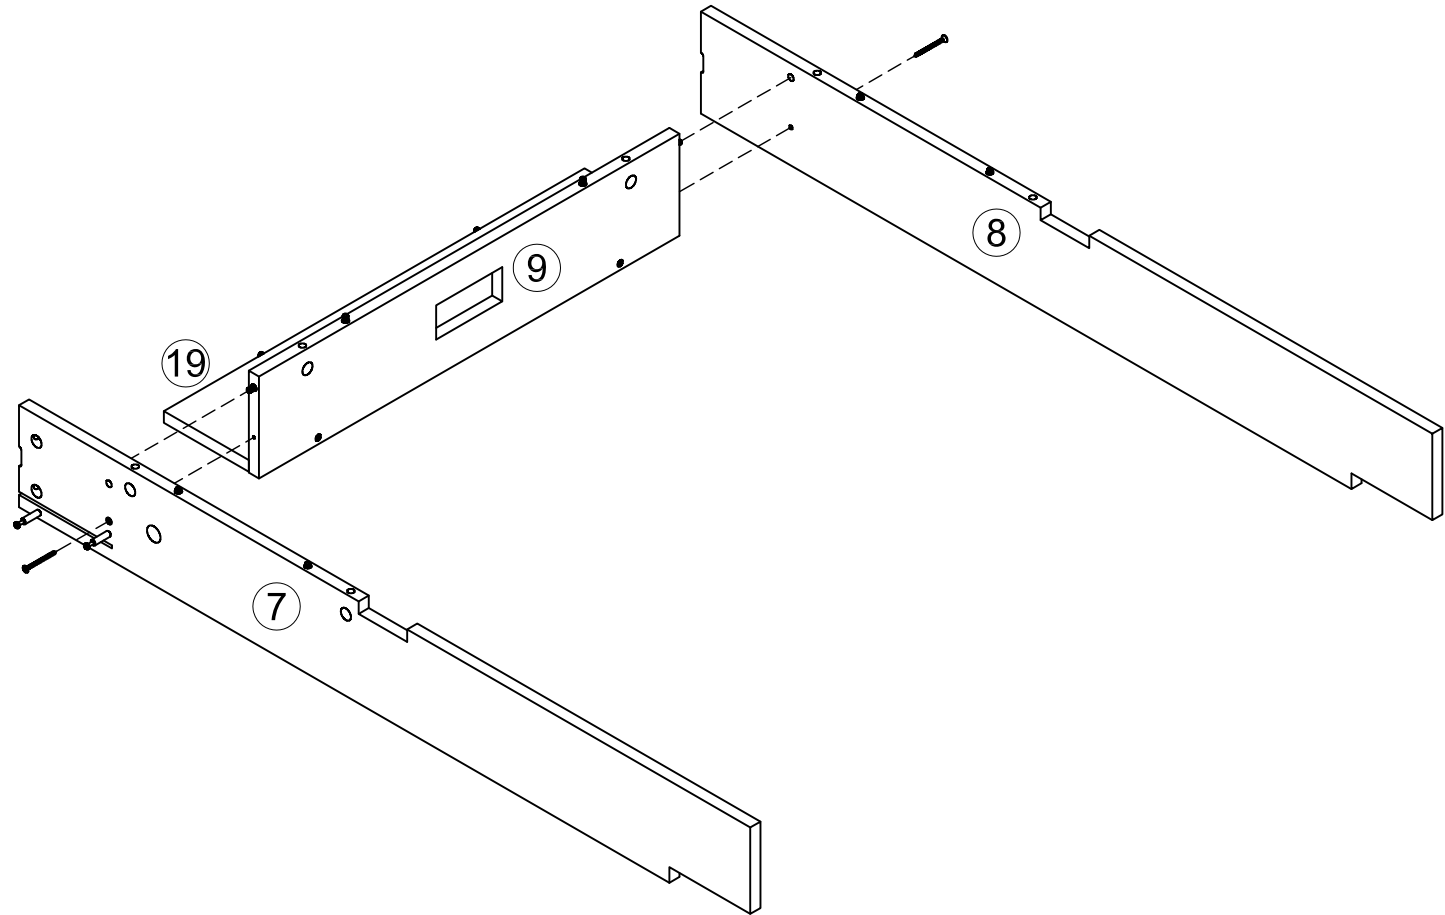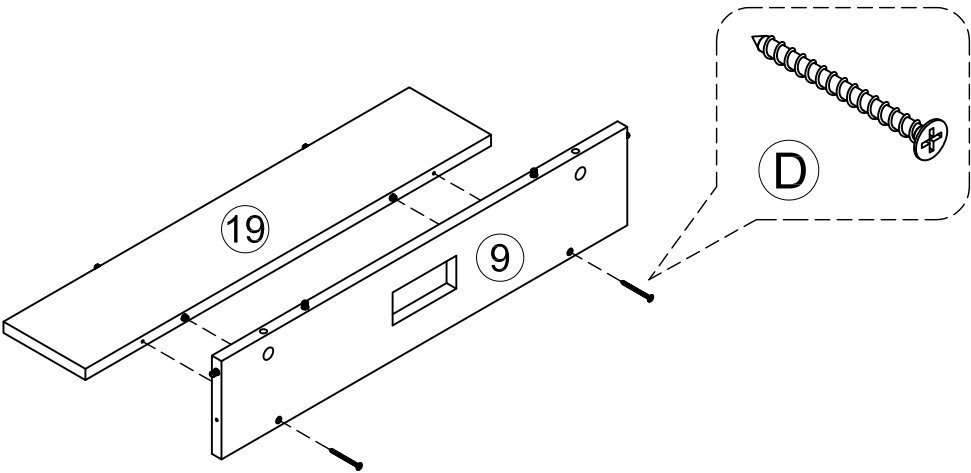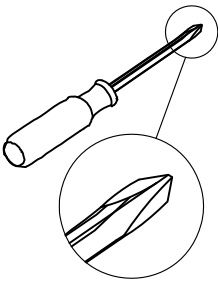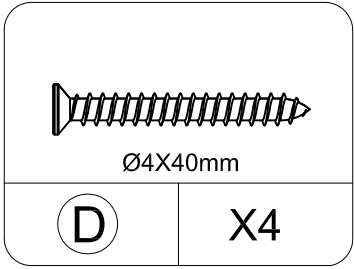




STEP7




Ø15X9.5mm

A


X12

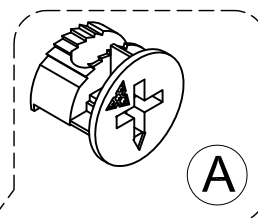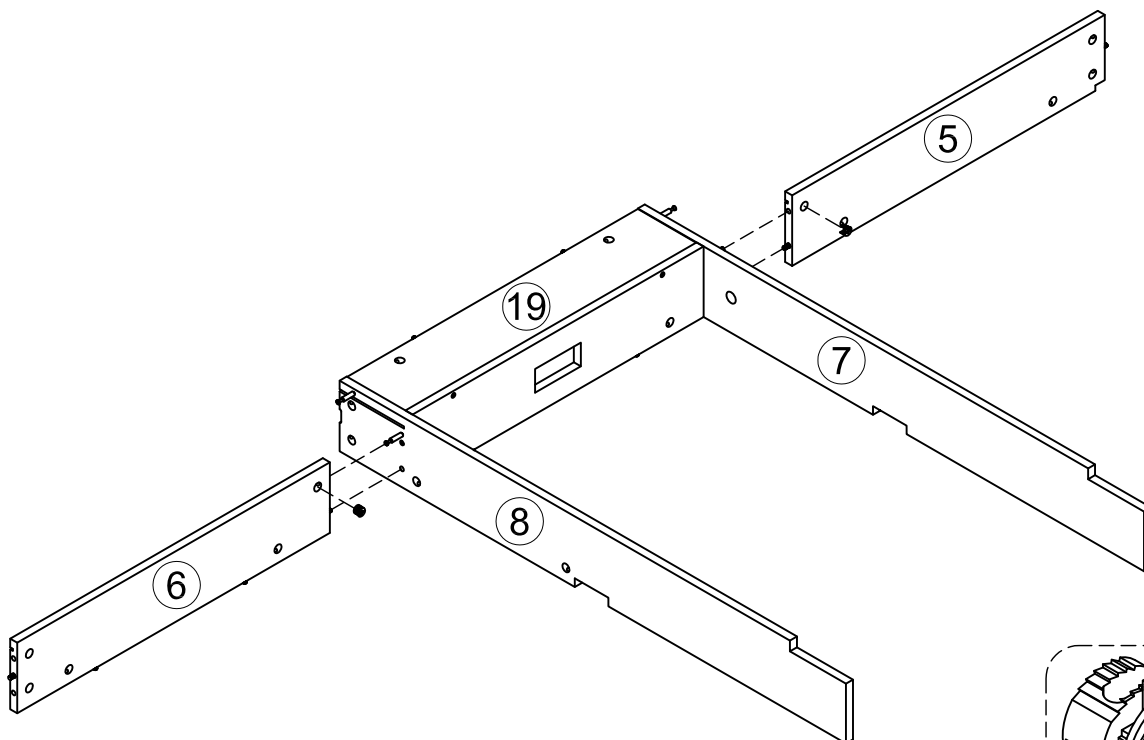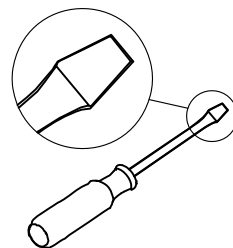

for this step, you need one helper

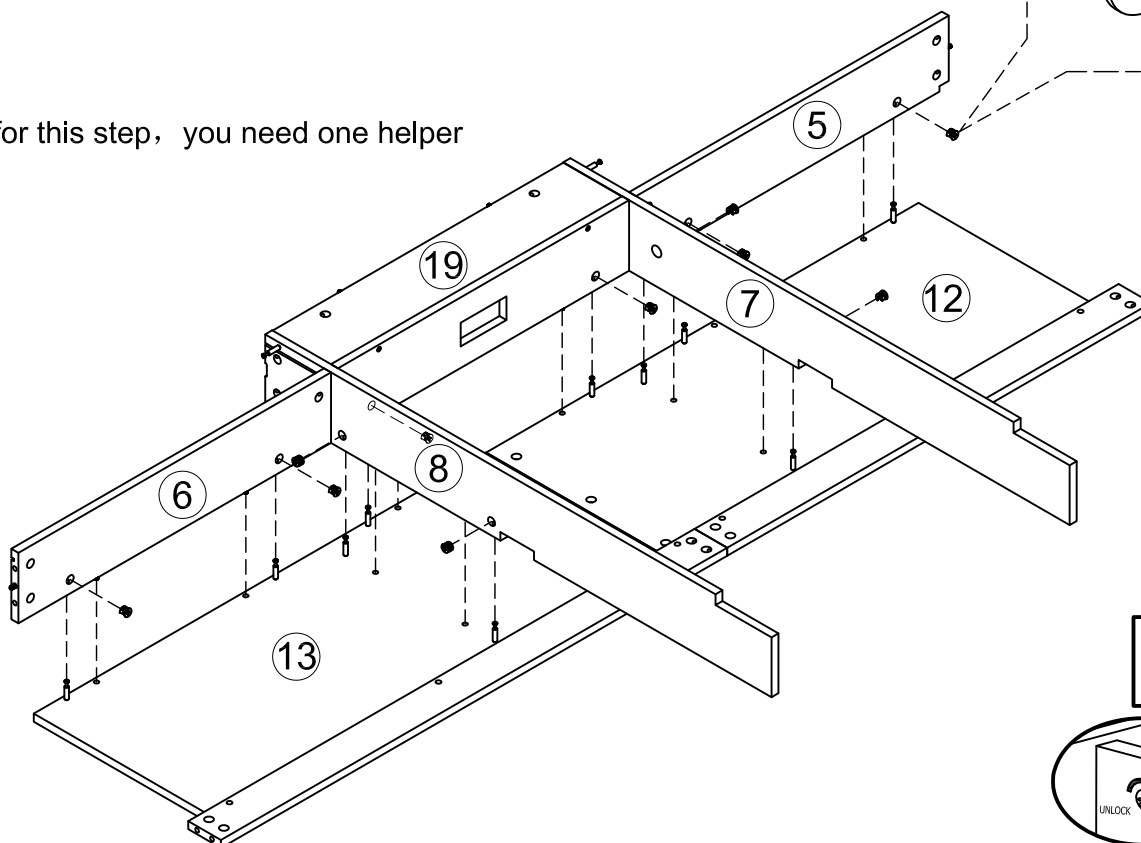

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

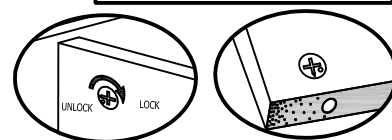

Proper orientation of CAM LOCK





STEP8




Ø15X9.5mm

A

X12

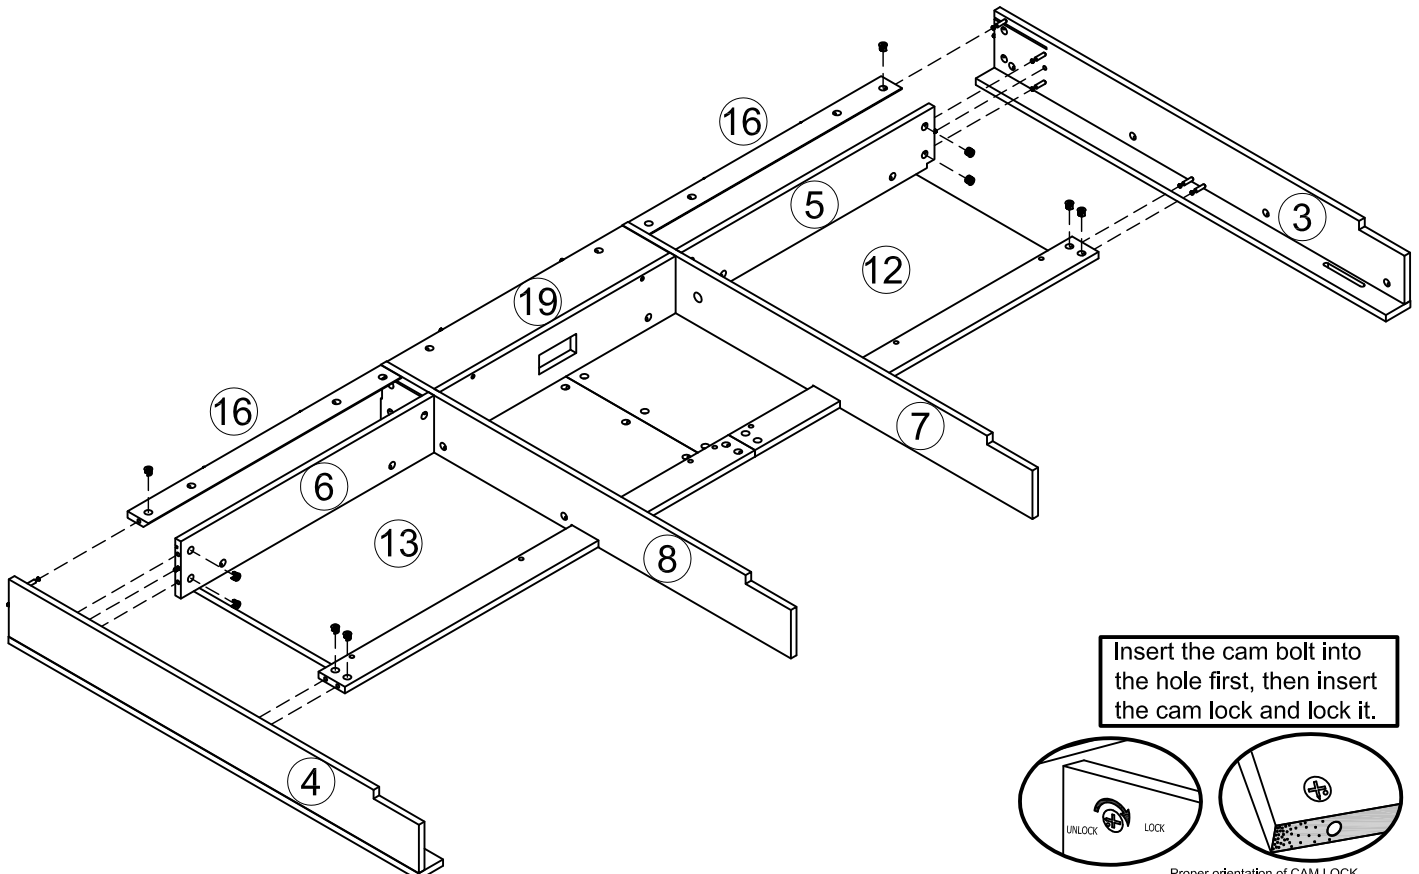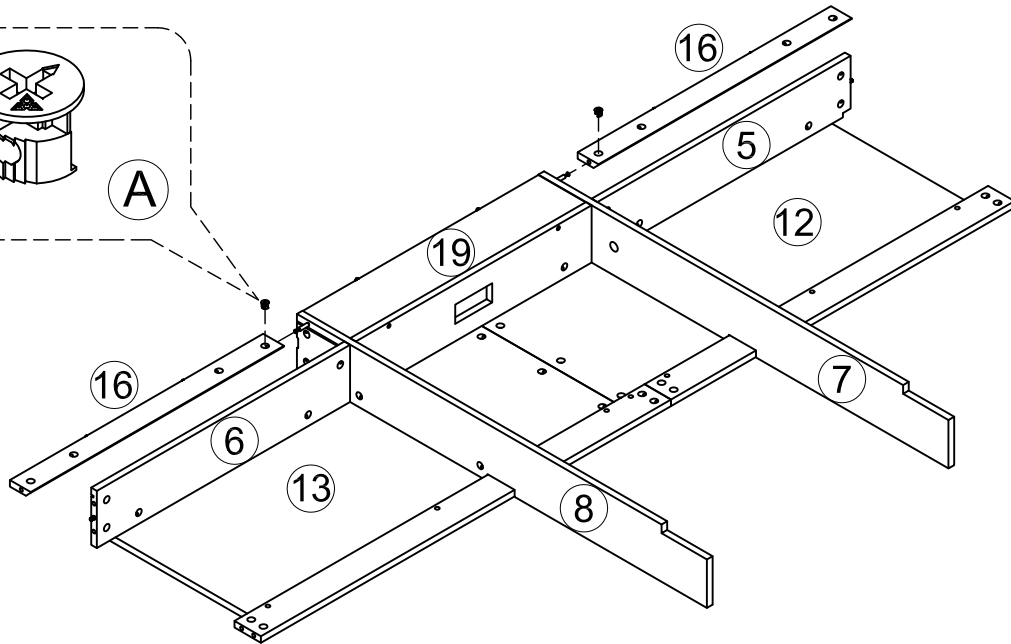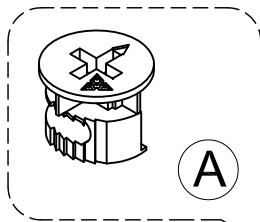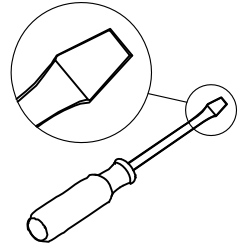


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

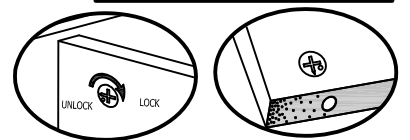

Proper orientation of CAM LOCK


STEP9



Ø3.5X14mm




(E)

X2





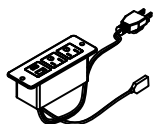


(H)


X1

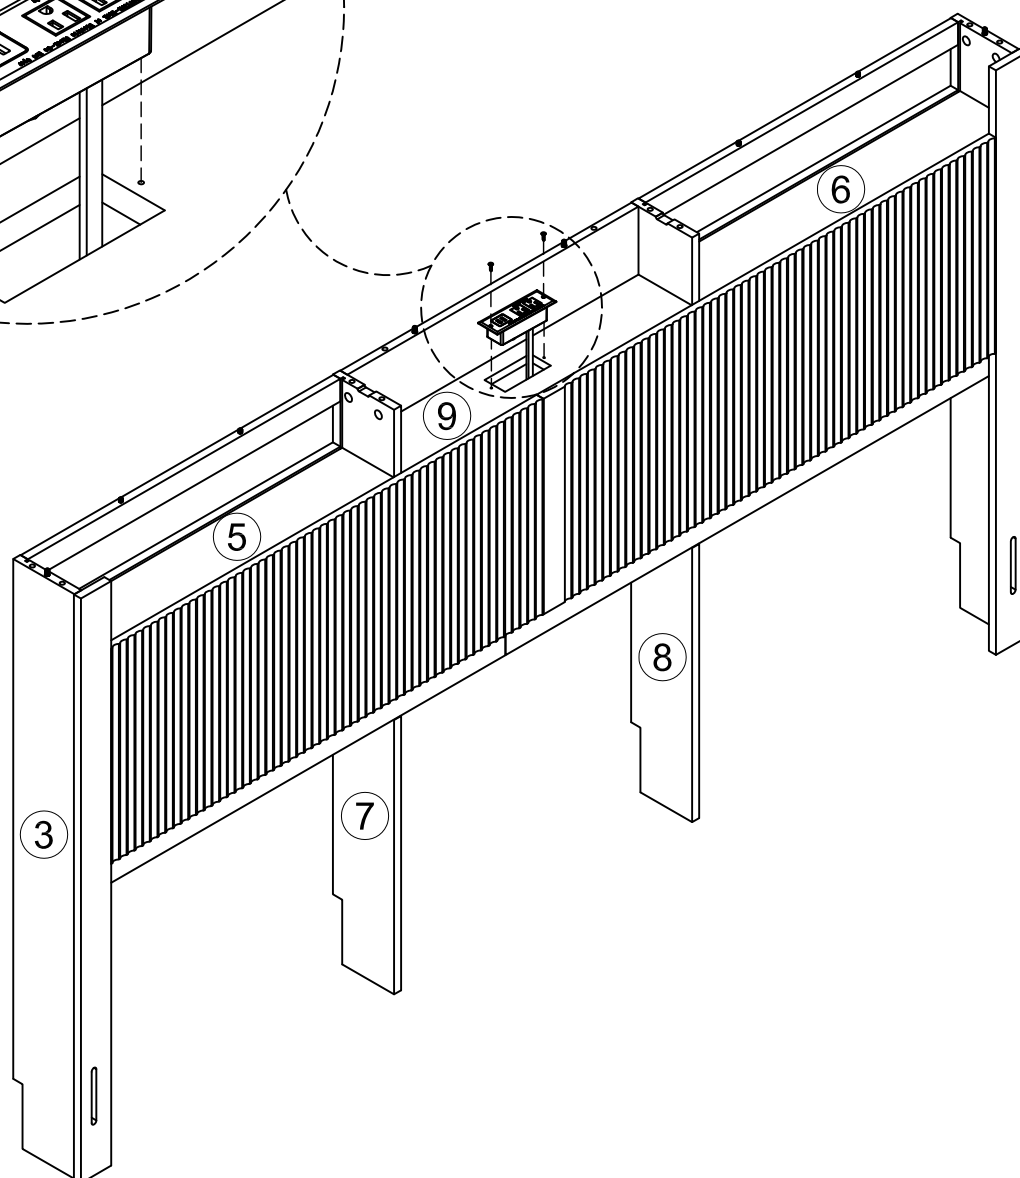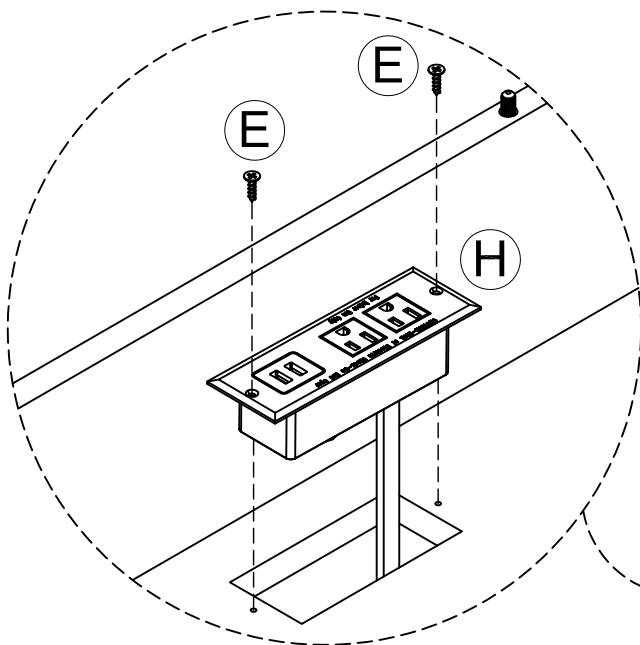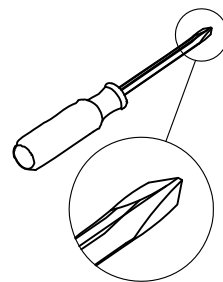


STEP10

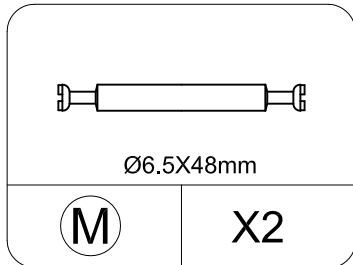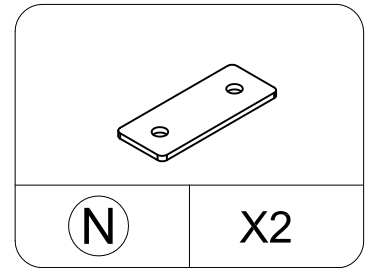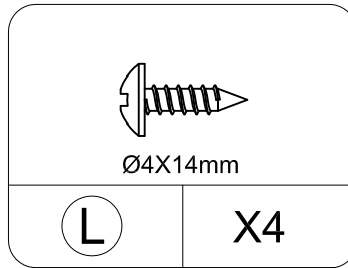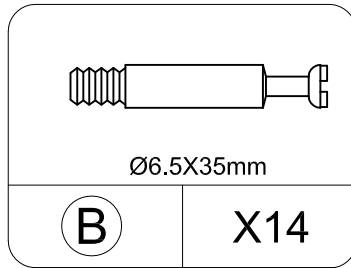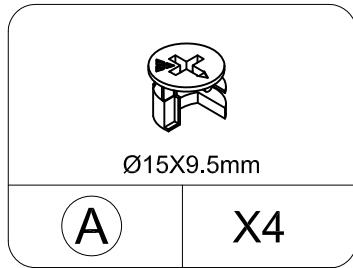




With cam bolt M centered and horizontal, tighten both cam lock A simultaneously.


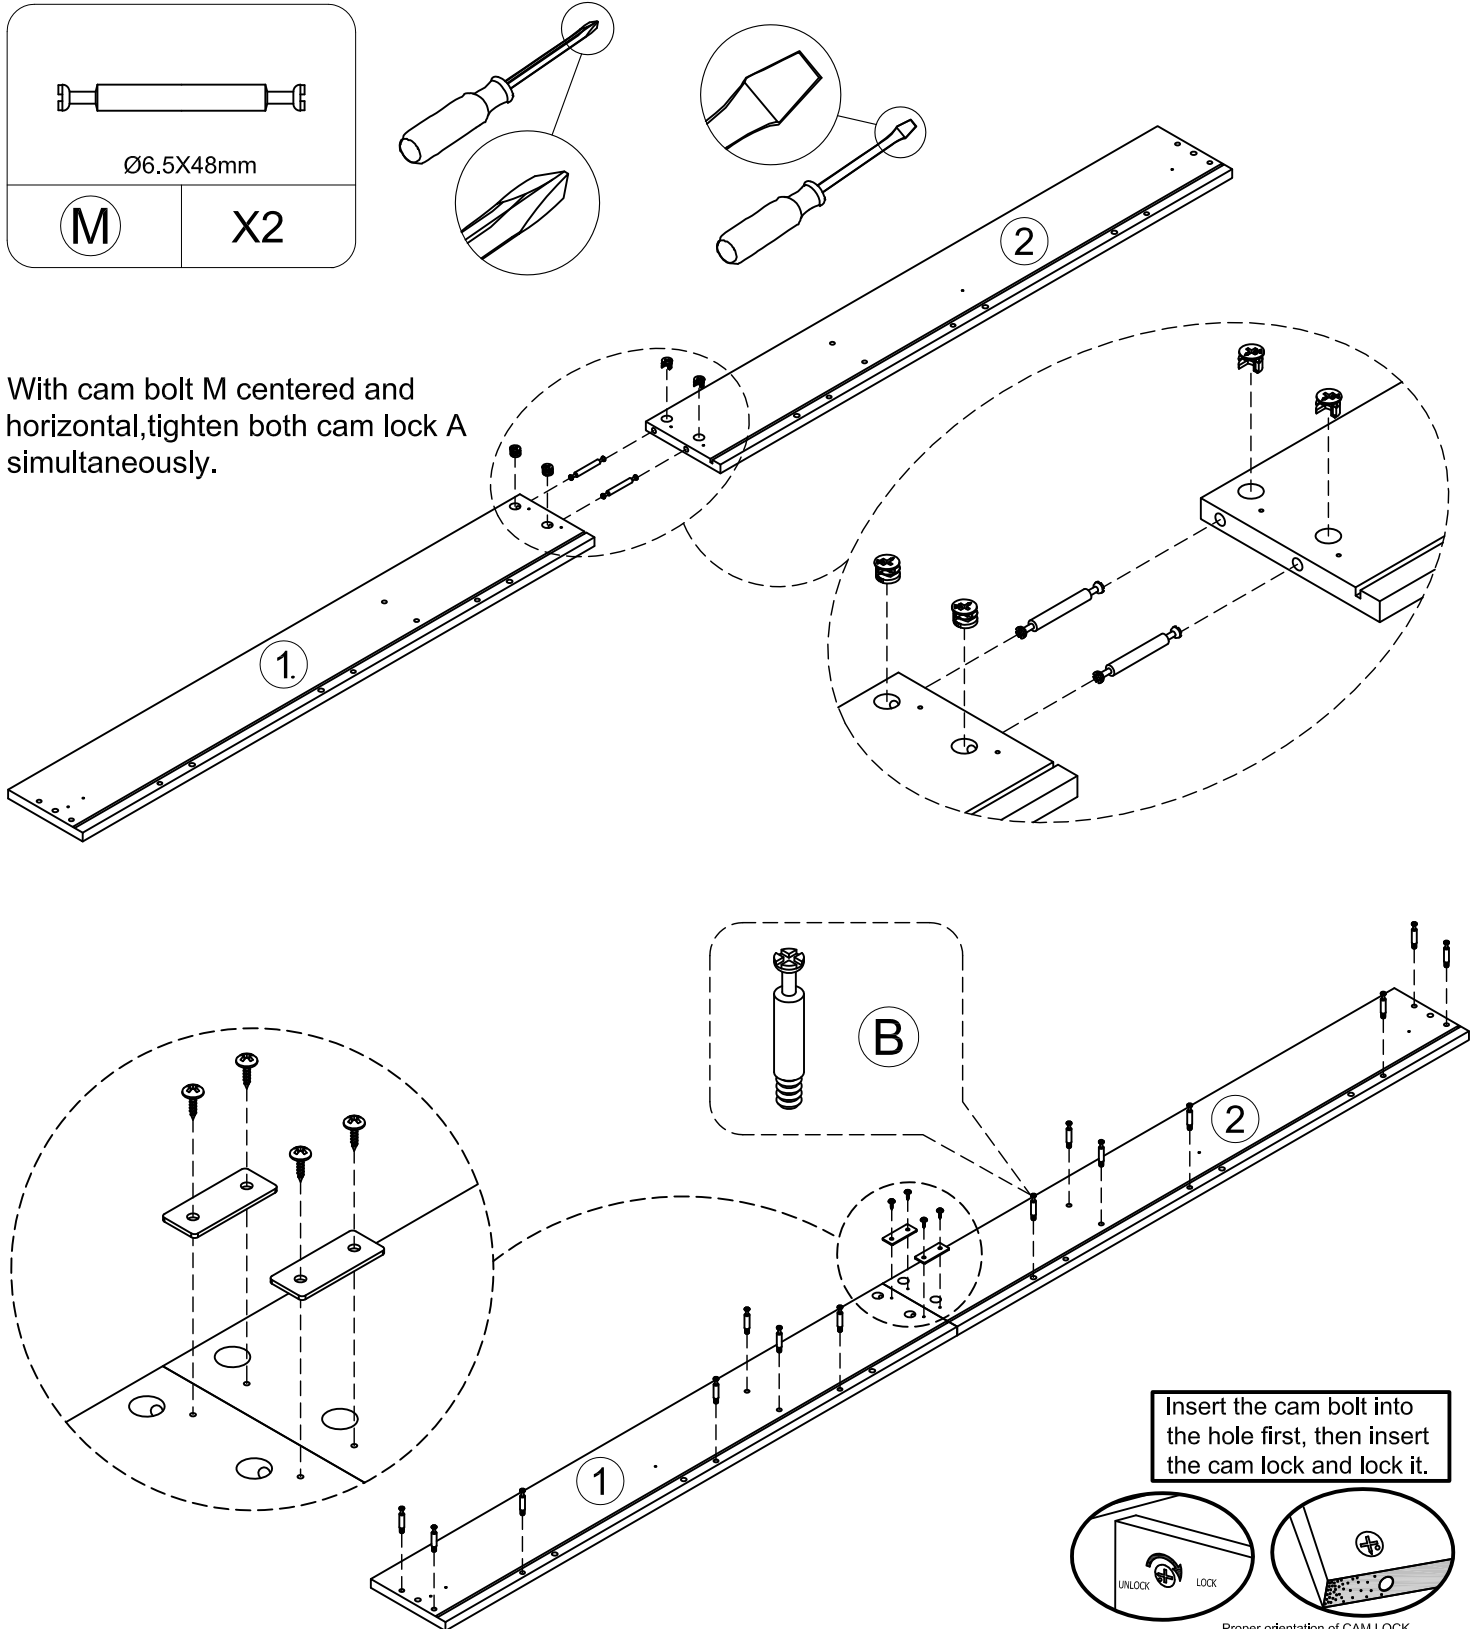


Insert the cam bolt into the hole first, then insert the cam lock and lock it.


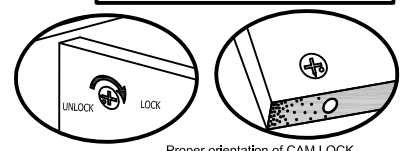


STEP11

 Ø3.5X14mm				 Ø3X12mm			
(E)	X1	(G)	X1	(K)	X4	(I)	X1

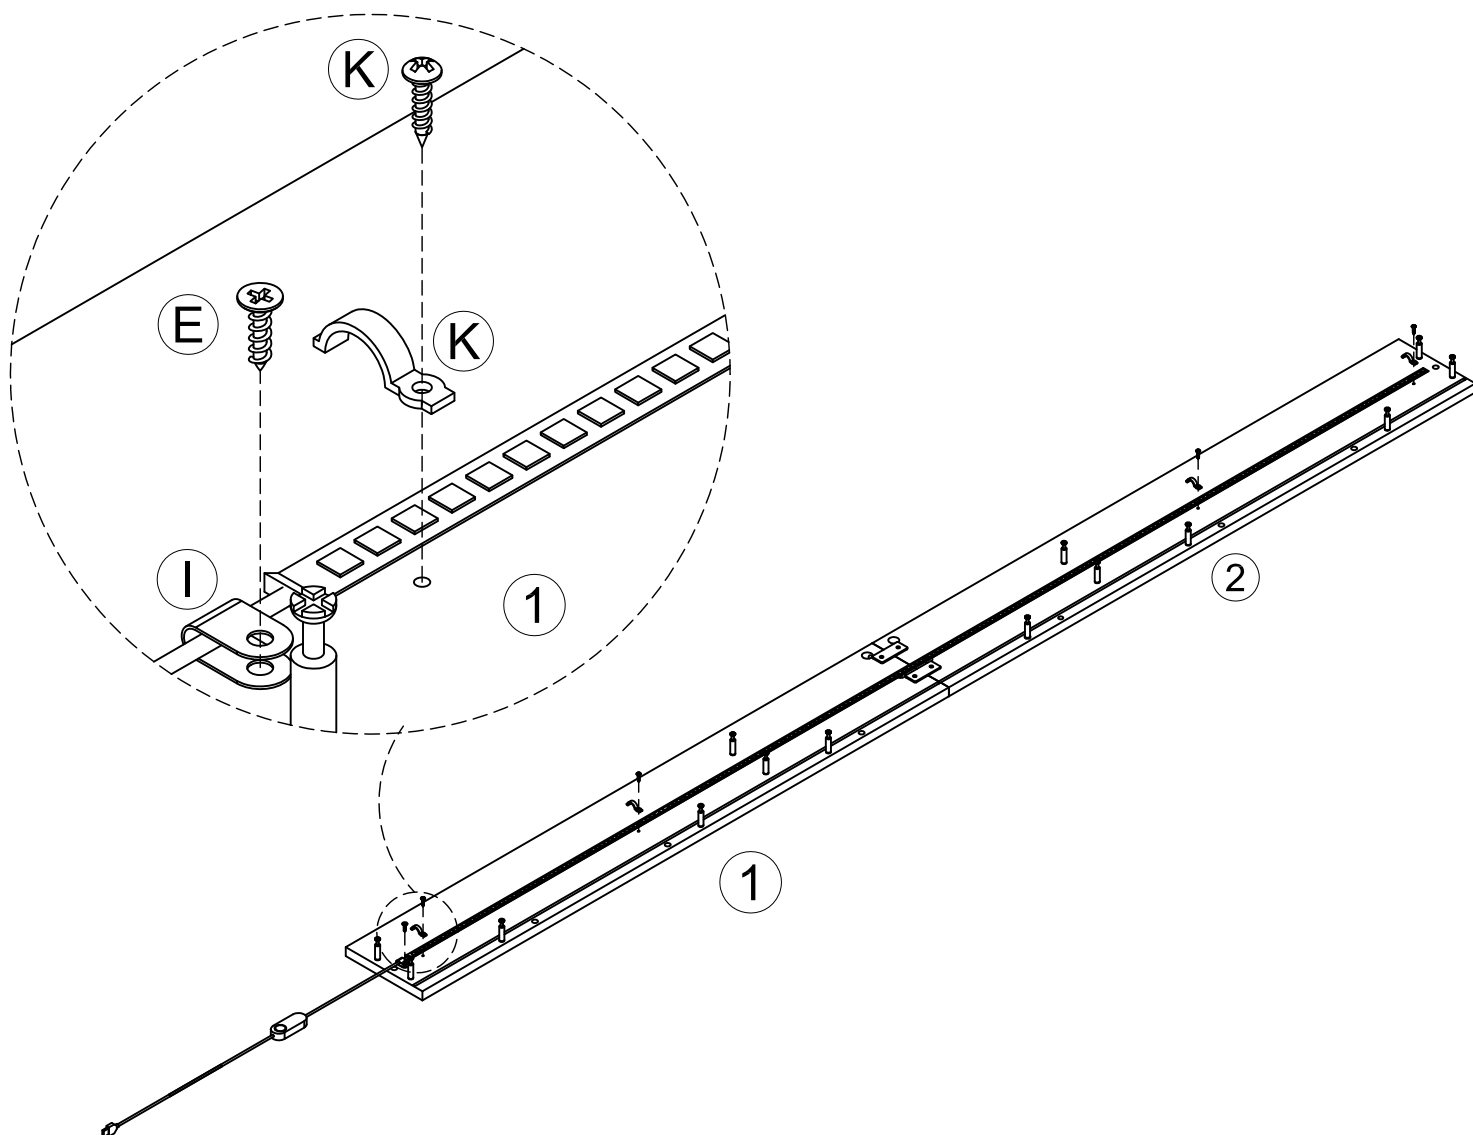
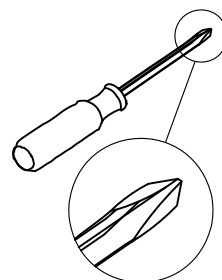


STEP12


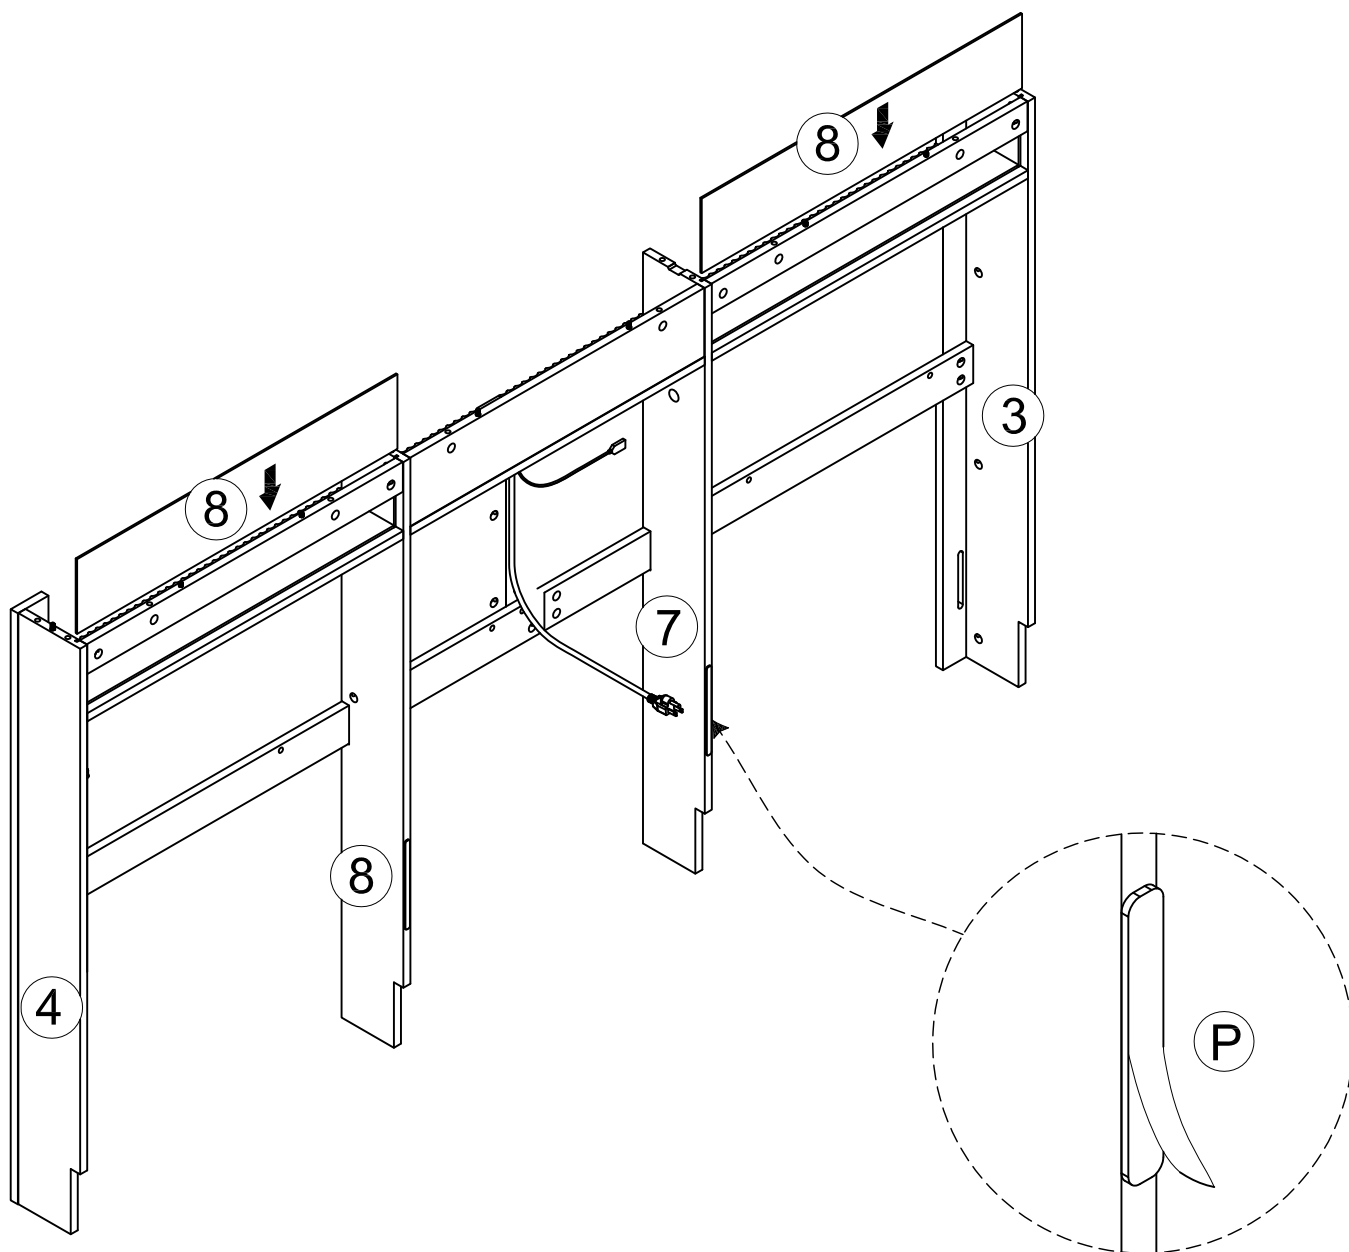
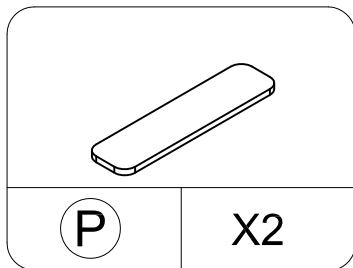


Before installation, please remove the adhesive tape protective film on the back of the sponge mat and then stick it to the board.


STEP13

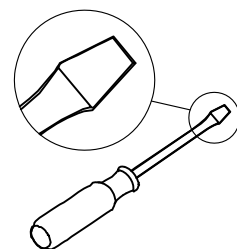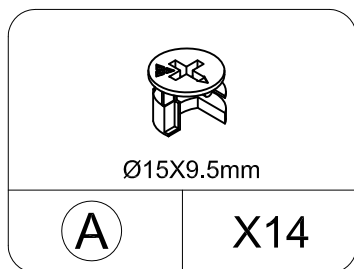

The switch on the cord that controls the light does not need to be passed through the hole shown in the picture. This way, the switch can stay on the front of the product for easy access. Only the wire connector needs to go through the hole.

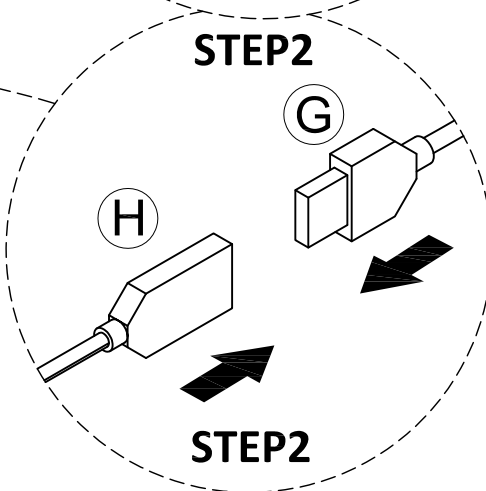
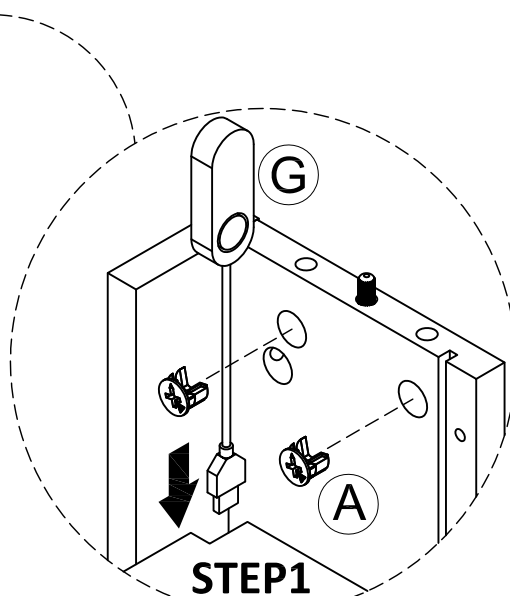
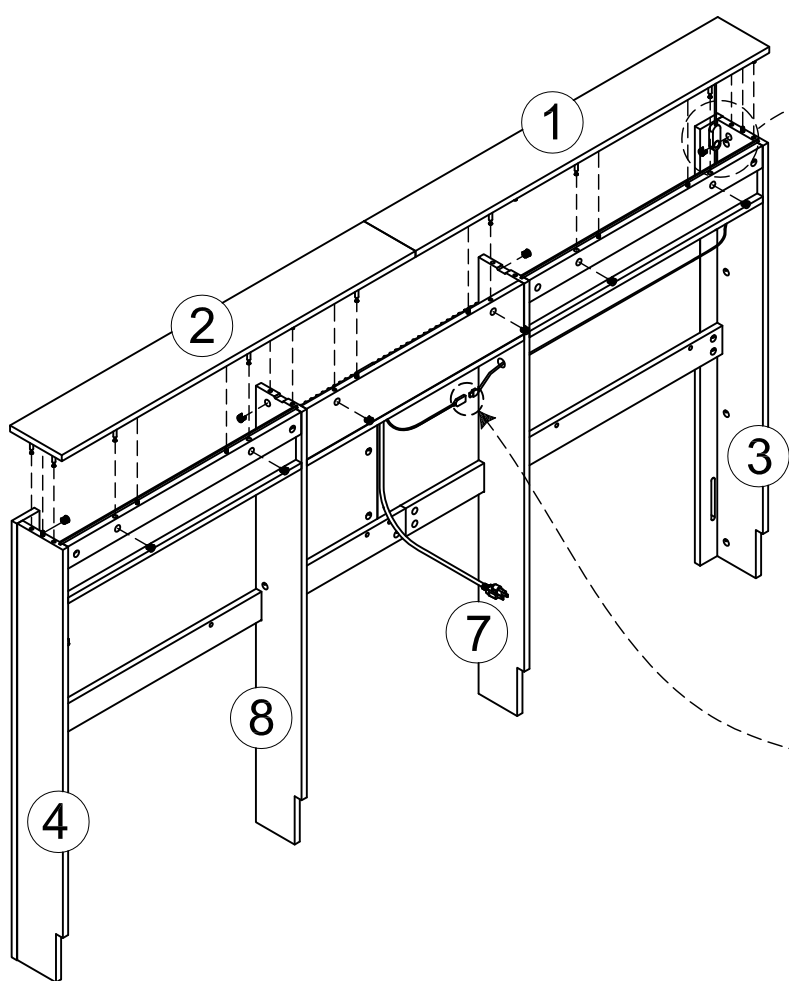


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

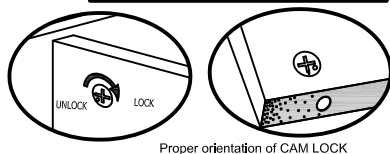


Proper orientation of CAM LOCK


STEP14

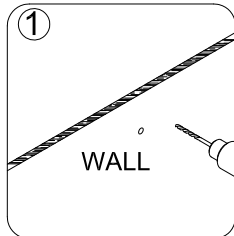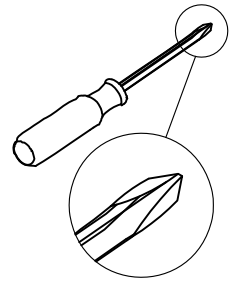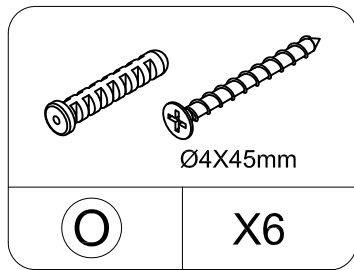

1.drill twelve Ø6
holes on the wall

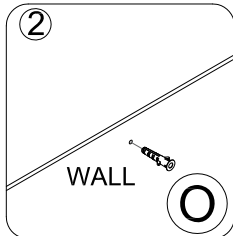

2.put twelve anchors
in the holes

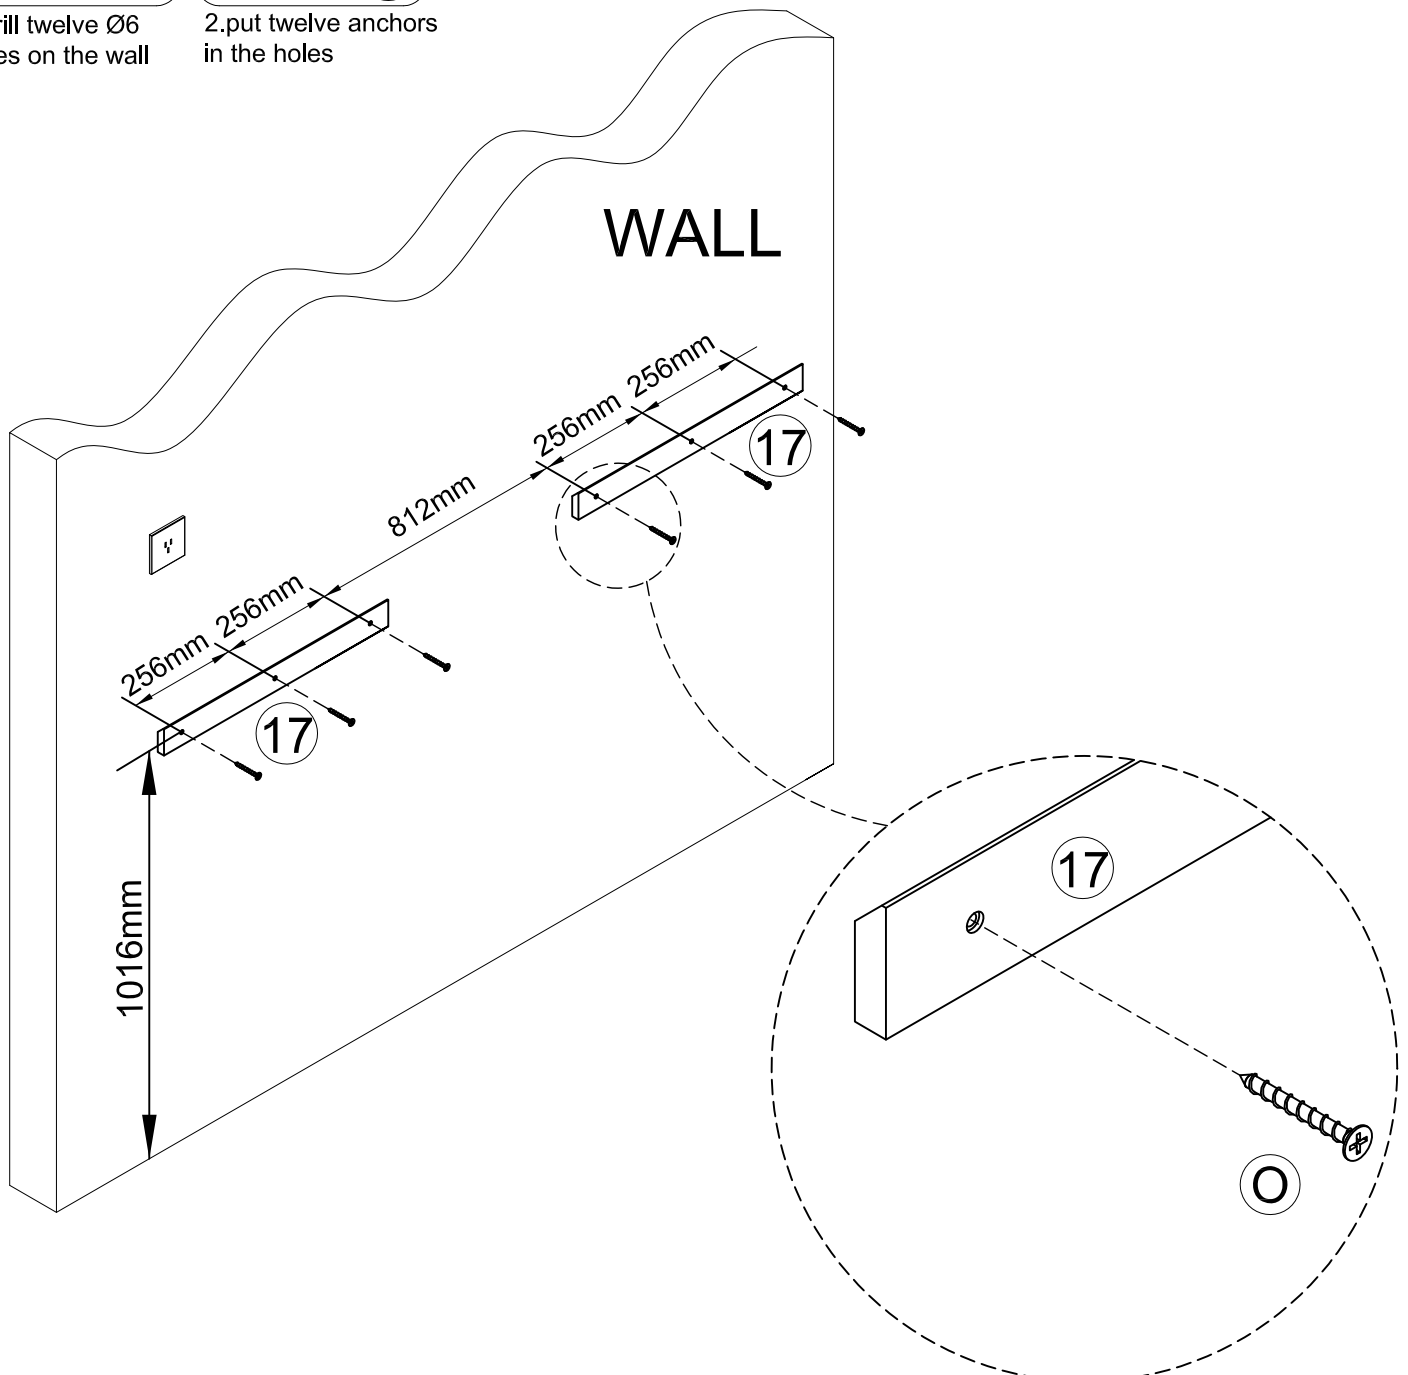

STEP15

