
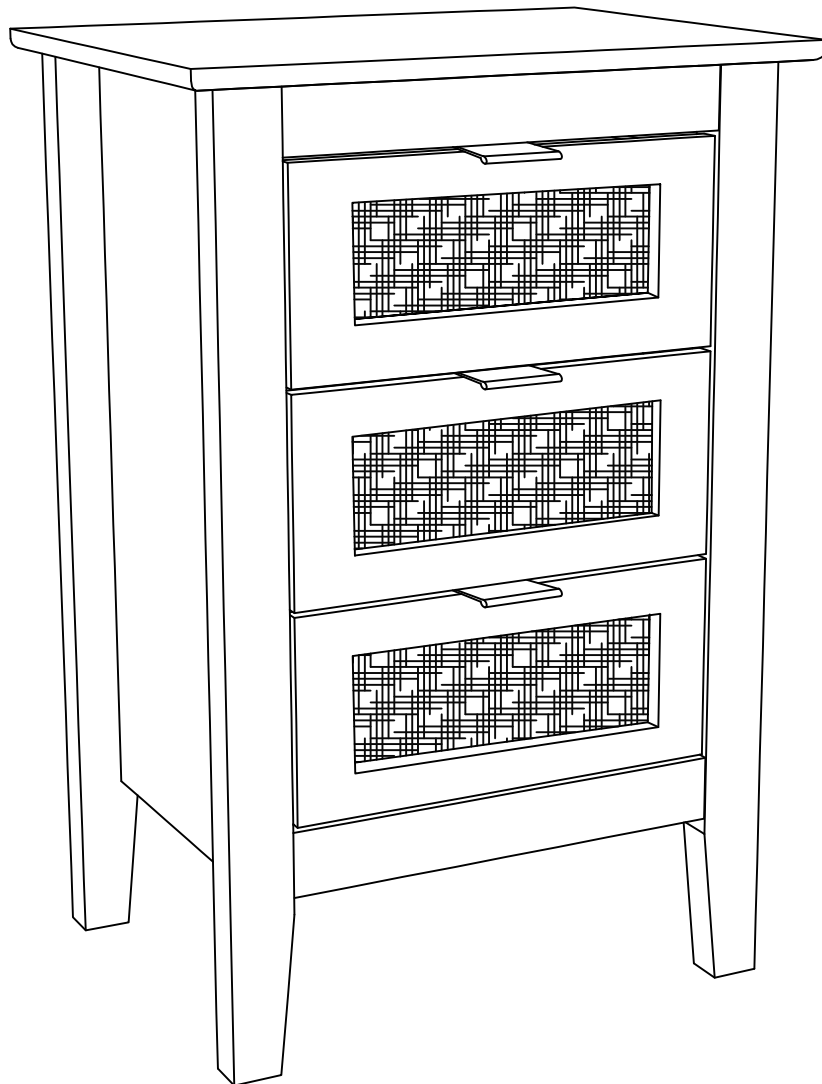
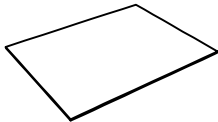
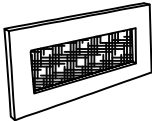
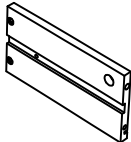
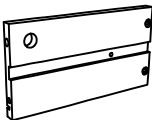

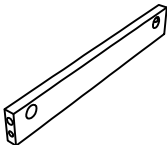
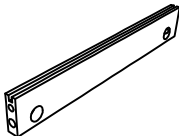



ASSEMBLY INSTRUCTIONS



NO	PART LIST	QTY
1	Top Panel 	1
2	Side Panel L 	1
3	Side Panel R 	1
4	Drawer Front 	3
5	Drawer Box Side L 	3
6	Drawer Box Side R 	3
7	Drawer Box Back 	3
8	Drawer Bottom Ply 	3
9	Front Top & Bottom Horizontal 	2
10	Back Top & Bottom Horizontal 	2
11	Back Panel 	1

NO	HARDWARE LIST	QTY
A	PVC Handle Gold CC32mm 	3
B	Flat Head CB Screw M3 x 12mm 	18
C	Flat Head CB Screw M4 x 32mm 	12
D	Plastic U-Slide L250mm 	6
E	Button Stopper 	6
F	Minifix Fastener Connector D15mm x 9.8mm 	18
G	Cam Dowel Length 33mm 	18
H	Wood Dowel 6mm x 30mm 	16


Read this instruction carefully. Remove all wrapping material, staples and straps from the carton. See hardware and furniture part list for guidance. Be sure you have all wooden furniture part on a clean and a flat surface, such as carpet or rug, to prevent from being scratched.

CAUTION :


1. Do not Full Tighten the nut or screw until all ready to assemble.
2. Do not Over Tighten the nut or screw to avoid causing damages to the thread.
3. Keep all hardware part of reach of children.



SCREW DRIVER
NOT INCLUDE

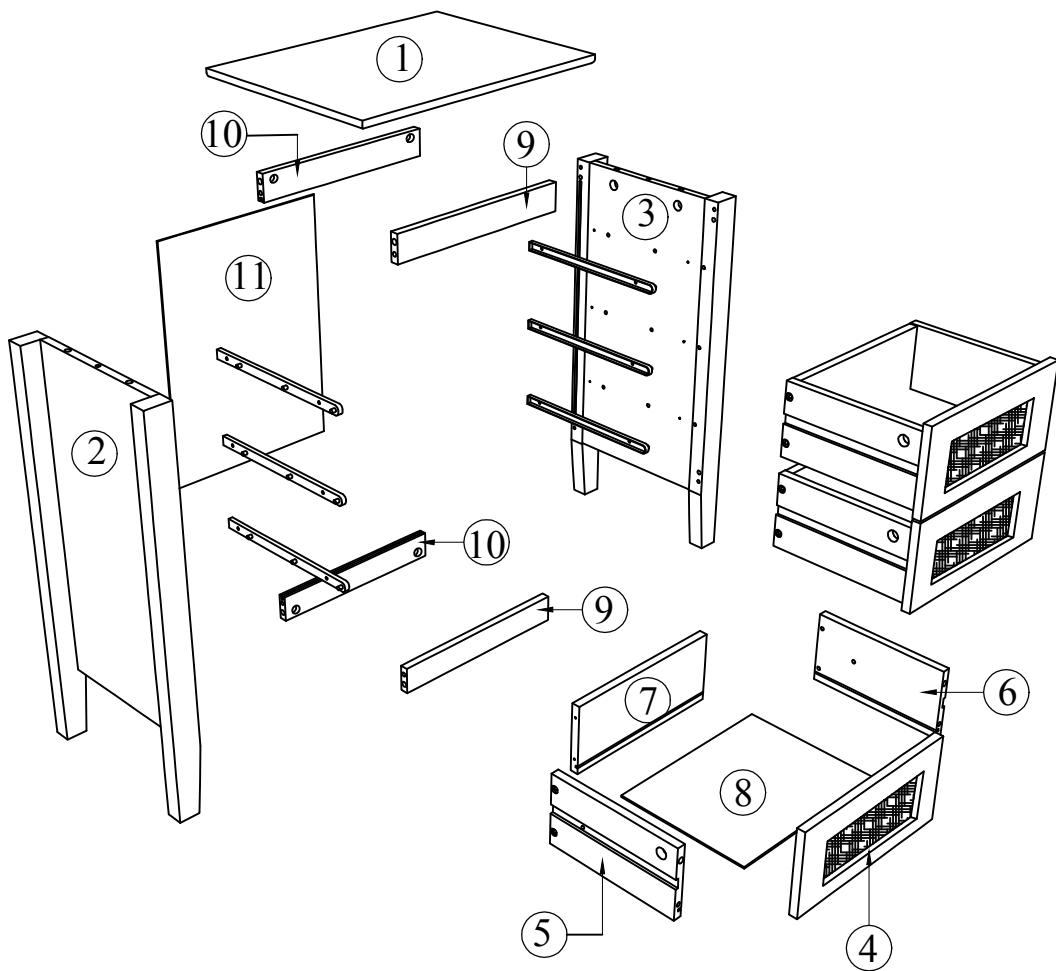


STEP 1

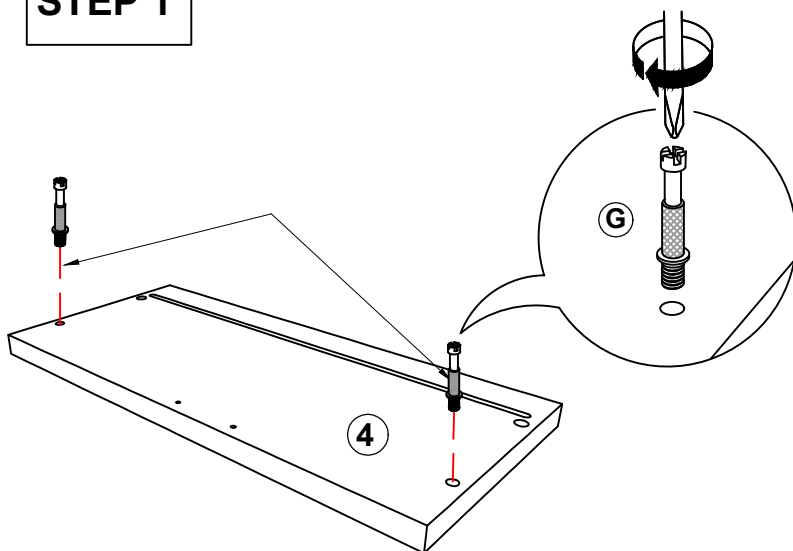


4		X 3
G		X 6

STEP 2

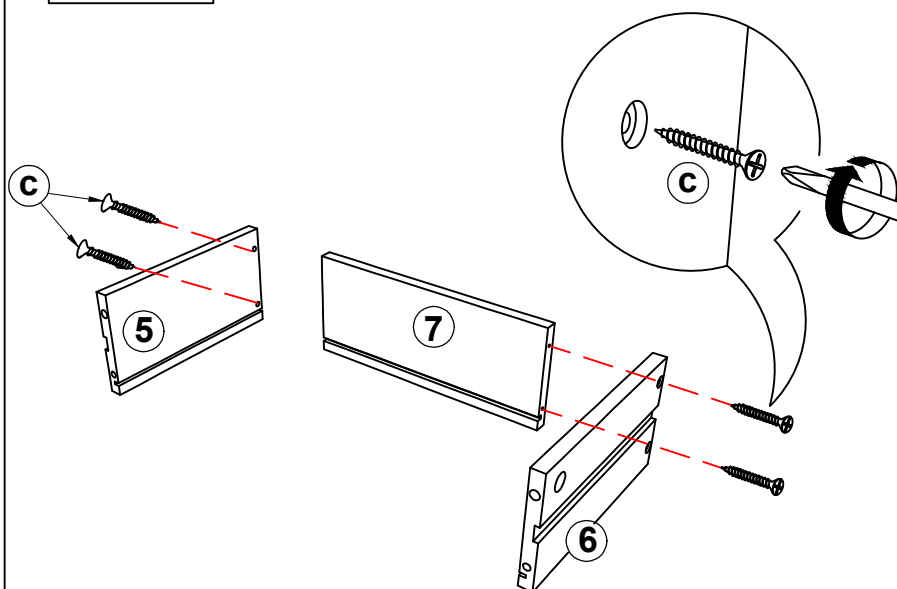


5		X3
6		X3
7		X3
C		X12


STEP 3

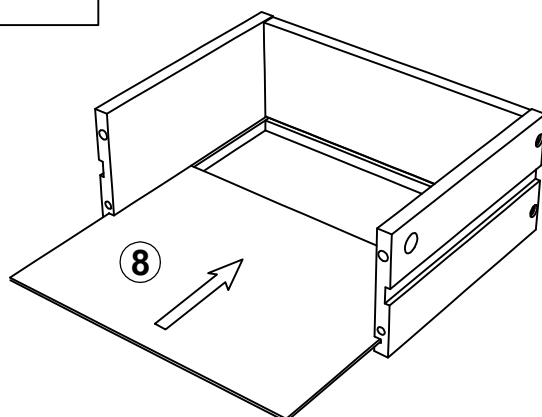


8		X3
---	--	----

STEP 4

④		X 3
Ⓐ		X3
Ⓑ		X6
Ⓕ		X6
Ⓗ		X6

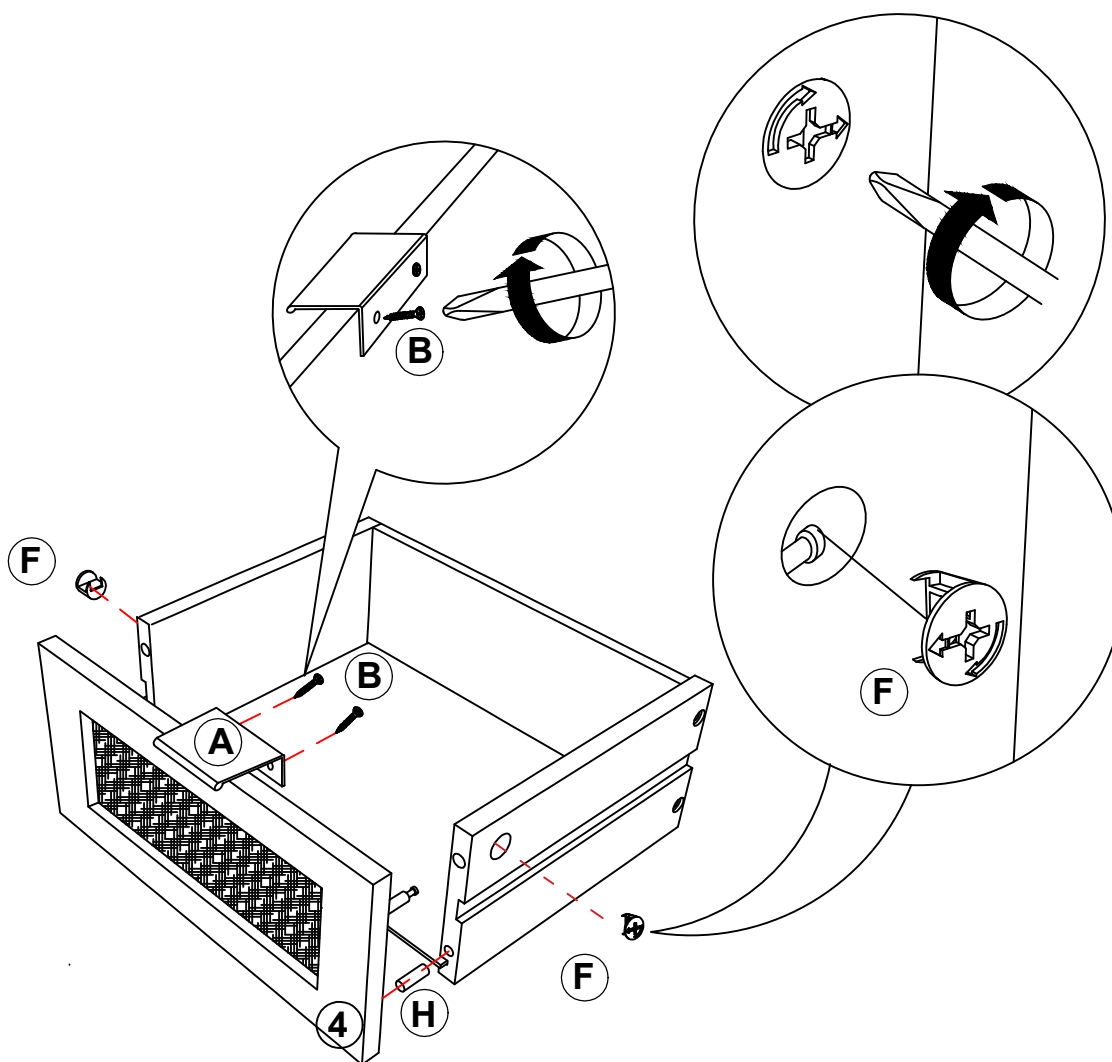



STEP 5

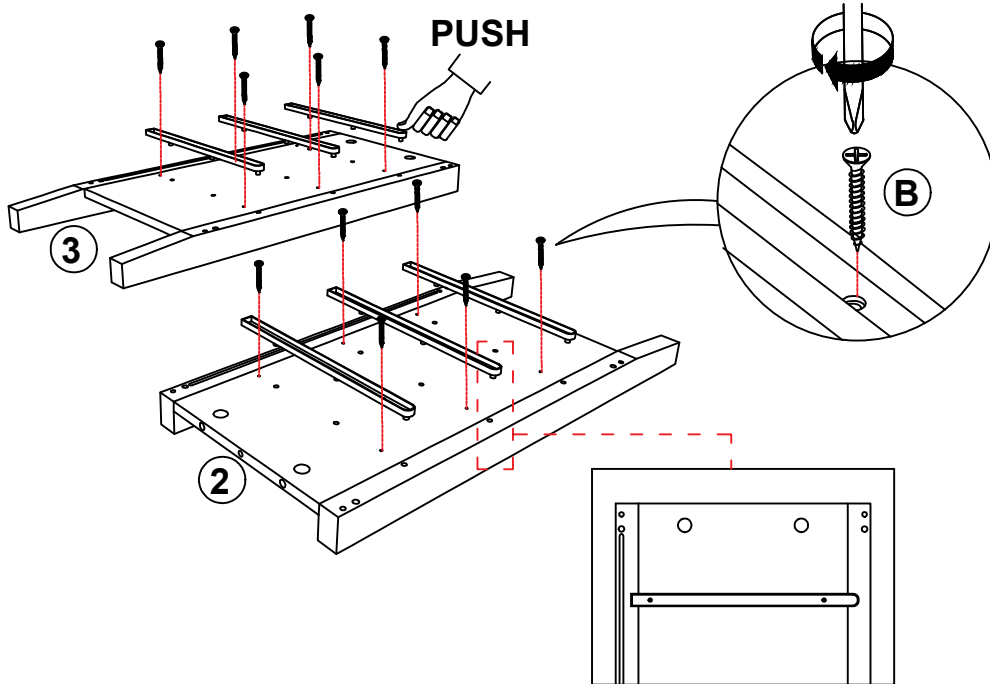


2		X1
3		X1
D		X6
B		X12

STEP 6

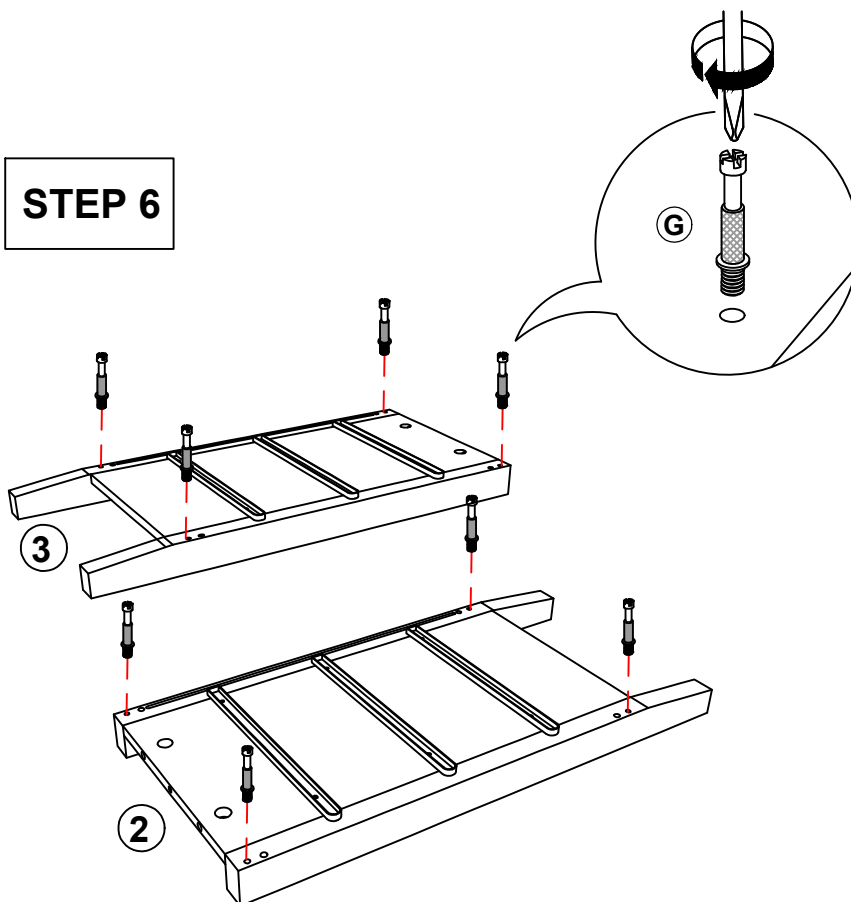


G		X8
----------	---	-----------

STEP 7

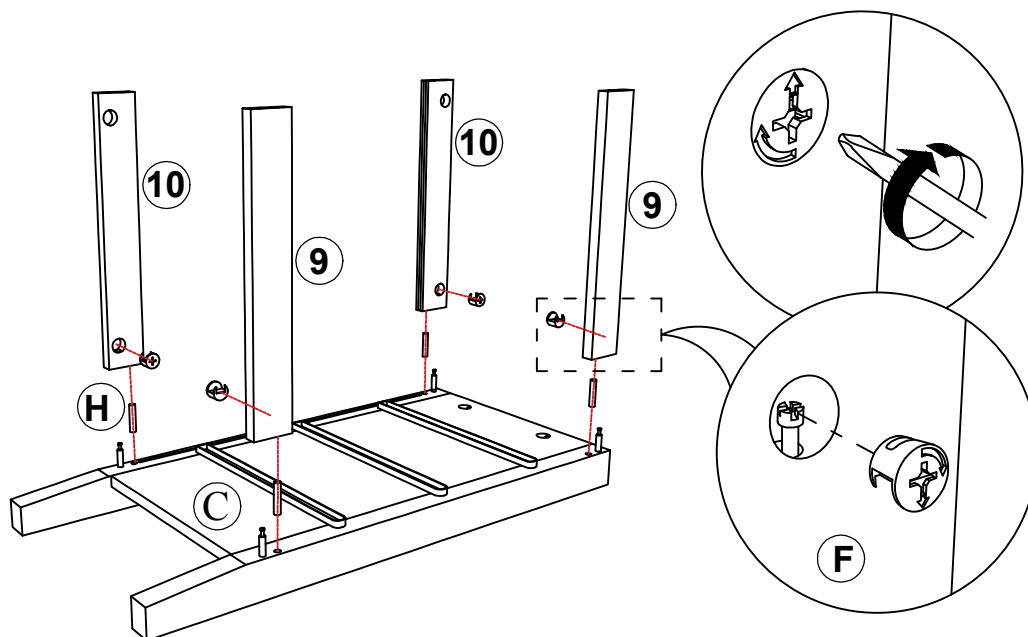


3		X1
9		X2
10		X2
F		X4
H		X4

STEP 8

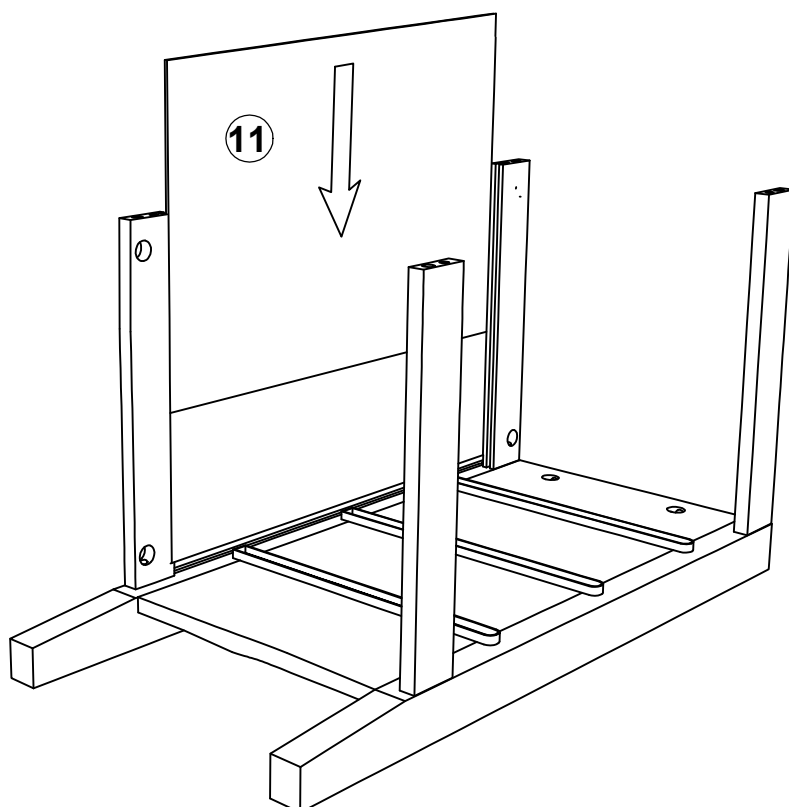


11		X1
----	--	----

STEP 9

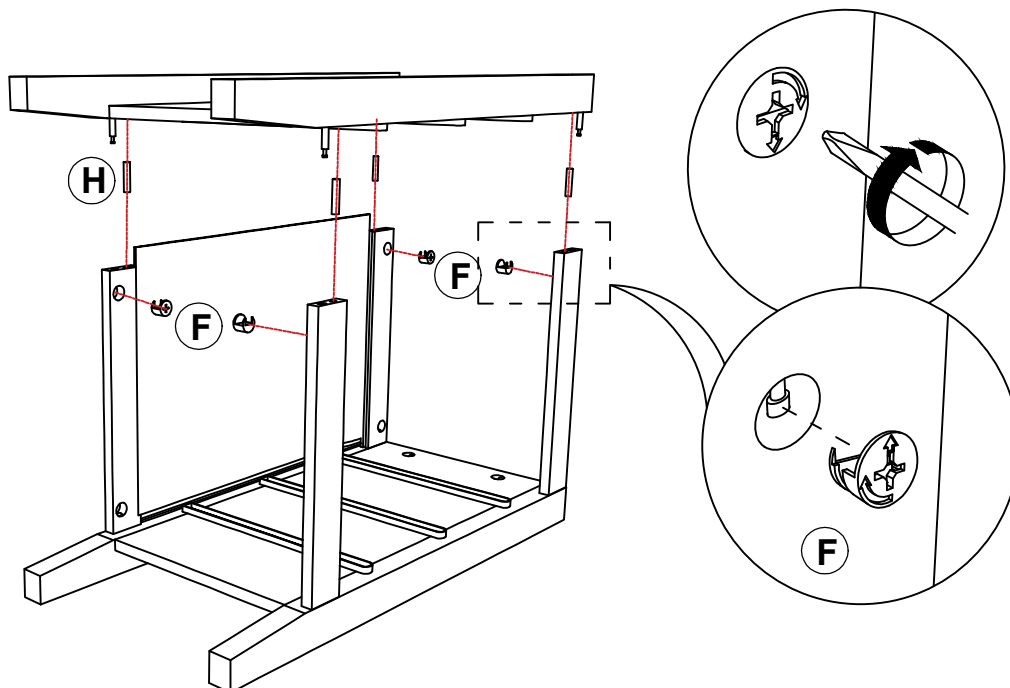


(F)		X4
(H)		X4


STEP 10

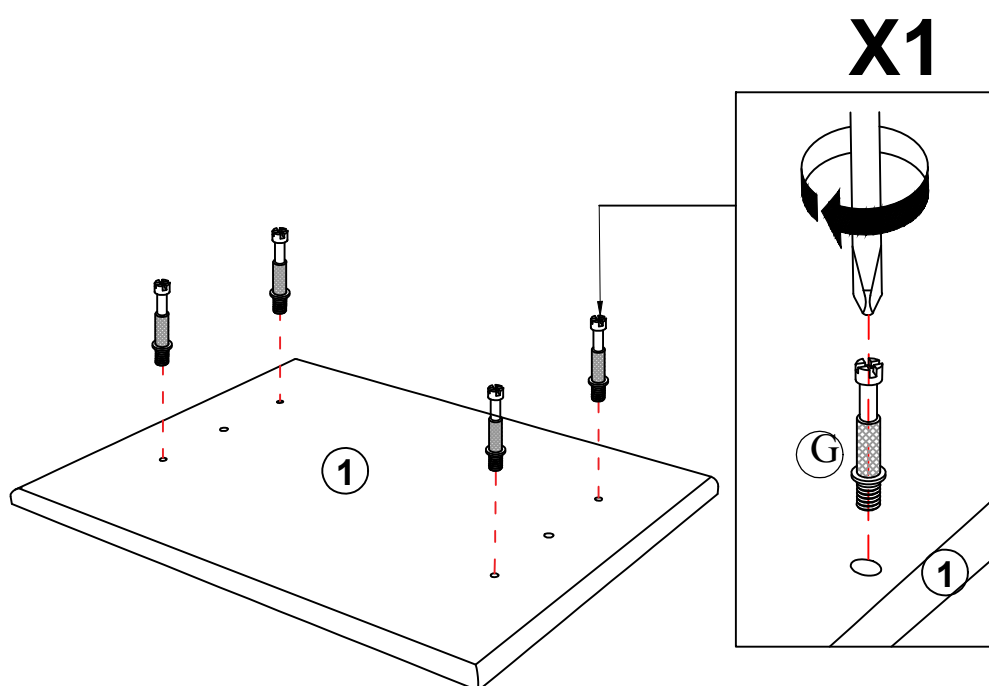


(G)		X4
(1)		X1

STEP 11

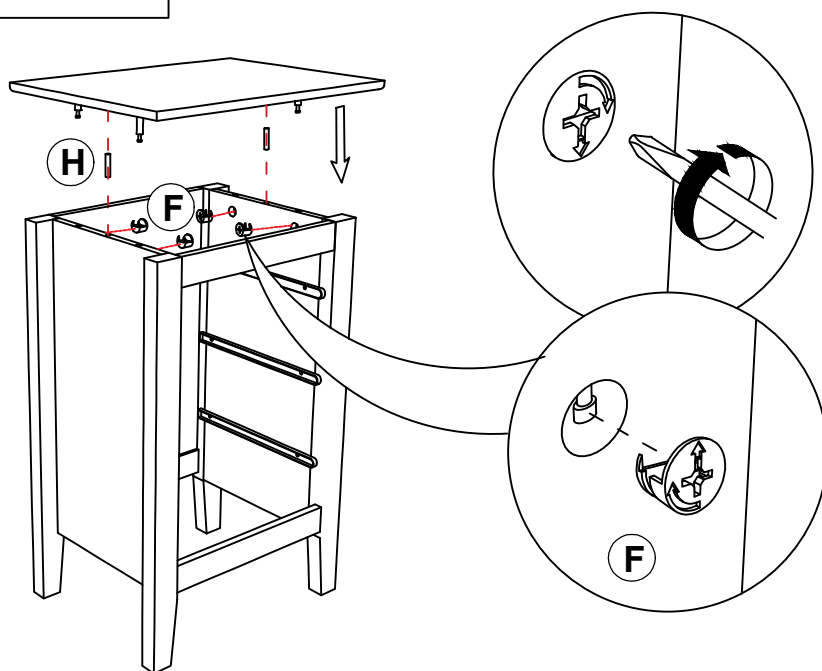


1		X1
H		X2
F		X4

STEP 12

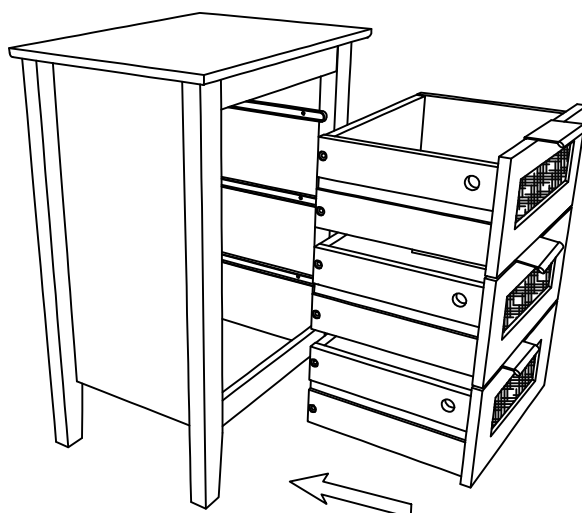

STEP 13

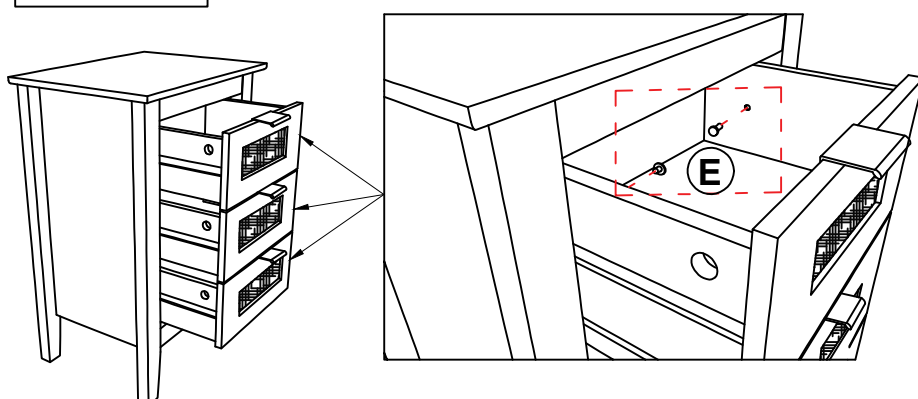

E		X6
---	---	----