


Assembly Instructions

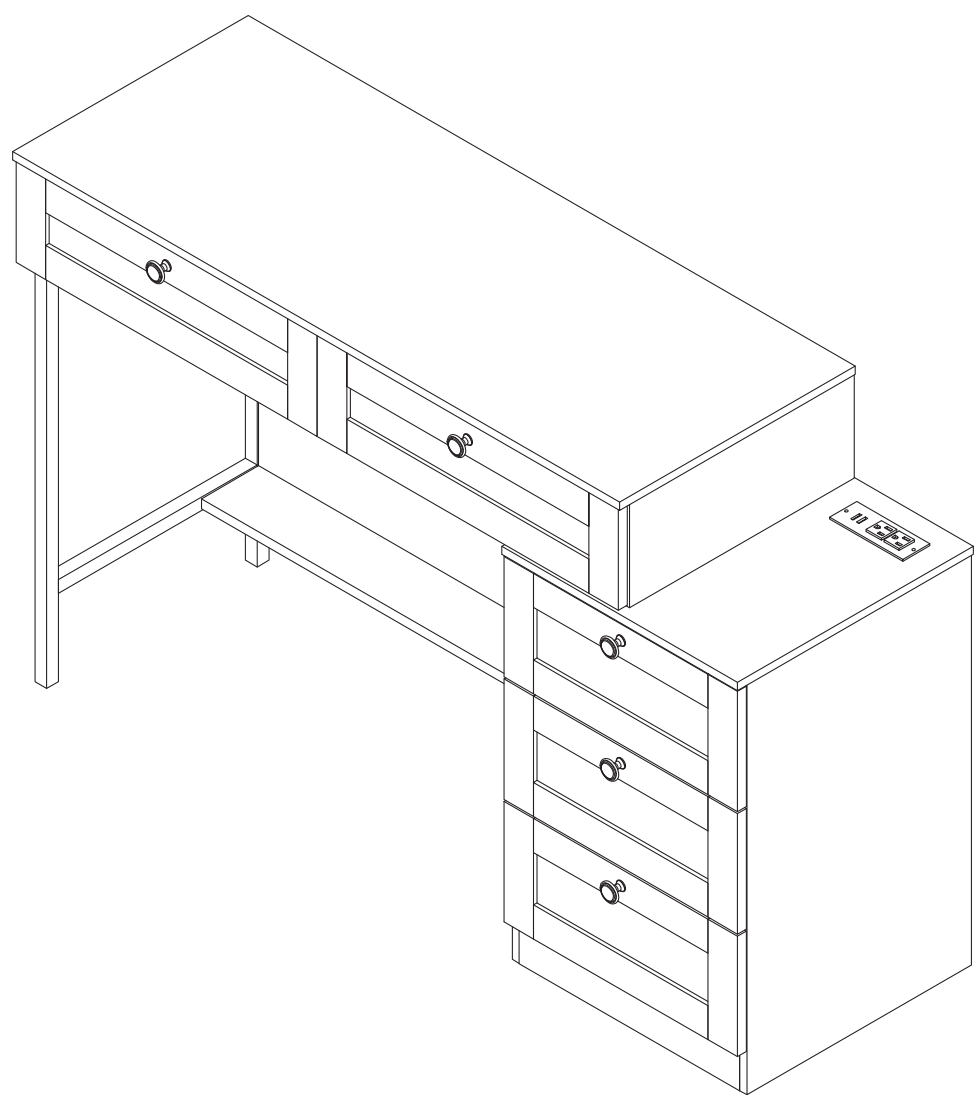

CUSTOMER CARE



HAPPY

Congratulations
Happy shopping

Feel free to share with your friends or family
Thank you for your 5-star feedback and positive
reviews to help others
Good advice leads to the best service




NOT HAPPY

We apologize for the bad shopping experience
Any defects, broken, missing pieces, delays or
accidents Please contact us as soon as possible





ITEM SPECIFICATION

SKU	Product Dimension	Package Dimension	Color
A	48.43*15.75*30.71 in	45.08*19.29*5.91 in	Pink







Part List

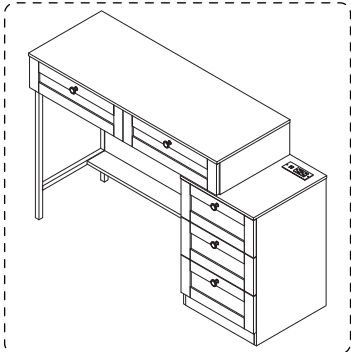

Open the package, and put the item on the mat with care. Please install it carefully to ensure your fingers will not be scratched.

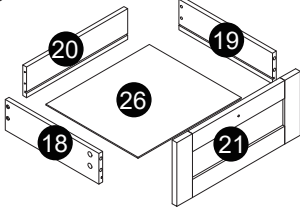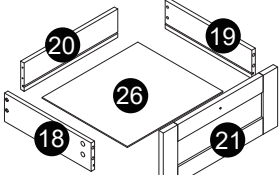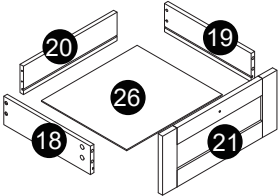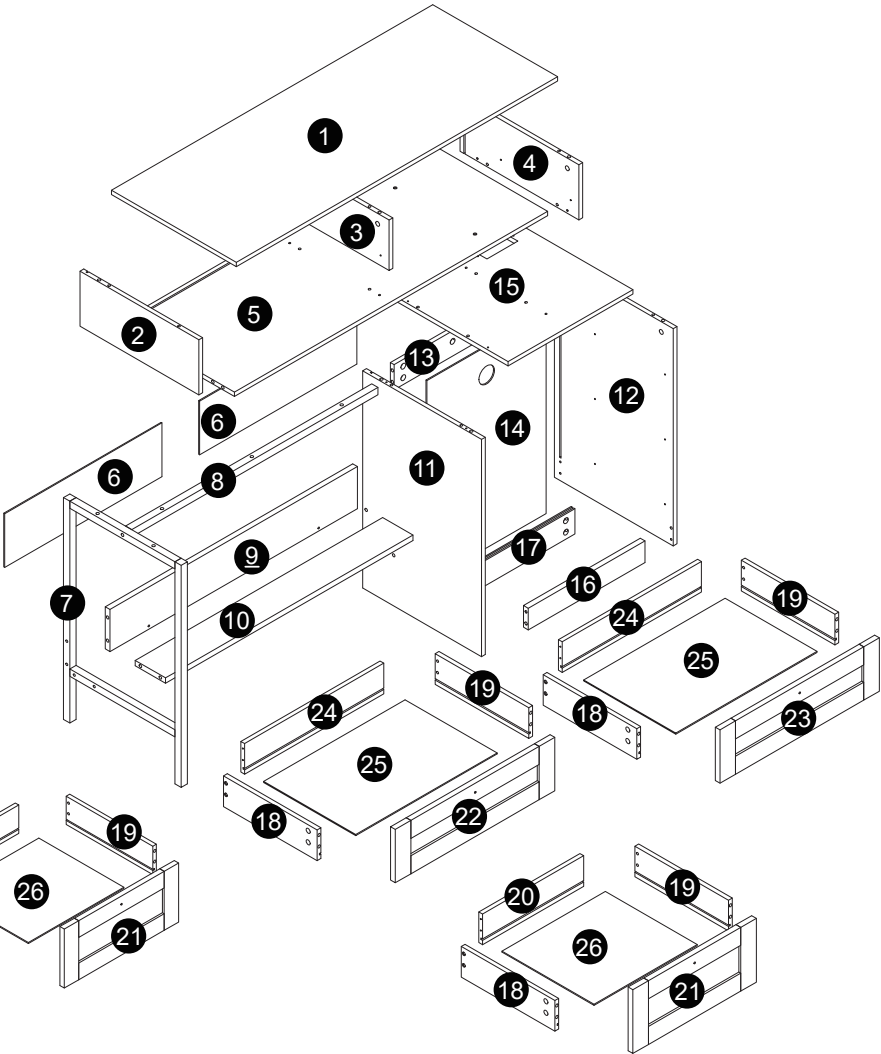

Hardware List

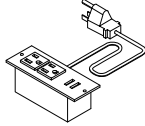A  M6*35mm ×45 (+1)	B  φ15*9mm ×45 (+1)	F  M4*18mm ×5 (+1)	G  M3*12mm ×52 (+1)	J  ×5
L  CL DL ×5	R  CR DR ×5	M  ×12 (+1)	S  φ15mm ×4 (+1)	T  ×73 (+1)
W  M3.5*14mm ×2 (+1)	K  ×1	Y  M6*30mm ×22 (+1)	Z  M4*30mm ×28 (+1)	U  M6*30mm ×6 (+1)
X  M6*15mm ×2 (+1)	N  M6*50mm ×8 (+1)	P  ×8 (+1)	Extra white cam  ×2	





Start...

Step1



A  ×4
Y  ×6
L  CL ×2
R  CR ×2
G  ×8

Make sure the Wooden Dowel Pins is fully immersed in the holes to avoid causing the top of the panel to penetrate during the next step of installation.




Installation method of three in one bolt

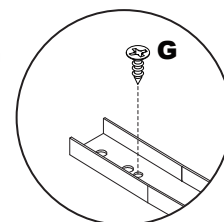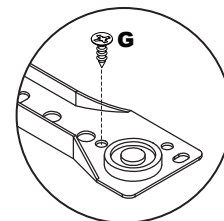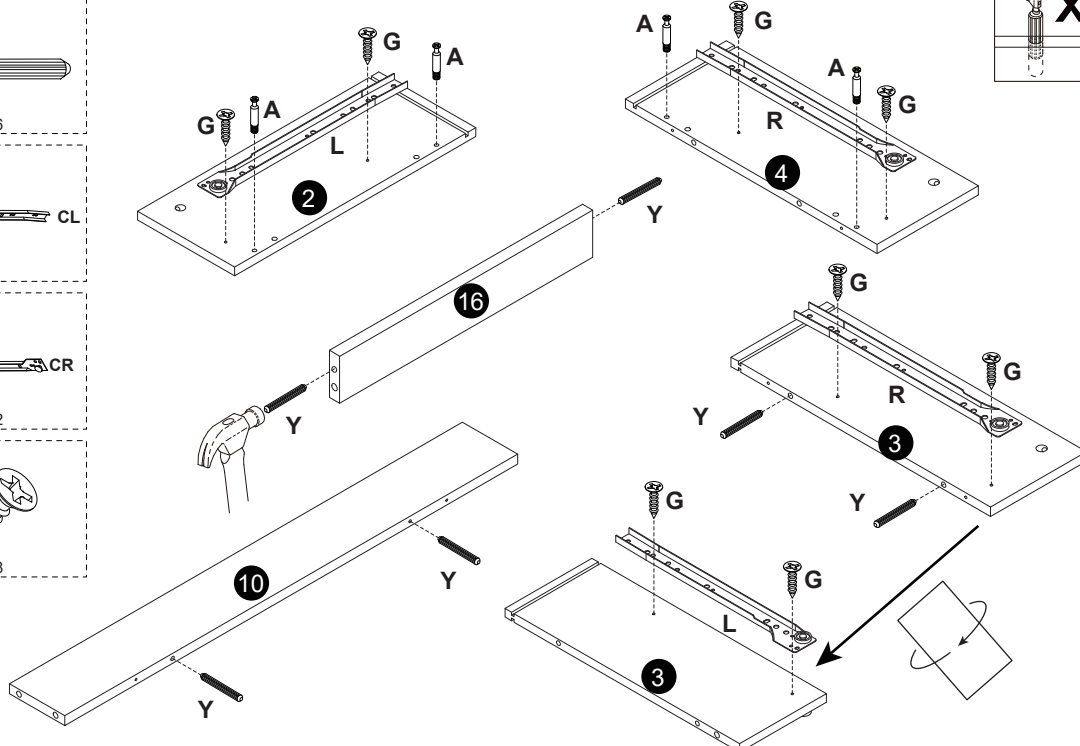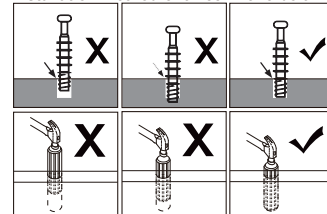



| Step2

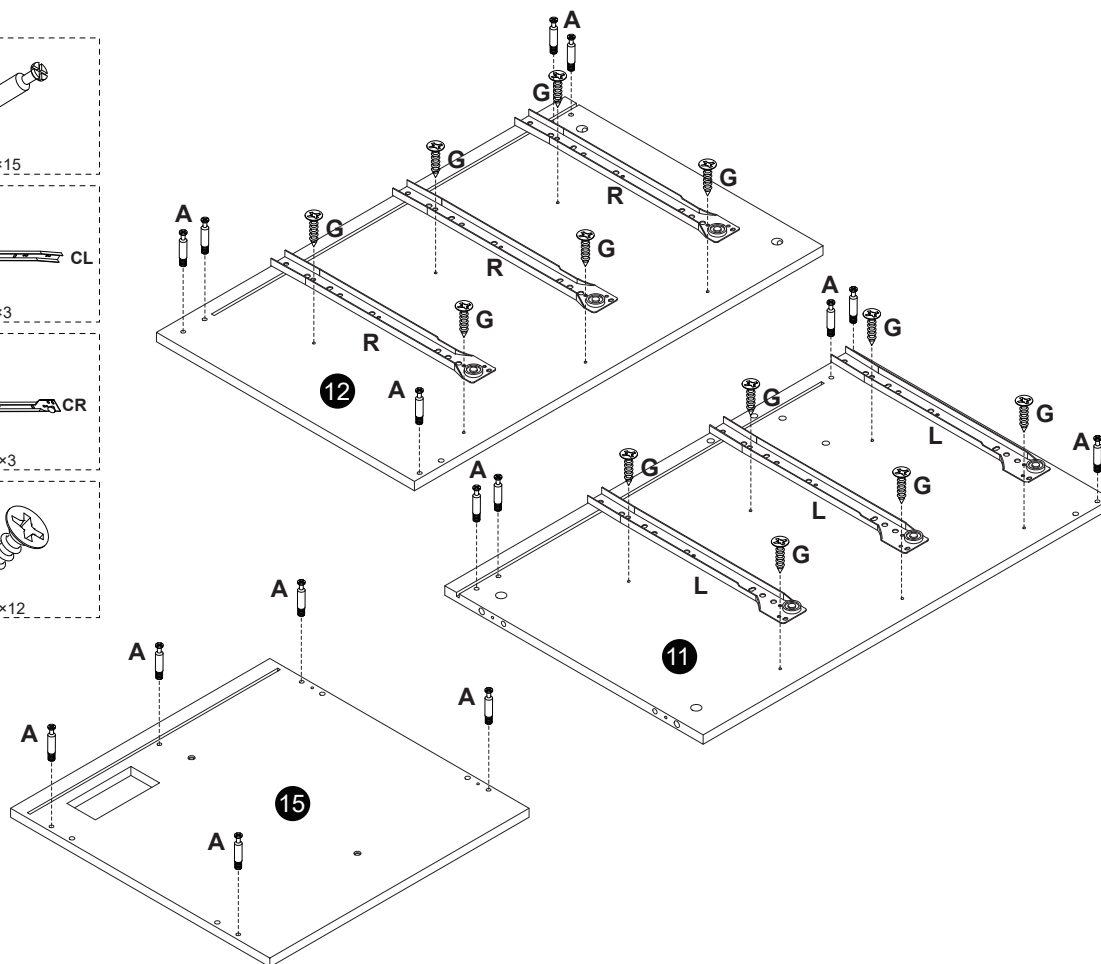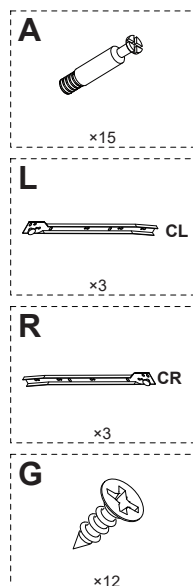



| Step3

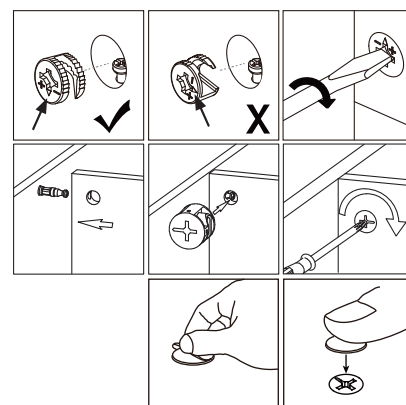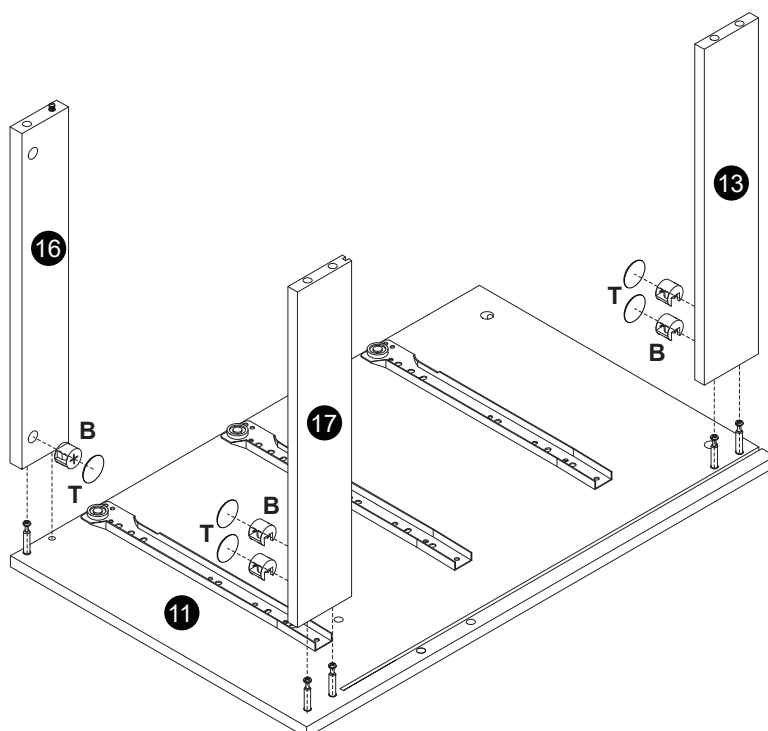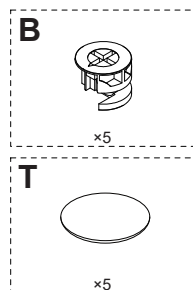




| Step4

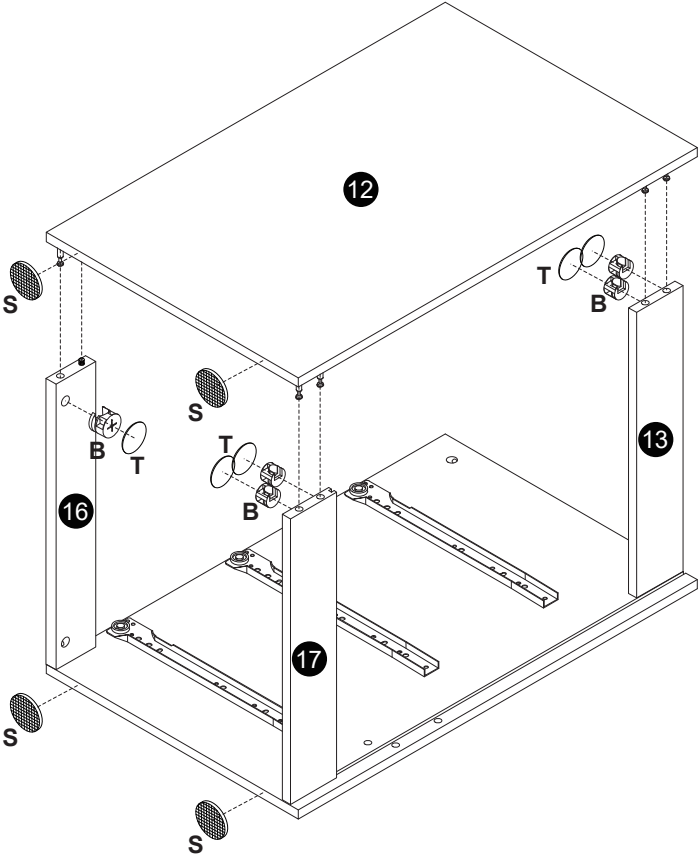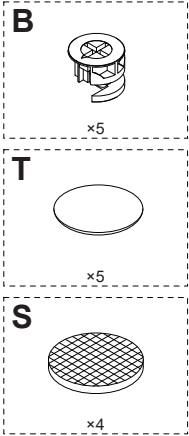



| Step5

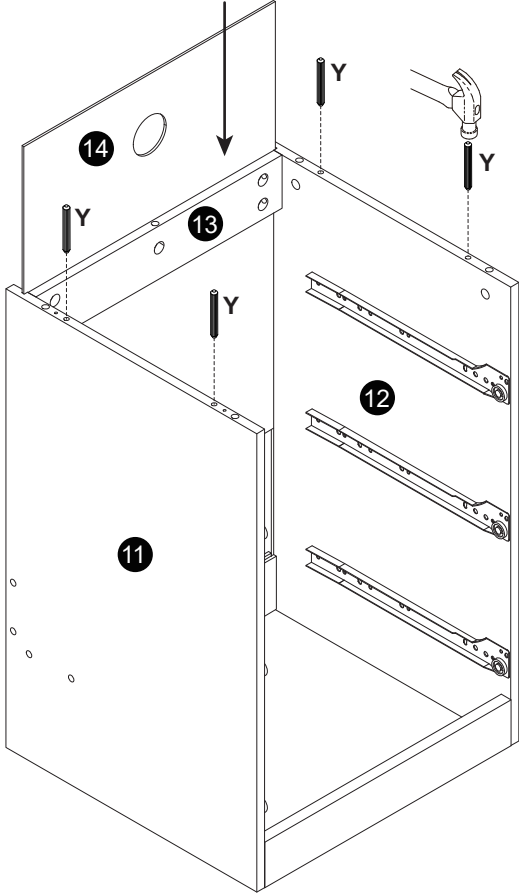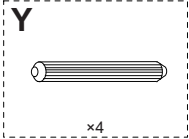



| Step6

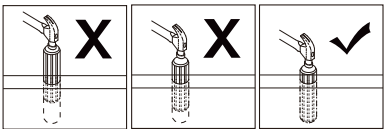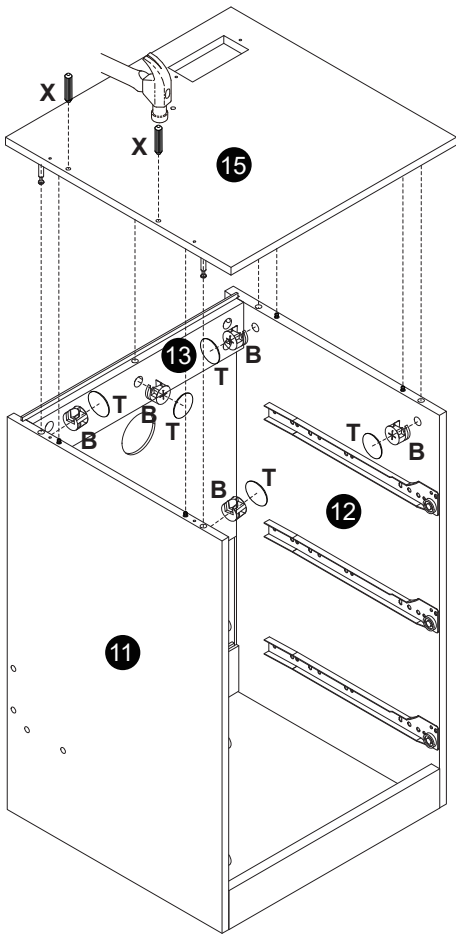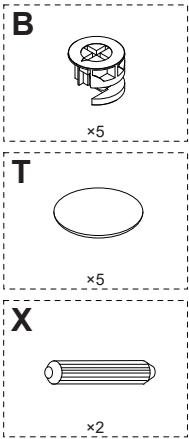




| Step7

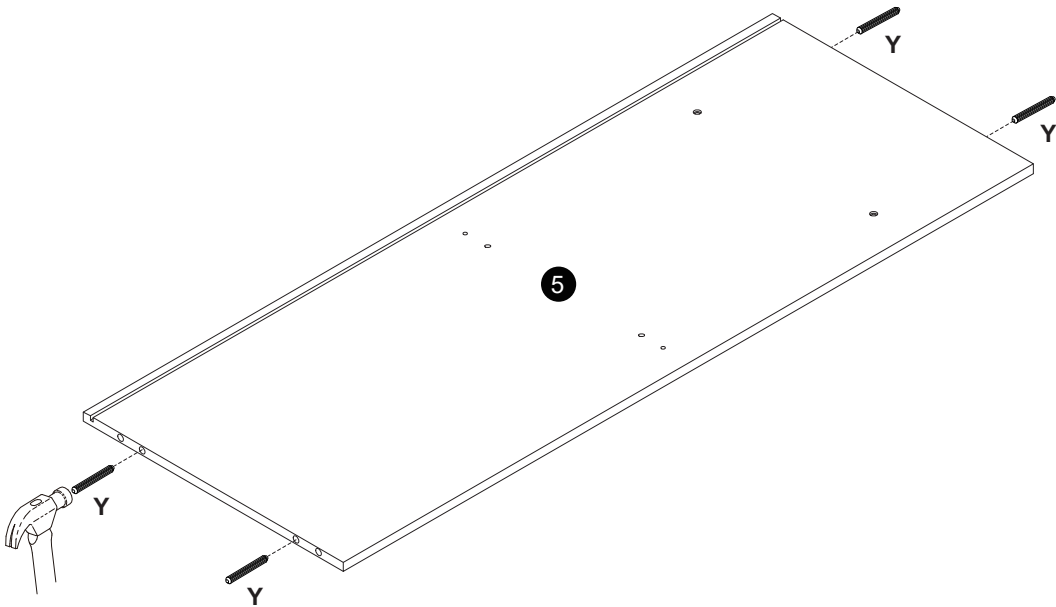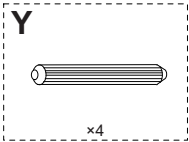



| Step8

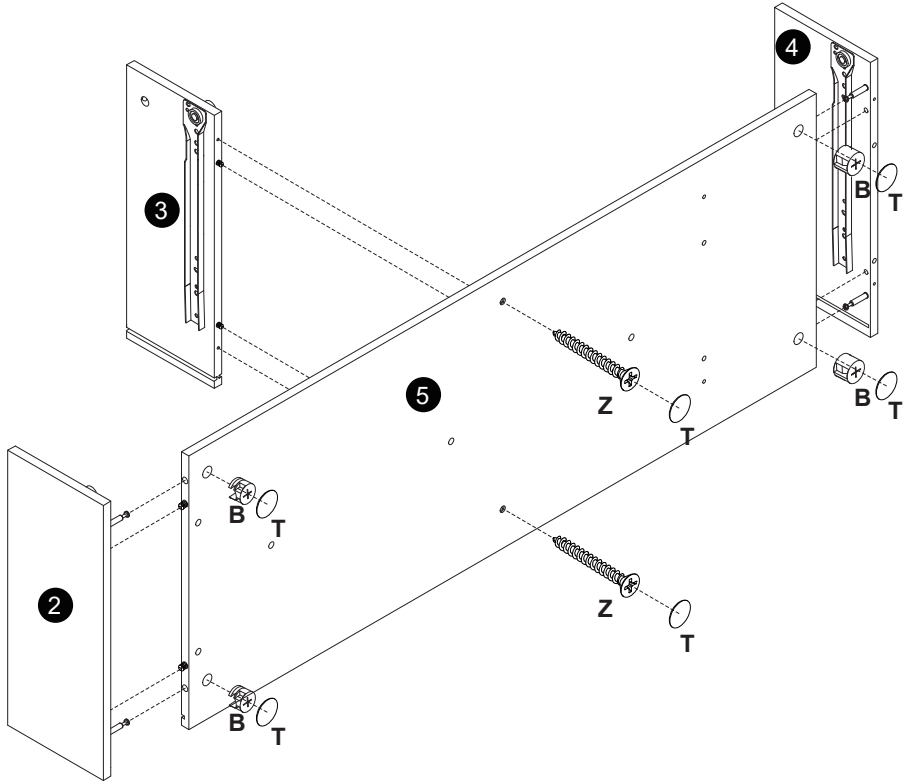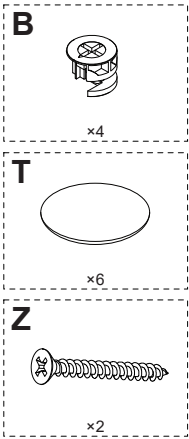




| Step9

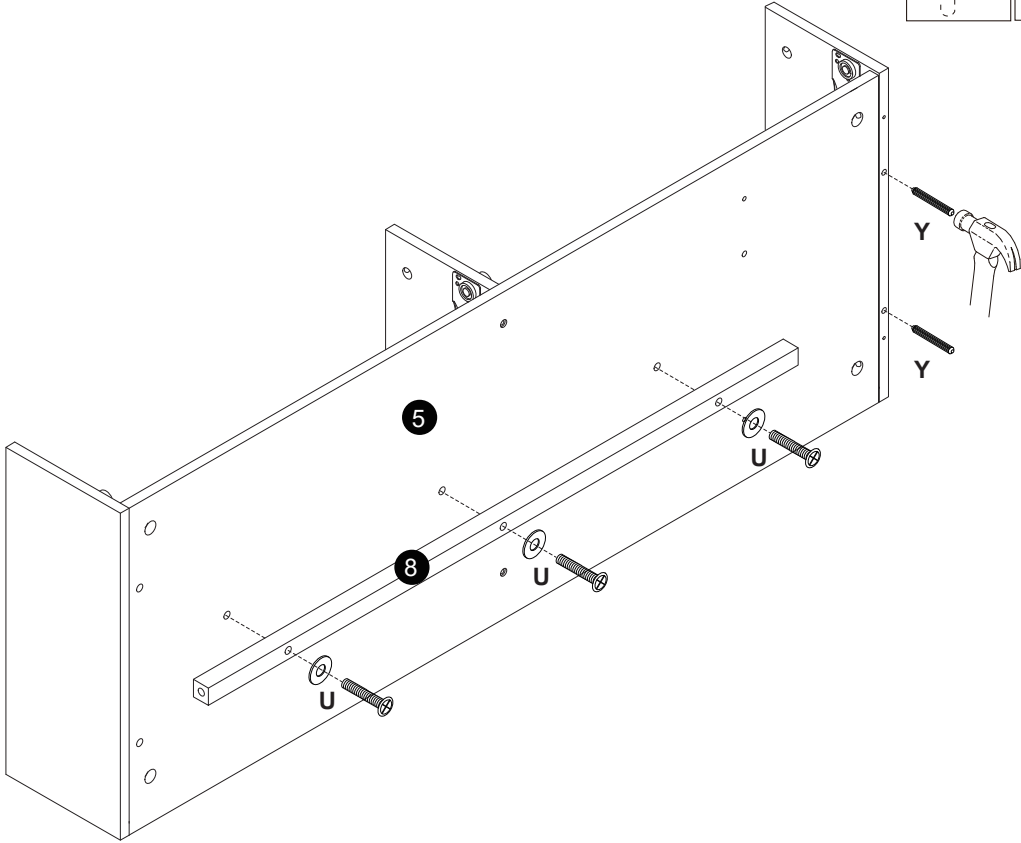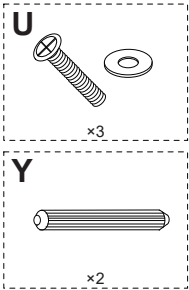




| Step10

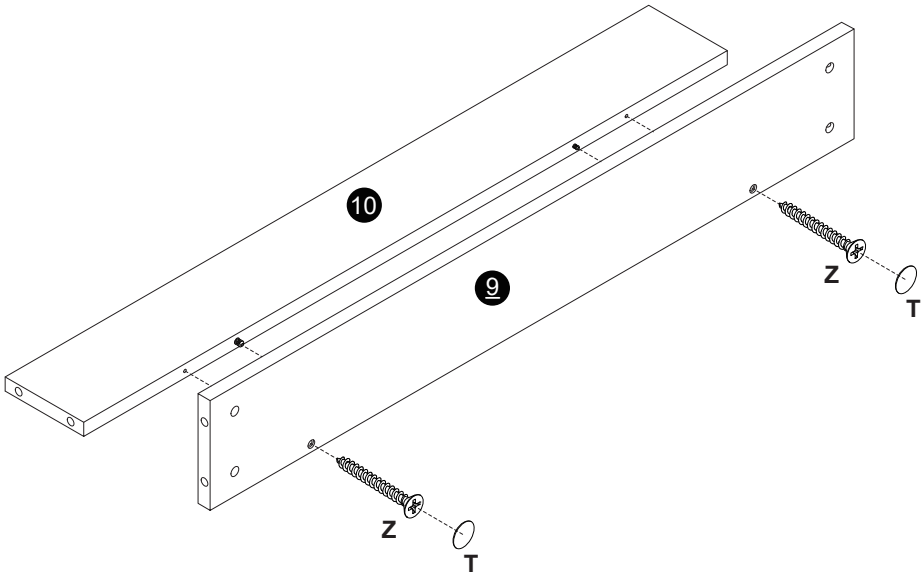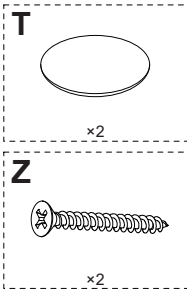



| Step11

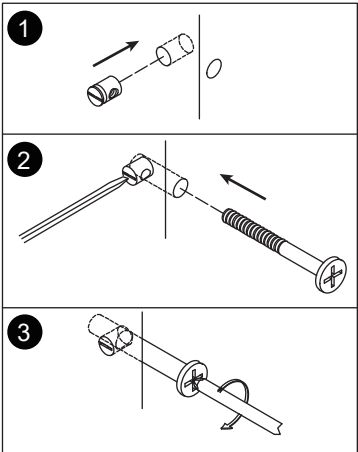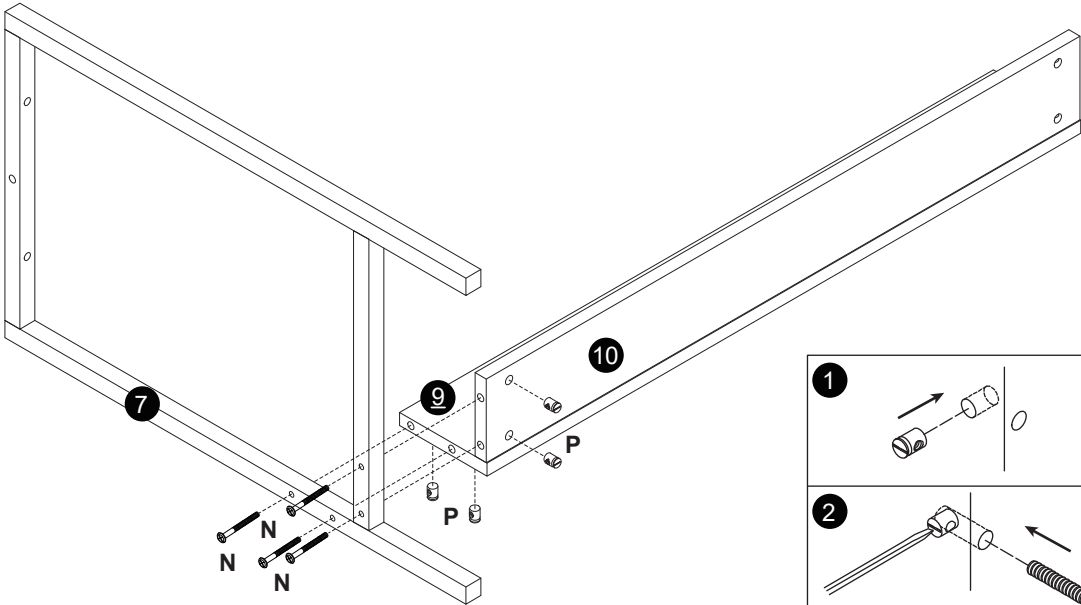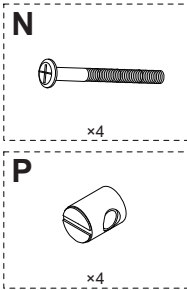



| Step12

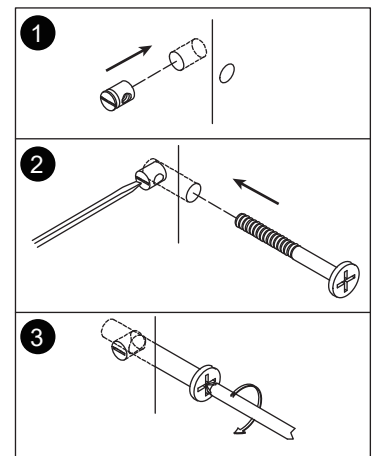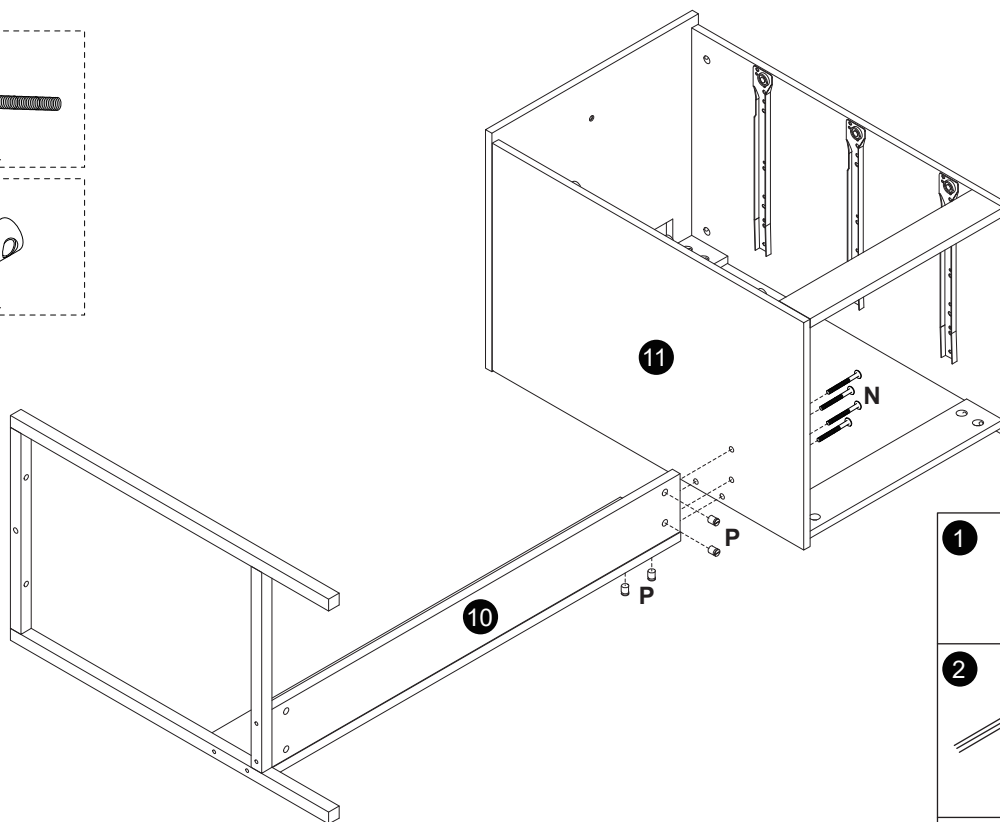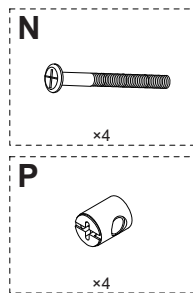








| Step13

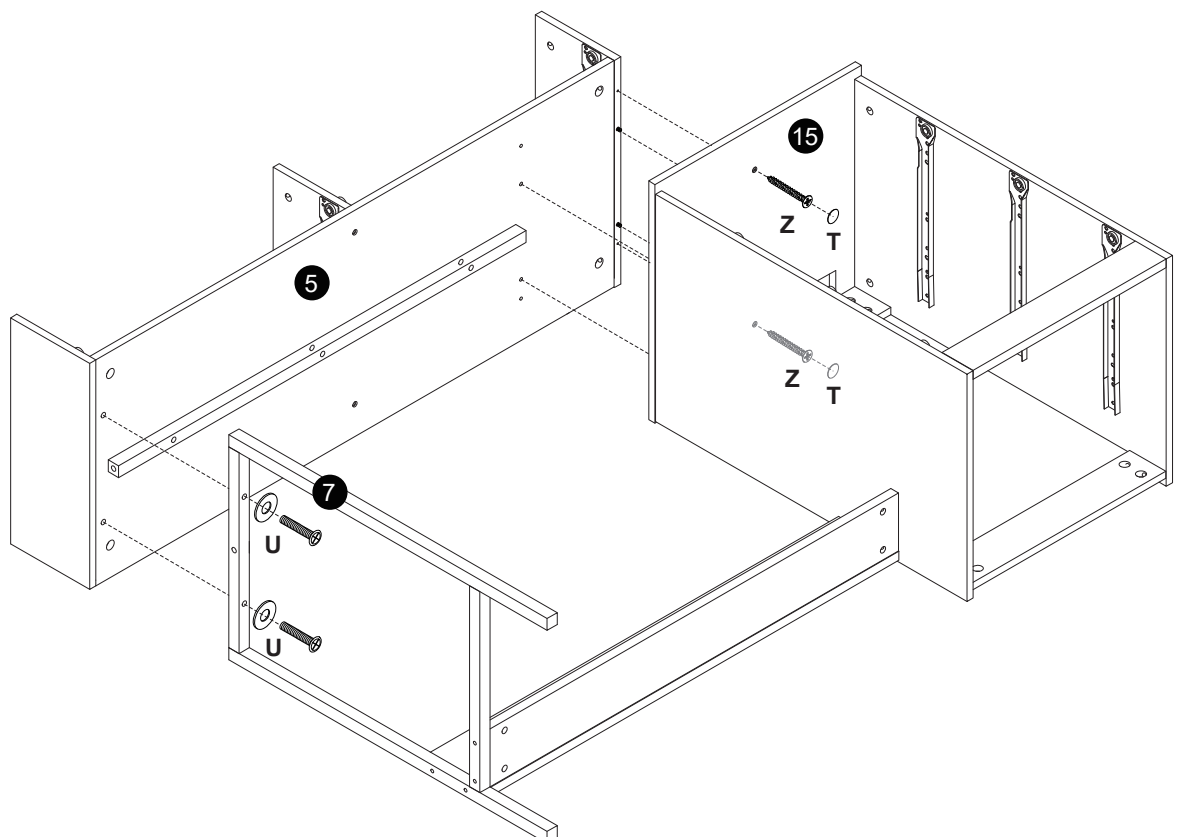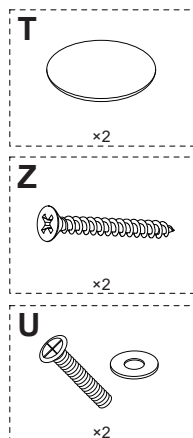



| Step14

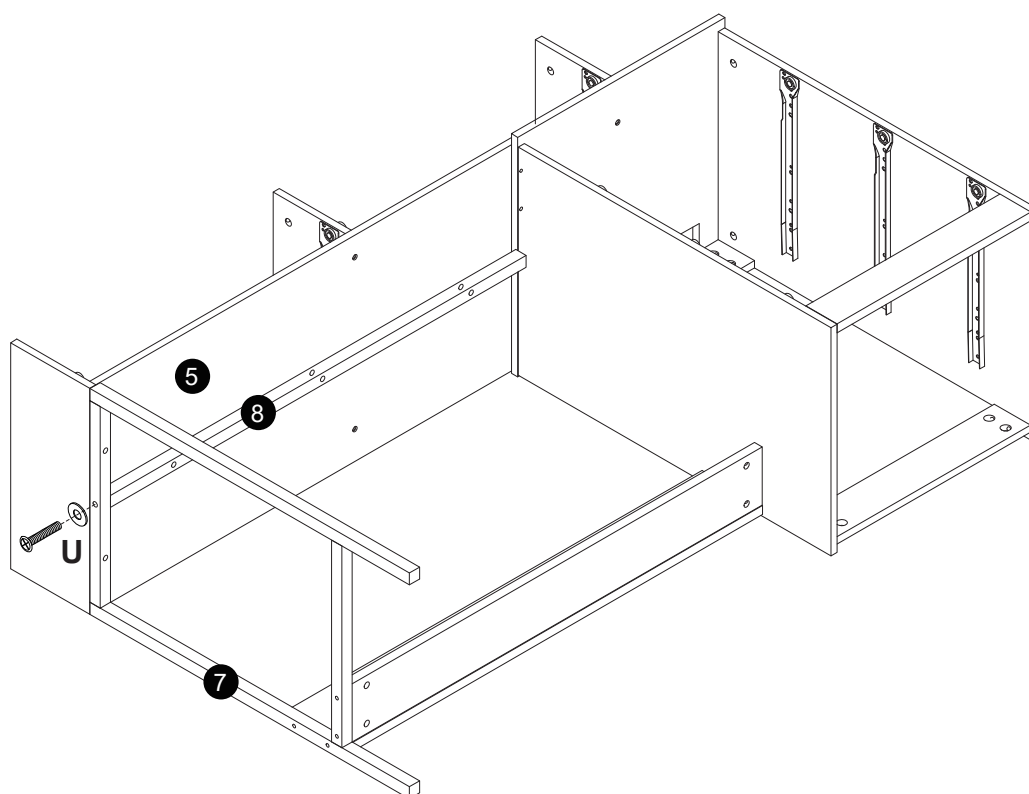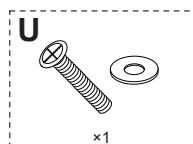




| Step15

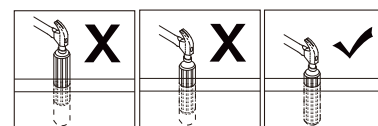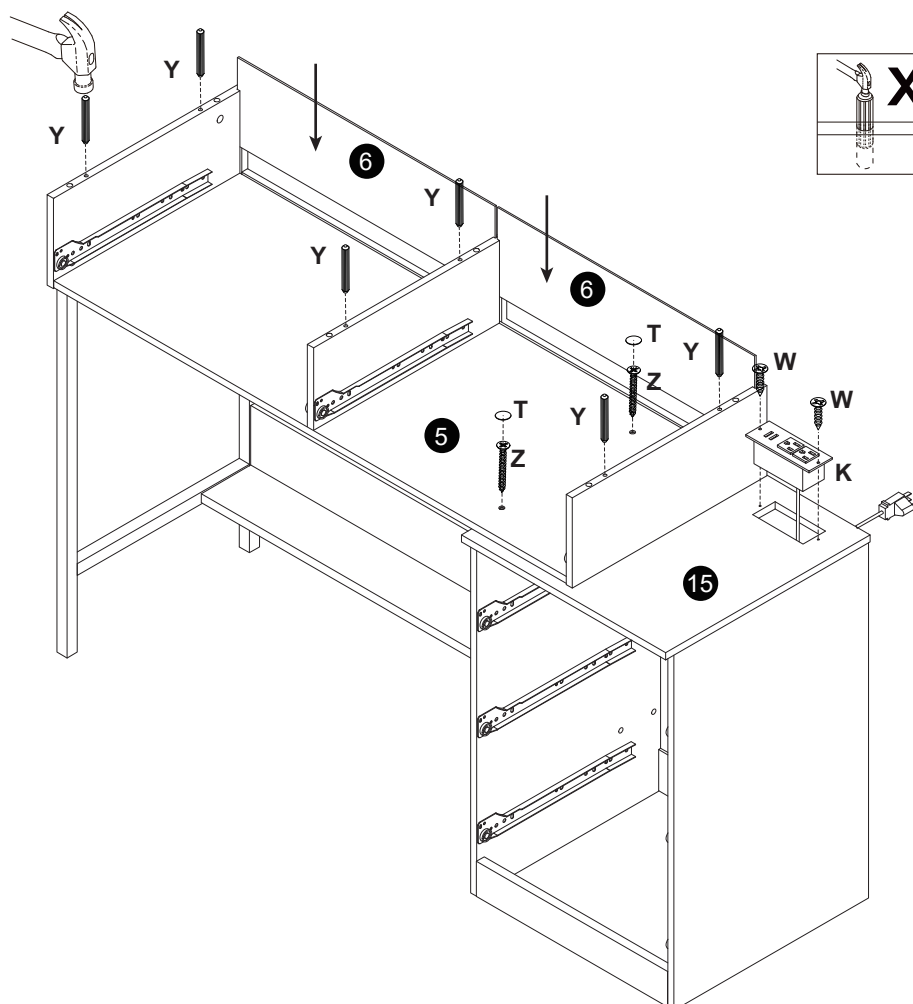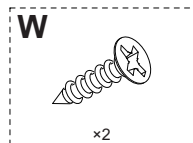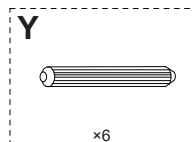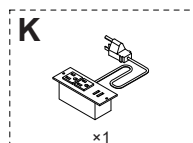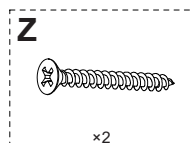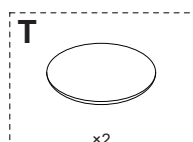




| Step16

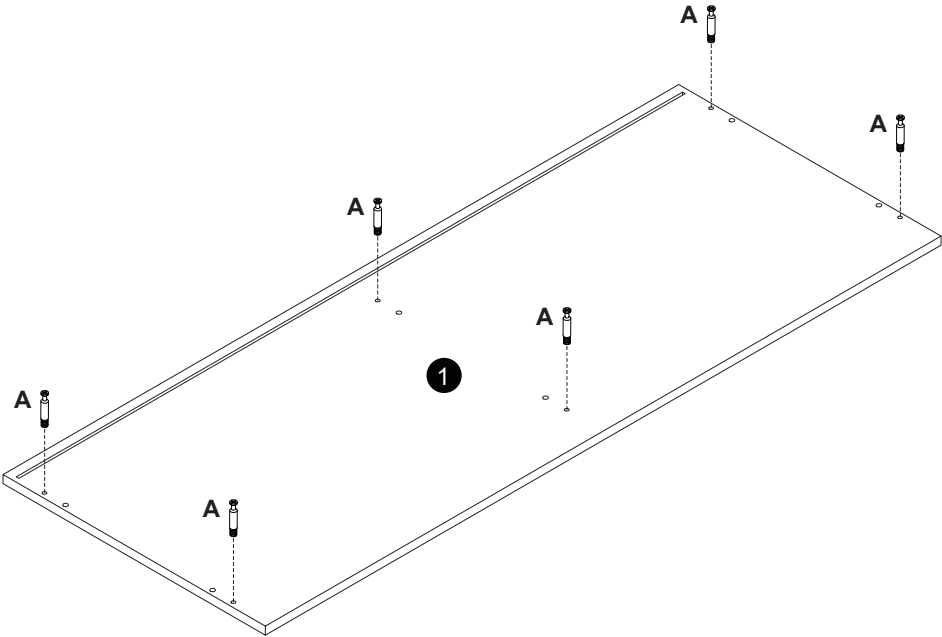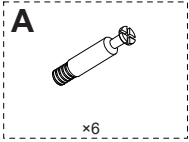




| Step17

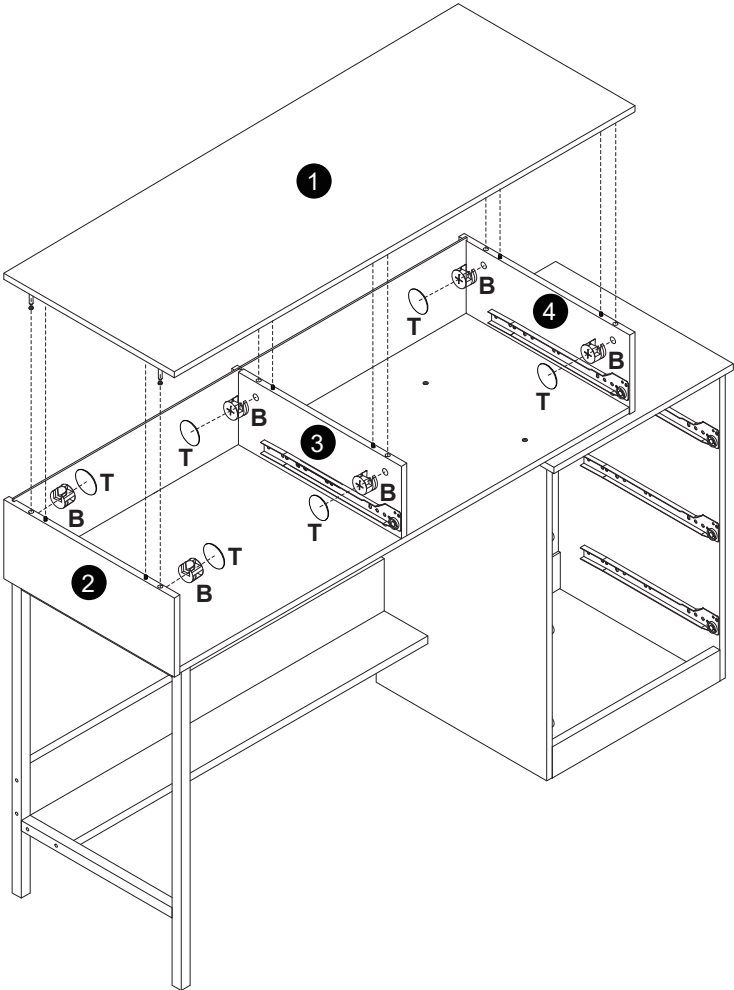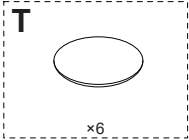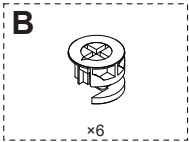



| Step18

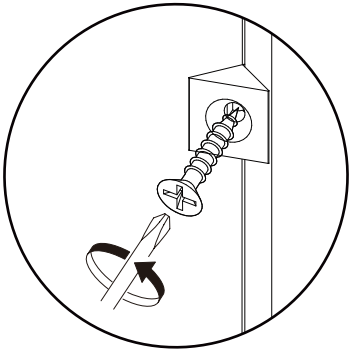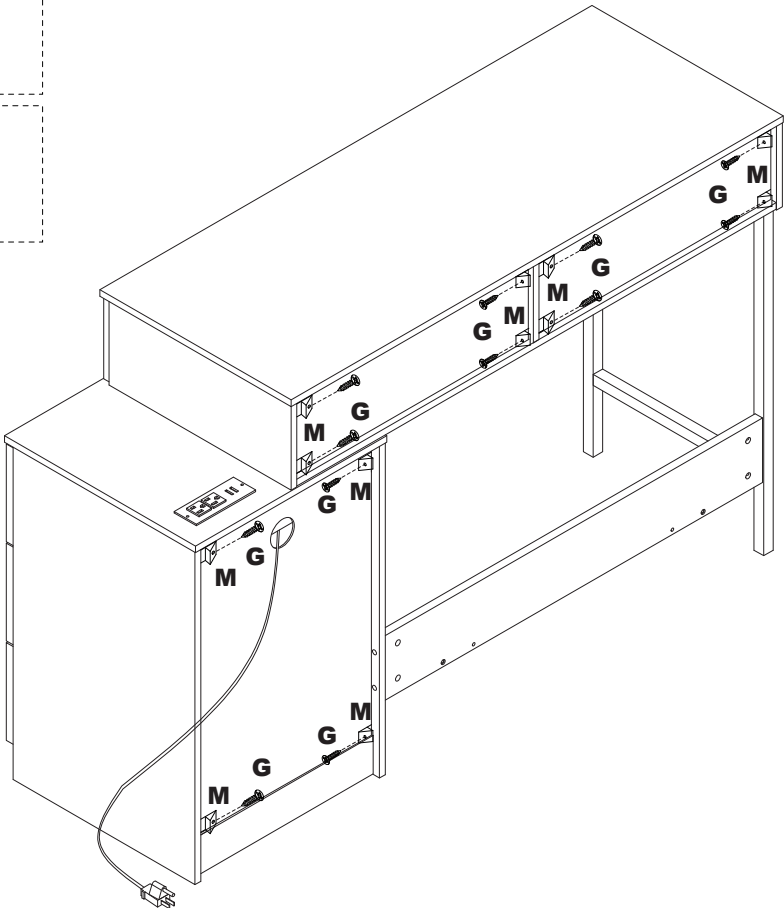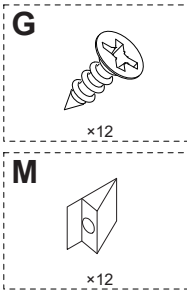

| Step19

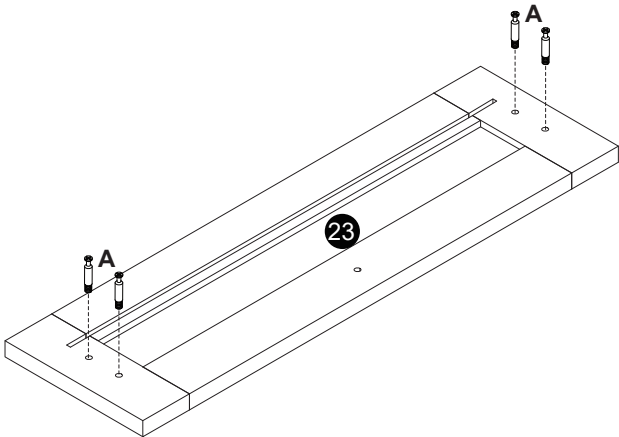
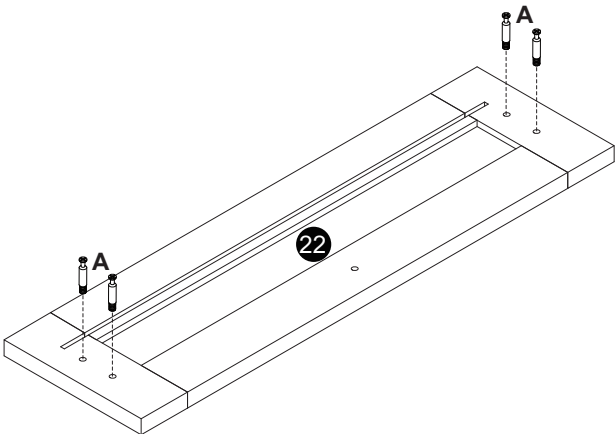
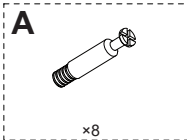


| Step20

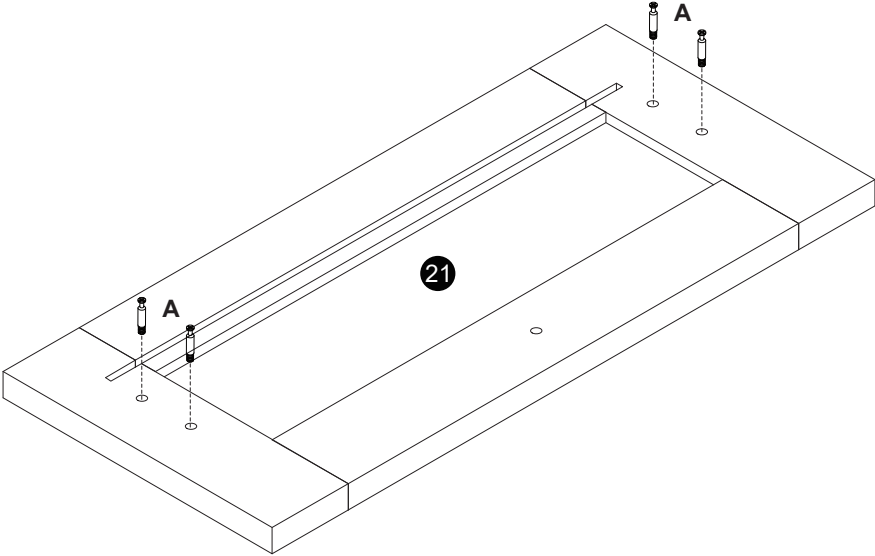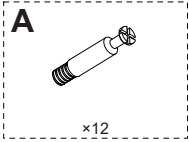




x3

| Step21

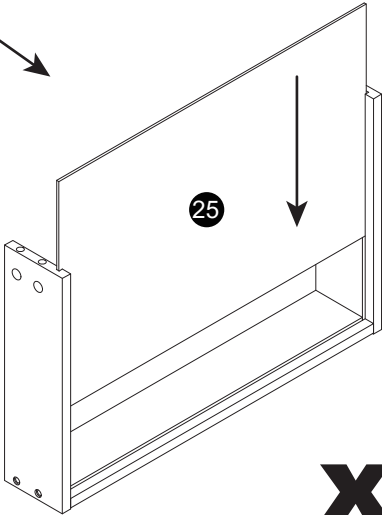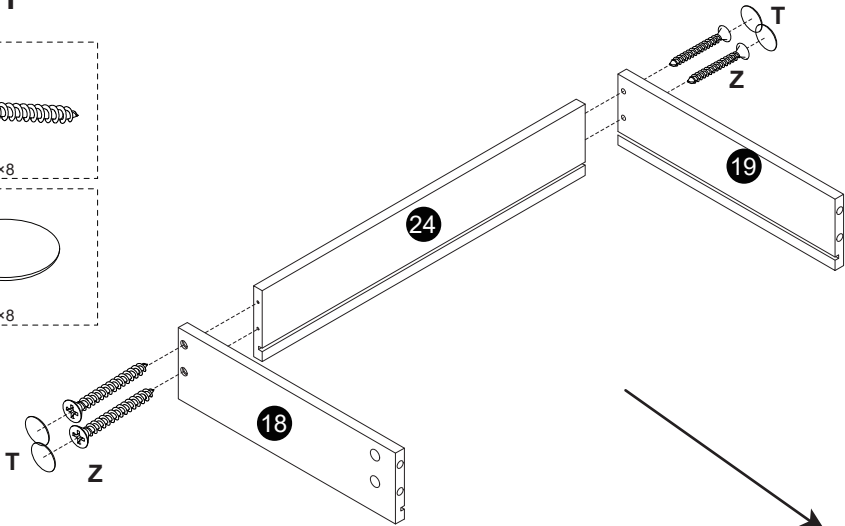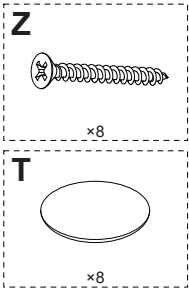



x2

| Step22

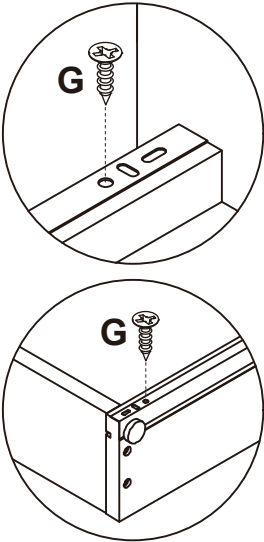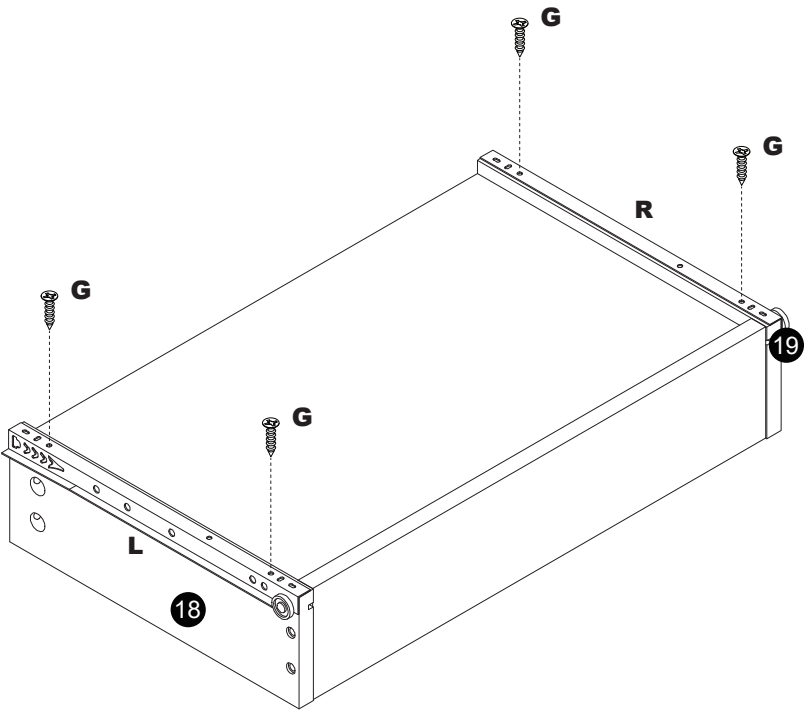
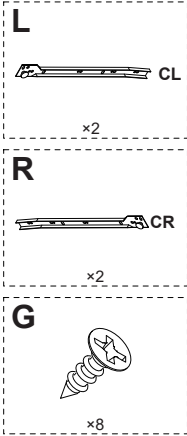


x2



| Step23

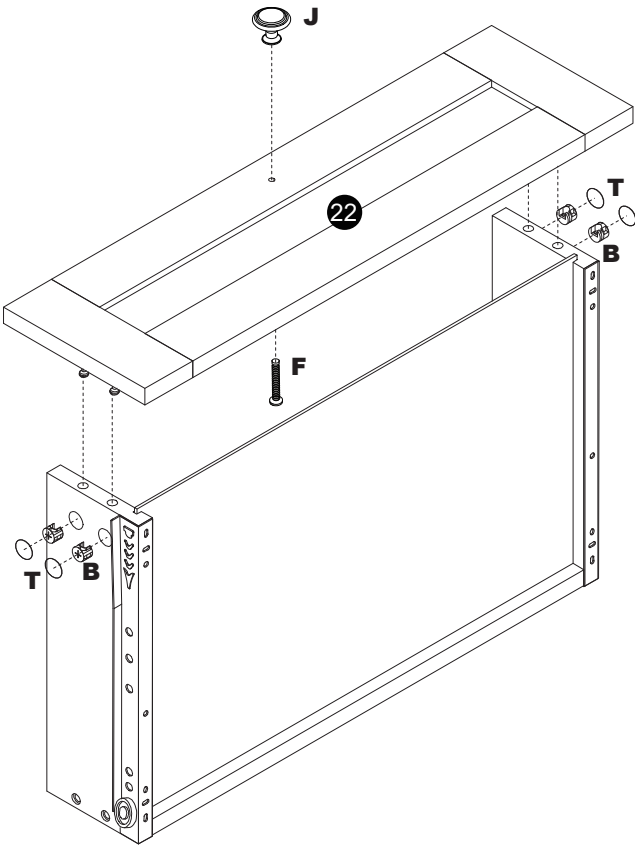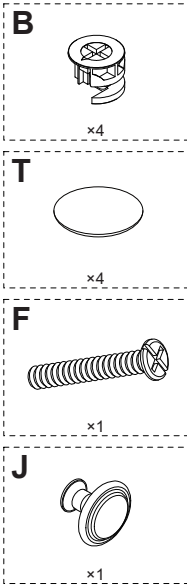




| Step24

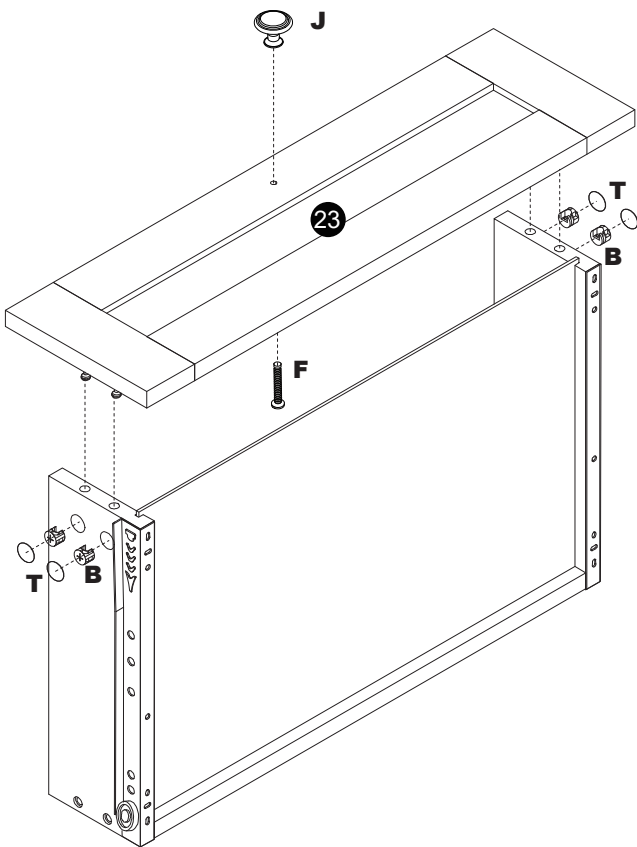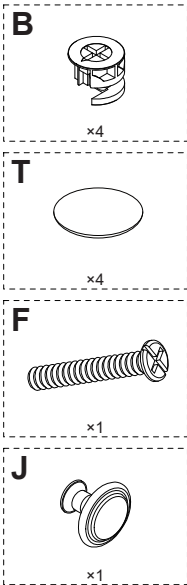

| Step25

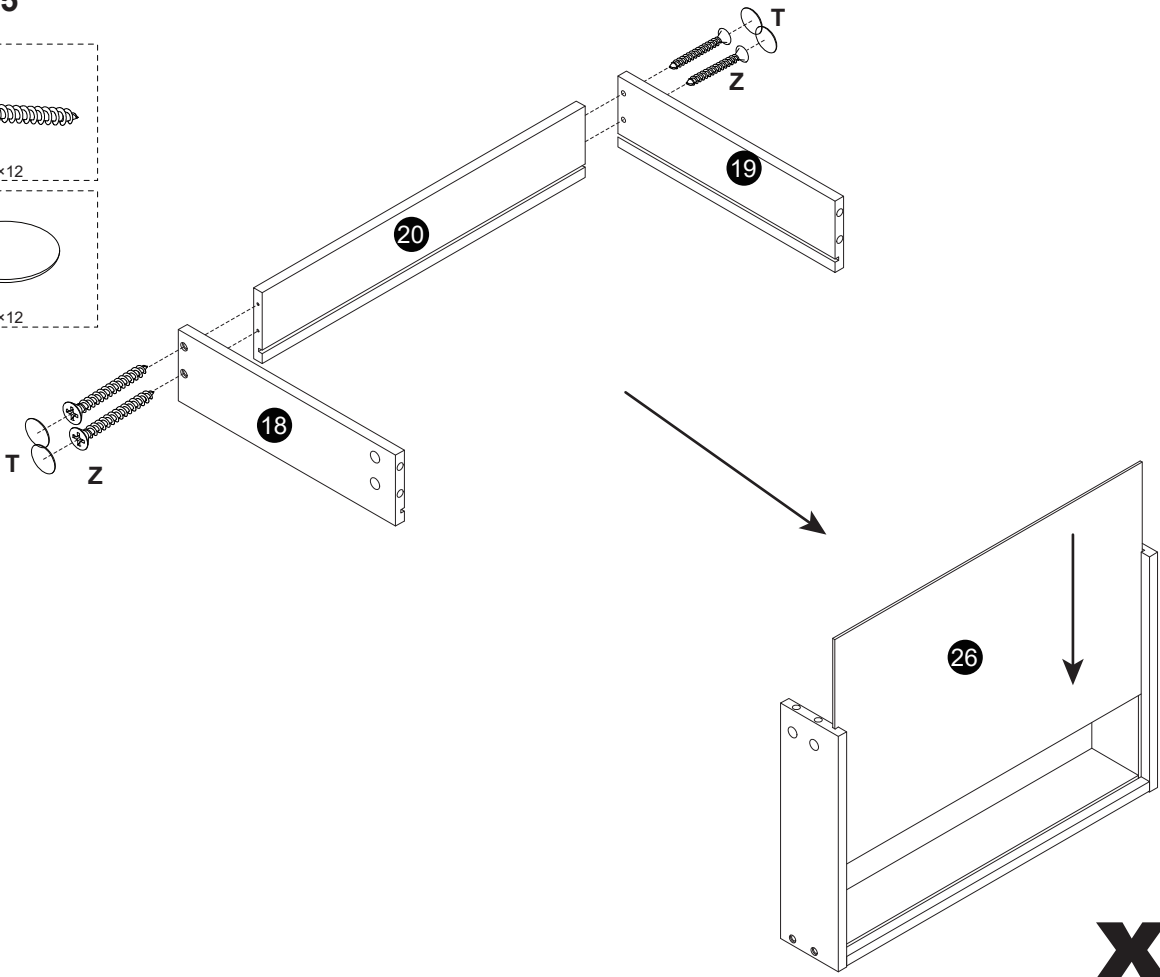
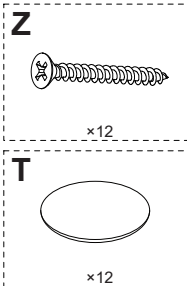


| Step26

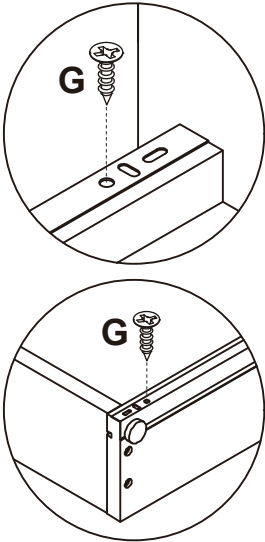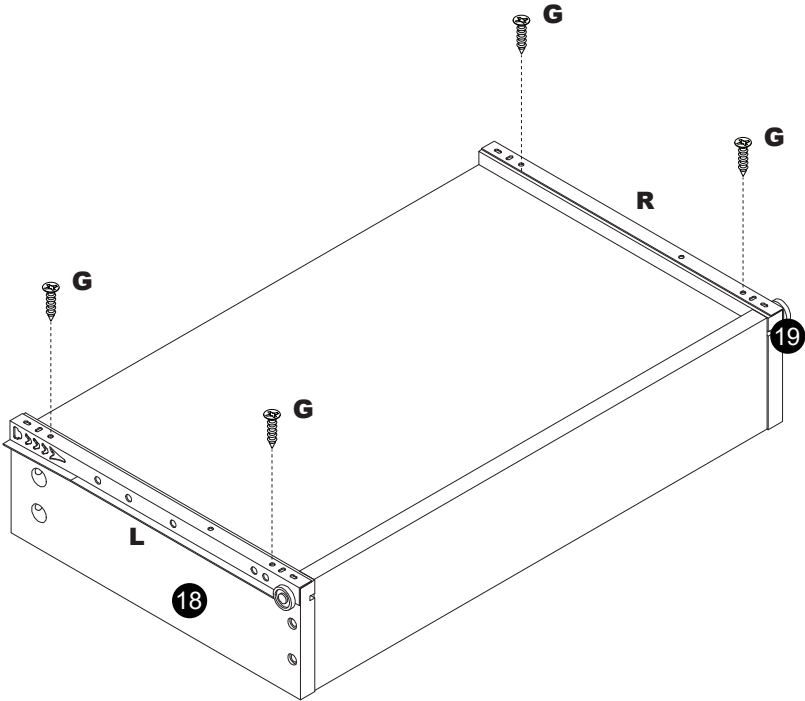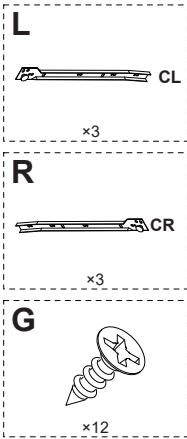




x3

| Step27

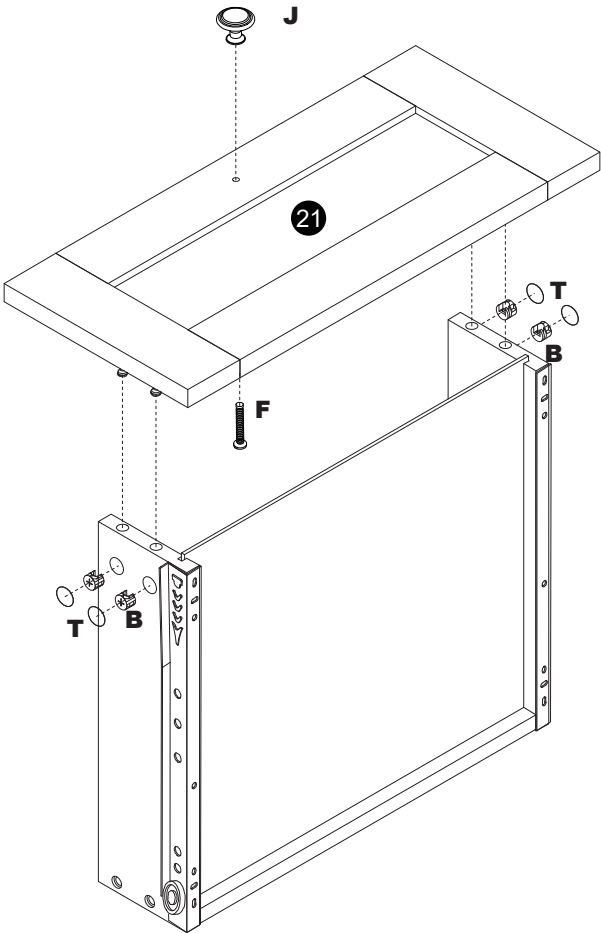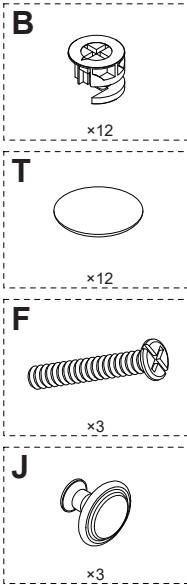

x3

| Step28

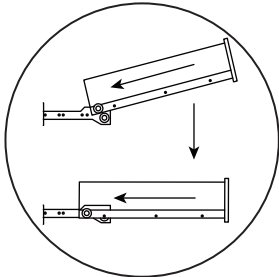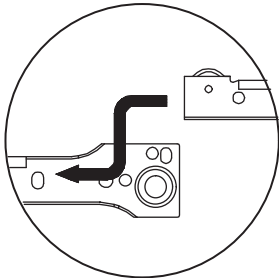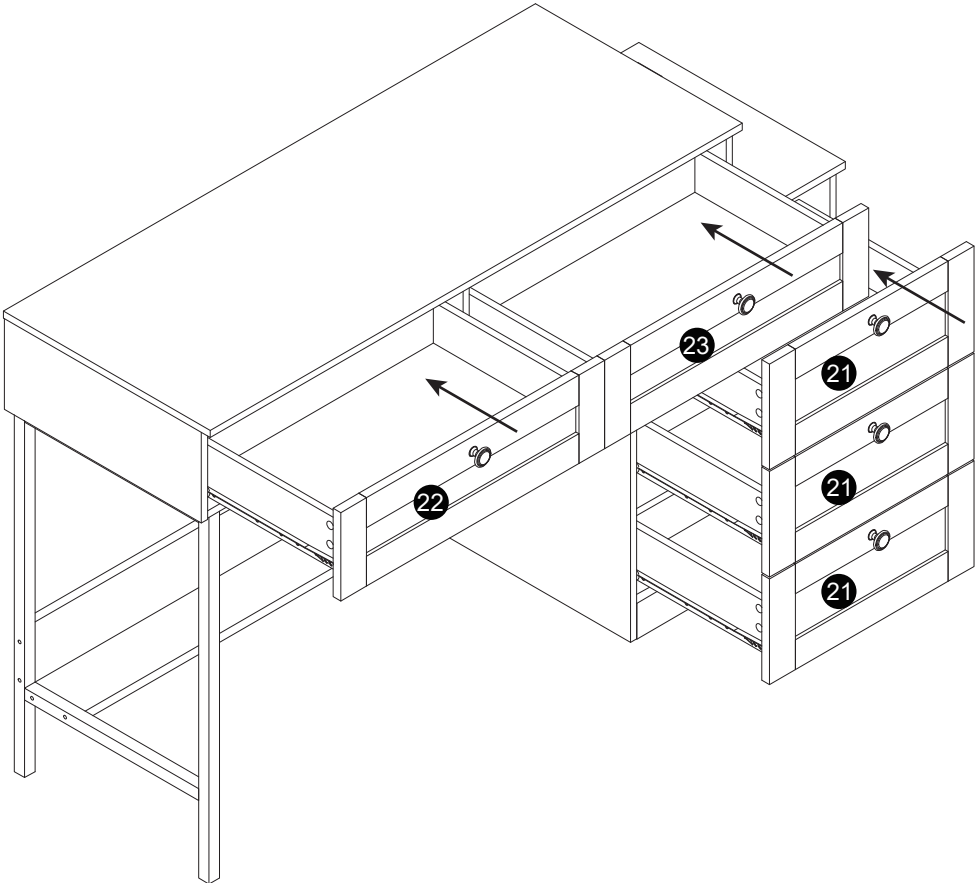

| Step29

