



Assembly Instructions

Description: Contemporary Country Double Door Cabinet

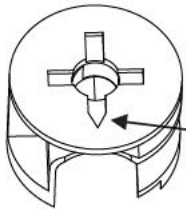

NOTICE "pointer arrow" on face of Cam (Part B)

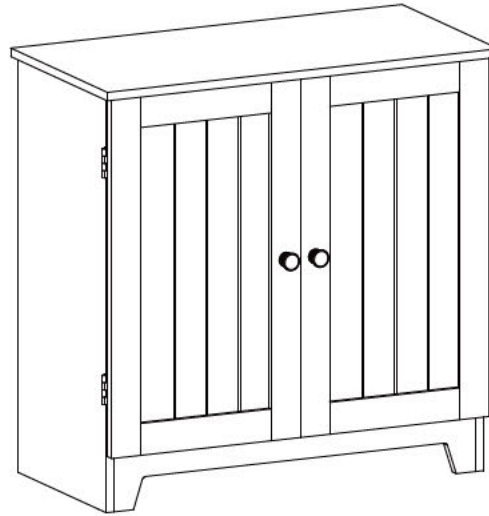

Dimensions

Width-60cm
Depth-30cm
Height-60cm

Proper Pin (Part A) and Cam (Part B) Alignment:

Place the Cam so that the "pointer arrow" faces the edge of the panel. This allows for the Pin (Part B) to be correctly aligned with the opening of the Cam.


Turn the Cam clockwise (normally about ½ turn. The Cam will capture the head of the Pin. As the Cam is turned it will draw the two panels together.

See picture above and figures 2.1, 2.2, 2.3 for reference.





1 x 1pc	2 x 1pc	3 x 2pcs	4 x 1pc	5 x 1pc	6 x 2pcs	7 x 1pc	8 x 1pc
A x 8pcs	B x 8pcs	C x 6pcs	D x 1pc	E x 2pcs	F x 4pcs	G x 2pcs	H x 2pcs
I x 20pcs	J x 4pcs	K x 4pcs	L x 1pc	M x 4pcs	N x 4pcs		
 Φ3 x 12				 Φ3 x 16			

Assembly Instructions


STEP 1

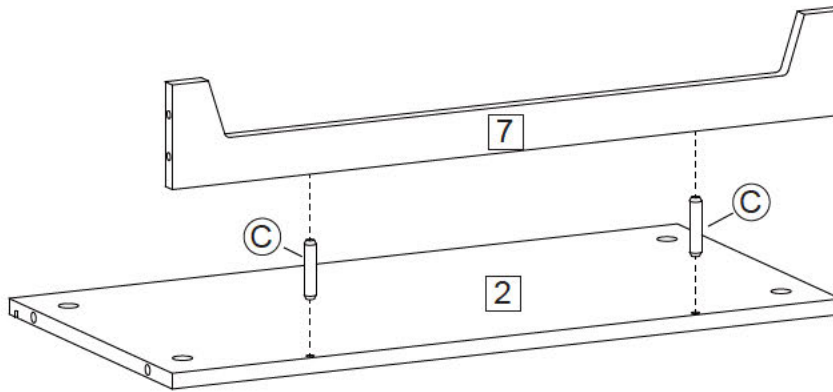

STEP 2

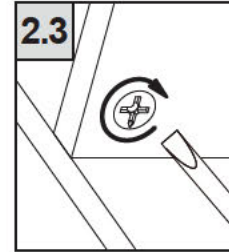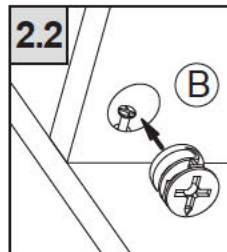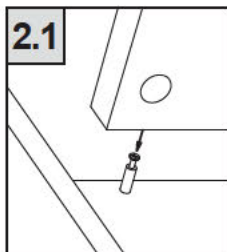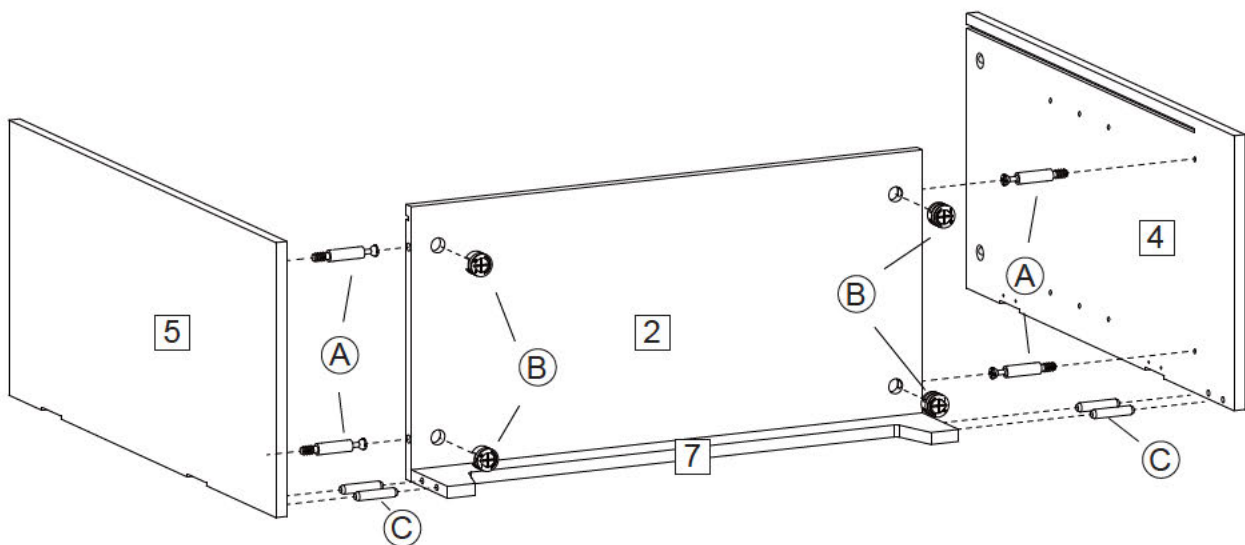


NOTE Proper Cam & Pin alignment
(Parts A & B)

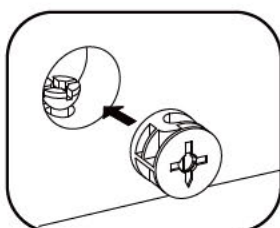



NOTE position of
"pointer arrow"
on Cam (Part B)
points toward
head of Pin (Part A)

Assembly Instructions


STEP 3

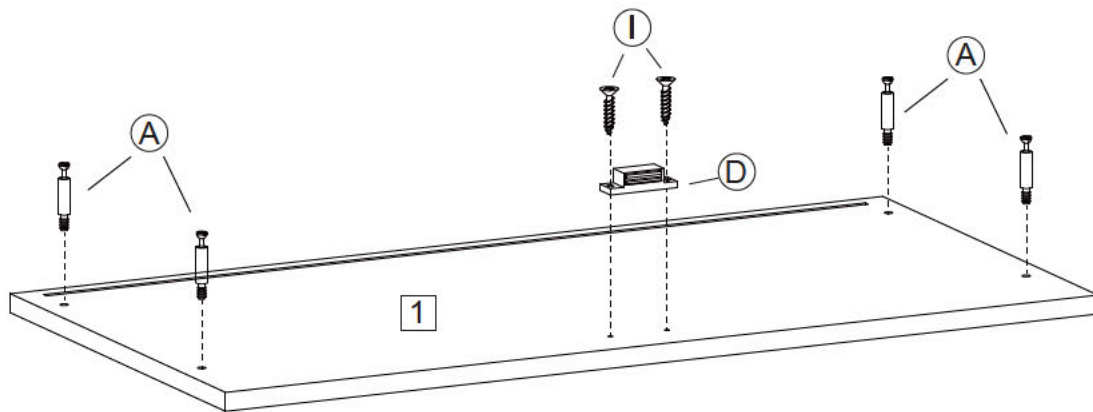

STEP 4

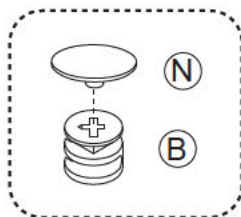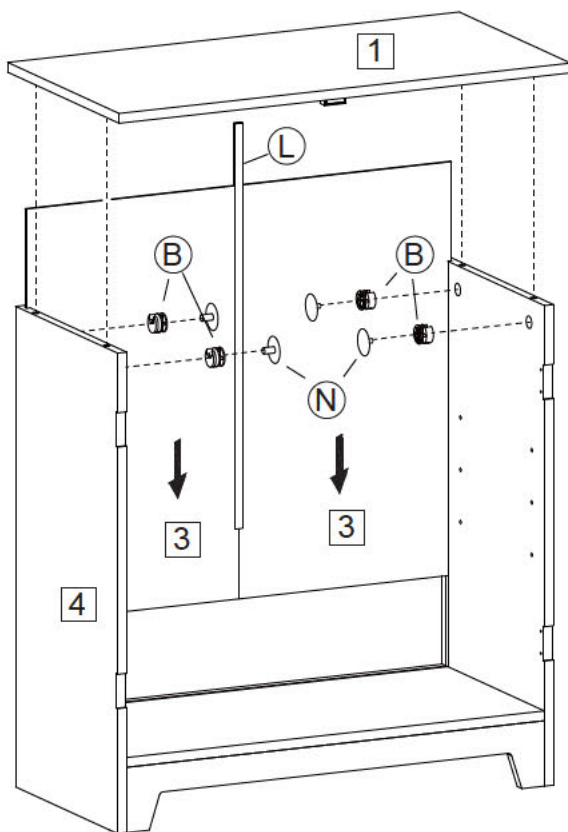


STEP 5

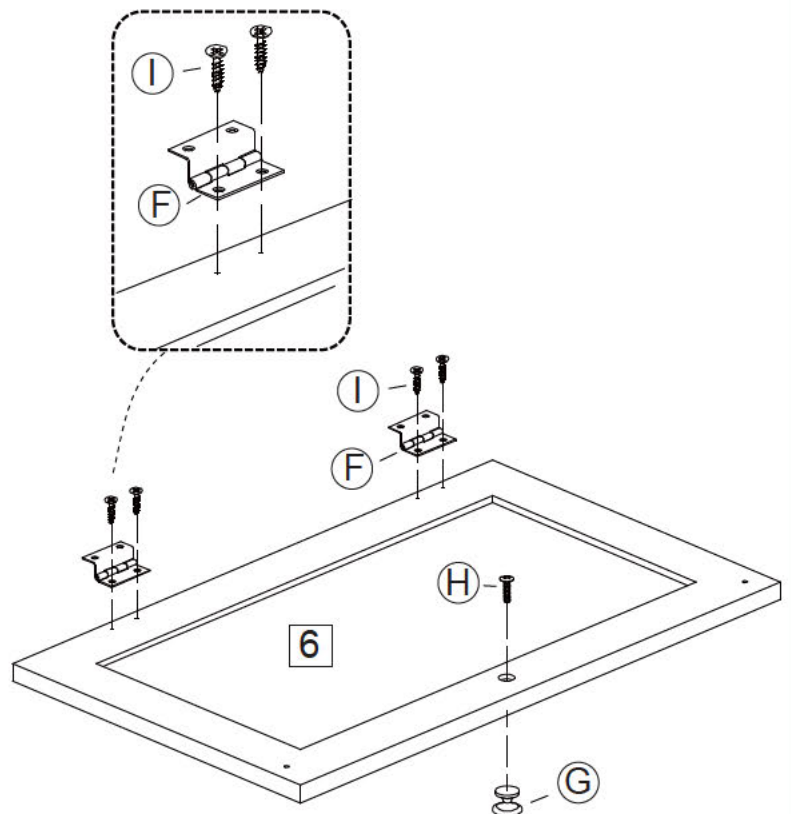


x 2

Assembly Instructions

STEP 6

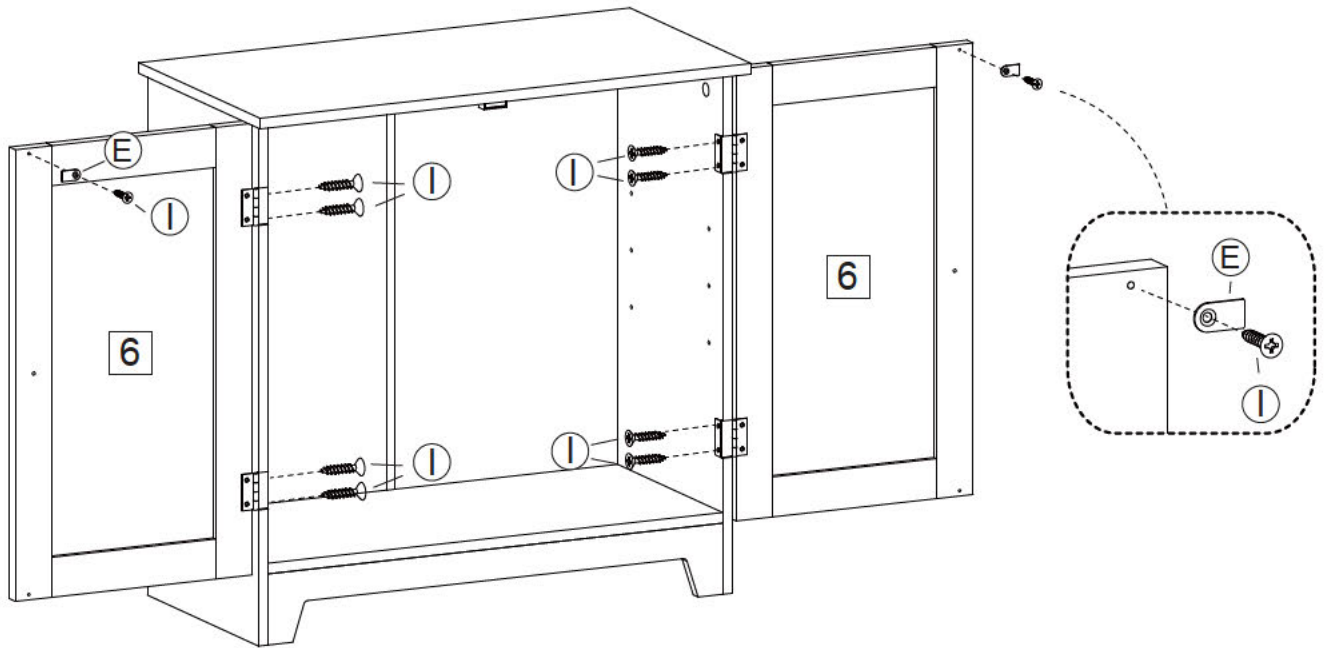

STEP 7

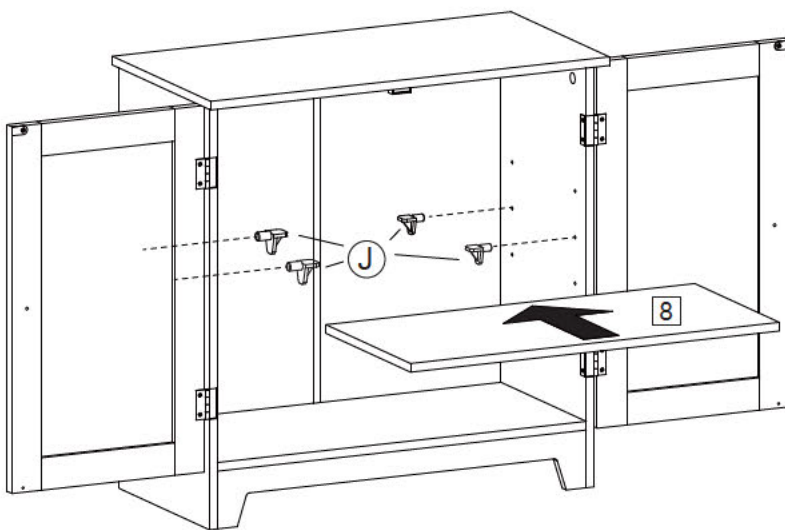

STEP 8

