

ASSEMBLY INSTRUCTIONS

V-VN26-1472-0C
V-VN26-1472-2C


PF013

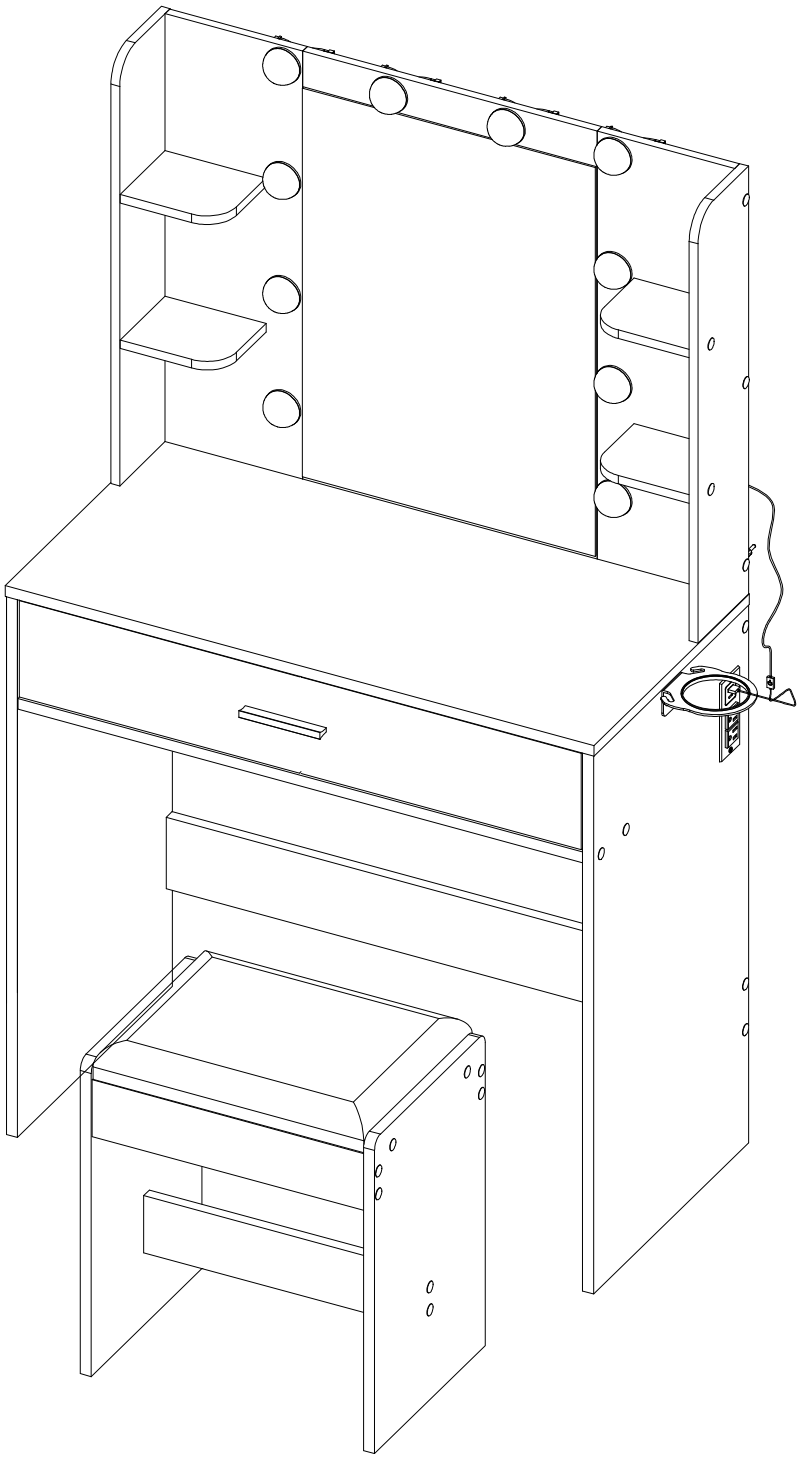

WARNING!



AXIMUM LOAD
220 lb/100kg

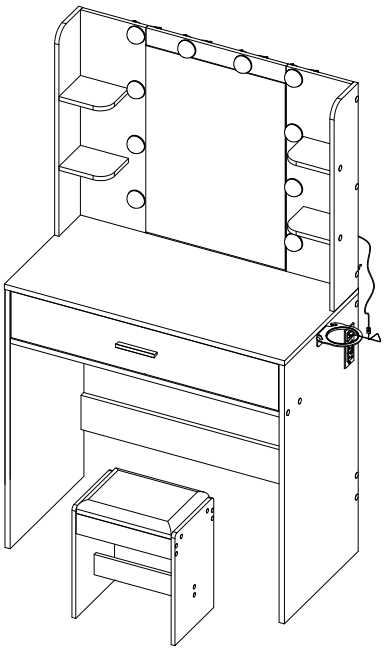


PF013




Estimated Time for Assembly

60 mins

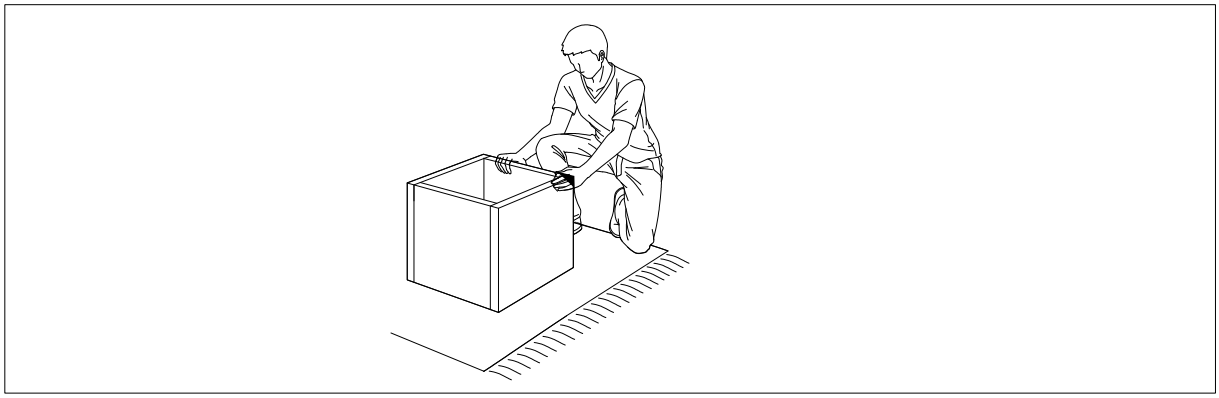


Assembly the furniture on empty carton, carpet, or rug to prevent scratches or damage.

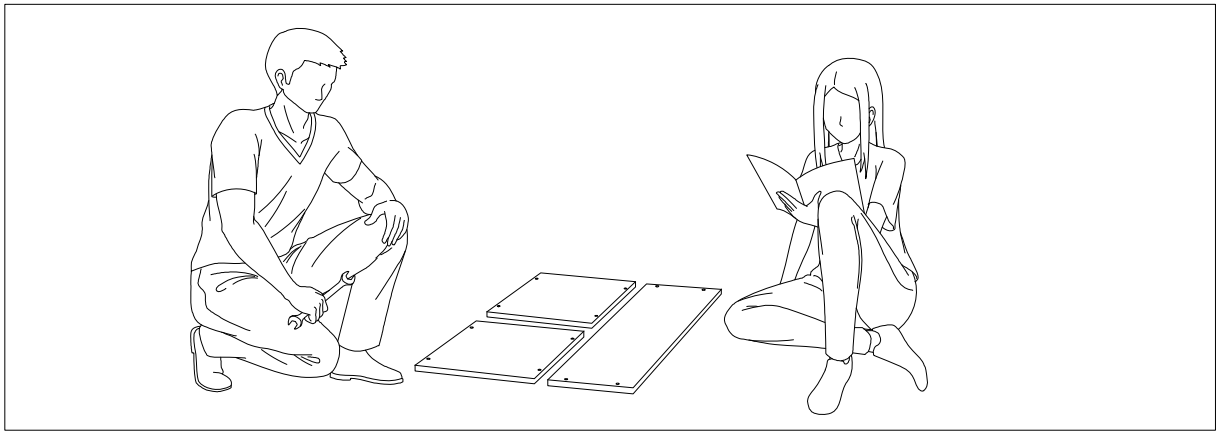

This furniture requires 2 people to assembly.
Make sure no parts are missing or damaged before assembly.

BOARD IDENTIFICATION




















PF013

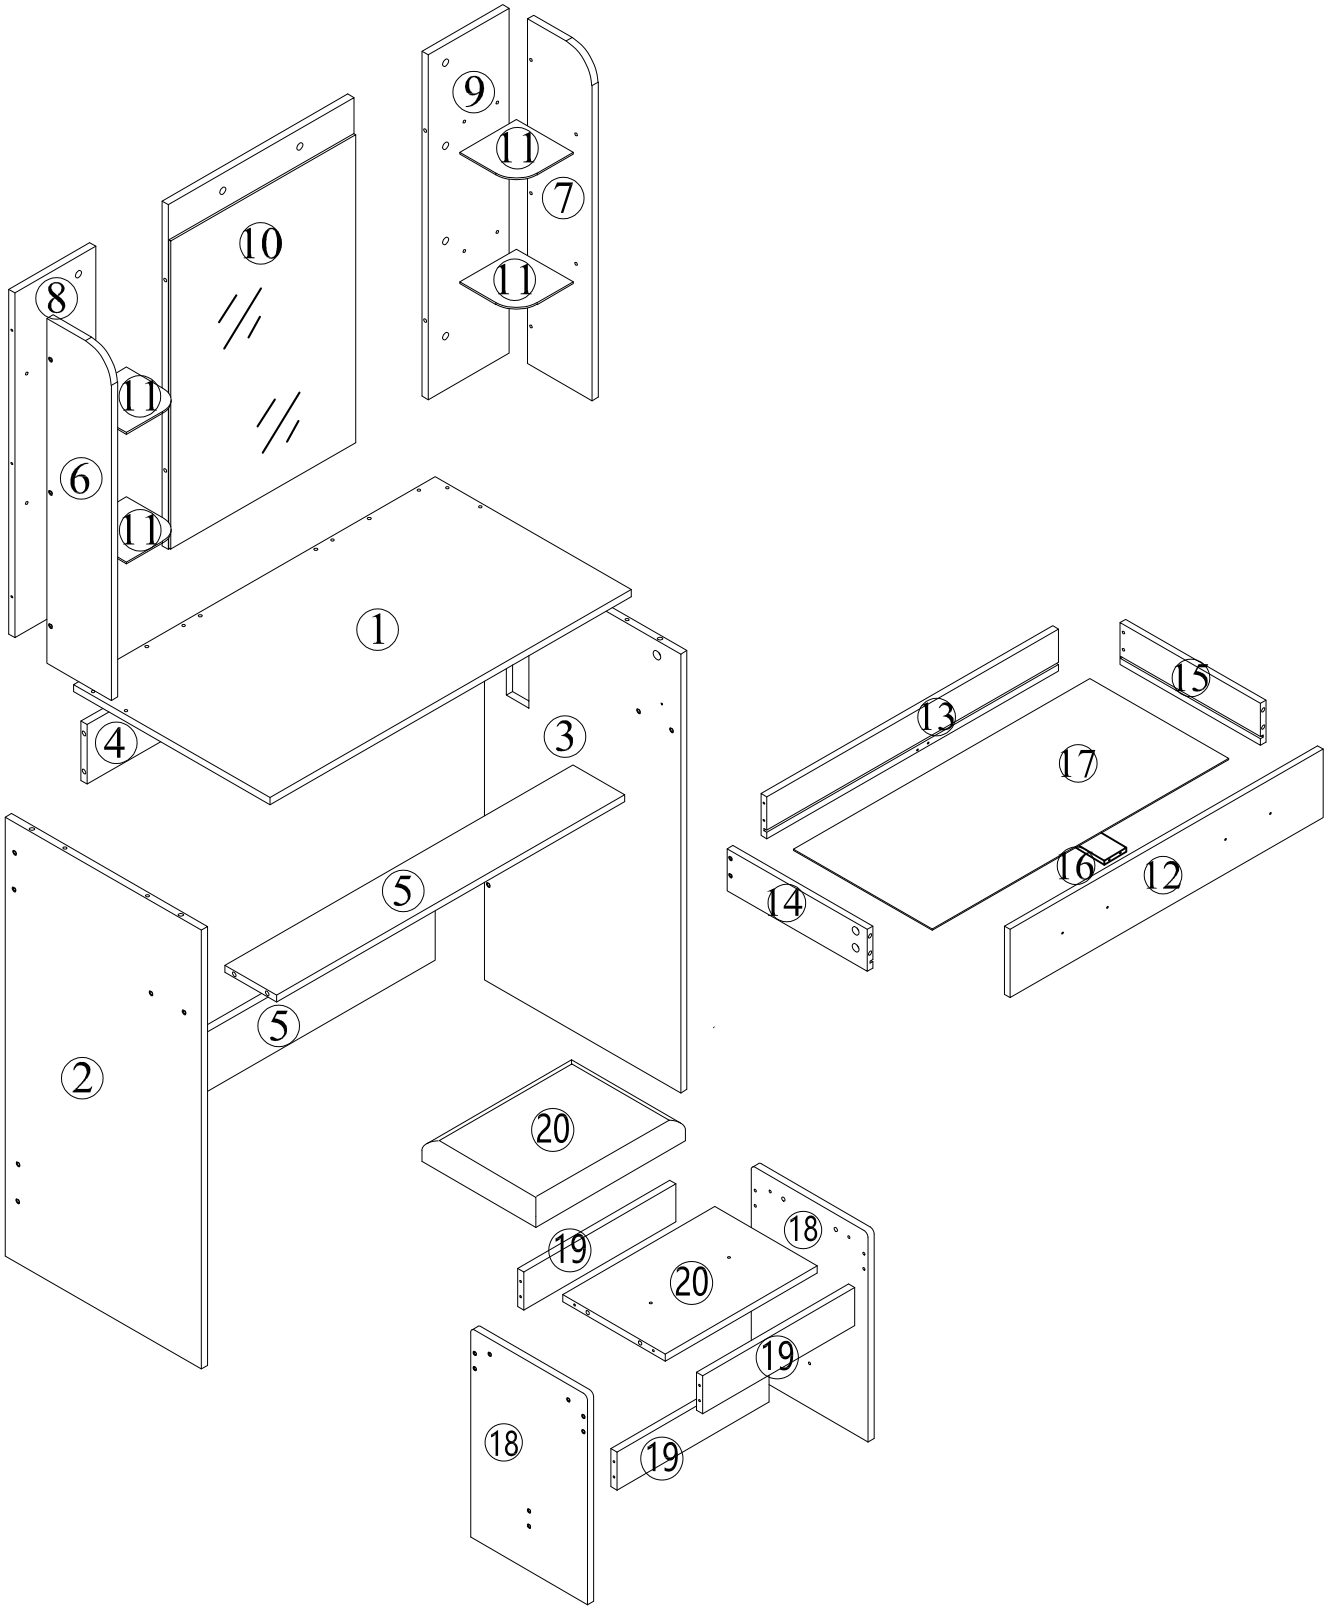

BOARD IDENTIFICATION

Not actual size

PF013

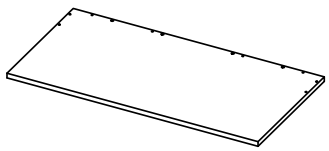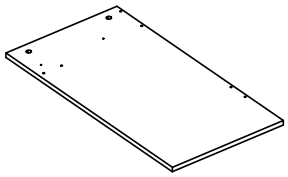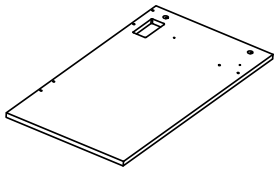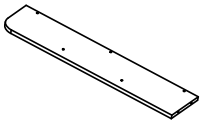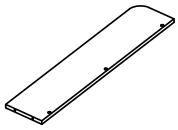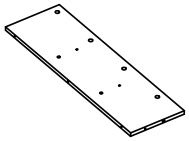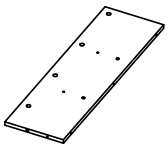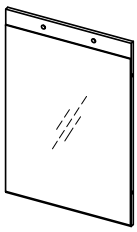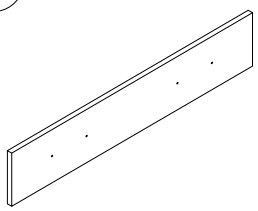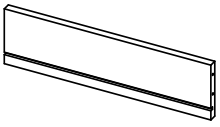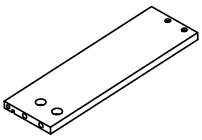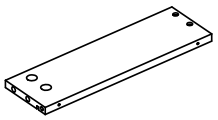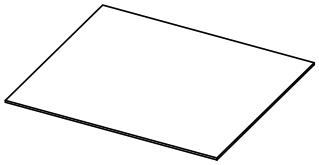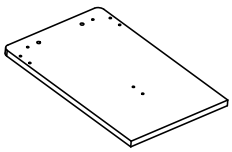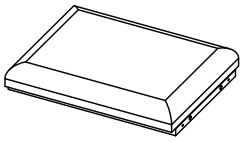
1  x 1	2  x 1	3  x 1	4  x 1
5  x 2	6  x 1	7  x 1	8  x 1
9  x 1	10  x 1	11  x 4	12  x 1
13  x 1	14  x 1	15  x 1	16  x 1
17  x 1	18  x 2	19  x 3	20  x 1


HARDWARE PART LIST

PF013


A	X12+1
	
Ø6x34	


B	X12+1
	
Ø15x9.5	


C	X13+1
	
Ø6x30	


D	X4
	
Ø8x30	

E	X24+2
	
Ø3.5x12	

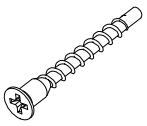F	X42+2
	
Ø5*40	


G	X6
	


H	X12+1
	


I	X2
	


J	X4
	
M4x15	

K	X1 set
	
109x99*38,5	

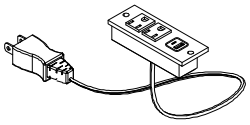L	X1
	

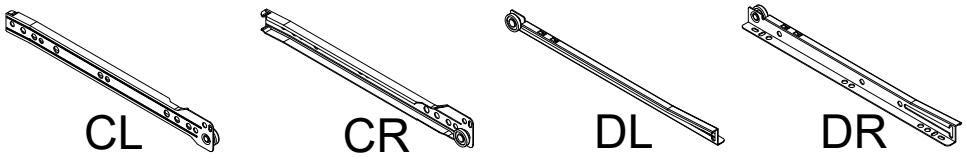M	X1
	
CL CR DL DR	
L=300	

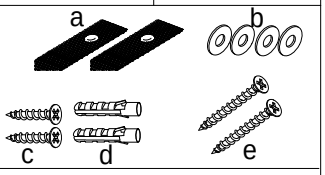N	X1set
	
a b c d e	

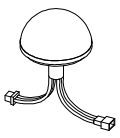O	X10+2
	

P	X6
	
M3.5*35	


Q	X34+1
	
M20	

HARDWARE PART LIST

PF013


Cam Lock Fastening System


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

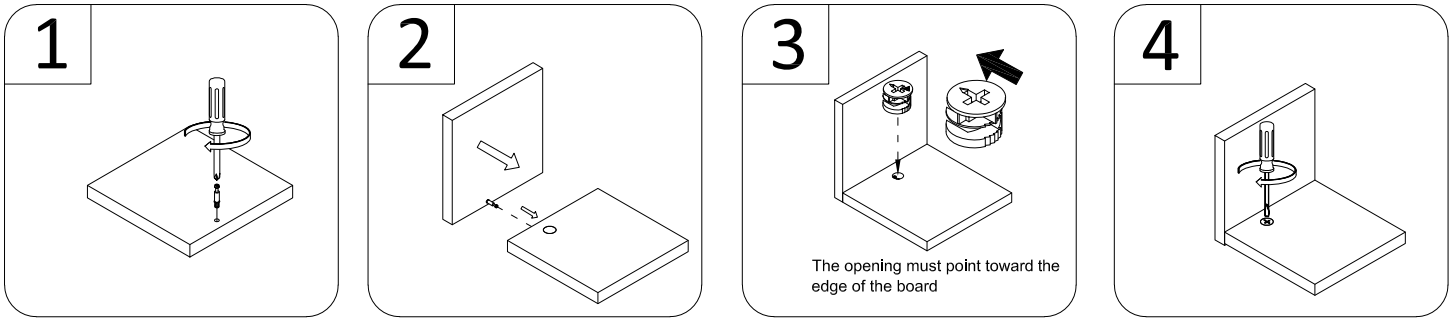


STEP 1


PF013

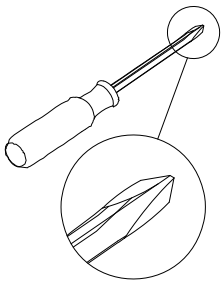



C	X4
	
Ø6X30	


E	X4
	
Ø3.5x12	


M	X1
	CL

M	X1
	CR

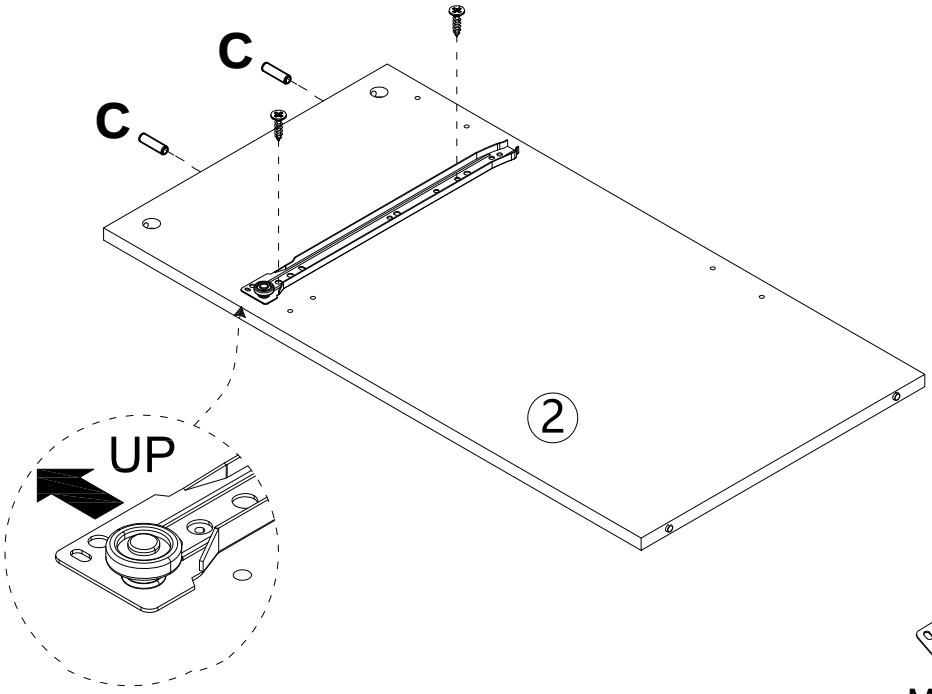

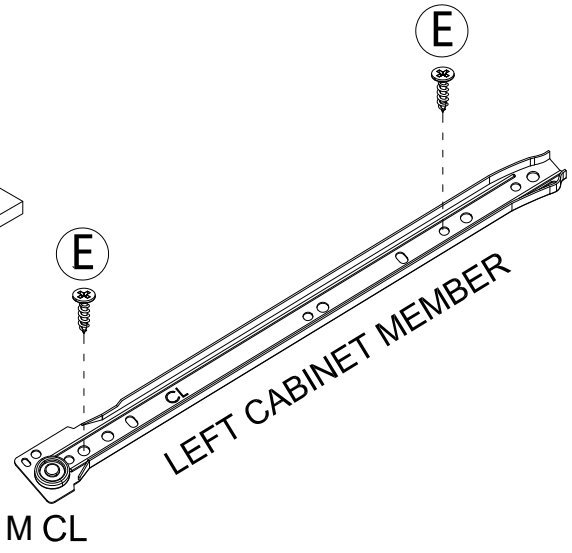


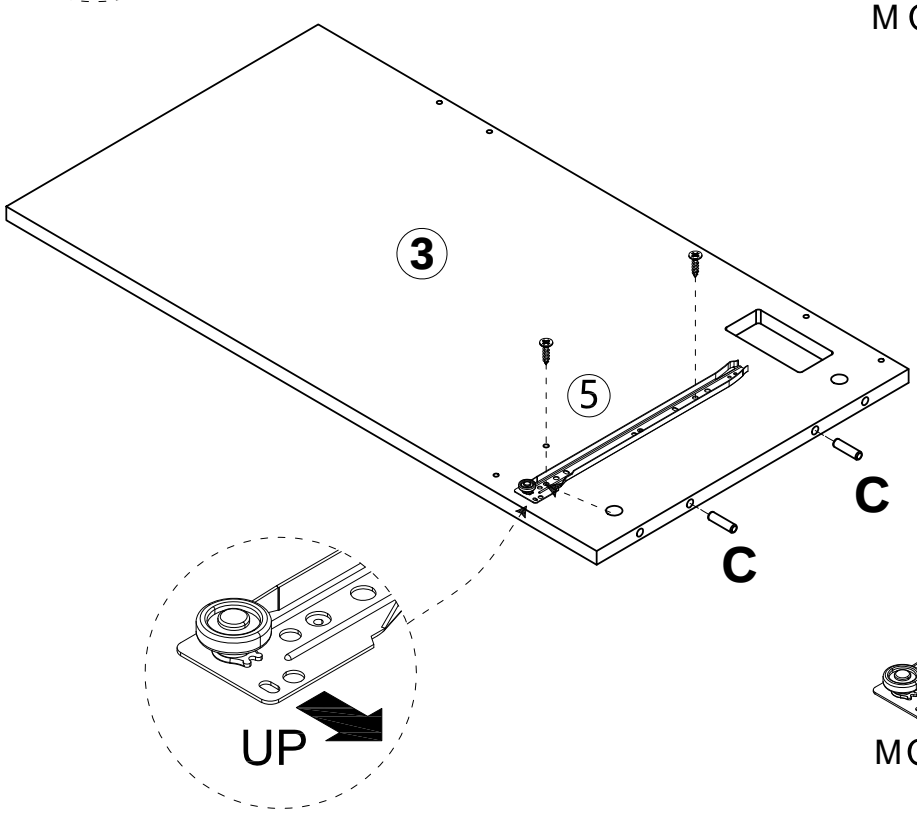

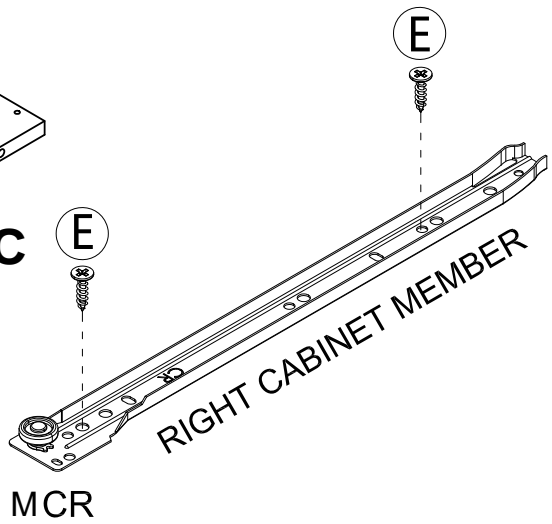


STEP 2


PF013

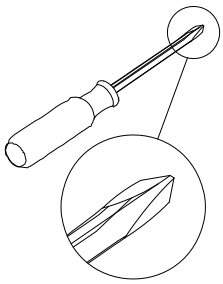

F	X12
	
Ø5*40	


Q	X12
	
M20	

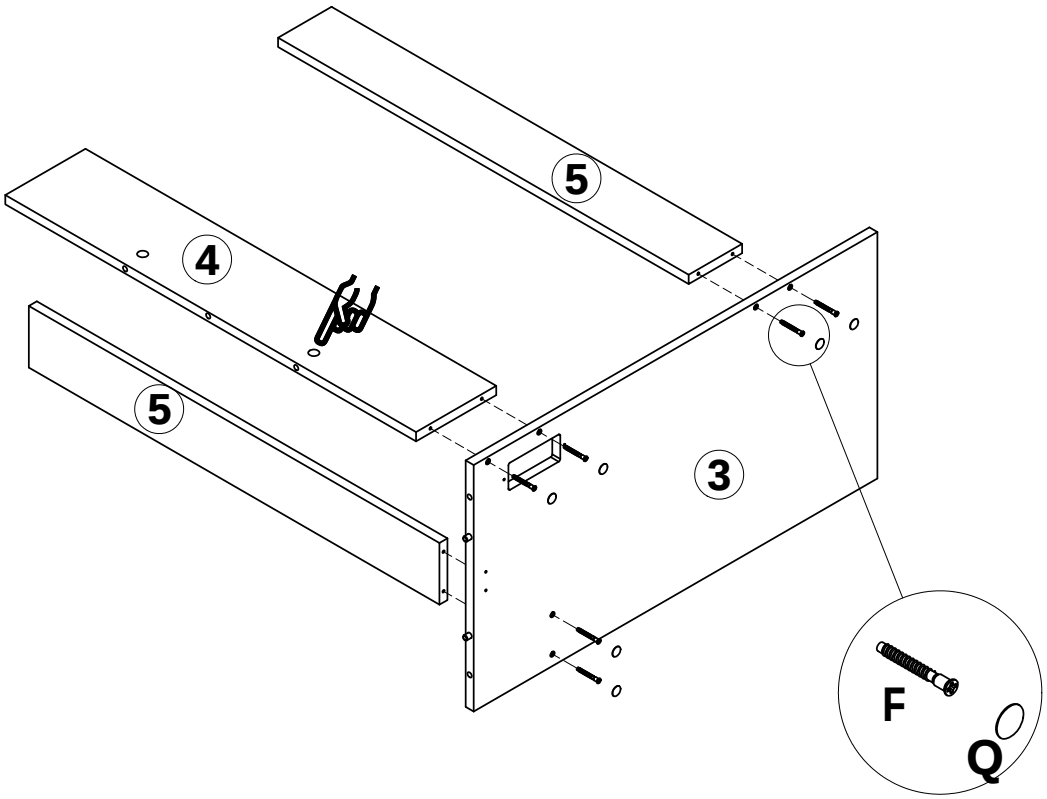


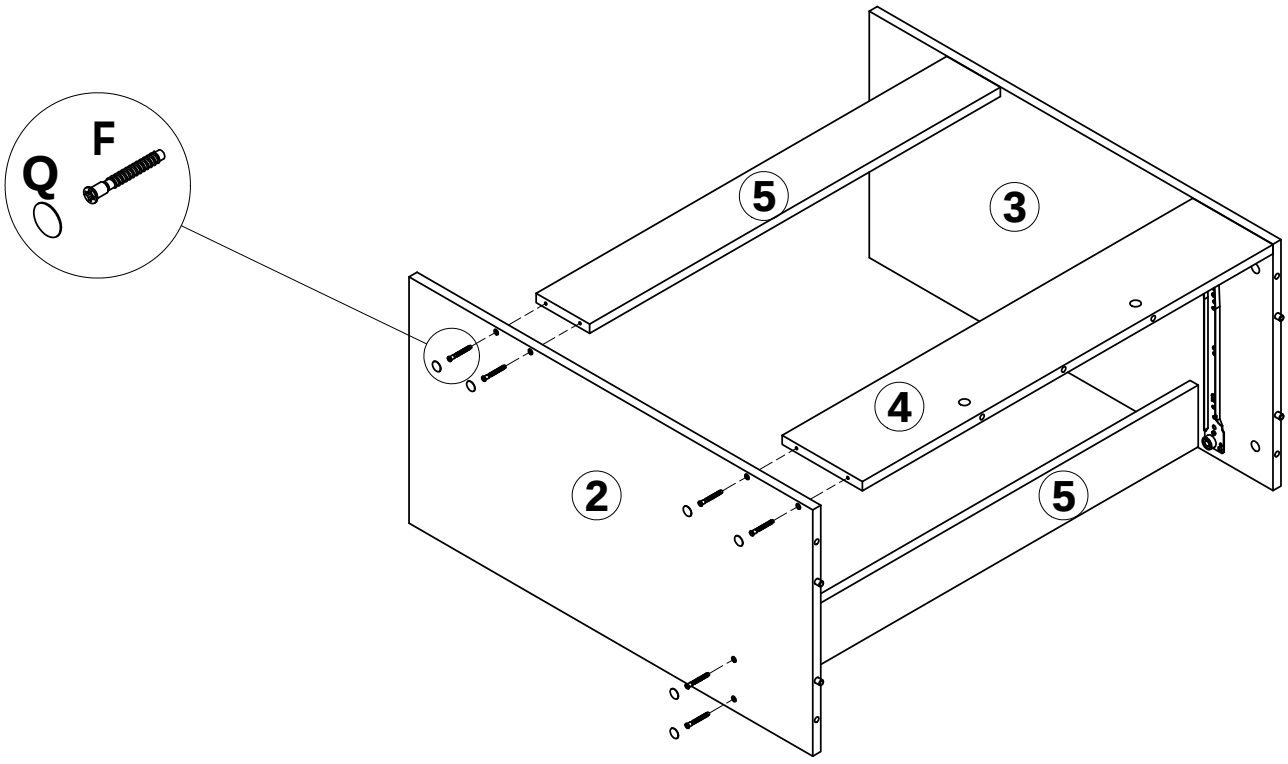

STEP 3


PF013

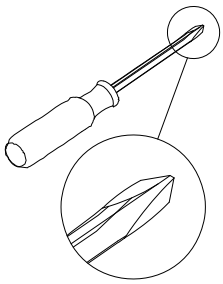


C	X1
	
Ø6X30	

E	X4
	
Ø3.5x12	


K	X1
	

L	X1
	

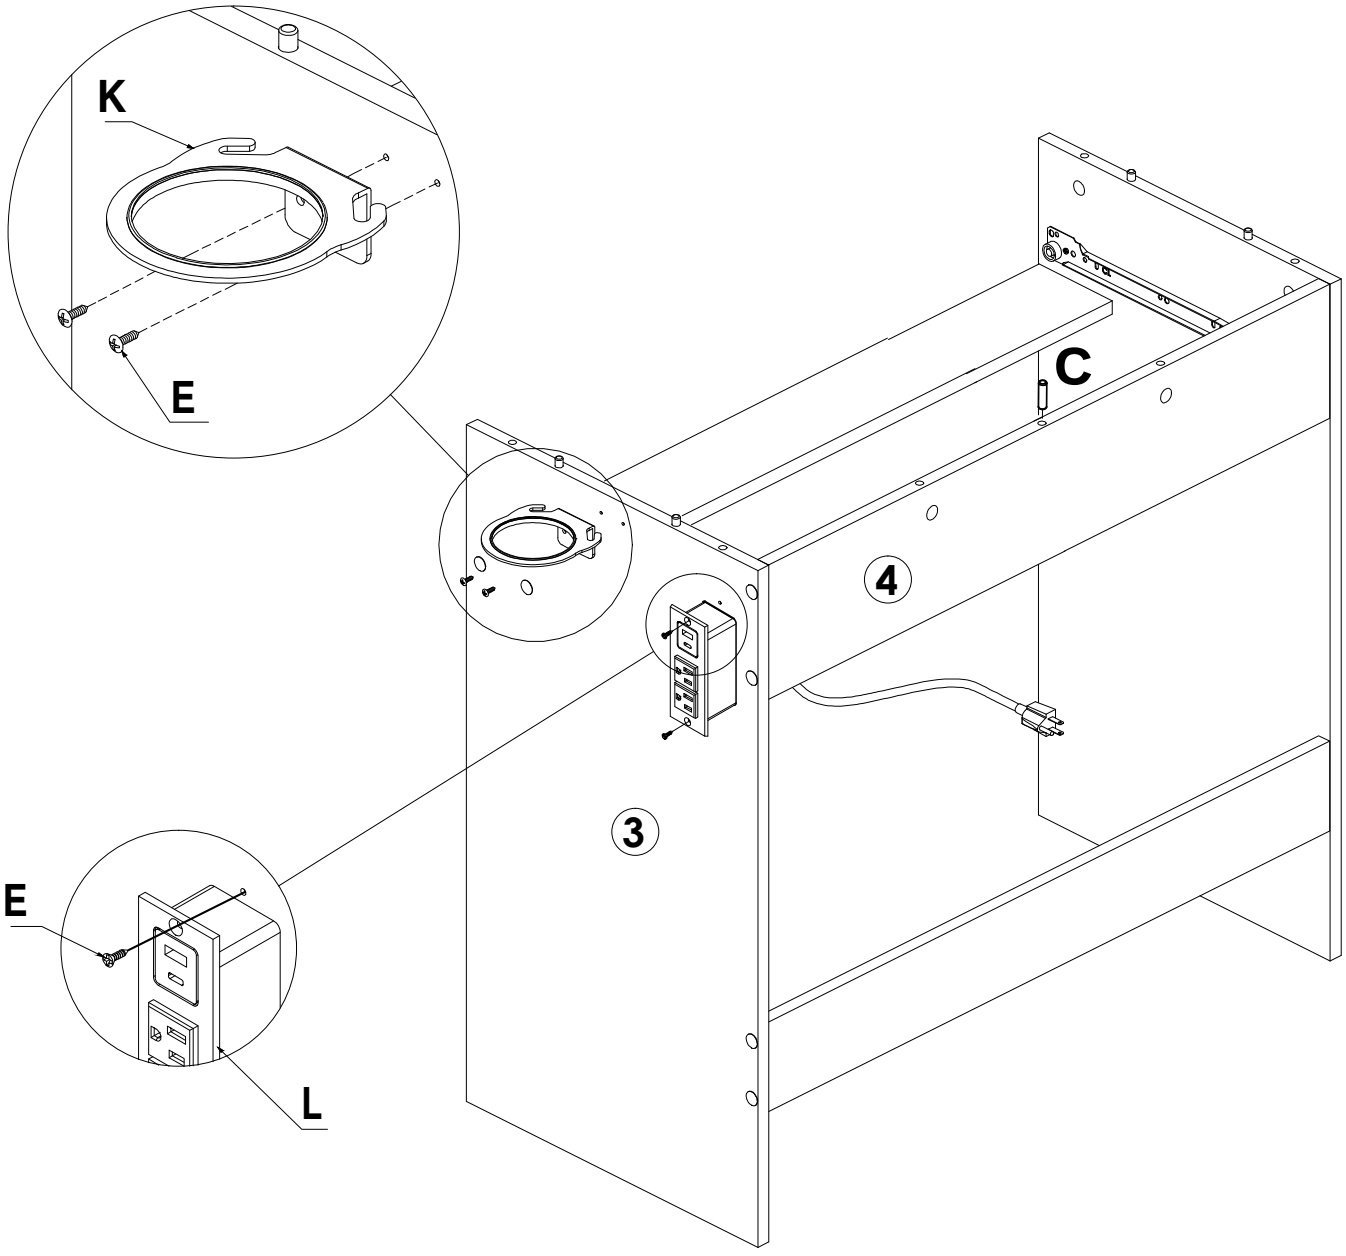



STEP 4


PF013

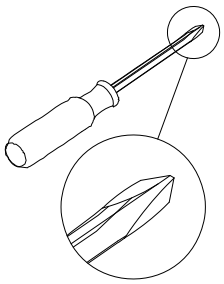

A	X6
	
Ø6x34	


C	X4
	
Ø6X30	

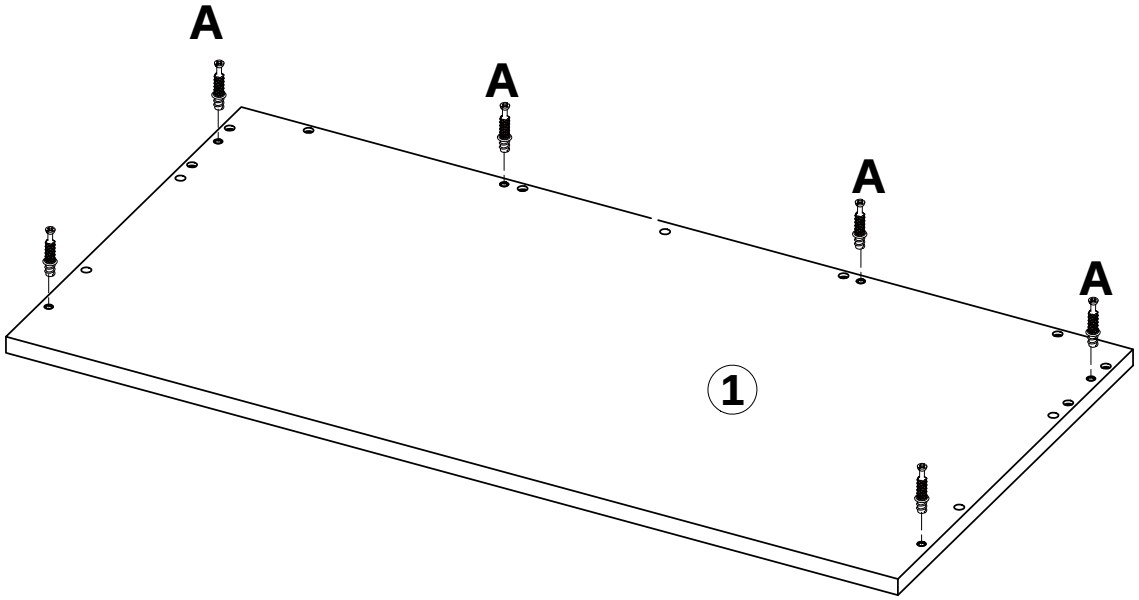

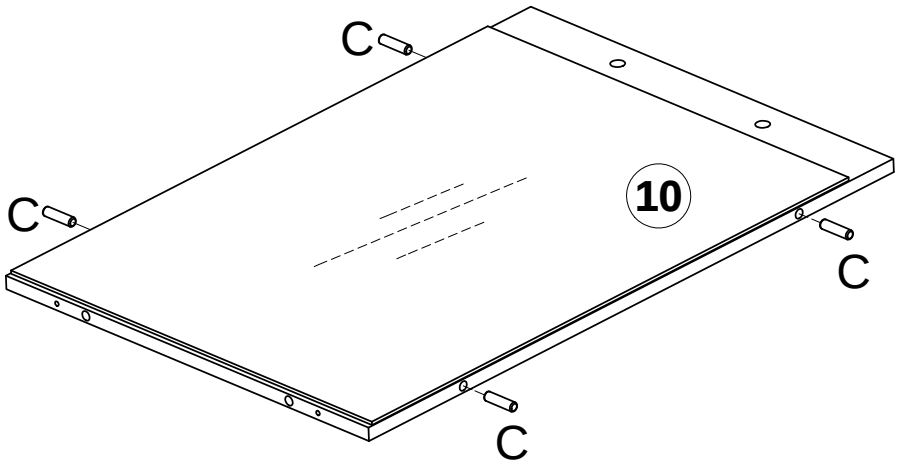


STEP 5


PF013

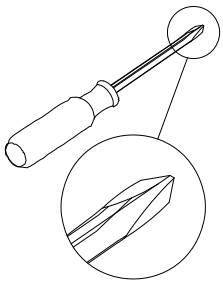

F	X6
	
Ø5*40	


Q	X6
	
M20	

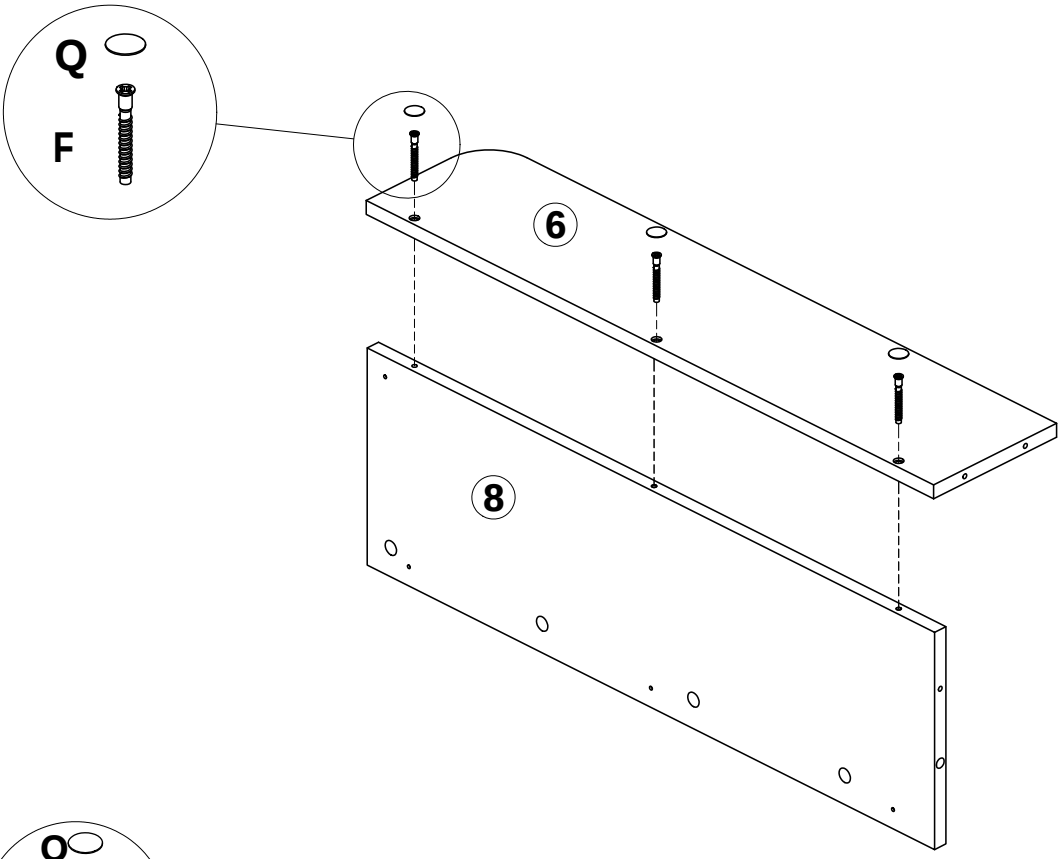


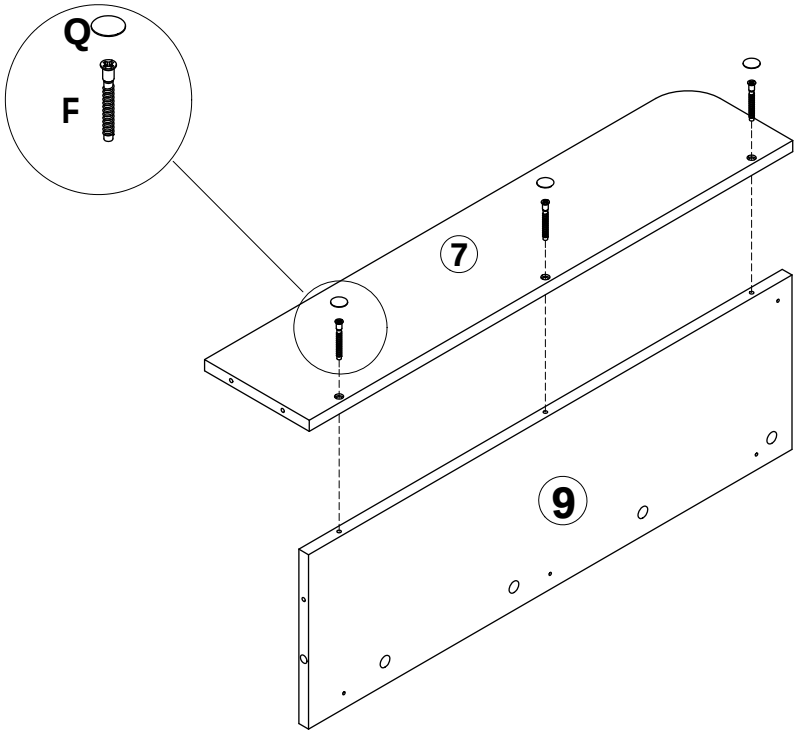



STEP 6


PF013

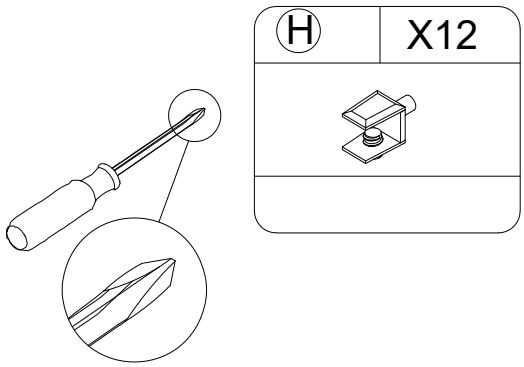

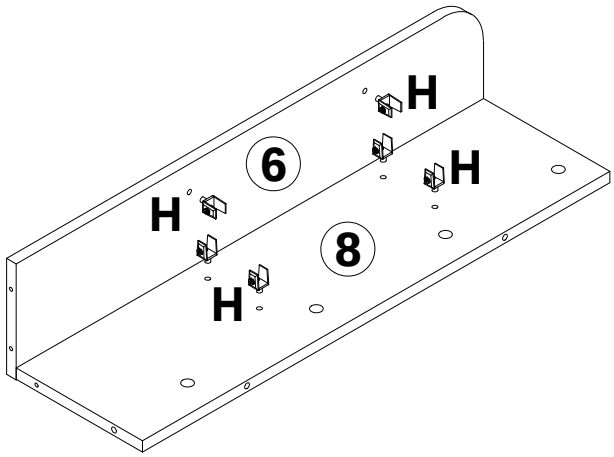

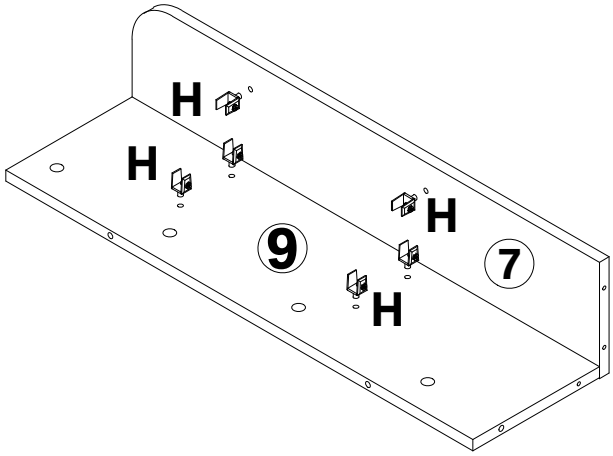

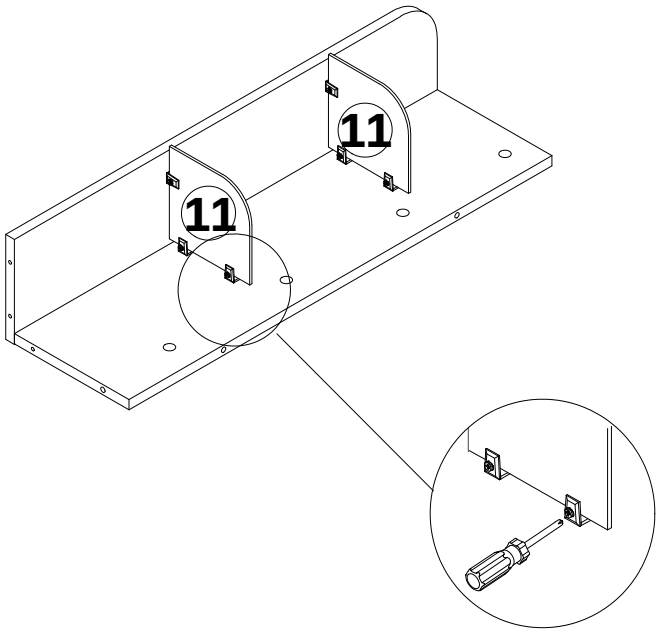


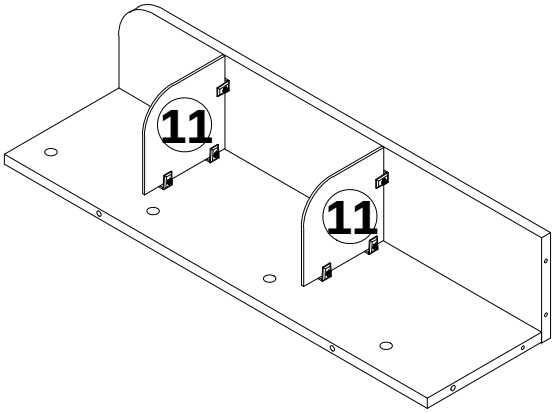



STEP 7


PF013

E	X12
	
Ø3.5x12	

G	X6
	

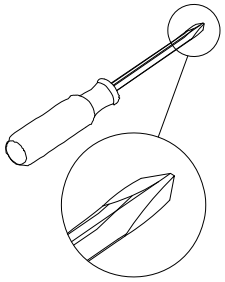


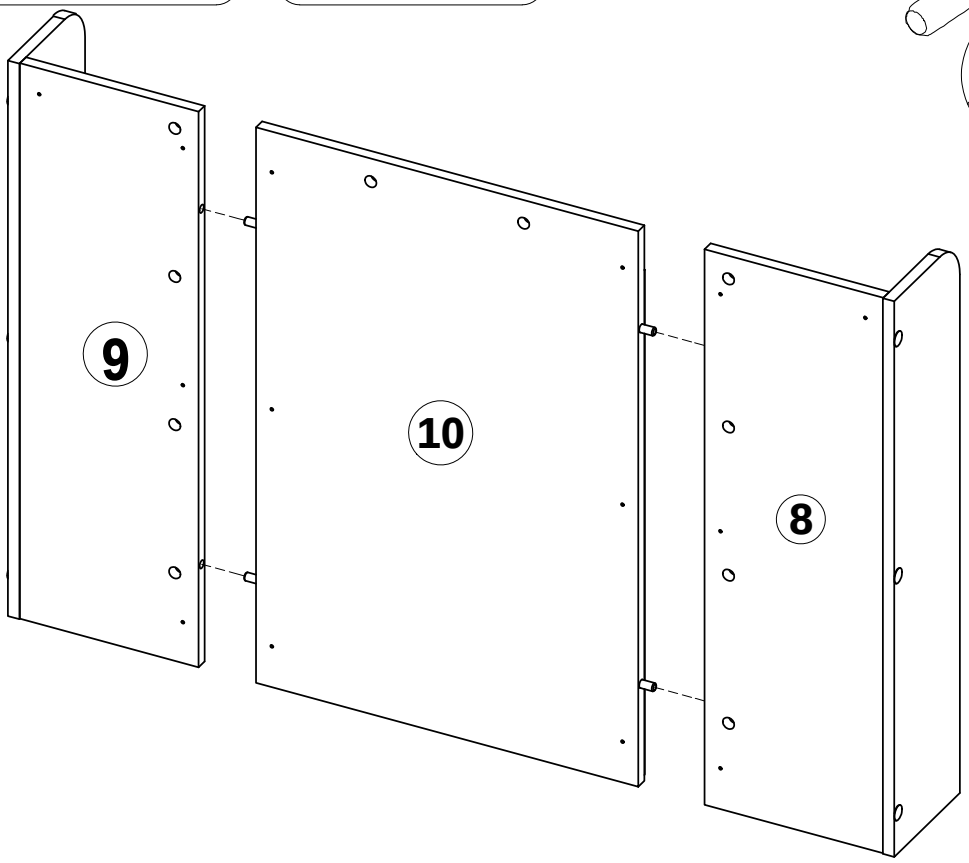


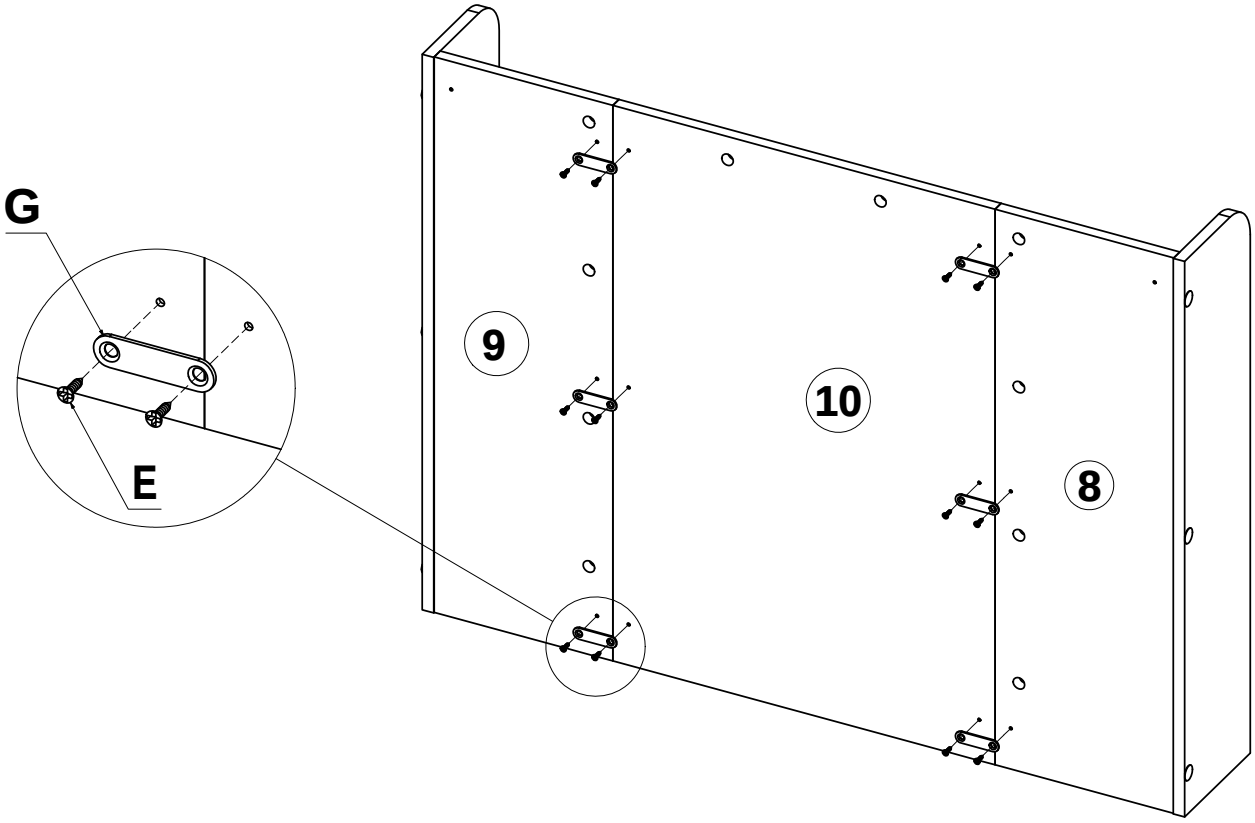


STEP 8


PF013

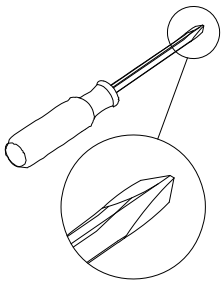

C	X4
	
Ø6X30	


F	X8
	
Ø5*40	

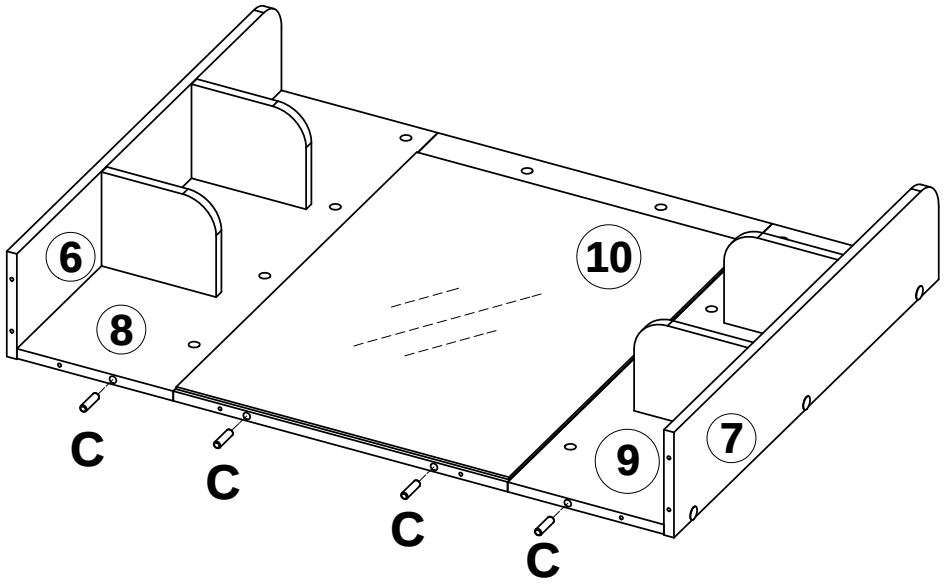

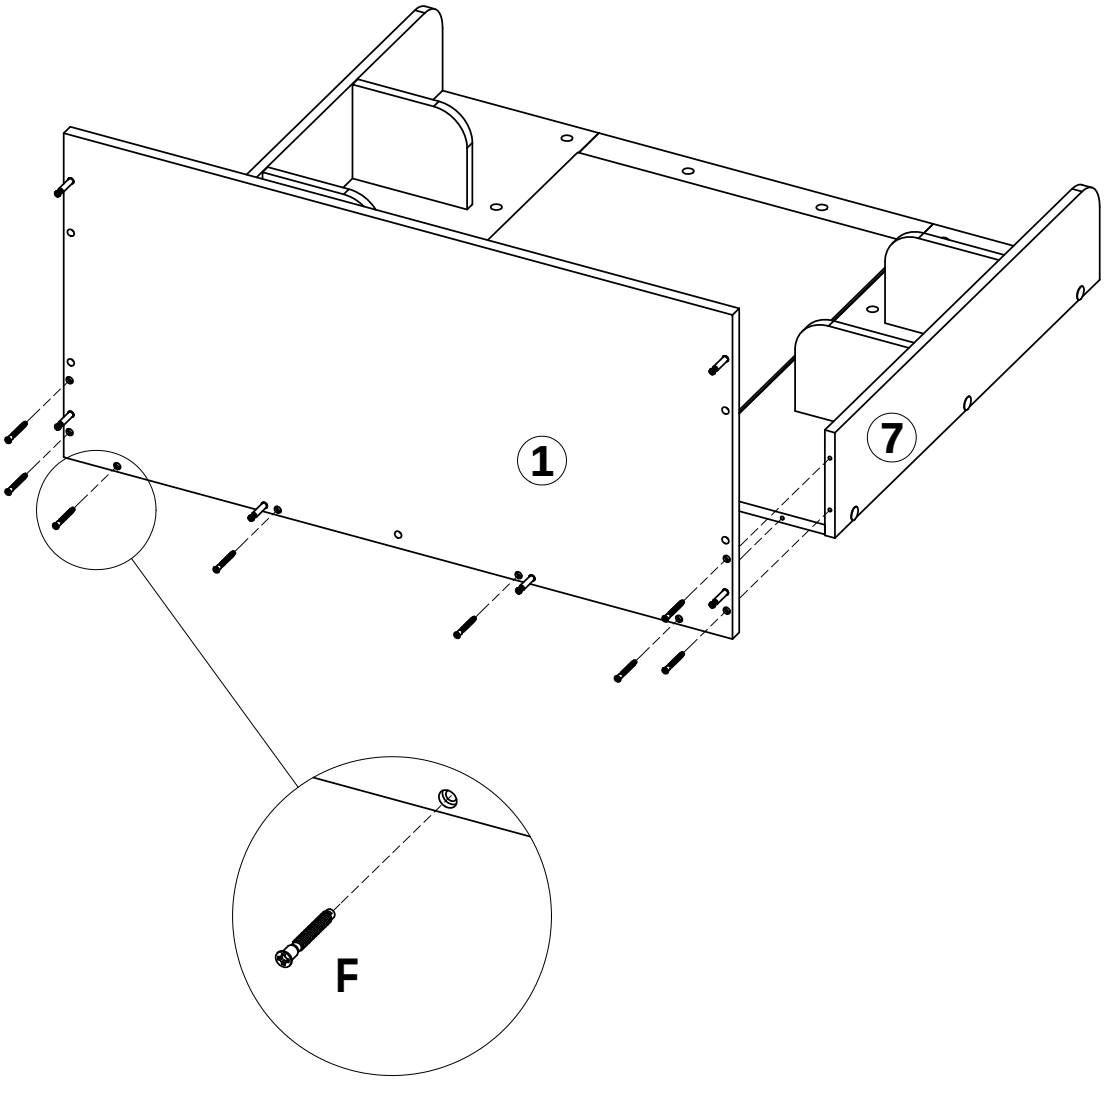


STEP 9

PF013

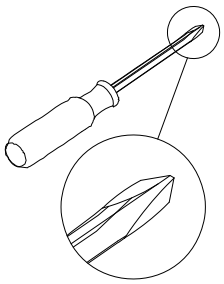

B	X6
	
Ø15x9.5	

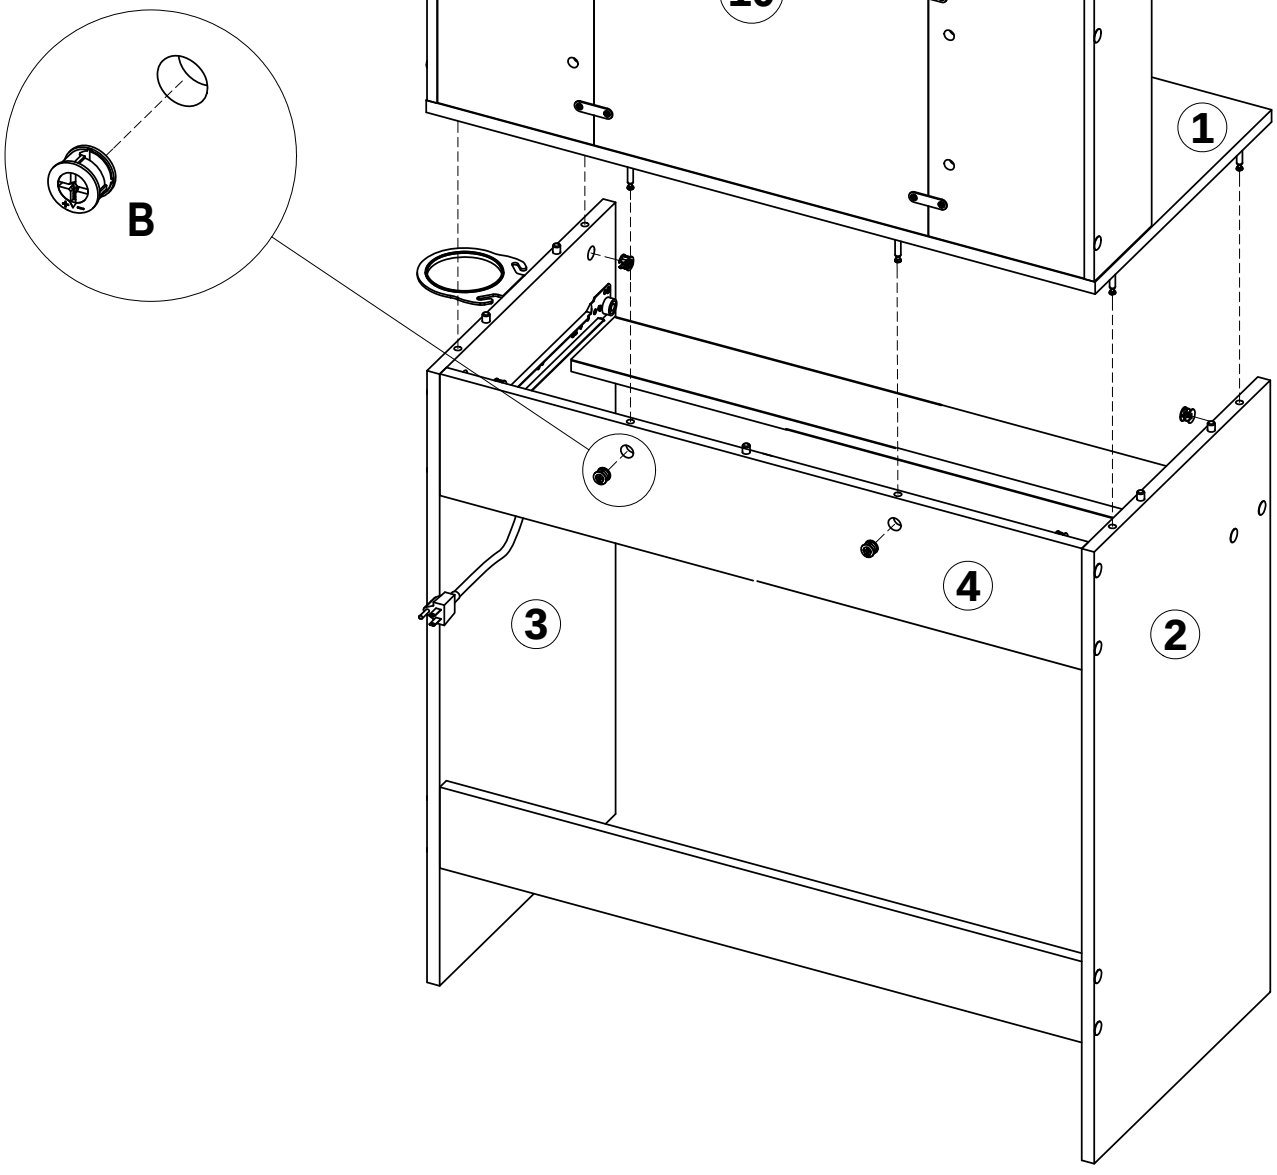



STEP 10

PF013

O	X10
	


Before attaching the bulb to the mirror panel, please remove the white sticker from the back of the bulbs

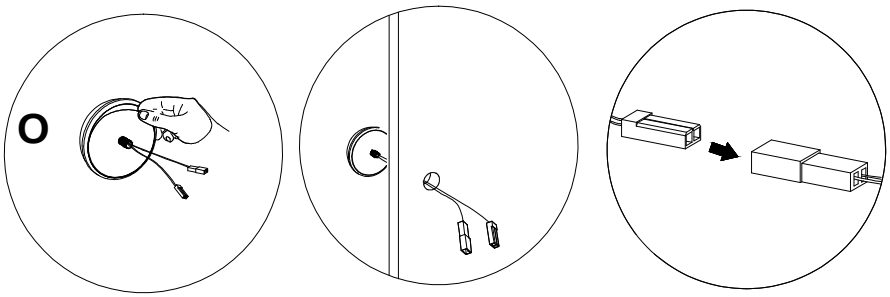

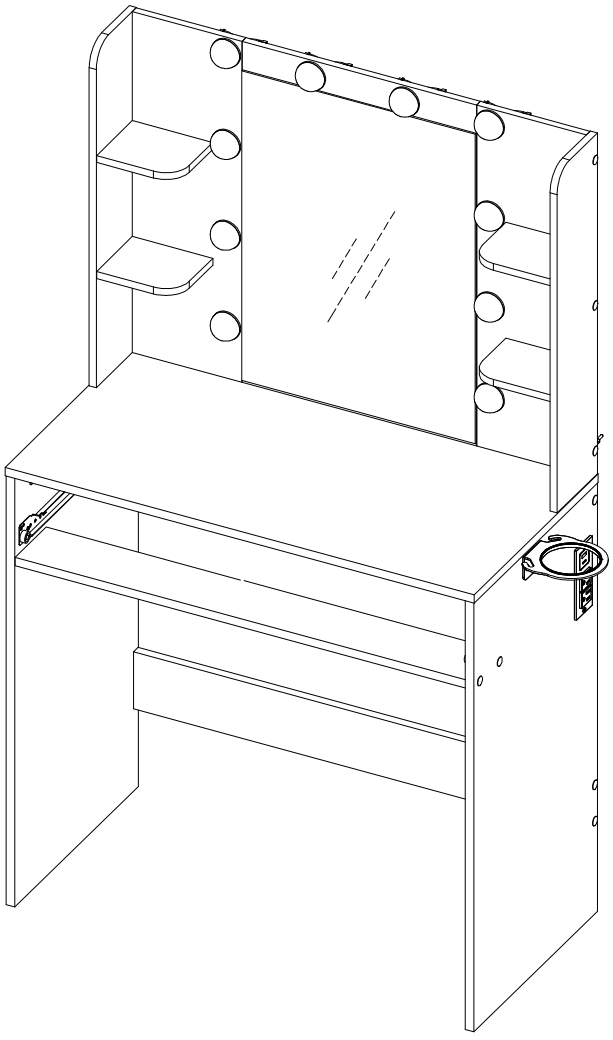


STEP 11

PF013

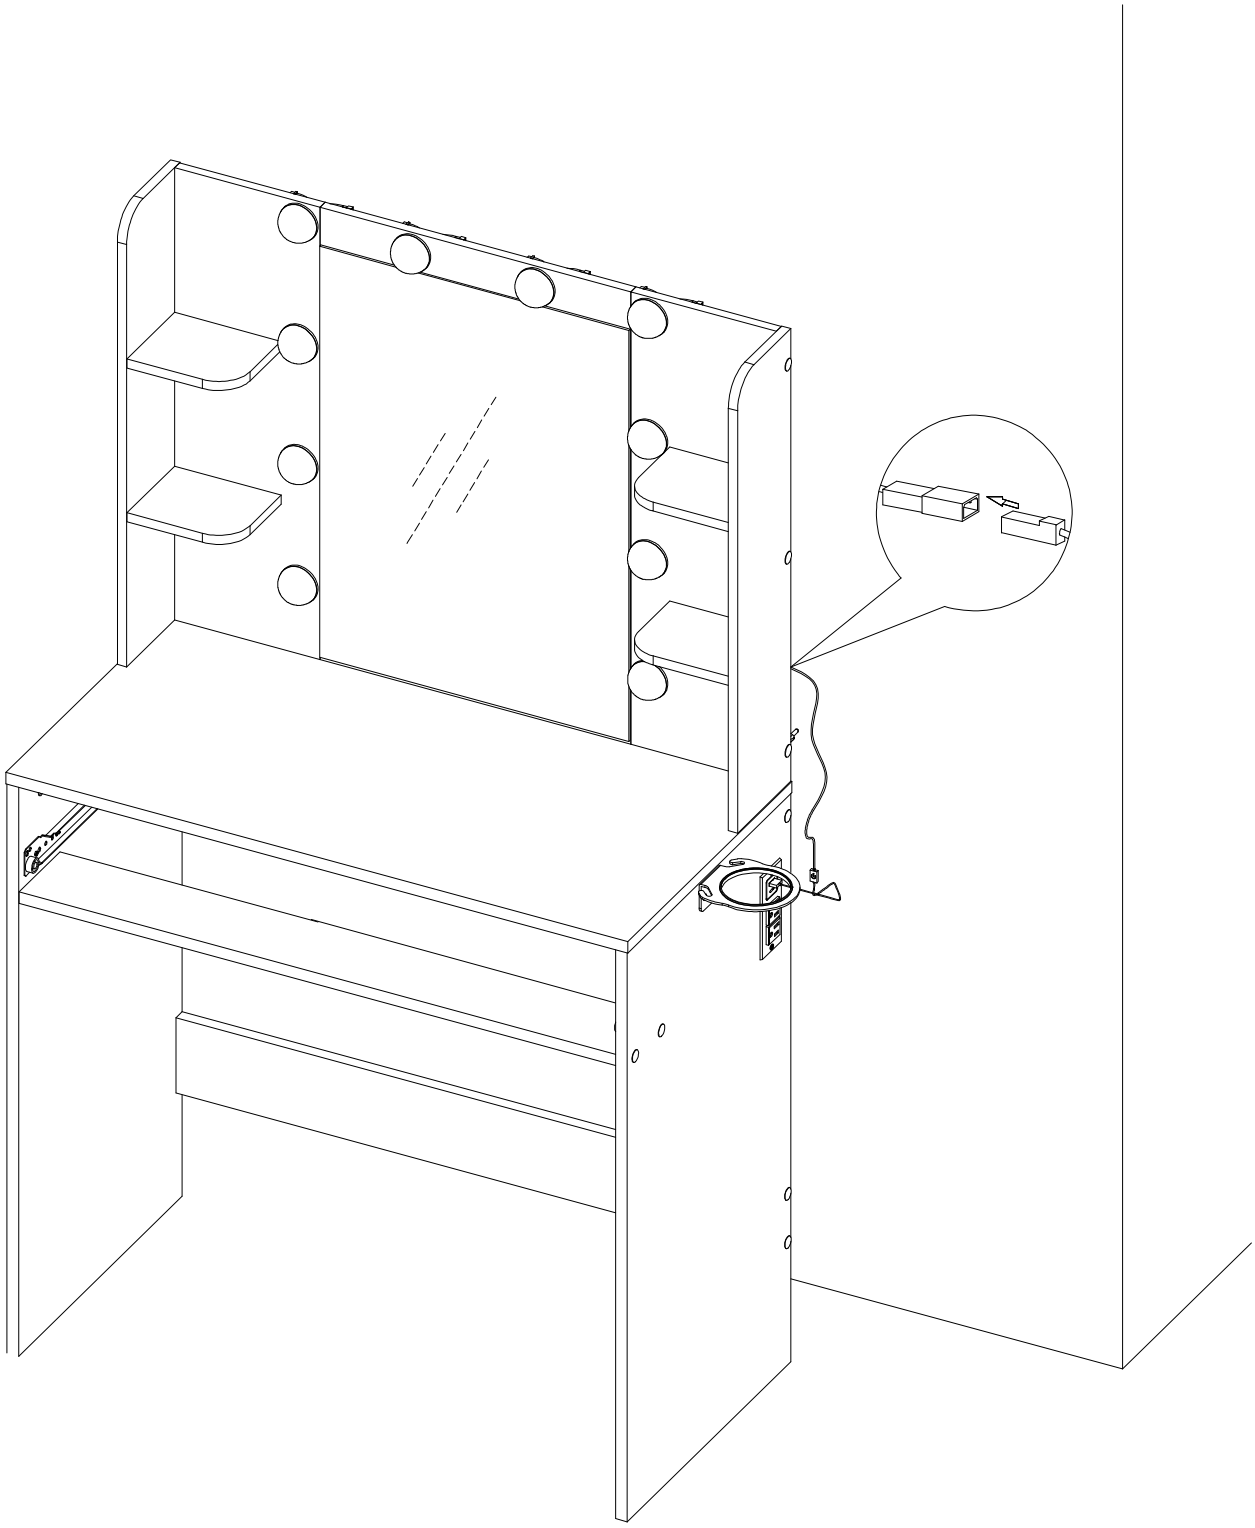



STEP 12

PF013

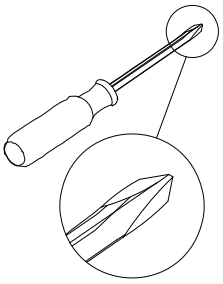


P	X6
	
M3.5X35	

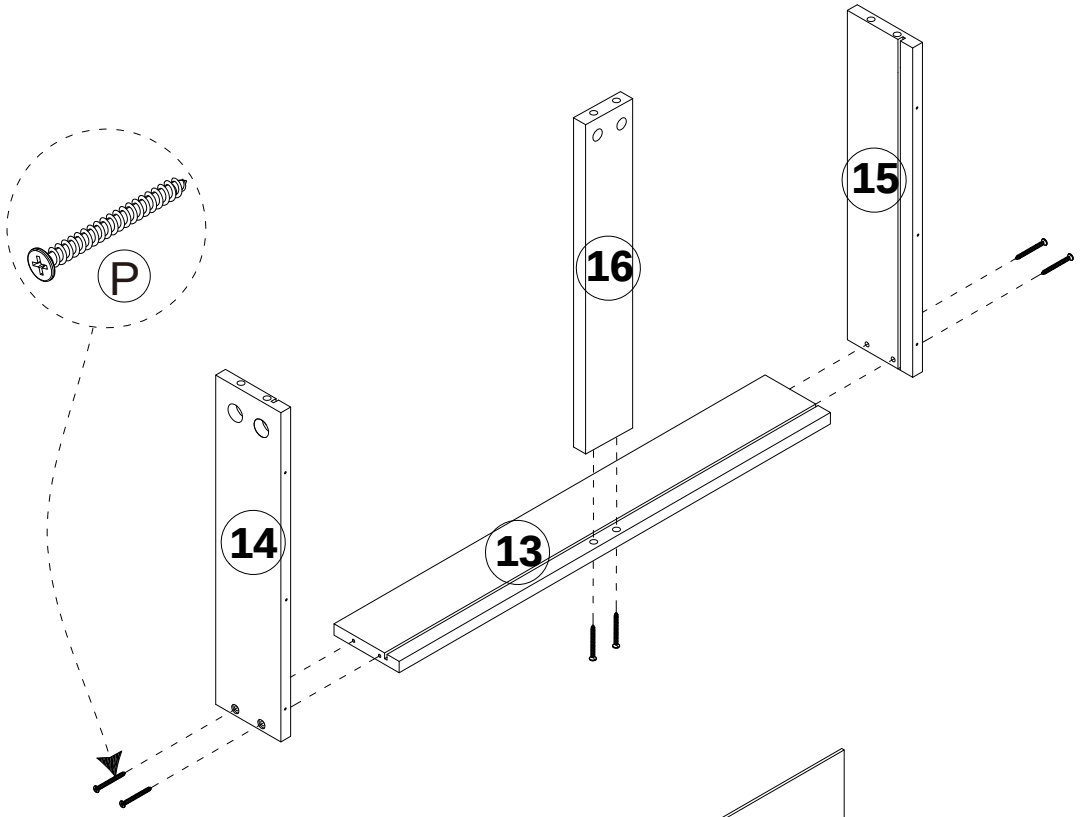


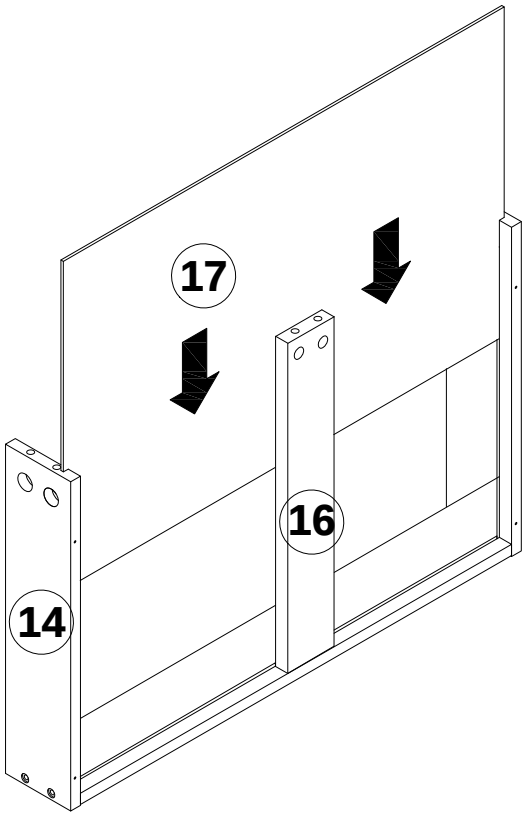



STEP 13

PF013

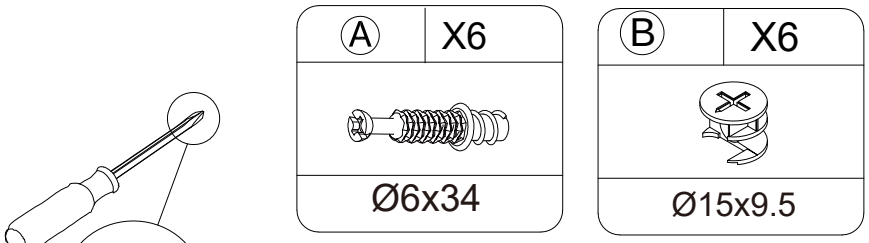


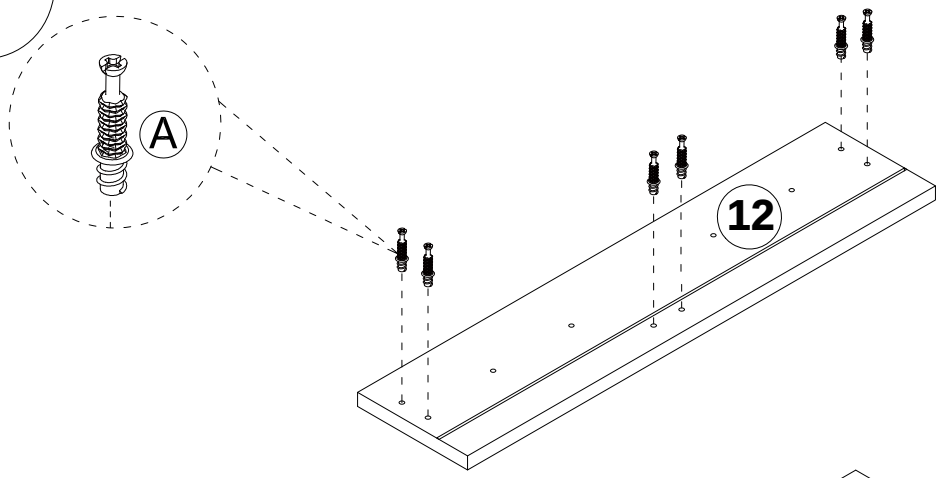

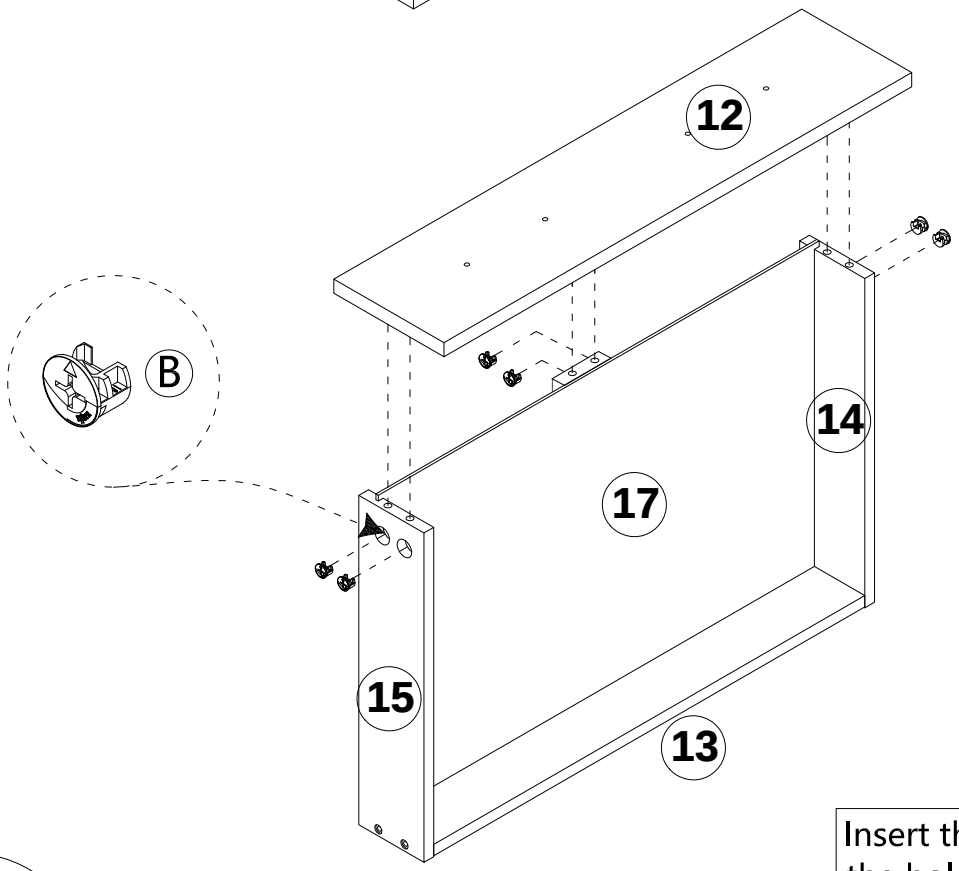

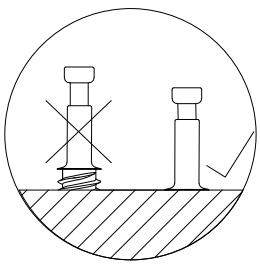


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

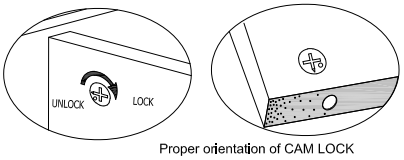


Proper orientation of CAM LOCK


STEP 14


PF013

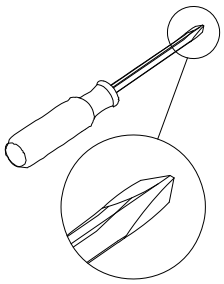

E	X4
	
Ø3.5x12	


M	X1
	
DL	


M	X1
	
DR	

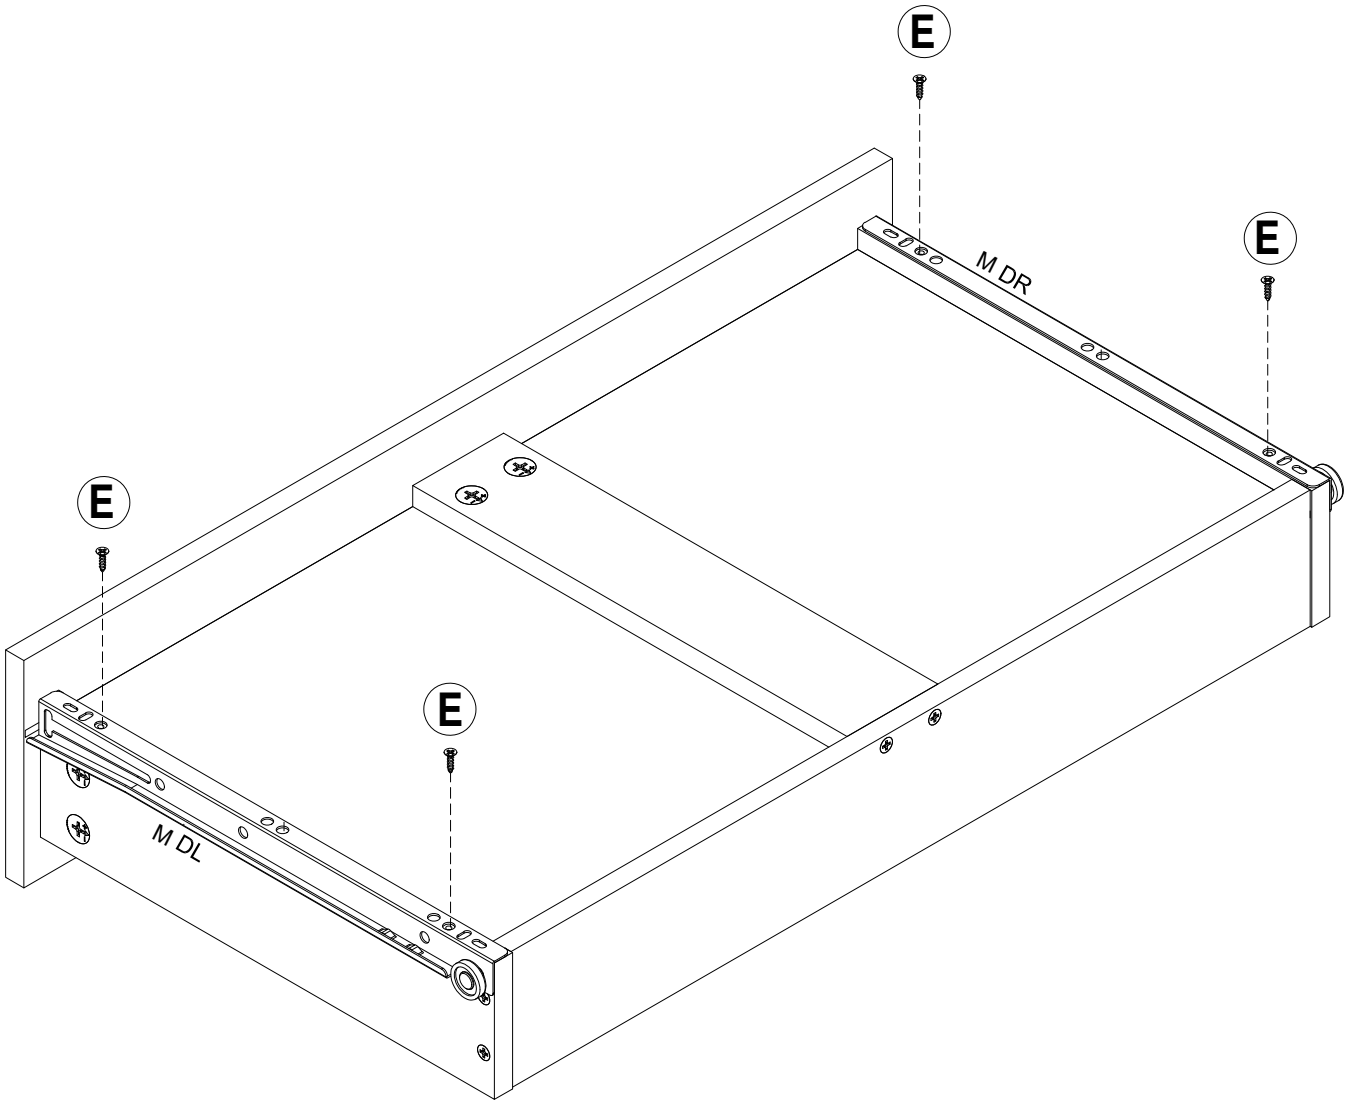


STEP15

PF013

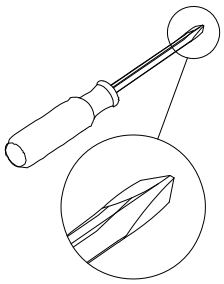


I	X2
	


J	X4
	
M4x15	

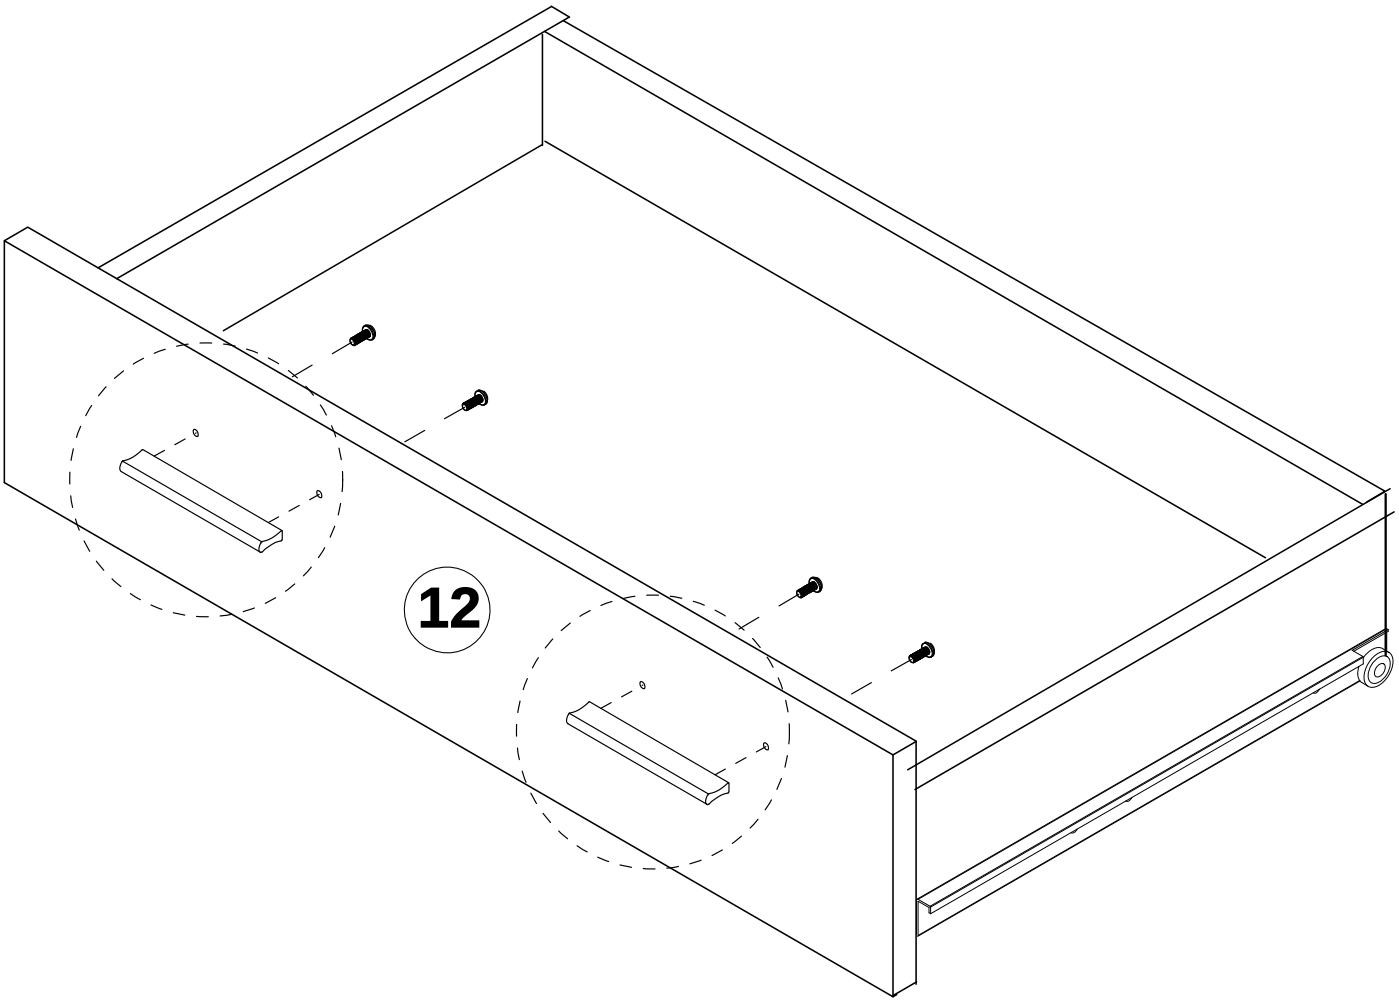

STEP 16


PF013

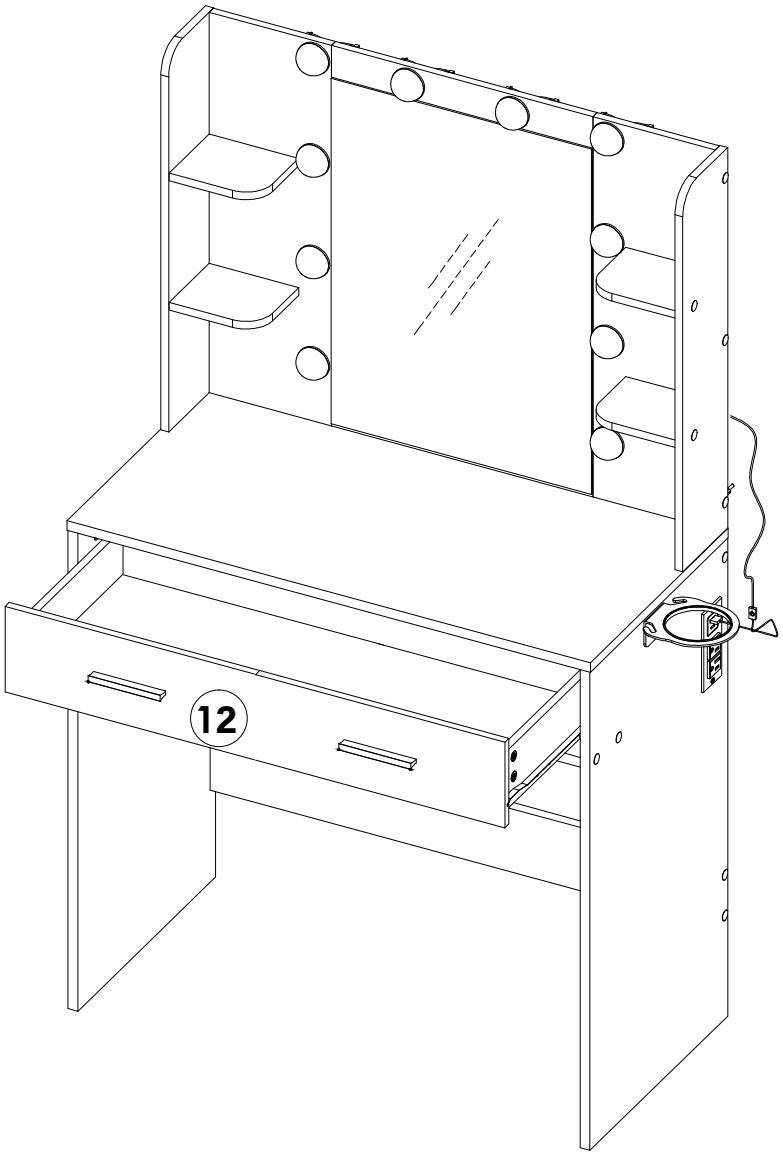


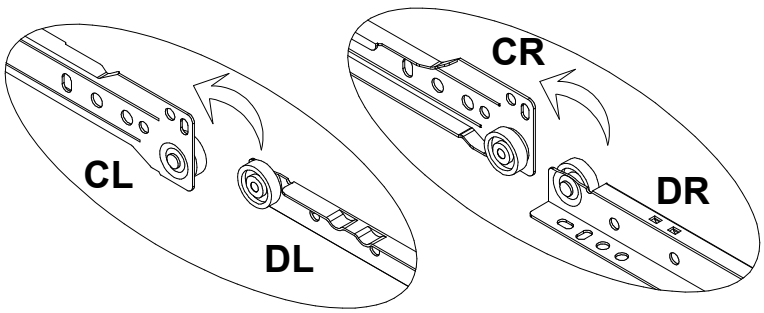



STEP 17

PF013

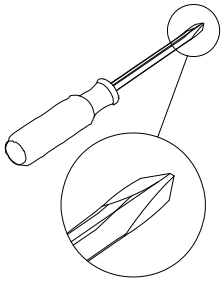

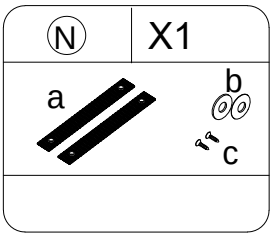

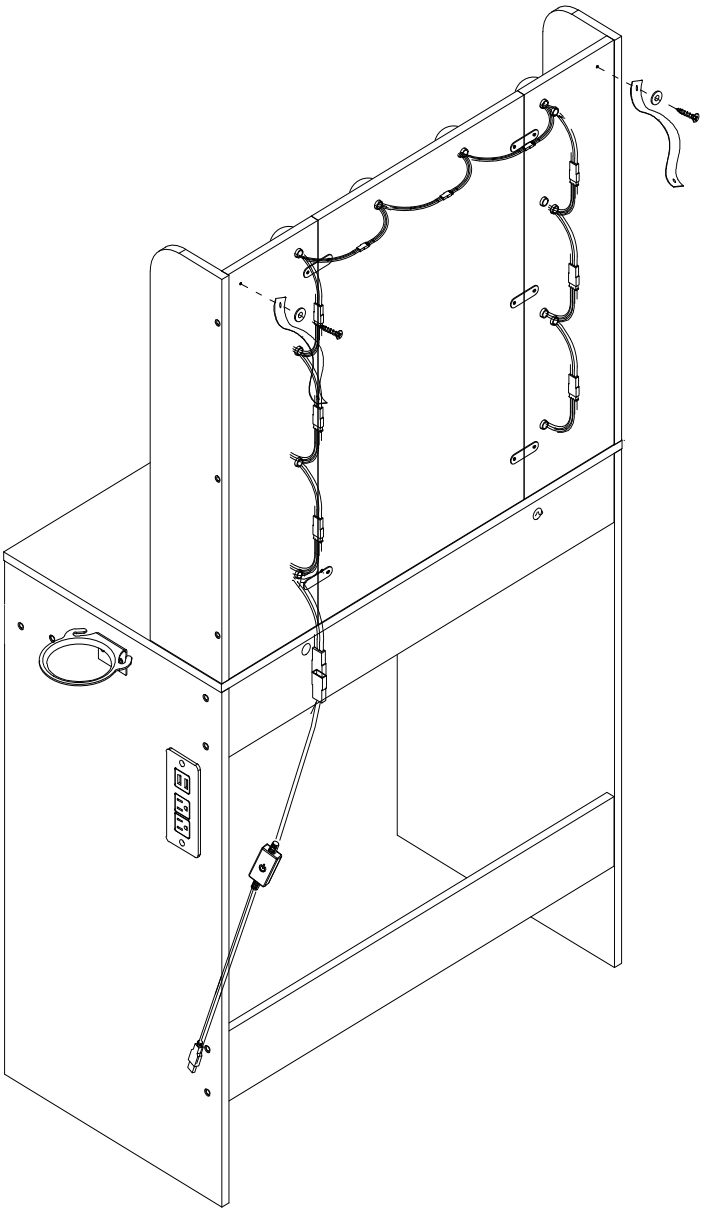


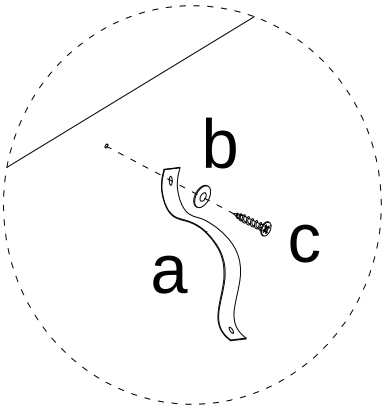



STEP 18

N	X1
b e d	



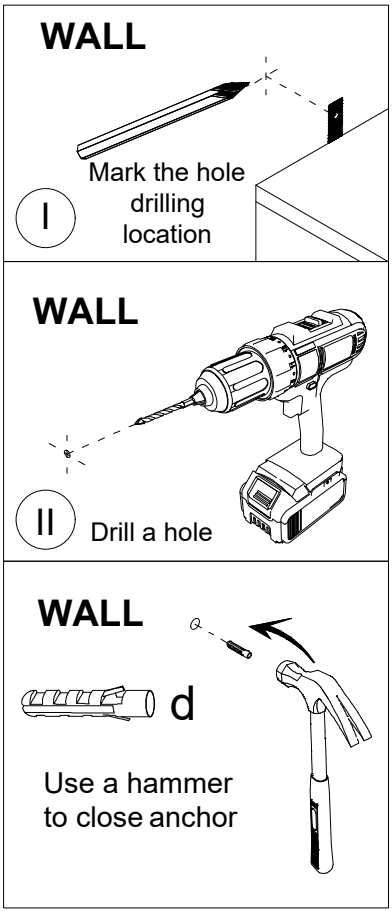


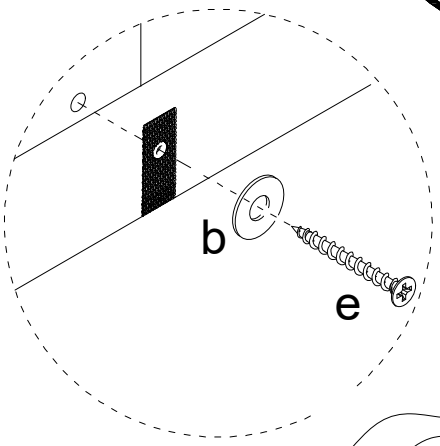


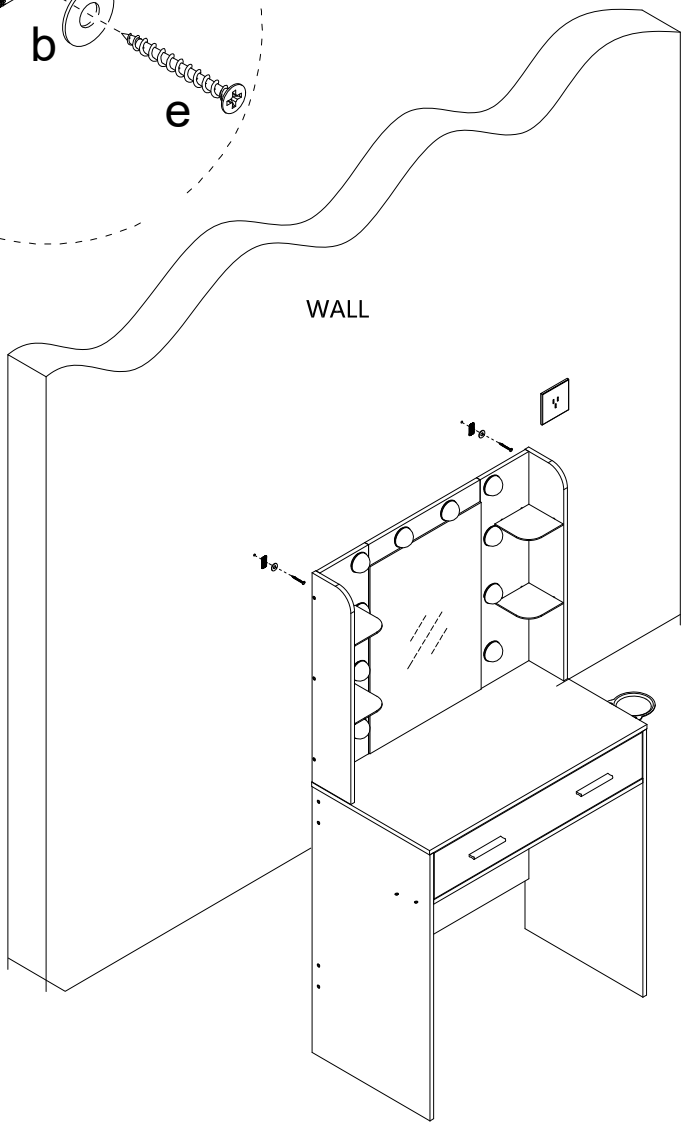


STEP 19

PF013

D	X2
	
Ø8*30	

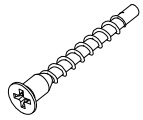
F	X8
	
Ø5*40	


Q	X8
	
M20	

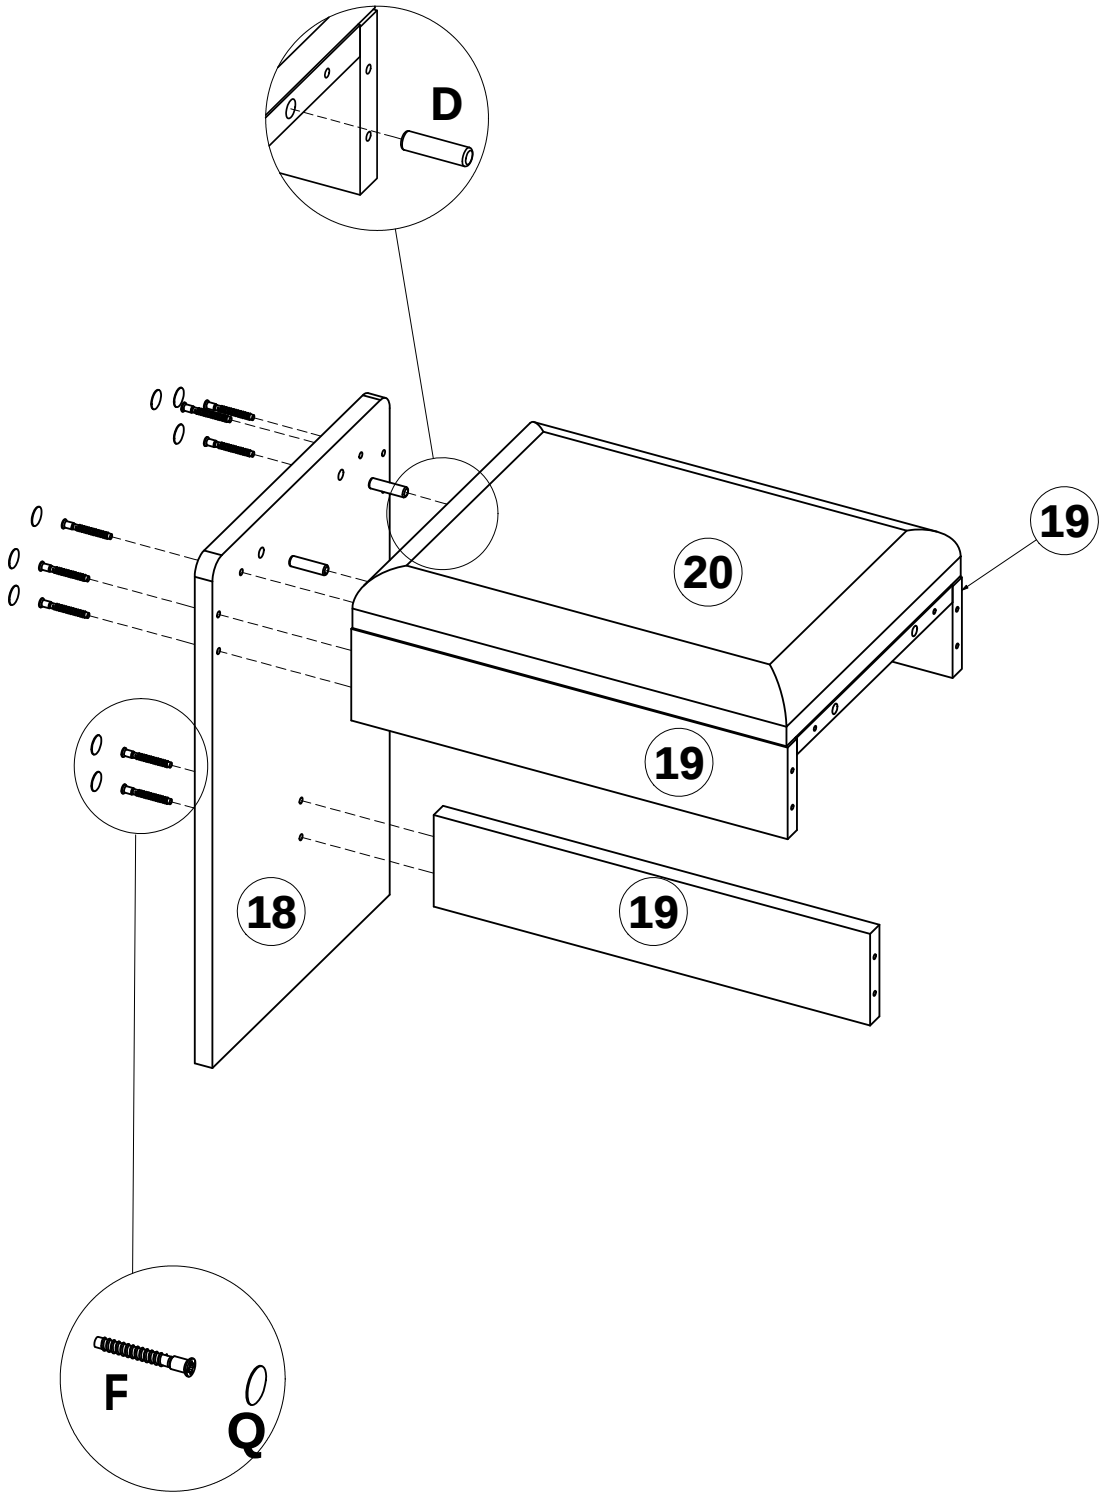


STEP 20

PF013

D	X2
	
Ø8*30	

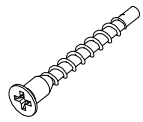F	X8
	
Ø5*40	

Q	X8
	
M20	

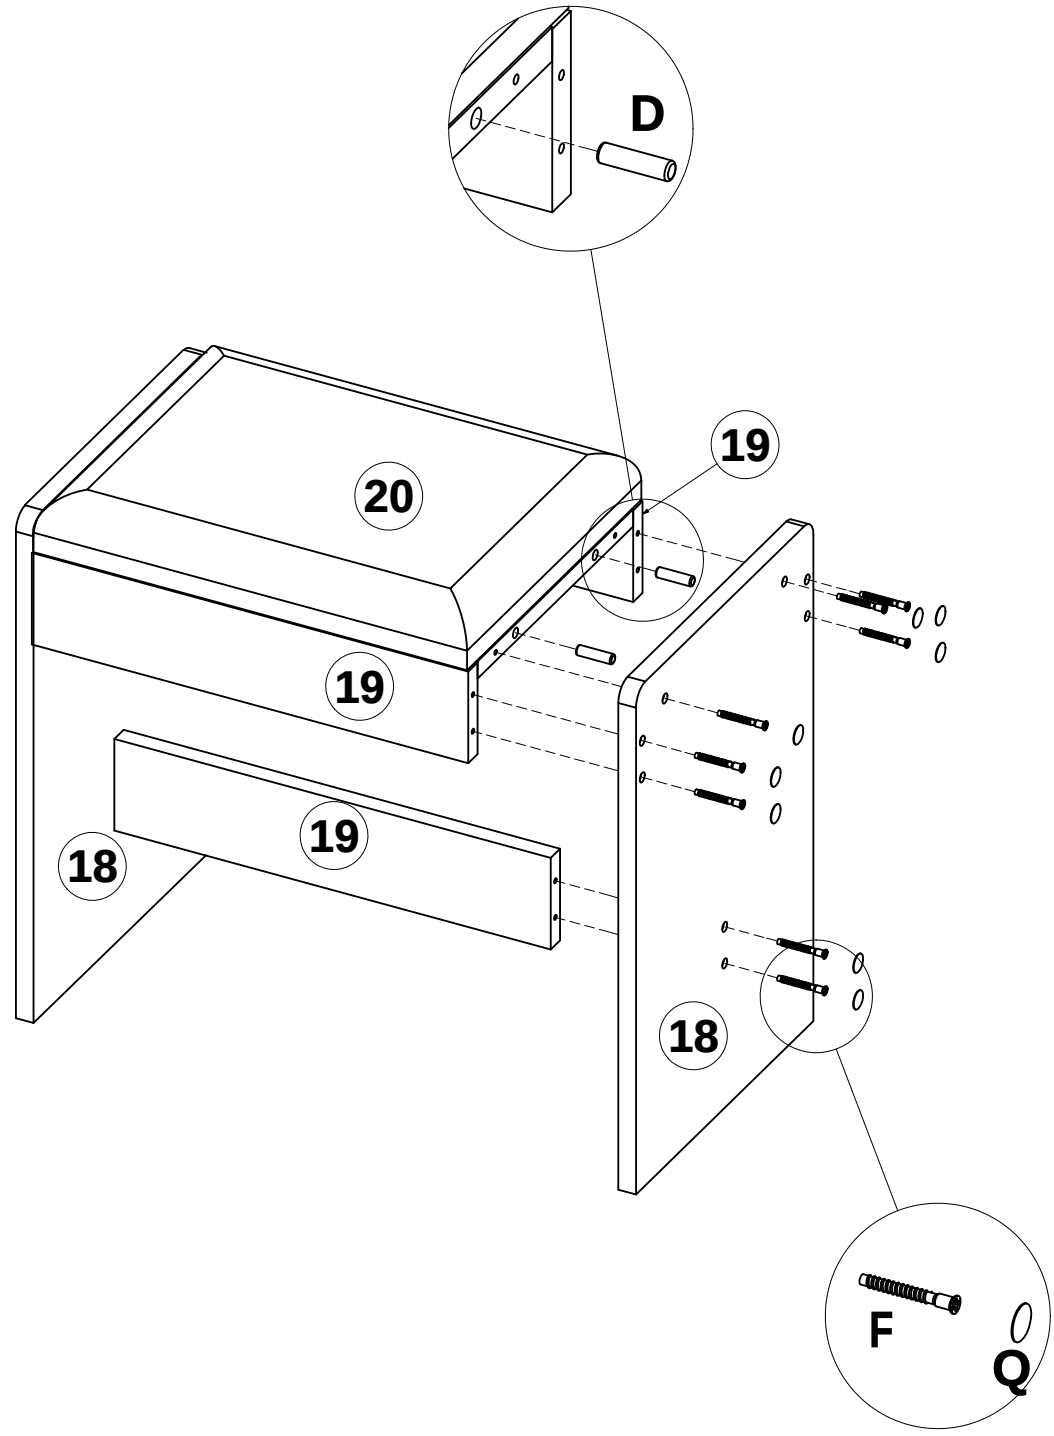

FURNITURE CARE AND MAINTENANCE

Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years of service, please refer to this care and maintenance guide.



MAINTENANCE

Tighten all bolts and screws again within the first 2 weeks of assembly
Check the tightness of all bolts every 2 months, tighten them if necessary



CLEANING

Clean the surface of the PB and MDF (medium - density fiberboard) with a lightly dampened cloth.
Small amount of mild soap can be used if necessary

- **Dry the surface immediately after cleaning.**

⚠ **DO NOT use bleach or alcohol detergent to clean the surface.**
⚠ **DO NOT apply wood treatment on parts made with MDF/PB.**

Medium - density fiberboard and PB will swell and distort when suffer from water damage. Make sure to dry the furniture immediately after cleaning