




Installation & Assembly

LAURA / BED

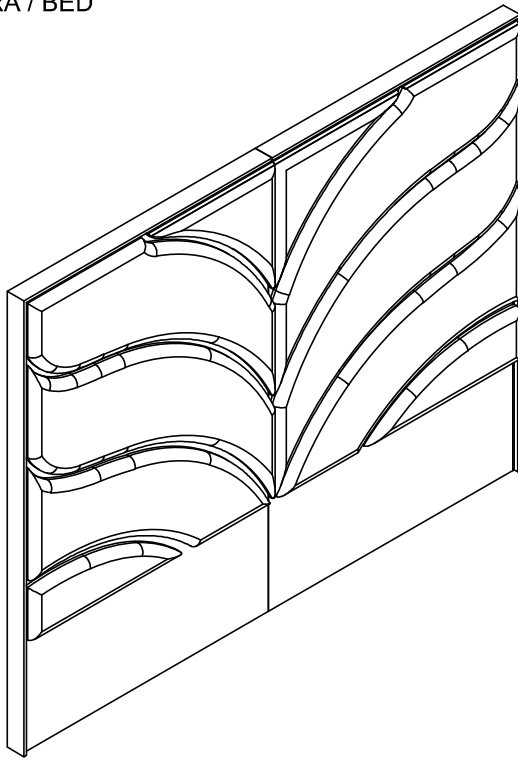

00302	00301	00103
8X	4X 	4X 
MINIFIX KILIT	MINIFIX MILI	YSB VIDA Ø6X35




1X




2X

1.STEP



00302	00301
8X	4X
MINIFIX KILIT	MINIFIX MILI

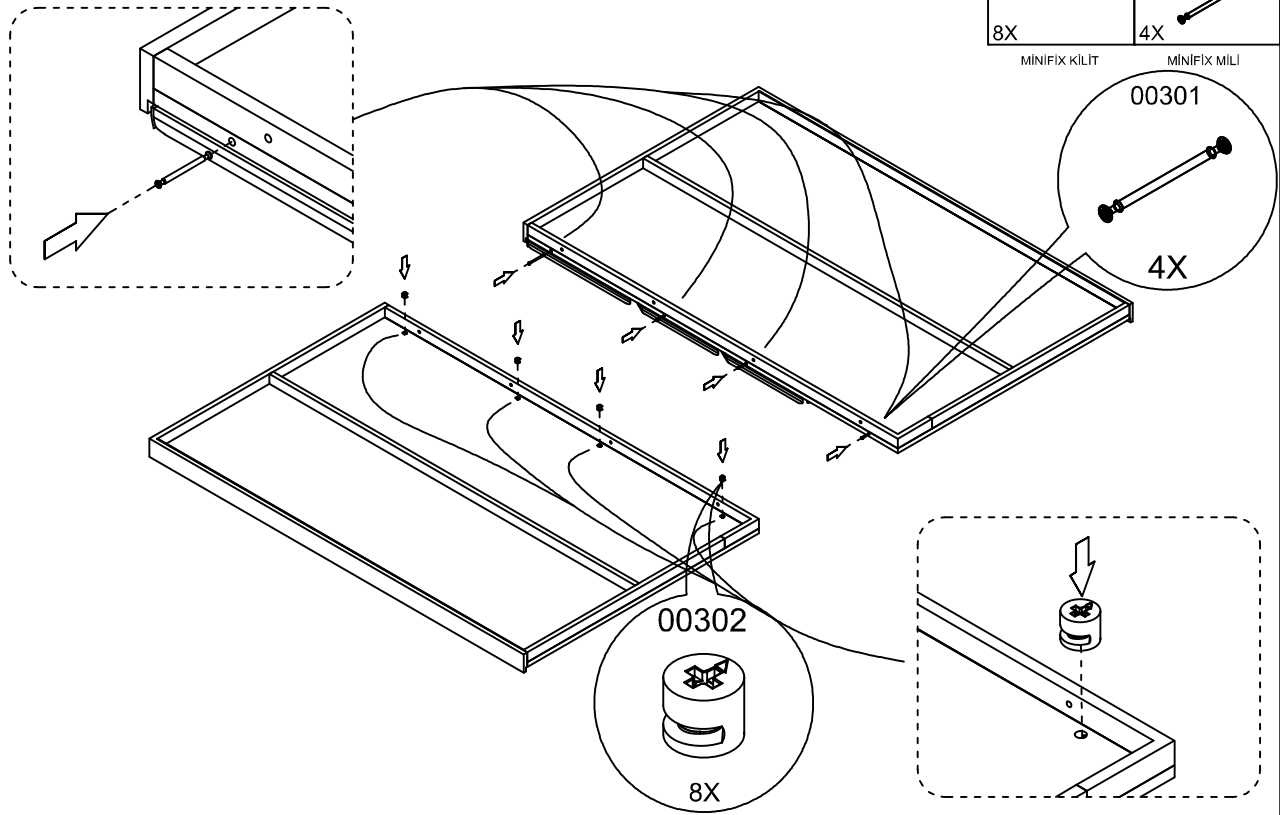

2.STEP

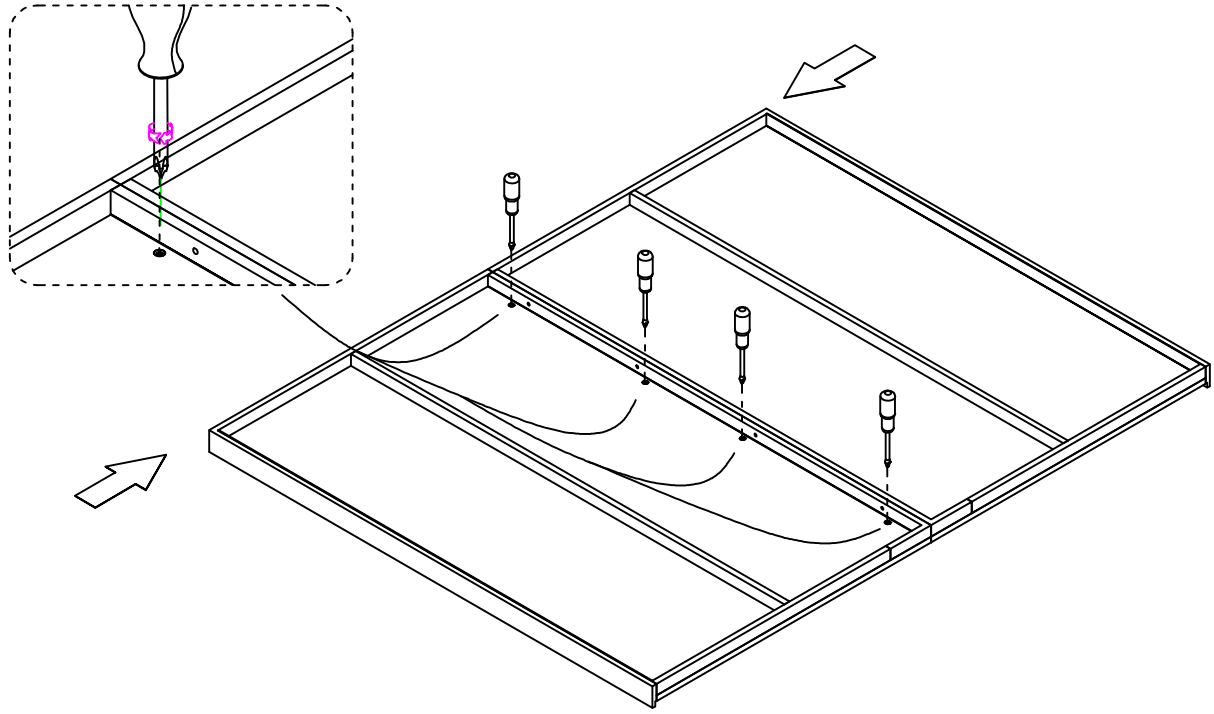

3.STEP

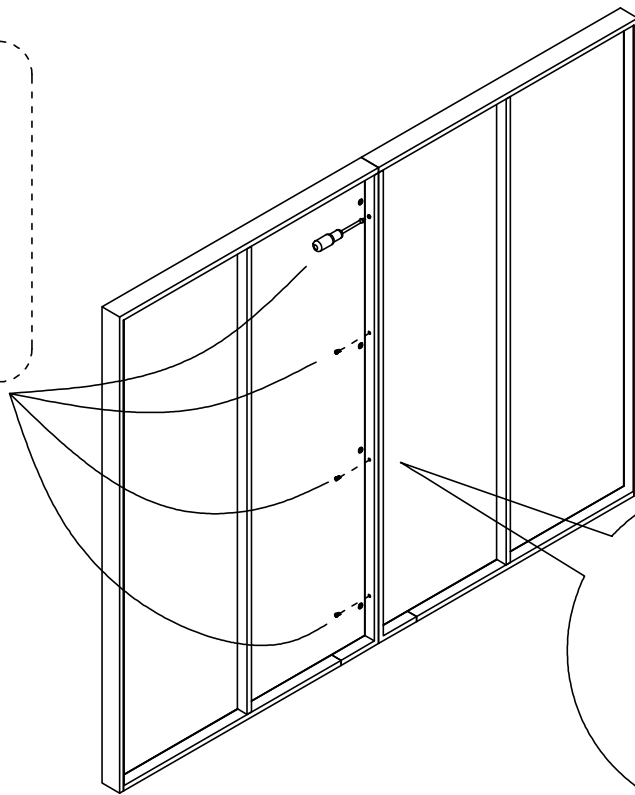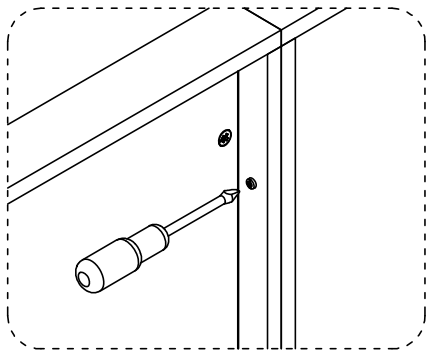


00103



4X


YSB VIDA Ø6X35





00103

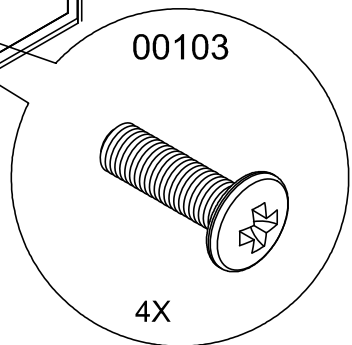


4X

LAURA / BED

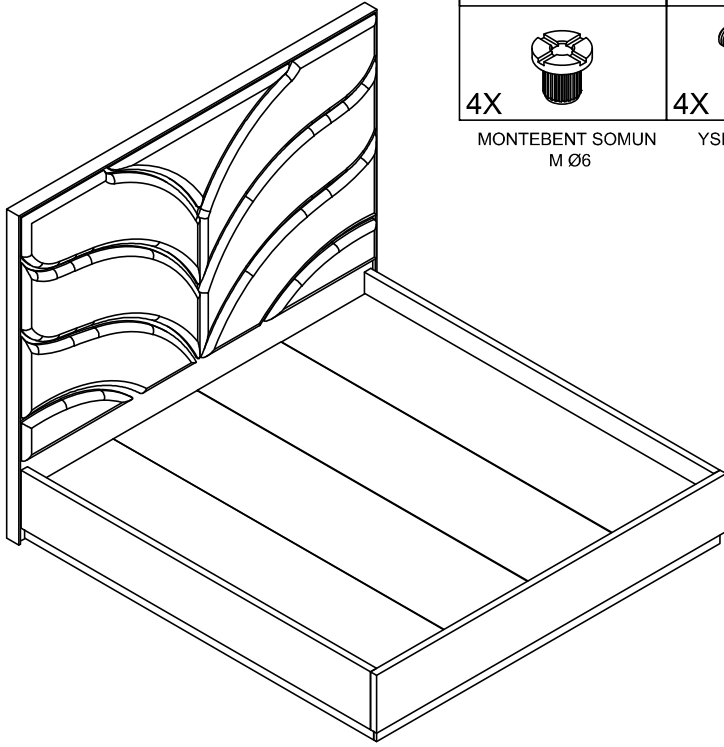

00103	00102	00201	00101
4X 	4X 	4X 	44X 
MONTEBENT SOMUN M Ø6	YSB VİDA Ø6X30	KARYOLA KÖŞE BAĞLANTI	YSB VİDA Ø6X15




1X



2X


1.STEP

00201	00101
4X	16X
KARYOLA KÖŞE BAĞLANTI	YSB VIDA Ø6X15

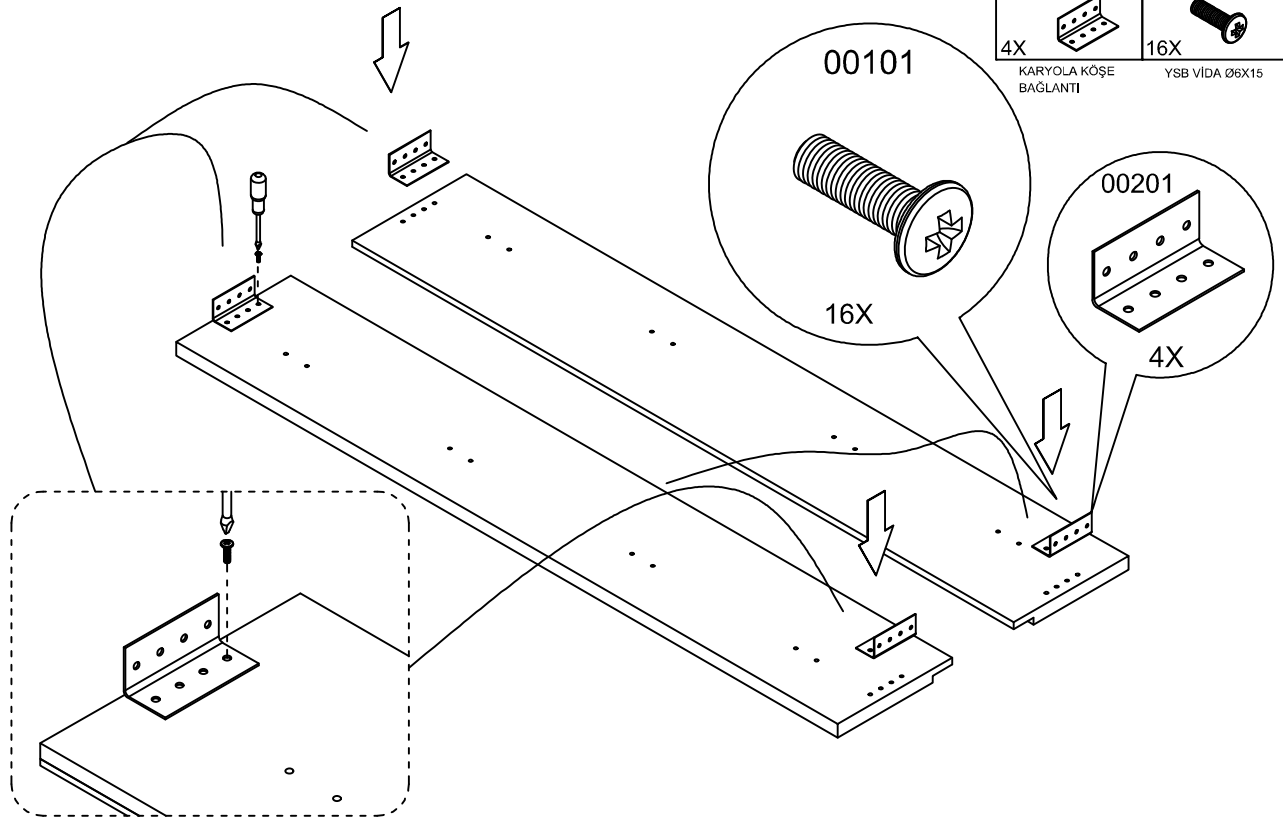

2.STEP

00103	00102	00101
16X	16X	16X
MONTİBENT SÖMÜN M Ø6	YSB VIDA Ø6X30	YSB VIDA Ø6X15

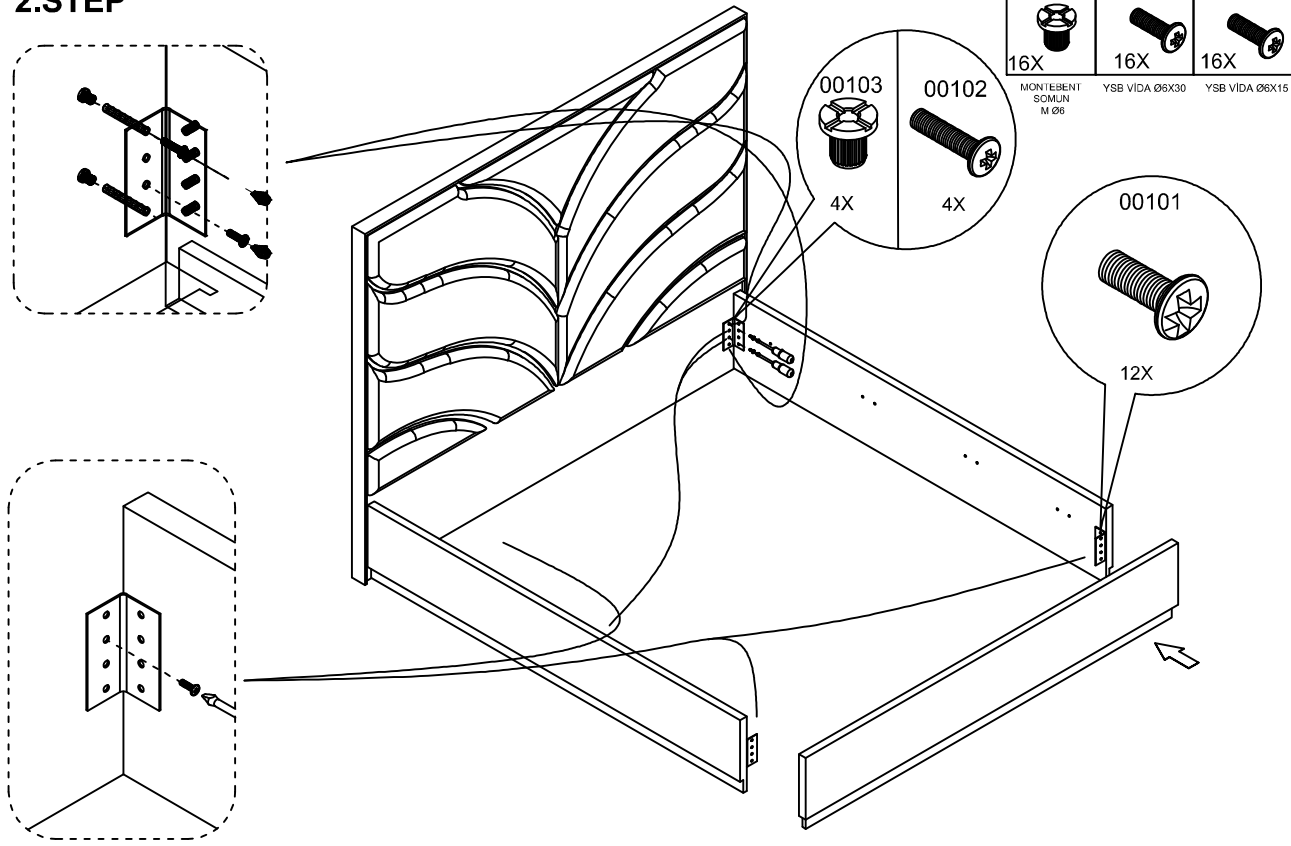


3.STEP


00101

16X

YSB VIDA Ø6X15


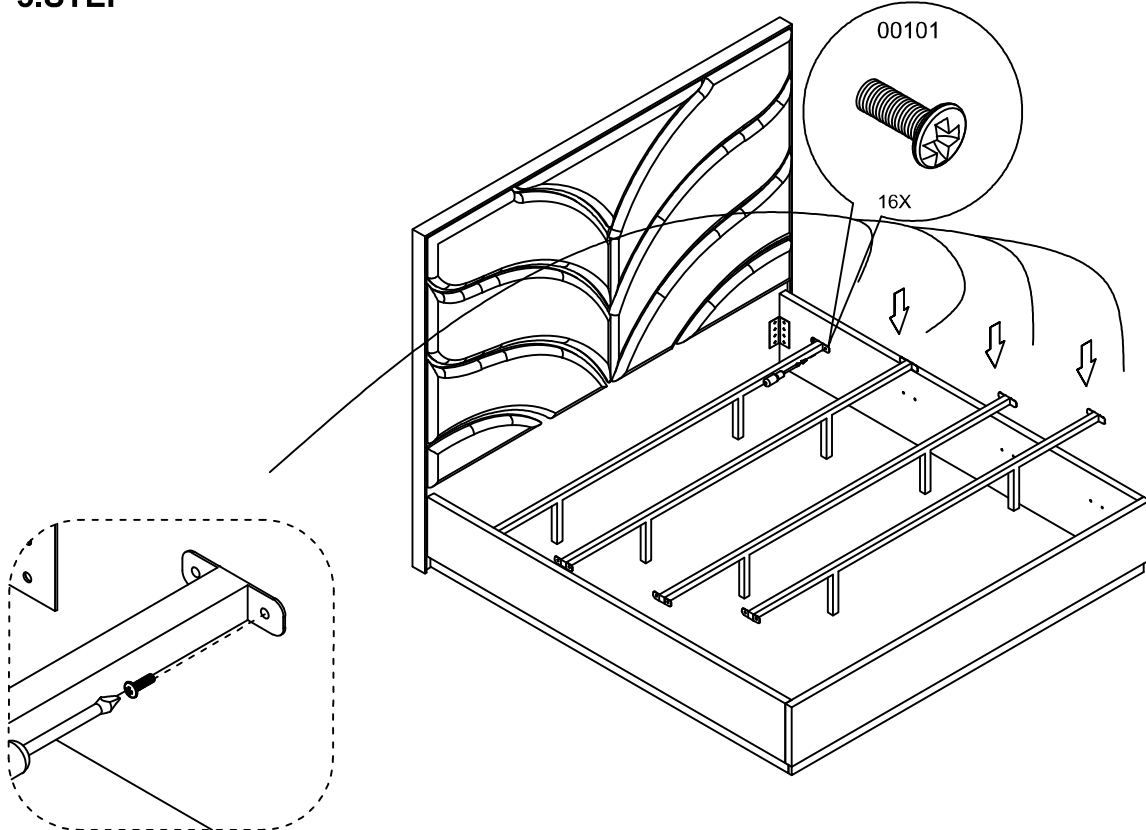


4.STEP

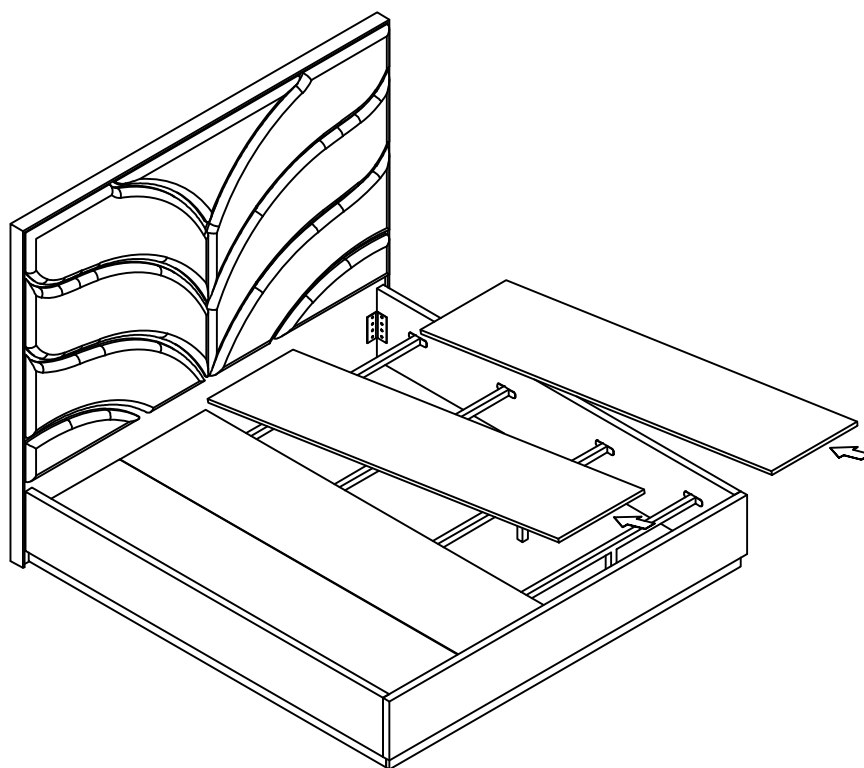


LAURA / DRESSER MIRROR

2X	8X
AYNA DEMİRİ	YSB VİDA Ø6X20

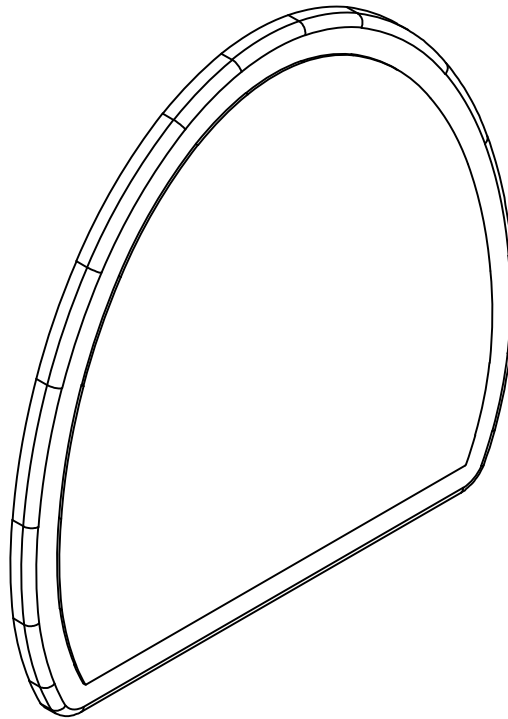

1.STEP

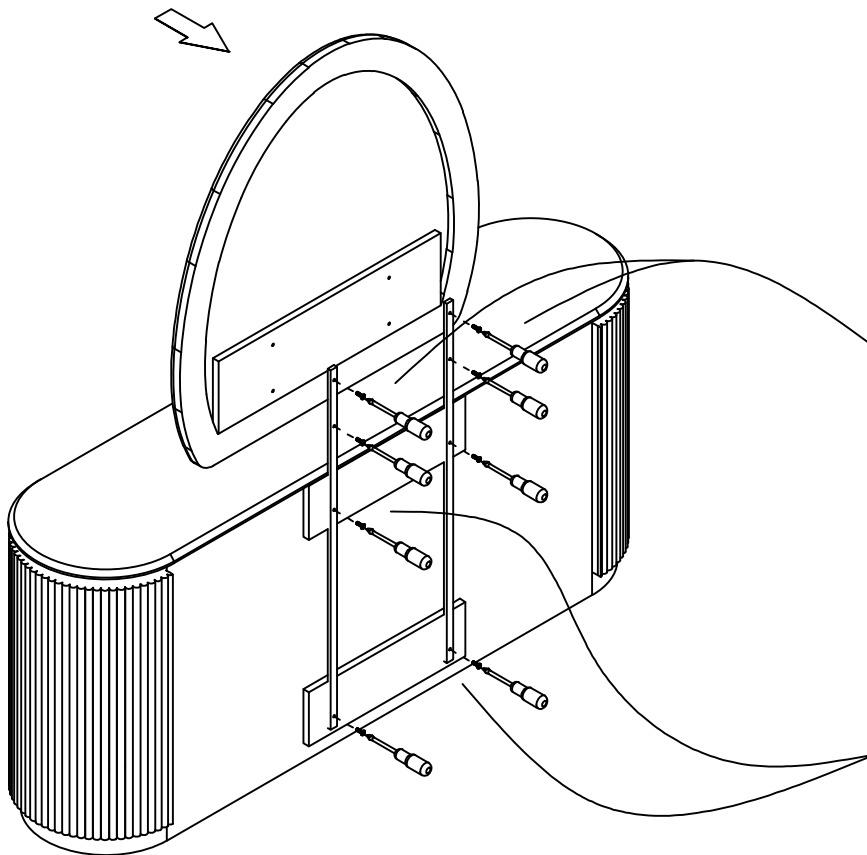

2X	8X
AYNA DEMİRİ	YSB VİDA Ø6X20

