


Floor Lamp

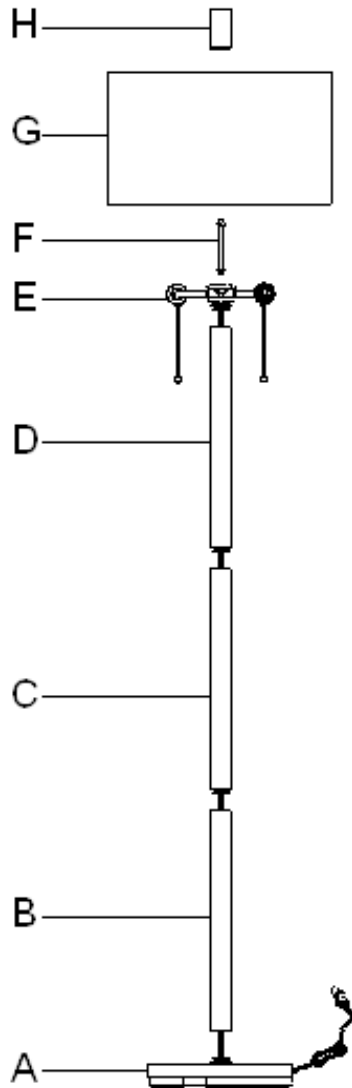

1. Screw pole (B) clockwise onto lamp base (A) and turn to tighten.
2. Screw pole (B), (C), (D) and socket (E) together.
3. Screw tube (F) onto socket (E) till tight.
4. Place the shade (G) onto tube (F) and screw it by finial (H).

GENERAL PRODUCT INFORMATION:

This product is suitable for dry locations only.



IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug as a feature to reduce the risk of electric shock (one blade is larger than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not use with an extension cord unless the plug can be fully inserted. **DO NOT ALTER THE PLUG.**

BULB TYPE: Use only with maximum of 2*100 watt incandescent bulbs (bulbs not included).

PARTS DIAGRAM

- (1) * tube (F)
- (1) * finial (H)