


MANUAL INSTRUCTION

TRIPLE-DOOR METAL STORAGE SHED

G37104-02-HJ

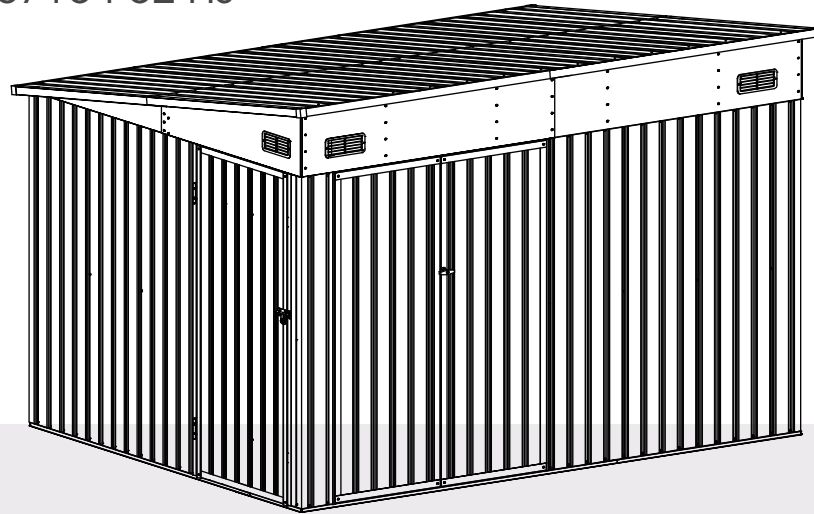

Reach us at:



service@kmcglobe-us.com



(USA) +1 213-816-4788


We offer a diverse range of products to meet the needs of customers.




part 1: Precautions and preparations 2-5

part 2: Material list (please check before installation) 6-12

part 3: Bottom frame 13-15



part 4: Wall 16-30

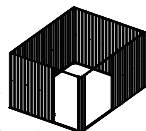


part 5: Roof 31-45



part 6: Door 46-64



part 7: Floor 65-68

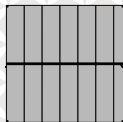

part 8: Help center 69

BEFORE YOU START

Owner's Manual

Prior to installation, it is important that you contact your local government authority to determine if building approval is required. Study and understand this owner's manual. Important information and helpful tips will make your construction easier and more enjoyable.

Assembly instructions

Instructions are supplied in this manual and contain all appropriate information for your building model. Review all instructions before you begin. During assembly, follow the step sequence carefully for correct results Please be aware: **this unit takes two people about one full day to complete.**


Parts

Check to be sure that you have all the necessary parts for the building.

Separate contents of the carton by the part number while reviewing parts list.


Familiarize yourself with the hardware and fasteners for easier use during construction. These are packaged within the carton. Note that extra fasteners have been supplied for your convenience.

TOOLS MAY REQUIRED

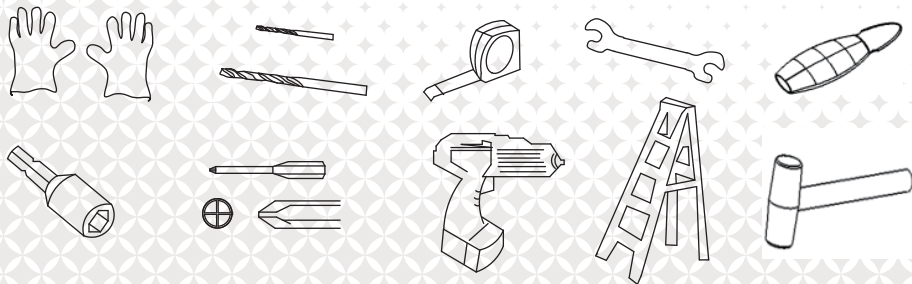

Use heavy duty gloves when handling steel sheets and flashing

PLAN AHEAD

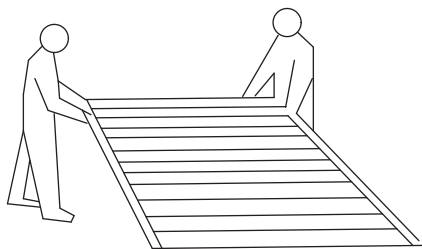

It requires two people a full day to complete installation

Watch the weather:

Please be sure the day you select for installation is dry and calm.

DO NOT attempt to assemble your shed in windy weather because of risk of damage to panels, or personal injury. Be careful of wet or muddy ground.

Teamwork:

Whenever possible, two or more people should work together to assemble the building. One person can position parts or panels while the other is able to handle the fasteners and the tools.

Site Selection

- Avoid overhanging trees as much as possible as leaves will make regular cleaning necessary and broken branches are a potential hazard.
- Small trees, bushes or fences nearby can be helpful, acting as a wind break

Site Preparation

The site must be prepared so that the base of the shed is level all round and checking with a spirit level is required.

The base can be constructed by treated timber or concrete, in order to stop the moisture getting into the shed. The shed is not designed to be built onto lawn directly. Also the ground will get muddy during rainy days.

If a concrete pad is made, it is important that this slopes towards the edges to prevent water ingress. Time must be allowed for any concrete or cement to dry before building the shed on top

Bases can also be constructed from bricks, blocks, or mounted on a concrete pad. The bricks or blocks should be cemented onto firm and level concrete footings and the greenhouse frame drilled and screwed to the base.

IMPORTANT NOTES

● Find someone to help you: it is much easier with someone to hold parts, pass tools ect. Also some steps require two people to lift structures together. This is not very heavy work so would suit most able-bodied people.

● Allow plenty of time: rushing often causes errors and the re-doing of incorrect assemblies. If you have never built a shed before, it can take most of a day to carefully complete the construction.

● Have the right tools to hand.

● Safety clothing as recommended in the 'Tools' section.

● Ideally lay out the parts and check that all are present before commencing construction. Lay on cloths or plastic sheets if there is any risk of scratching the parts.

● Tighten all nuts carefully, being sure not to miss any. Check the frame is square and using a spirit level to check that it is upright.



Note: The larger hole is always covered over the small hole.

Part 2: PARTS LIST

Please ensure that all parts, accessories and installation tools are complete before starting the installation.

Due to the variety of accessories, some parts may be glued together, some parts may be trapped inside the larger ones, please check carefully.

In case you cannot find or lose some small parts or screws during installation, we have provided extra parts.

If any accessories are missing or damaged, please contact us immediately.



service@kmcglobe-us.com

PARTS A



W5 x17



W5-K x2



W5-X x1



E810-8 x4



E810-8M x20

PARTS B



W3-C x4



W3-HX x1



W2-HL x1



W2-HR x1



E810-1L x2



E810-1R x2



E810-2 x2



K710-2R x2



E810-3L x2



E810-3R x2



E810-4L x1



E810-4R x1



E810-5L x1



E810-5R x1


PARTS B




K1010-6L x1




K1010-6R x1




E810-6L1 x1



E810-6L2 x1



E810-6R1 x1



E810-6R2 x1



E810-7L x1



E810-7R x1




E810-9 x4



E810-10L x2



E810-10R x2



ULA x1



URA x1



DX1 x2

PARTS B



DLA1 x1



DRA1 x1




DD x2



UA x2



DA x2



DLA x1



DRA x1



DDA x4




DBA x4



C18 x5



E810-11 x2



DC x2




GL x1



GC x4

PARTS B



T-F x4



C2 x4

ST4.2x10mm



F1 x431



M4x10mm

F2 x100

ST4x10mm



F3 x48


φ10φ41mm



V2 x81



SL x58




DH x6



DCS x1



GF x4



M20 x1



ST x2

PARTS C



K810-DL x1



K810-DL1 x1



K810-DR x1



K810-DR1 x1




K810-DM x10



DM-850 x3





DM-220 x1








F1 x28

part 3: Bottom frame

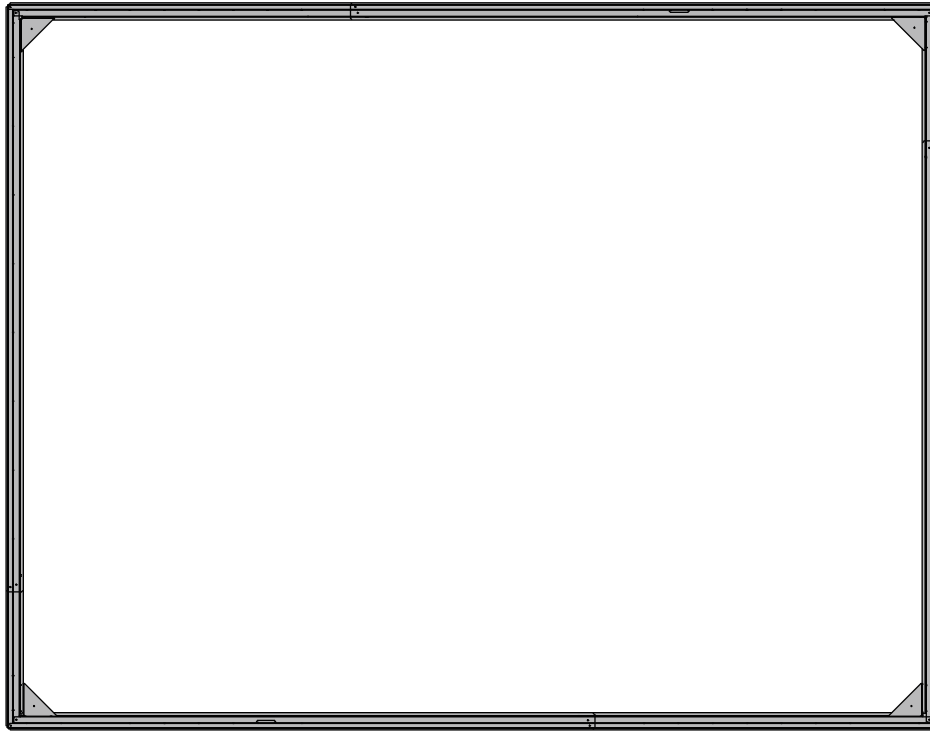


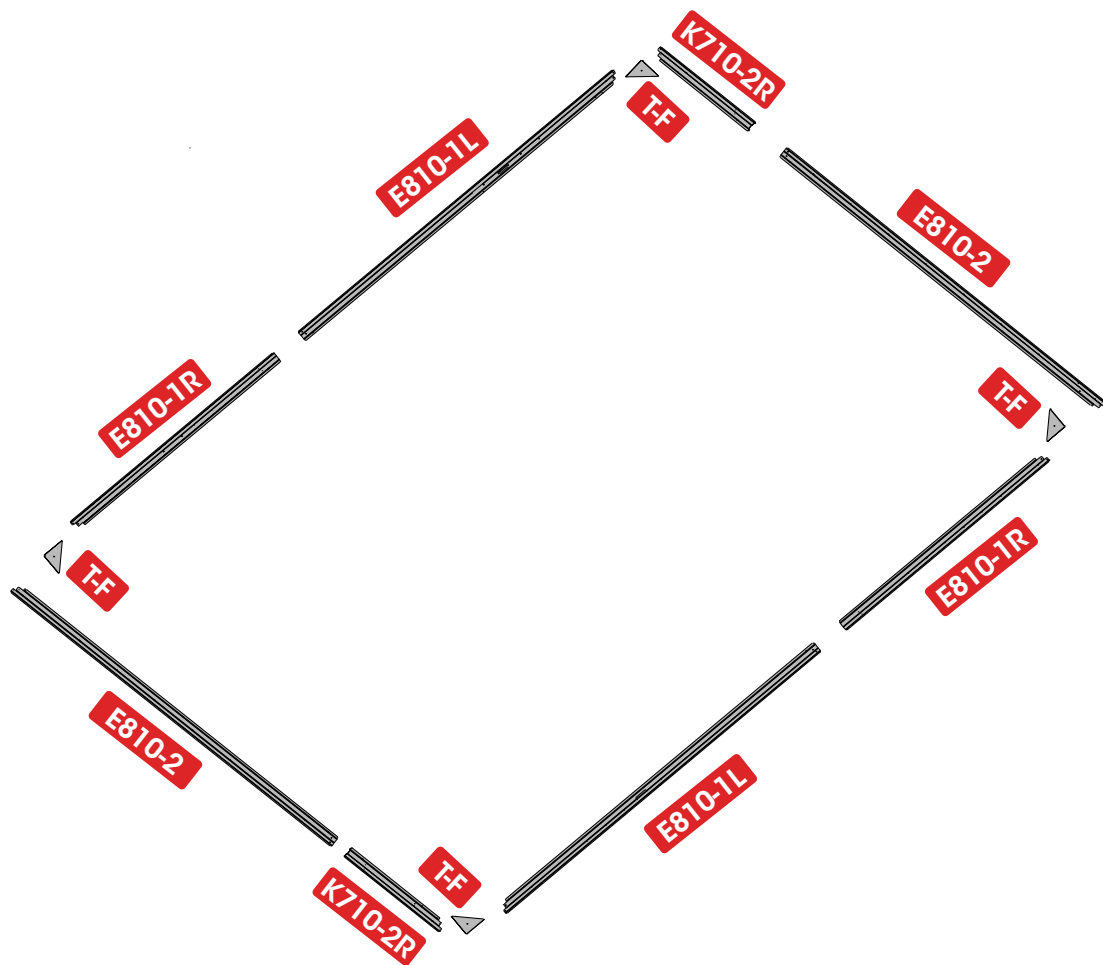

1

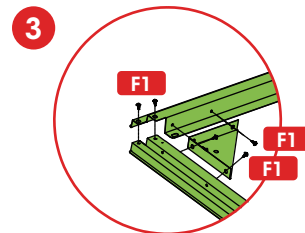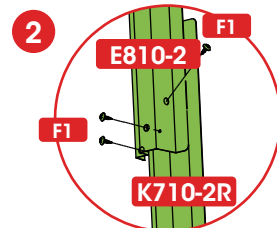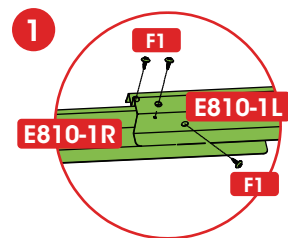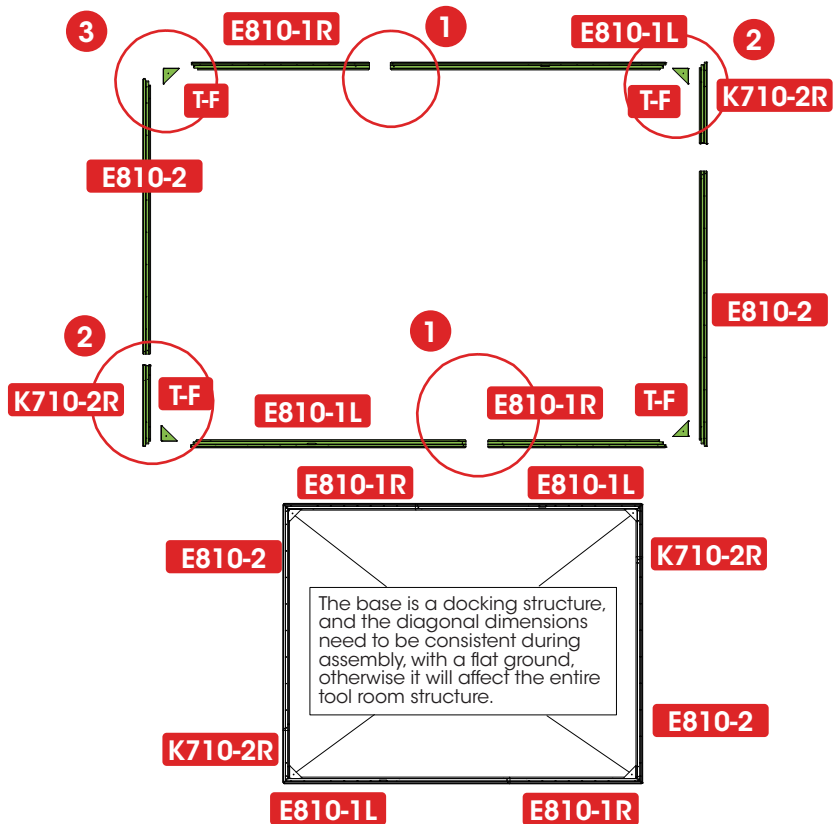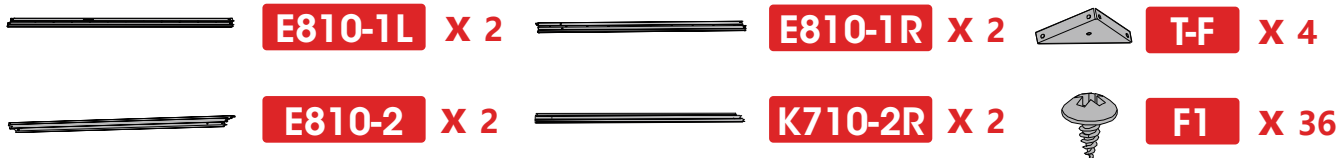

part 4: Wall

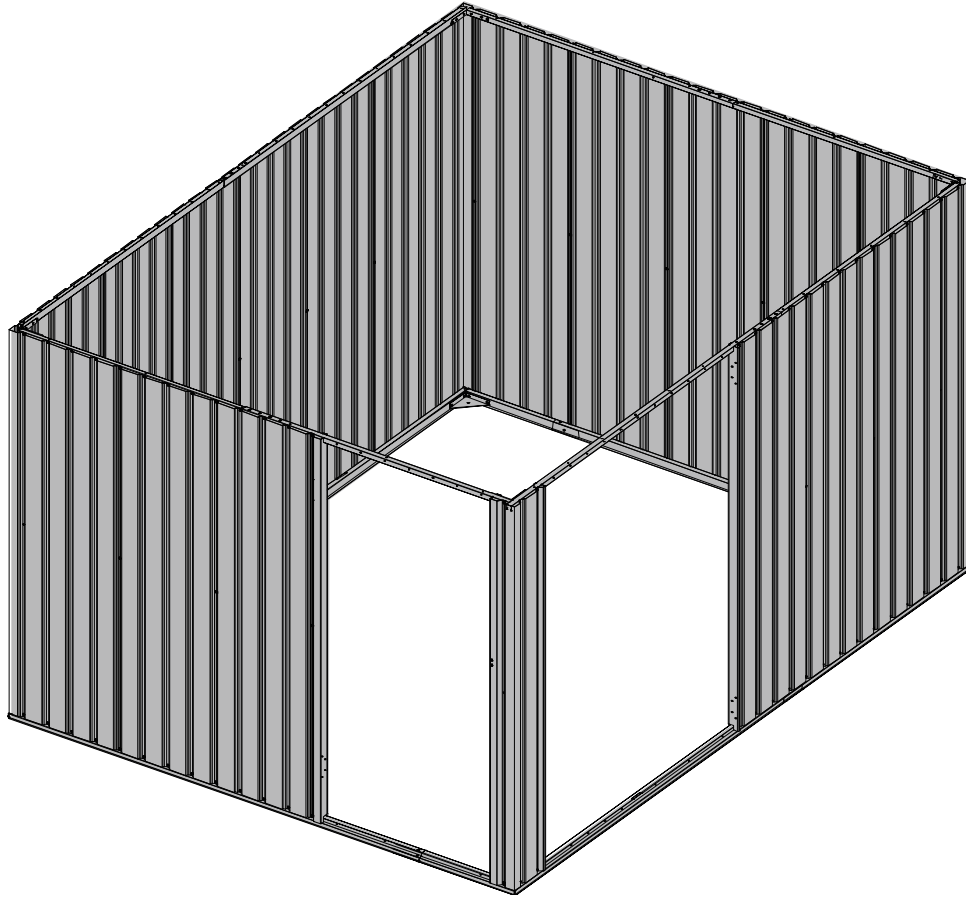






2



W3-C X 4



F1 X 4

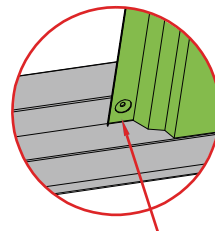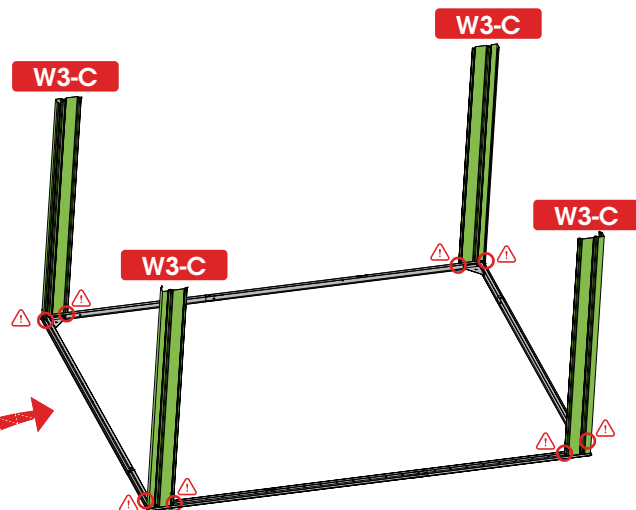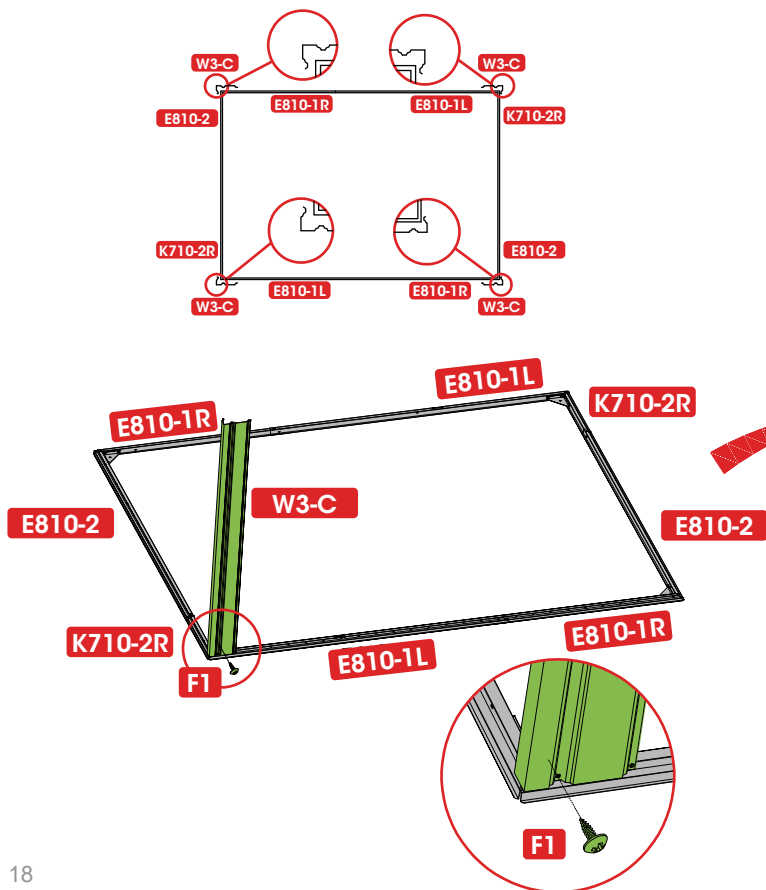

Do not Install screws here.

3



E810-4L X 1



E810-4R X 1






F1 X 8



E810-5L X 1



E810-5R X 1

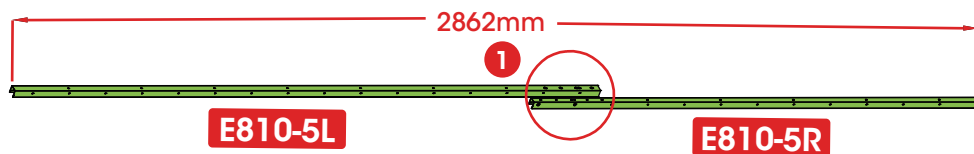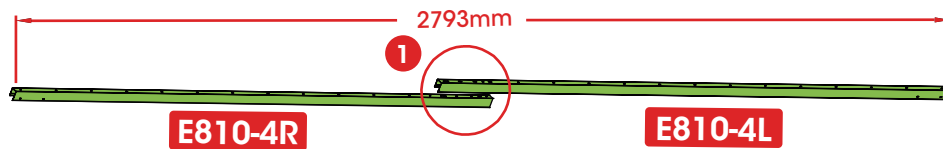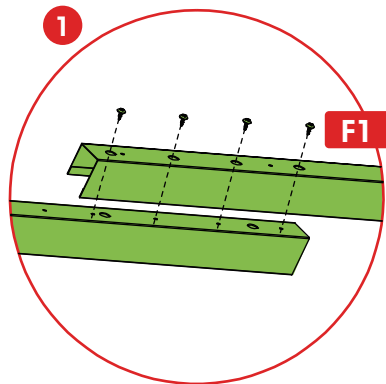


4





F1

X 4

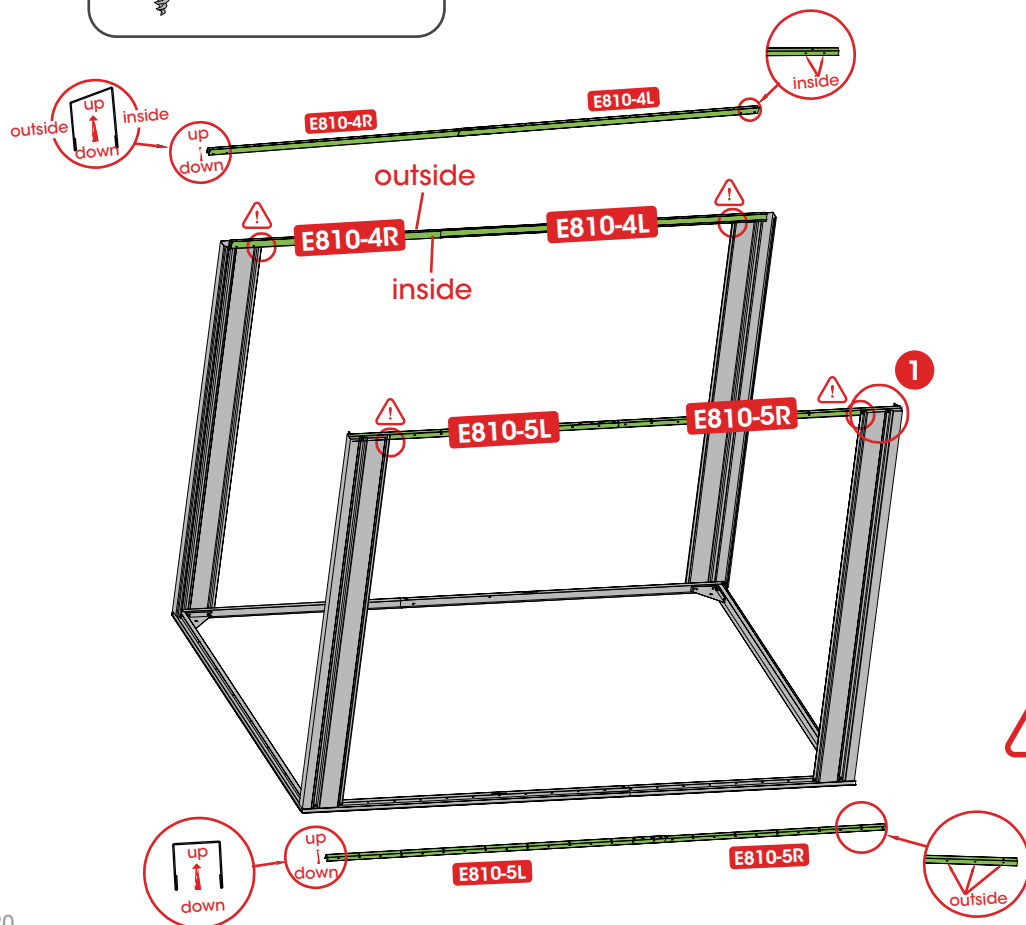


1

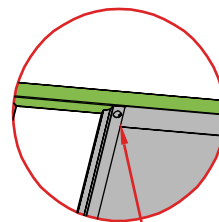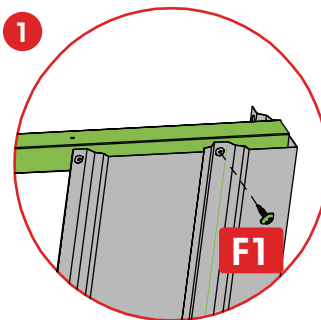

Do not Install screws here.

The porous side faces outward.

5

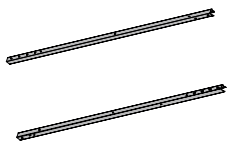

E810-3L X 2


E810-3R X 2



F1 X 16






C2 X 4

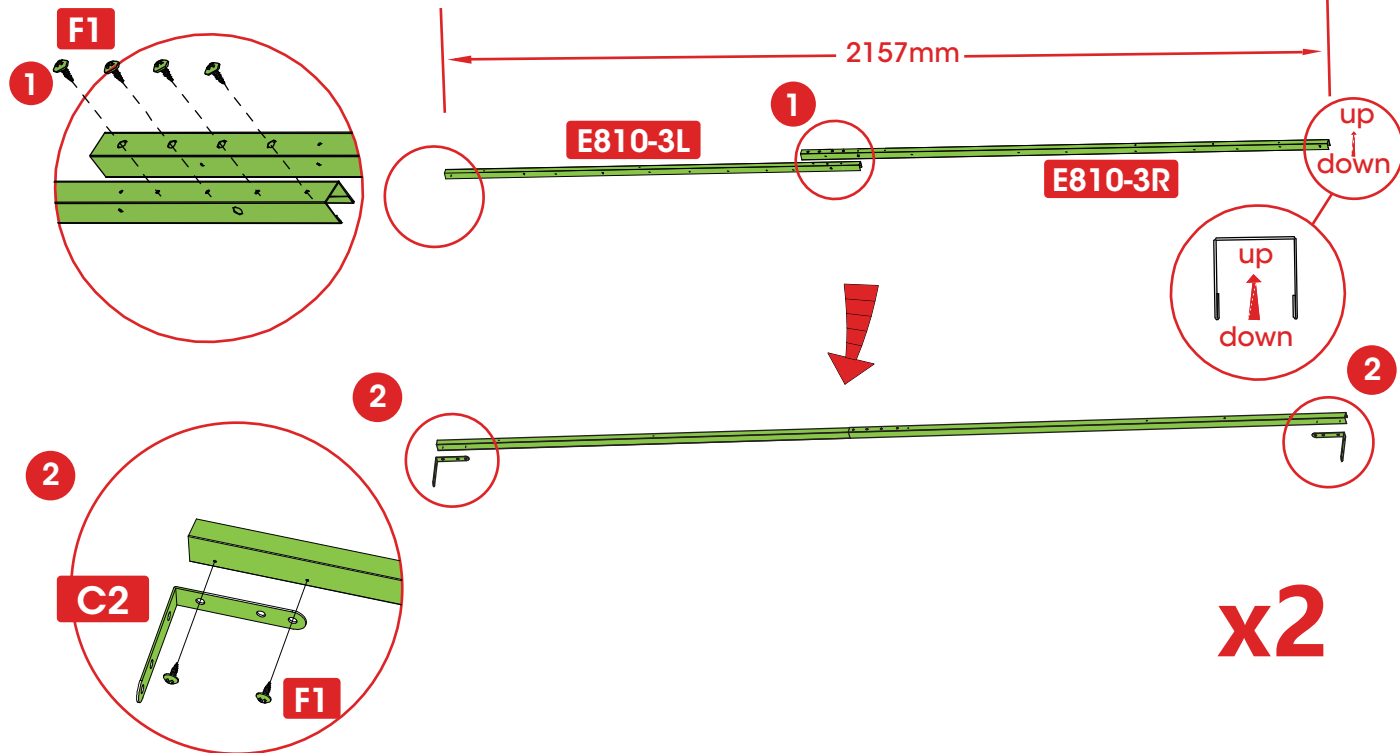


6



F1 X 8

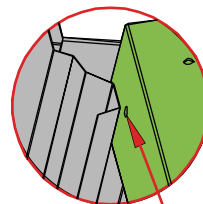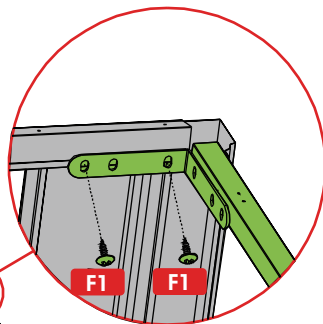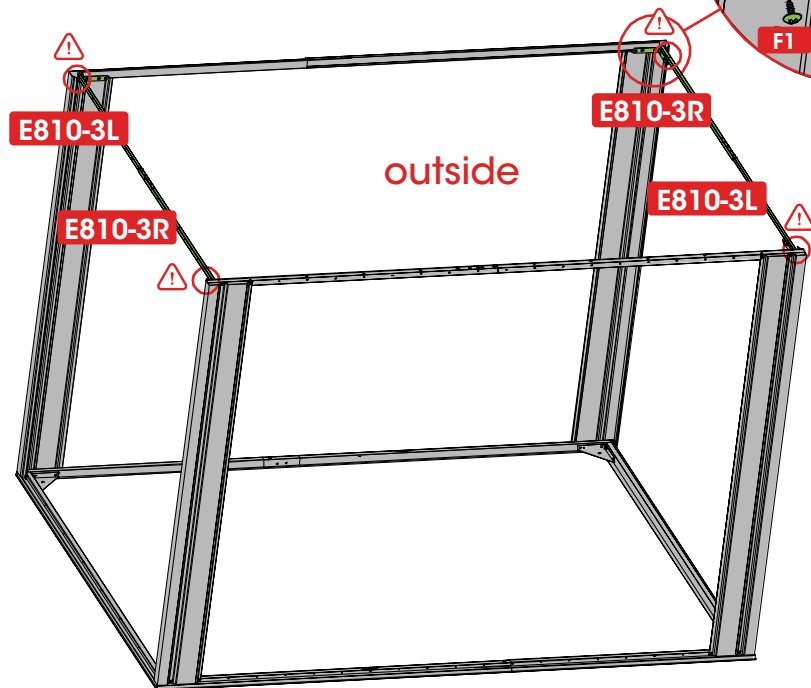

Do not Install screws here.

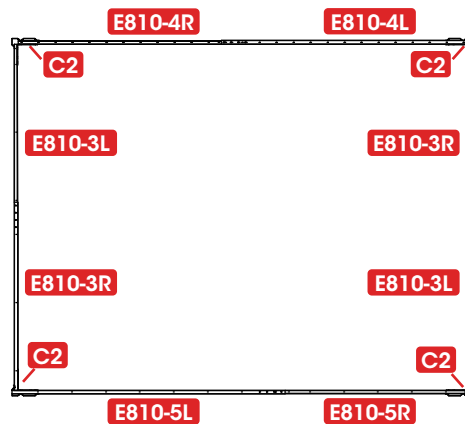


7






W5 X 8



F1 X 66

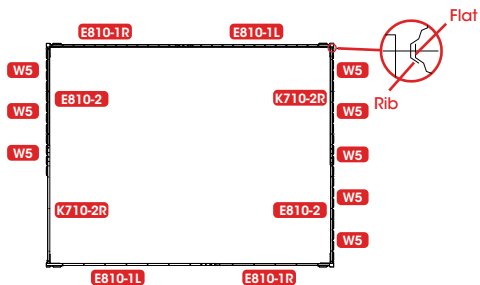


Lock the lower screw first, then the upper screw.

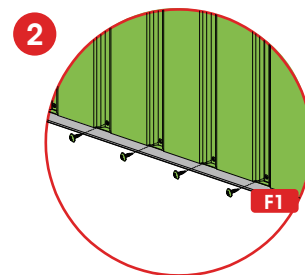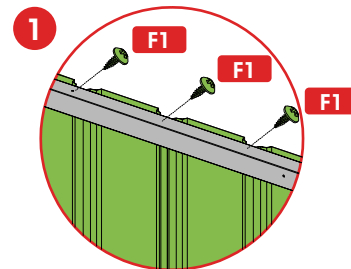
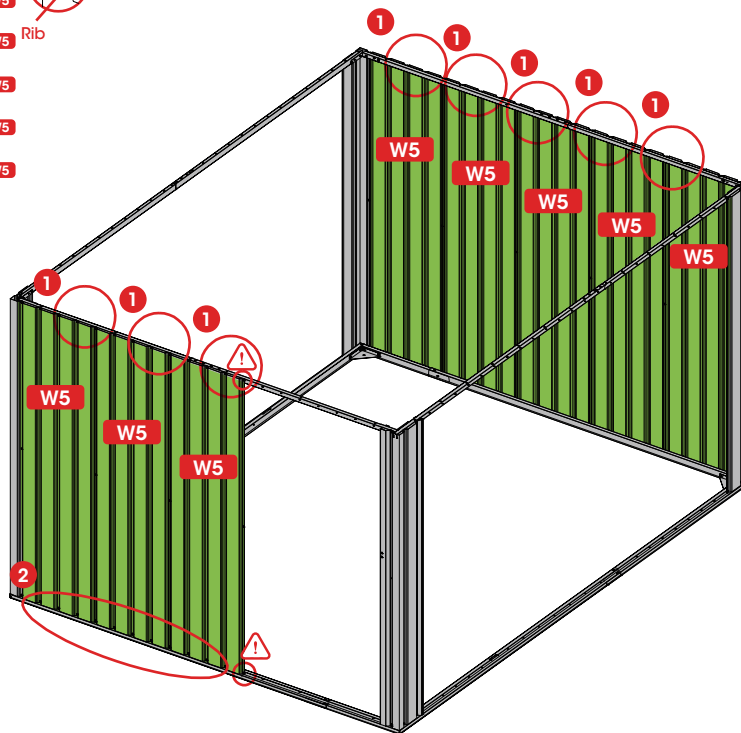


Do not Install screws here.

8



F2 X 9

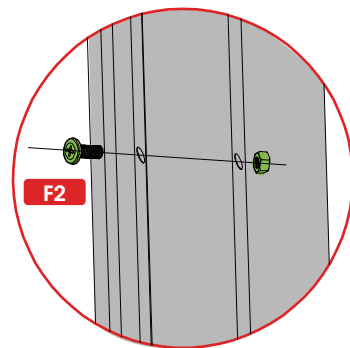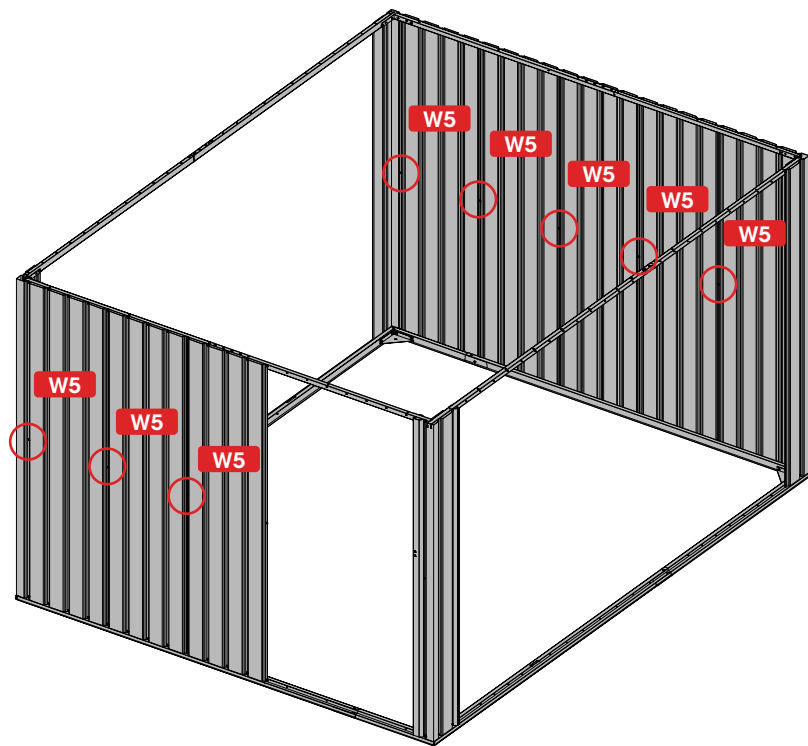

9



W5 X 3






F1 X 24






F2 X 3

Lock the lower screw first, then the upper screw.

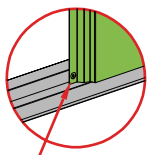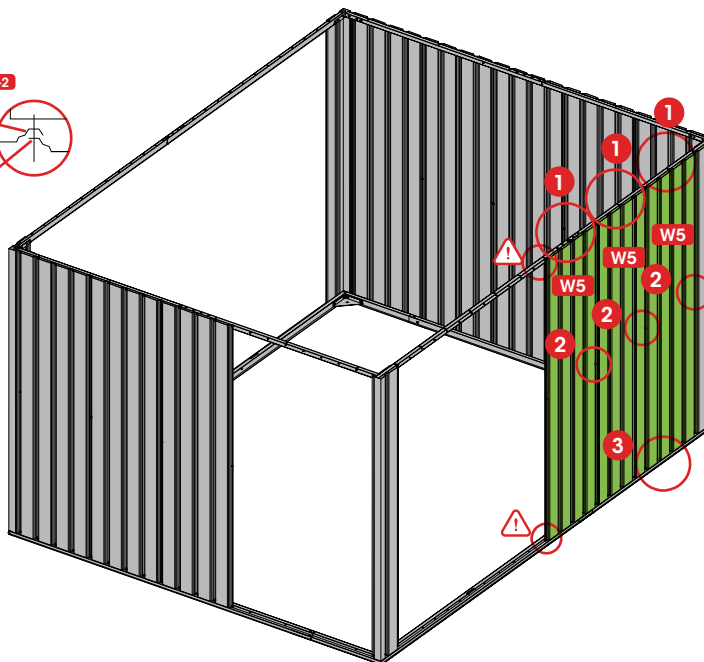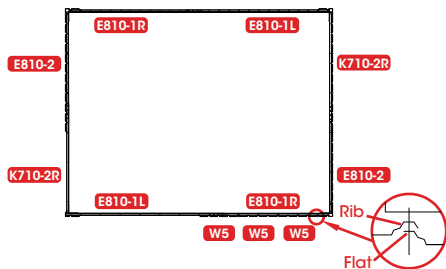

Do not Install screws here.

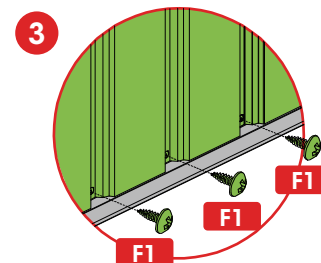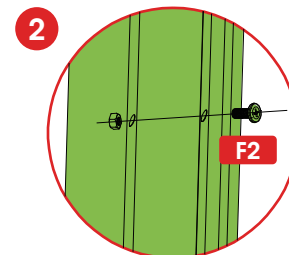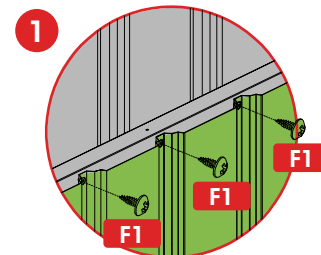




W5 X 6








F1 X 50



F2 X 7



Lock the lower screw first, then the upper screw.

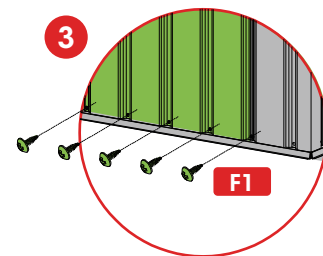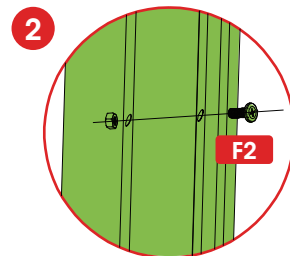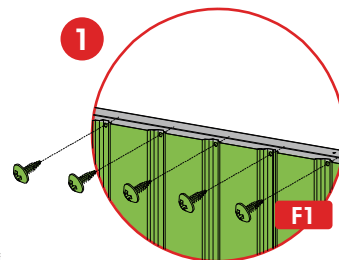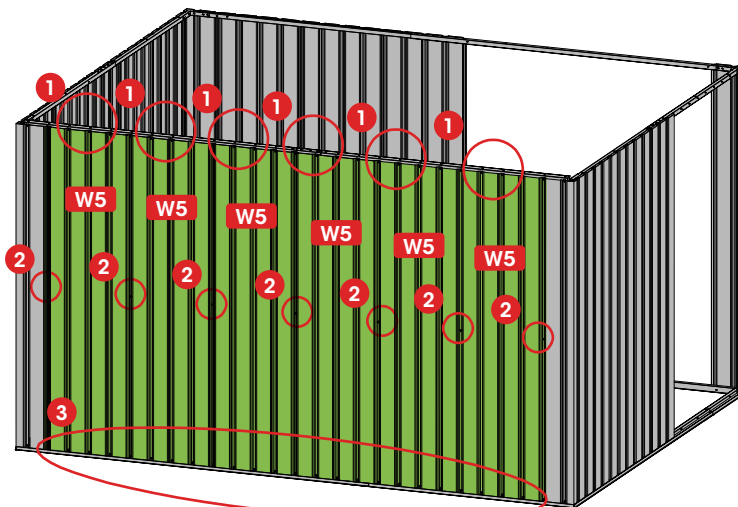
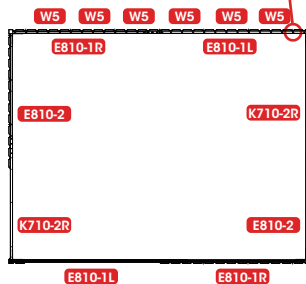






ULA X 1





URA X 1

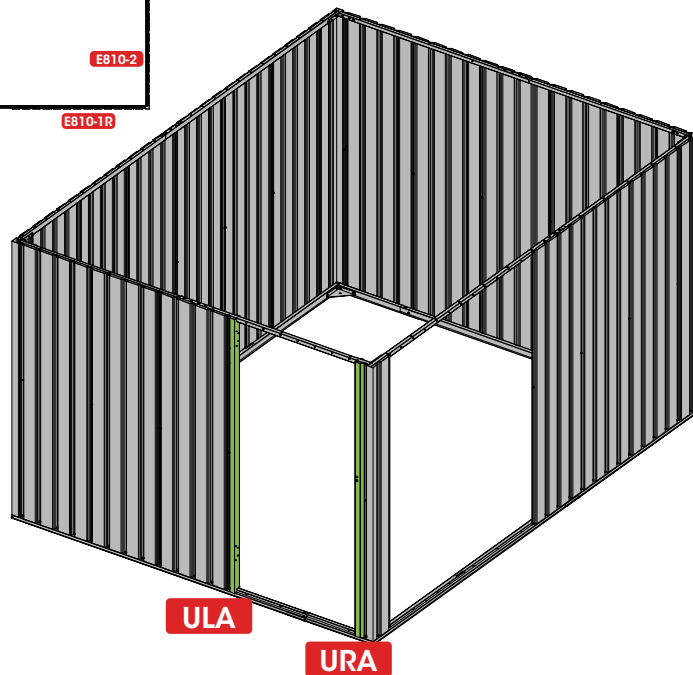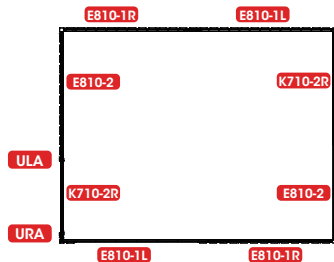



- 1** ULA/URA notch is inserted into E810-3R.

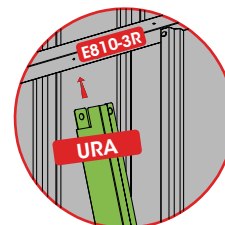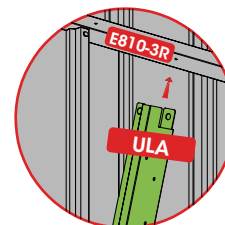

- 2** ULA/URA notch is inserted into E810-2/K710-2R.

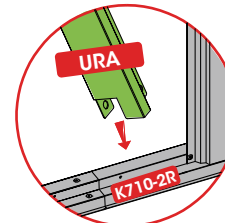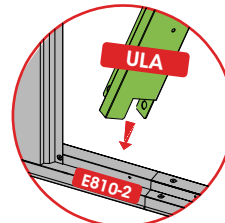

- 3** Push ULA to coincide with the screw holes on the board.

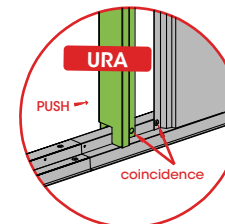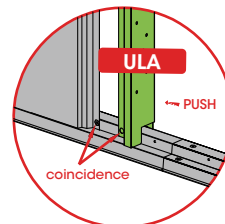

12







F1

X 8




F2



X 2

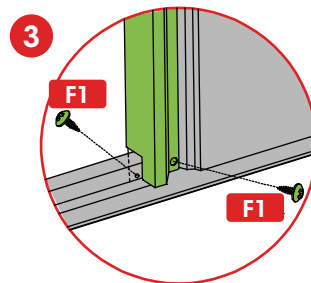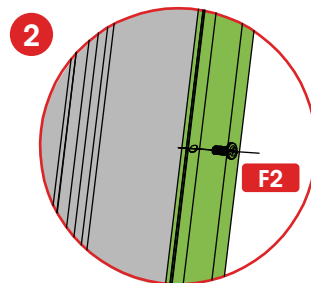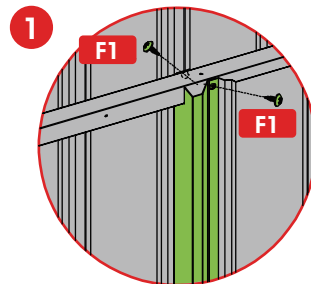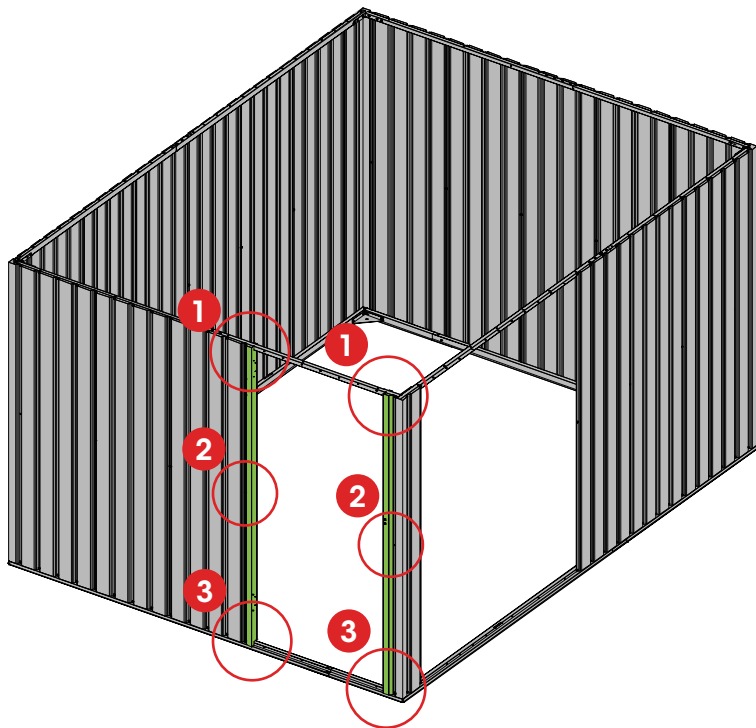


13




UA X 2

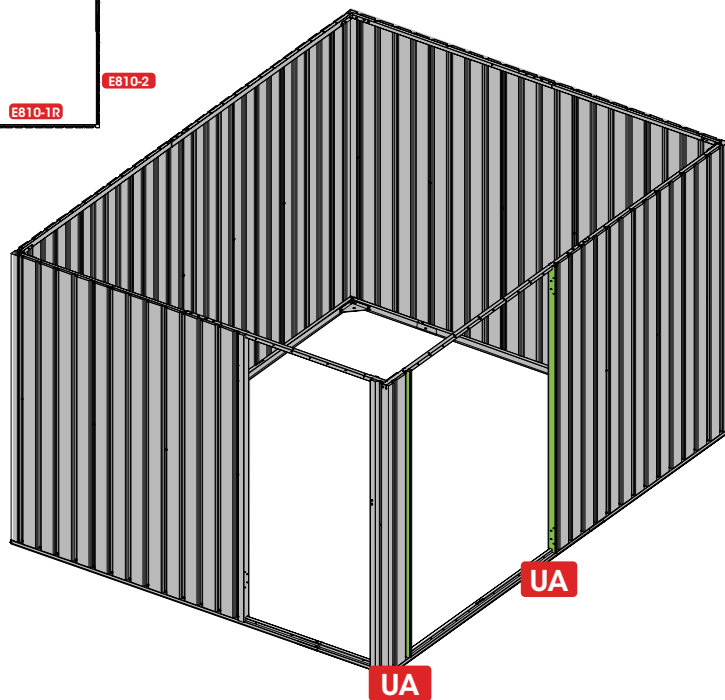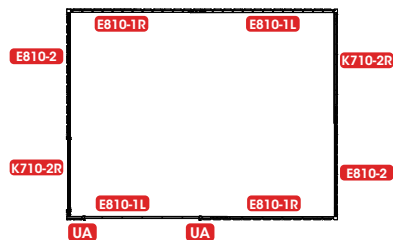


- 1 UA notch is inserted into E810-5L.

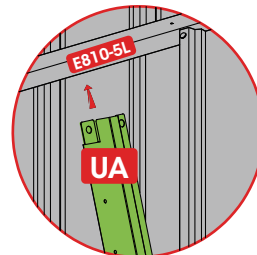

- 2 UA notch is inserted into E810-1L.

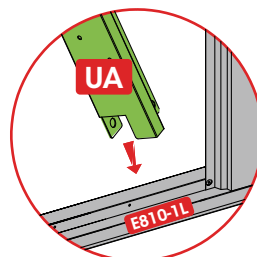

- 3 Push UA to coincide with the screw holes on the board.

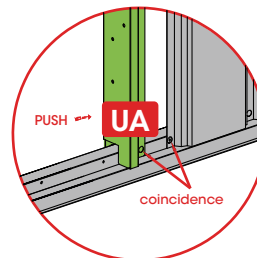

14







F1

X 8





F2

X 2

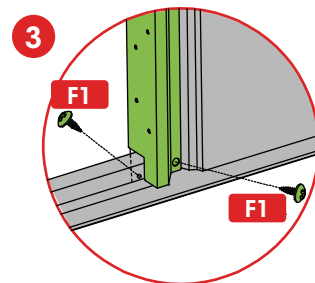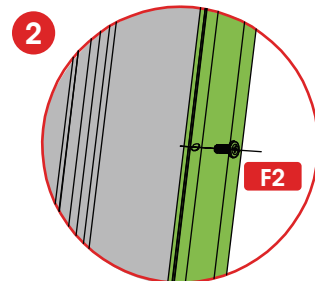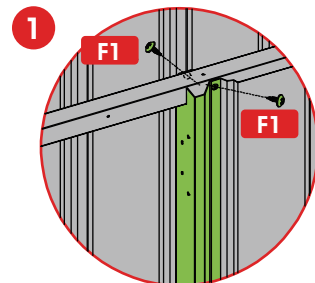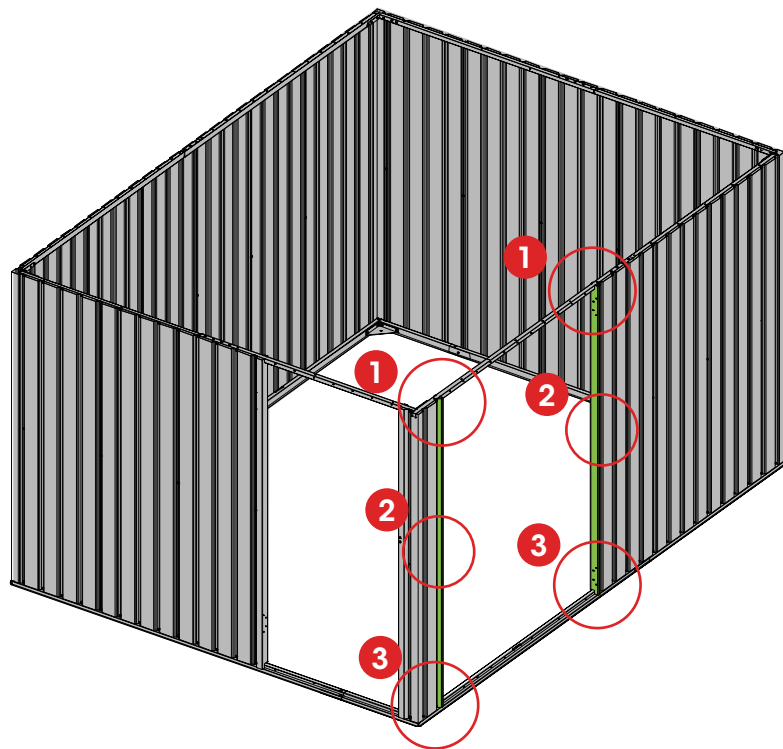


part 5: Roof

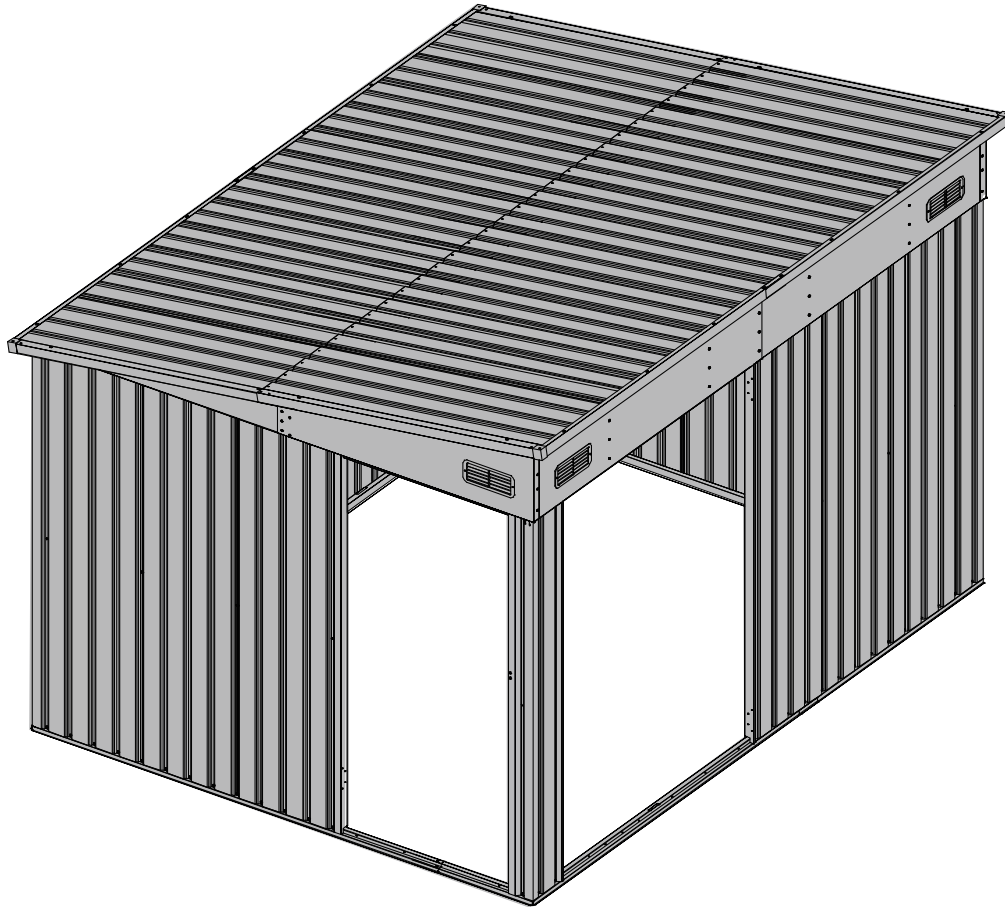


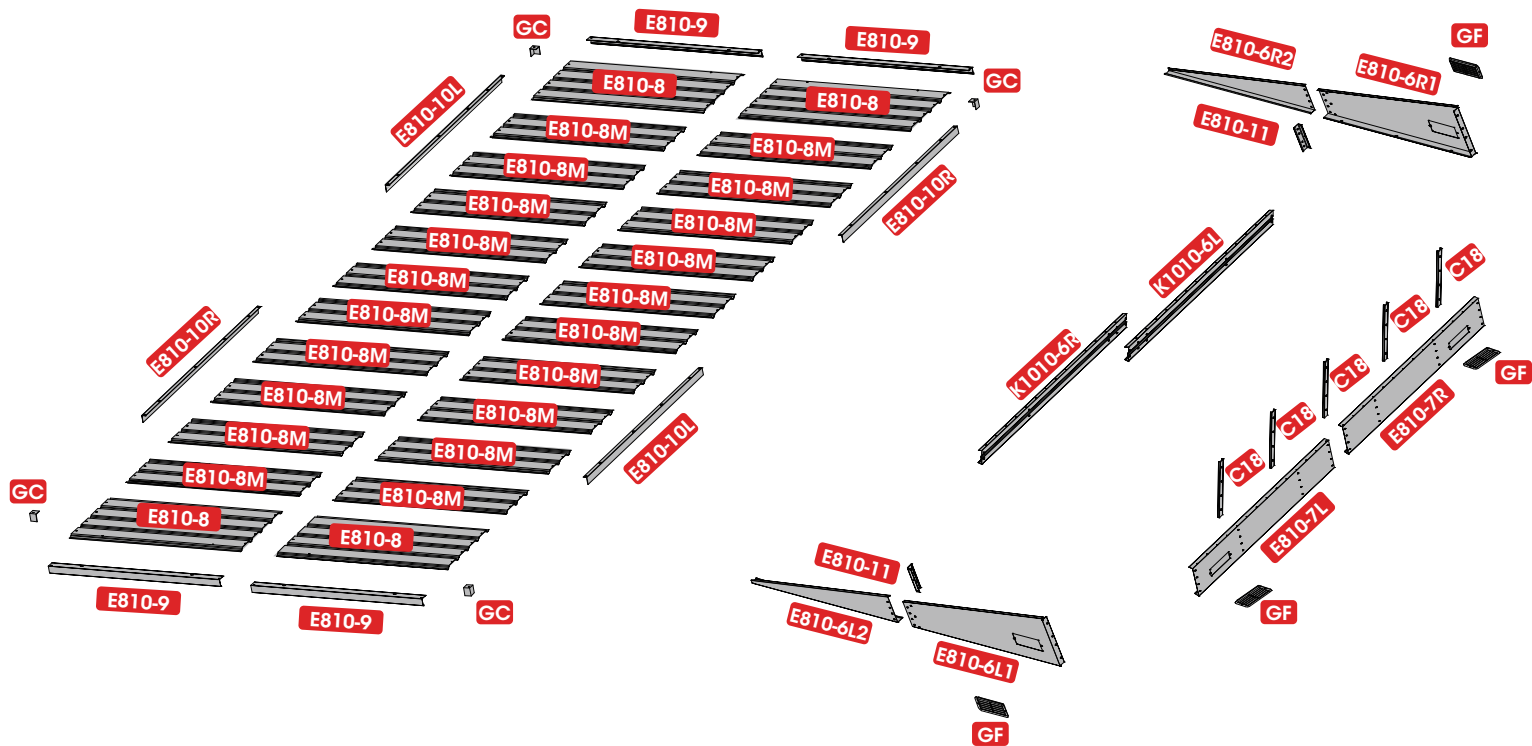

15

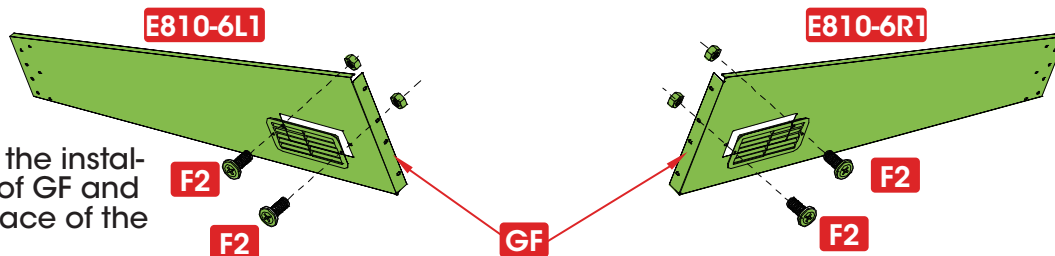




Pay attention to the installation direction of GF and the inclined surface of the louver.

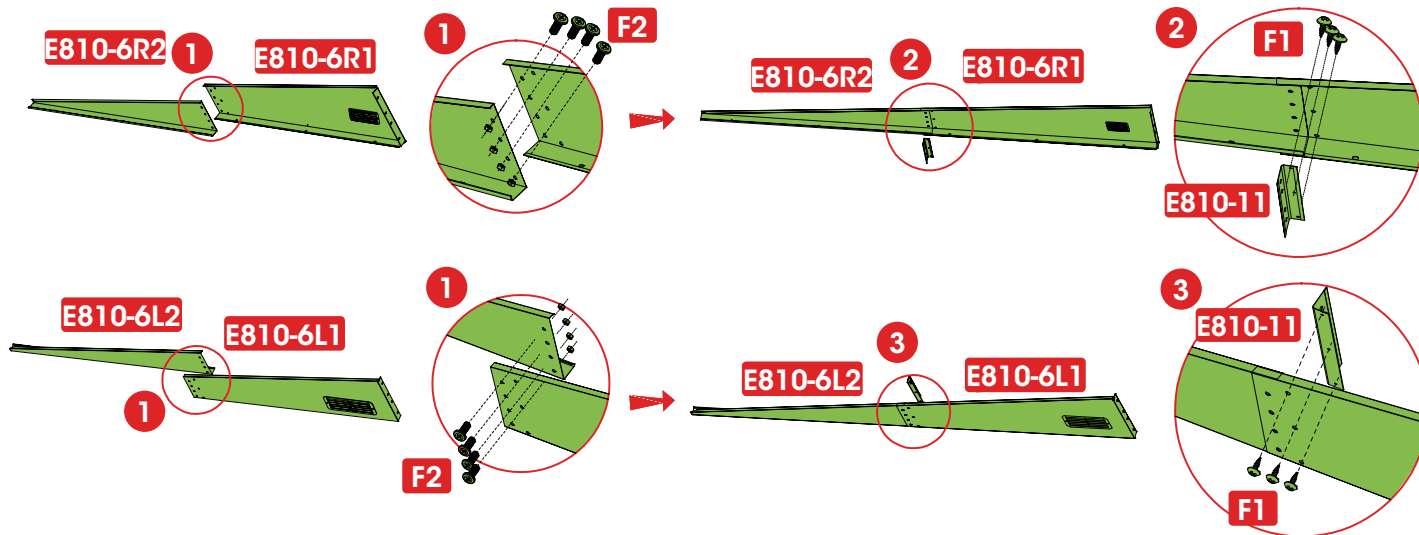



16

**F1****X 12**

Attention: Assemble the ventilation board screws in the order shown in the diagram, Install the middle hole first to avoid misalignment.


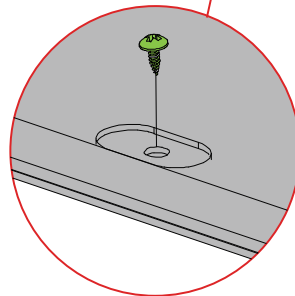
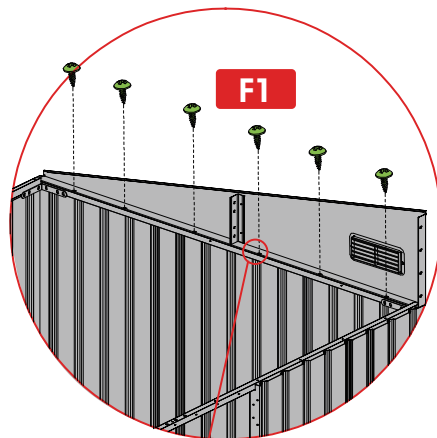
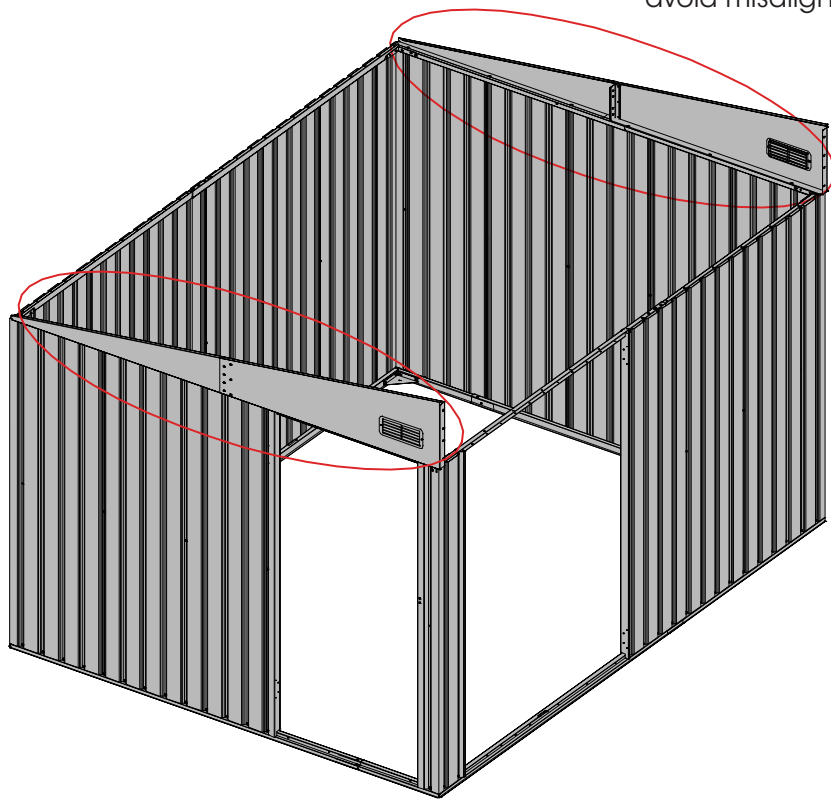


17

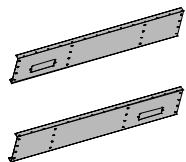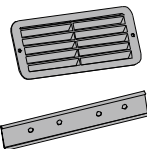
**E810-7L** X 1**E810-7R** X 1**GF** X 2**C18** X 5**F2** X 24

The small hole is on top



The width of B810-7R is relatively small, and it should be inserted into E810-7L. After aligning the holes, connect them with F2 screws.

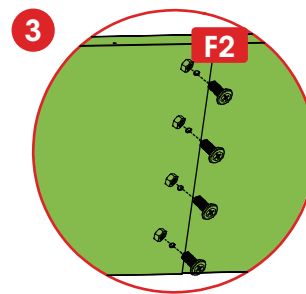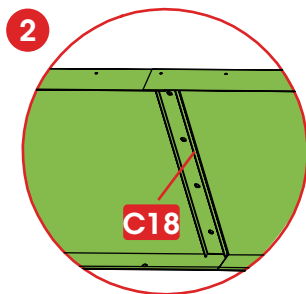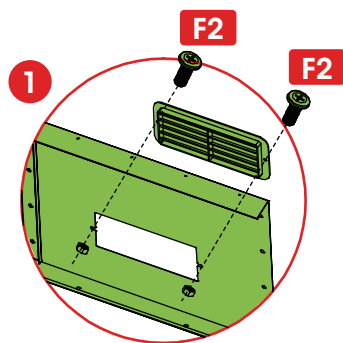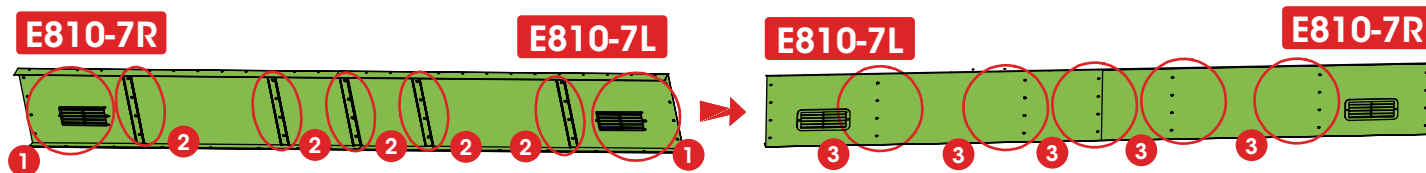

18



F2 X 8

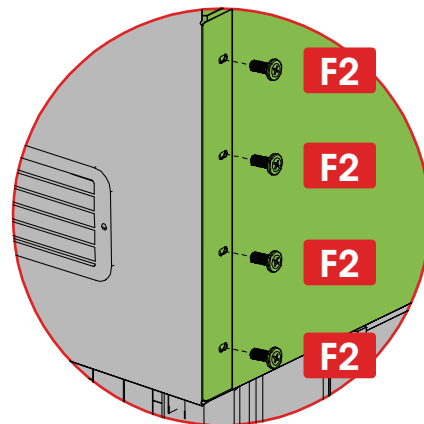
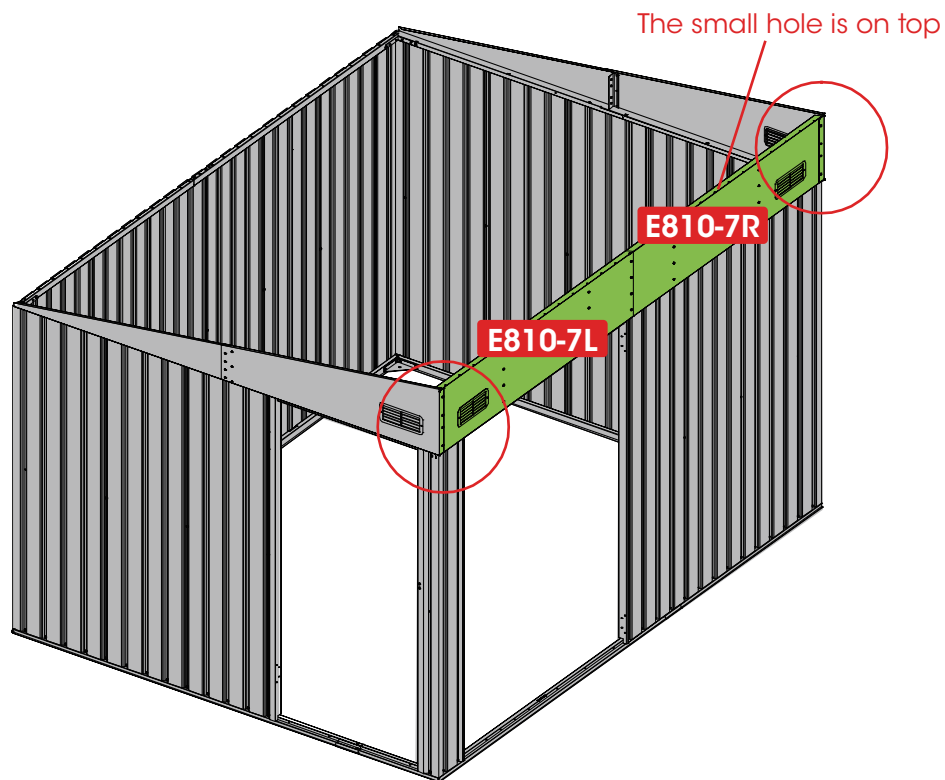



19




F1

X 13

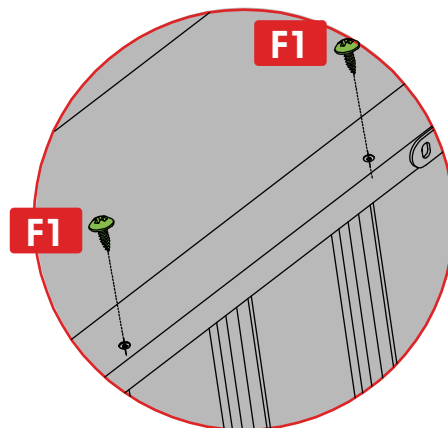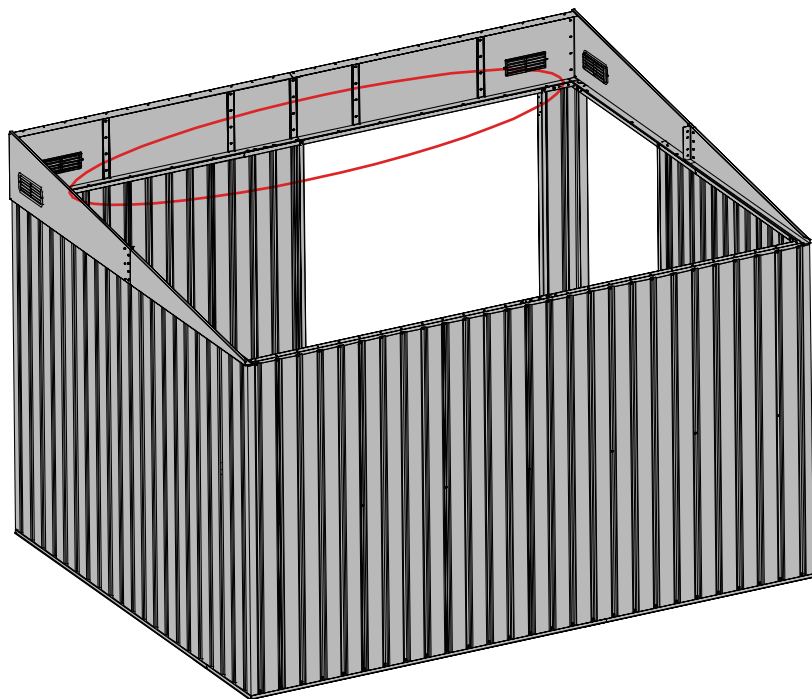





K1010-6L X 1



K1010-6R X 1




F2 X 6

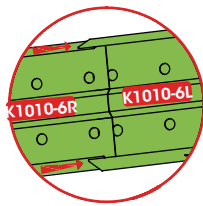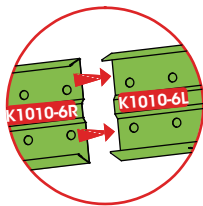


K1010-6L has a smaller width and is inserted into K1010-6R with aligned holes.



K1010-6L

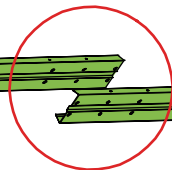


K1010-6R

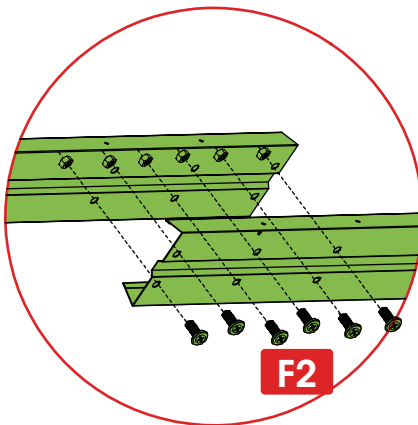




F2

21




F2 X 4


Pay attention to the direction of the beam position.

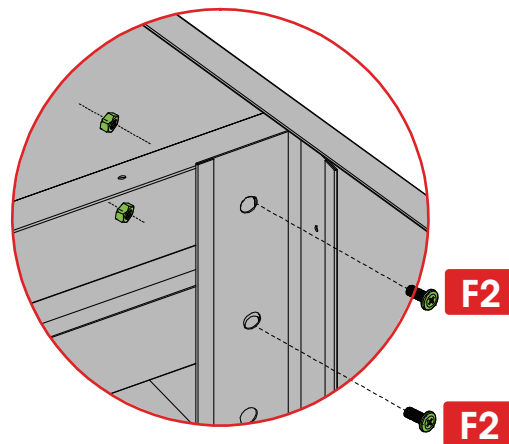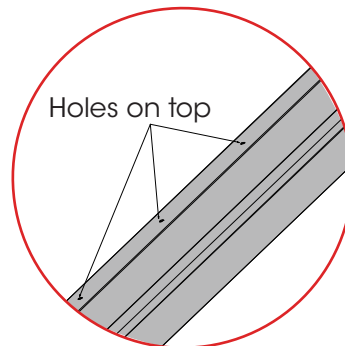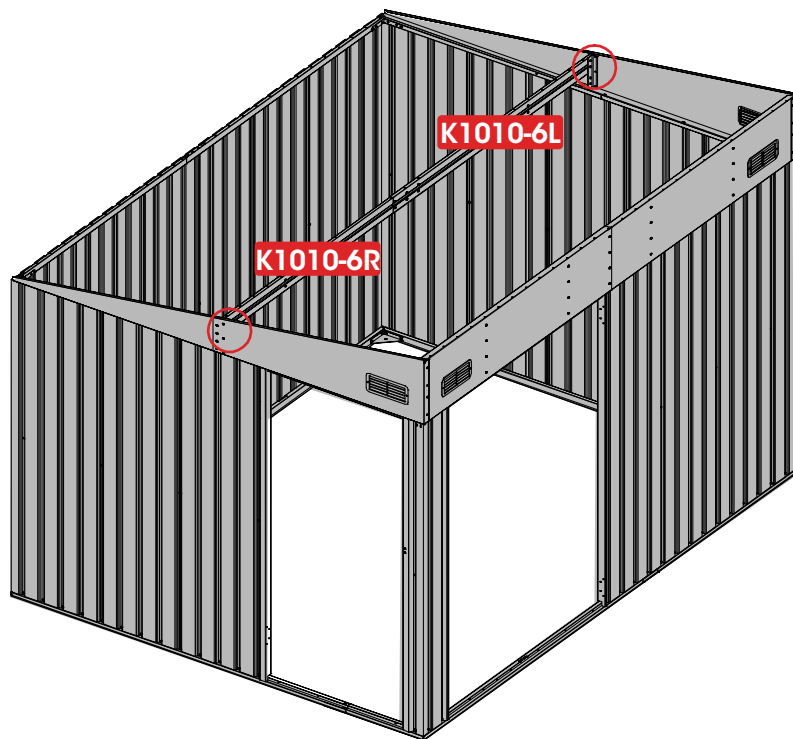


22

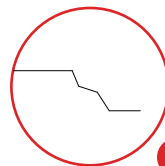


This is a flat edge and E810-9 Install, otherwise there may be interference.

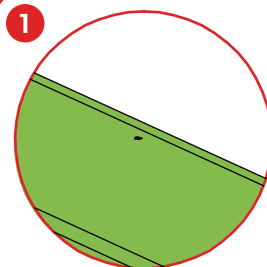

Install the flat edge with a small hole on the outside, and the small hole is the E810-8 accessory assembly hole.

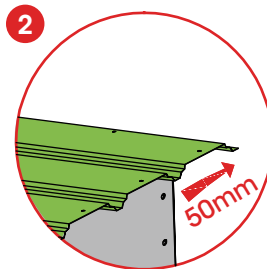

Install according to the diagram: The edge extends outward by about 50mm.

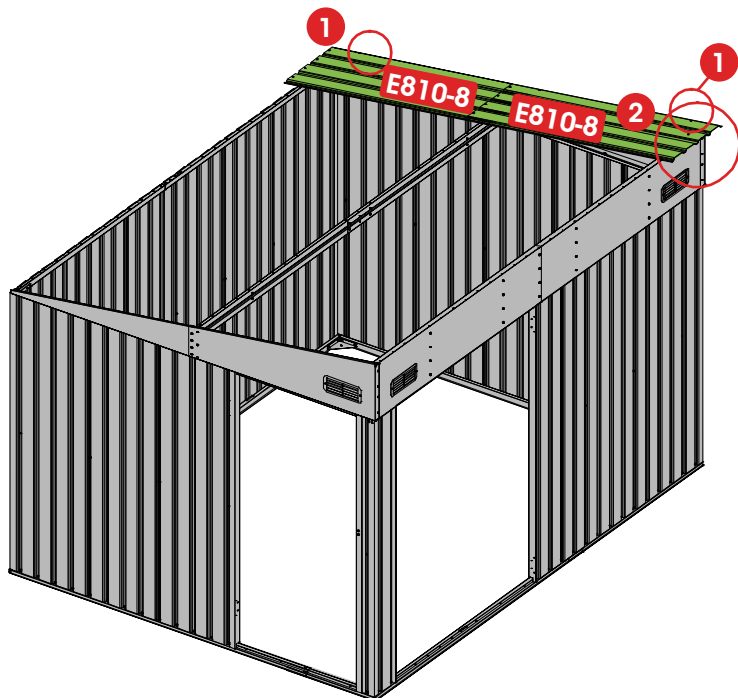

23






F1 x 9



V2 x 9



Do not Install screws here.

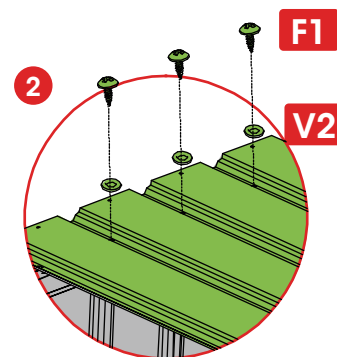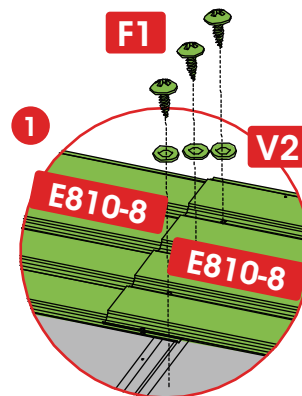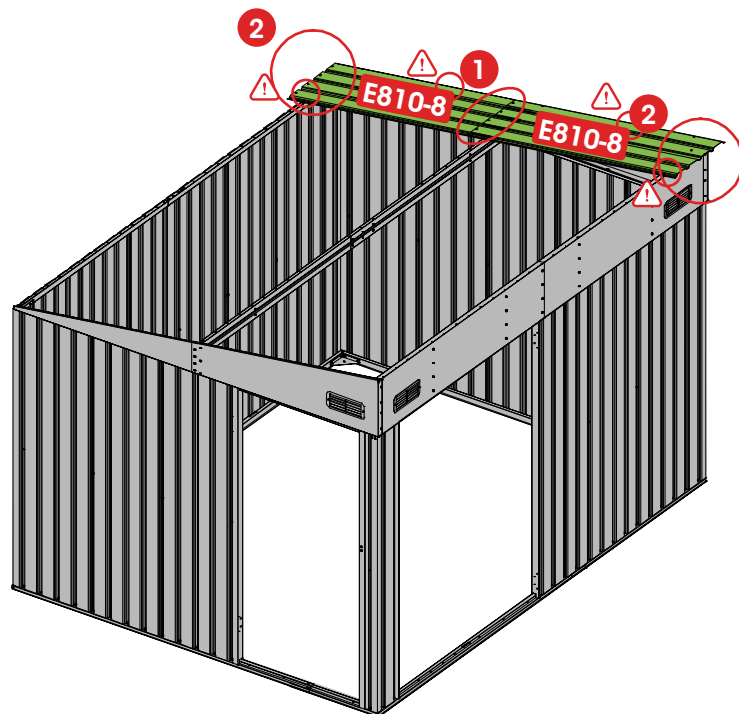



E810-8 X 2




E810-8M X 20




F1 X 72







V2 X 72

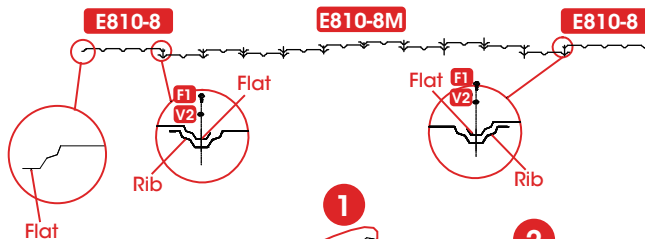

Attention: The overlapping method of the top cover (as shown in the figure) should be used to prevent rainwater from leaking through the overlapping area.

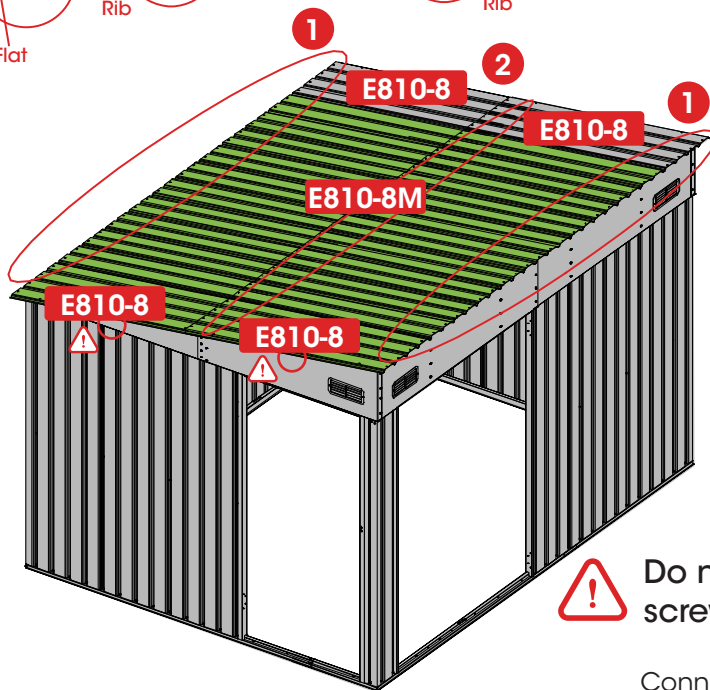

Do not Install screws here.

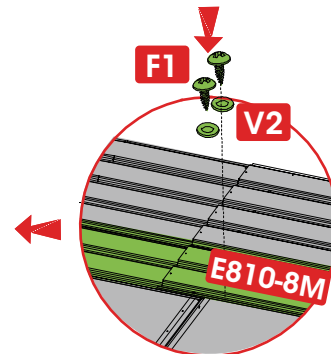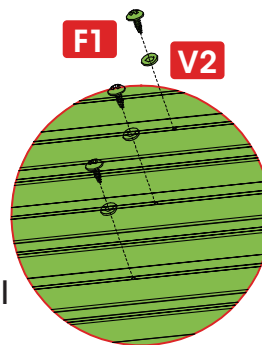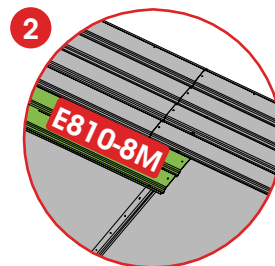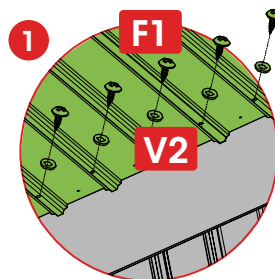

Connect the overlap with E810-8/E810/8M using F1 and V2.



25






E810-9 X 4



F1 X 8

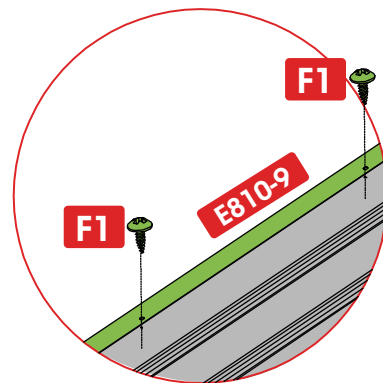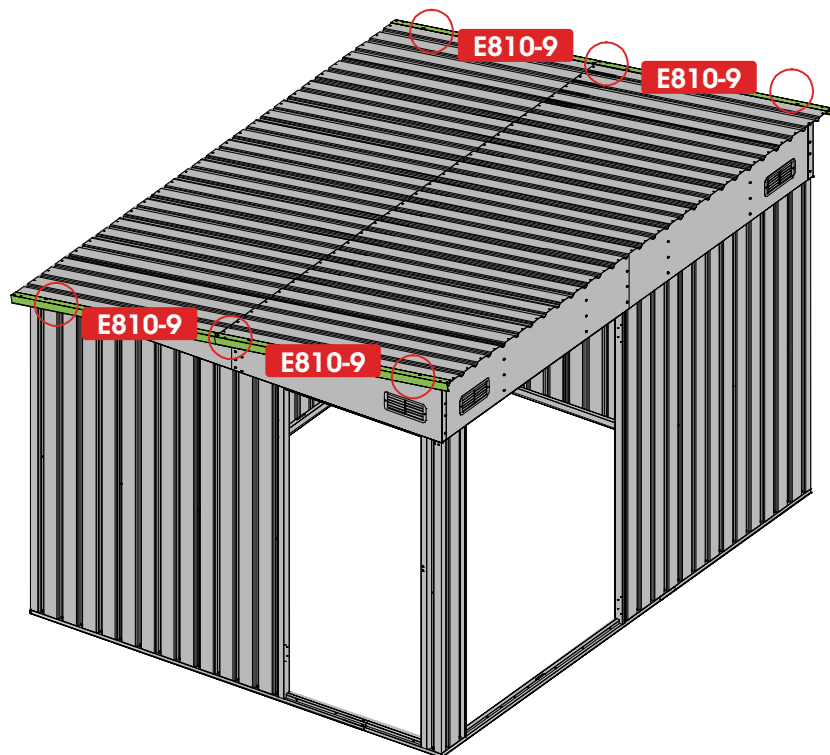

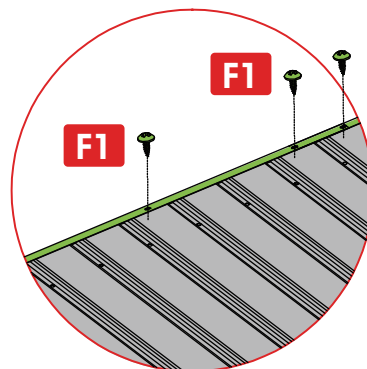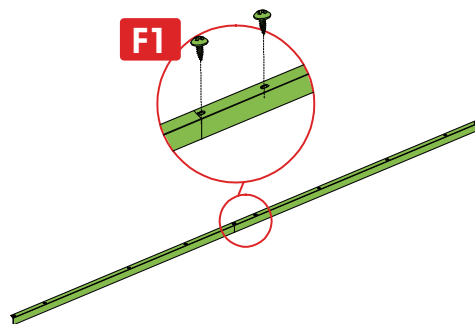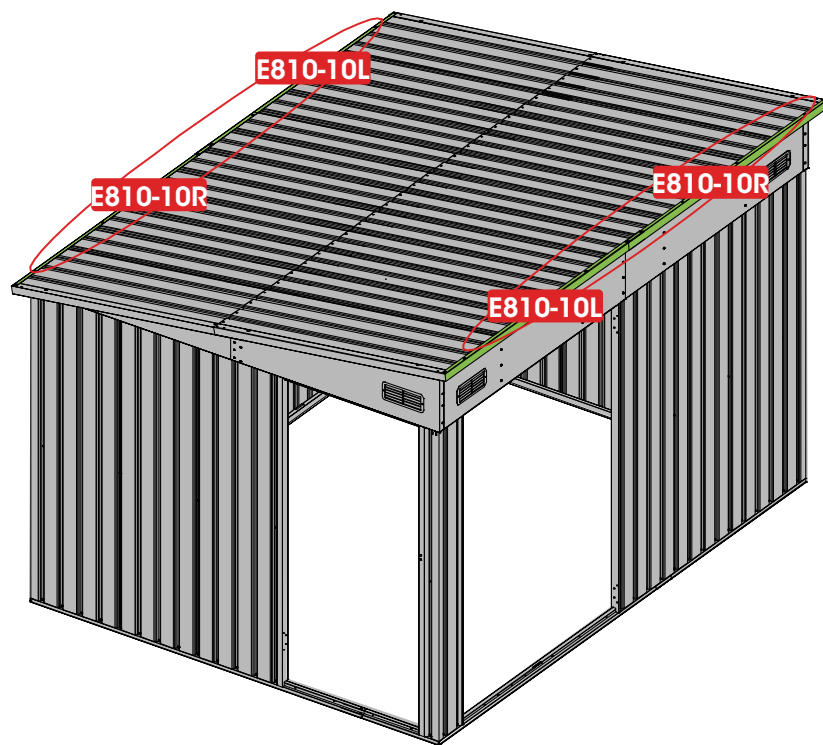**E810-10L X 2****E810-10R X 2****F1 X 16**

27





GC

X 4






F1

X 4

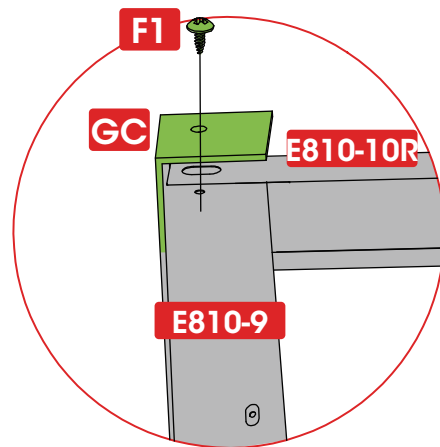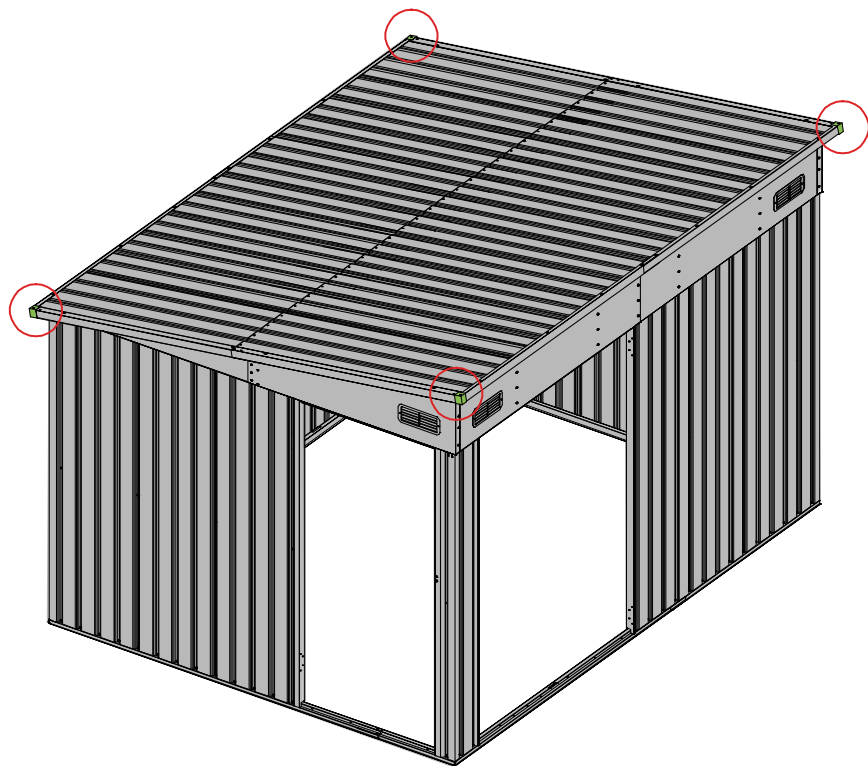

part 6: Door

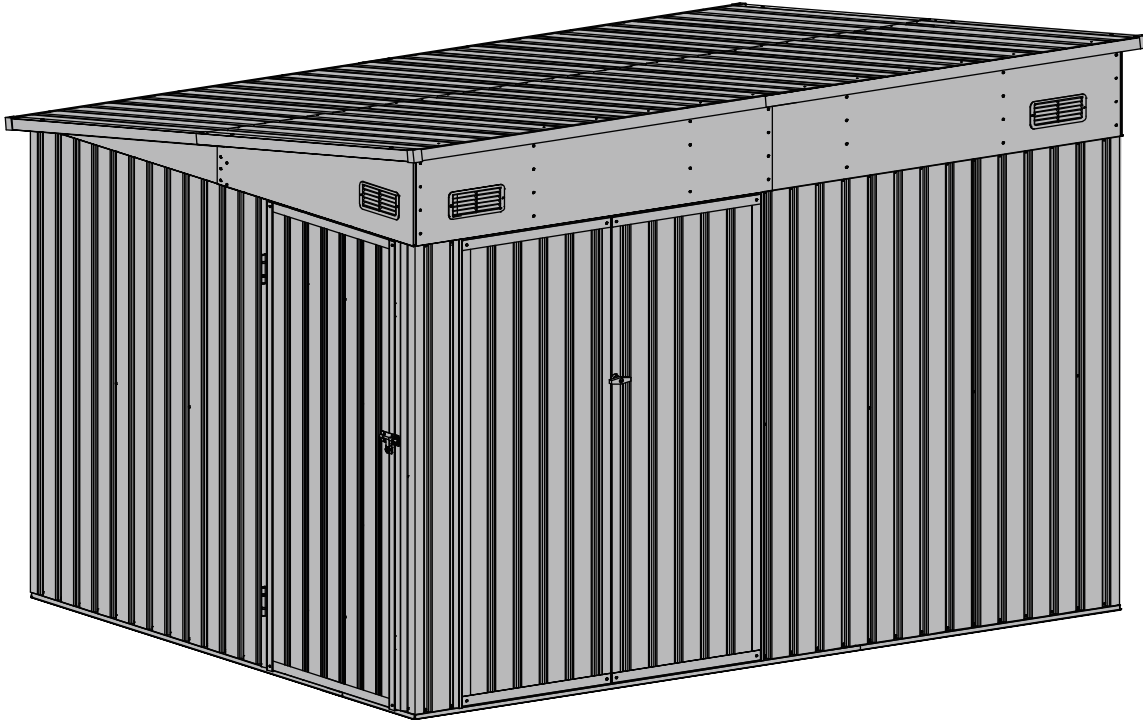

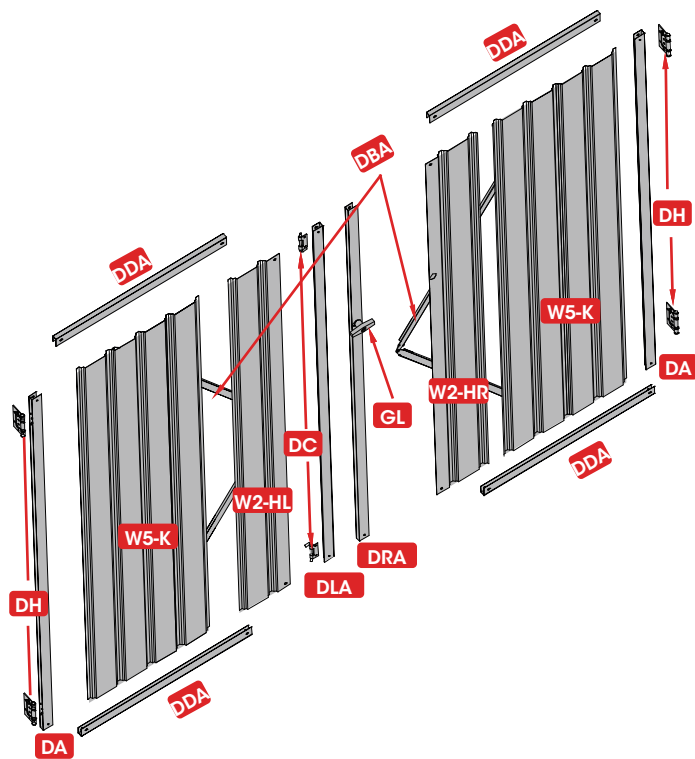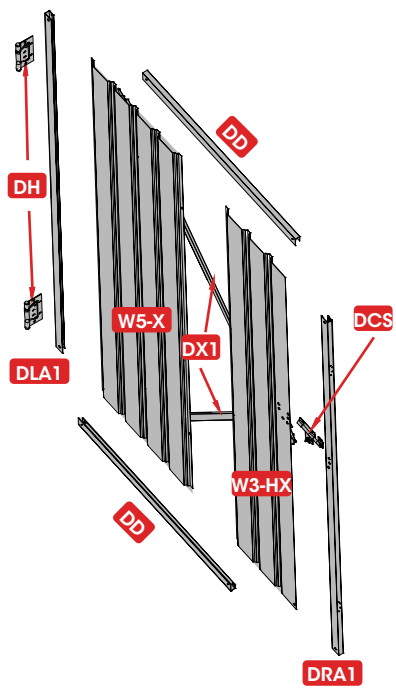



W5-X

X 1




W3-HX

X 1



F2

X 2




W5-X



W3-HX




CKM

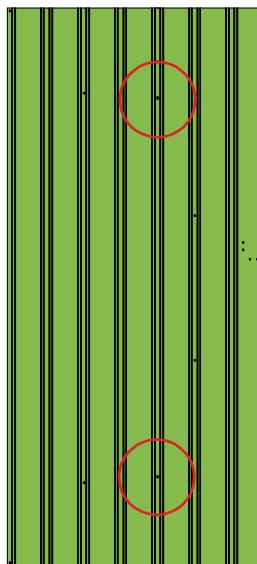

W5-X

W3-HX

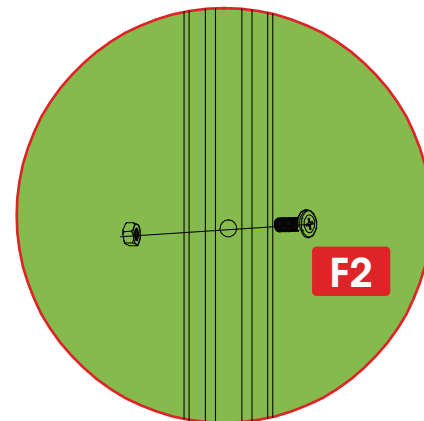

F2



DD X 2



DLA1 X 1




DRA1 X 1





F1 X 4


The door frame is wide and facing outward.

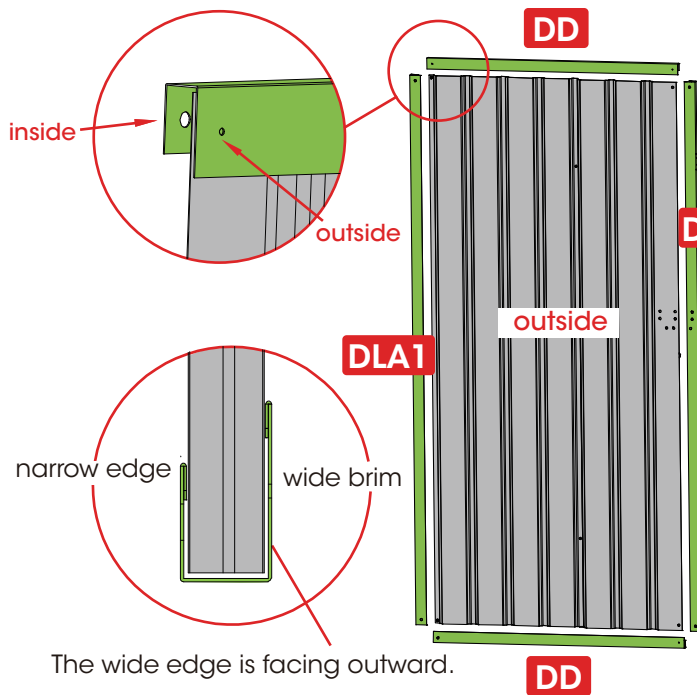

The wide edge is facing outward.

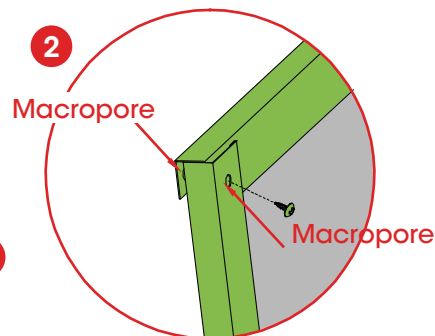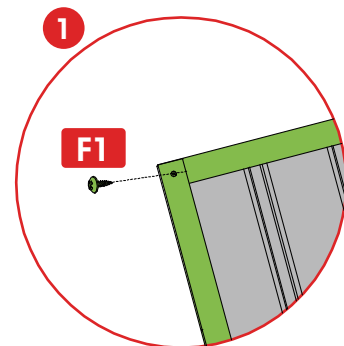

Profiles overlap and small hole under big hole.








DX1 X 2



F1 X 5




F2 X 4

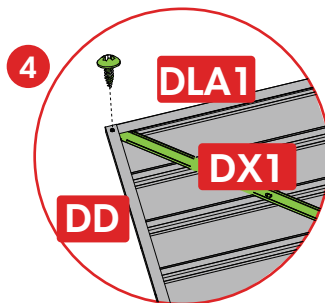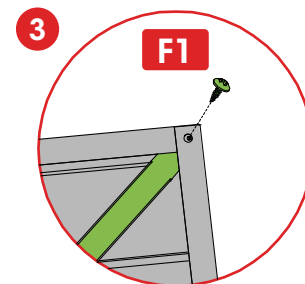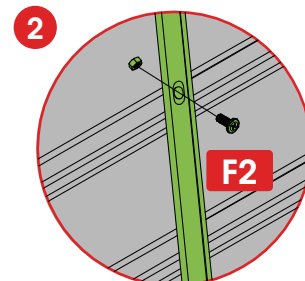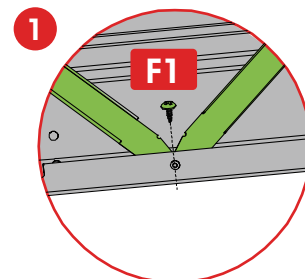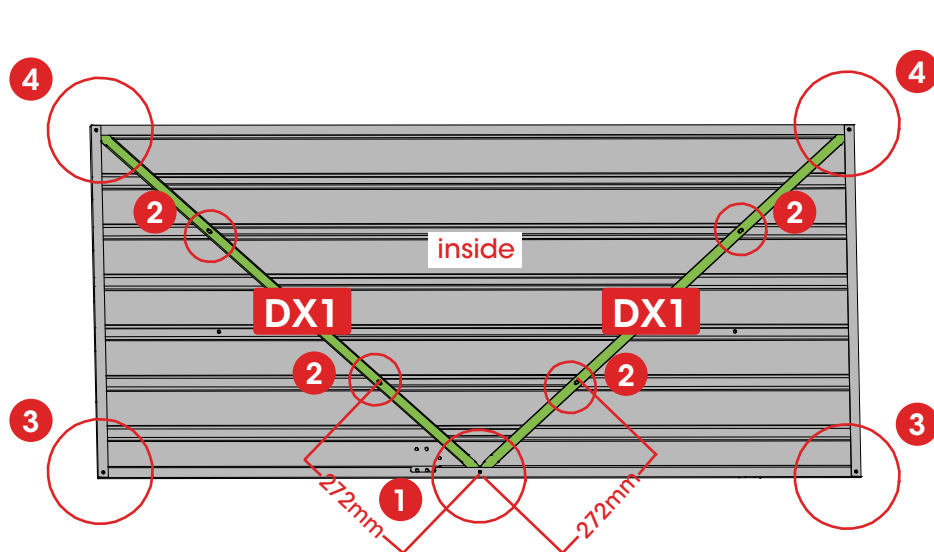

The cross pole DX1 must be installed underneath DD and DLA1.

31





DH


X 2



F3

X 8

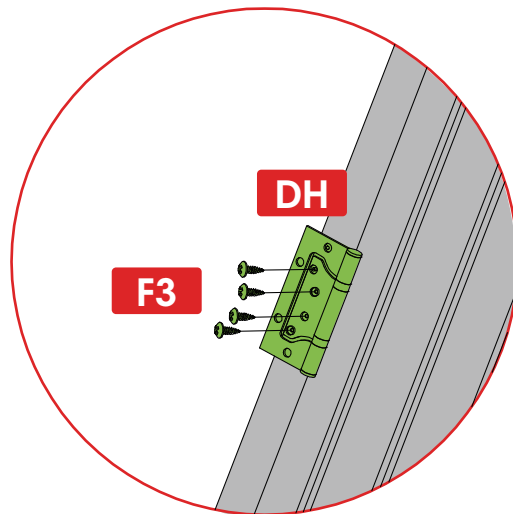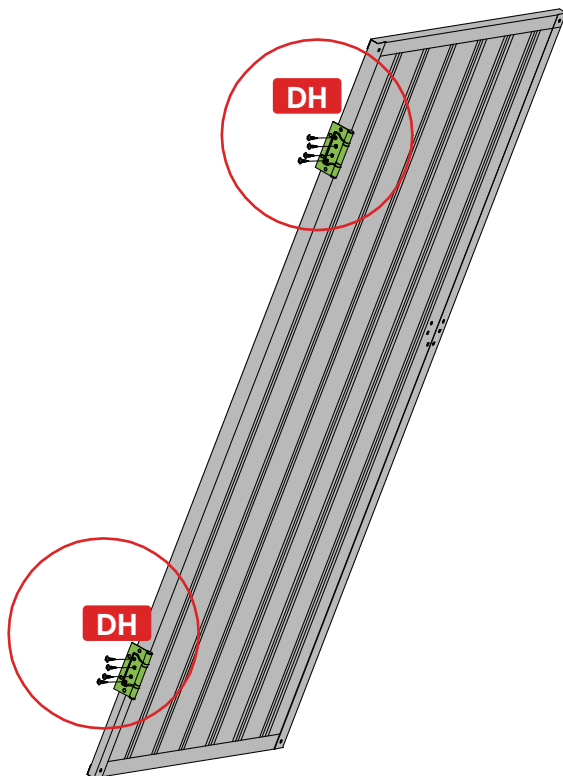



DCS



X 1




F2

X 6

CKM

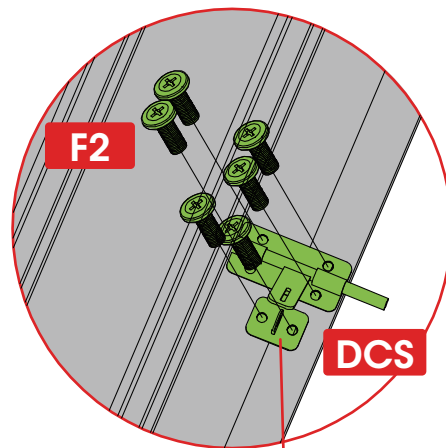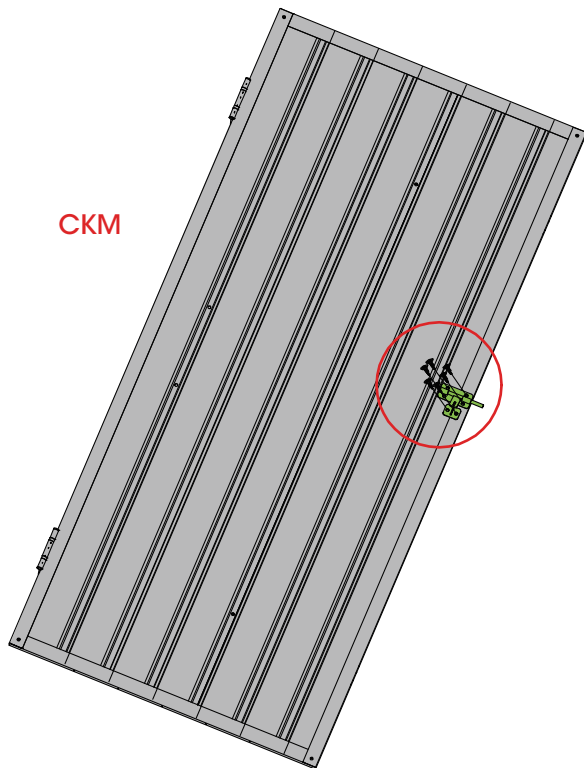

DCS

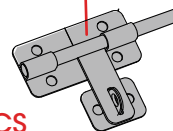

33



W5-K

X 1



W2-HL




X 1




F2

X 2

DL

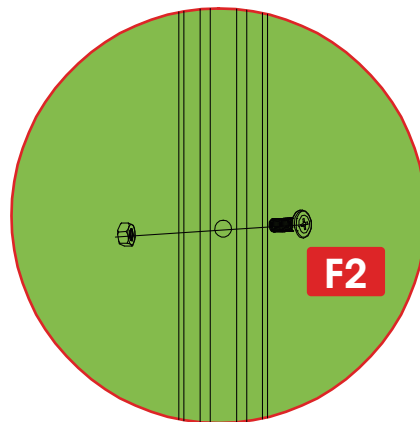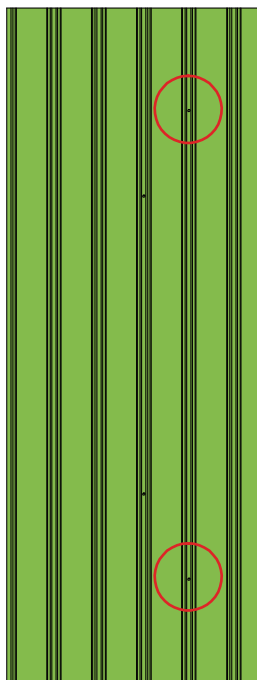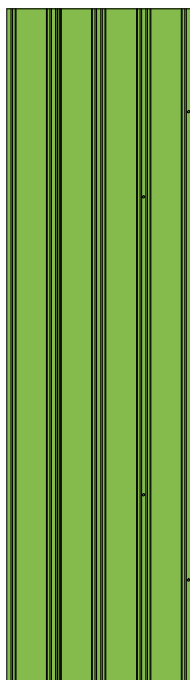

F2



W5-K




W2-HL



W5-K

W2-HL

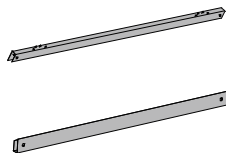

DA X 1

DDA X 2





DLA X 1



F1 X 4

The door frame is wide and facing outward.

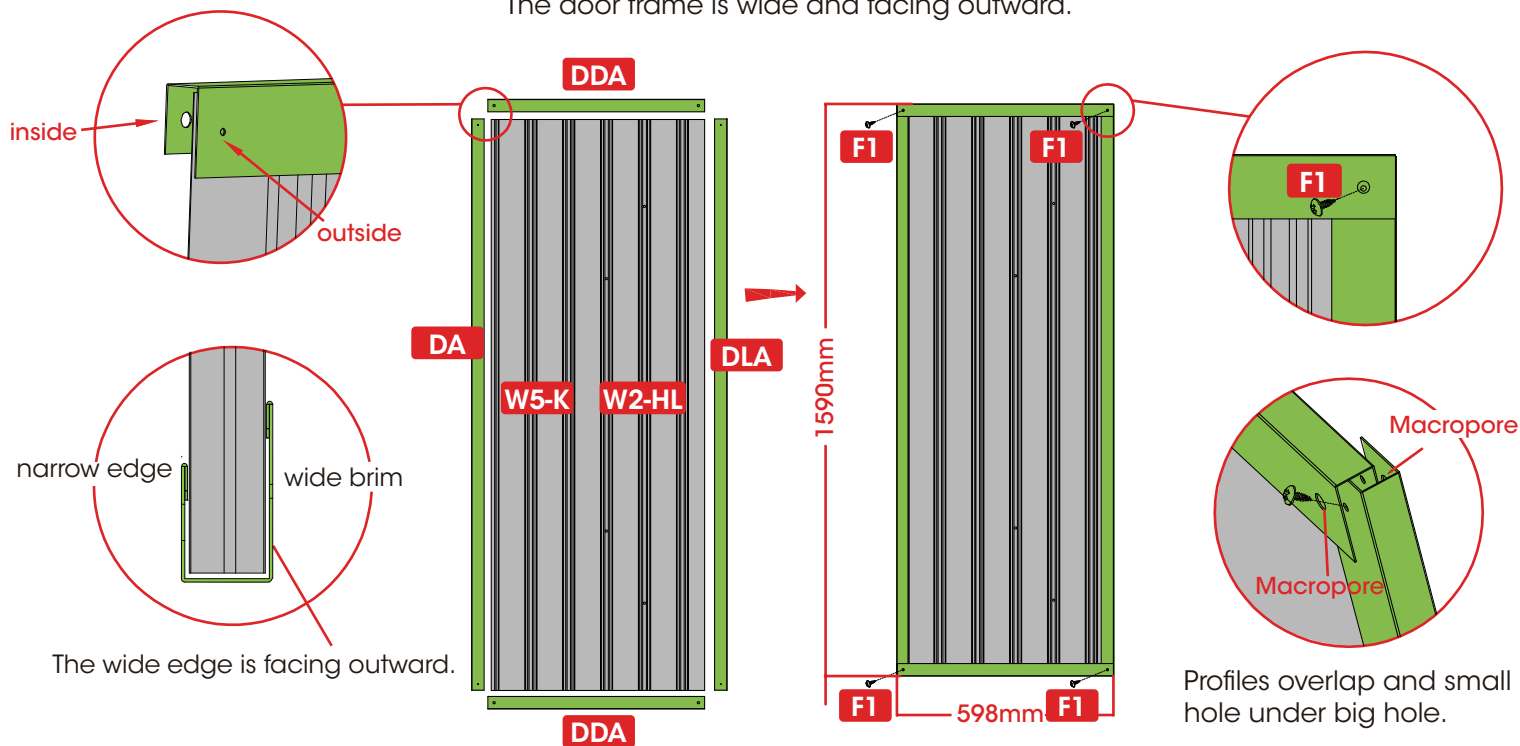








DBA X 2






F1 X 5




F2 **X 2**

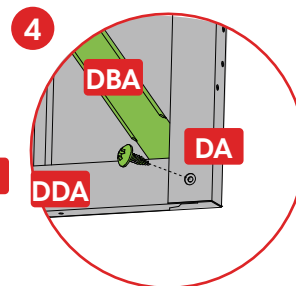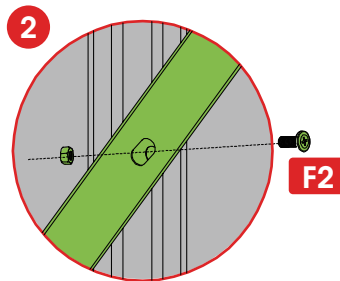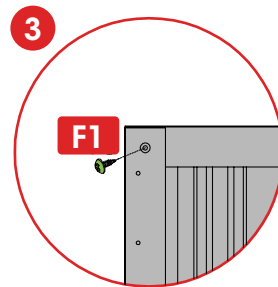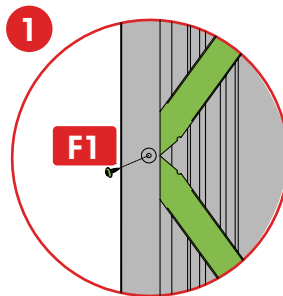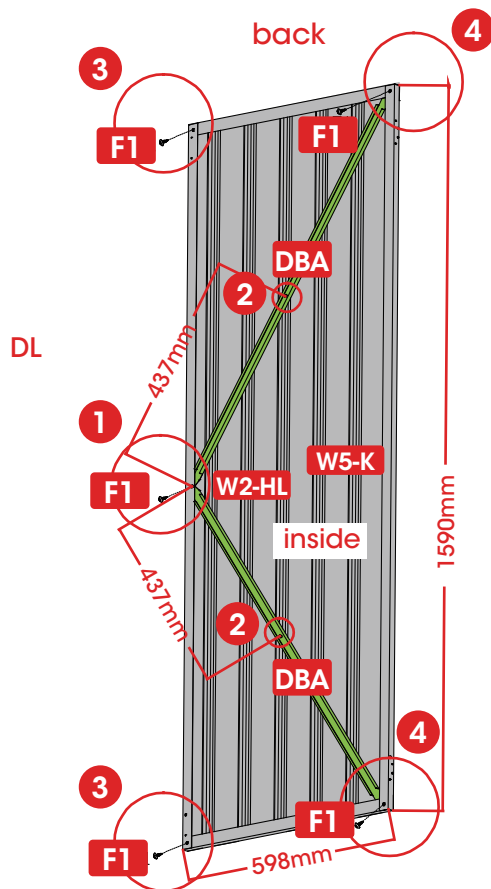

The cross pole DBA must be installed underneath DDA and DA.

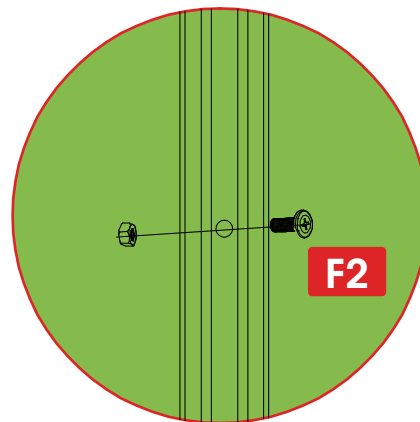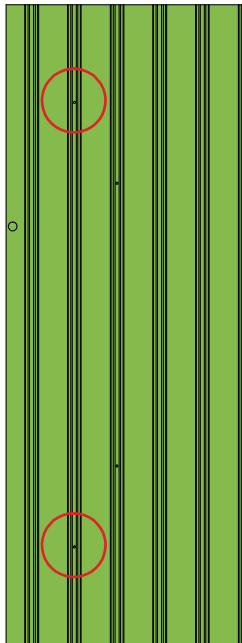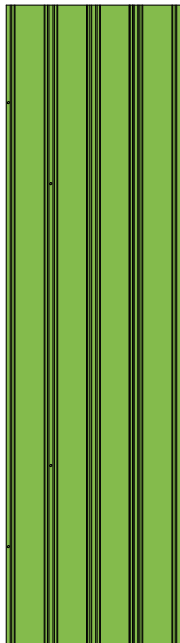**W5-K****X 1****W2-HR****X 1****F2****X 2****DR****F2****W2-HR****W5-K****W2-HR****W5-K**

37

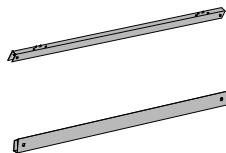

DA X 1



DRA X 1




F1 X 4

DDA X 2

DDA

The door frame is wide and facing outward.

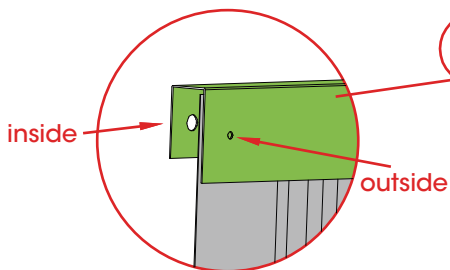

outside

outside

W2-HR

W5-K

DRA


DA

1590mm

F1

F1

F1

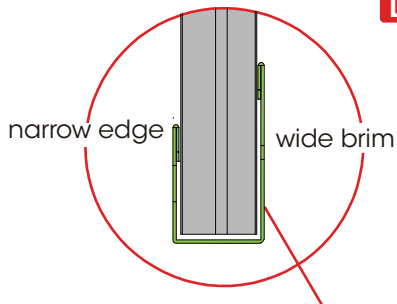

narrow edge

wide brim


The wide edge is facing outward.

DDA

F1

598mm


F1

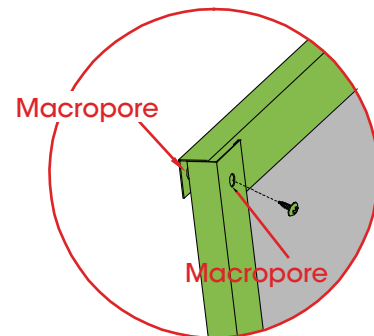

Macropore

Macropore

Profiles overlap and small hole under big hole.








DBA X 2



F1 X 5



F2 X 2

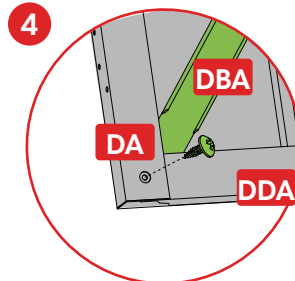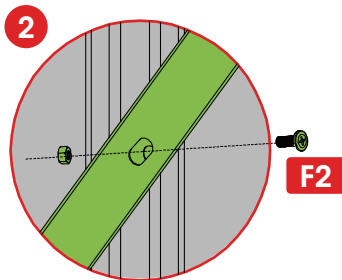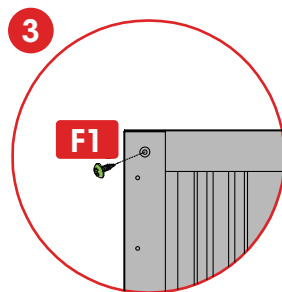
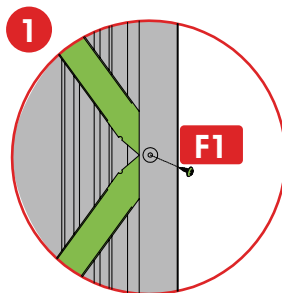
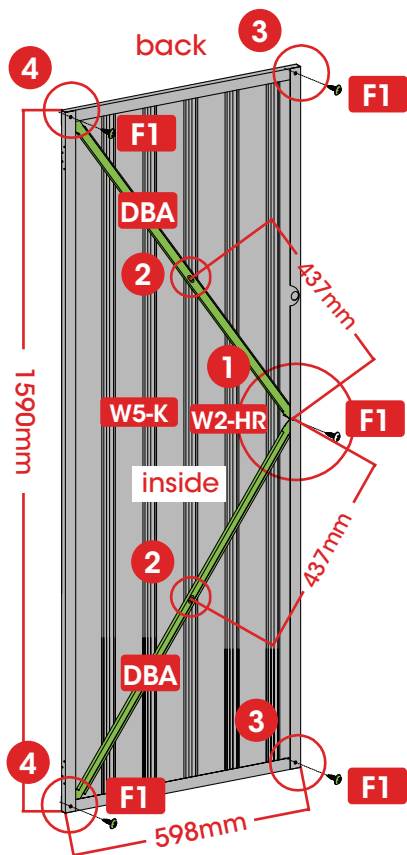






The cross pole DBA must be installed underneath DA and DDA.

39



GL X 1

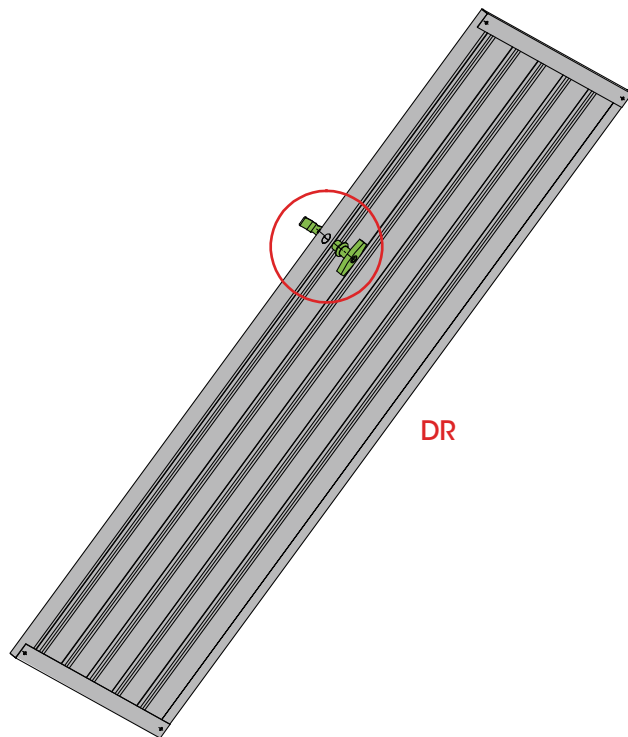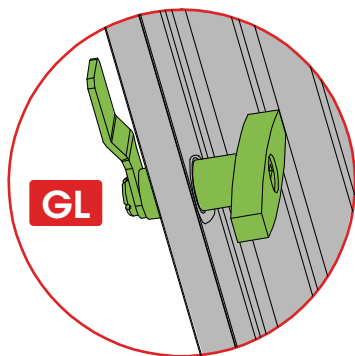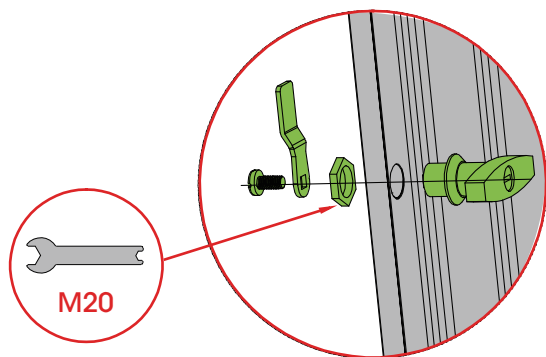

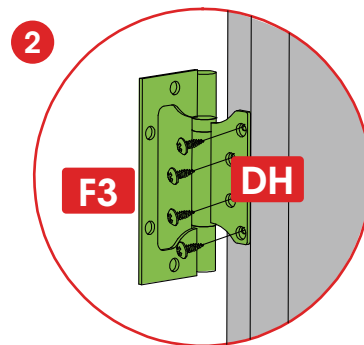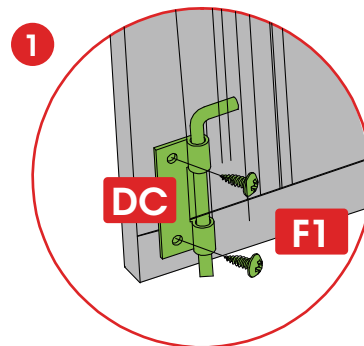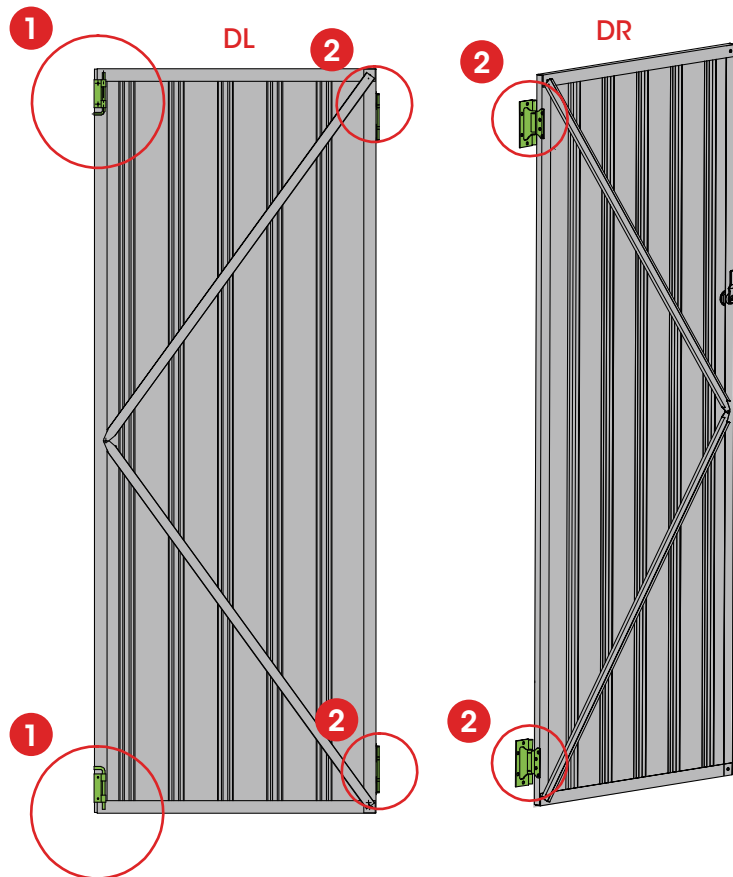**DH****X 4****DC****X 2****F1****X 4****F3****X 16**

41





DL

X 1



F3

X 8

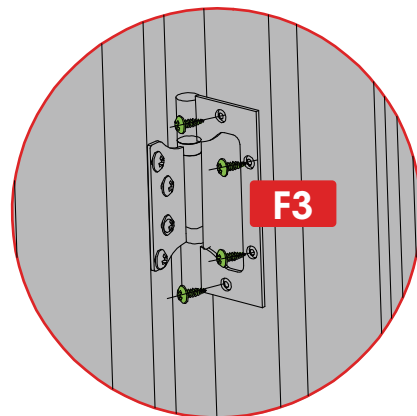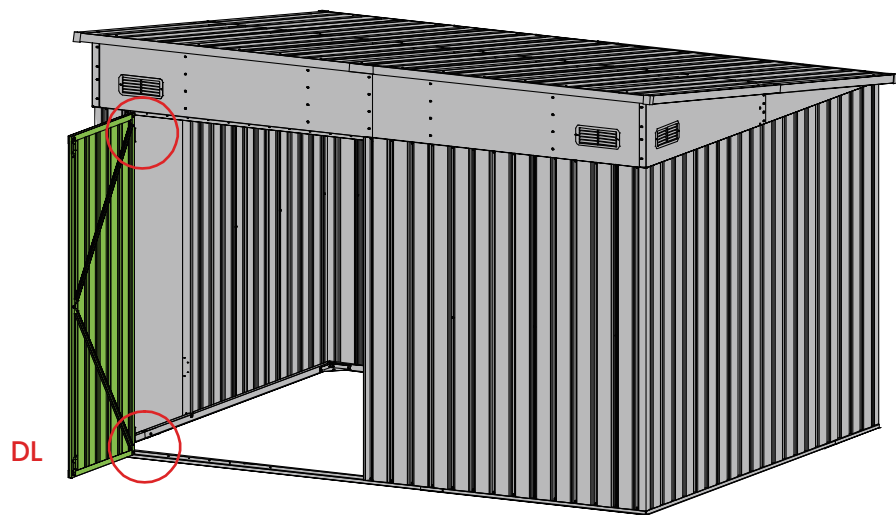

42




DR

X 1




F3

X 8

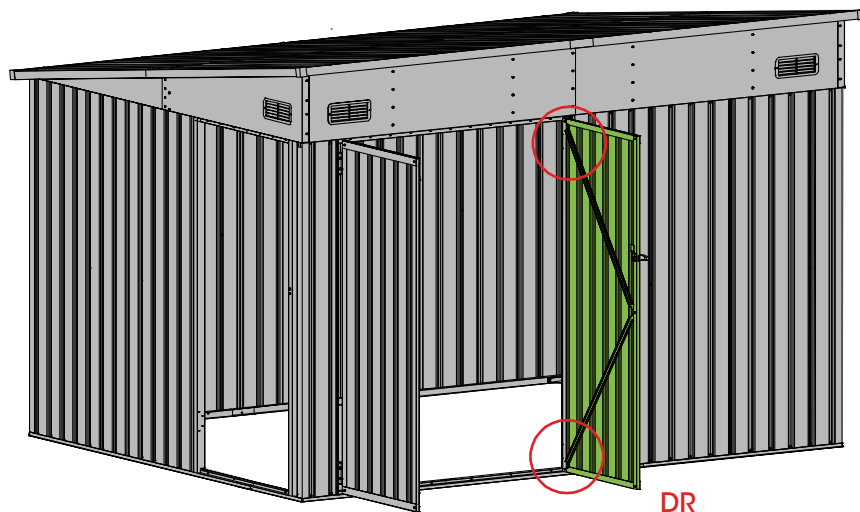


DR

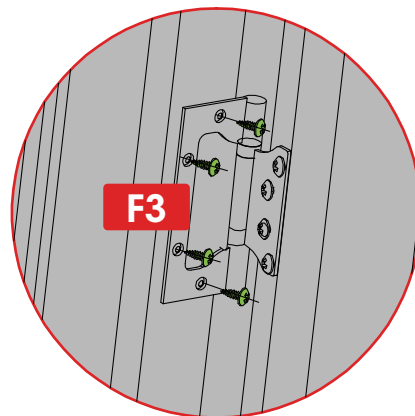

F3

43



CKM

X 1




F3

X 8




F2


X 2

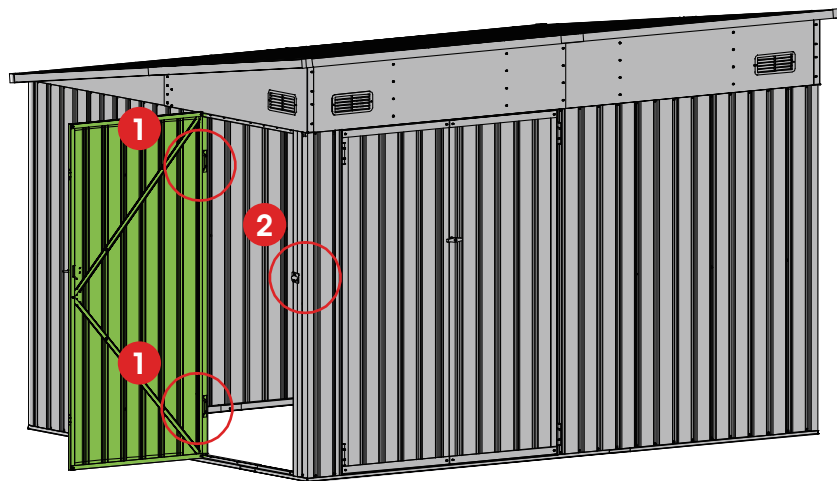

CKM

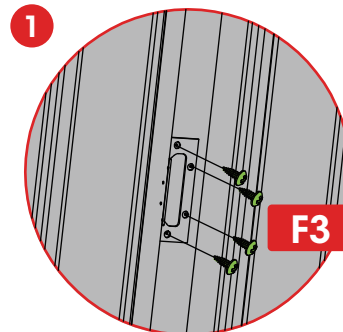




F3

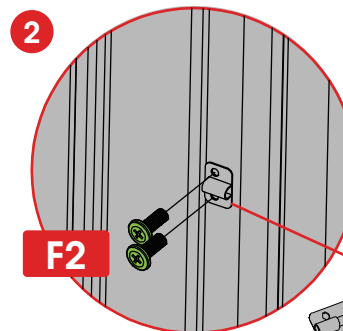

F2


DCS



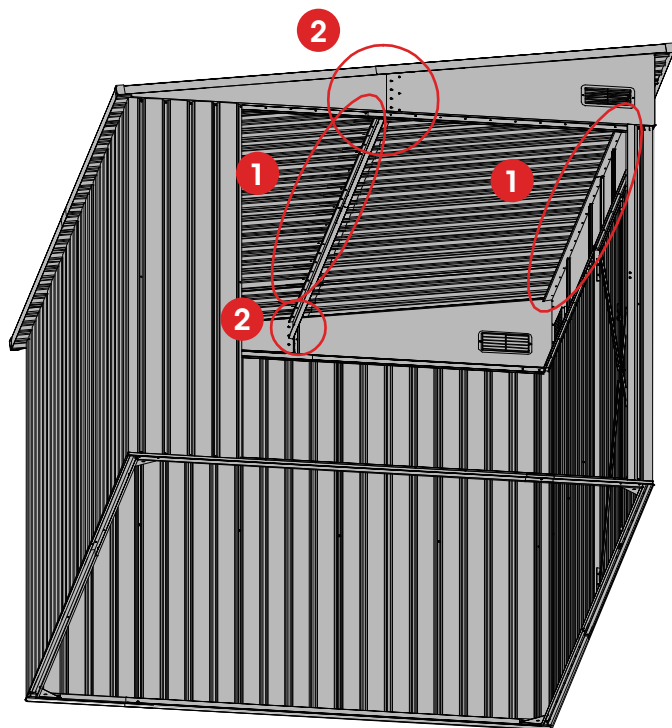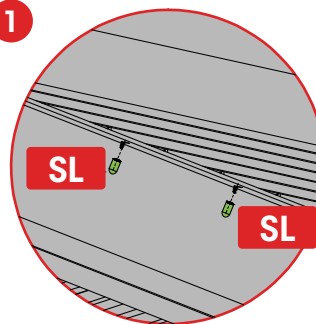
SL X 58

1


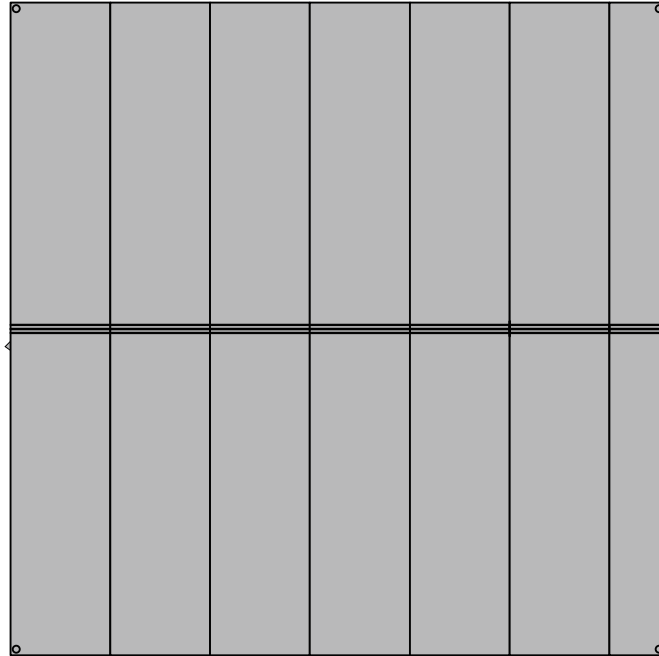
Watch your head

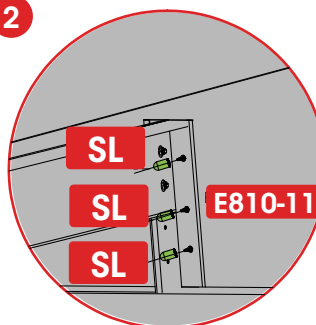
K1010-6L, K1010-6R, E810-7L, E810-7R and the exposed part of the top cover assembly screws need to be covered with plastic protective caps.

2


The connecting screws of ventilation boards K1010-6L, K1010-6R and E810-11 need to be covered with plastic protective caps.


part 7: Floor




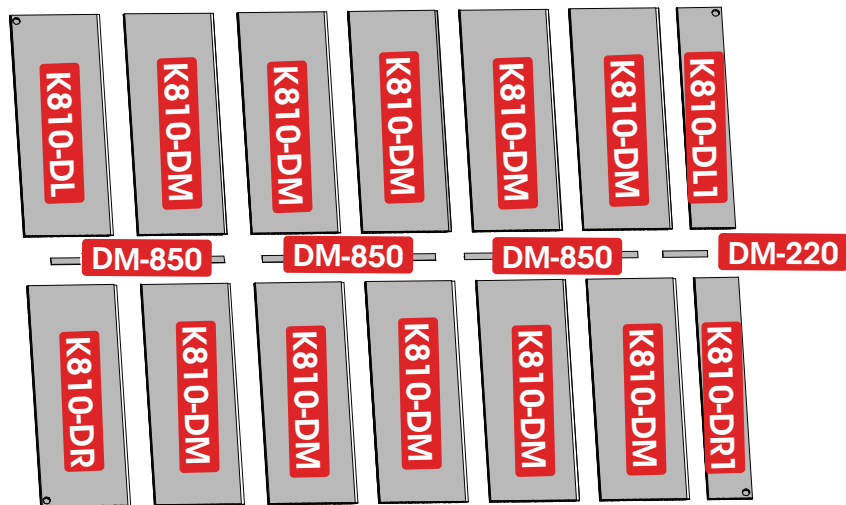

 **K810-DL** x 1  **K810-DL1** x 1  **K810-DR** x 1  **DM-220** x 1
 **K810-DR1** x 1  **K810-DM** x 10  **DM-850** x 3  **F1** x 28


F1: Self-tapping screws

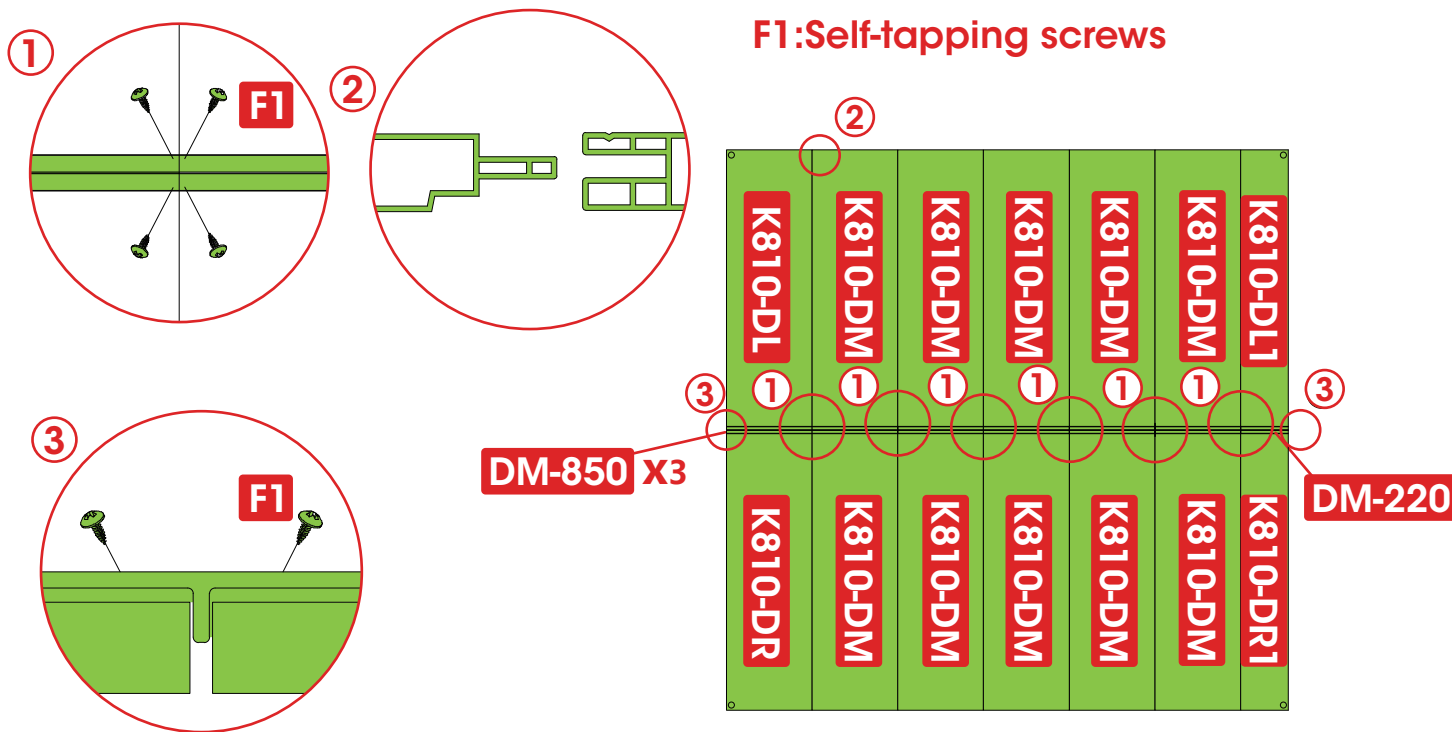

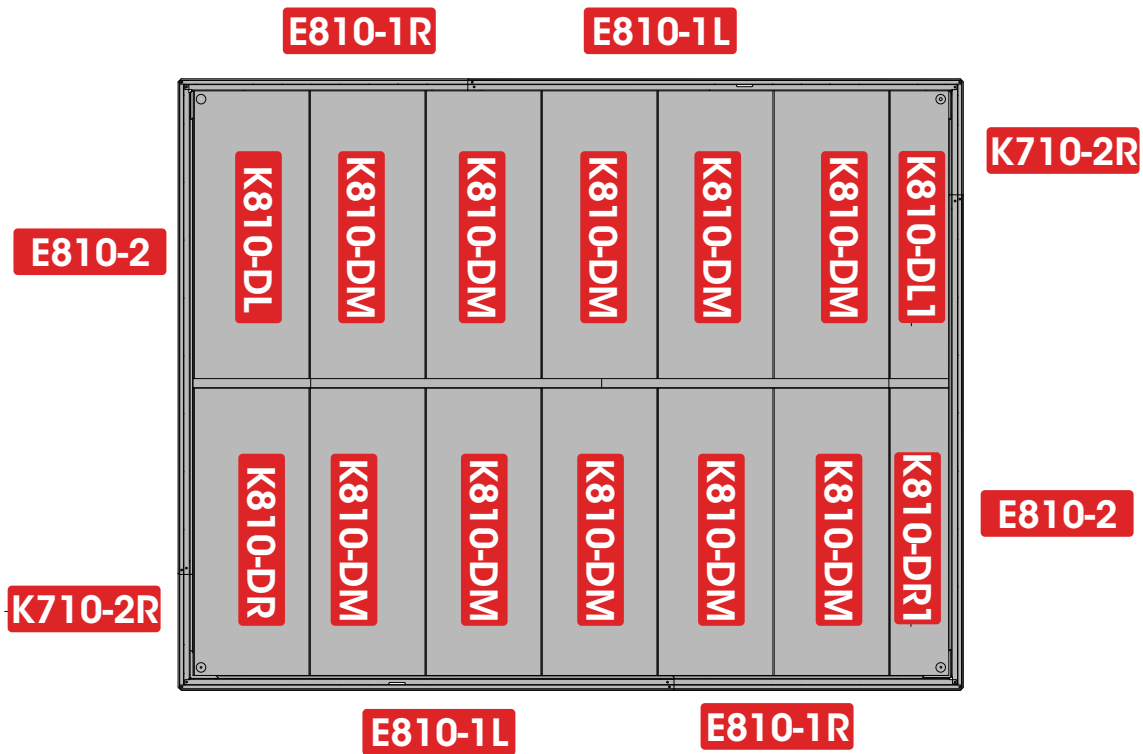

HELP CENTER


Question about your product? We're here to help. Visit us at:



Chat Support



Product Inquiry



Orders FAQ



Product Assembly



Returns & Refunds

We Stand Behind the Quality of Their Furniture

If you have any issues with your item please let us know! We will always do our best to come up with a solution that you will be happy with. Please get in touch with our customer service team before returning the product. And pls do not throw the original box(es) if you have not finished assembling or confirmed no quality issues.

Length of return period:

Items can be returned within 30 days of purchase.

In the meanwhile, everything you purchased from us comes with a one-year warranty.

Who is responsible for the return shipping fee:

We will cover the return shipping fees if:

1. Your item has a manufacturing defect in its materials or workmanship. For example, torn wicker or misaligned screw holes. We will send you a prepaid shipping label after photos are sent.

2. Your item has been damaged in transit. For example, glass is broken or wicker is damaged. We will send you a prepaid shipping label after photos are sent.

3. You receive the wrong box(es) due to a warehouse error. We will send you a prepaid shipping label after photos are sent of the wrong SKU numbers on the outer box(es).

4. One or more boxes are lost in transit. We will send you a prepaid shipping label if you no longer want the item.

*However, we still hope to work with you for a better solution instead of a return. Please don't hesitate to contact our customer service team.

Customer will cover the return shipping fees if:

1. You don't like the product(s) after receiving the box(es).

2. You no longer need the product(s) but you have received the box(es).

3. You buy the product(s) by mistake but you have received the box(es).

4. Order/Shipment cancellation failed and you have received the box(es).

Return Request

In order to get a full refund as described in this return policy, all items must be: (1) In a brand new/unused condition, please provide photos before and after packaging.

(2) When returning, all accessories and parts are firmly packed in all original packaging.

If your return does not meet the requirements, you may not get a full refund.

When will I be refunded?

The refund is released once the goods have been returned to our warehouse.

What if the product is damaged/defective outside of the valid return period?

We want you to be a happy customer. Please reach out to us by email and we will come up with a solution to make sure you are satisfied.

Reach us at

 service@kmcglobe-us.com

 (USA) +1 213-816-4788