


STEP-BY-STEP VANITY INSTALLATION GUIDE

VANITY BASE & TOP ASSEMBLY


STEP 1: POSITION VANITY BASE



STEP 2: PREPARE AND INSTALL BASIN TOP

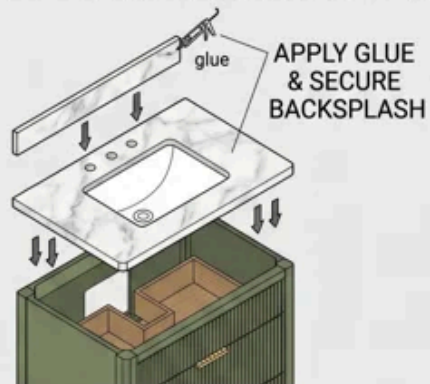

U-SHAPED
PLUMBING
CUTOUT

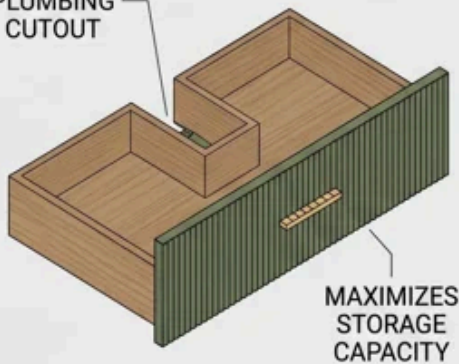

ALLOW 24H TO CURE



CURING TIME
(24 HRS)

