


INSTALLATION & ASSEMBLY

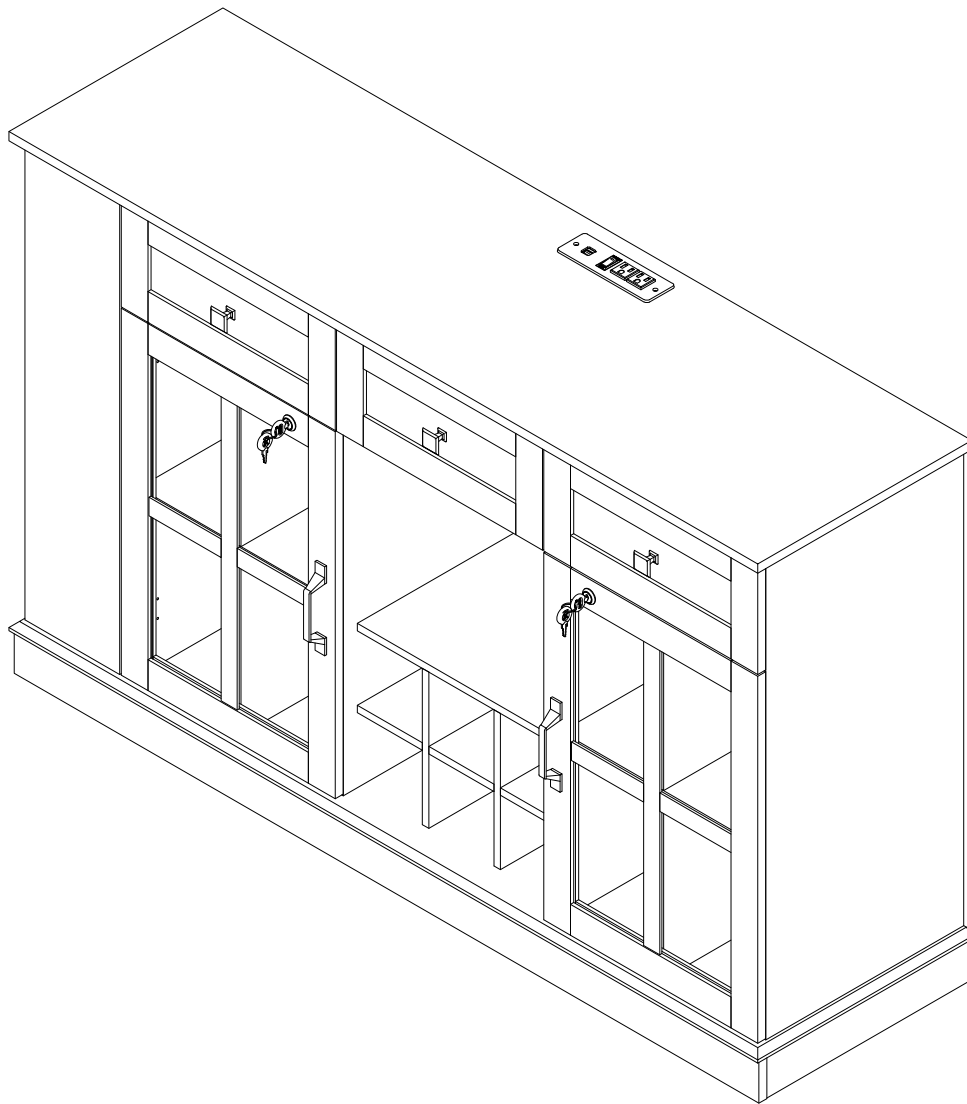


If you are confused about assembly or any question about this product, please feel free to contact us.

We will reply within 12hours


"IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY"












Recommended installers:2









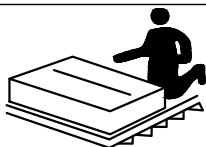













Put a carpet on the floor
before unpacking













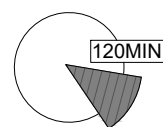















Estimate installation time:
120 minutes

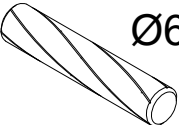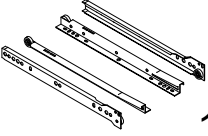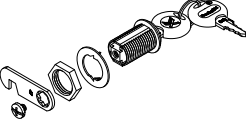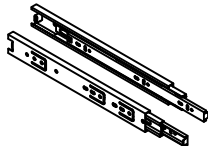
Item No.	Reference Image	Qty.	Item No.	Reference Image	Qty.
(A)	 Ø6x34mm	56 PCS	(H)		20 PCS
(B)	 Ø15x10mm	56 PCS	(I)	 M3x16mm	20 PCS
(C)	 Ø6x30mm	82 PCS	(J)		4PCS
(D)	 12"	3sets	(K)	 3.5*14mm	44 PCS
(E)	 M5x40mm	34 PCS	(L)		1PC
(F)	 3*14mm	30 PCS	(M)		2sets
(G)		1sets	(N)	 Ø5x16mm	4PCS

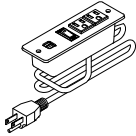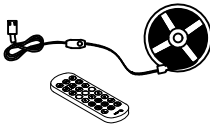Item No.	Reference Image	Qty.	Item No.	Reference Image	Qty.
O		1PC	U		1sets
P		2sets	V		3PCS
Q		3sets	W		6PCS
R		2sets	X		1PC
S	 Ø20mm	42 PCS	Y		2PCS
T	 M4x30mm	12 PCS	Z	 3.5*12mm	6PCS
					1sets

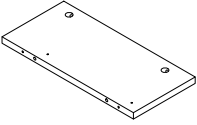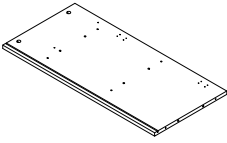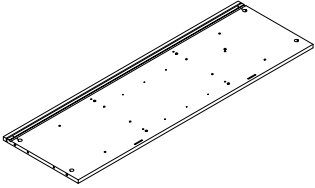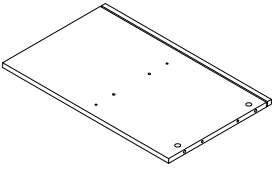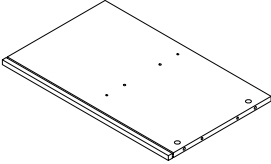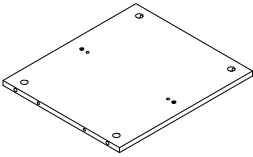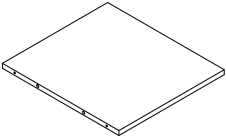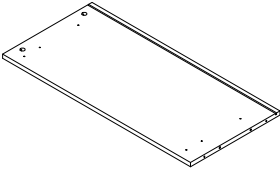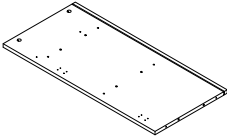
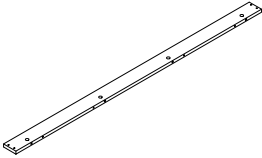
Item No.	Reference Image	Qty.	Item No.	Reference Image	Qty.
1		X 2	8		X 1
2		X 1	9		X 1
3		X 1	10		X 1
4		X 1	11		X 1
5		X 2	12		X 1
6		X 4	13		X 1
7		X 1	14		X 1

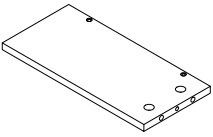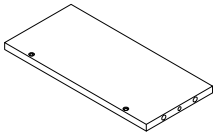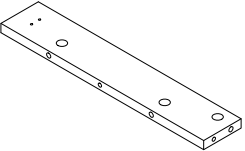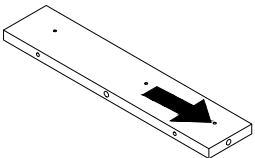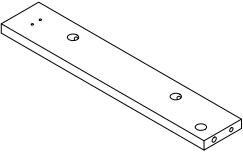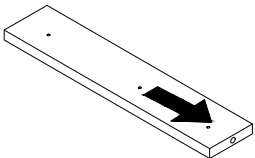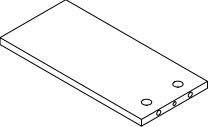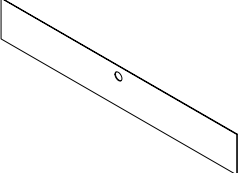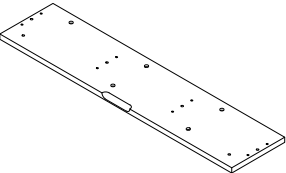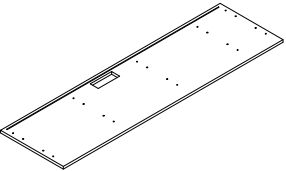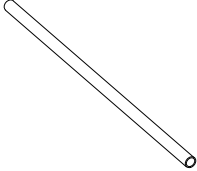Item No.	Reference Image	Qty.	Item No.	Reference Image	Qty.
15		X 1	22		X 1
16		X1	23		X 1
17		X 1	24		X 1
18		X 1	25		X 1
19		X 1	26		X 2
20		X 1	27		X 1
21		X 1	28		X 5

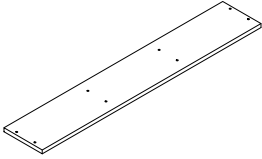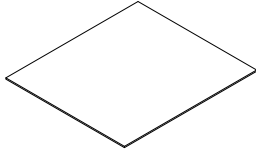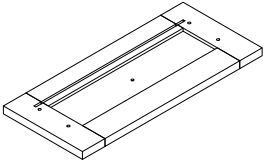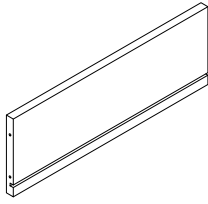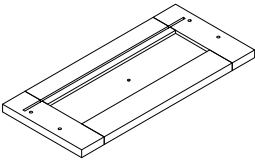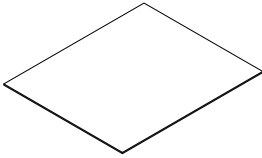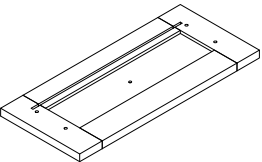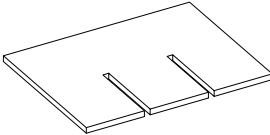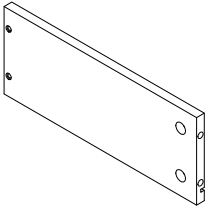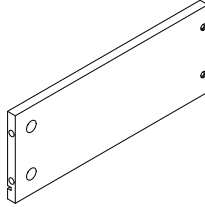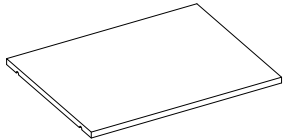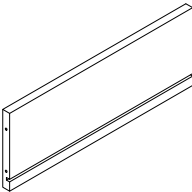Item No.	Reference Image	Qty.	Item No.	Reference Image	Qty.
29		X 1	36		X 2
30		X 1	37		X 1
31		X 1	38		X 1
32		X 1	39		X 1
33		X 3	40		X 2
34		X 3	41		X 1
35		X 2			

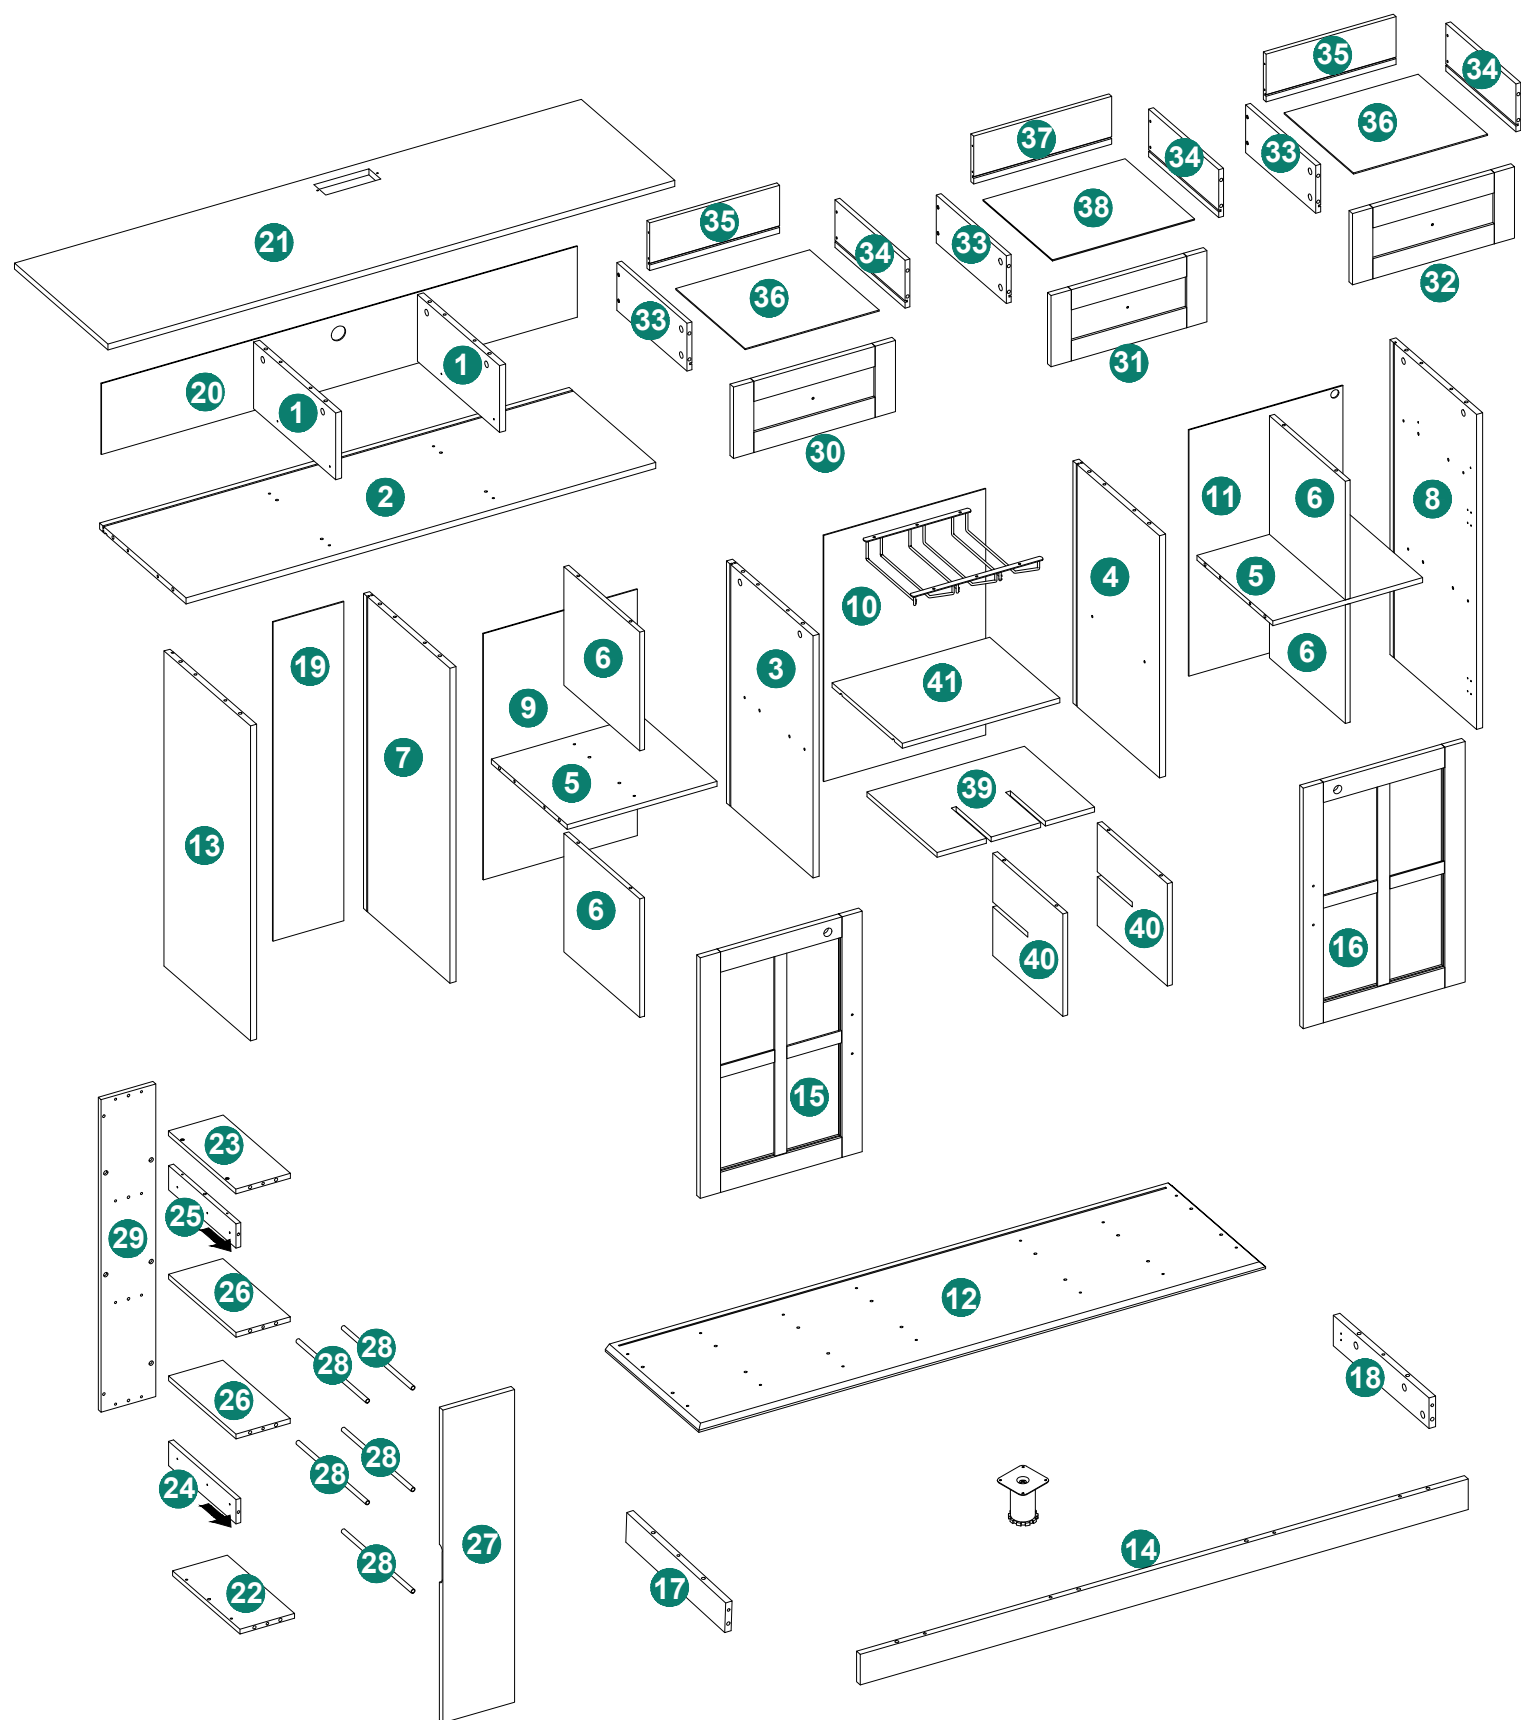


1

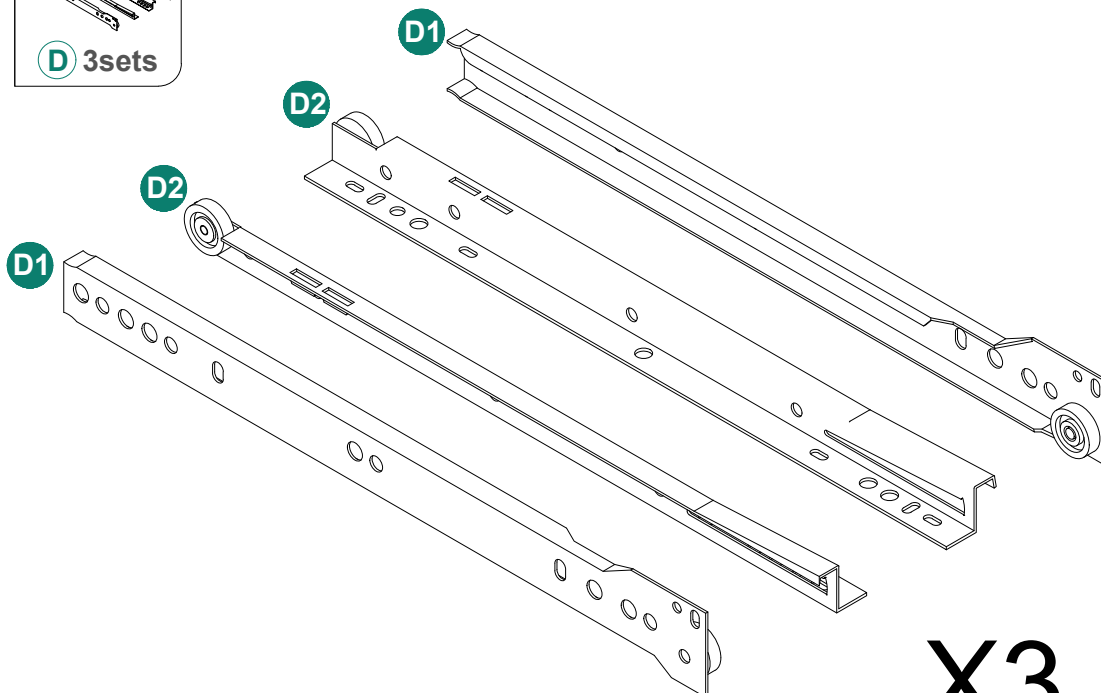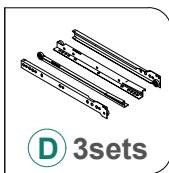

X3


2





C 4PCS




F 8PCS







1 2PCS

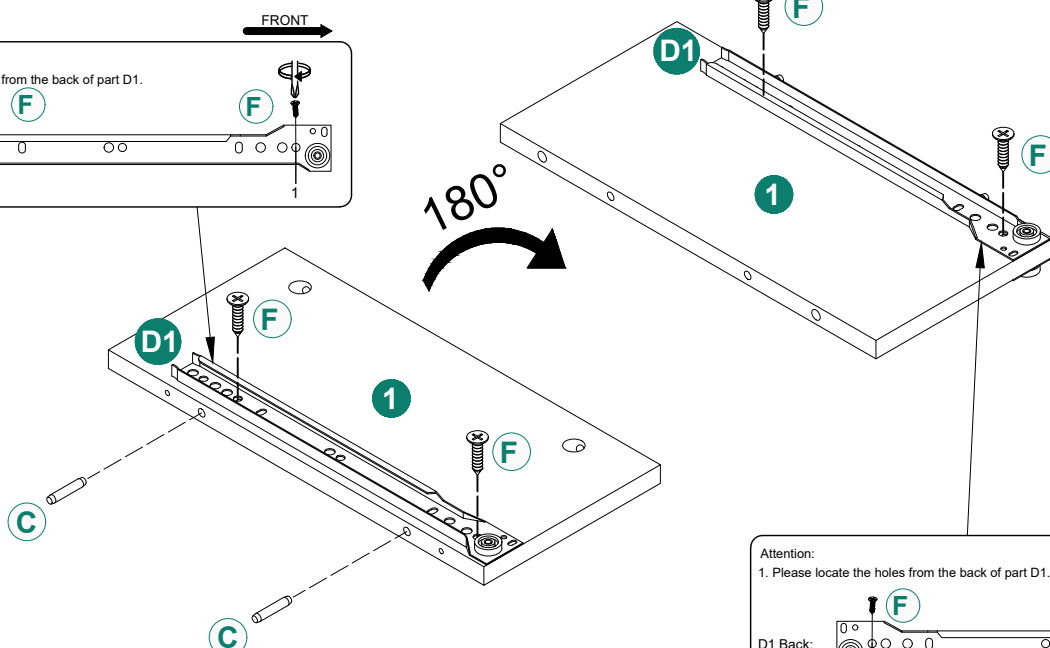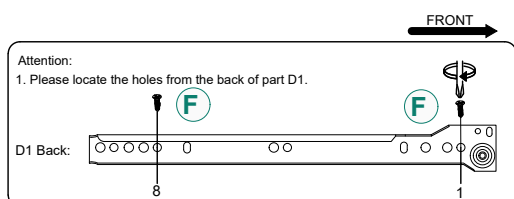



X2

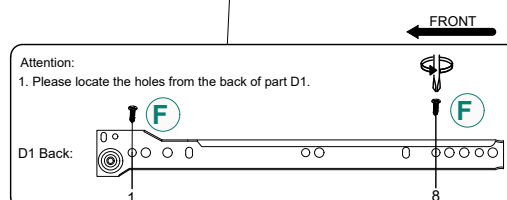


3

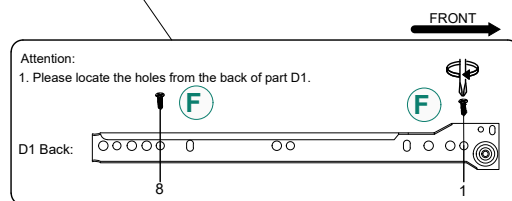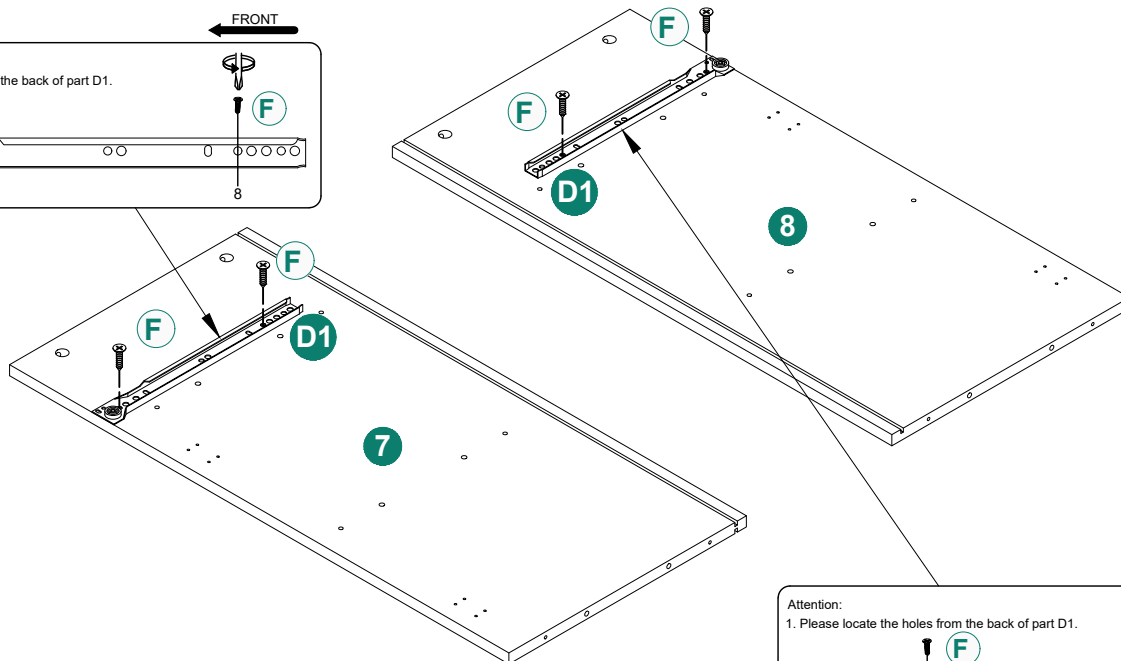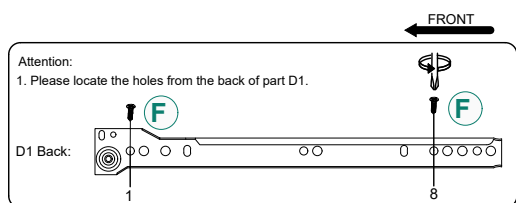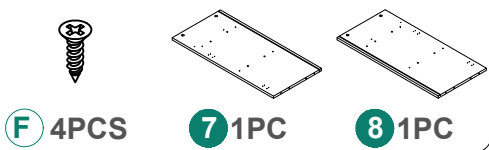


4

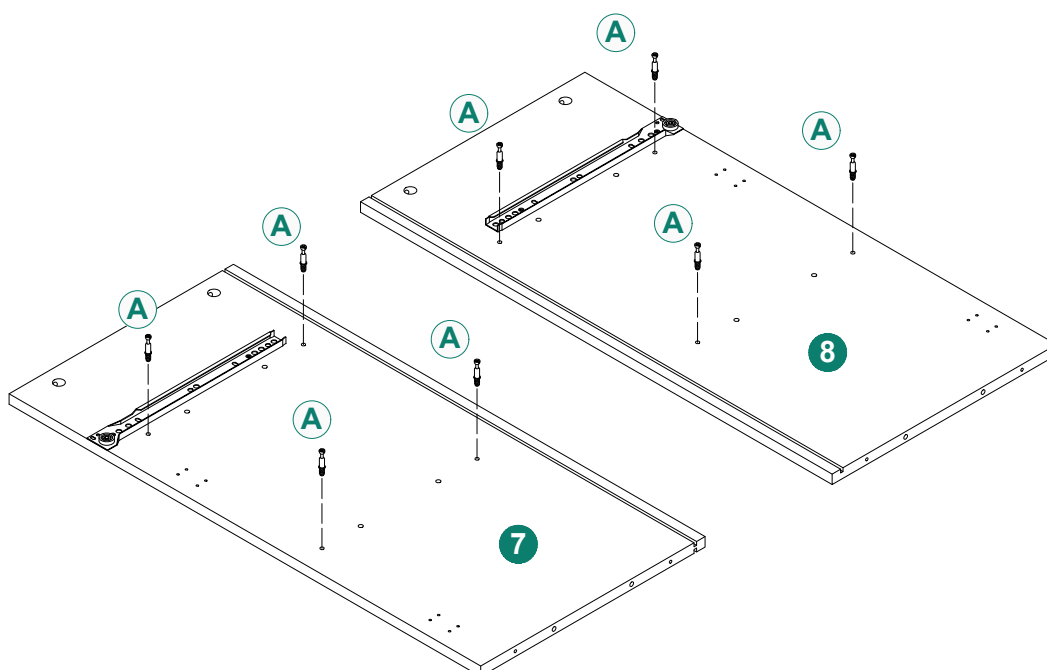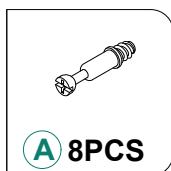


5




A 4PCS



C 4PCS




2 1PC

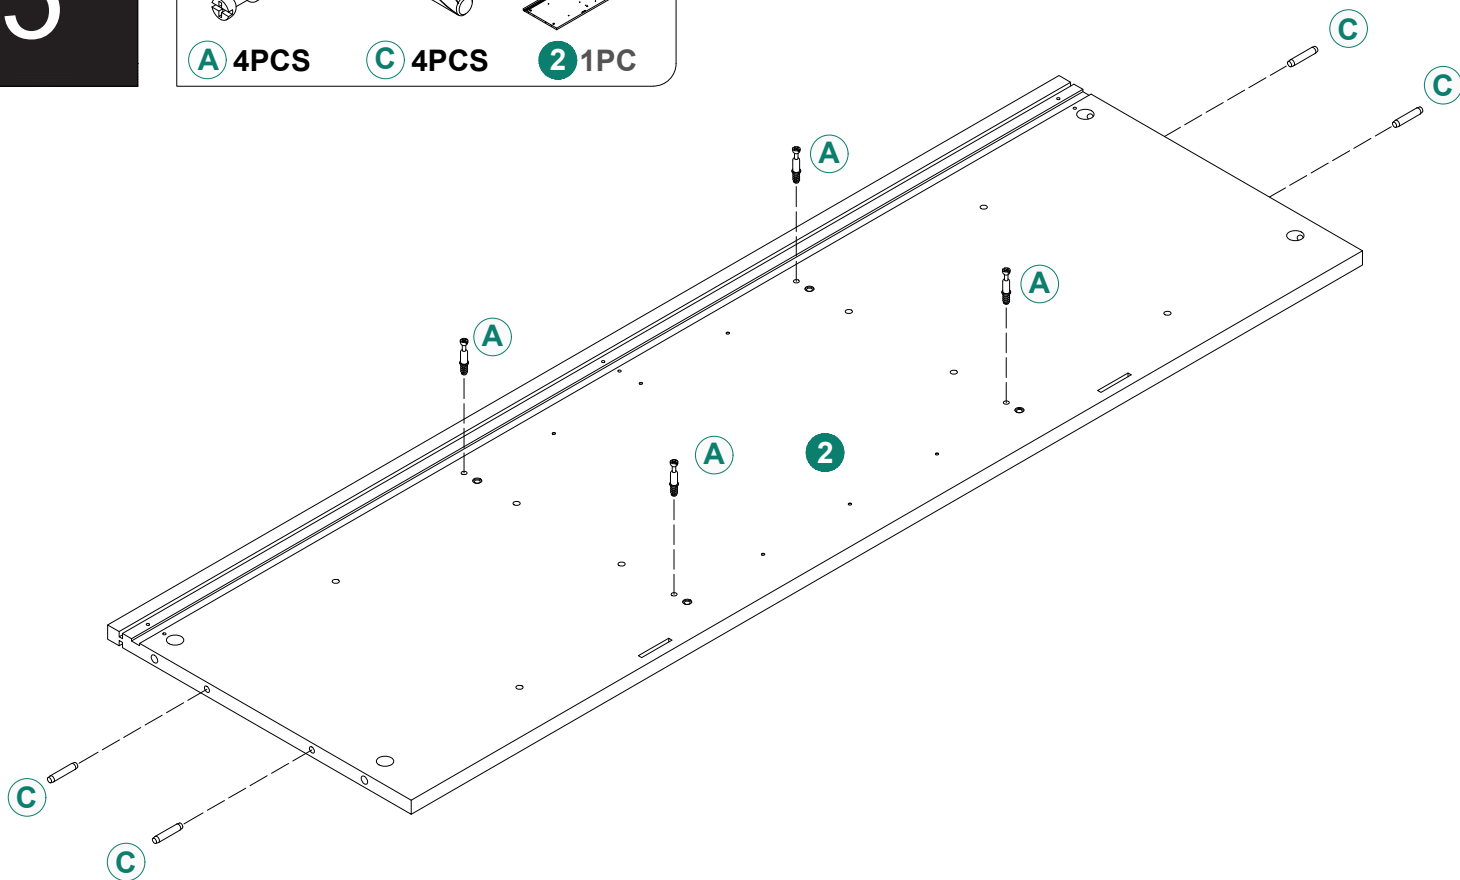



6





U 1sets

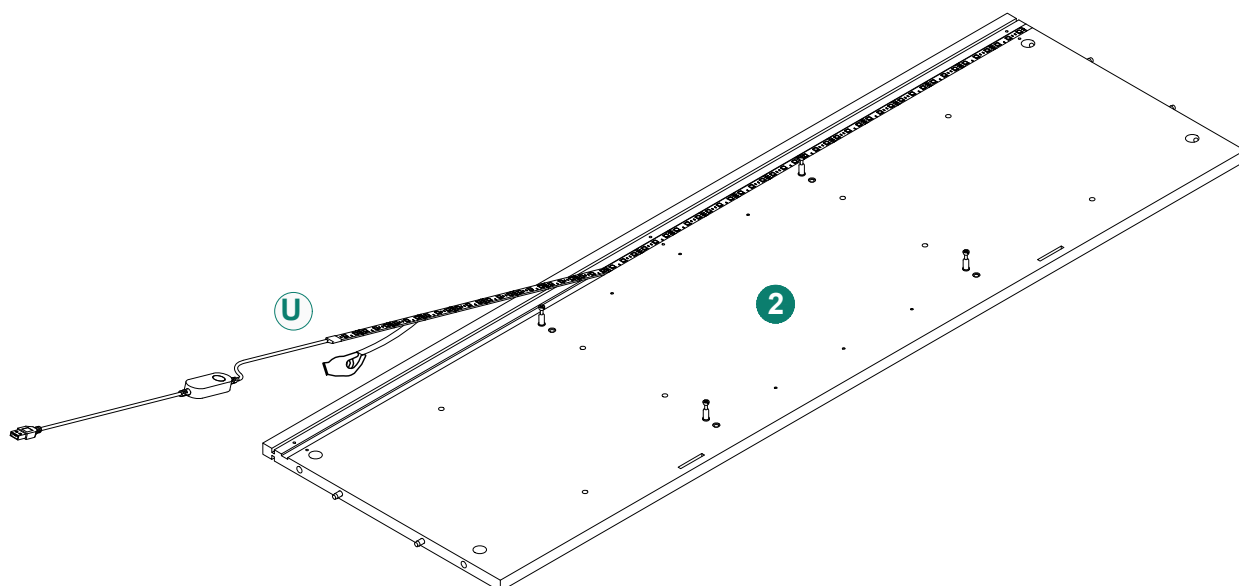

7

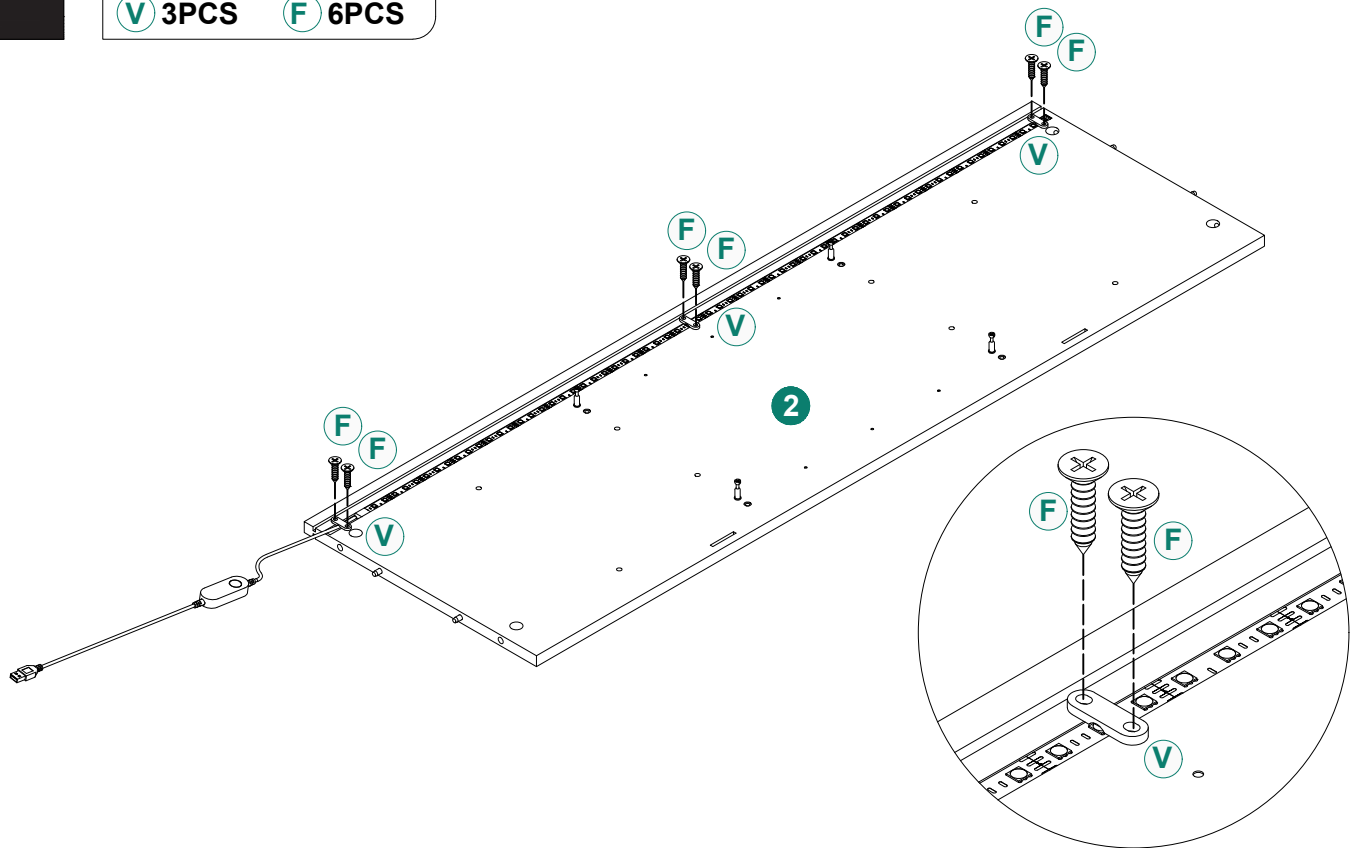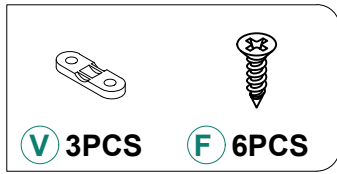


8

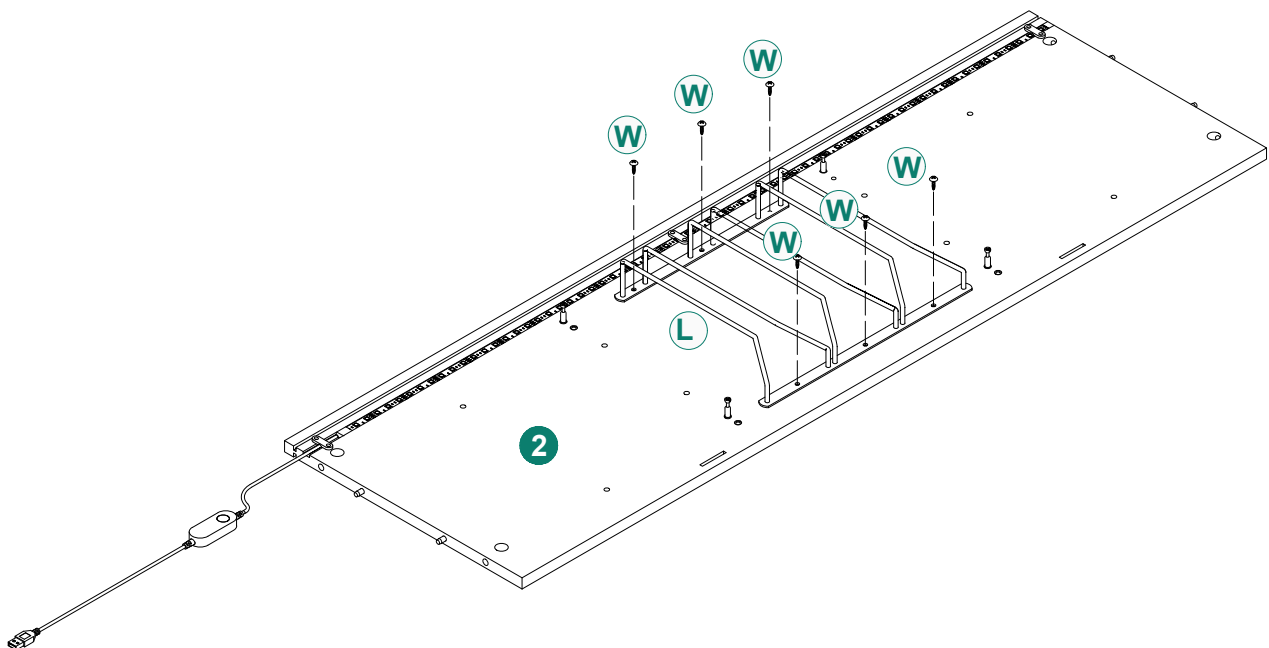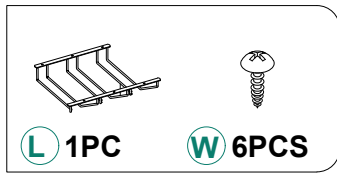


9



E 4PCS

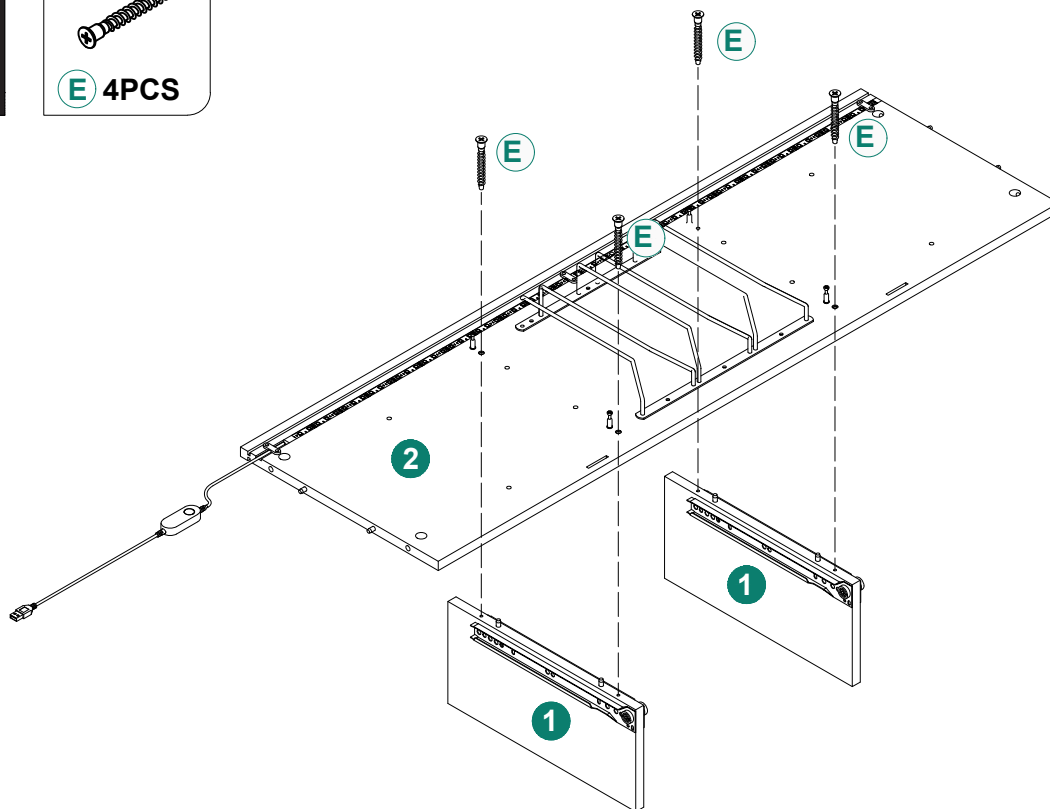


10




A 4PCS




C 4PCS



3 1PC




4 1PC

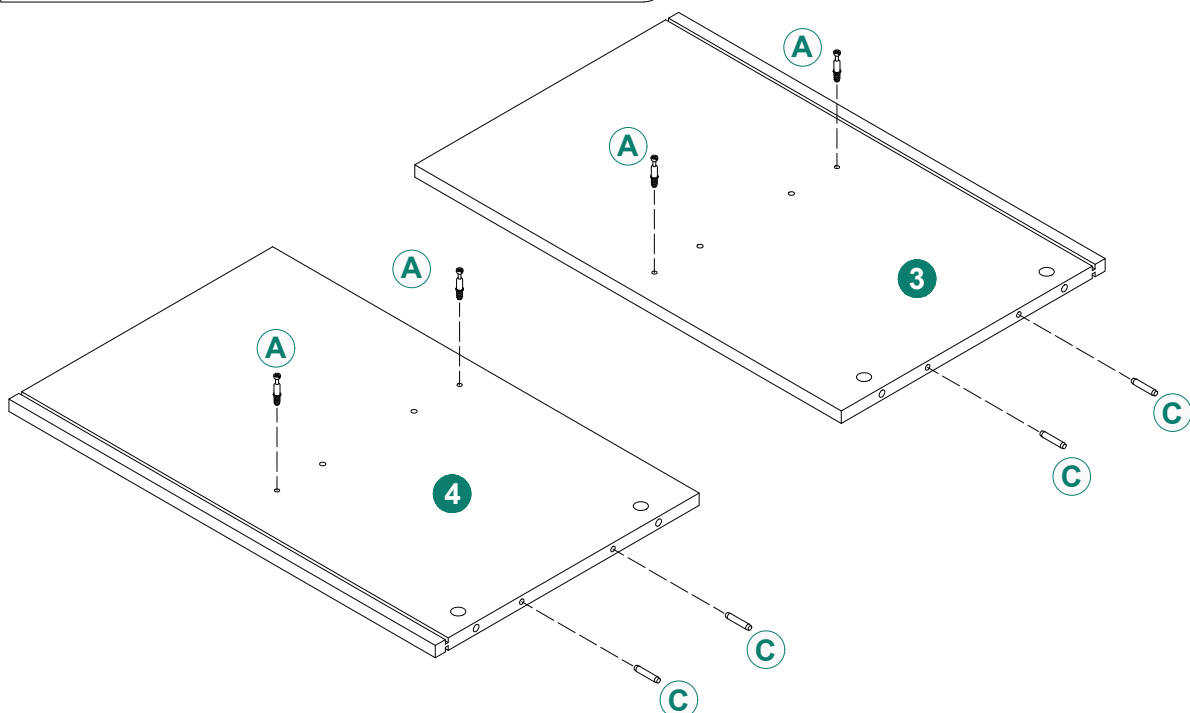


11


11




C 24PCS



5 2PCS




6 4PCS

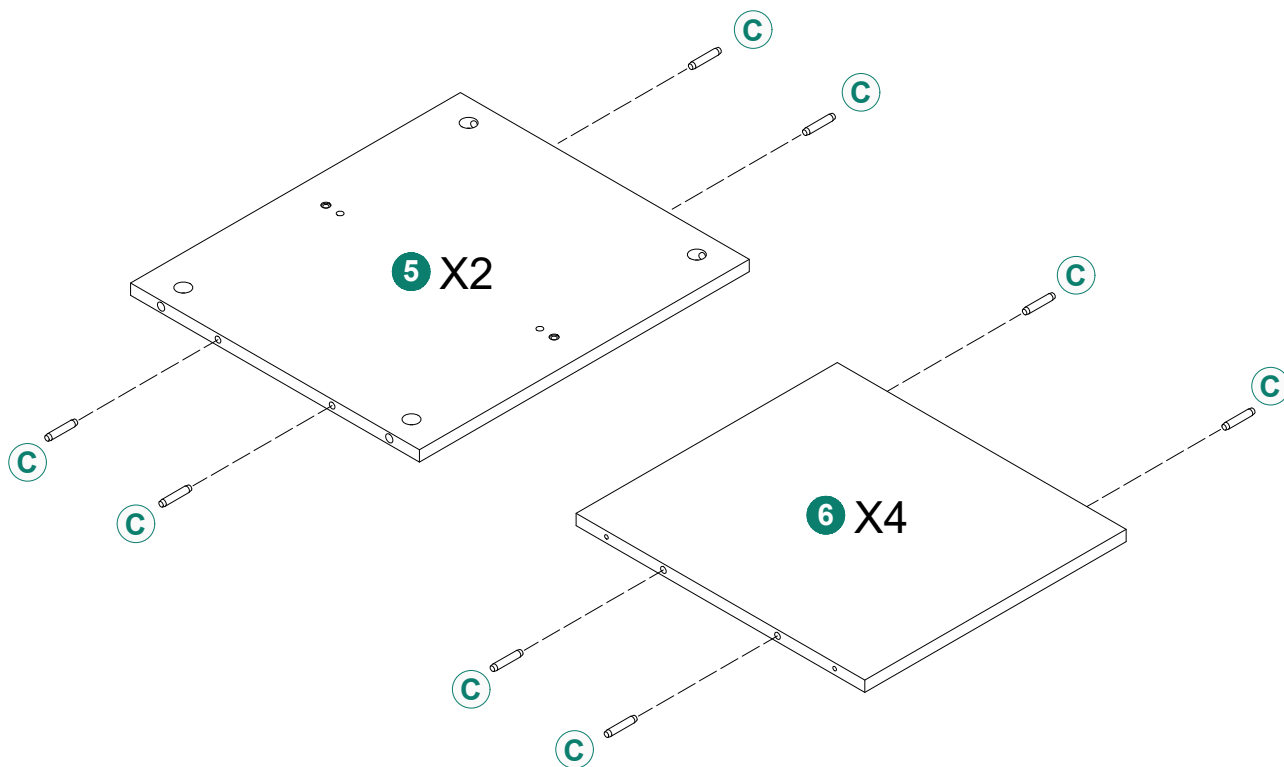

12





E 4PCS

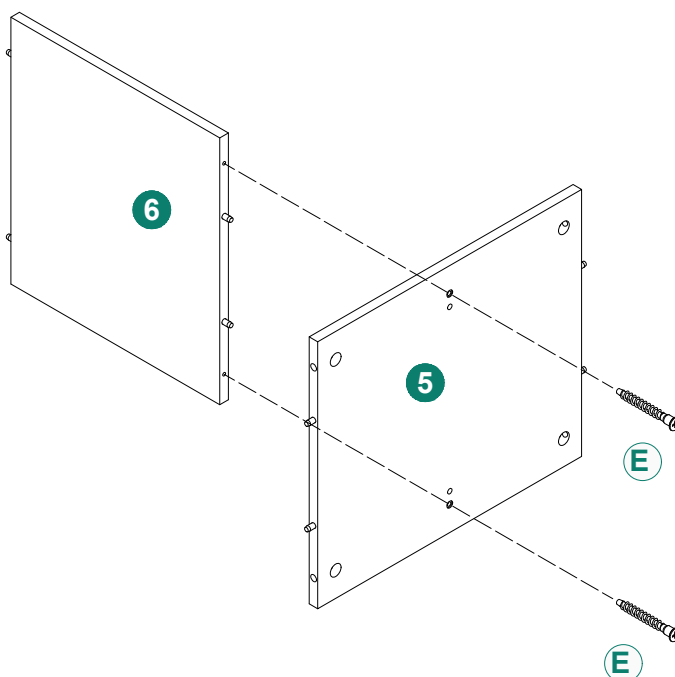




X2

12



13

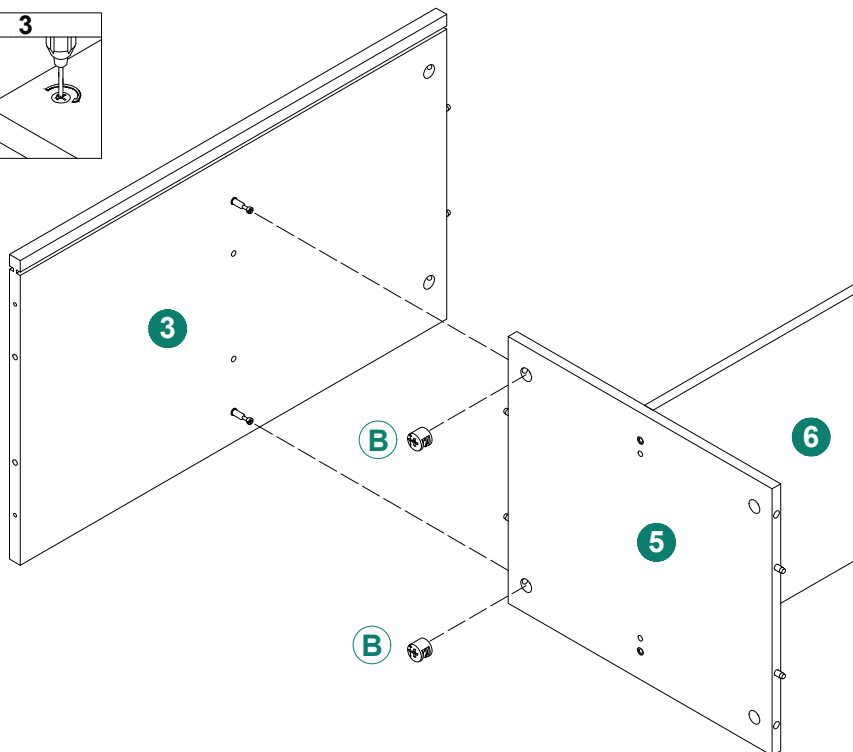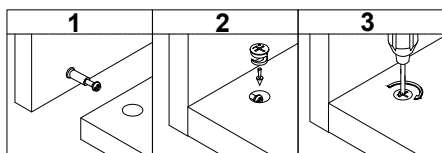



14

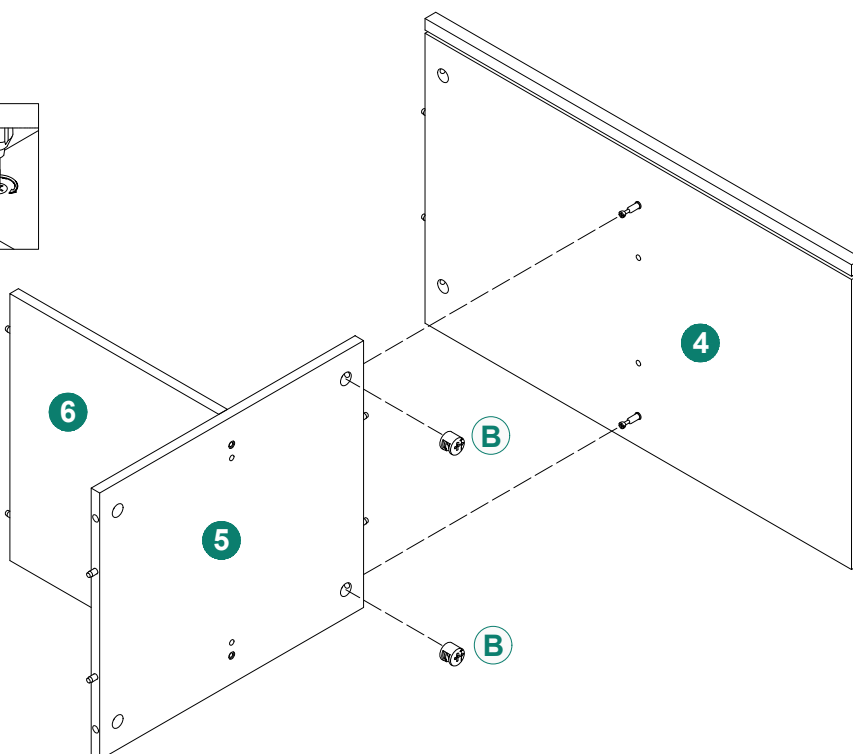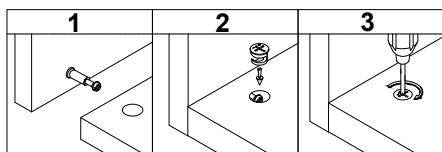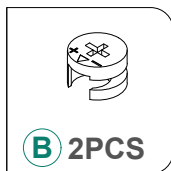




15

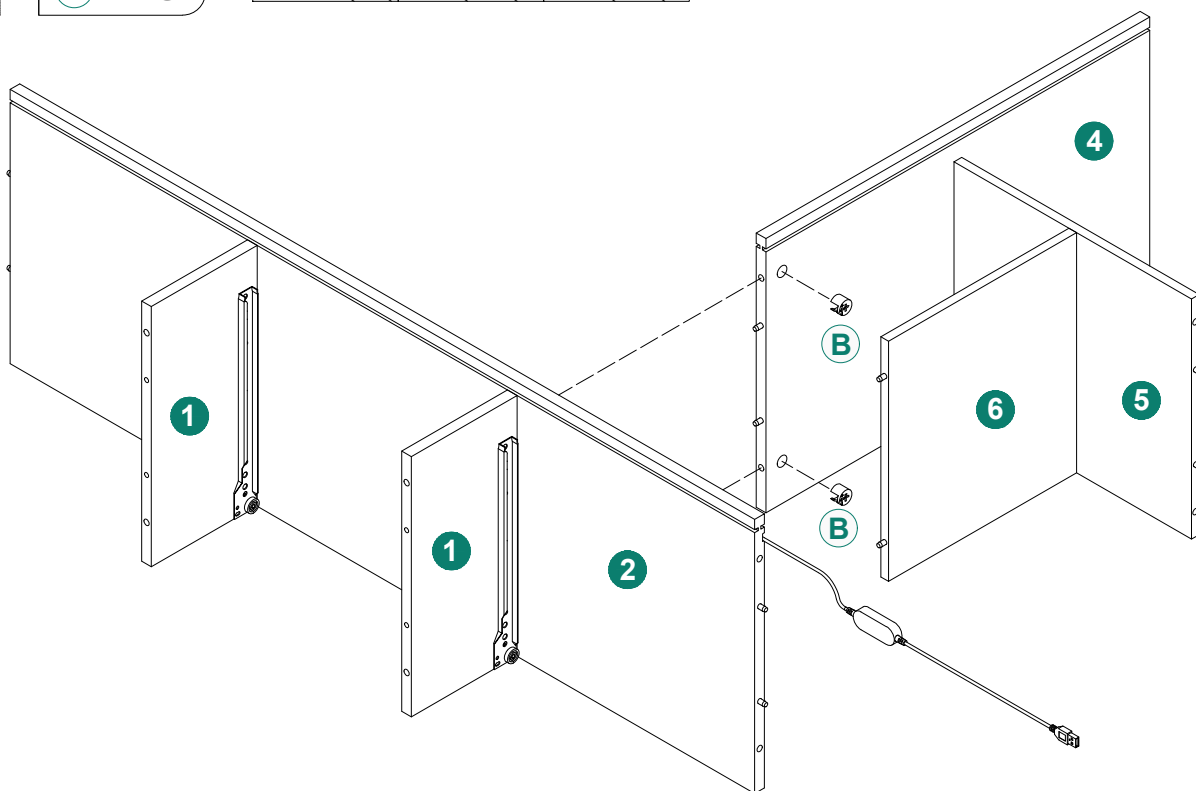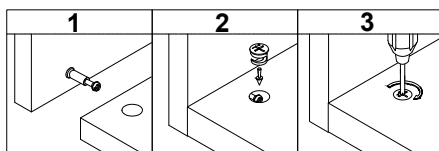




16

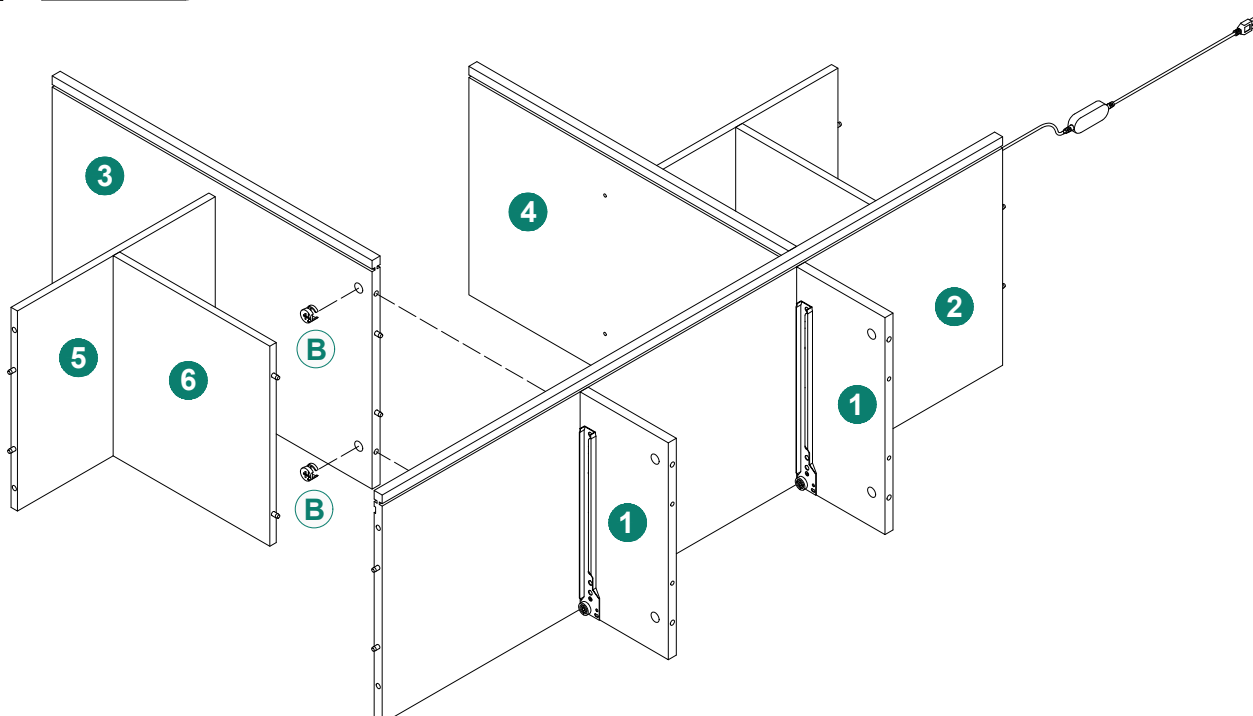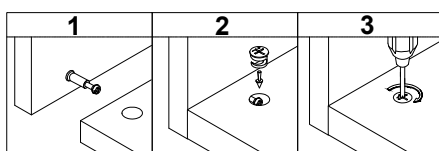



17

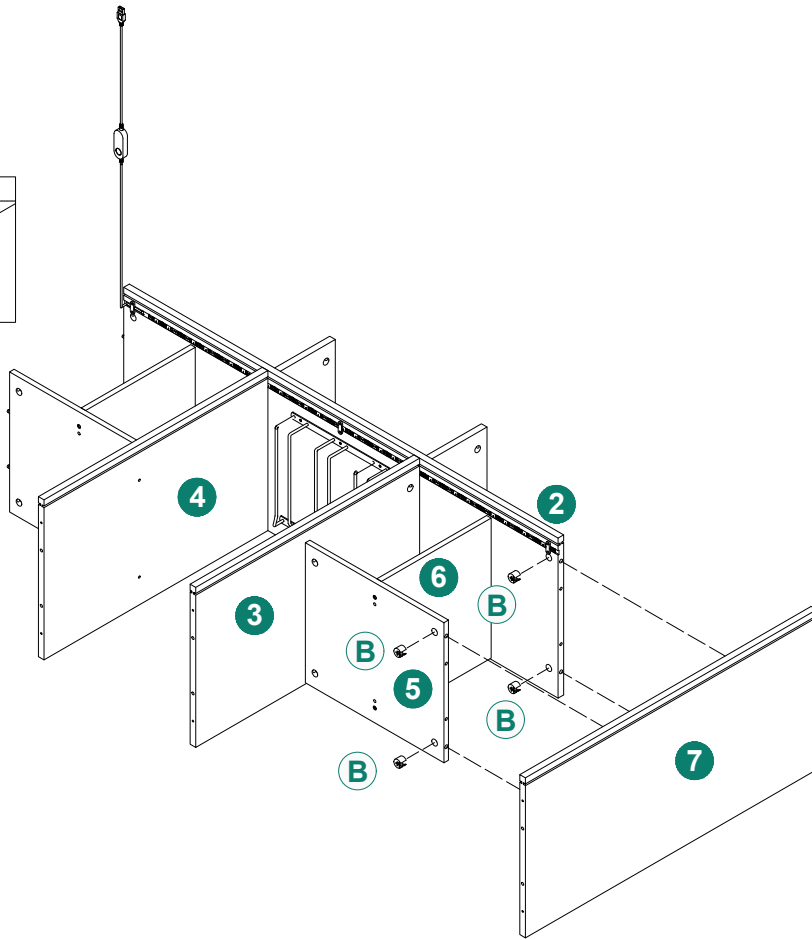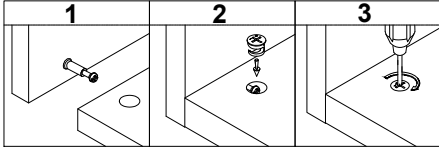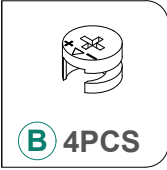



18

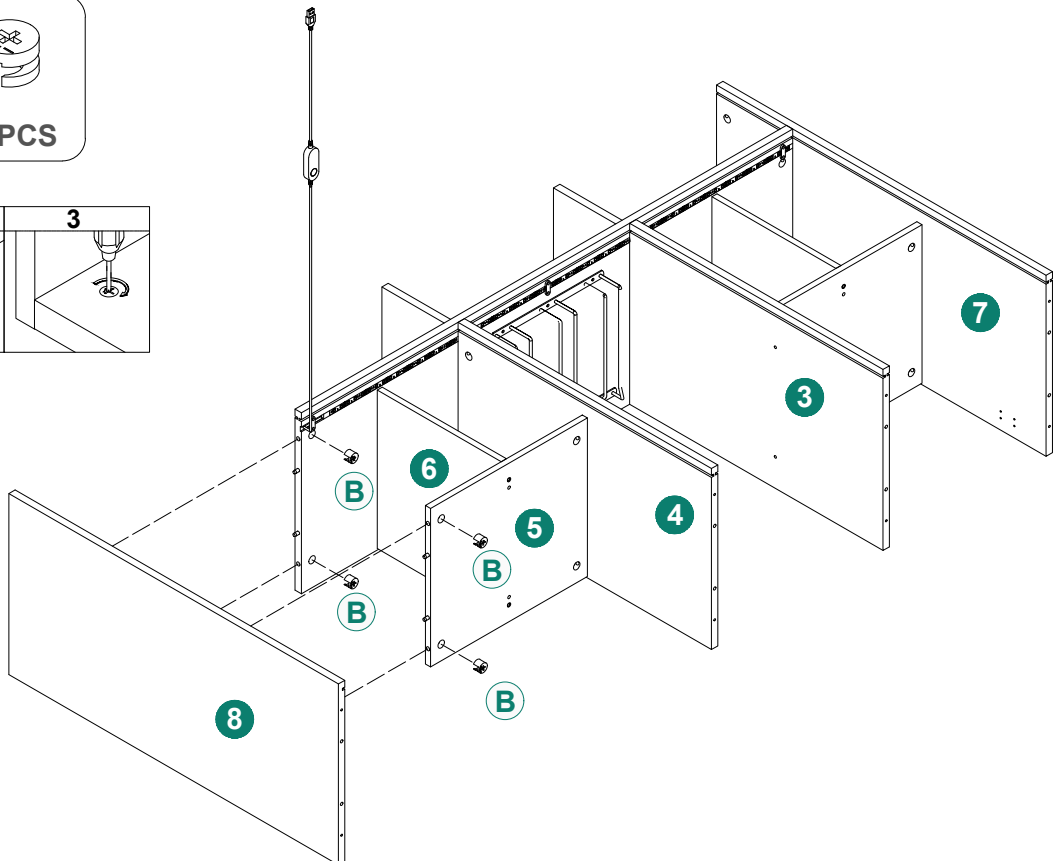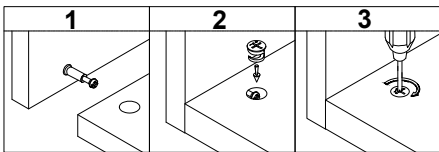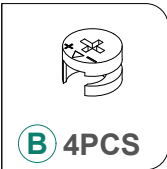


19

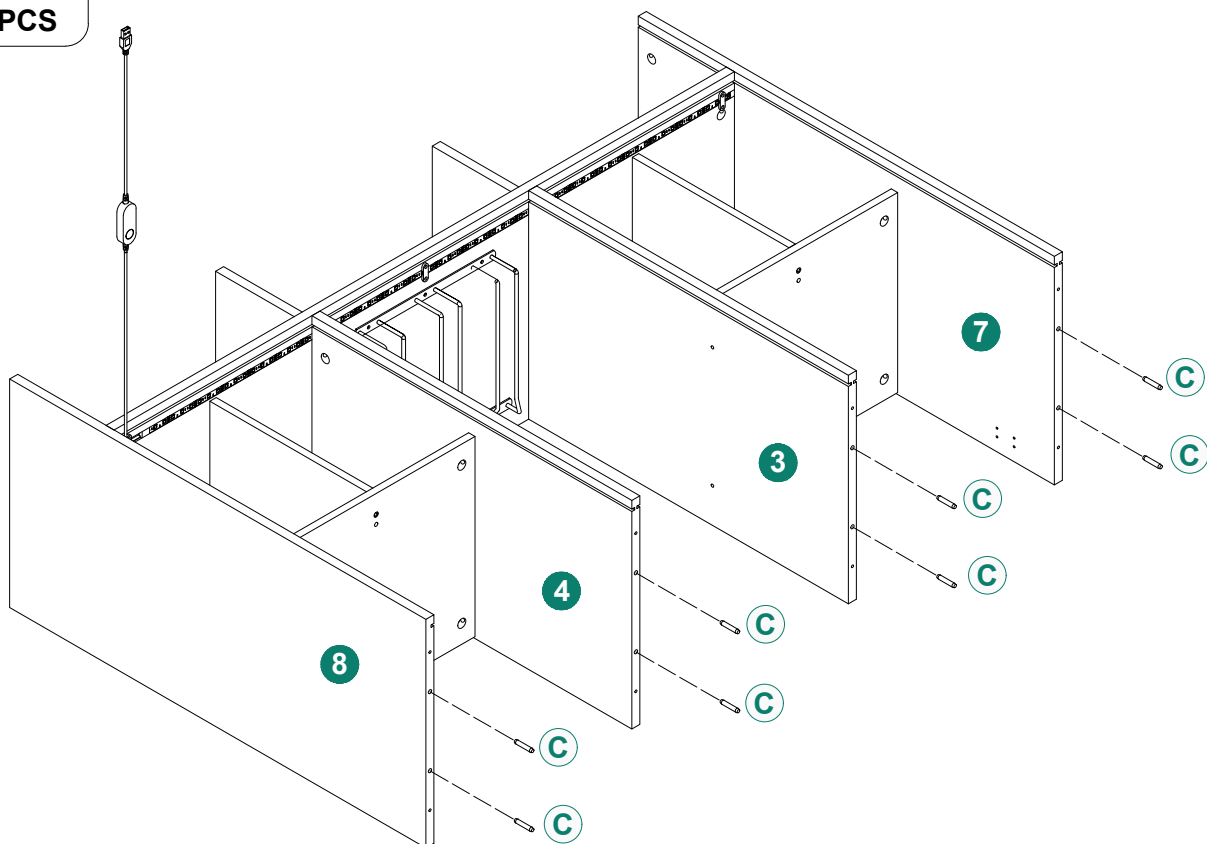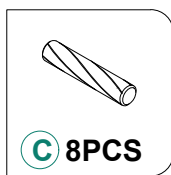


20

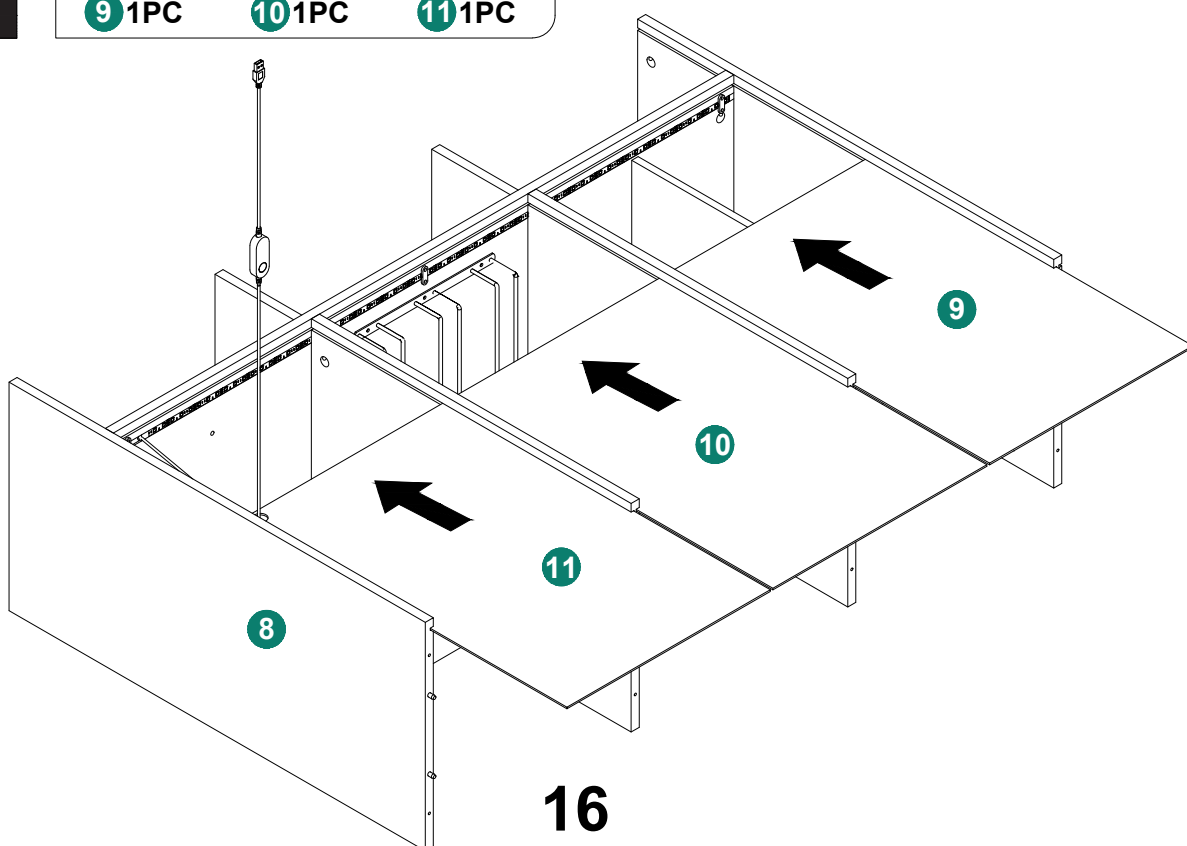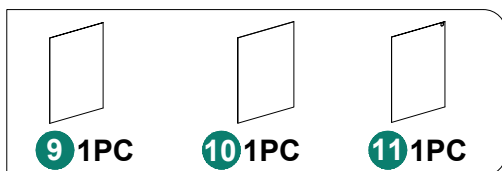

21

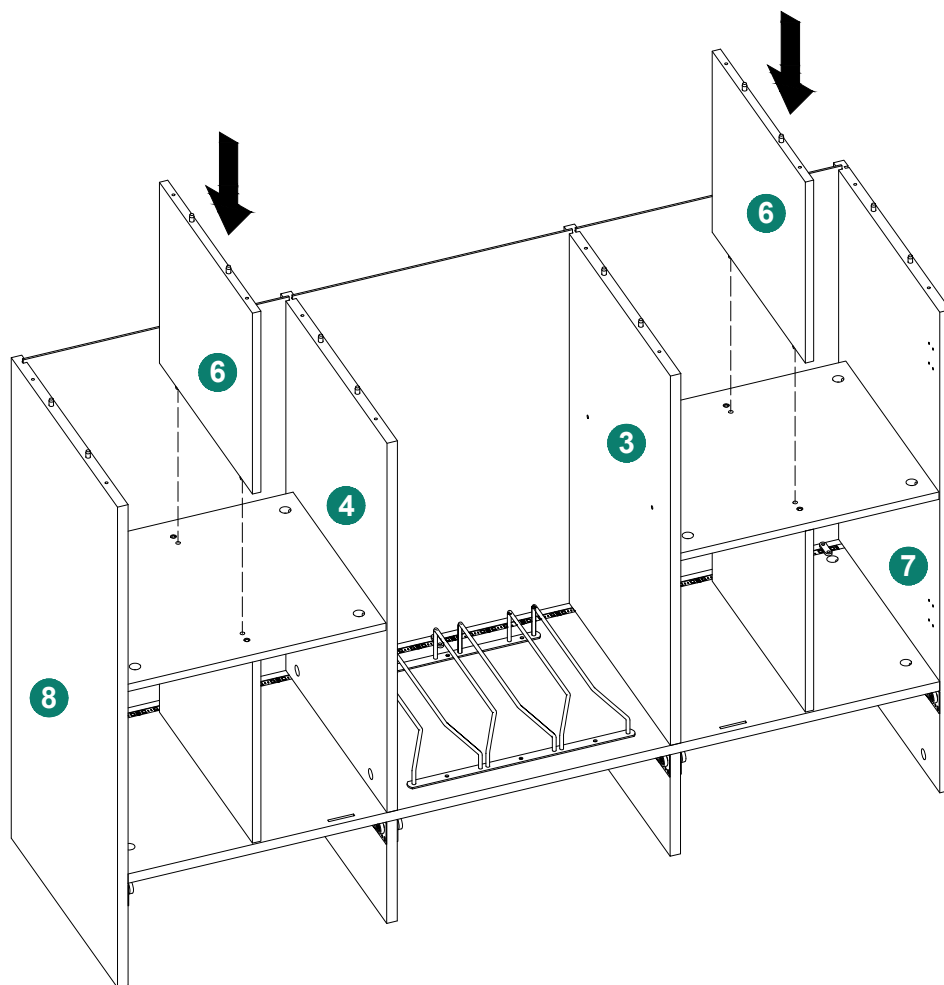


22

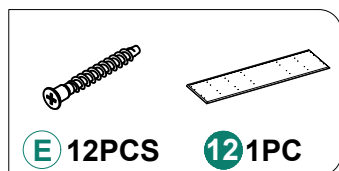


E 12PCS

121PC

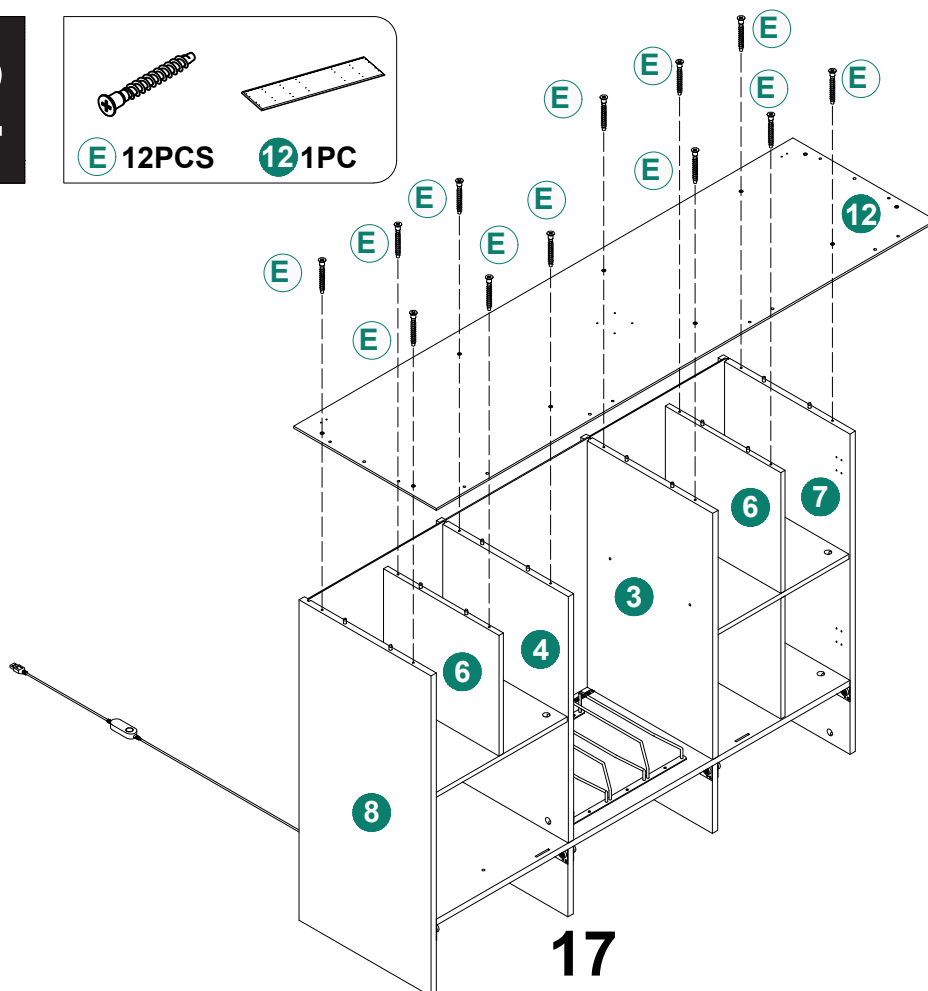



17

23

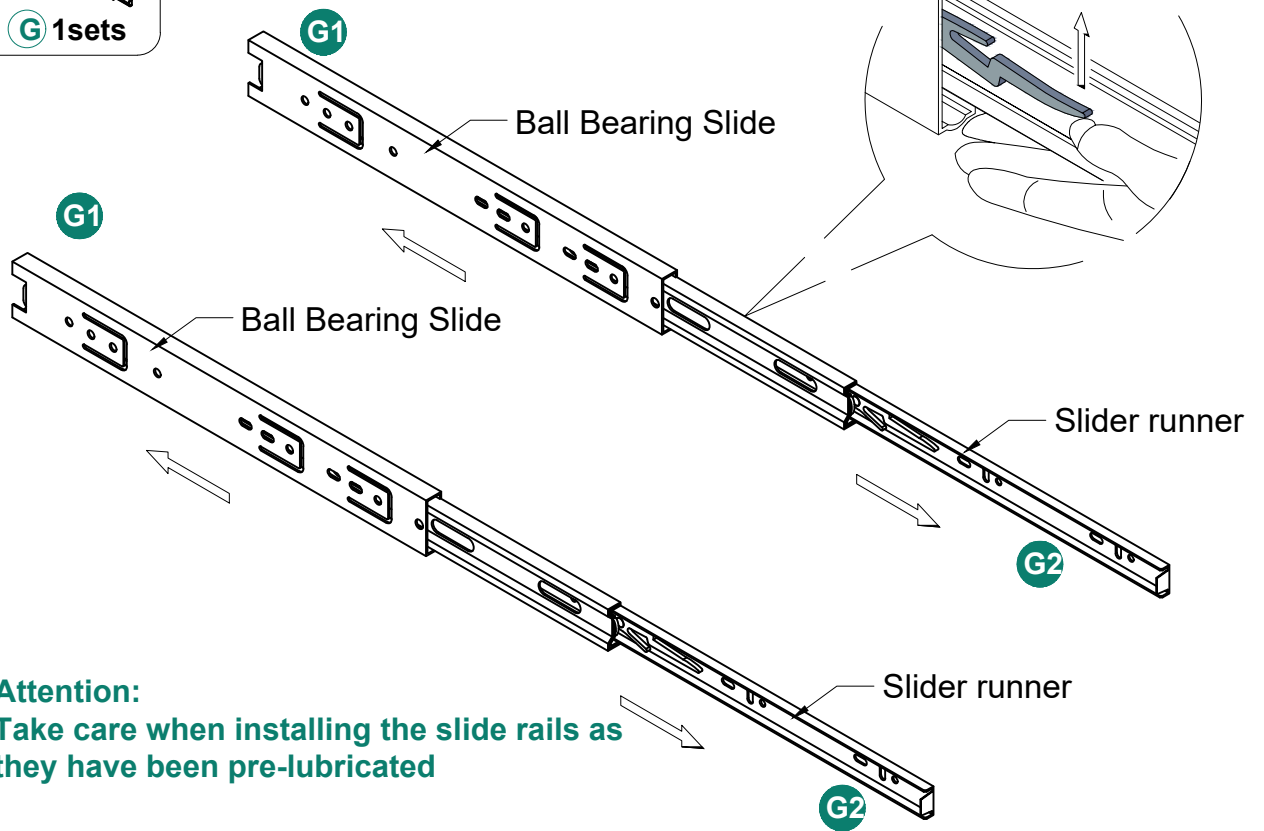


Attention:
Take care when installing the slide rails as they have been pre-lubricated

24

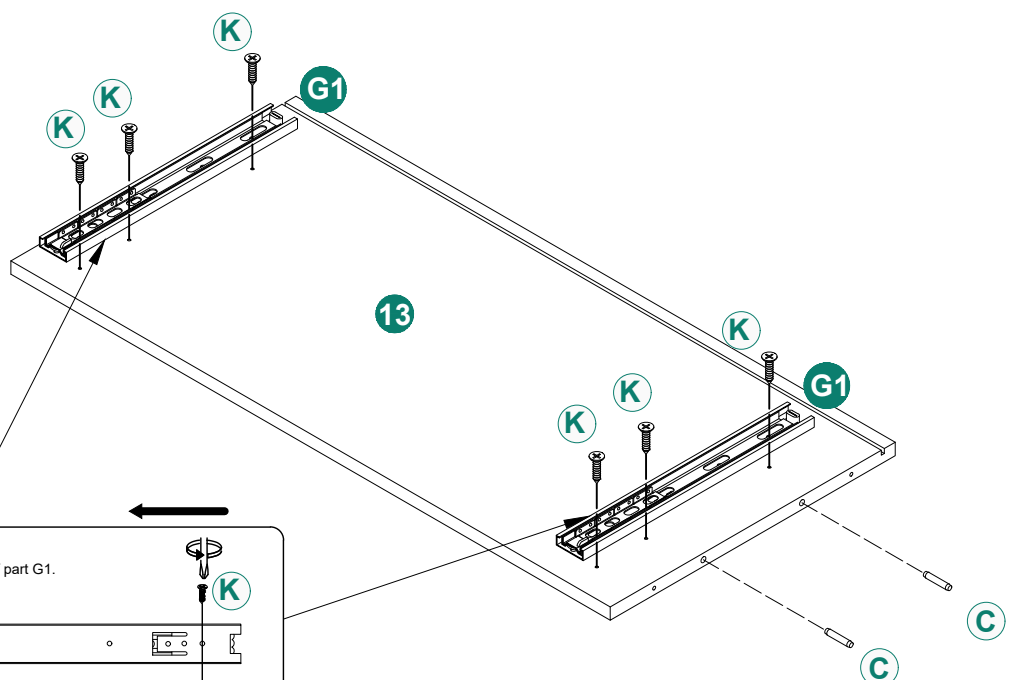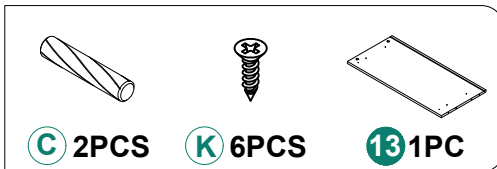

Attention:
1. Please locate the holes from the back of part G1.




18

25




E 2PCS

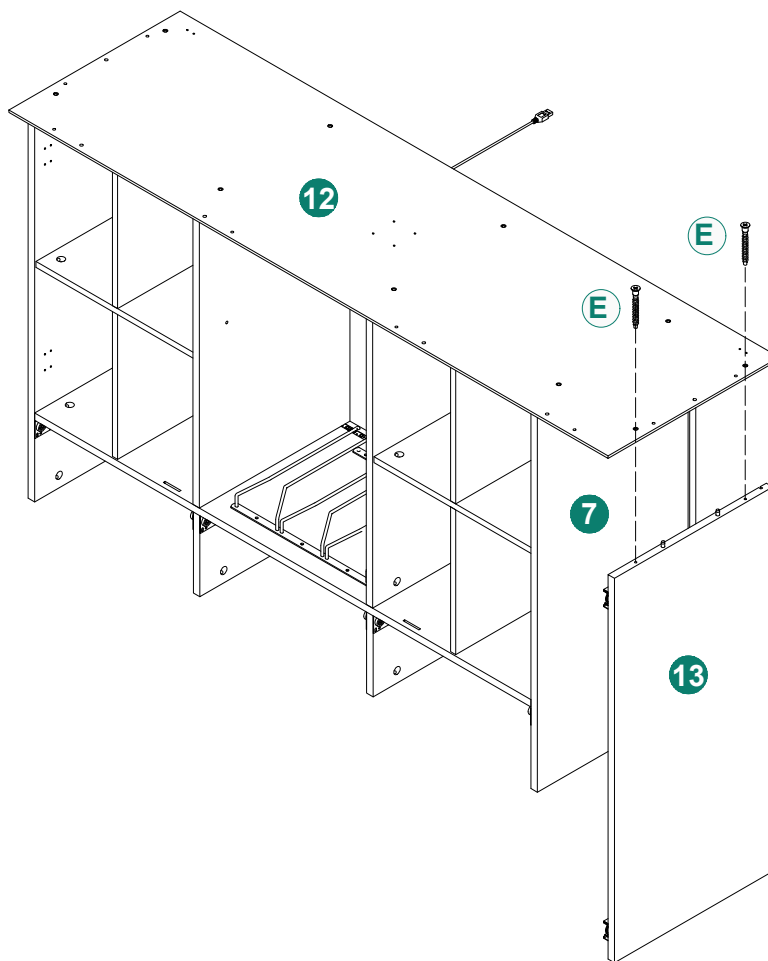


26




A 8PCS

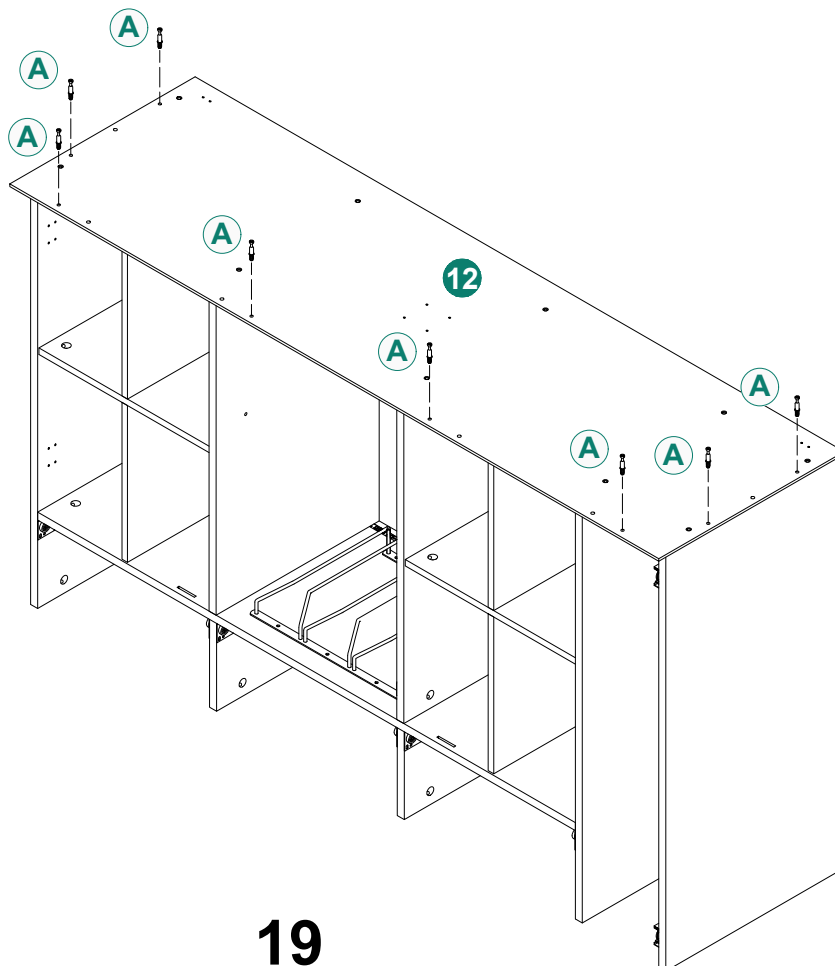

27




A 2PCS




C 8PCS




14 1PC



17 1PC





18 1PC

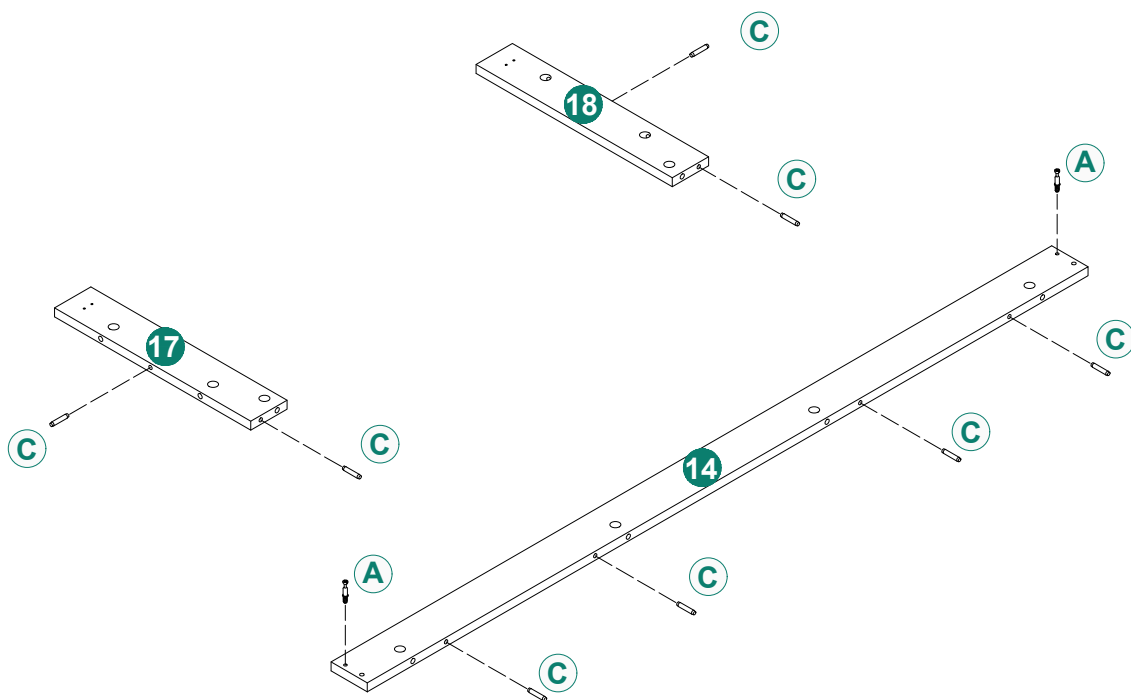




28







B 2PCS

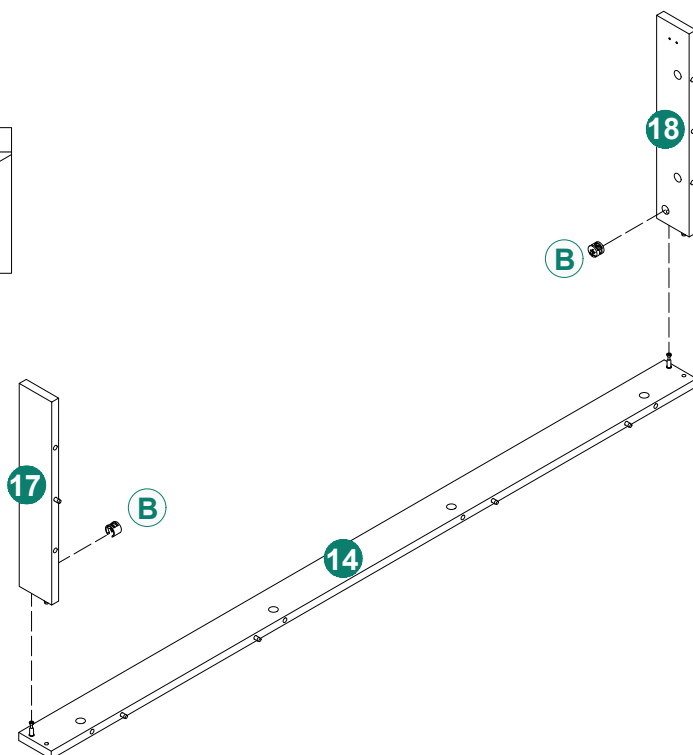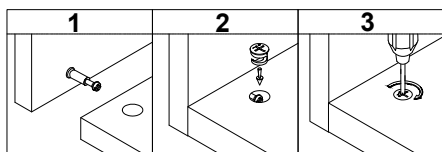

29

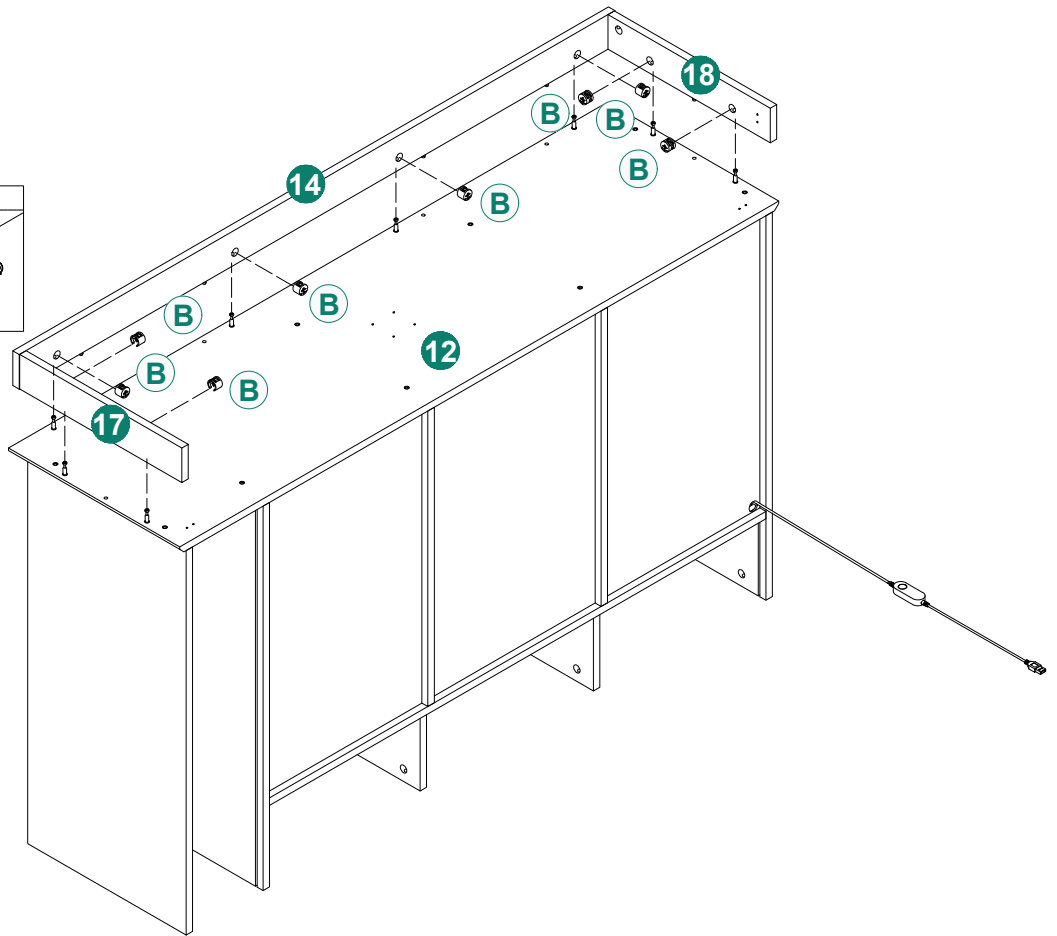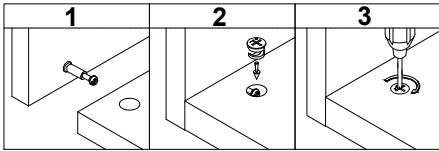
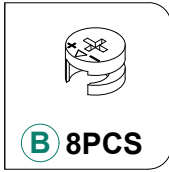


30

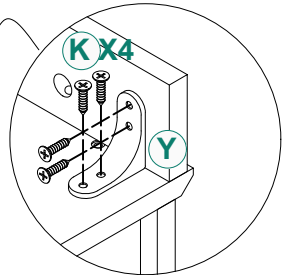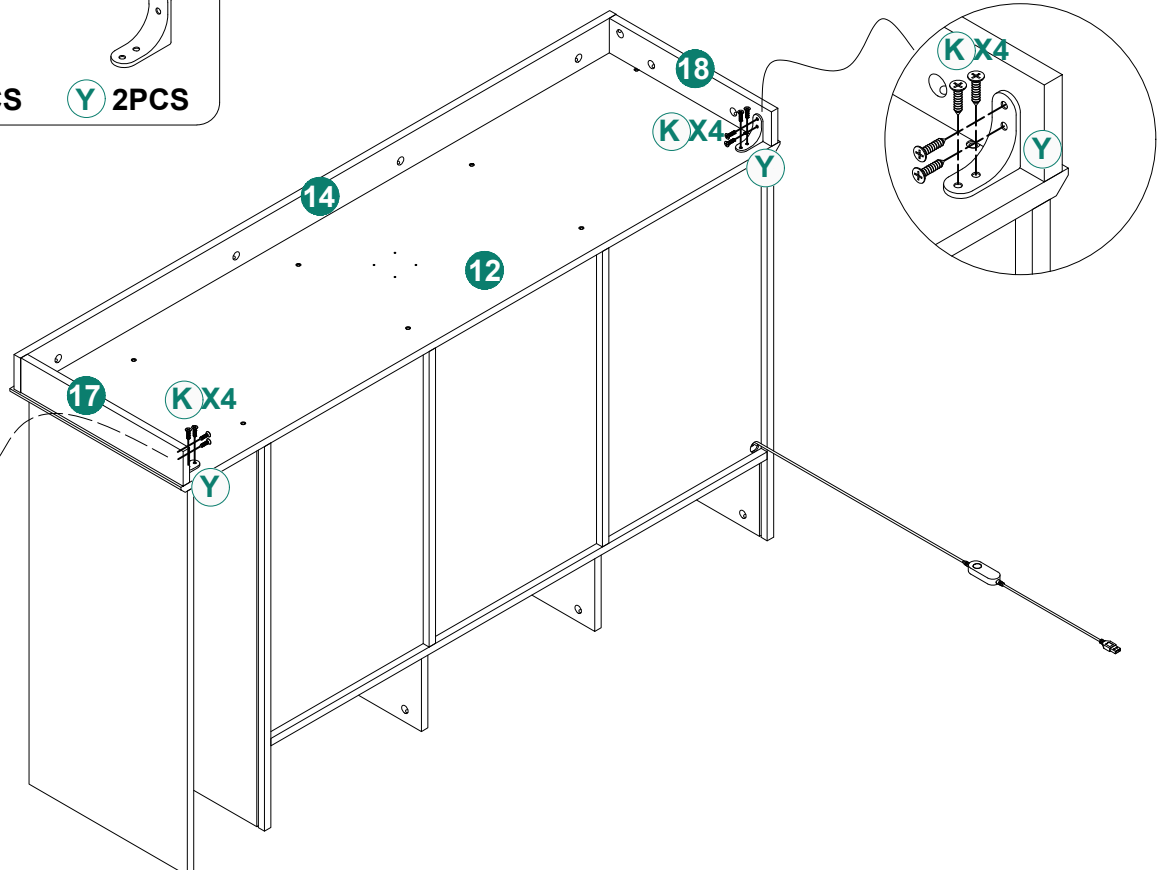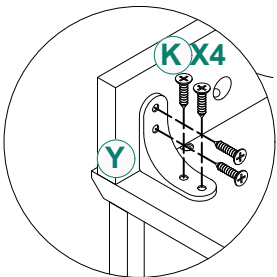
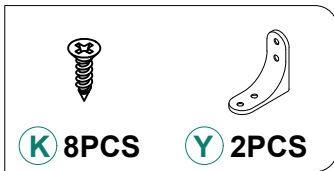


21



31

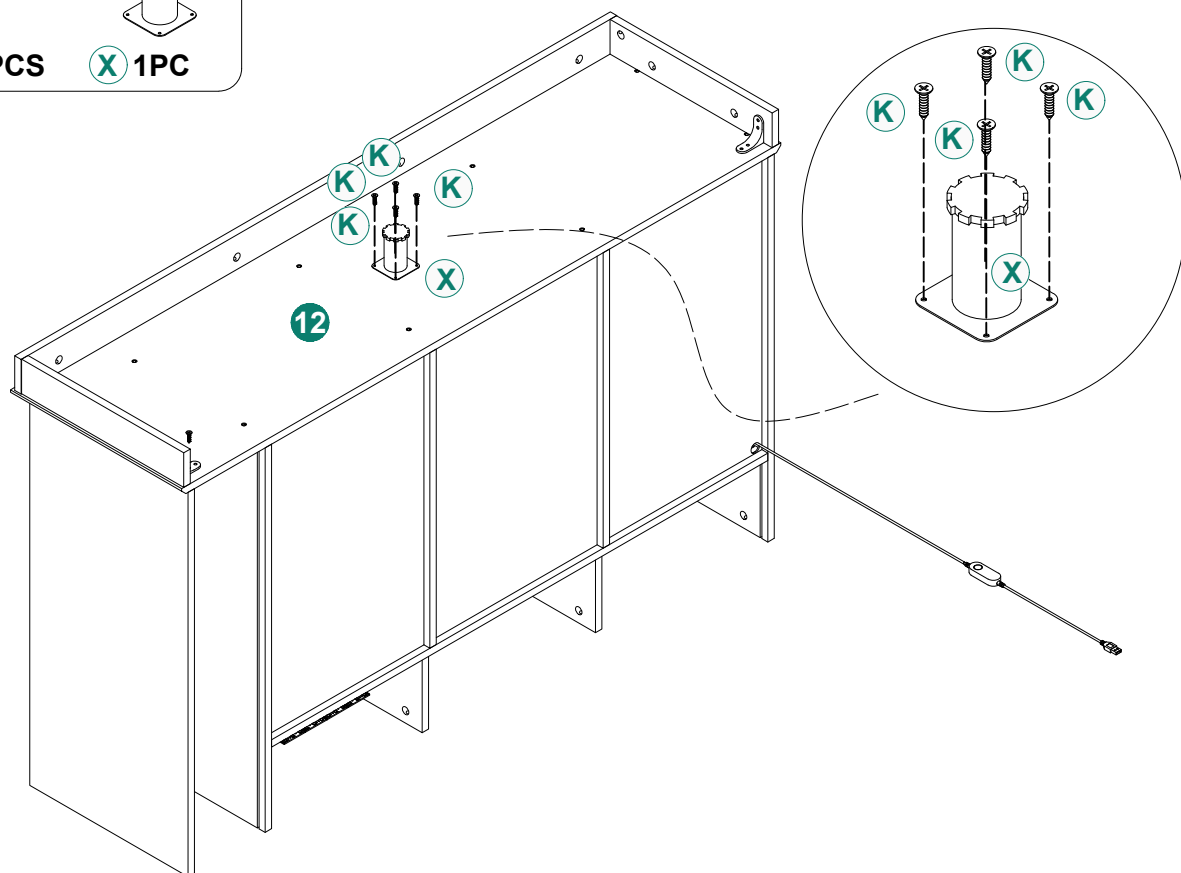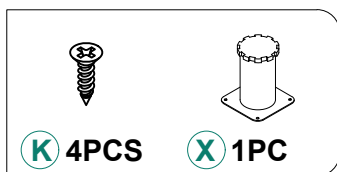




32

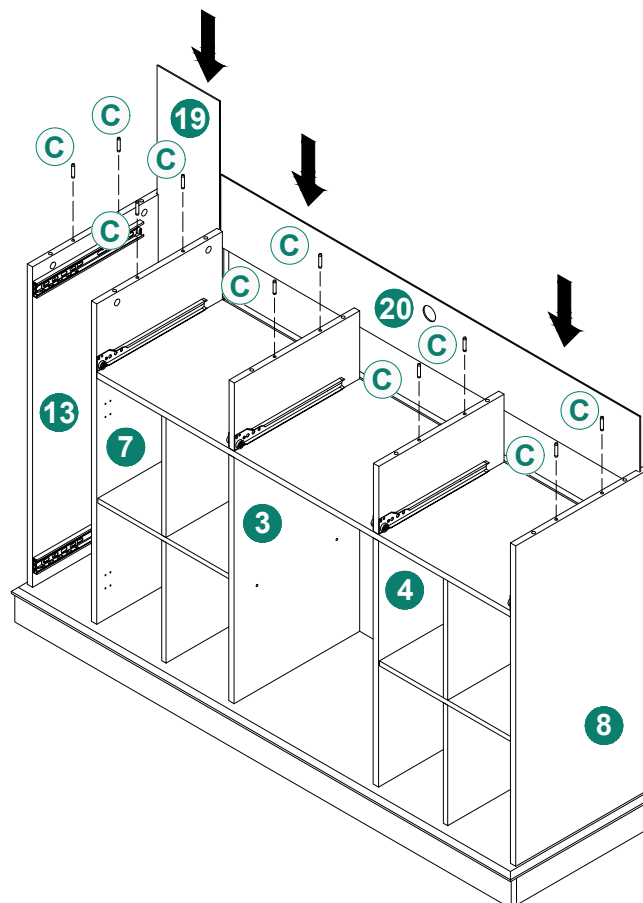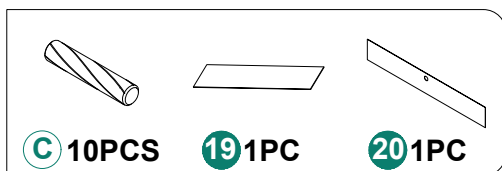

33


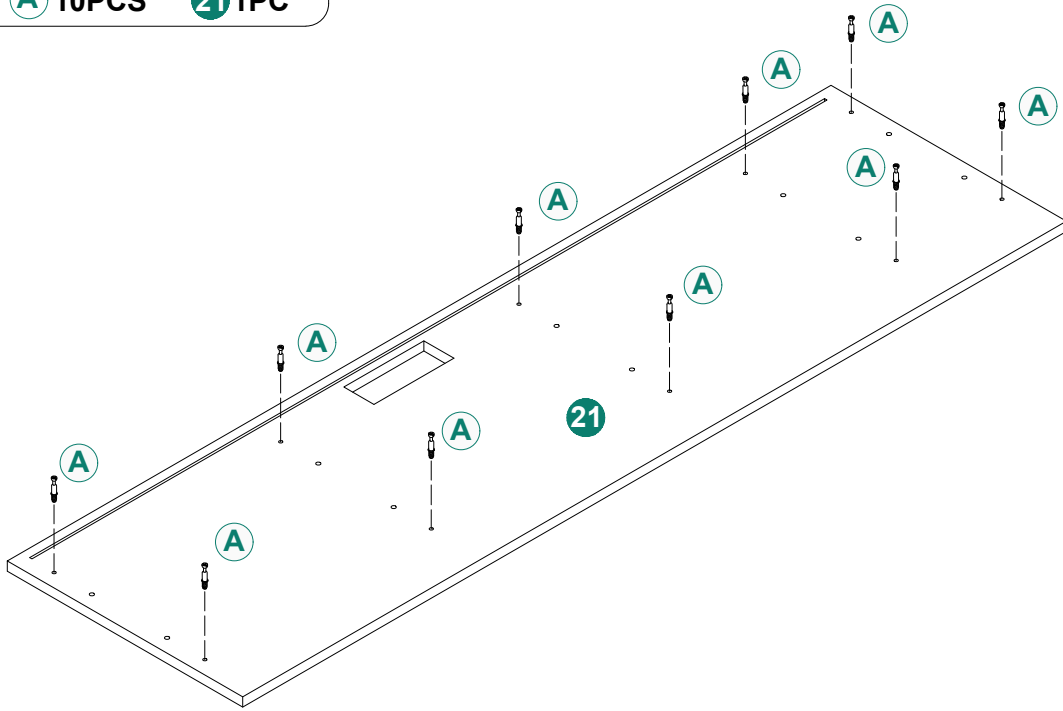
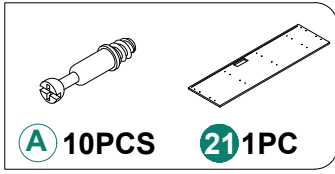


34

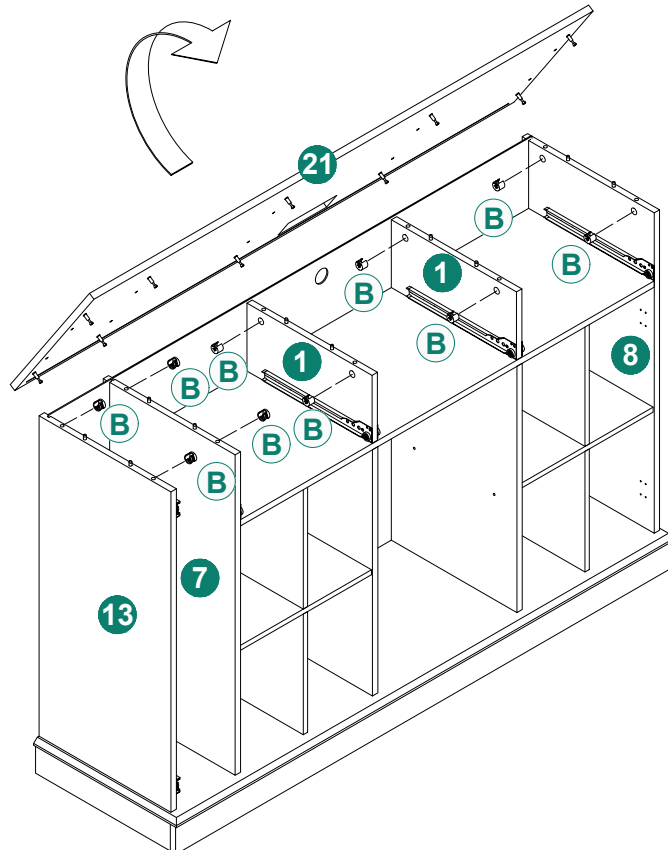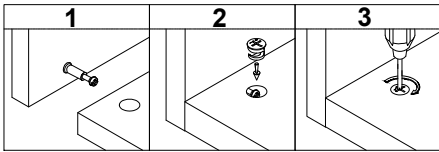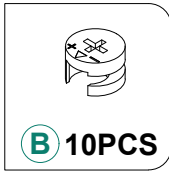


23

35

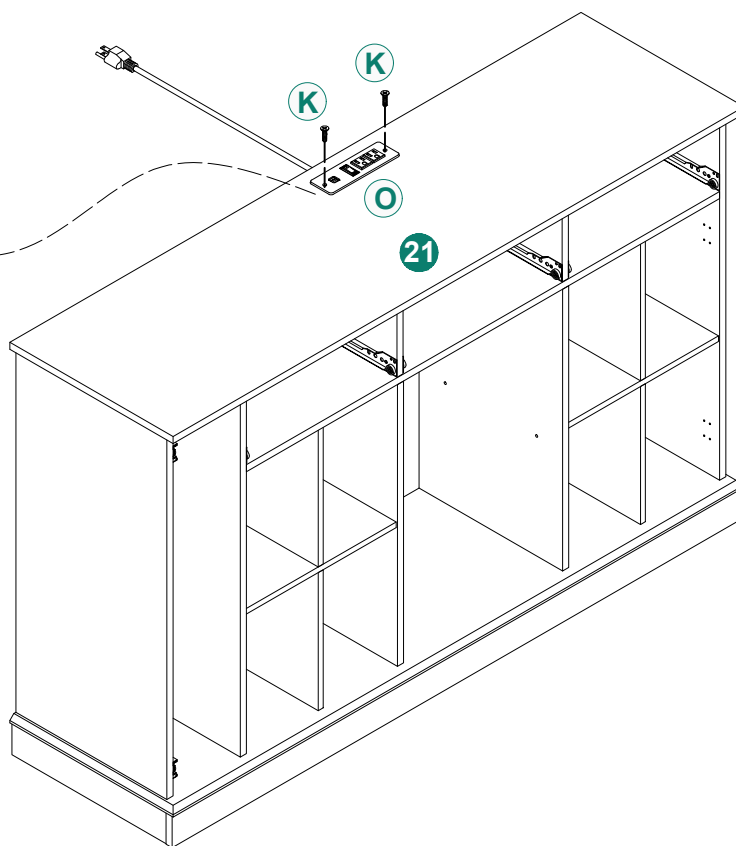
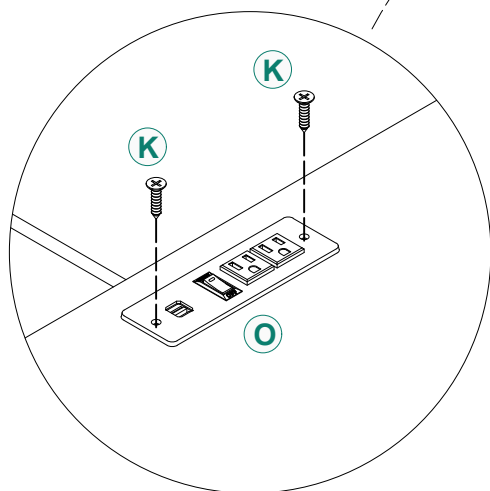
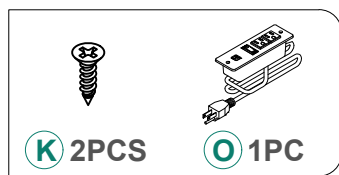


36

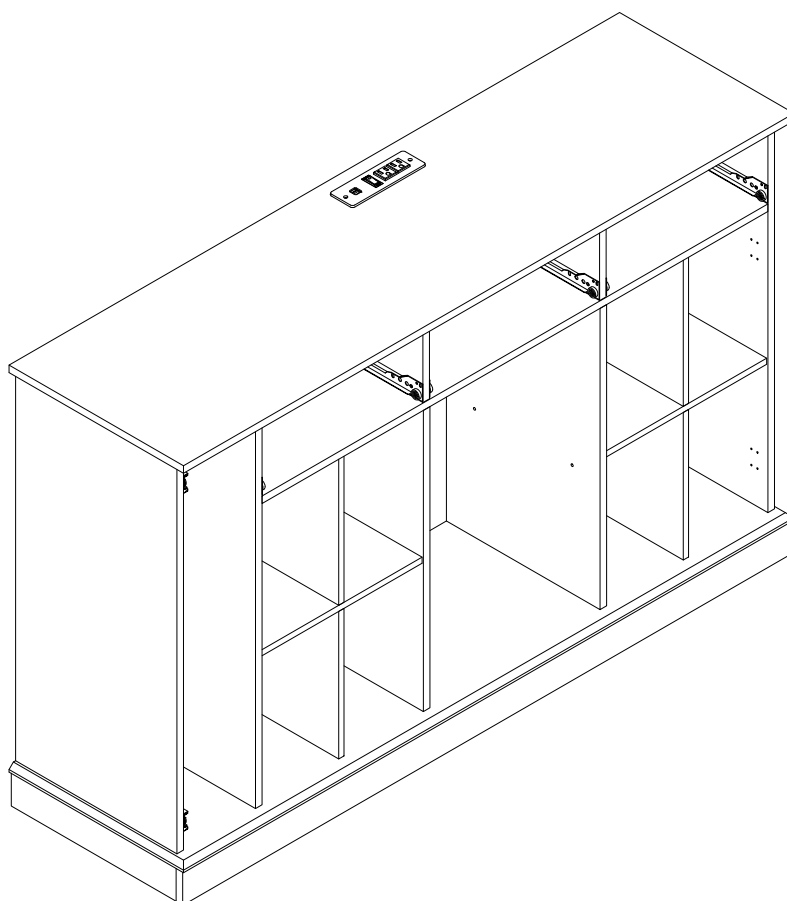


24

37

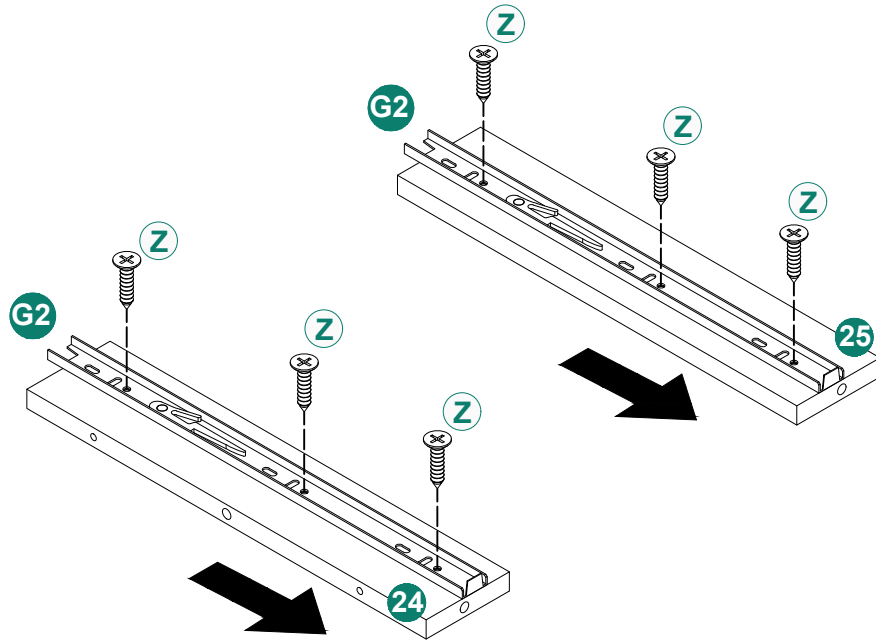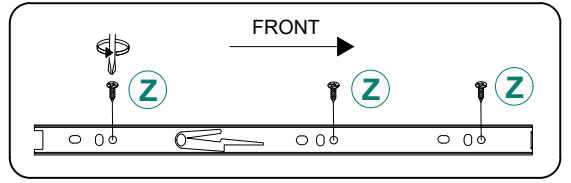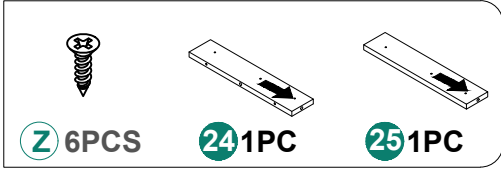


38

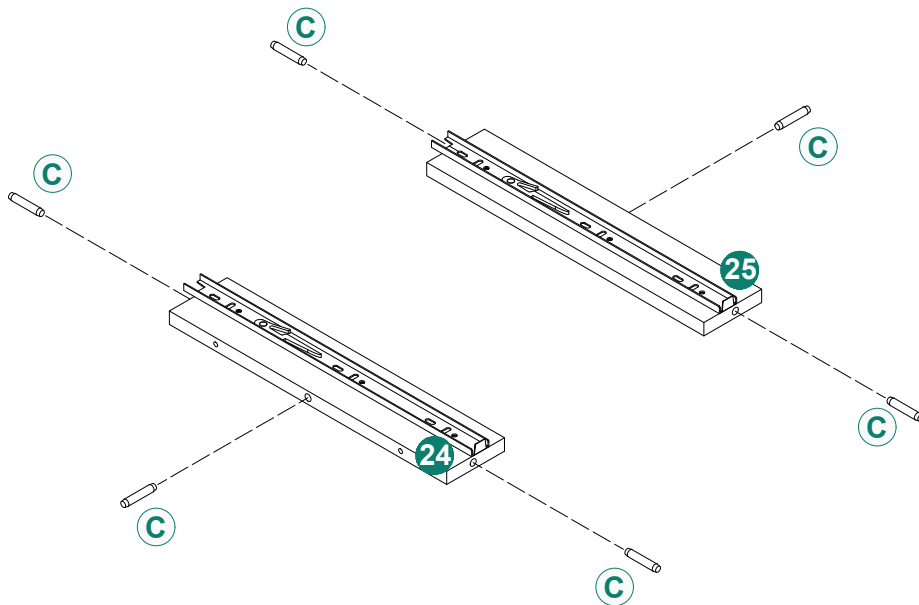


25


39




C 8PCS




22 1PC



23 1PC





26 2PCS

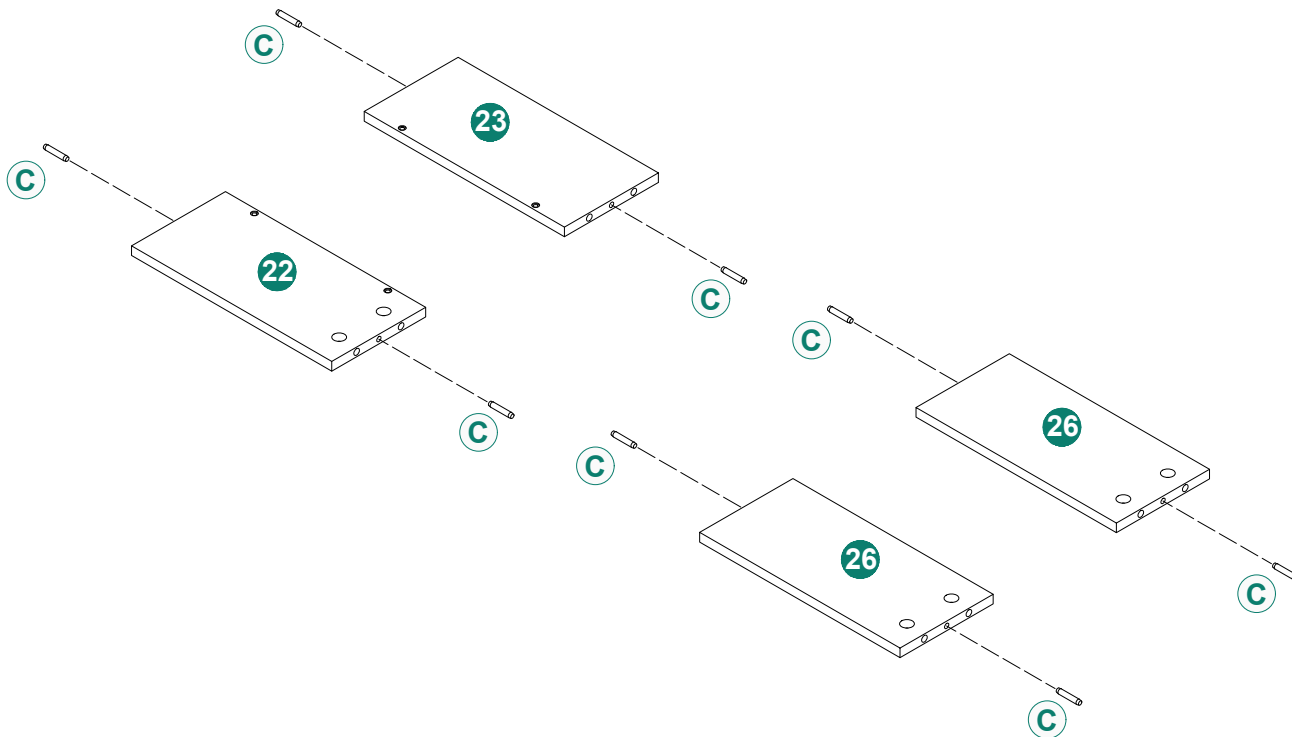

40




E 4PCS

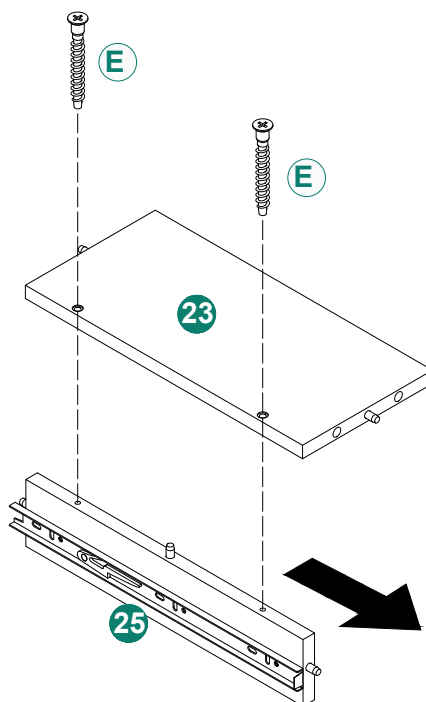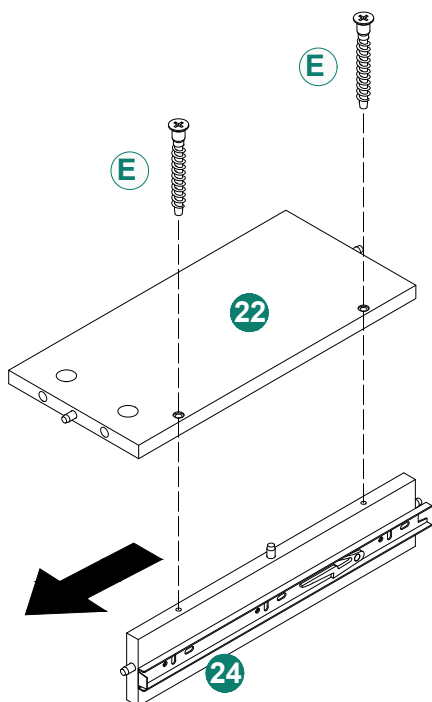


26


41



A 8PCS





27 1PC

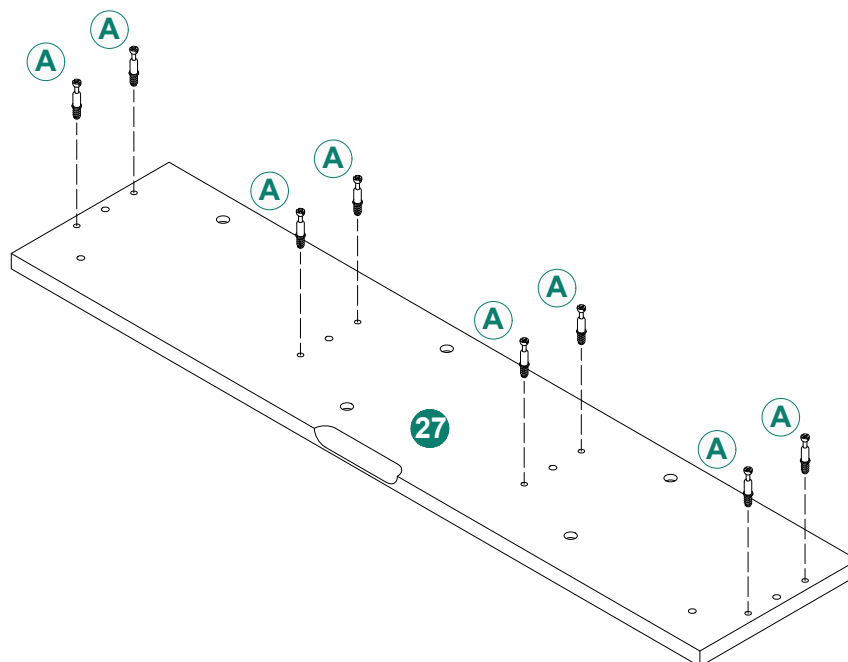

42





B 8PCS

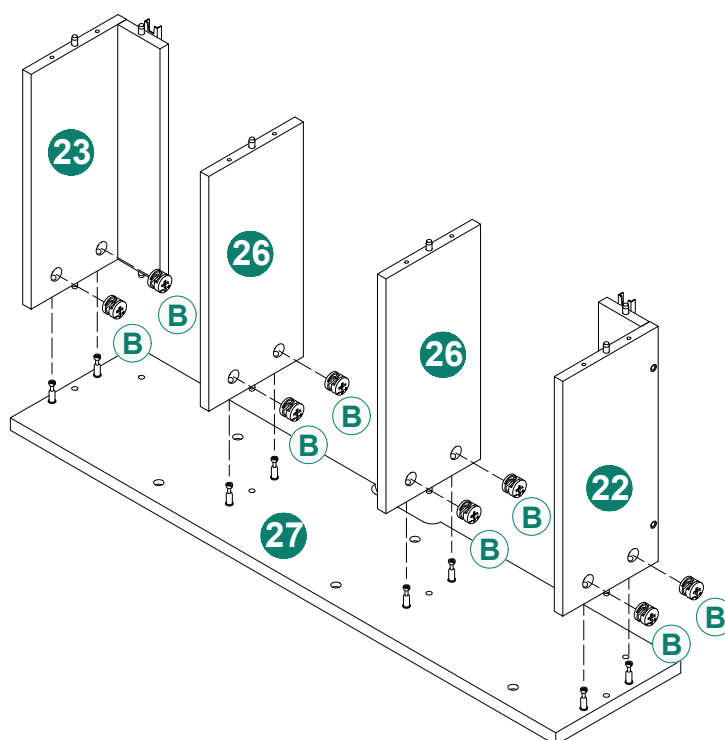
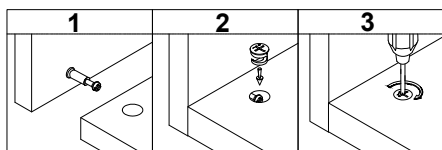


27

43

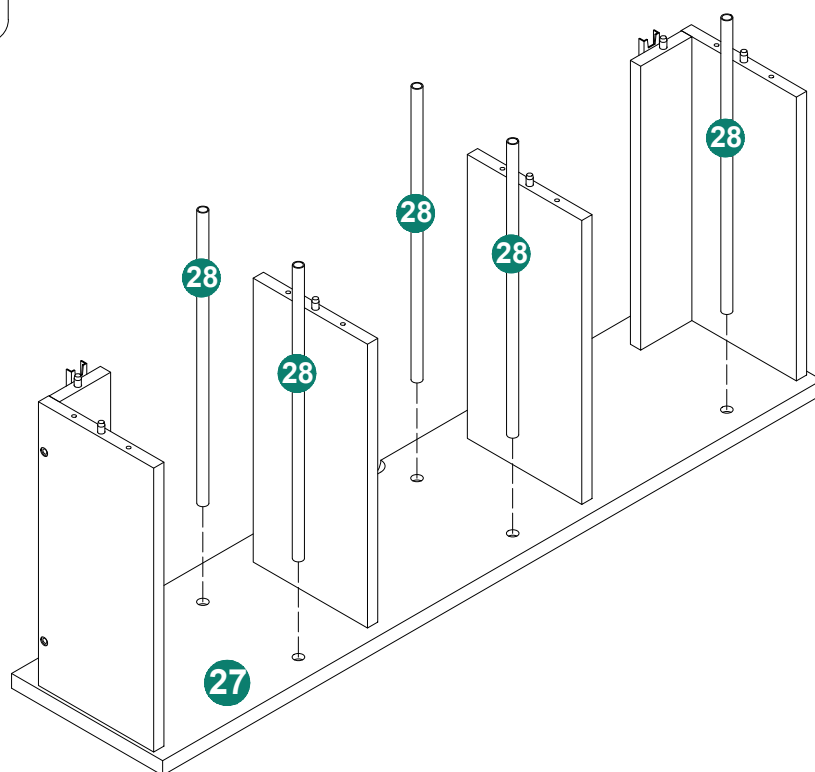
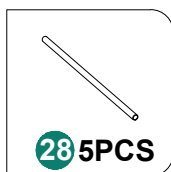


44

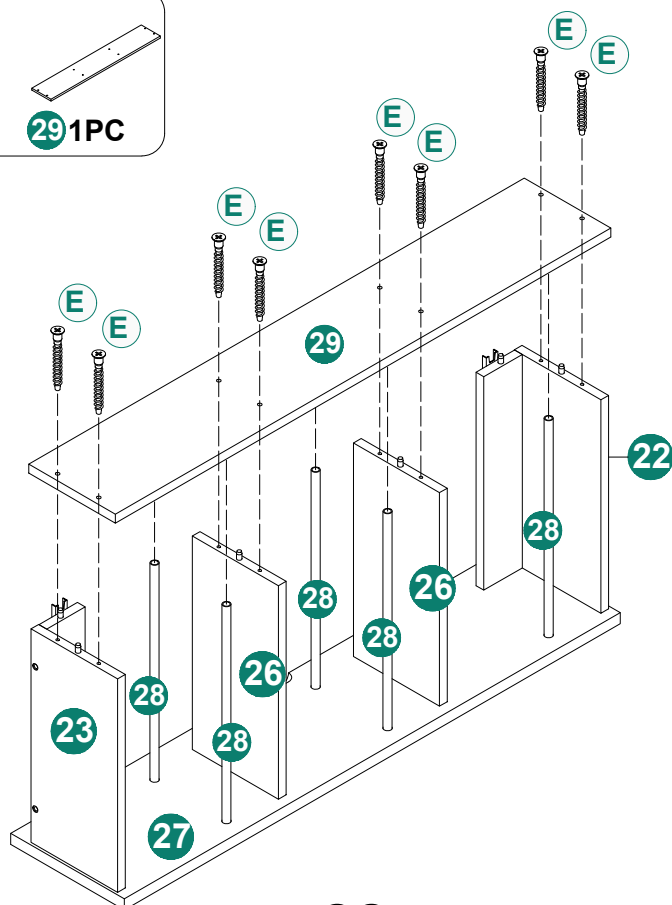
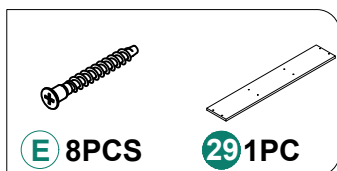


28



45

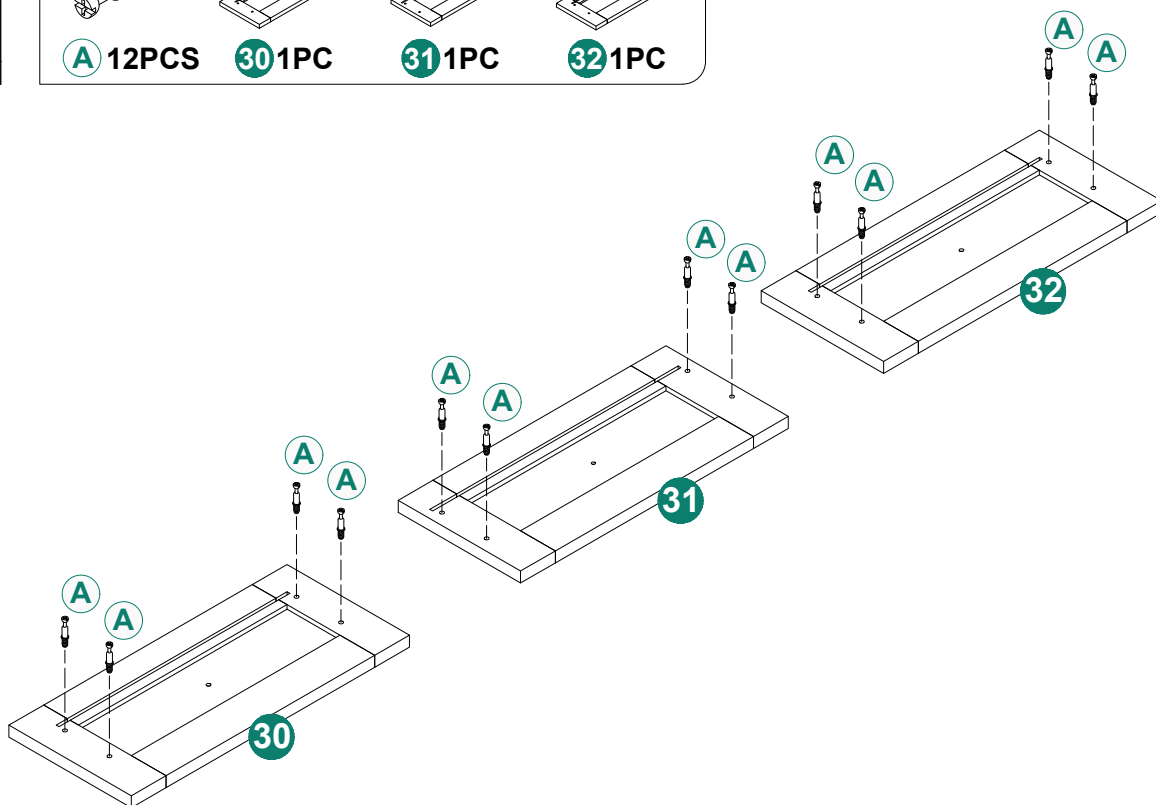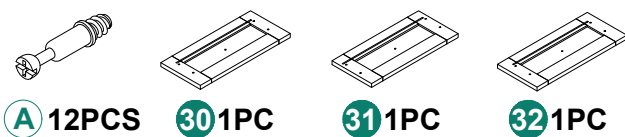




46

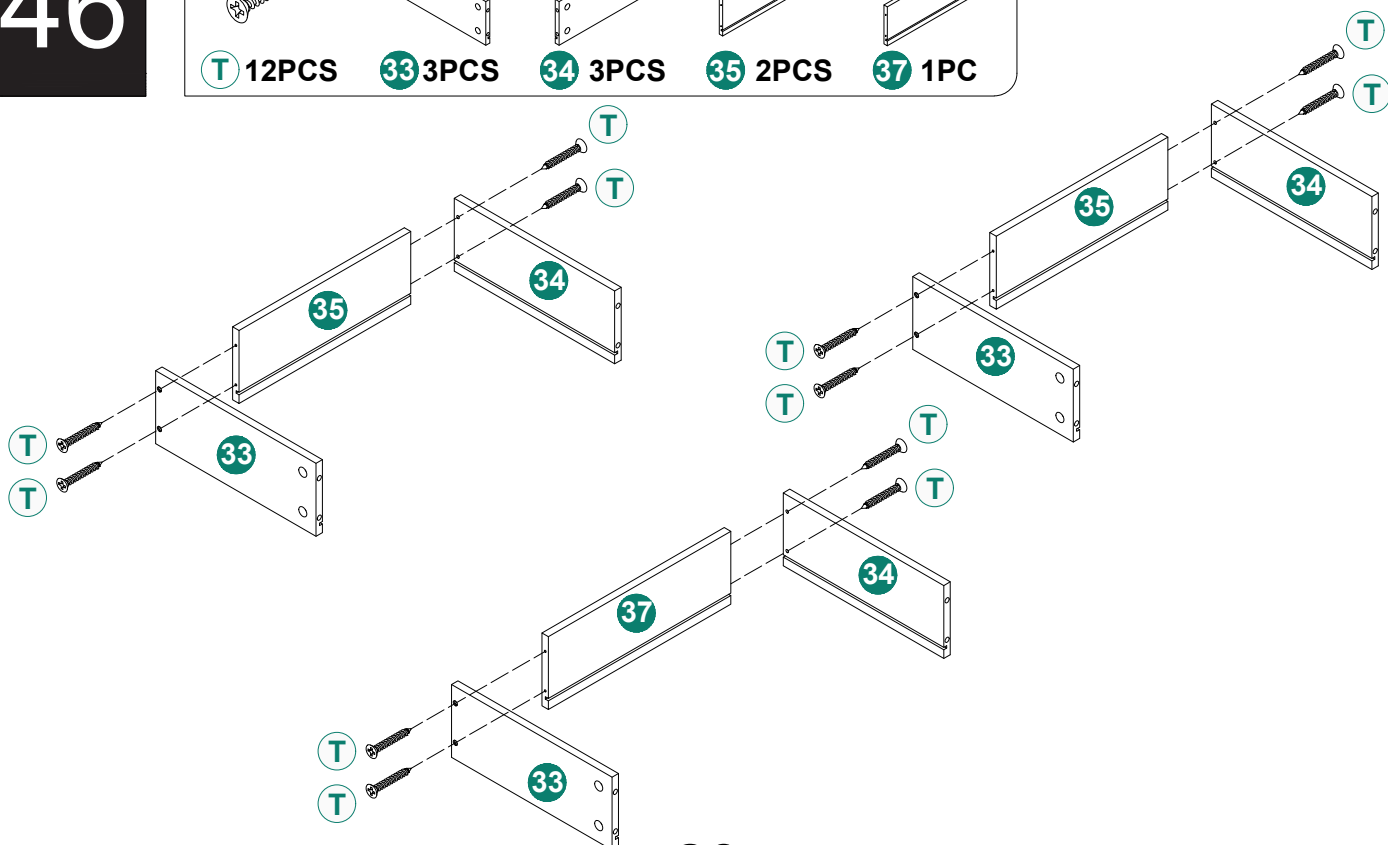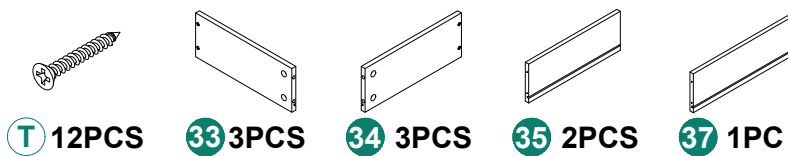

47

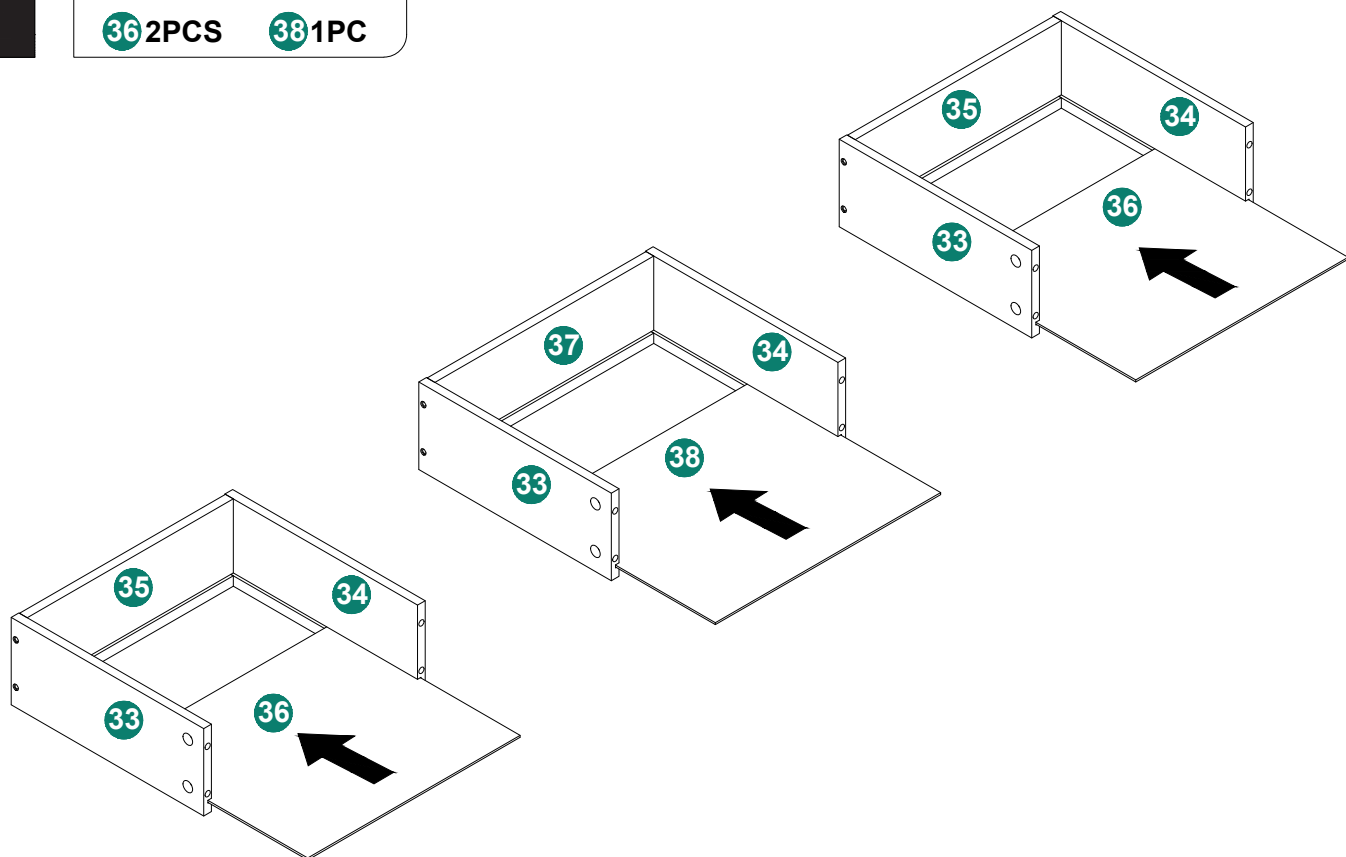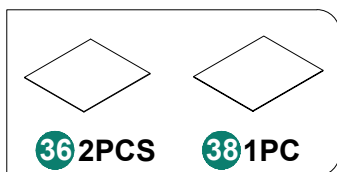


48

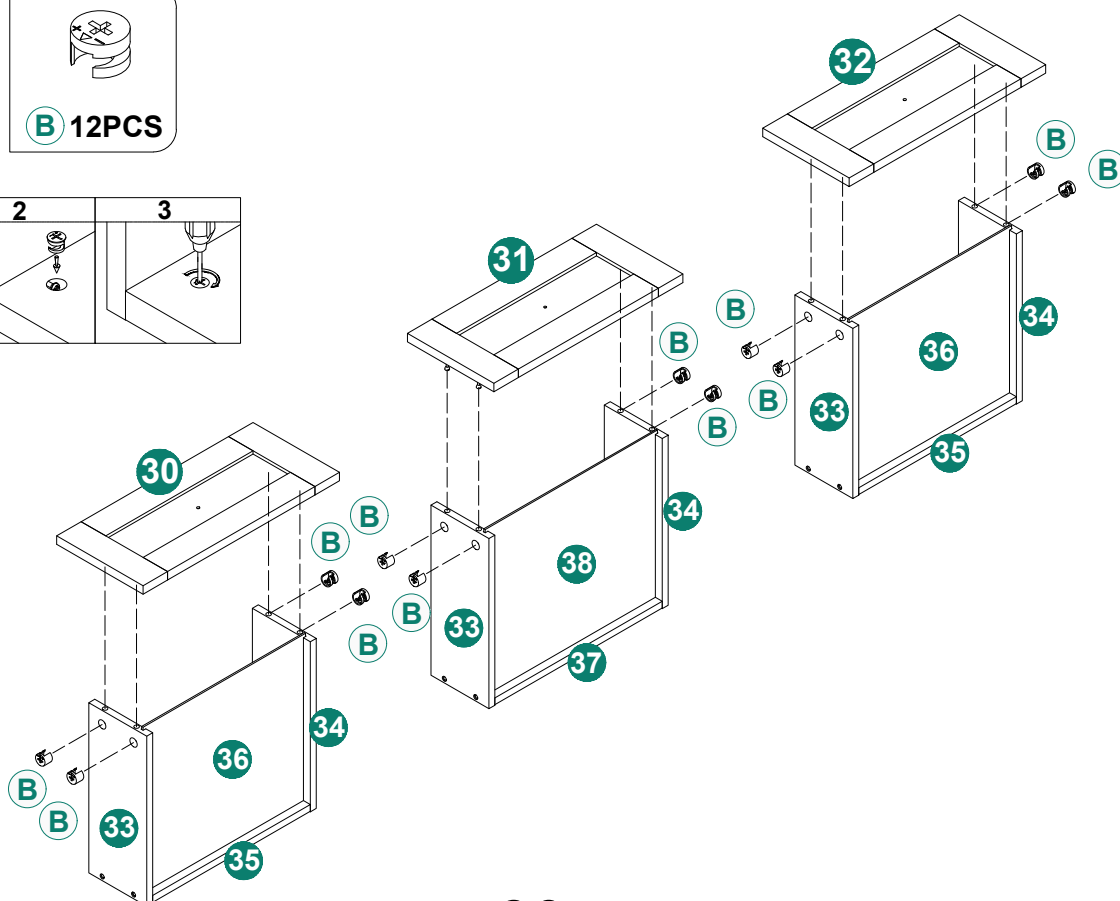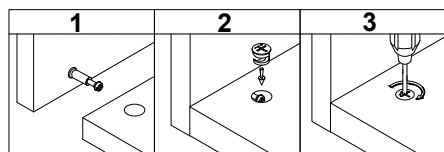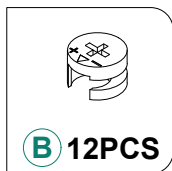

49



F 12PCS

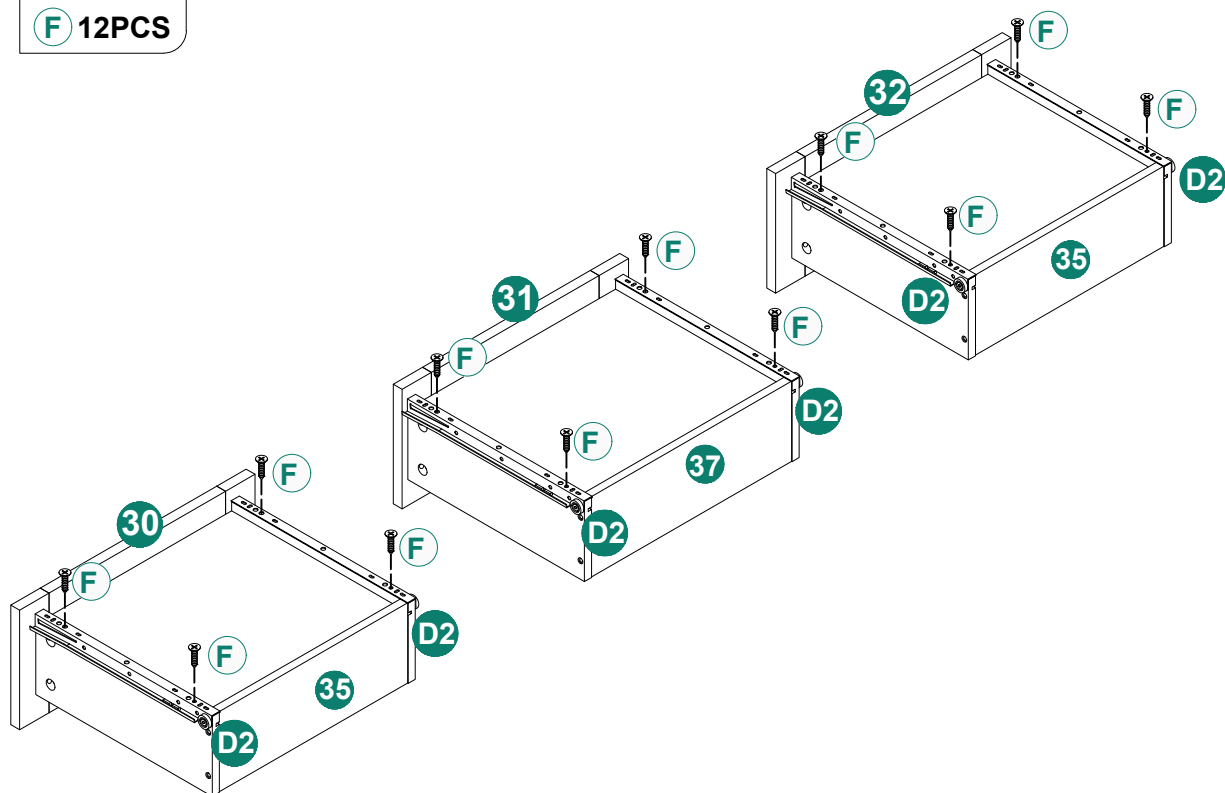

No pilot holes were needed due to the screws' easy insertion. Follow the instructions to screw them into the designated holes.


50



Q 3sets




S 12PCS

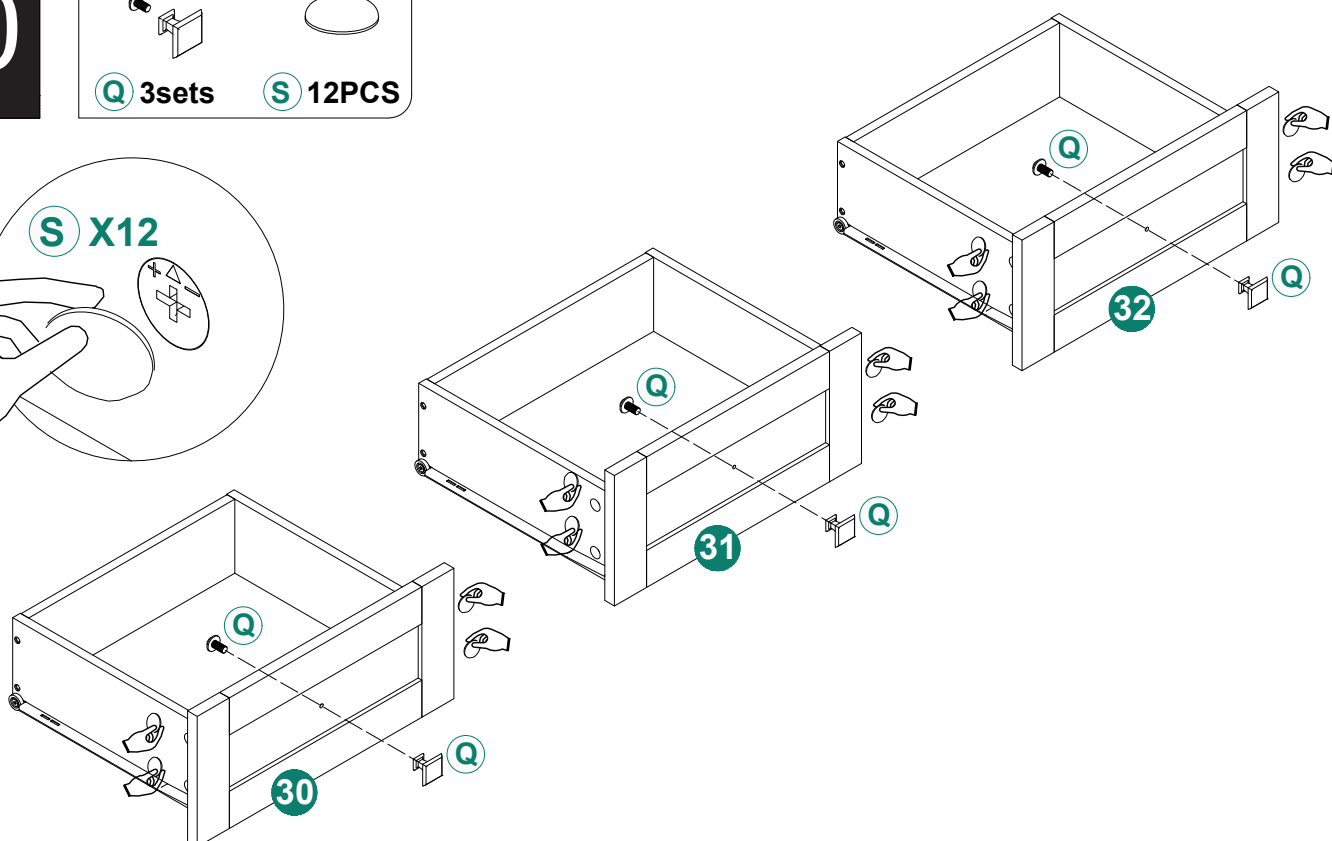


31

51

1. Check Before Installing: Ensure the rails are secure and ball bearings are in place.
2. Prepare: Slide the ball bearings to the front of the rails before closing.

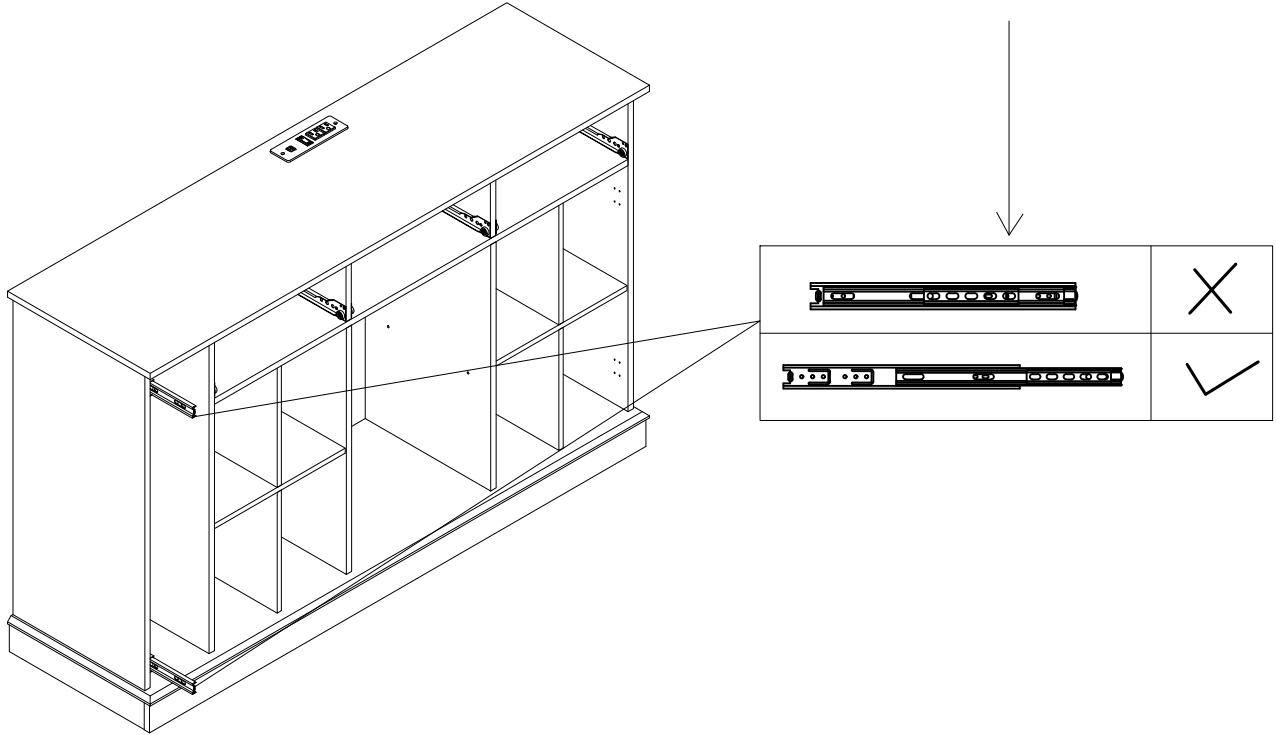

3. Align & Insert: Line up the drawer rails with the main slides and insert both sides at once.

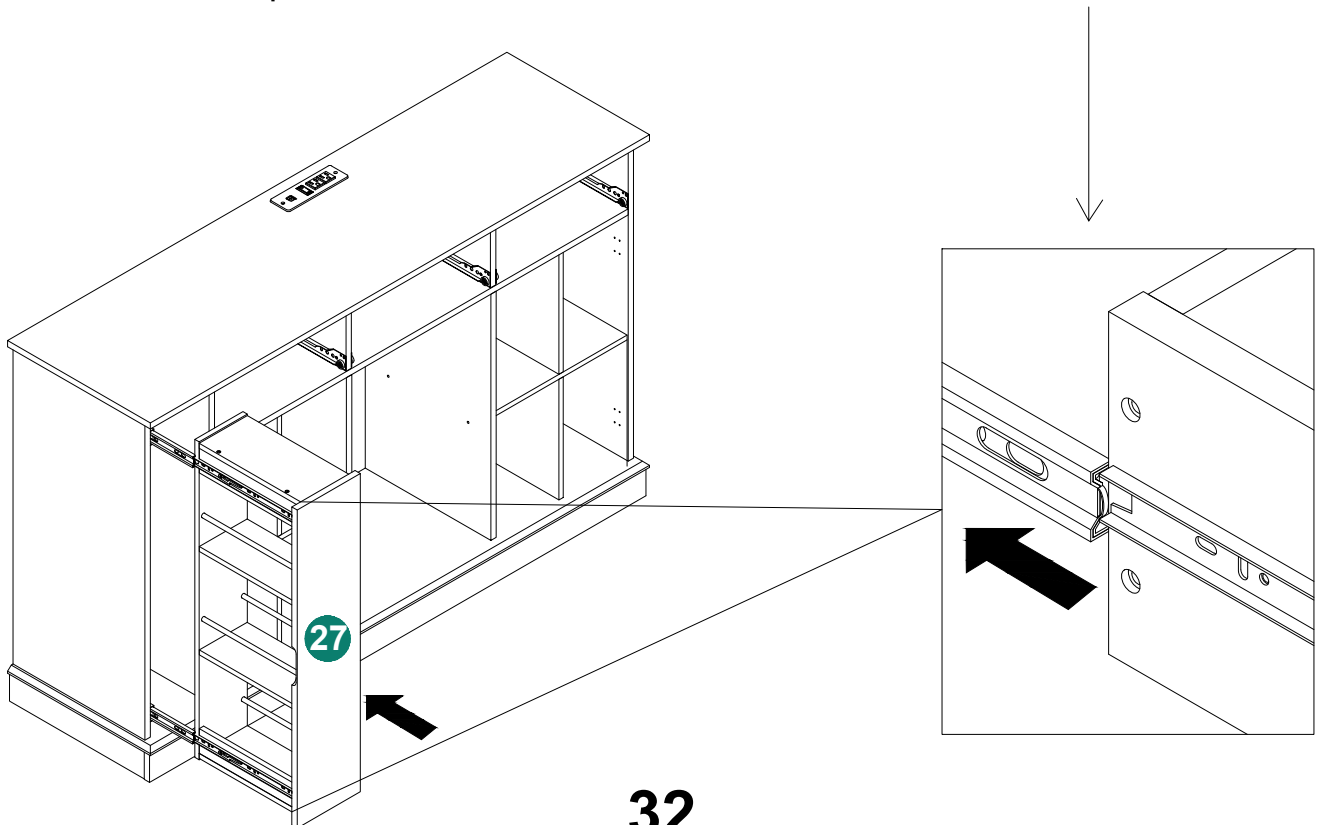


5.To Remove the Drawer:

Fully extend the drawer.



Push the left release latch up and the right one down.

Pull the drawer out while supporting it.


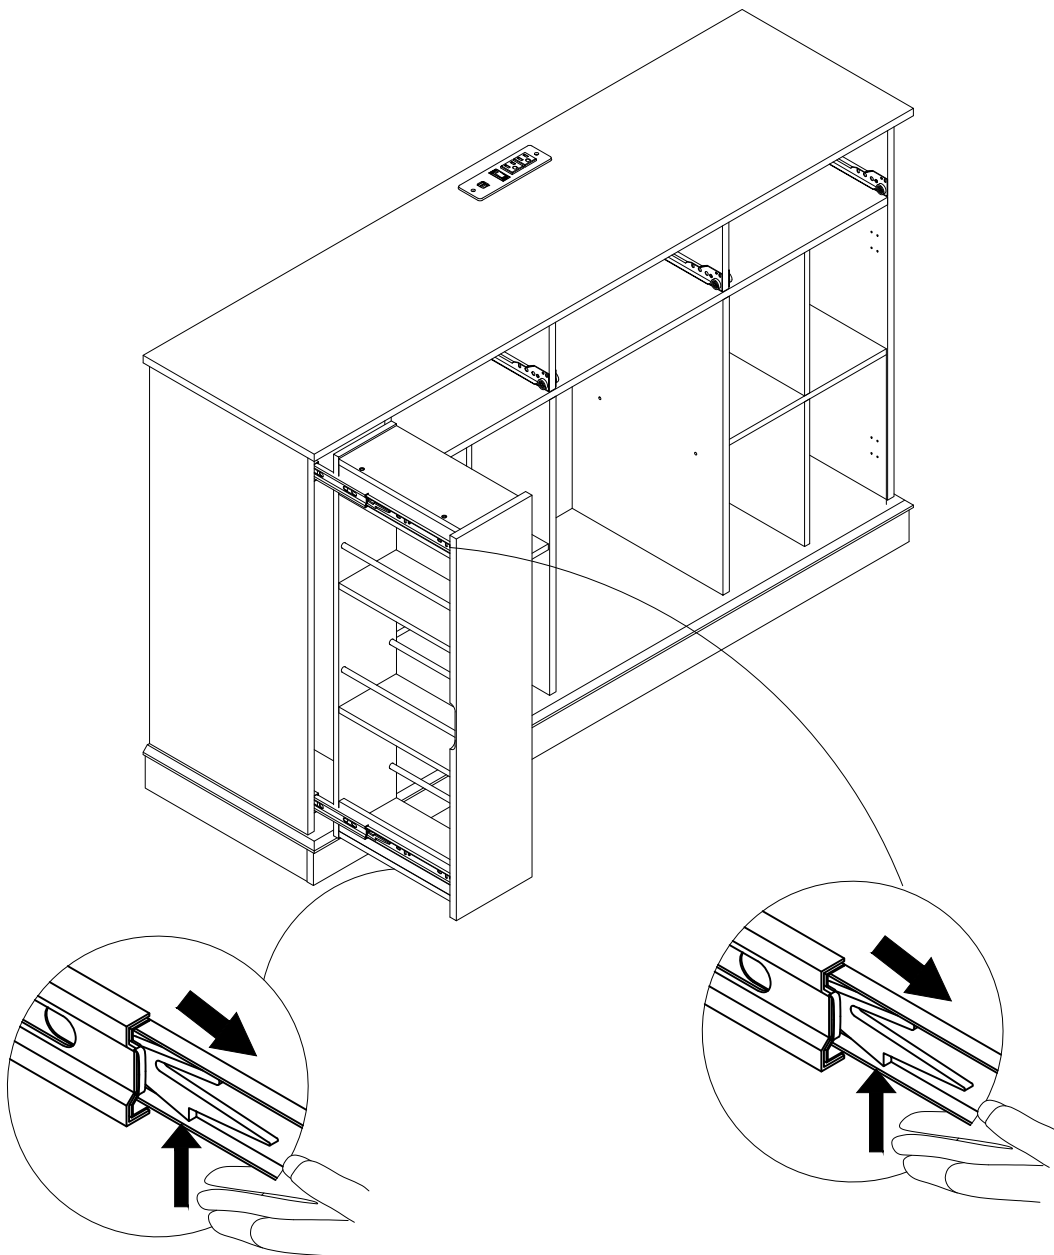


If the drawer does not go in smoothly please take it out and repeat


53

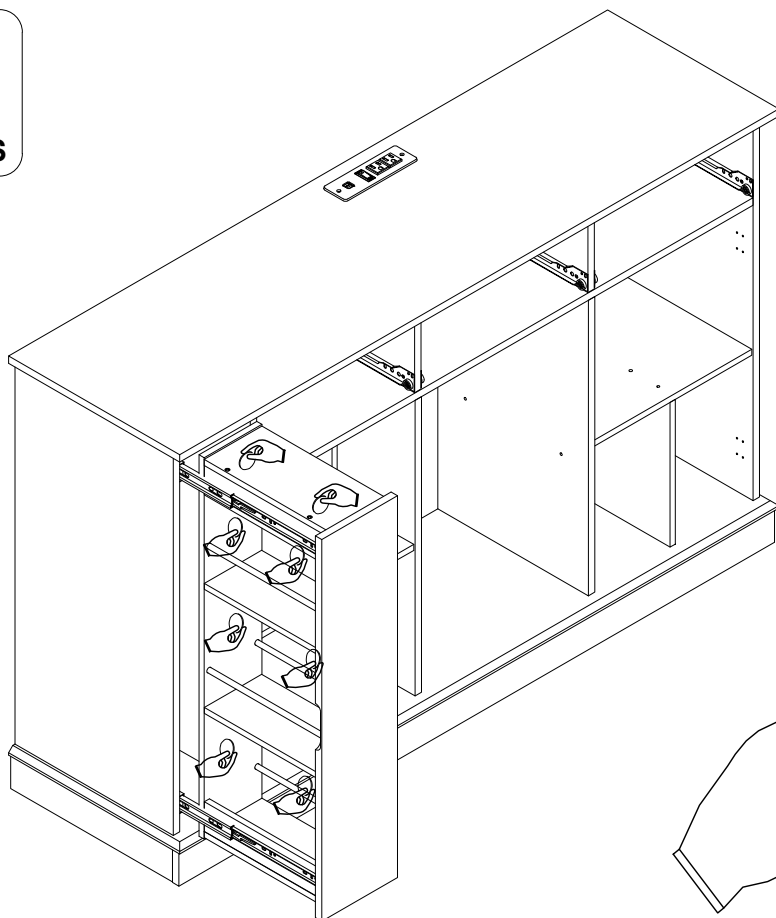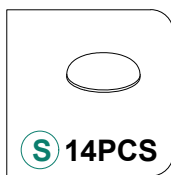




54

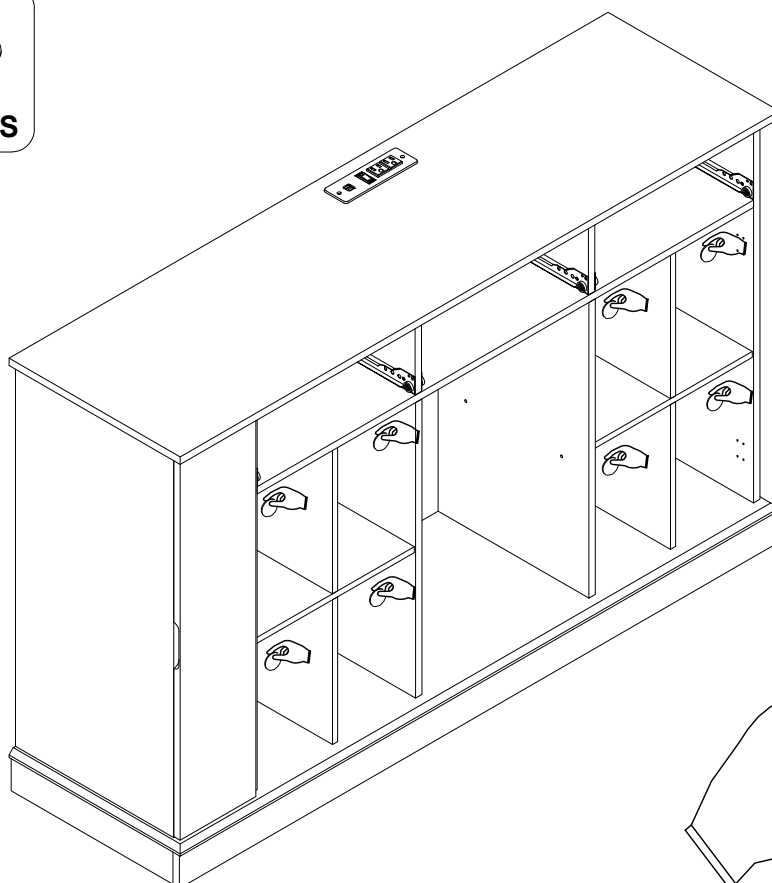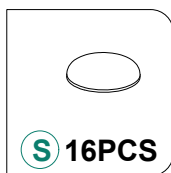



Congratulation! You've made to the last step! But don't be too thrilled yet, put on the drawer can be frustrating if you do it wrong. So, take your time and follow the steps below.

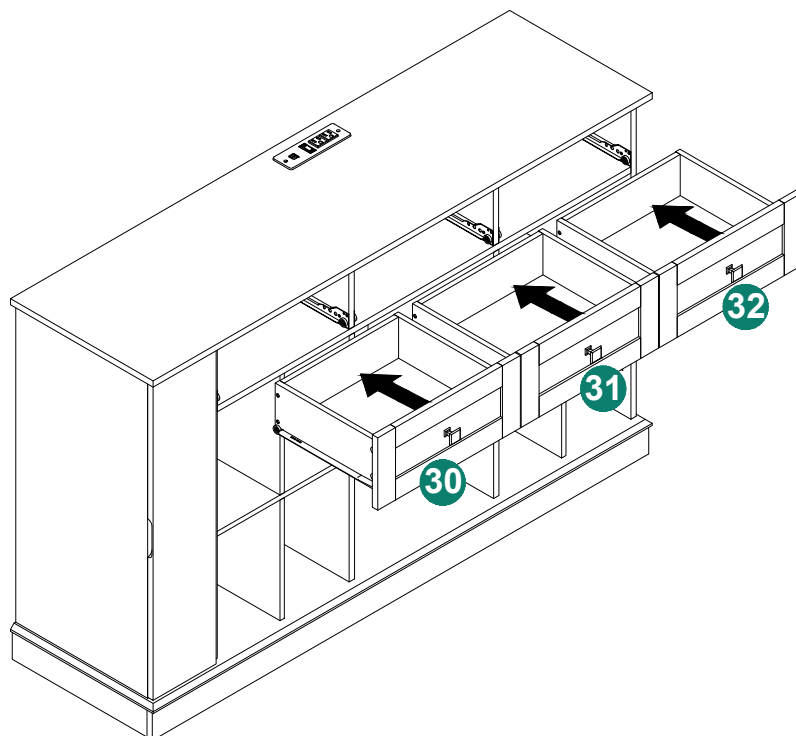


1. Make sure that you have right and left drawers sorted out first, because the drawer panel may cover the side if the right drawer is on the left side, vice versa.

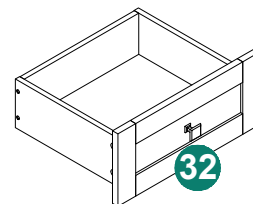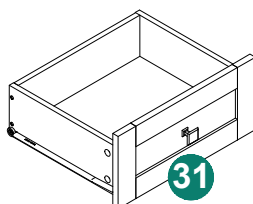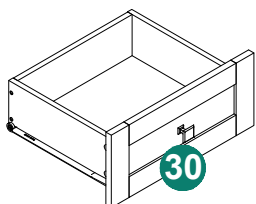


2. Please ensure that you have matched the wheels on BOTH sides of the drawer with the wheels on rails installed BEFORE push in the drawer.

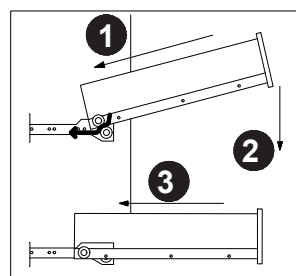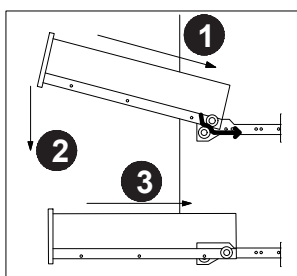


3. If the following occurs, redo the first two steps.

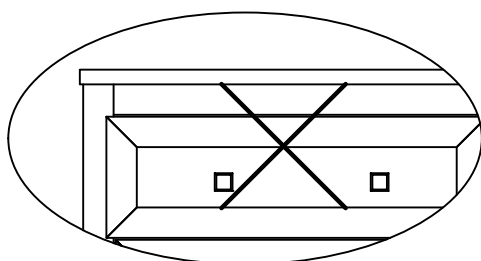

(drawer is on the wrong side)


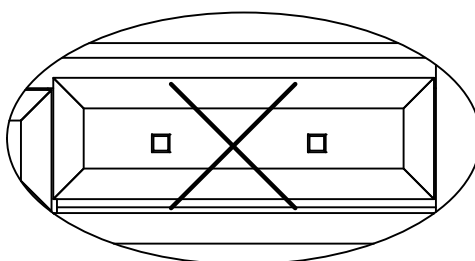


(both wheels are off the rails)

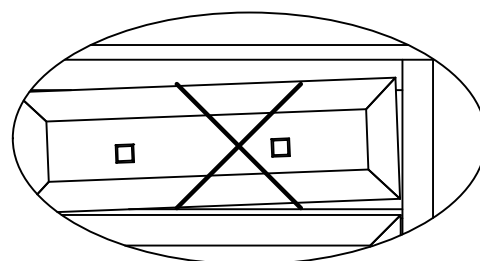


(one wheel is off the rail)

56

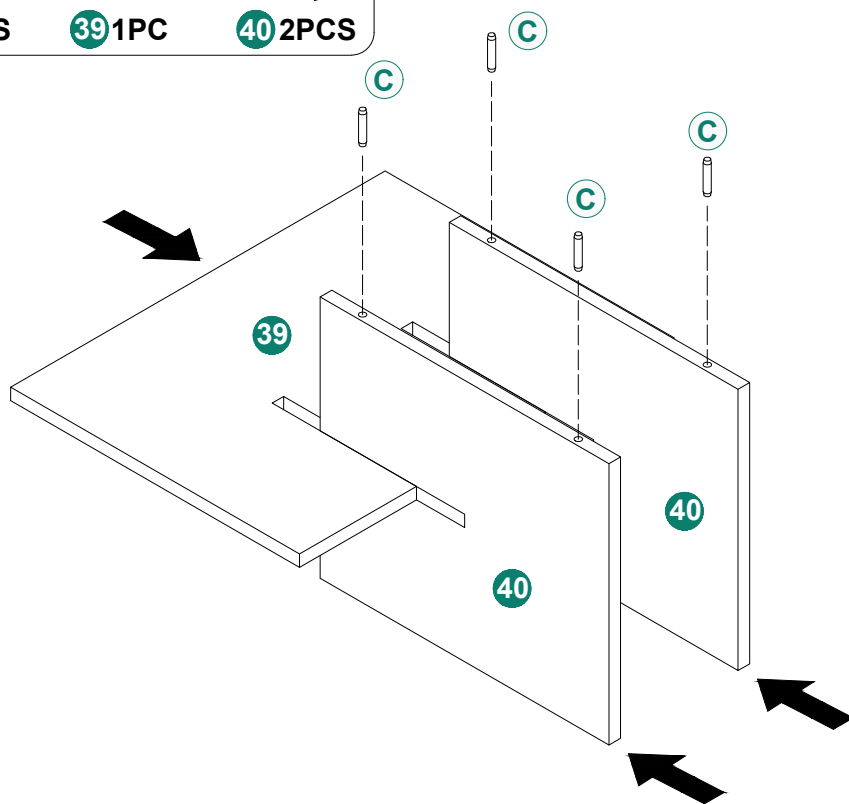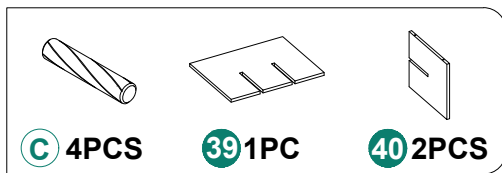

57


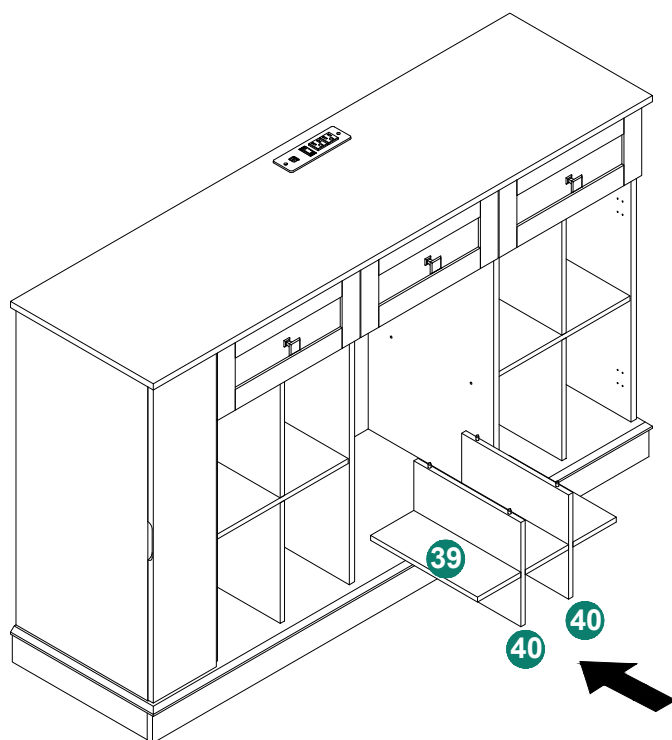


36


58






(N) 4PCS

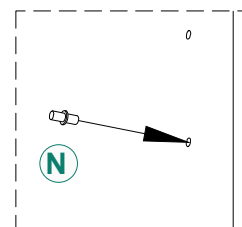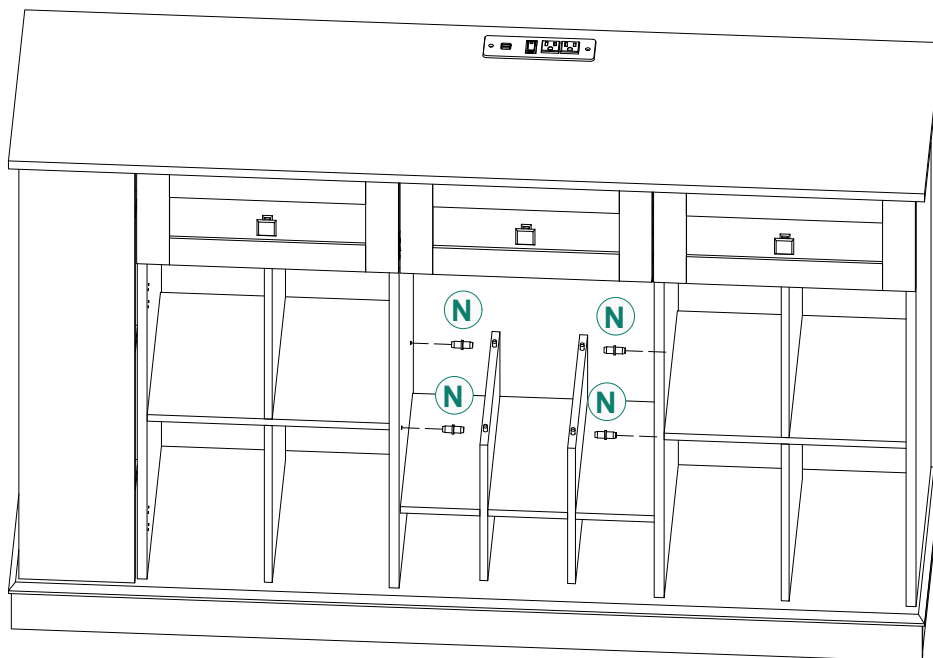


59



(41) 1PC

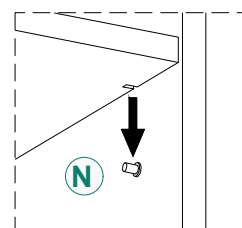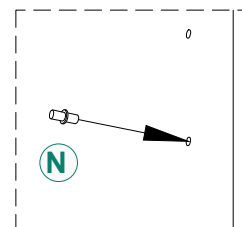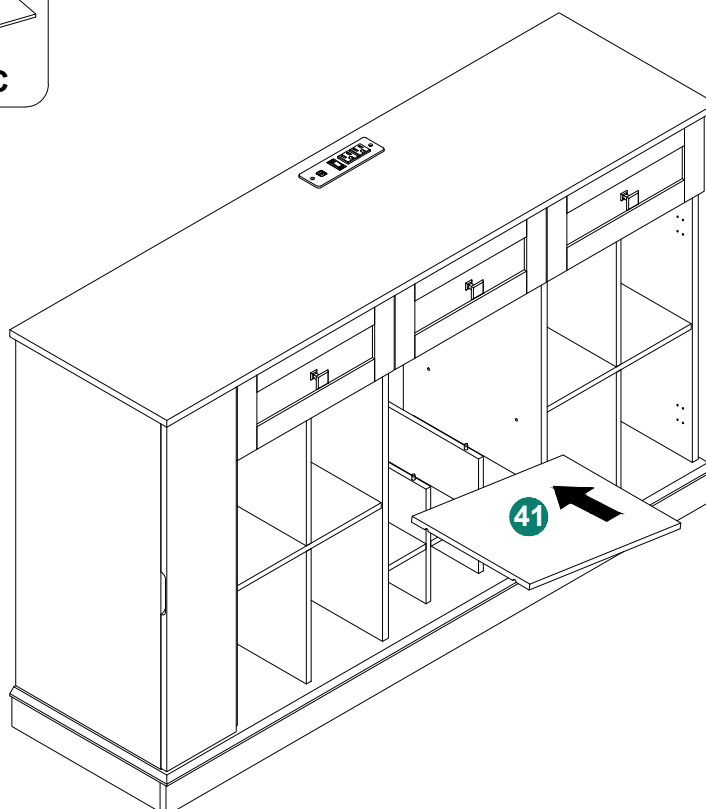


60




J 4PCS



K 8PCS




P 2sets



15 1PC



16 1PC

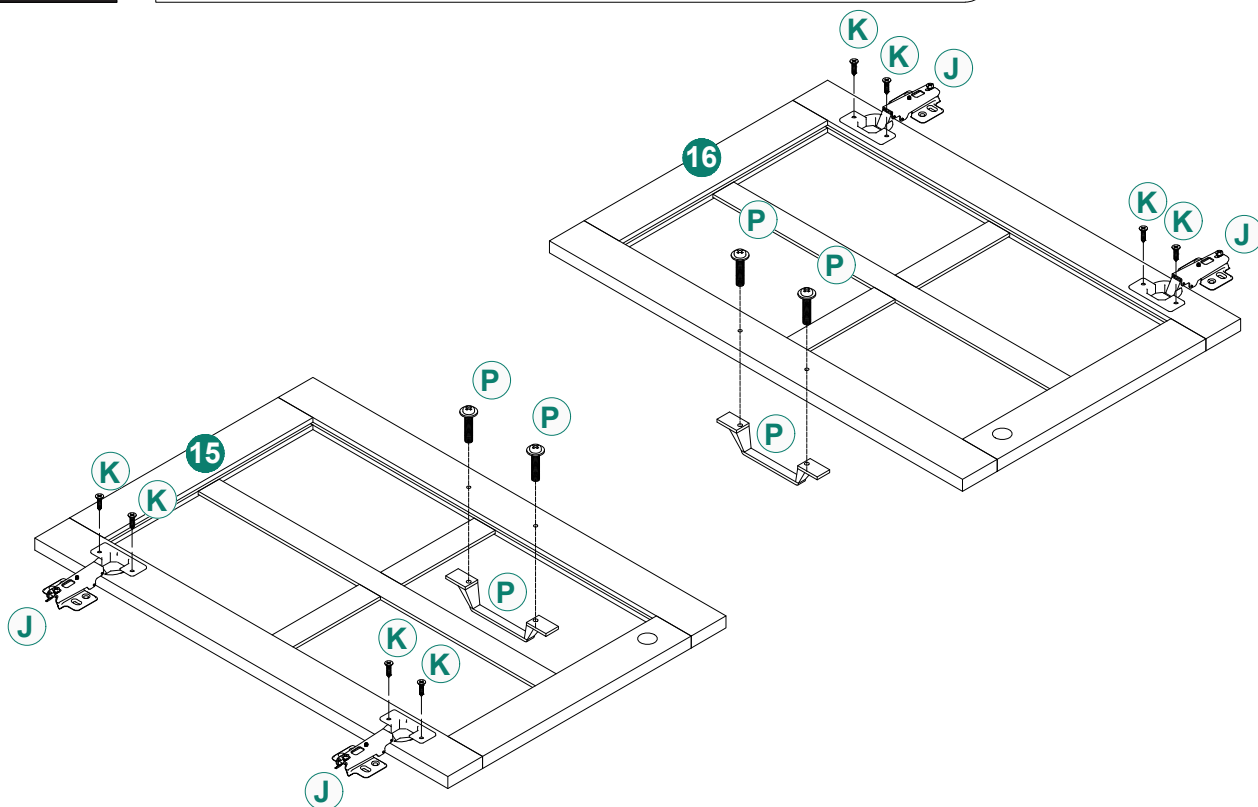


61



K 8PCS




M 1sets




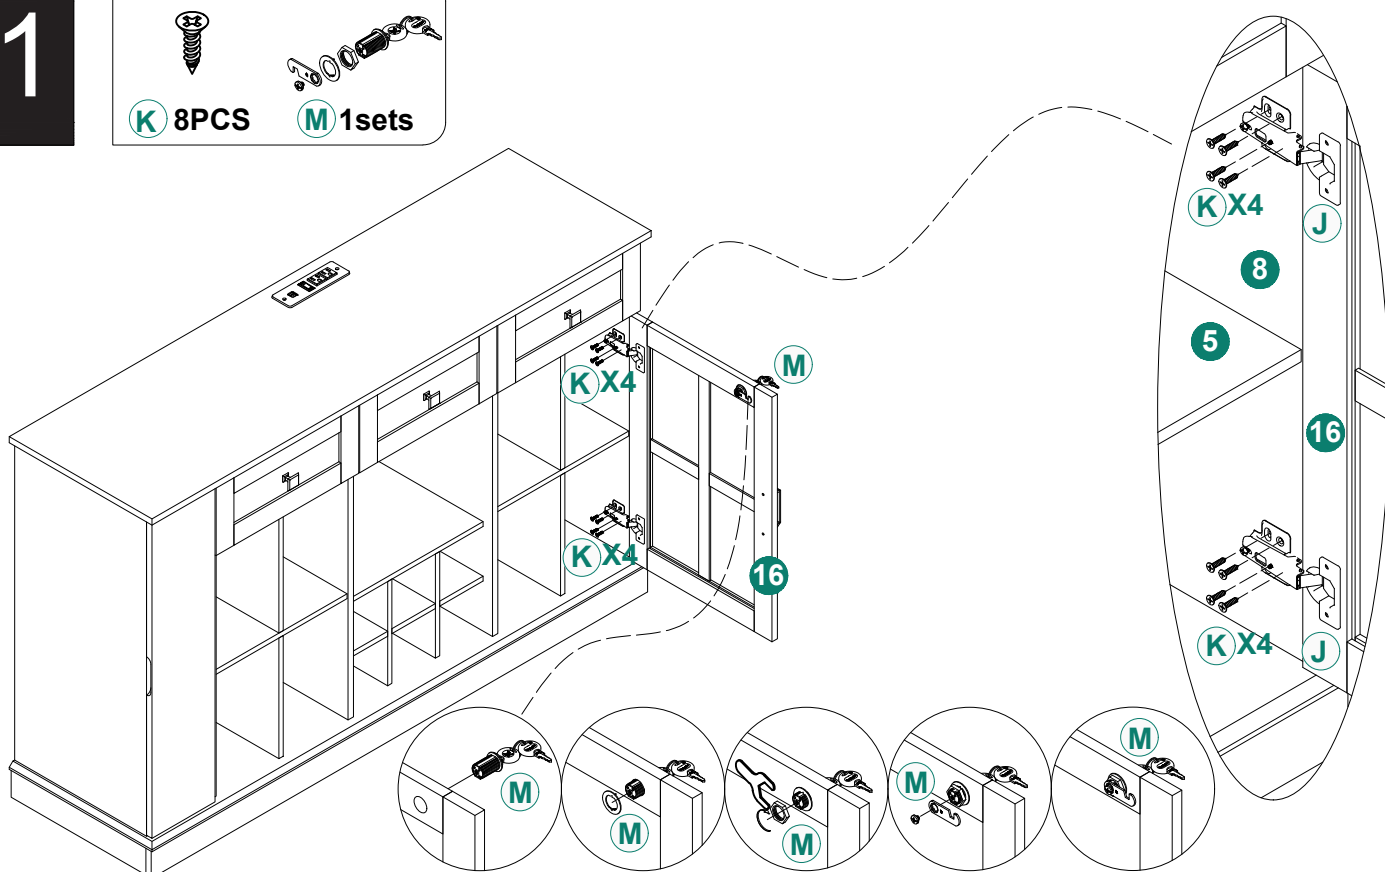


38

62

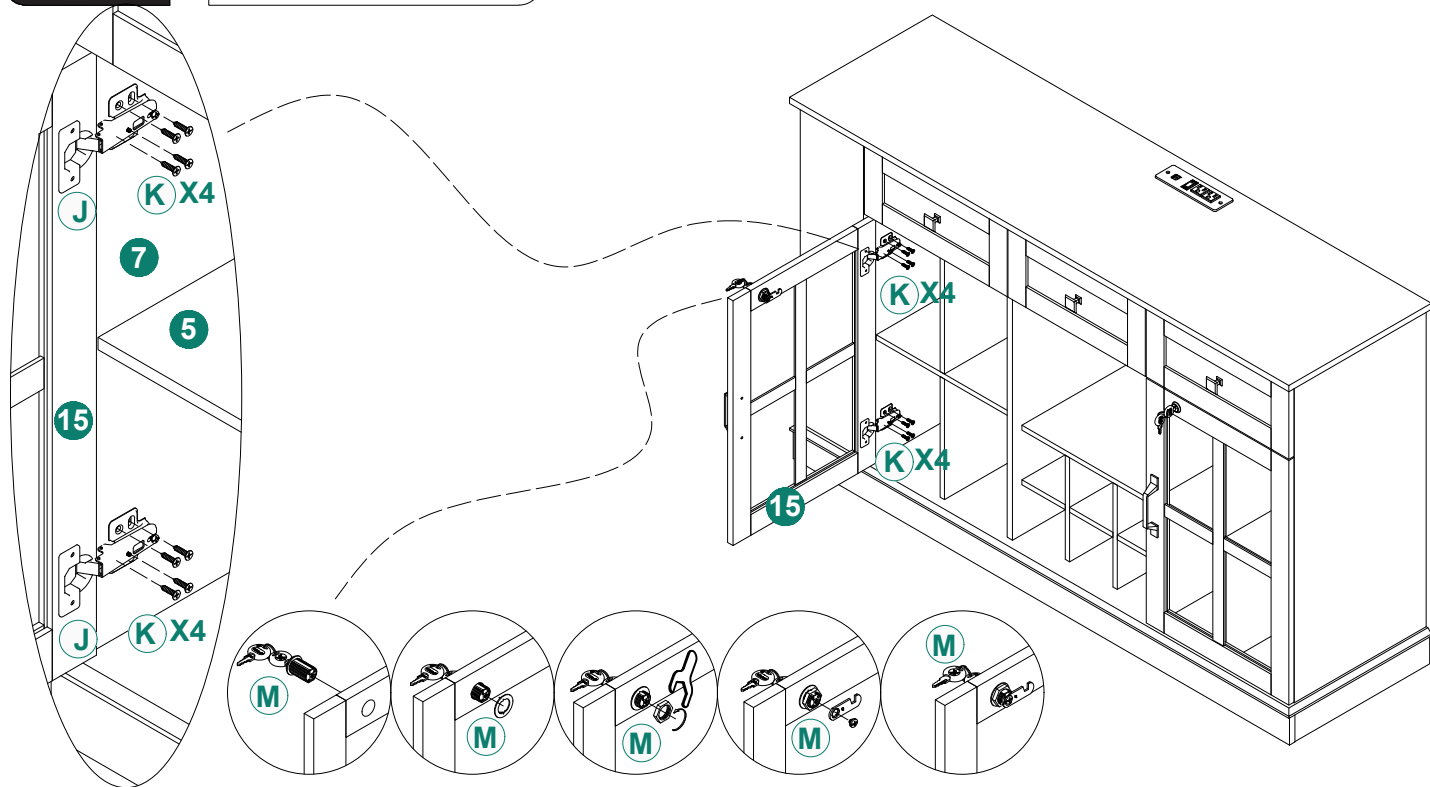

63

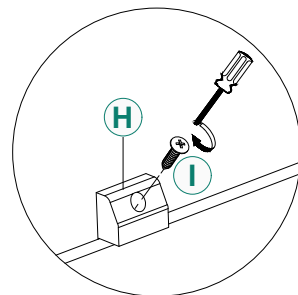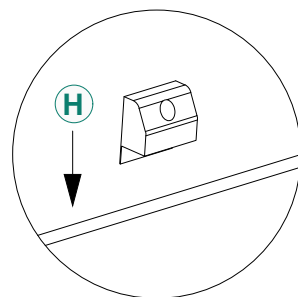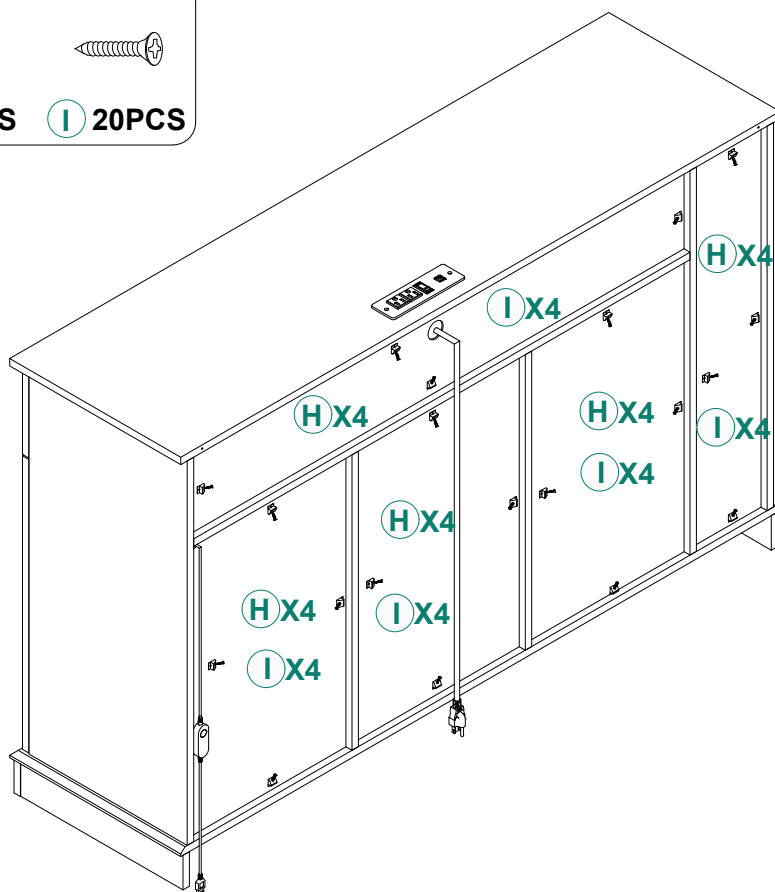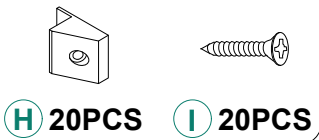


64



DANGER - To prevent furniture from toppling attach, mount, bolt or otherwise secure to walls and floors.
Do not put heavy items on top of shelves.
Do not place unstable furniture near where children play.
An anchor kit suitable for plaster walls is included with this item, if you require a different kit consult your nearest hardware store.

WALL


(1)

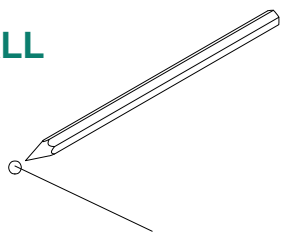

WALL

drilling hole
Ø6x30mm


(2)

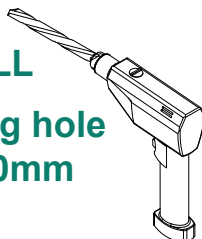


WALL

(R)

(3)

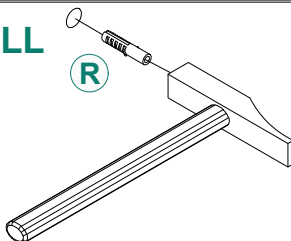



(4)

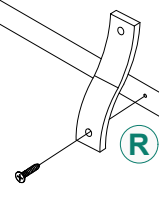

WALL


(R)

(5)

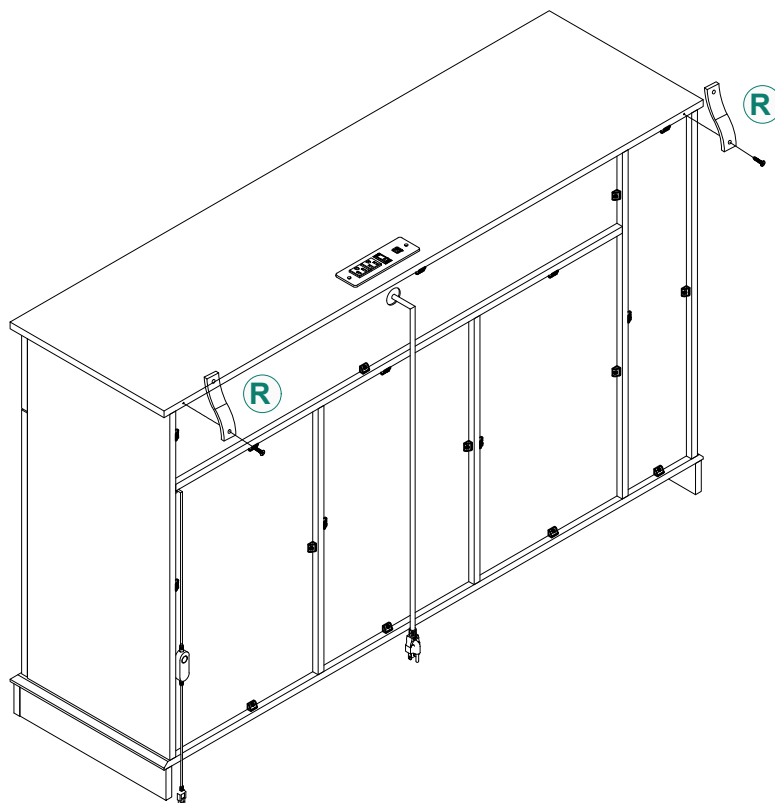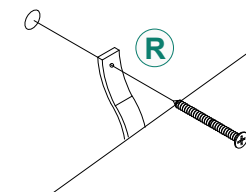

(R)

Wall

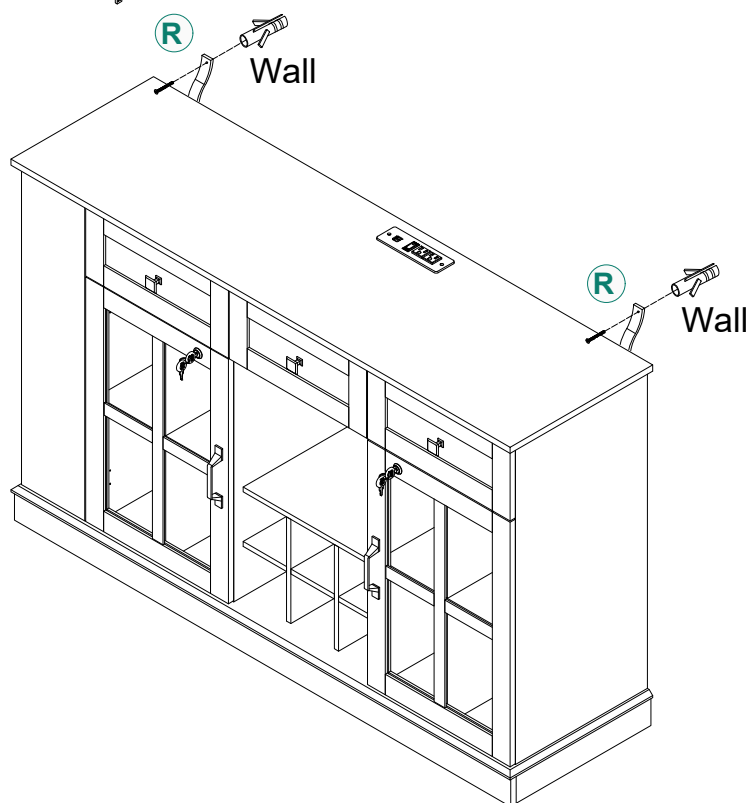

(R)


Wall

The ways to adjust the door


- Before adjusting the hinge, please check whether the cabinet is skewed.
- If the skew can not be repaired, please remove the anti-tipping device first, then adjust the cabinet to vertical position.
- Please adjust the hinge with the door open.
- Please operate it with more than 2 people, one person holds the door and the other one adjusts the screw.

Components Name

The door side



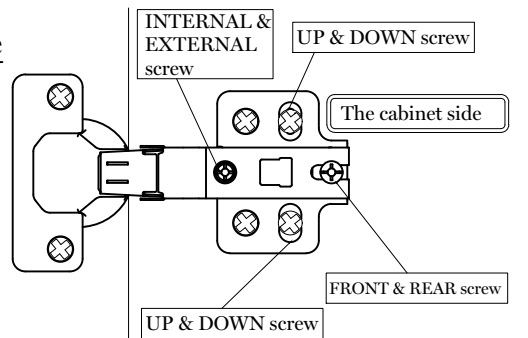


Obvious gaps between doors or Doors don't look closed

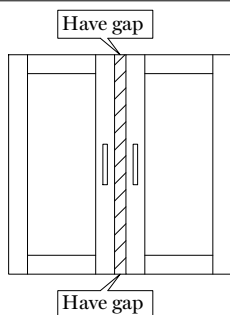


- 1 Turn "internal & external screw" to the right can make the door approach inside.
Please adjust the doors little by little..

The left door

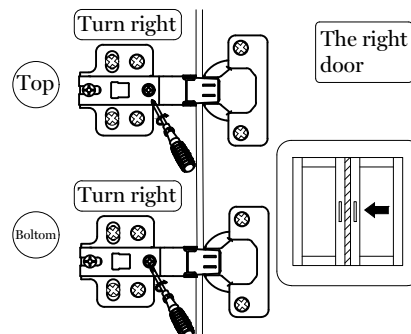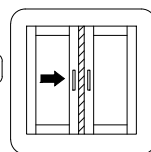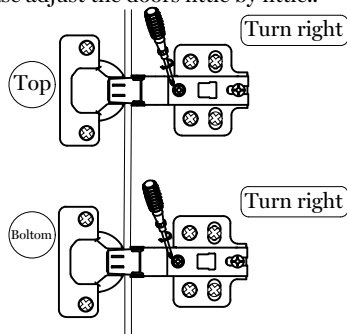


The right door

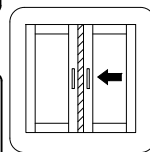


※ If the 2 doors are overlap, please turn the "internal & external screw" to the left.

When door is crooked

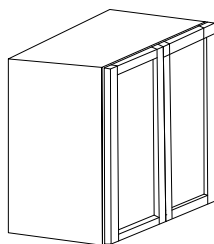


Please take the following steps to adjust first.


- 1 Rotate the "font and rear screws to the left

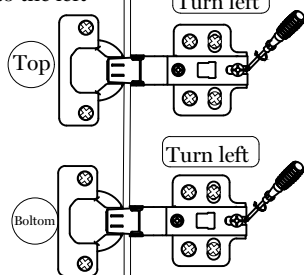

- 2 Push the door to the cabinet

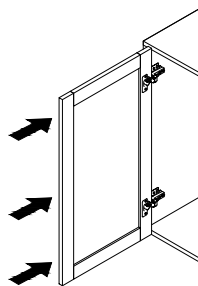


- 3 Rotate the "font and rear screws to the right


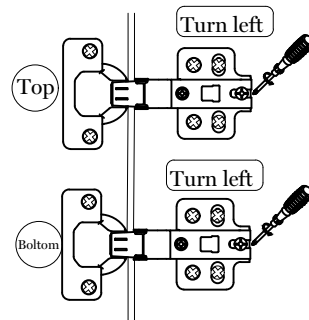


※ After adjusting the "front and rear screw", the door still does not change, please turn the "internal & external screw" to the right Slightly.


When door is leaning

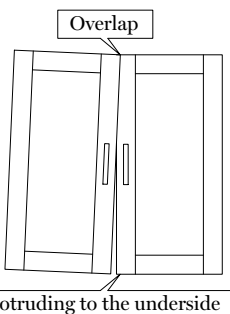


- 1 Turn "internal & external screw" to the left can make the top of the door tilted outward.

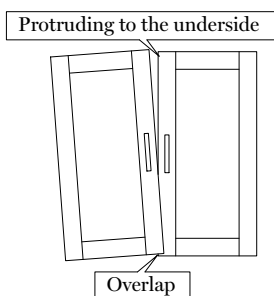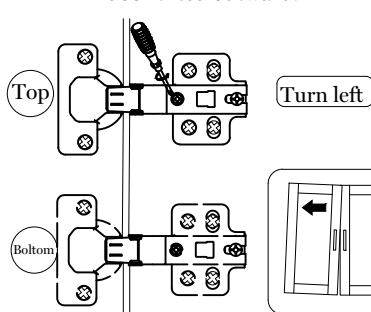


- 1 Turn "internal & external screw" to the left can make the top of the door tilted outward.

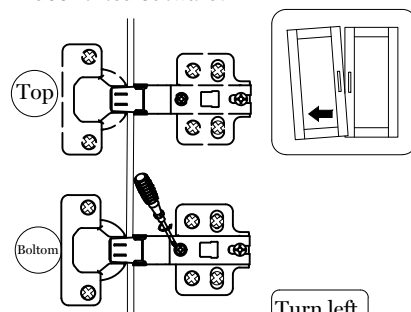


When door is higher on top

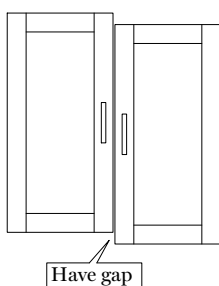


- 1 Turn "up & down screw" to the left

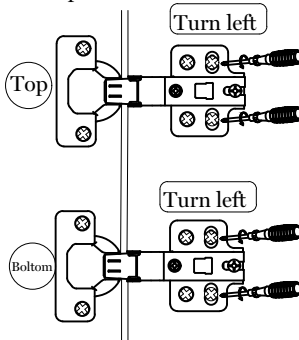

- 2 Lower the door's height so that 2 doors are of the same height.

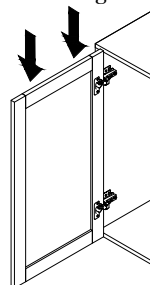

- 3 Turn "up & down screw" to the right

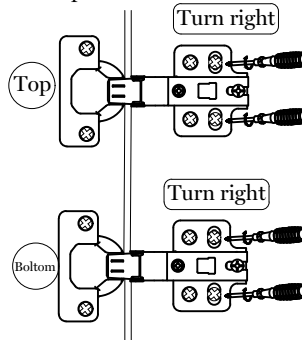

※ if the door is lower on bottom, please lift up the left door slightly on step 2