


ASSEMBLY INSTRUCTIONS


DINING BENCH

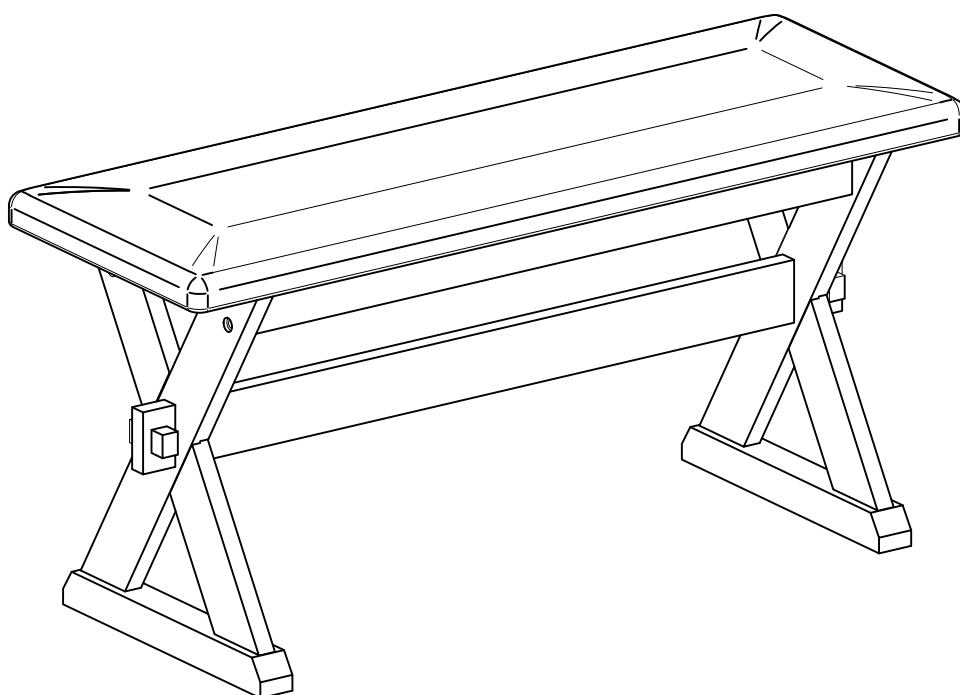

WF305831


IMPORTANT NOTE:

- PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE BENCH IS FULLY SET-UP.

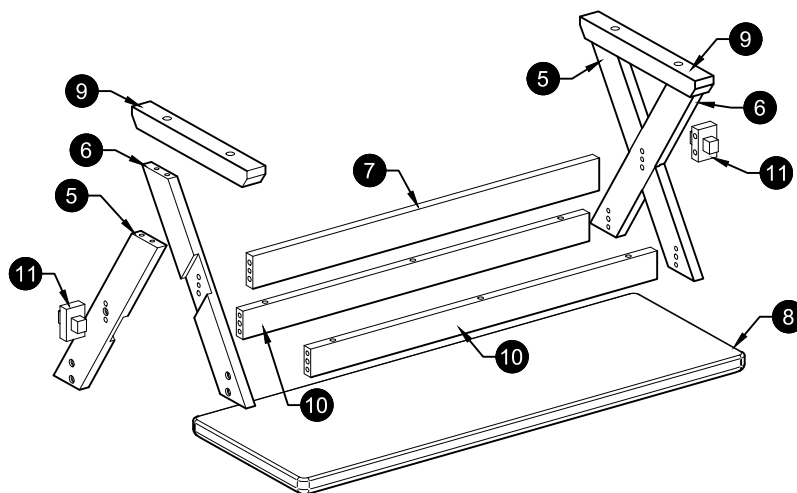


CARTON CONTENT:


WF305831 :




5 x 2



6 x 2




7 x 1



8 x 1



9 x 2



10 x 2



11 x 2



BENCH PART LISTS

NO.	DESCRIPTION	SKETCH	QTY
5	LEG (R)		2 PCS
6	LEG (L)		2 PCS
7	MIDDLE BAR		1 PC
8	SEAT		1 PC
9	LEG BOTTOM		2 PCS
10	APRON		2 PCS
11	DECO LEG		2 PCS



BENCH HARDWARE LISTS

NO.	DESCRIPTION	SKETCH	QTY
H	JCBC BOLT M6 x 45mm		10 PCS
I	JCBC BOLT M6 x 60mm		4 PCS
J	SPRING WASHER 1/4"		14 PCS
K	WOOD DOWEL M8 x 30mm		4 PCS
L	WOOD DOWEL M10 x 30mm		12 PCS
M	C/B SCREW M4 x 50mm		6 PCS
N	ALLEN KEY M4		1 PC

STEP 1

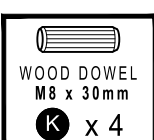
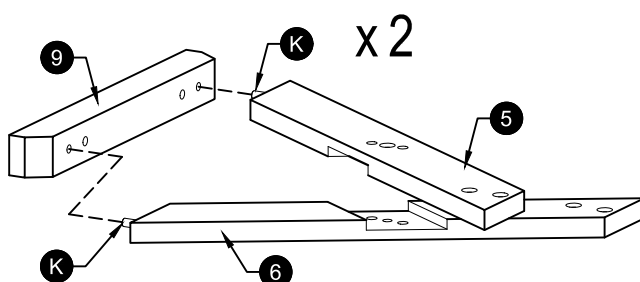


STEP 2

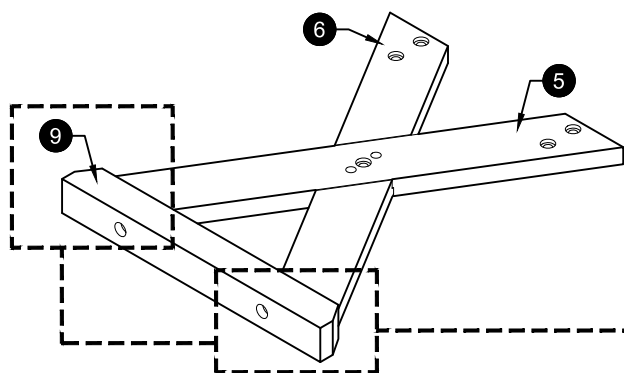

x2

DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE BENCH IS FULLY SET-UP.

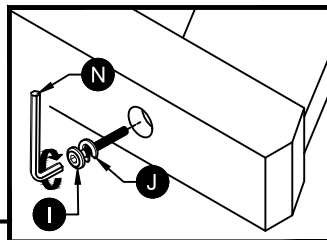

JCBC BOLT
M6 x 60mm

I x 4



SPRING WASHER
1/4"

J x 4




ALLEN KEY
M4


N x 1

STEP 3


- Tighten first step 3, then continue with step 2



STEP 3.1

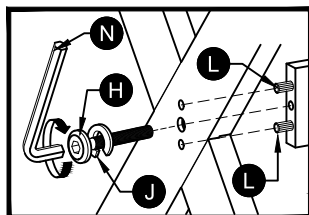


x2

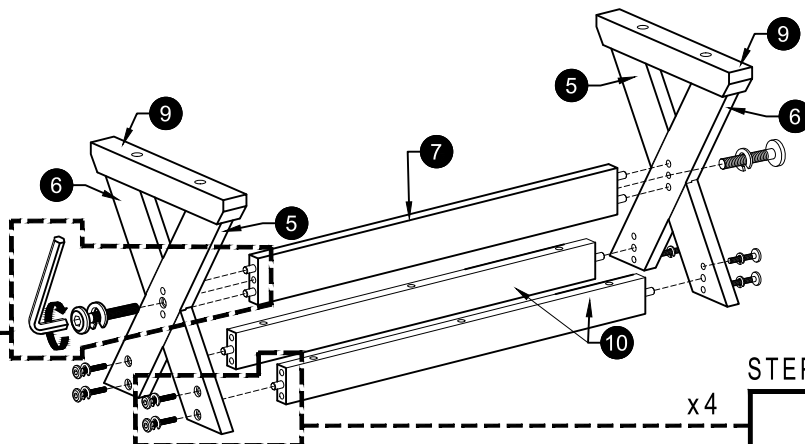

x4

STEP 3.2

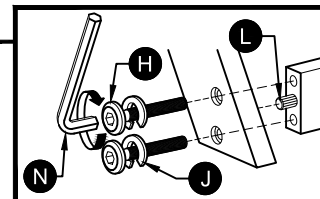

JCBC BOLT
M6 x 45mm

H x 10



SPRING WASHER
1/4"

J x 10



ALLEN KEY
M4


N x 1




WOOD DOWEL
M10 x 30mm

L x 8


STEP 4

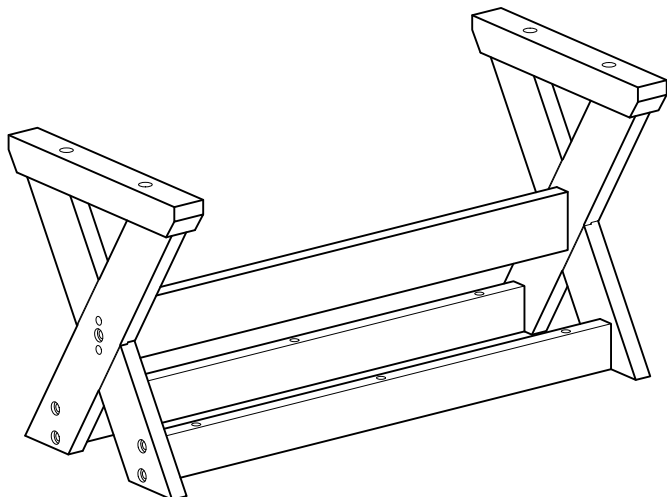


STEP 5

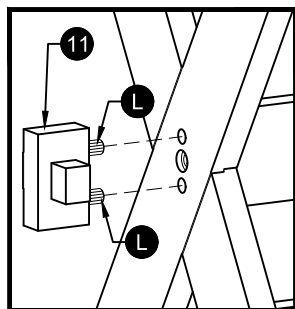



x2

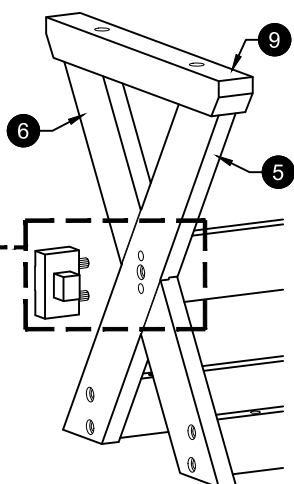

STEP 6

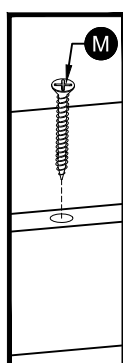

x6

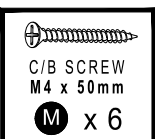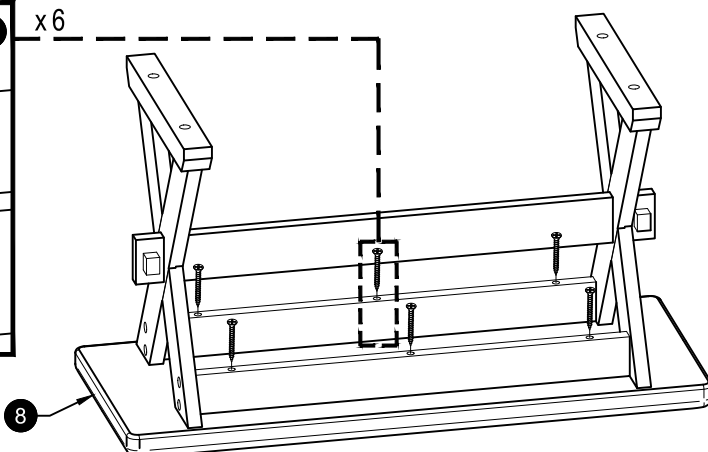

ASSEMBLY
COMPLETE !

