



## ASSEMBLY INSTRUCTIONS

### Parts:


(2) Side Piece



Top/Bottom Piece



Bottom Piece



(2) Back Piece




Shelf Piece



(2) L Divider - 5/8" Thick



(2) Skirt



Center Divider - 5/8" Thick



(4) Divider - 3/8" Thick



### Tools Needed:

(32) Hex Screws

Allen Wrench




(32) Double Hooks (64) Small Screws




Phillips Head Screw Driver  
(Not Included)



**Notice - KEEP BACK GROOVES ALIGNED - DO NOT DRILL**

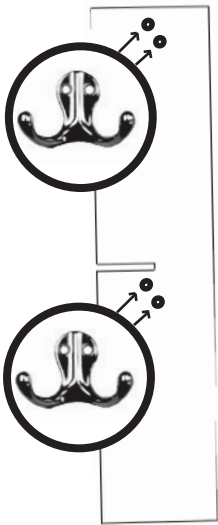


**Step 1:** Attach hooks to **Side pieces**, both sides of the **Center Divider**, both sides of the **L dividers**, and both sides of the **Dividers** by using phillips head screwdriver to screw small screws into pre-drilled holes before assembling unit. Make sure hooks are pointed upwards toward the top of the panels as seen in illustration.




**Step 2:** Align **Skirt** with pre-drilled holes on **Bottom Piece**. Insert hex screws into pre-drilled holes in **Bottom Piece**. Tighten down. Repeat for remaining skirt piece.


**Step 3:** Insert edge of **Bottom Piece** into mortise of **Side Piece**. Make sure back grooves are aligned. Insert hex screws into each of pre-drilled holes in **Side Piece** and each of the **Skirt**. Tighten down halfway.

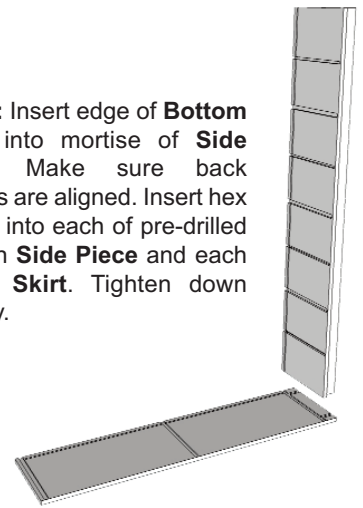


**Step 4:** Insert edge of **Shelf Piece** into mortise of **Side Piece**. Insert hex screws into each of pre-drilled holes in **Side Piece**. Tighten down halfway.

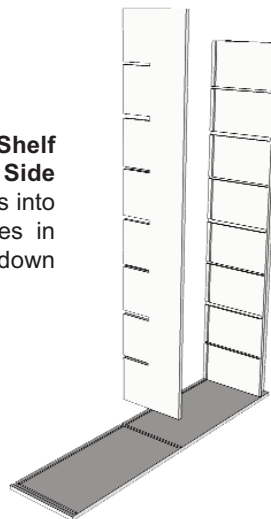

**Step 5:** Insert edge of **Center Divider** into mortise of **Side Piece** and **Shelf Piece**. Make sure back grooves are aligned. Insert hex screws into each of pre-drilled holes in **Bottom Piece**. Tighten down halfway.

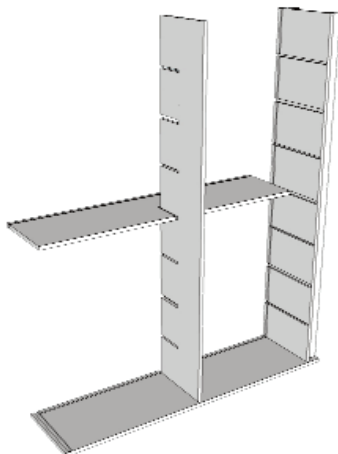


**Step 6:** Insert edge of **L Divider (5/8" thick)** into mortise of **Bottom piece** and **Shelf Piece**. Insert hex screws into each of pre-drilled holes in **Bottom Piece**. Tighten down halfway. Repeat for remaining **L Divider (5/8" thick)**.

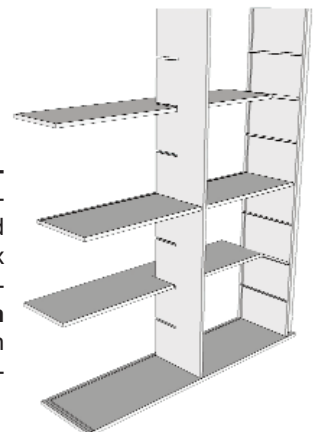


## ASSEMBLY INSTRUCTIONS

**Step 7:** Insert edge of **Divider (3/8" thick)** into mortise of **Bottom Piece** and **Shelf Piece**. Repeat for remaining **Dividers**.

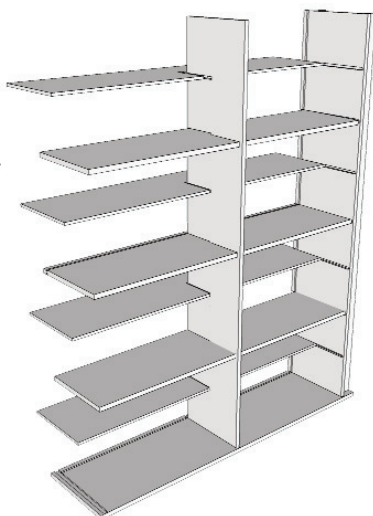



**Step 8:** Insert edge of **Back Piece** into mortise of **Side Piece**, and **Center Shelf** until edge rests firmly in the back groove of **Bottom Piece**. Repeat for remaining **Back Piece** using opposite mortise of **Center Shelf** to align **Back Piece** into back groove of **Bottom Piece**.

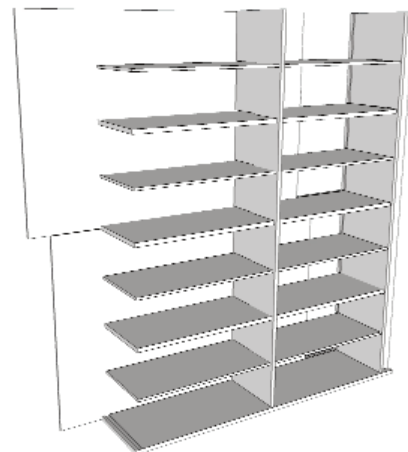

**Step 9:** Insert edge of **Top Piece** into remaining mortise of the **Side Piece**, aligning back grooves. Insert edge of each **Divider** and **Back Piece** into the corresponding mortise on **Top Piece**. Insert hex screws into pre-drilled holes of **Top Piece** and tighten down halfway.



**Step 10:** Fit remaining **Side Piece** over edge of the assembled pieces, inserting edges into mortises of **Side Piece**. Make sure that back panels fit into back grooves of **Side Piece**. Insert hex screws into pre-drilled holes on **Side Piece** and tighten down halfway.

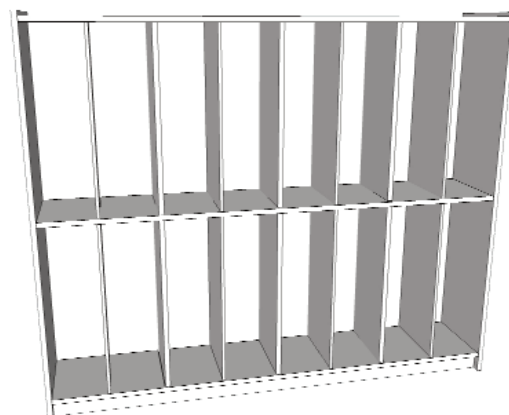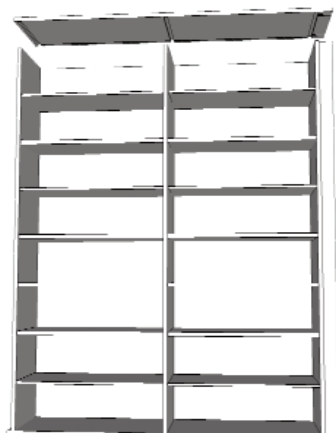

**Step 11:** Finish tightening all hex screws. **DO NOT OVER TIGHTEN**. Stand unit upright so that it is resting on **Bottom Piece** and the edge of the **Side Pieces**. Assembly is complete.