


Fluted 5 Drawers Sideboard Buffet Cabinet

Assembly Instruction

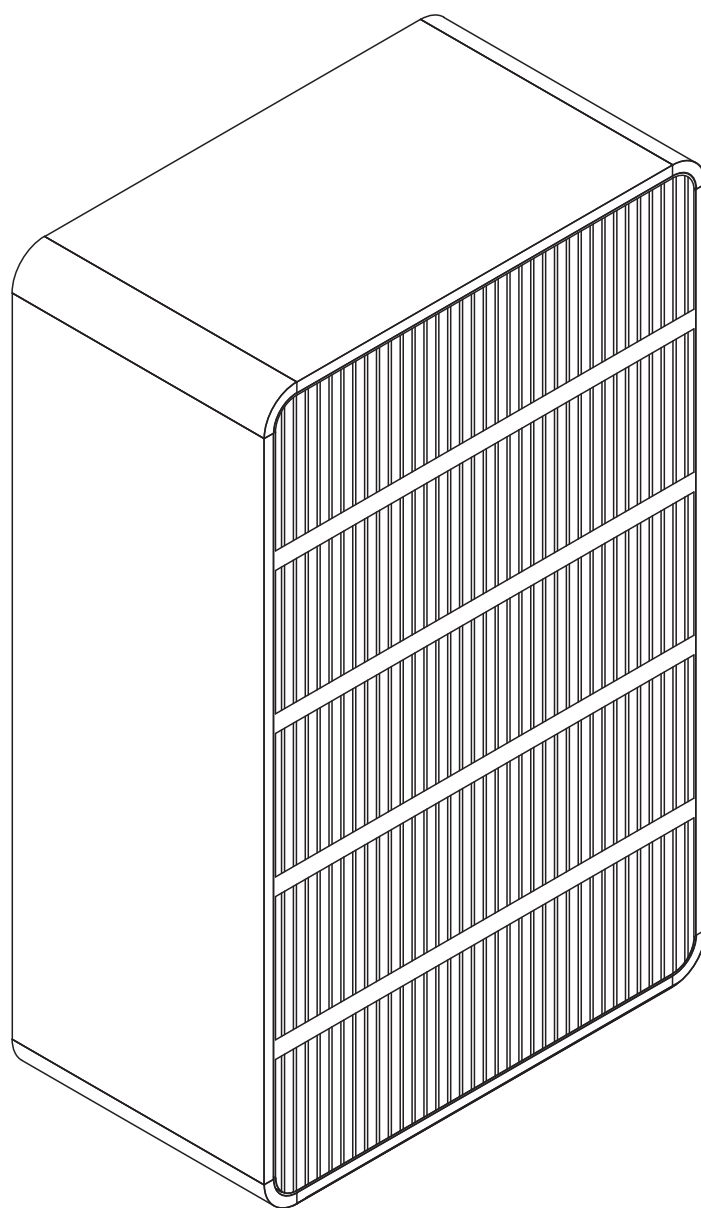

Model: SC-FC03

INTRODUCTION

Thank you for purchasing our products. Please read the instructions carefully before installation and keep it in a safe place for future reference. If you need any assistance or support, please feel free to contact our customer support team.


PRECAUTIONS

1. There are many components and accessories in the package. Each component and accessory is labeled with a letter or a number, check carefully before using any of them. Keep them away from children to prevent accidents.
2. Please install the product on a clean and soft underlay (such as carpet or cardboard) to avoid scratching or damaging the surface of the product.
3. The main components of the product is relatively heavy. Please pay attention to safety during installation.
4. The product is not stable during installation. Please do not move it randomly before it is completely installed.
5. If you have any questions during installation, please contact the customer service in time.


*PLEASE BE SURE TO FOLLOW THE INSTALLATION STEPS IN THE MANUAL TO AVOID UNNECESSARY LOSSES CAUSED BY IMPROPER INSTALLATION.

*IF YOU NEED FURTHER ASSISTANCE, PLEASE CONTACT THE CUSTOMER SERVICE ONLINE.





Exploded View

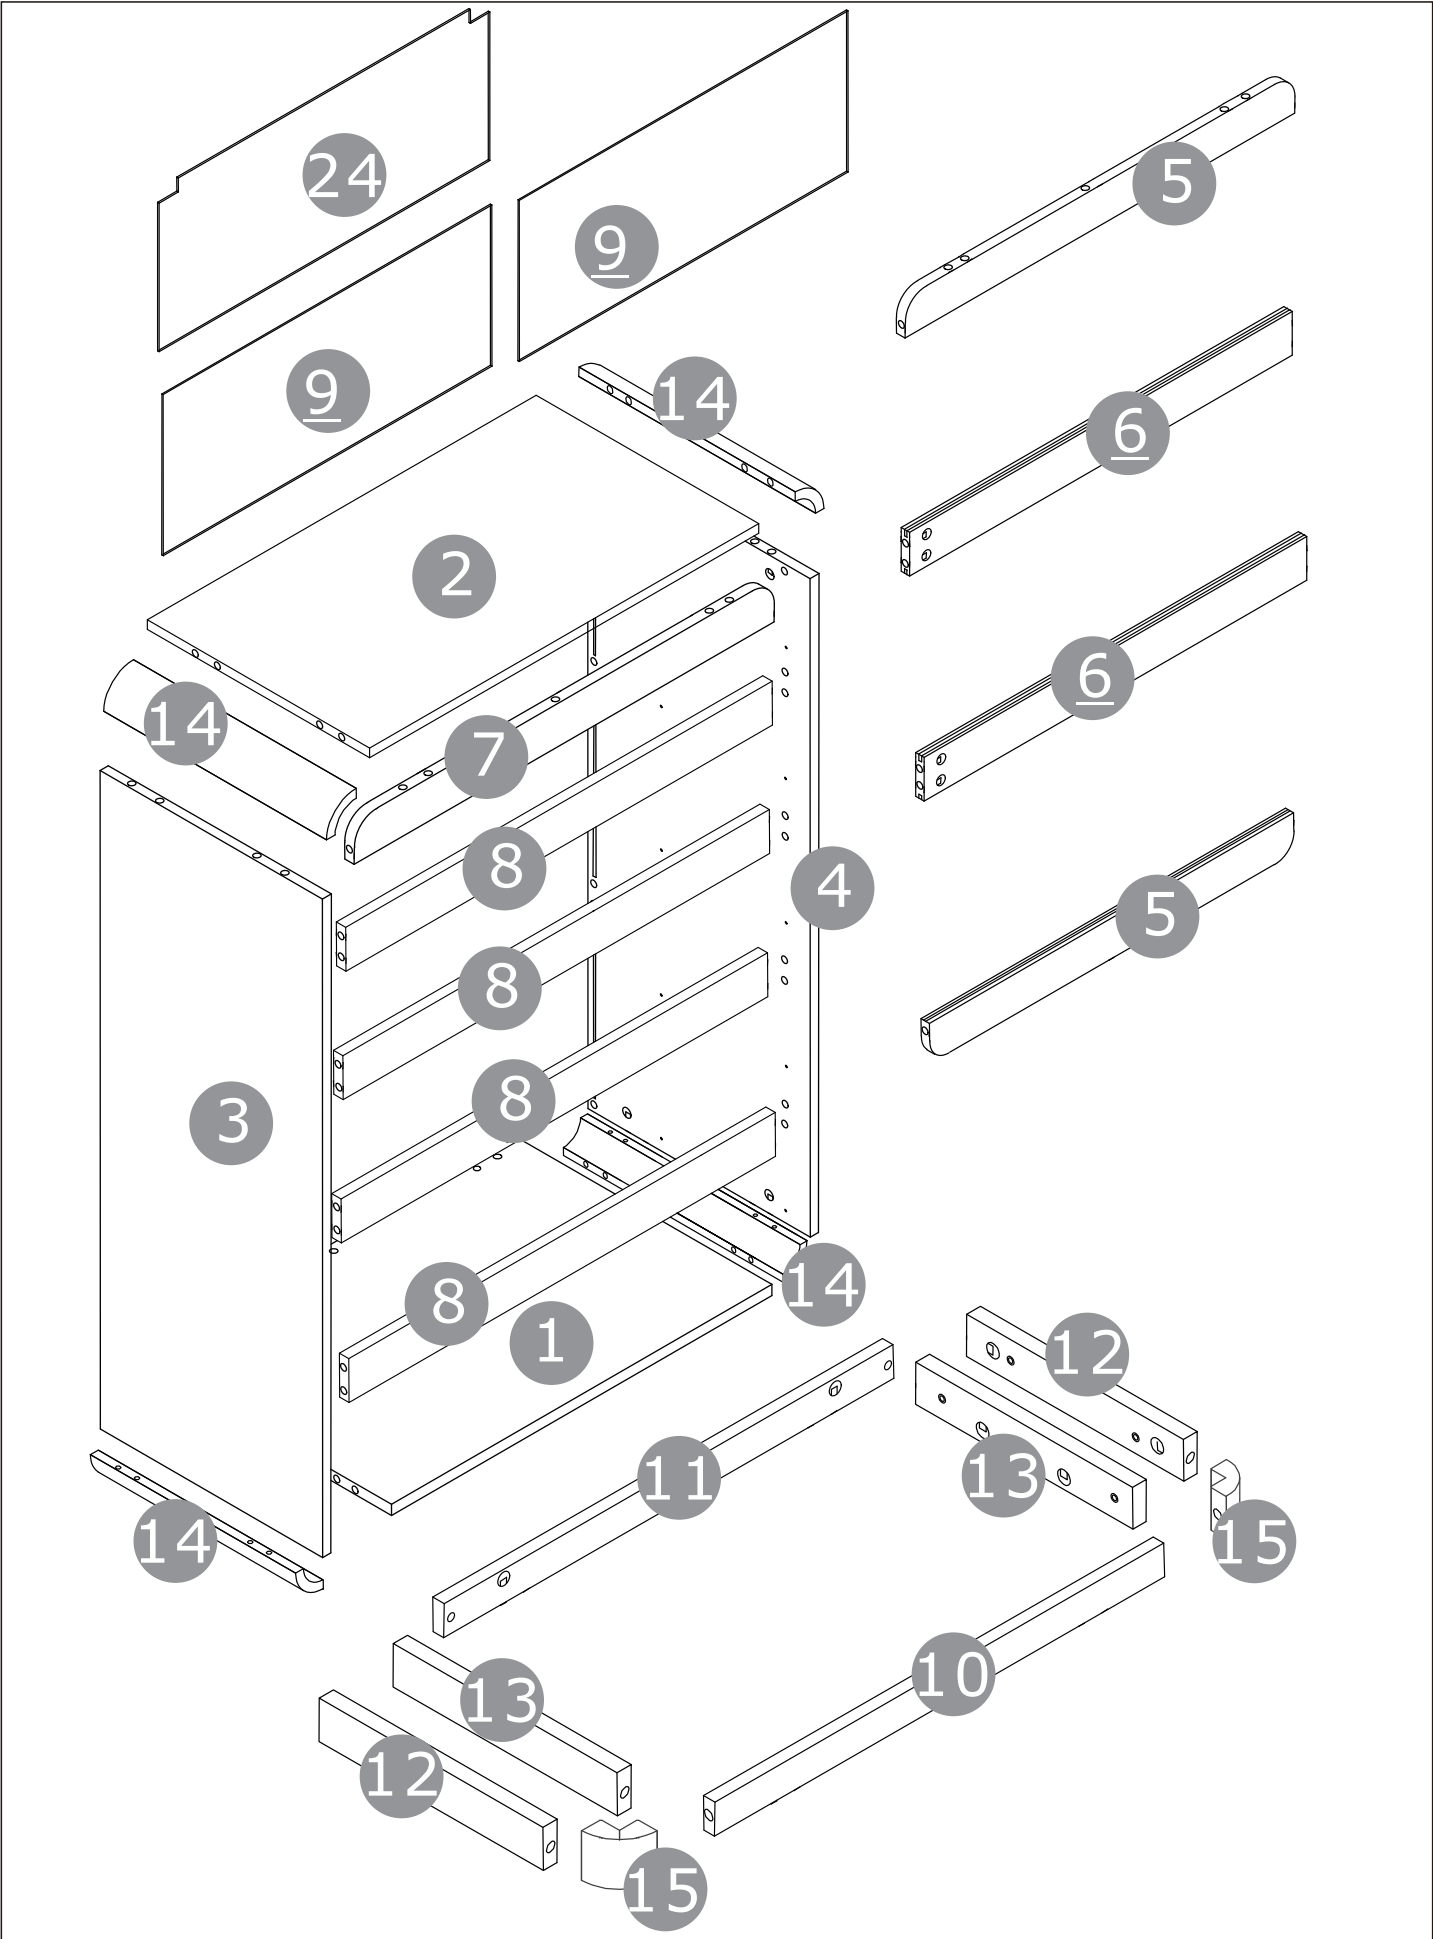






Exploded View

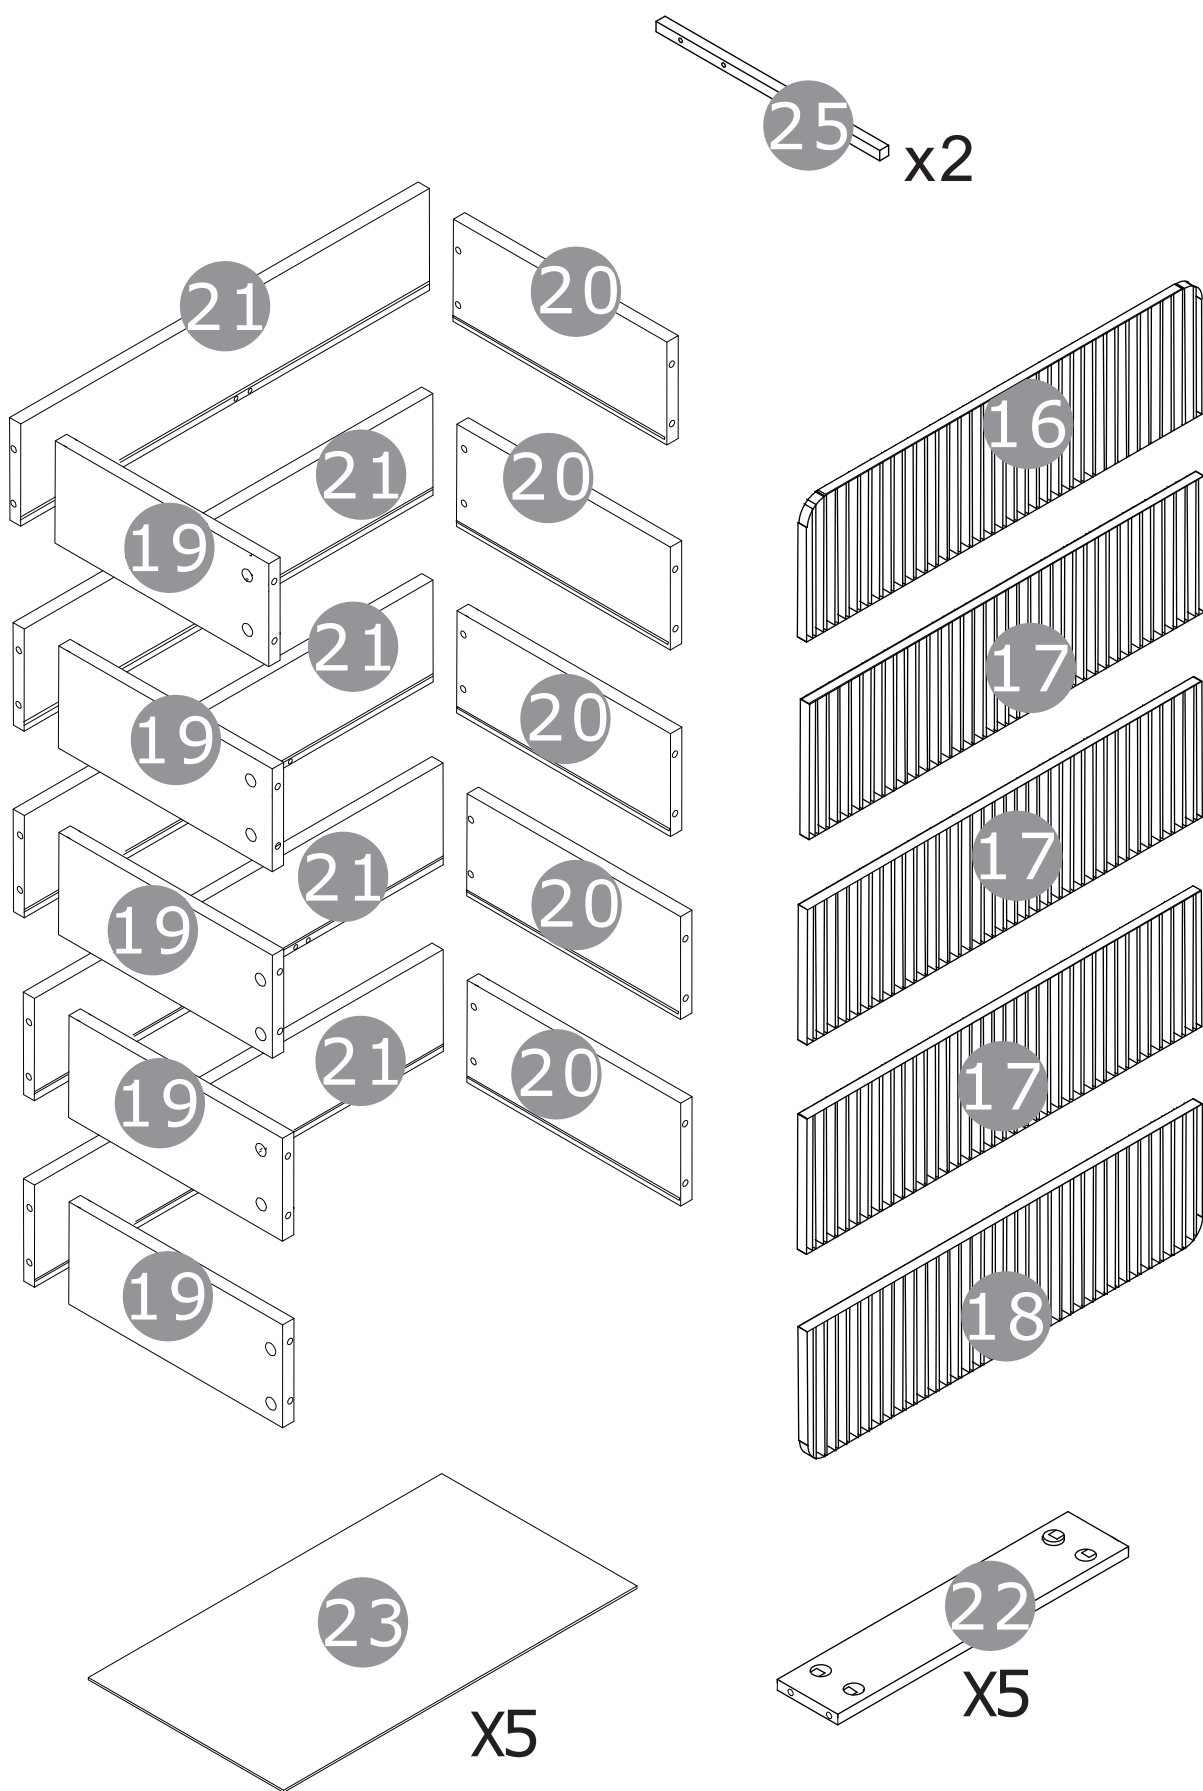






Parts Identification

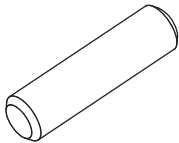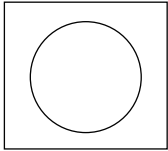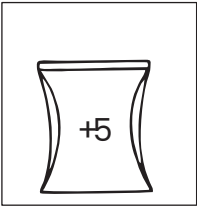A  $\phi 5 \times 35 \text{ mm}$ X119	B  $\phi 15 \times 11 \text{ mm}$ X79	C  $\phi 8 \times 30 \text{ mm}$ X26	D  L= 300mm X5	E  $\phi 3 \times 12 \text{ mm}$ X58
F  X119	G  $\phi 4 \times 25 \text{ mm}$ X4	H  X18	J  $\phi 15 \times 9.5 \text{ mm}$ X40	K  $\phi 4 \times 30 \text{ mm}$ X24
L  $\phi 4 \times 30 \text{ mm}$ $\phi 4 \times 14 \text{ mm}$ X2	M  X1	 Package of spare white nuts		







Parts Identification

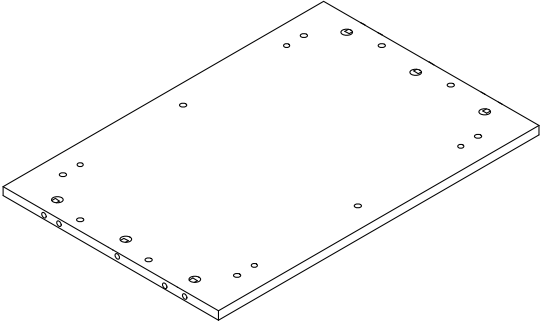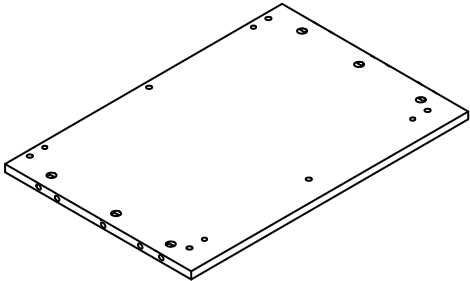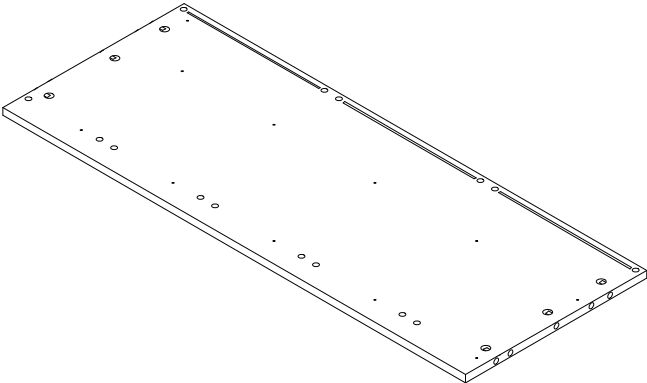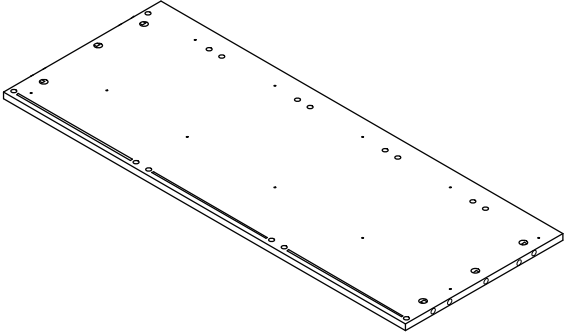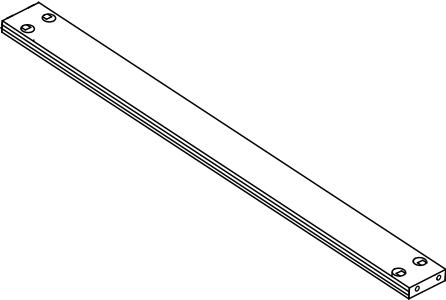1 	2 
3 	4 
5  x2	6  x2







Parts Identification

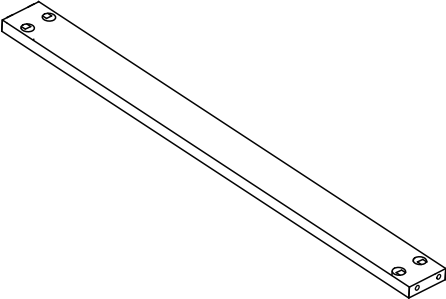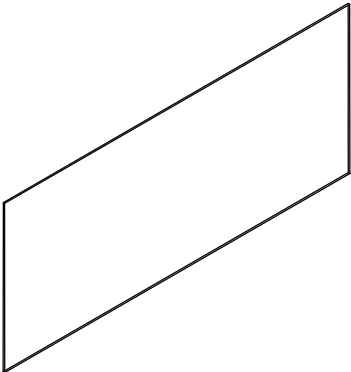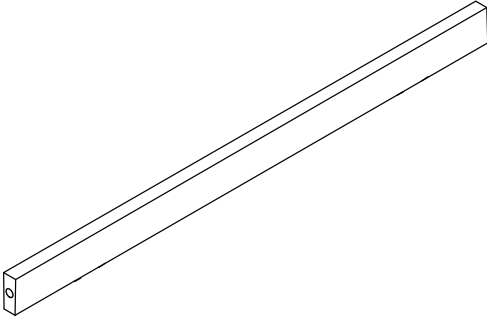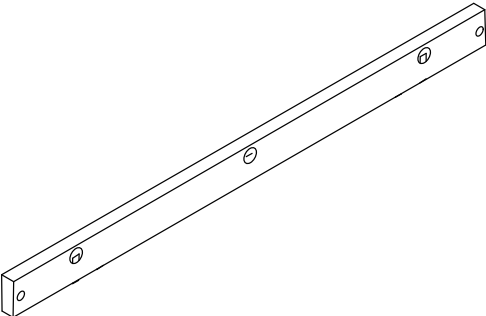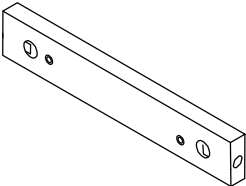7 	8  X 4
9  X 2	10 
11 	12  X 2

Parts Identification

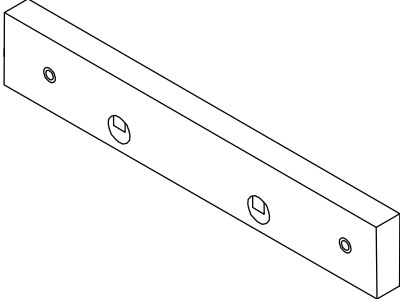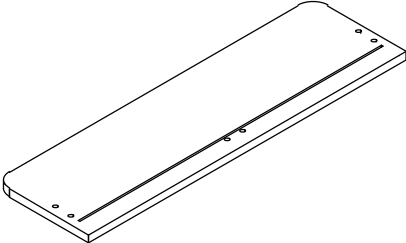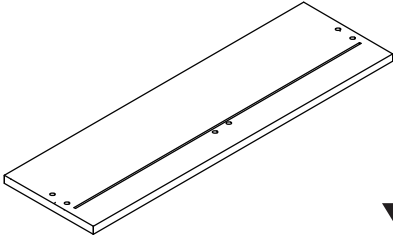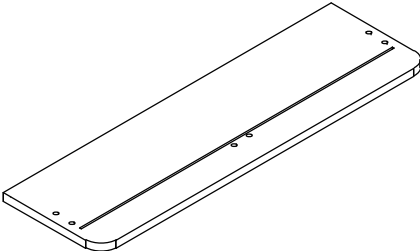
13  X 2	14  X 4
15  X 2	16 
17  X 3	18 

Parts Identification

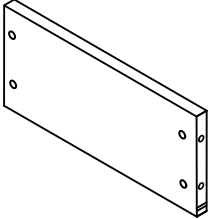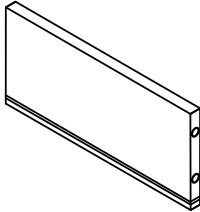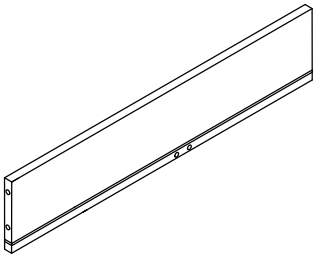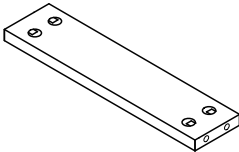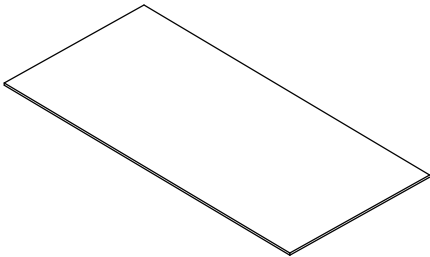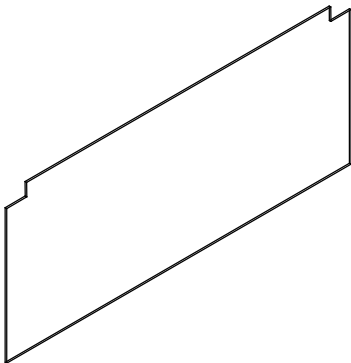19  X 5	20  X 5
21  X 5	22  X 5
23  X 5	24 

Parts Identification


25

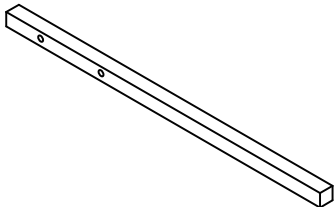


X2

Installation of Cams and Pins


Screw the pin into the hole. To set the cams correctly, ensure that the arrow on the cam is opening to the hole of the pin it is locking. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

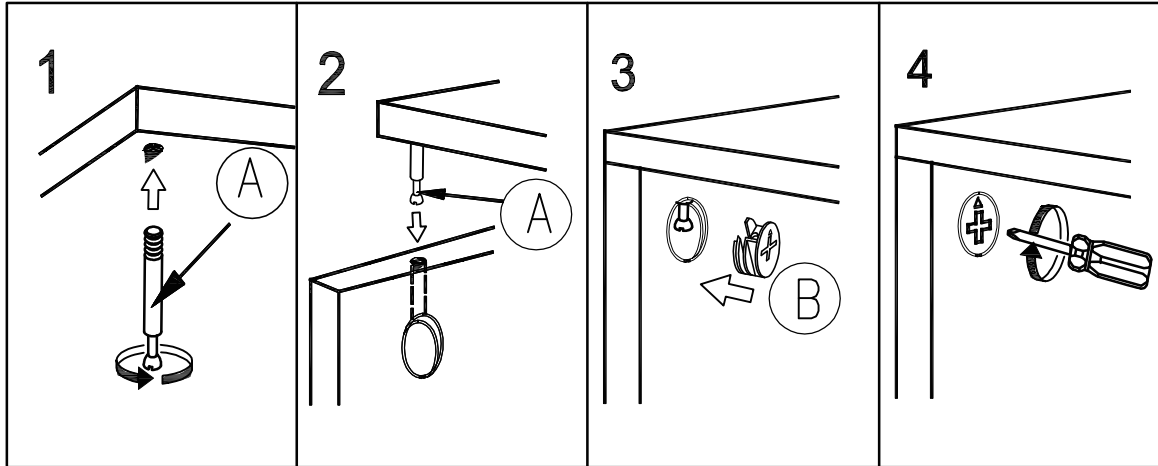

Read each step carefully before starting. It is very important that each step of instruction is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.

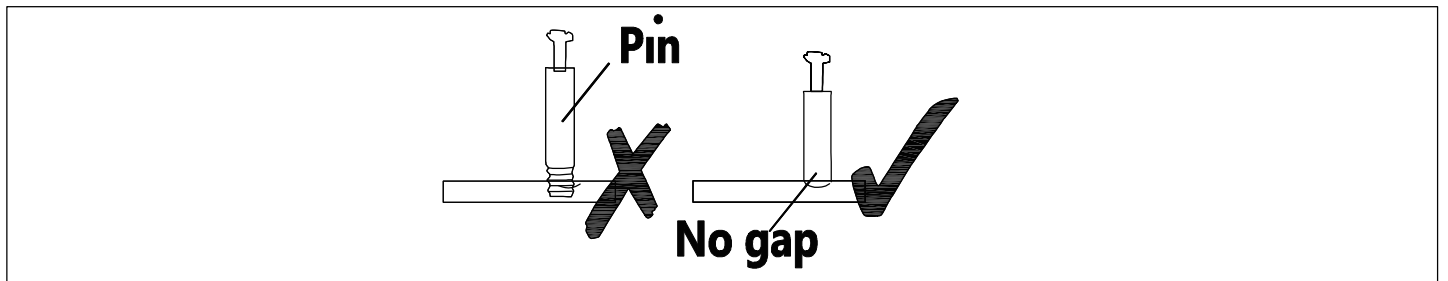





This furniture requires 2 people to assemble.
Make sure no parts missing or damaged
before assembly.

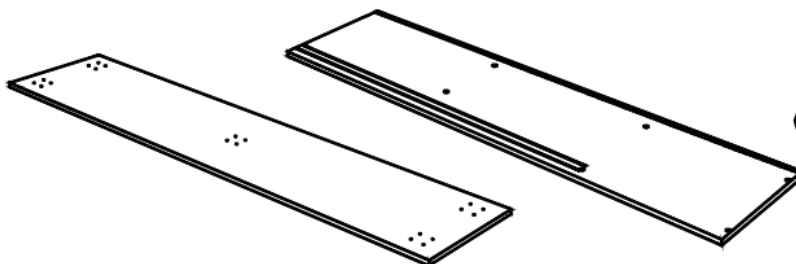

1

Dx4
CL
L=300mm




Ex8
Ø 3 x 12 mm

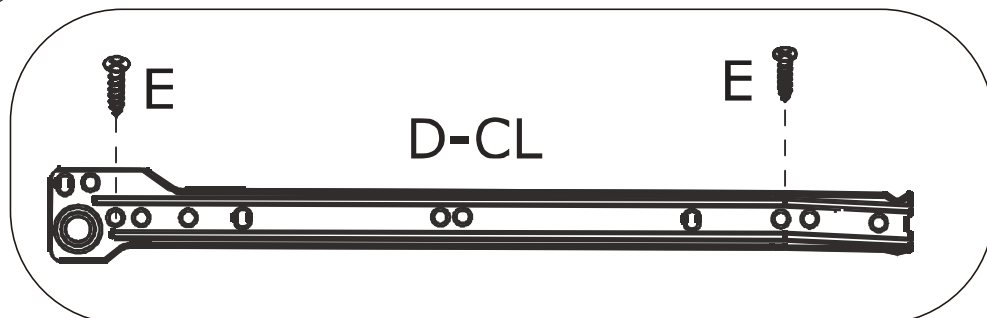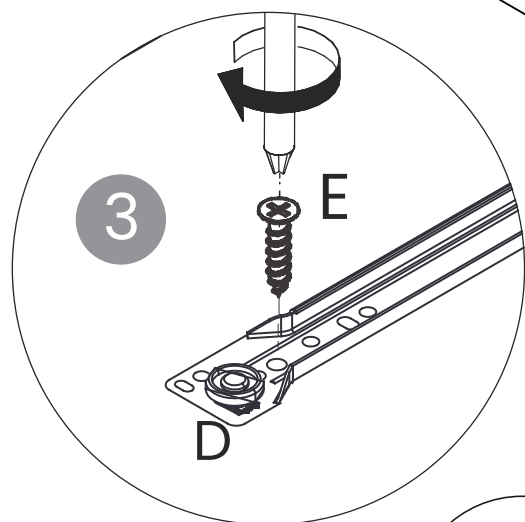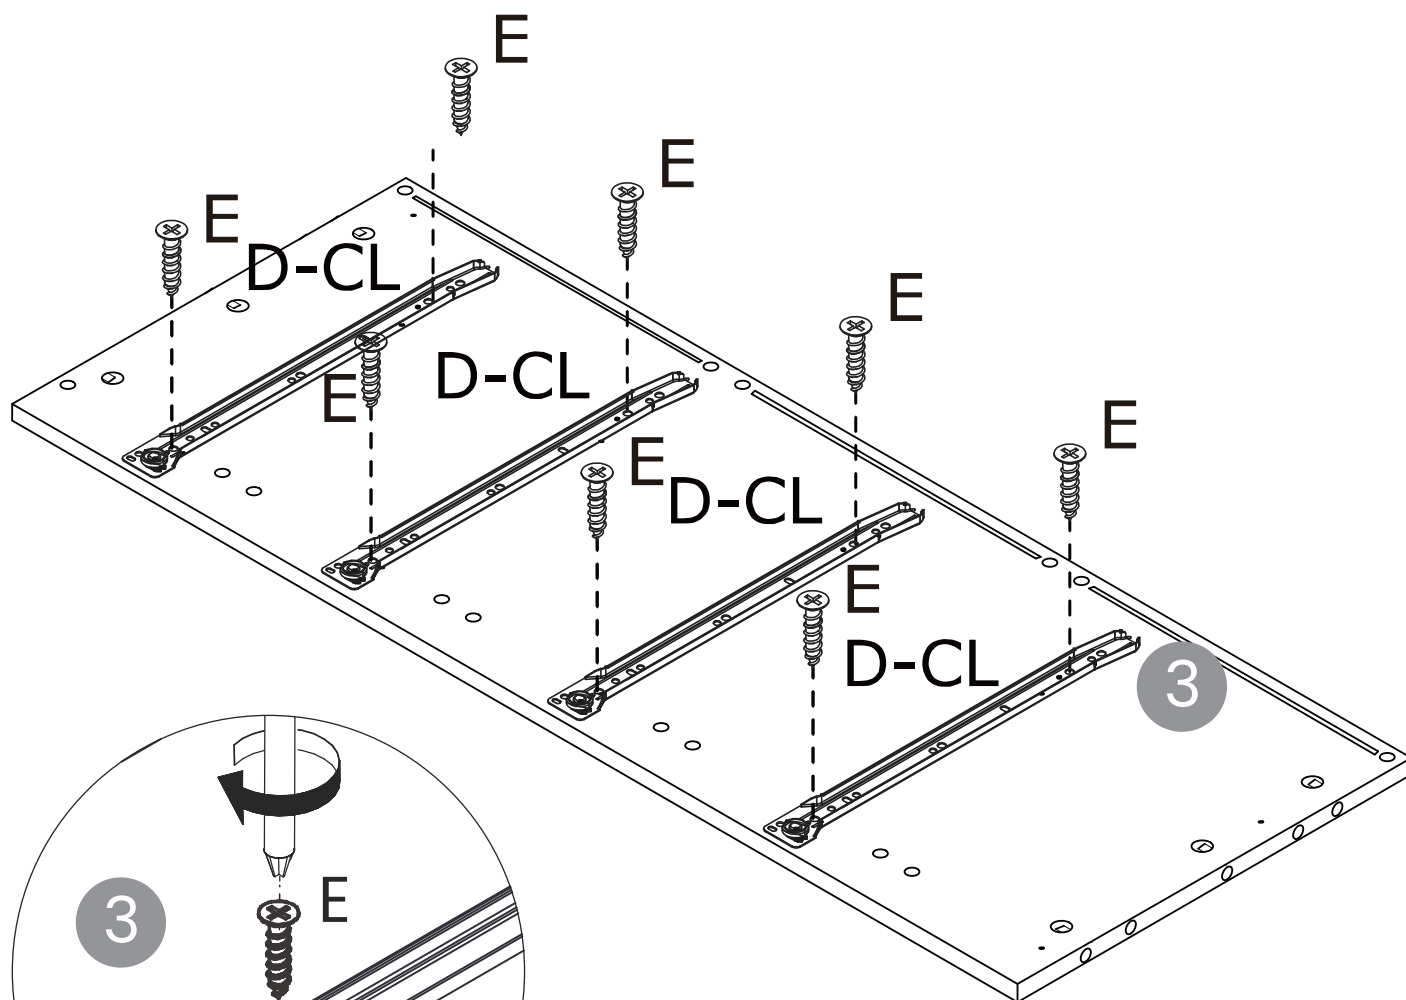

2

Dx4
CR
L=300mm

Ex8
 $\varnothing 3 \times 12 \text{ mm}$

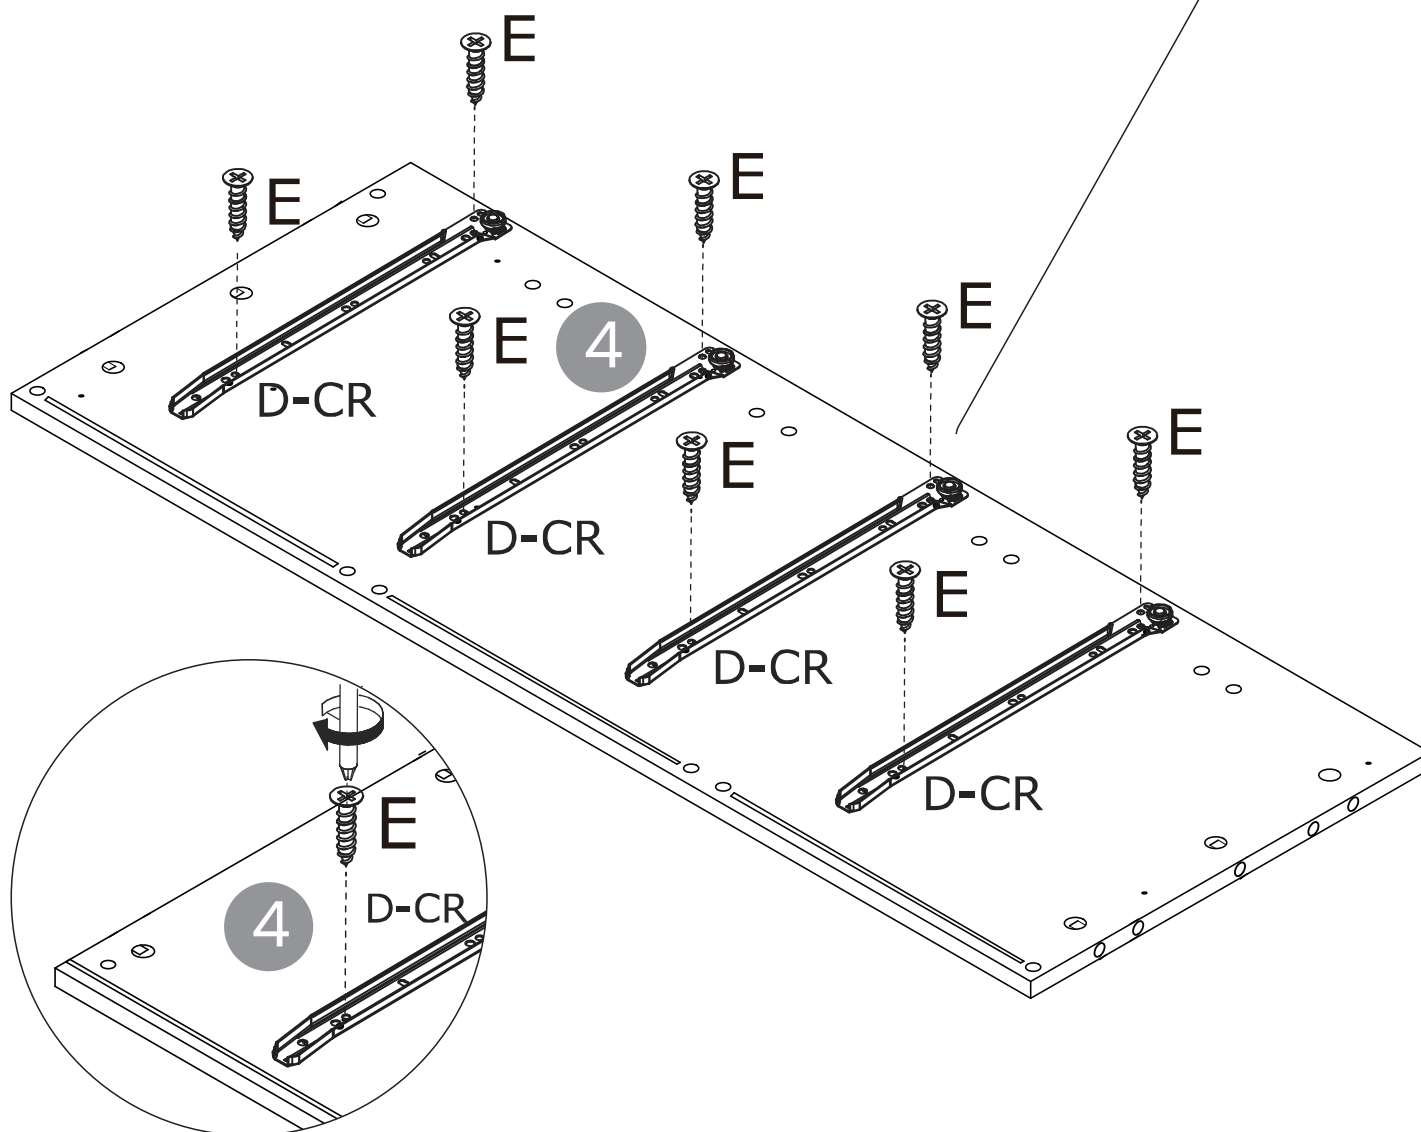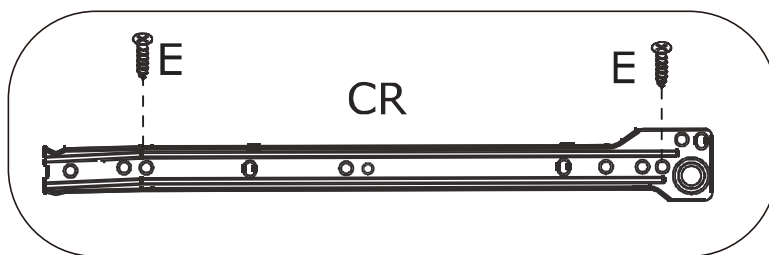



3

A x 30



L x 2

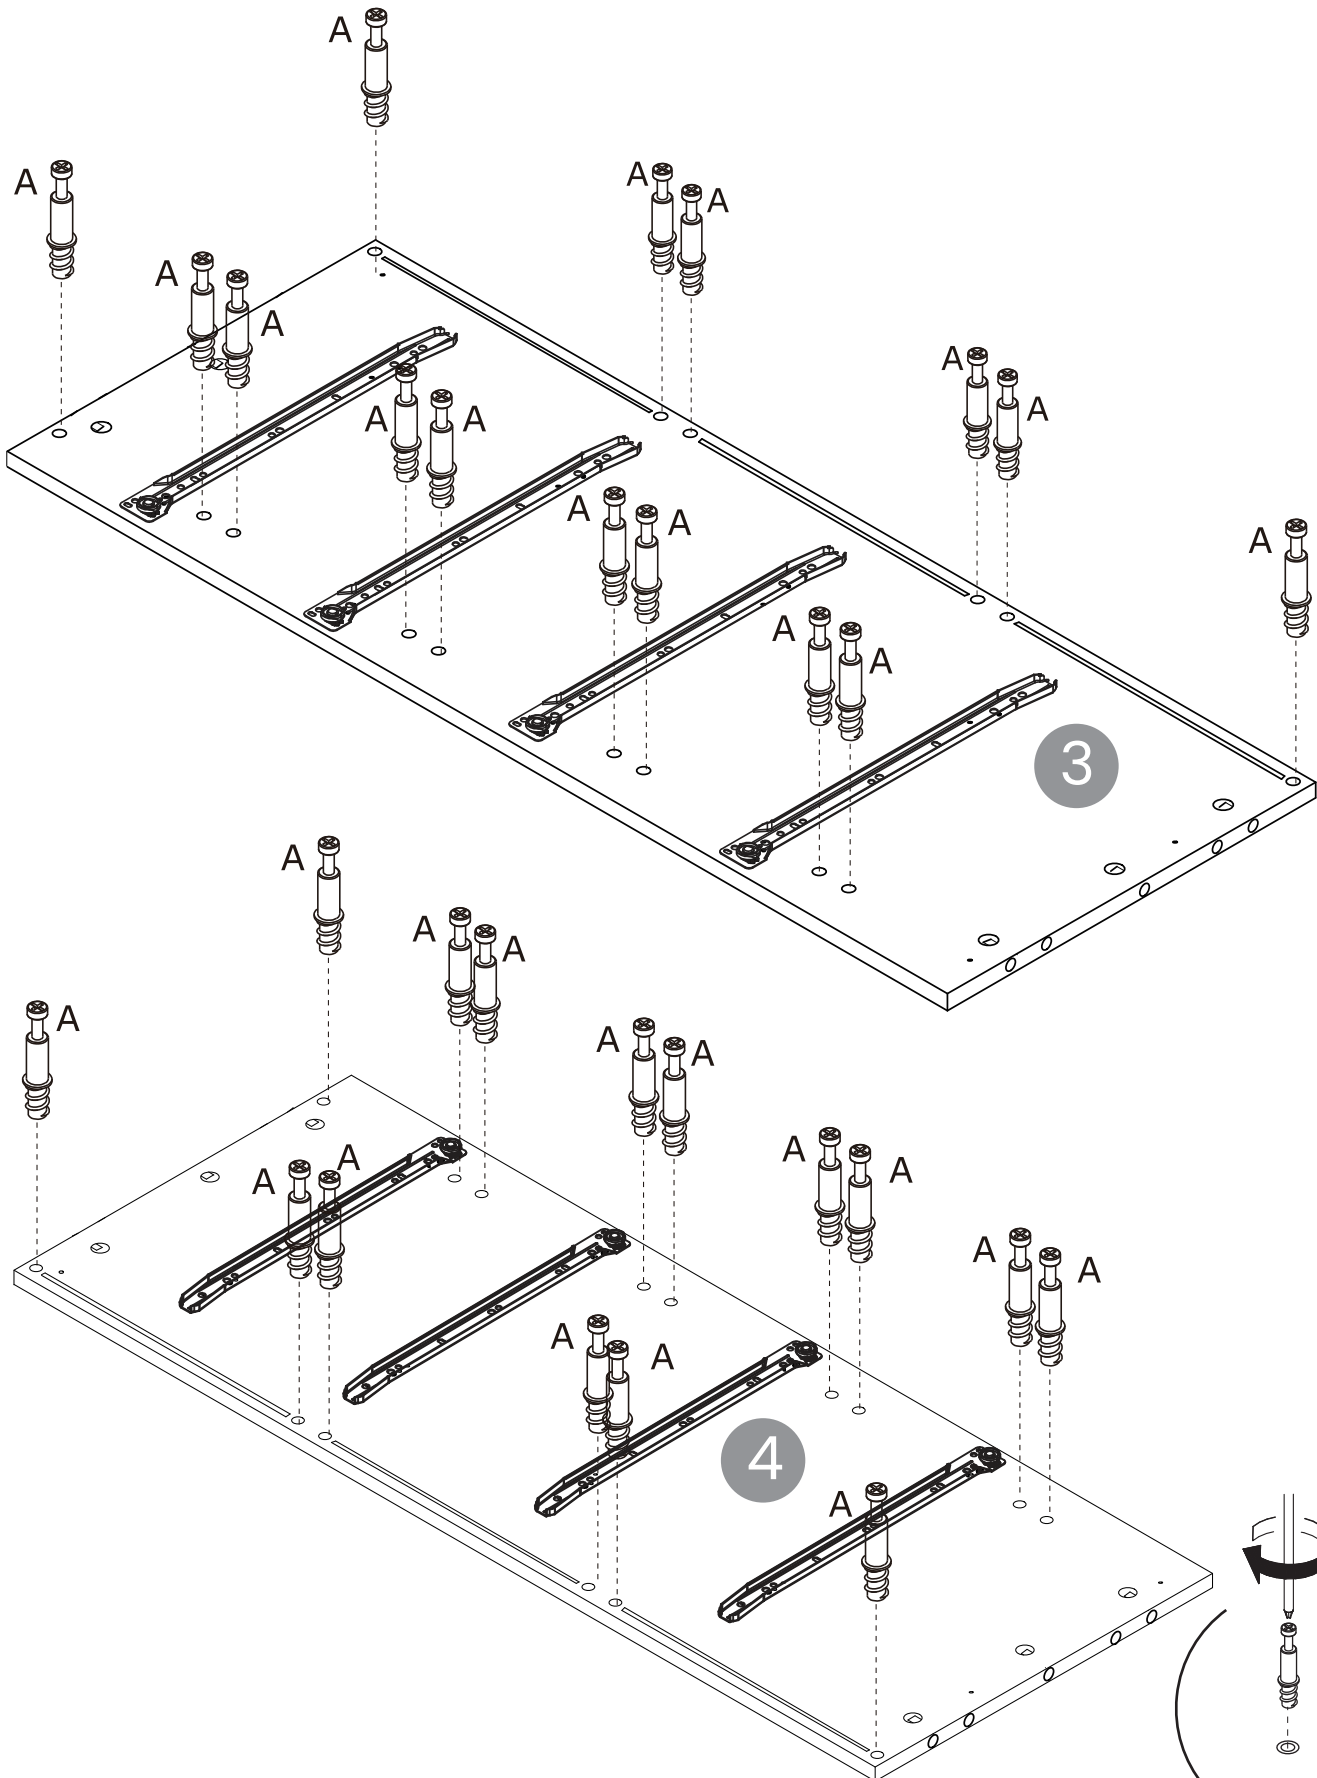



4

L x 2



Ø 4X12mm


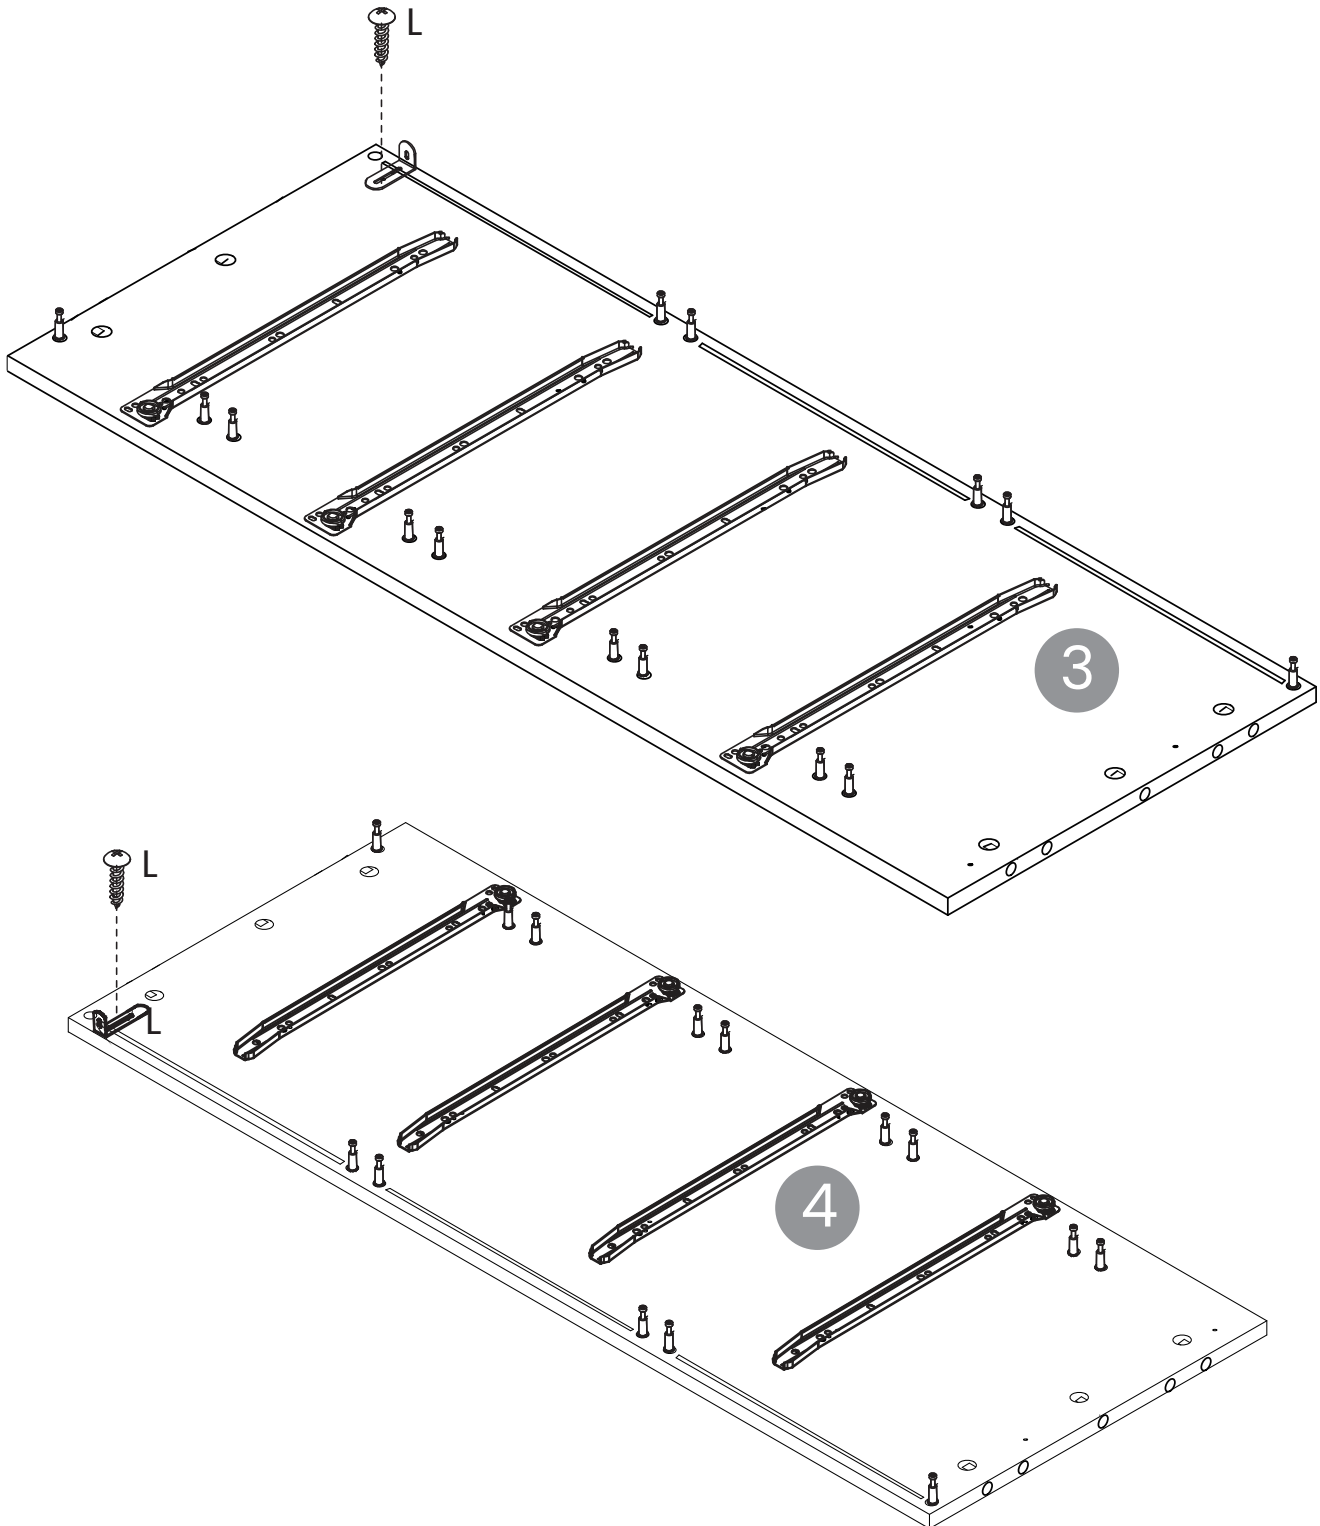



5

B x 9



Ø15 x 11 mm

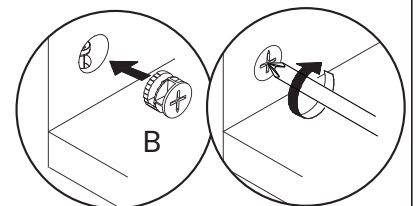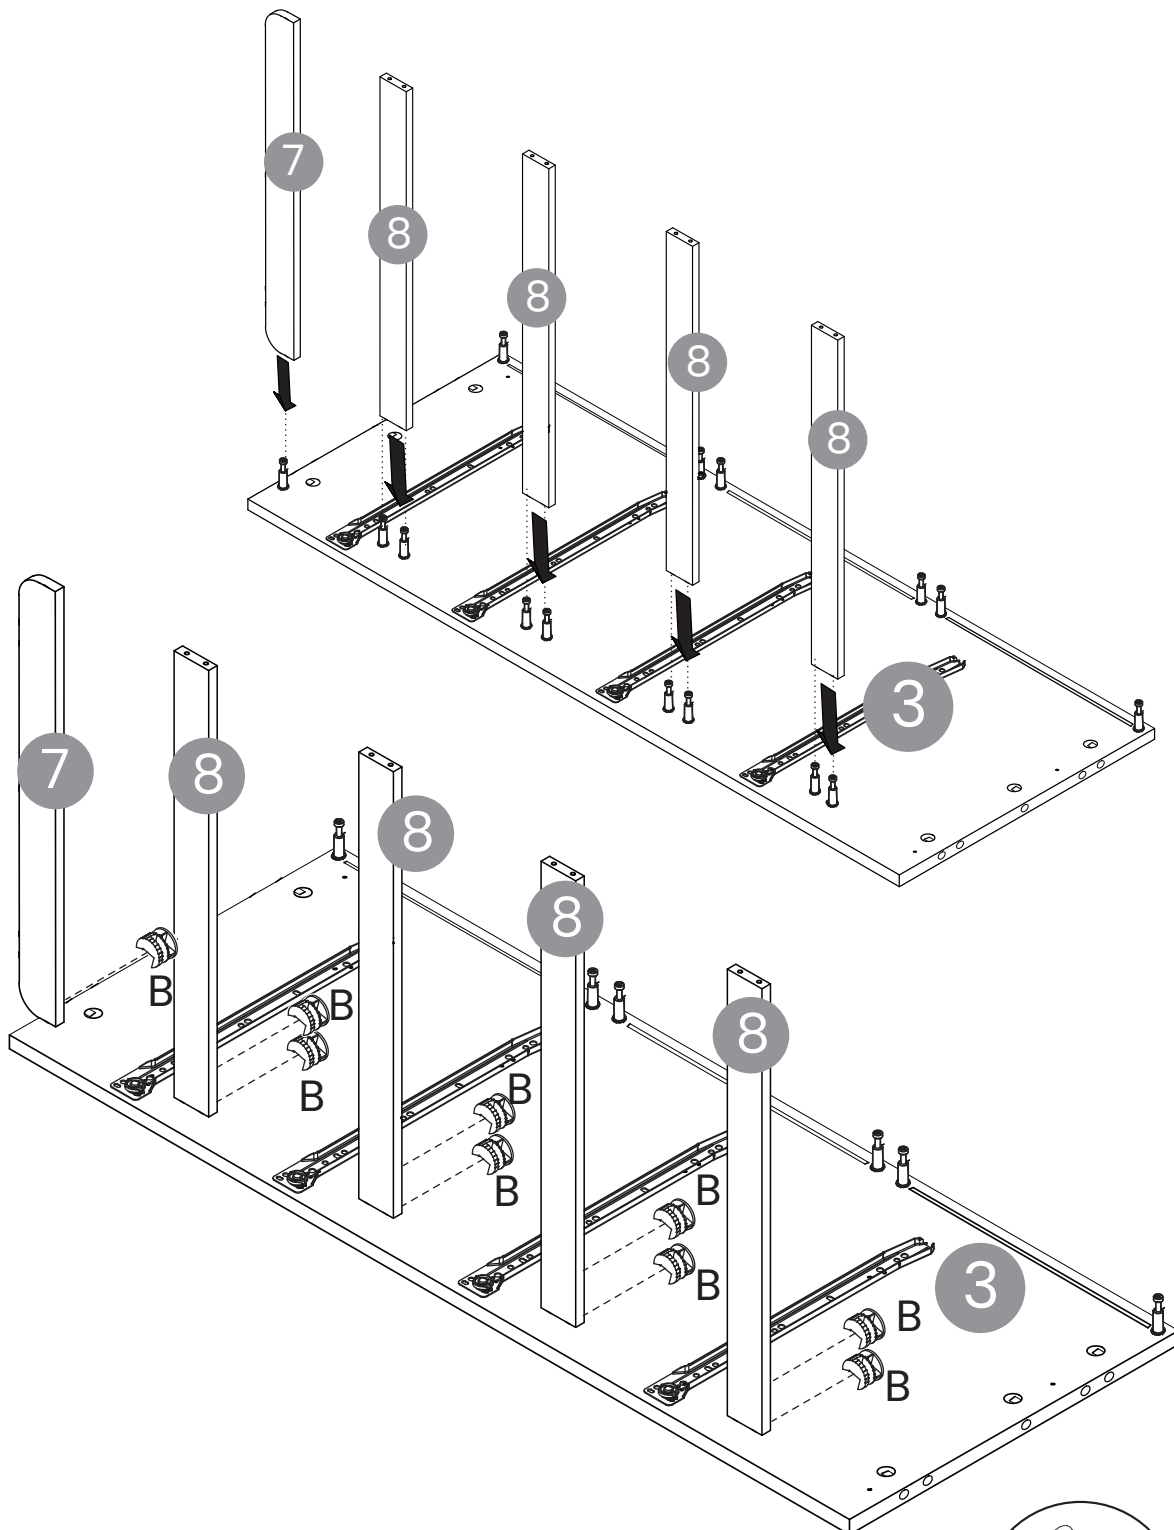


6


B x 6



Ø 15 x 11 mm

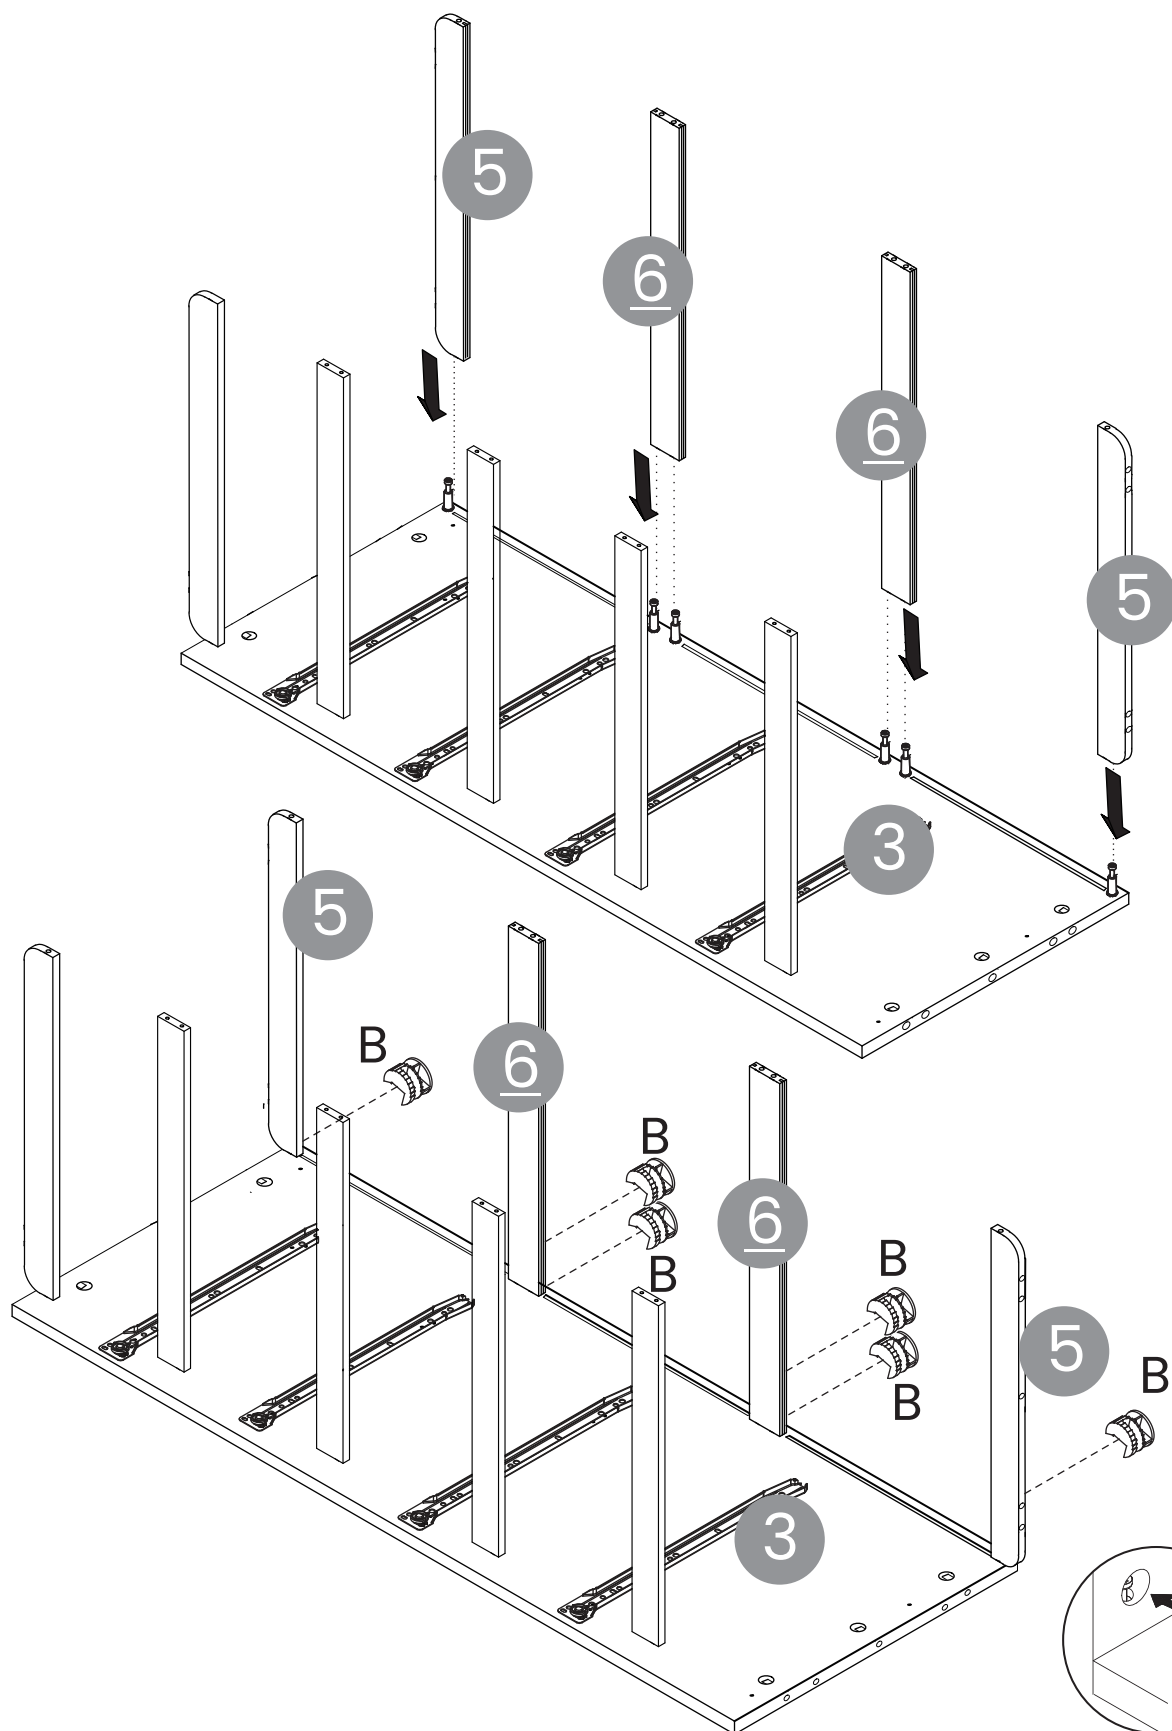

7

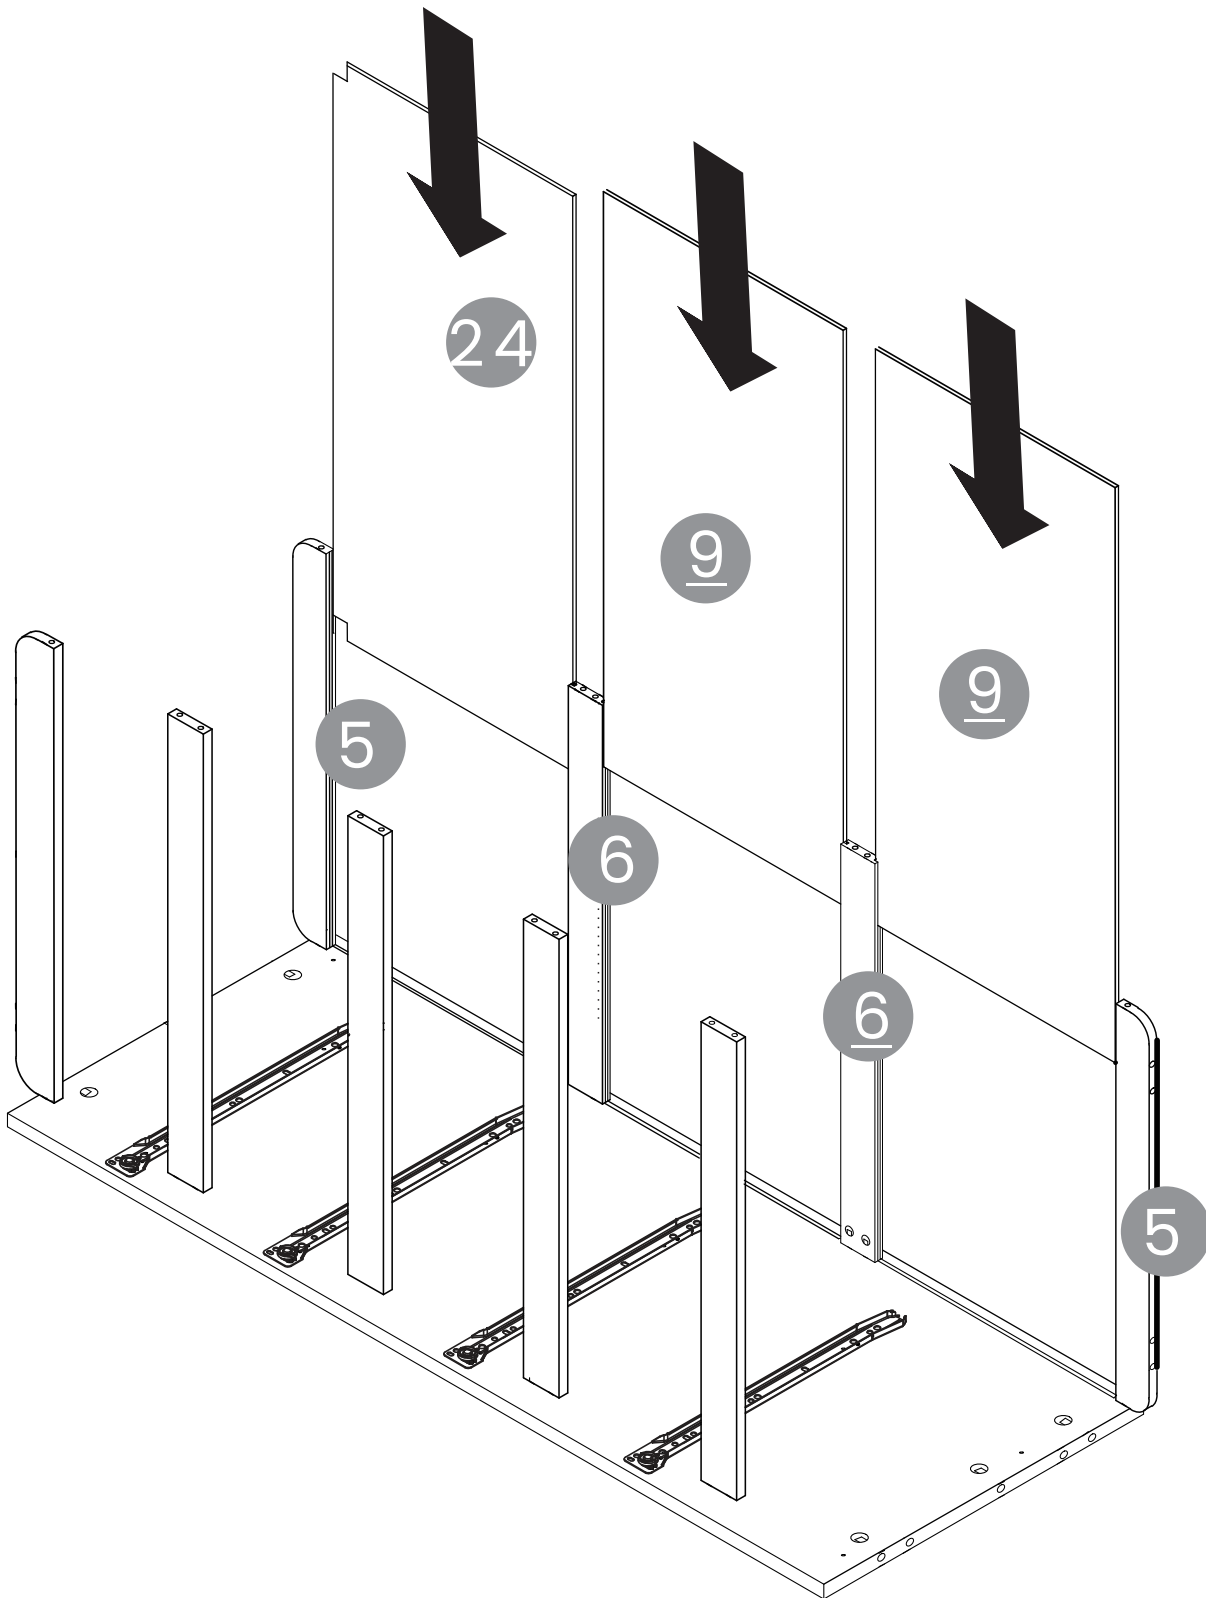


8

B x 15



Ø15 x 11 mm

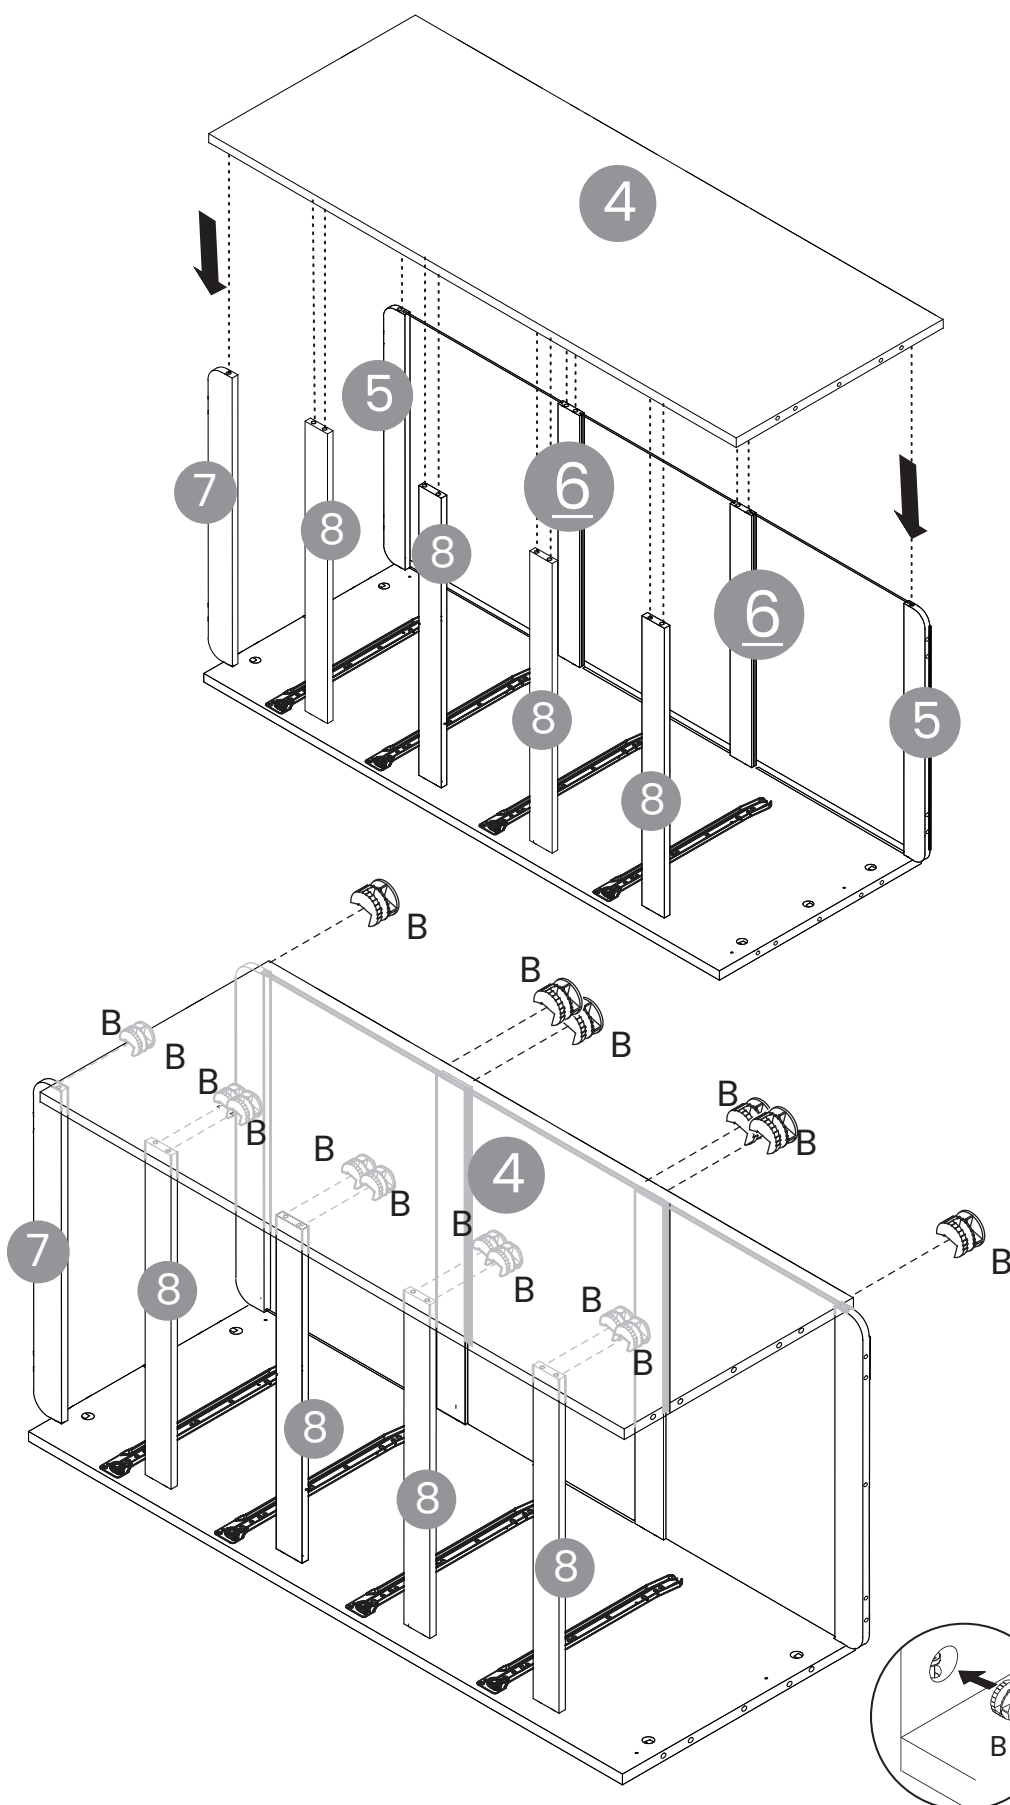


9


A x 2




Ø 6 x 35 mm



A

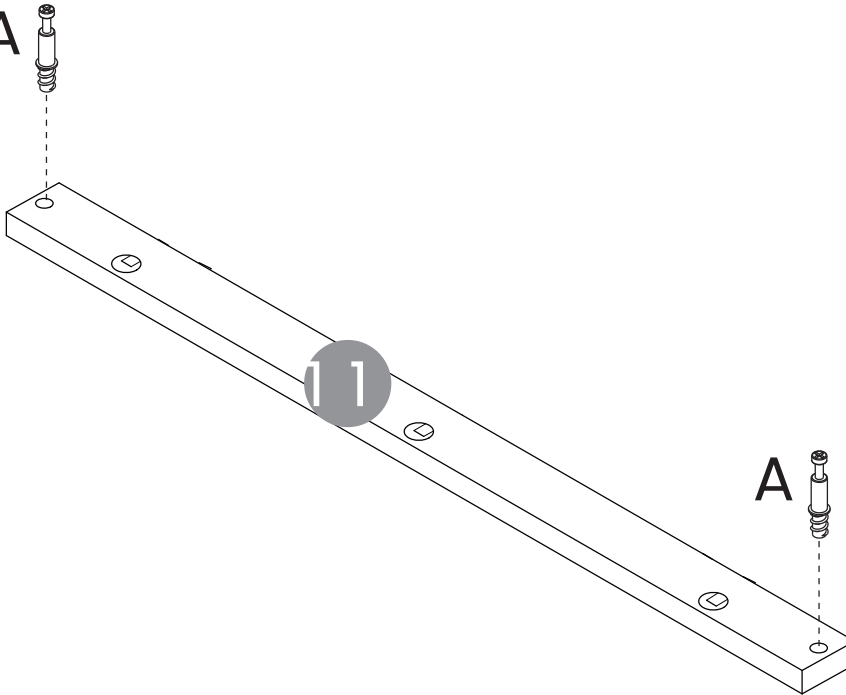

A




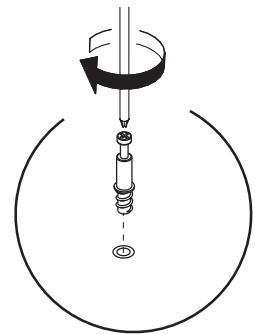


10


B x 2



Ø 15 x 11 mm

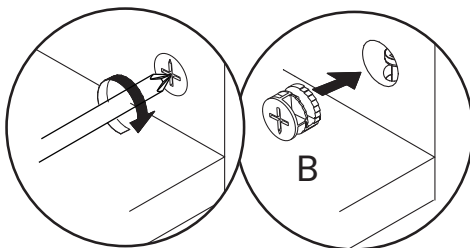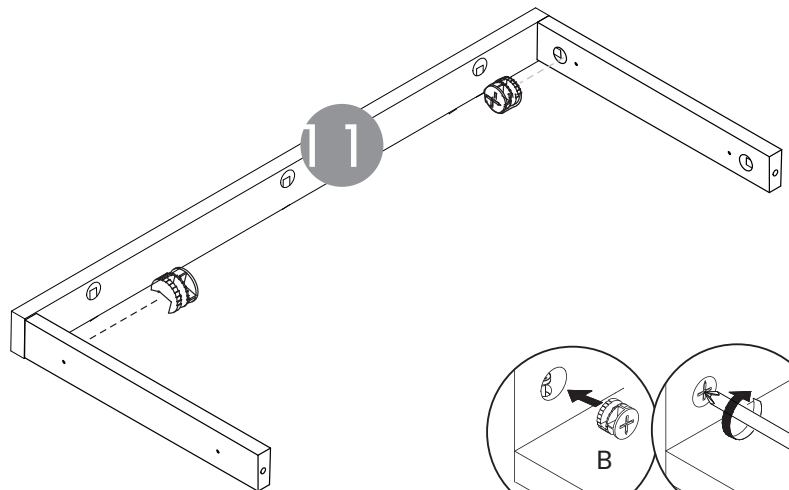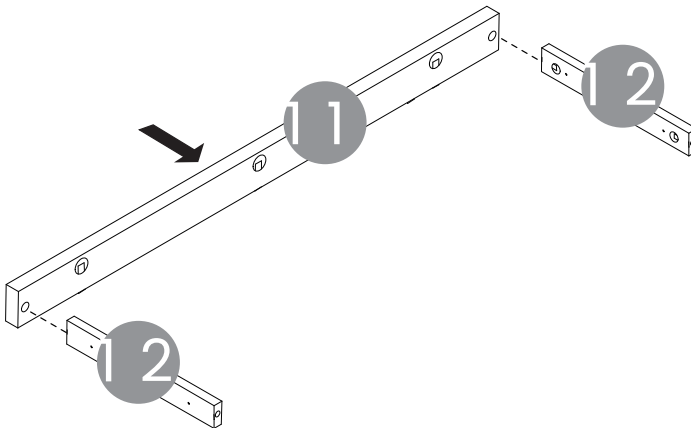



B

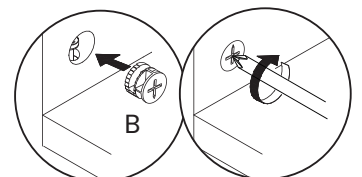

B

11

A x 4
Ø 6 x 35 mm

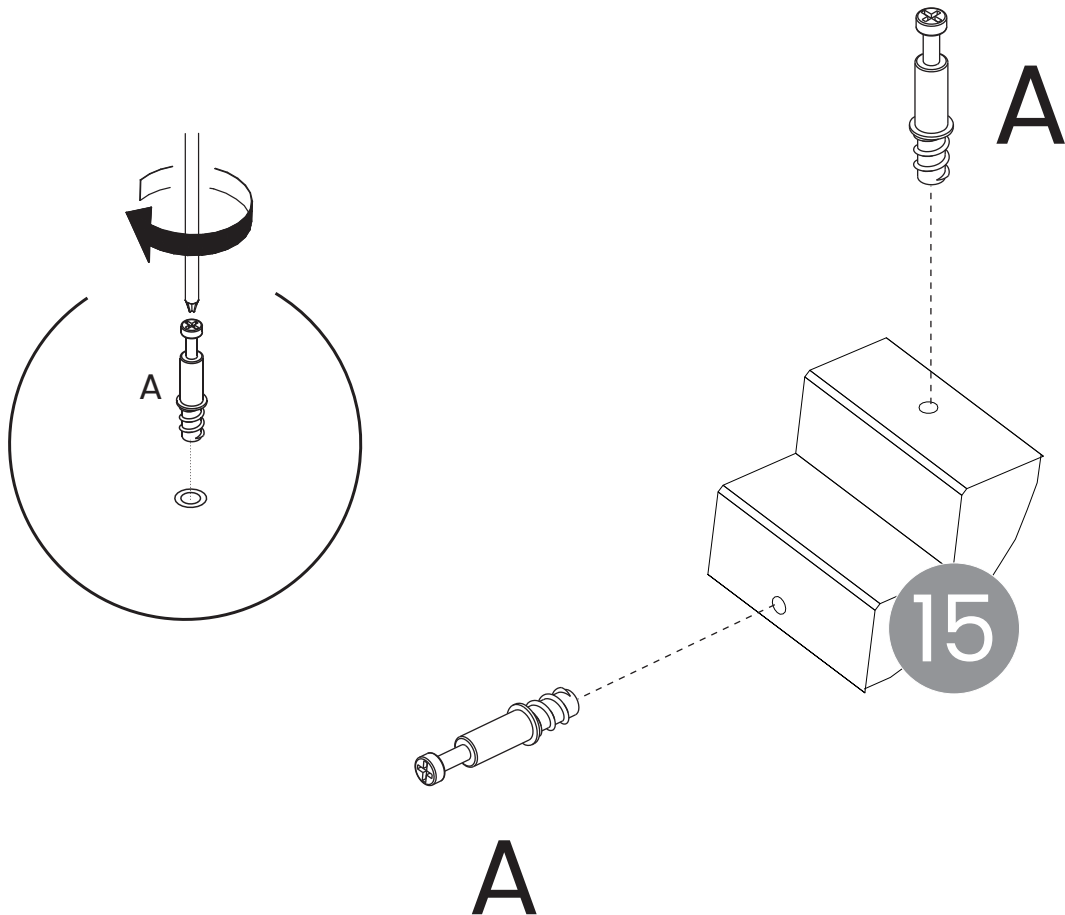




(*2) Please repeat this step twice.

12

B x 2



Ø15 x 11 mm


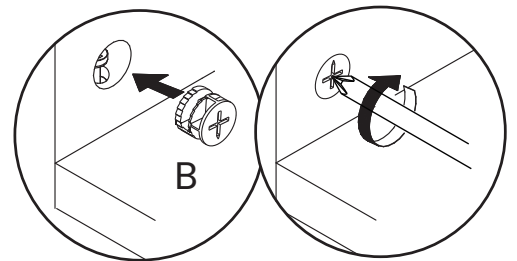
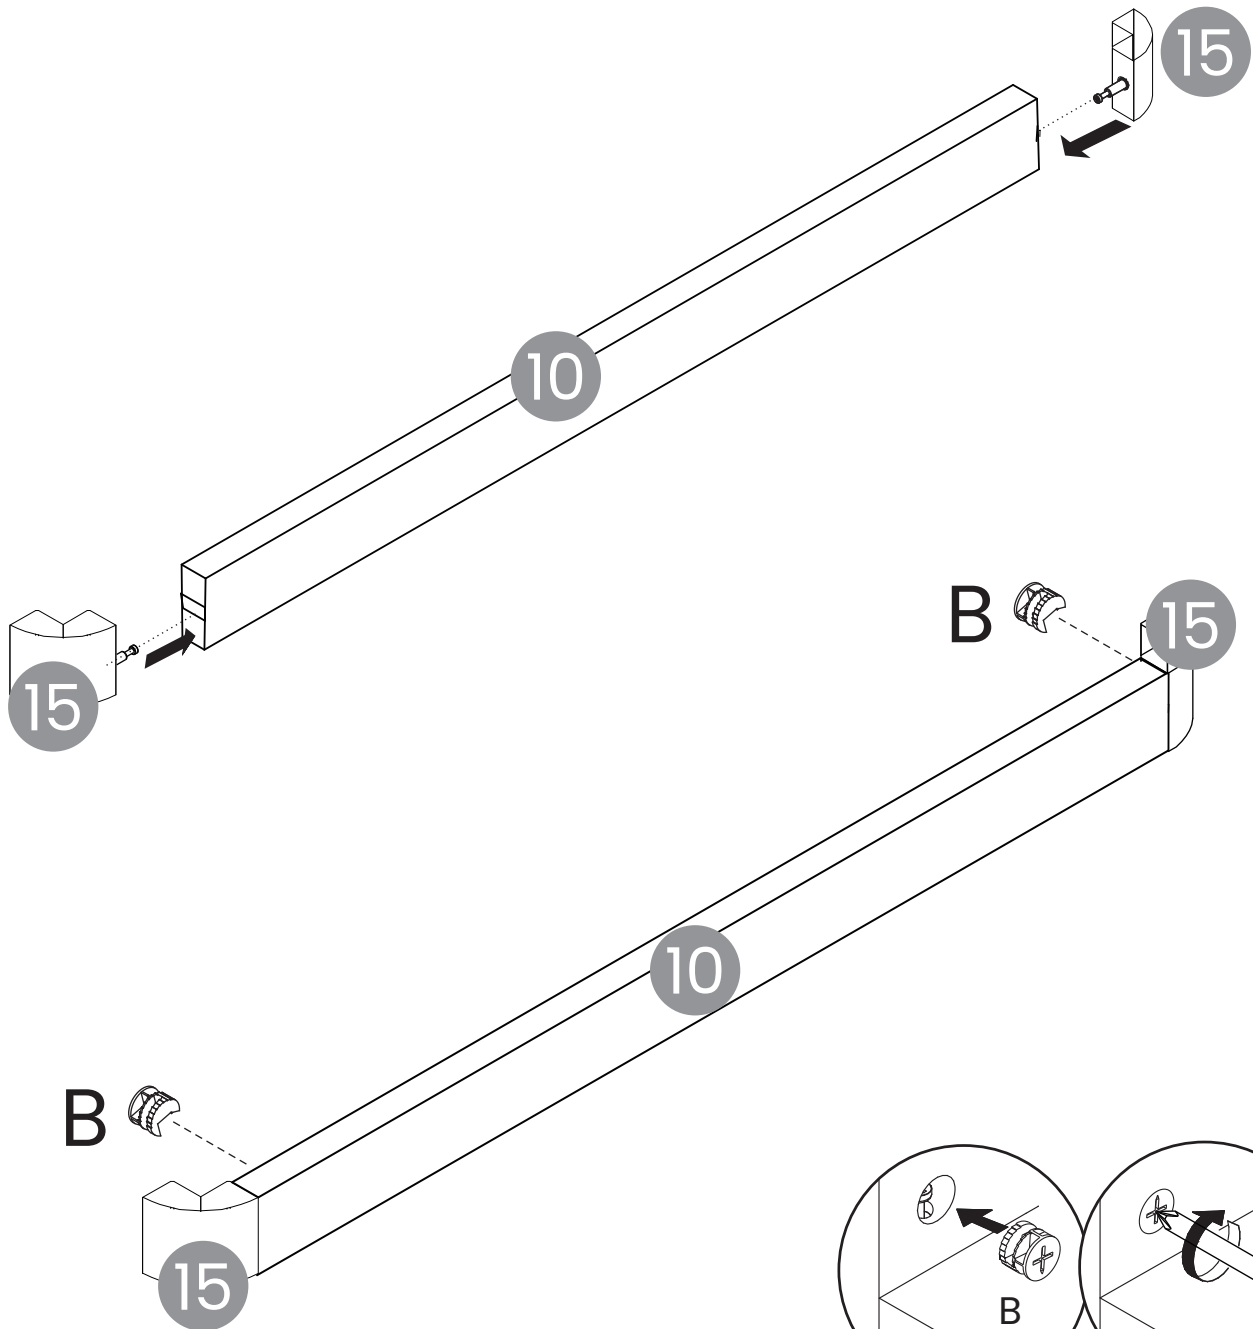



13

B x 2




Ø15 x 11 mm

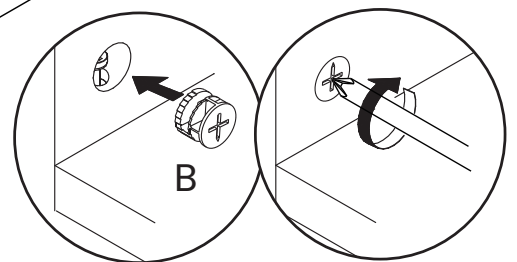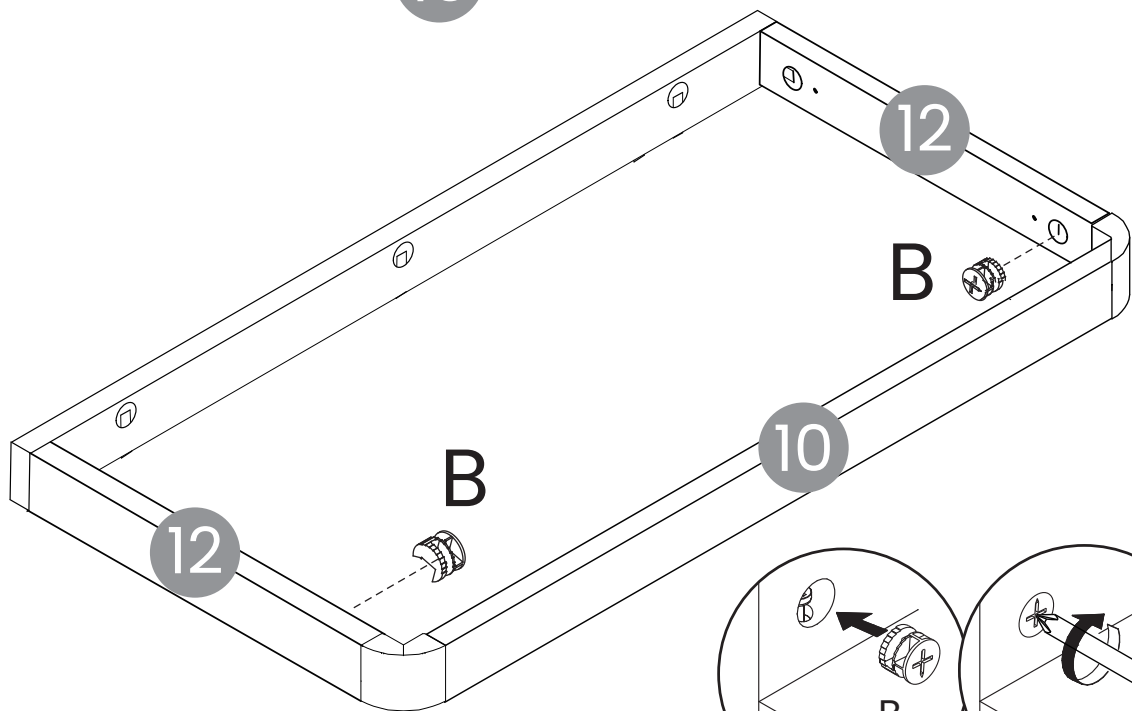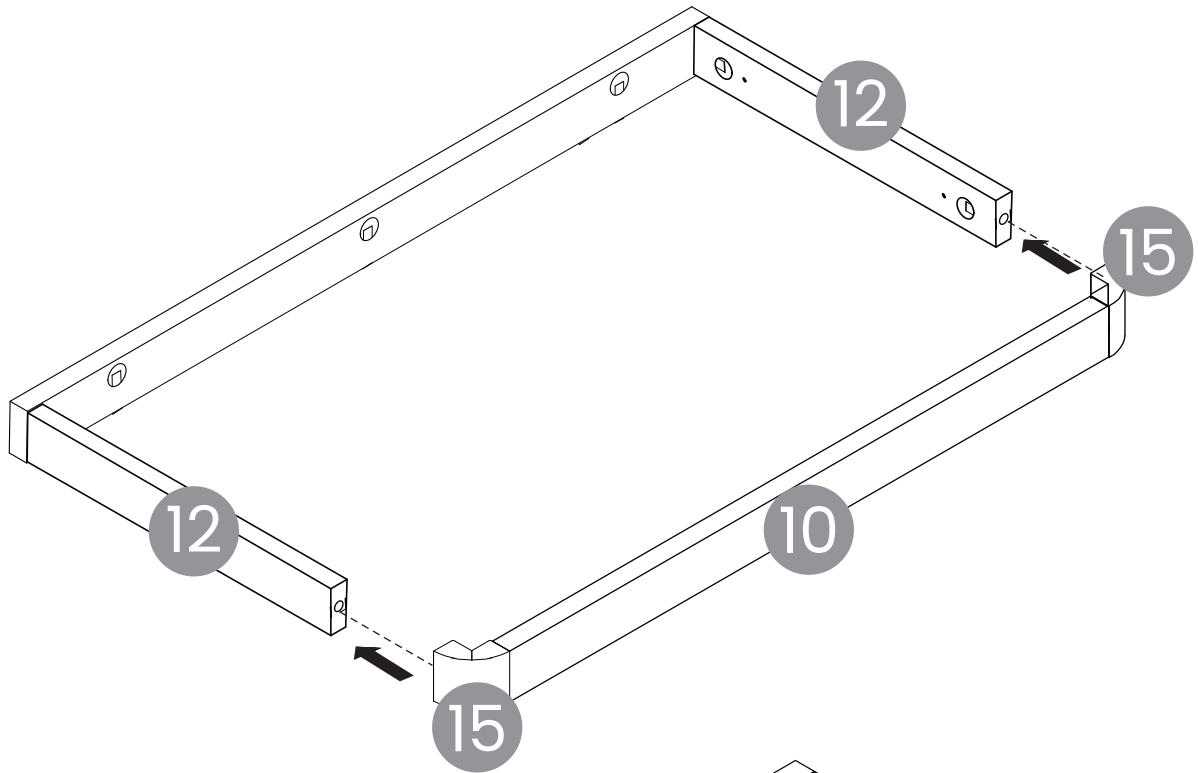

14

A x 10




Ø 6 x 35 mm

C x 4




Ø 8 x 30 mm

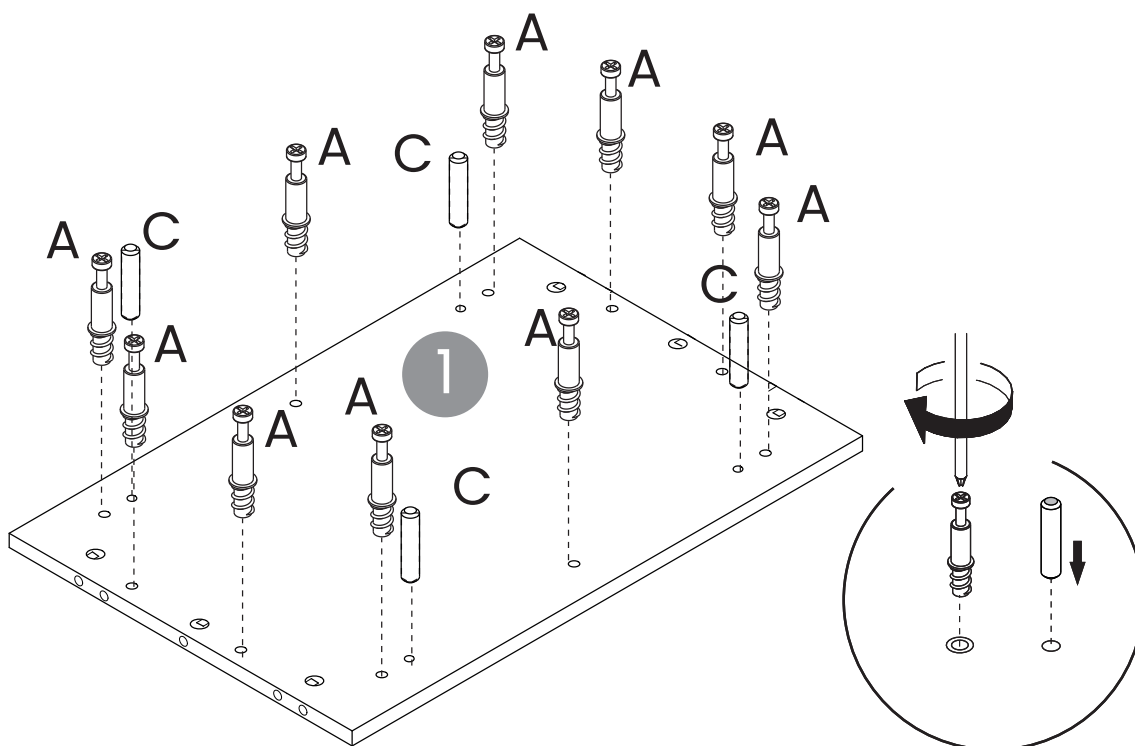

15

A x 12




Ø 6 x 35 mm

C x 8



Ø 8 x 30 mm

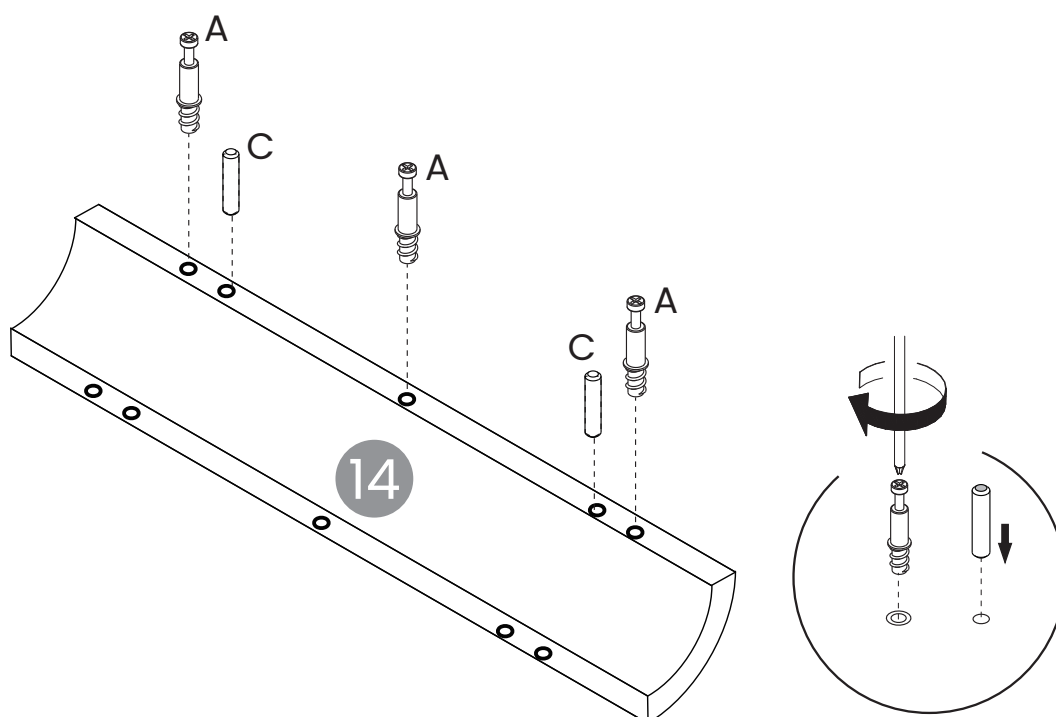



(*4) Please repeat this step four times.

16

B x 6



Ø 15 x 11 mm

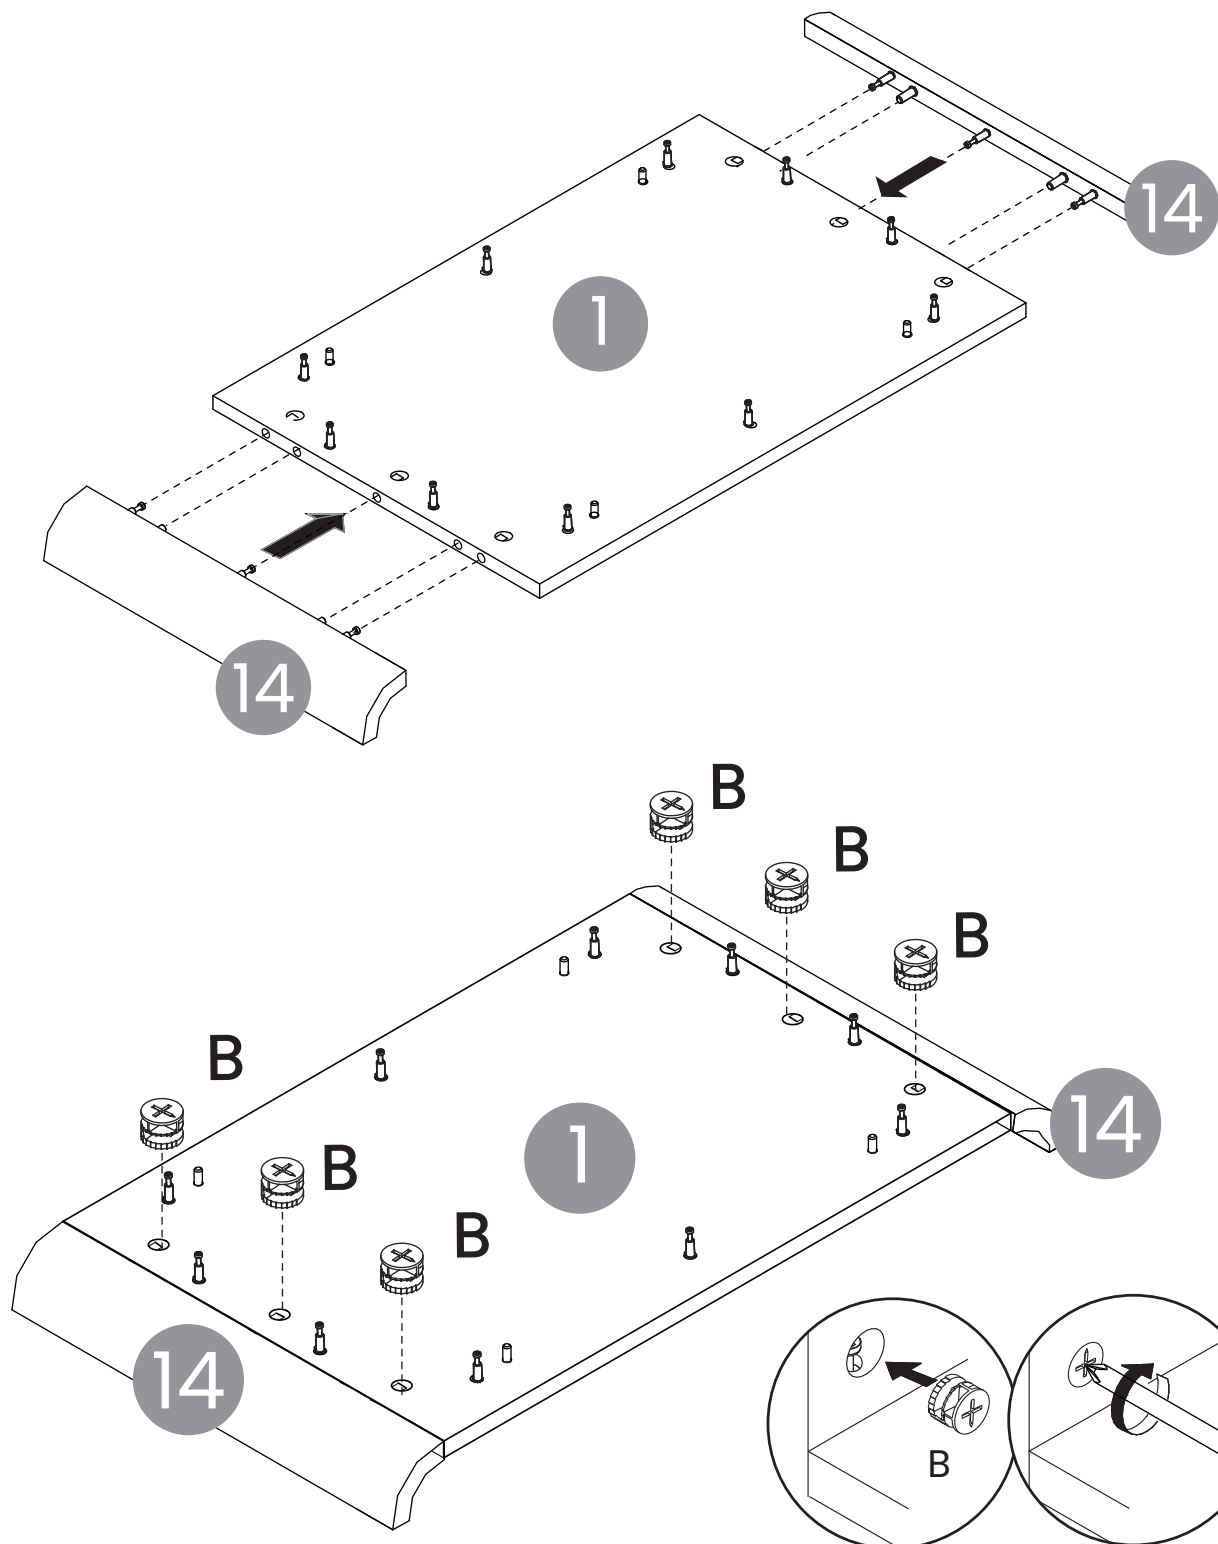



17

B x 6



Ø 15 x 11 mm



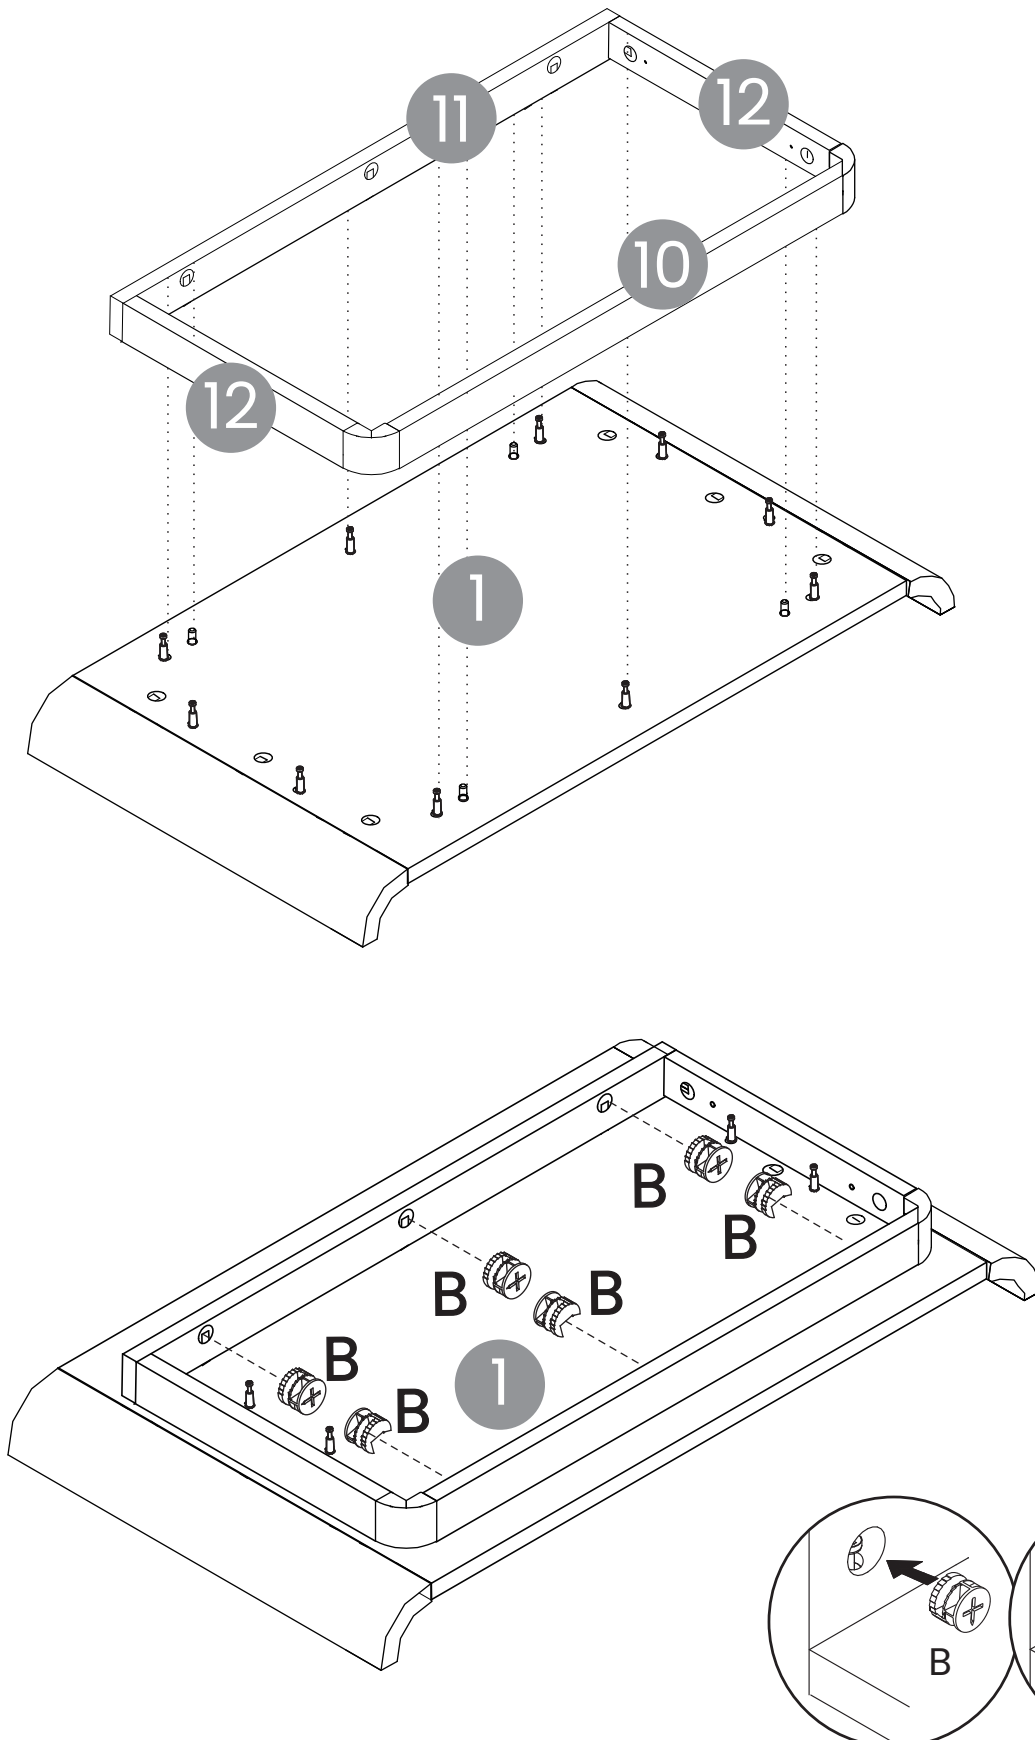



18

B x 4



Ø 15 x 11 mm

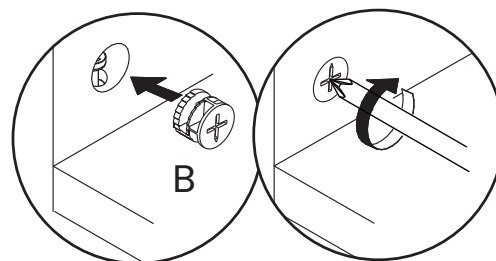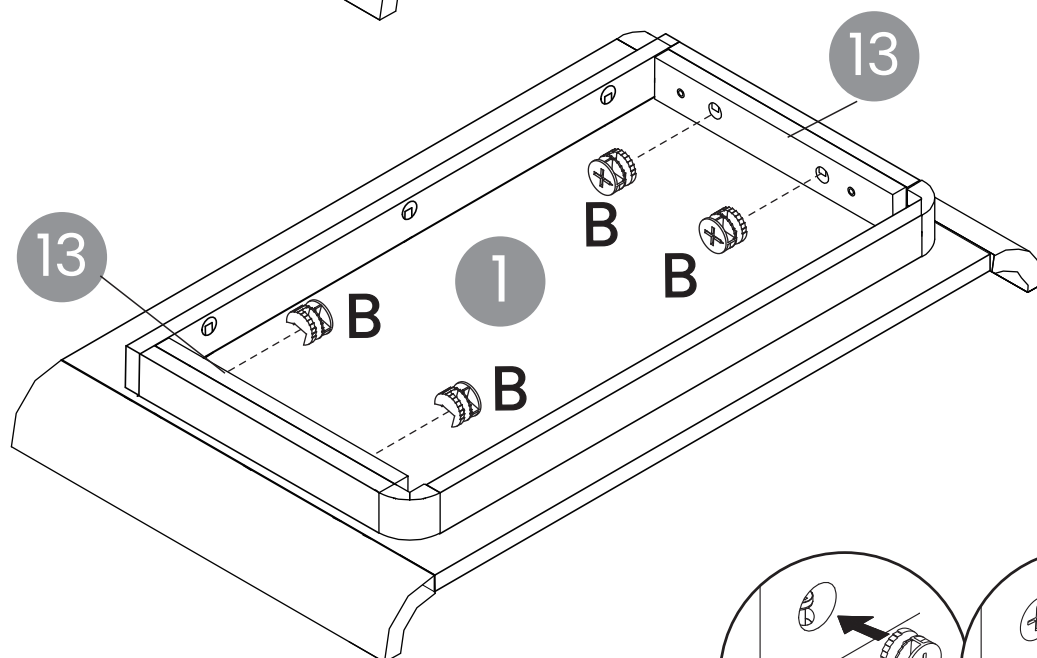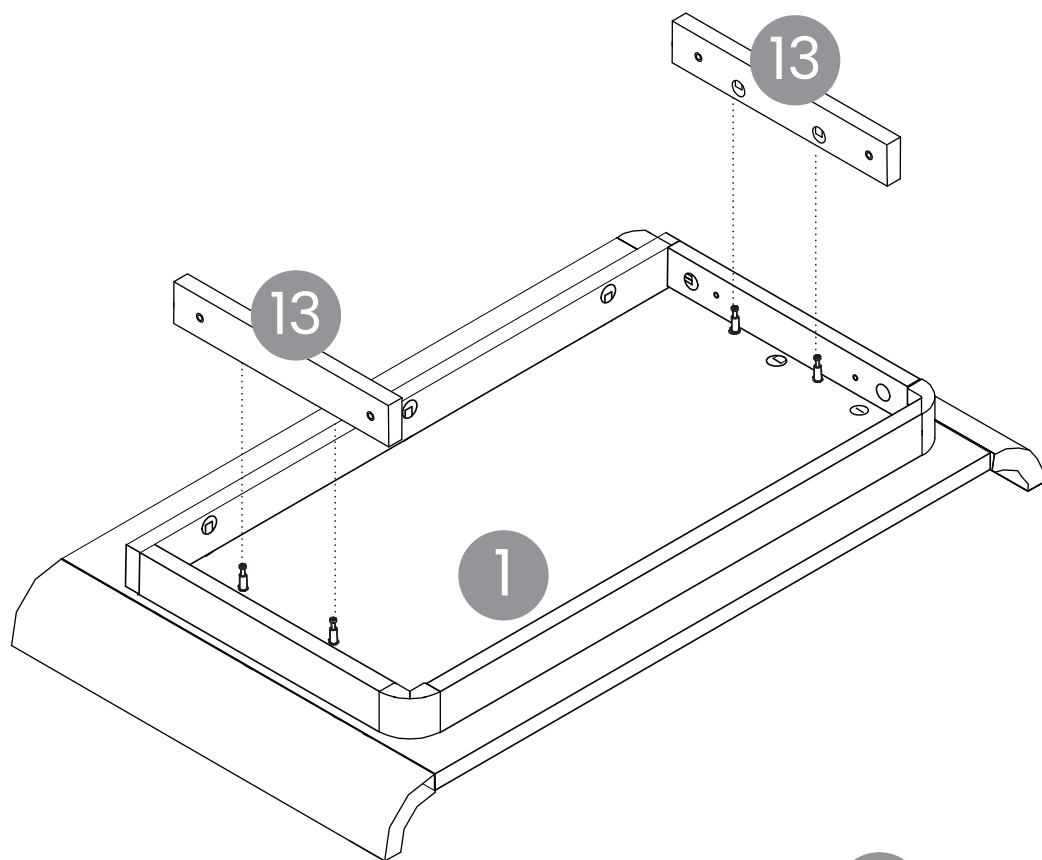



19

Gx4



Ø 4 x 25 mm



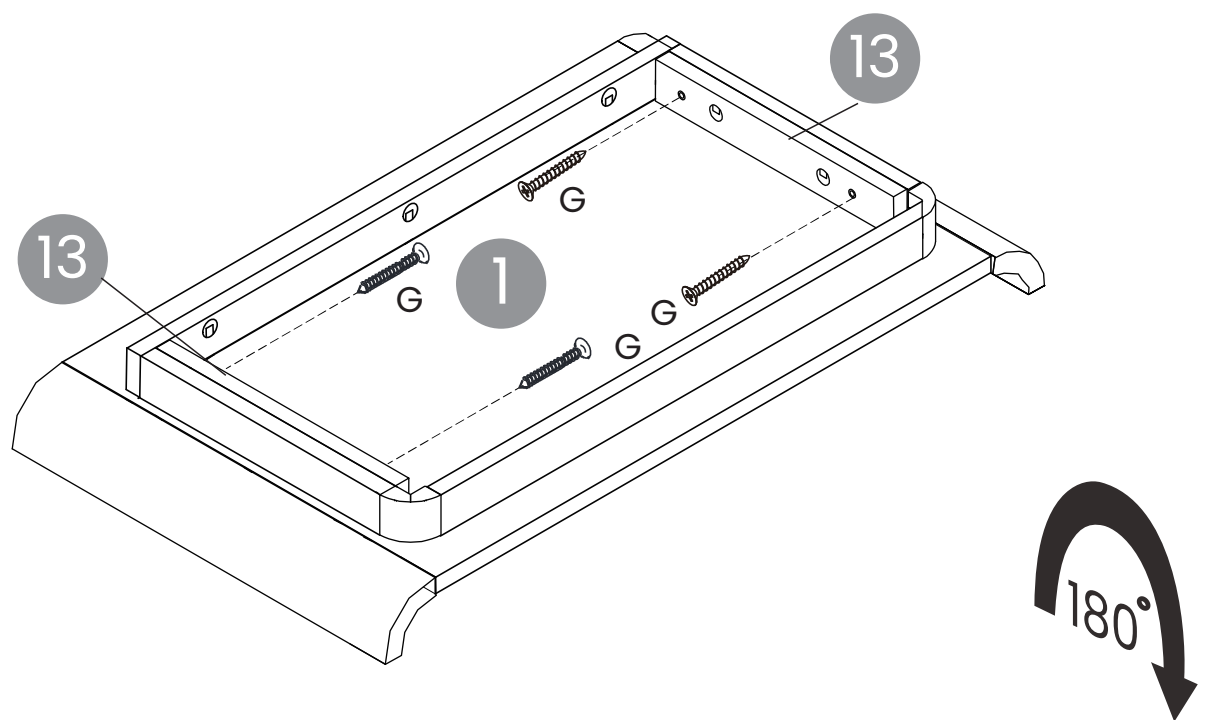

20

A x9





Ø 5 x 35 mm

C x6



Ø 8 x 30 mm



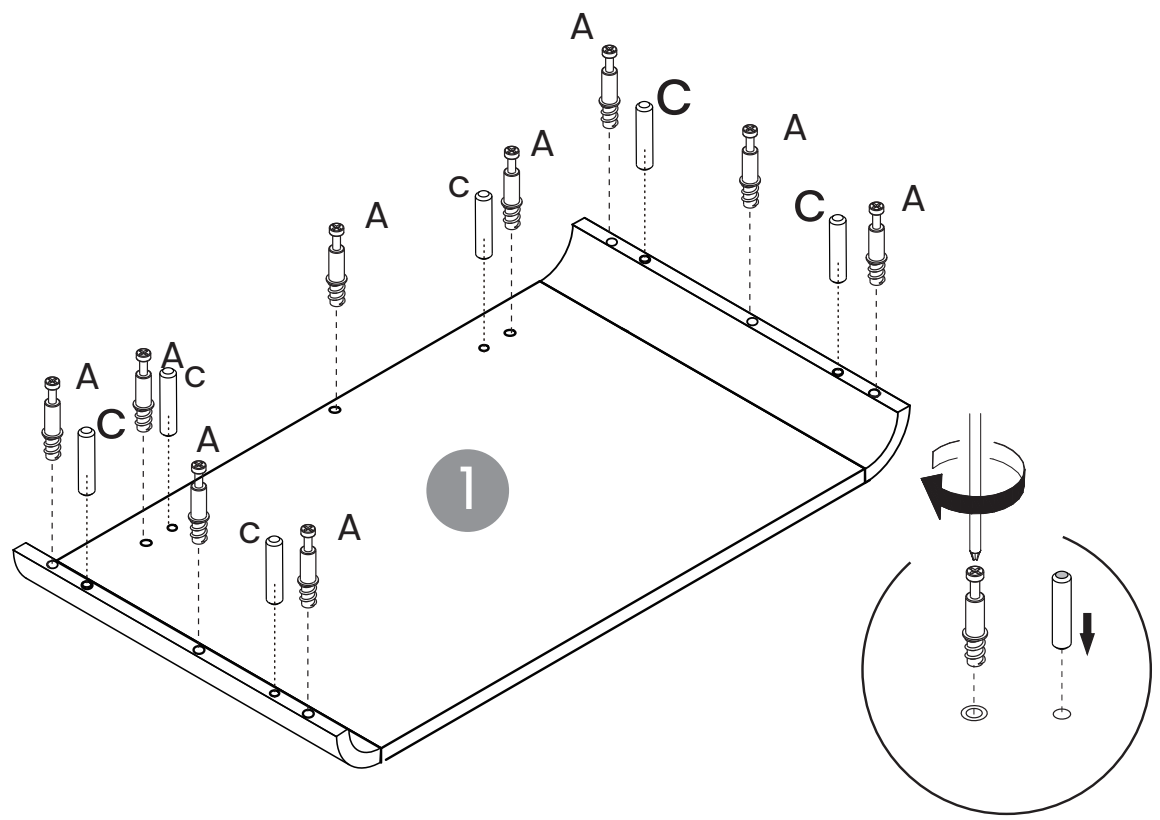


21

B x 9



Ø15 x 11 mm



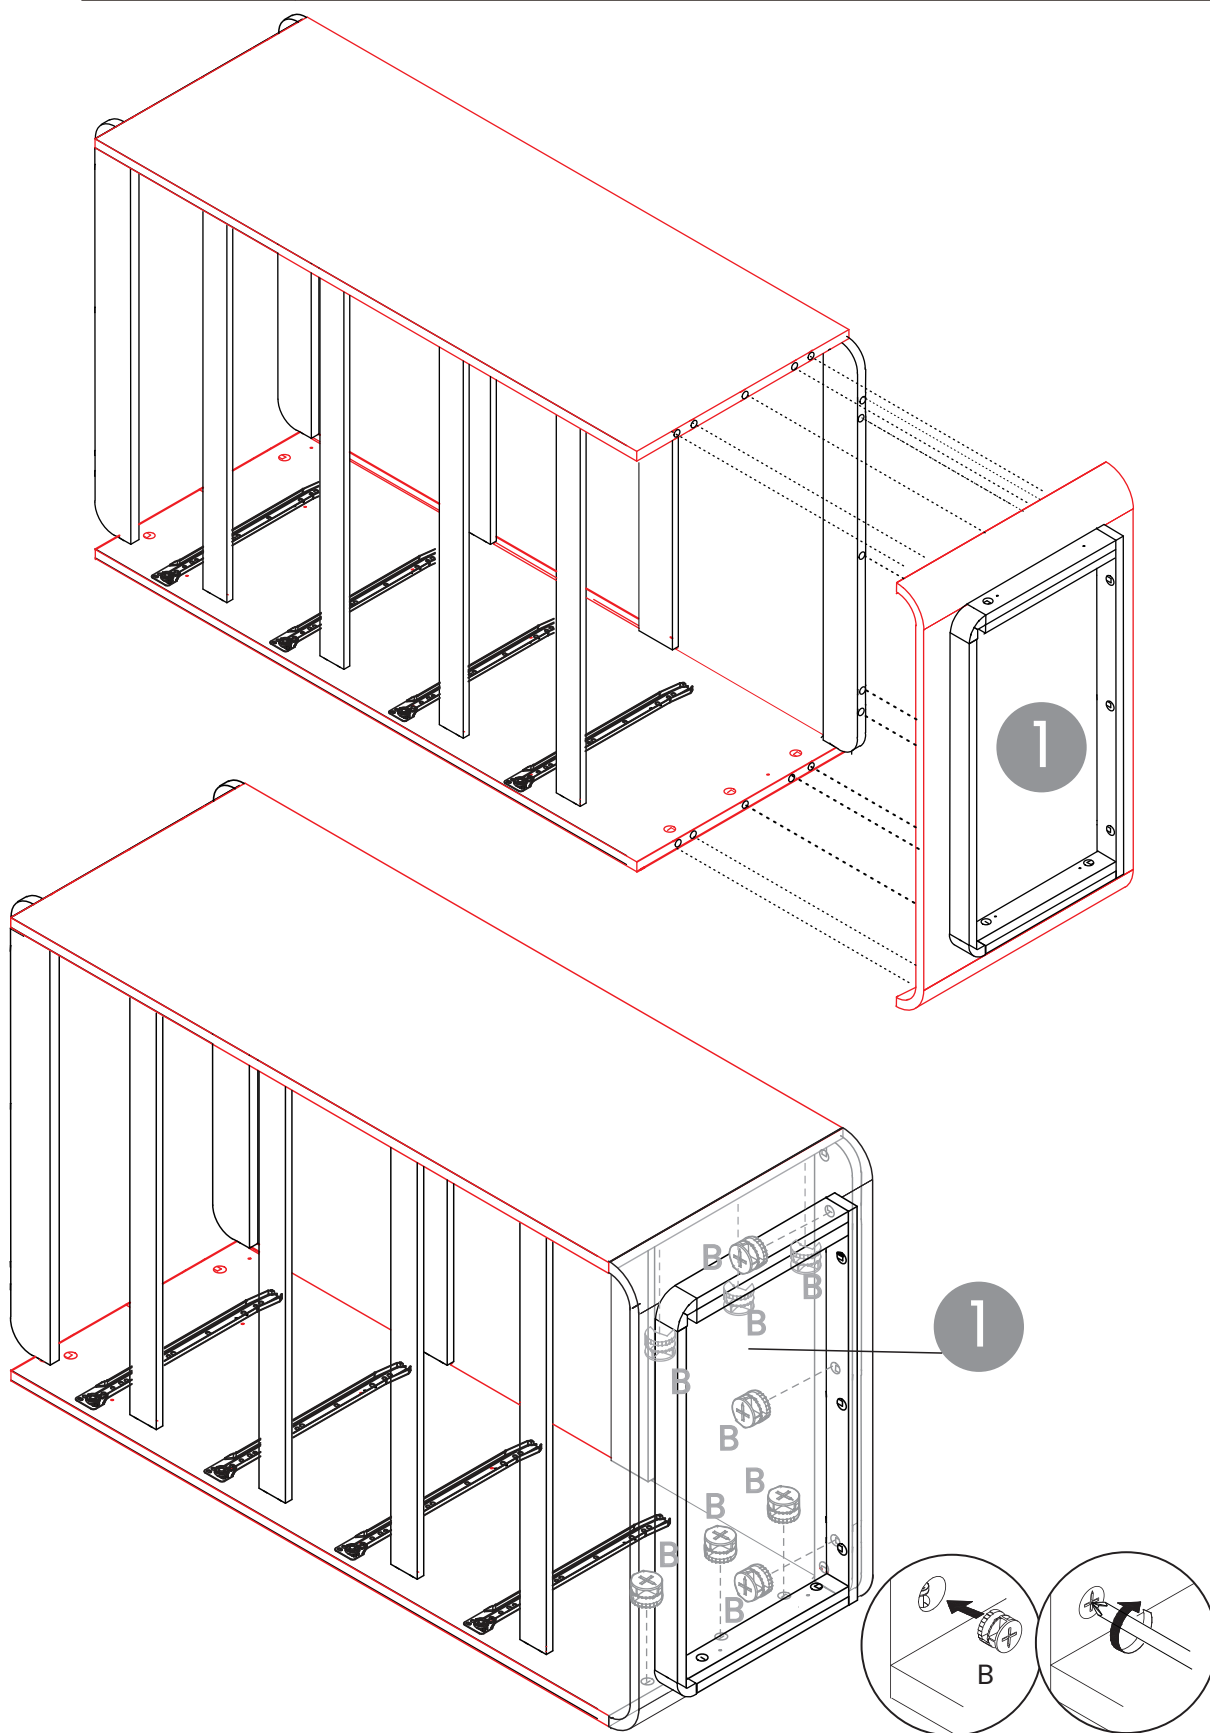


22

B x 6






Ø15 x 11 mm

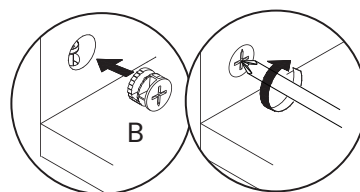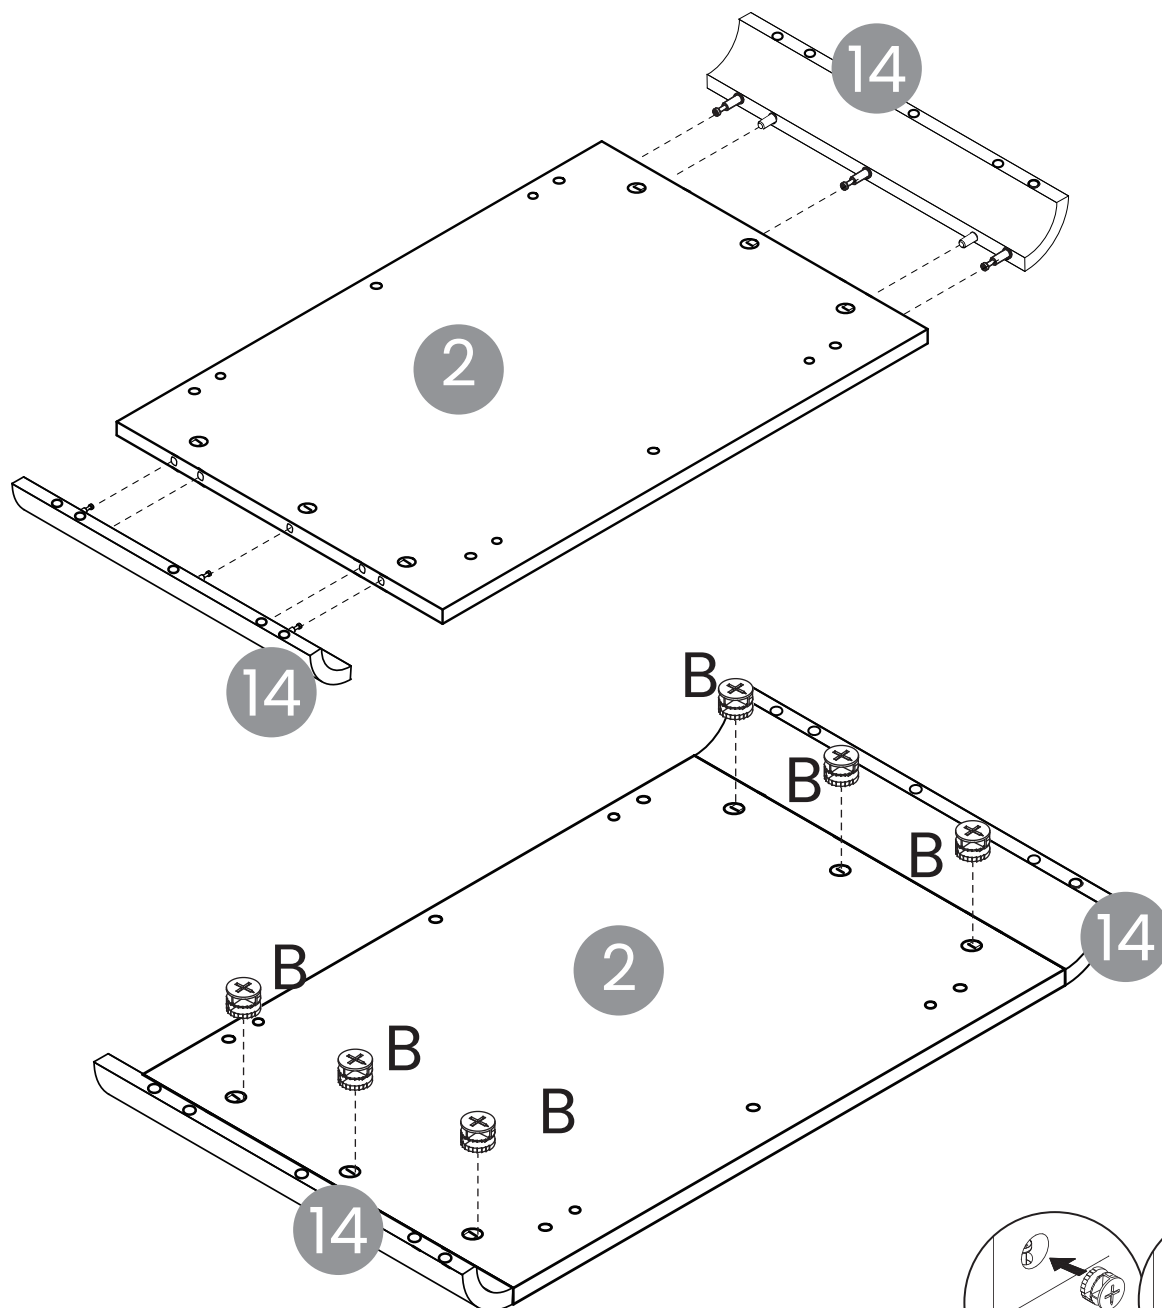

23

A x 12

Ø 5 x 35 mm

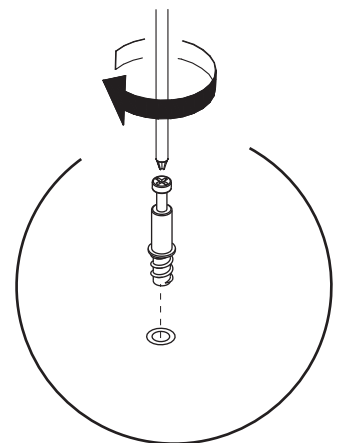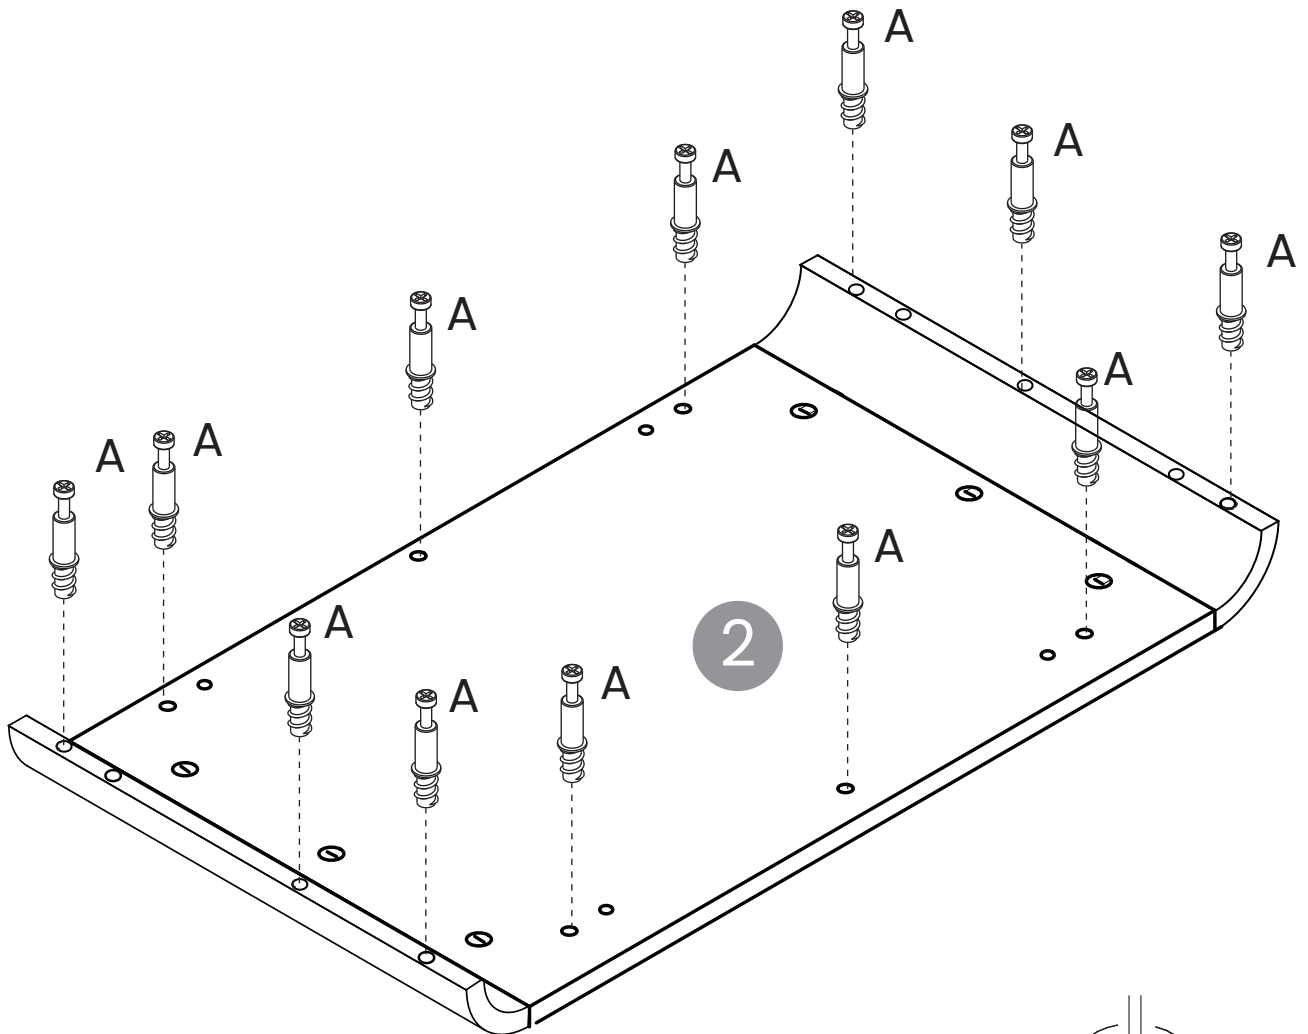



24

C x 8



Ø 8 x 30 mm



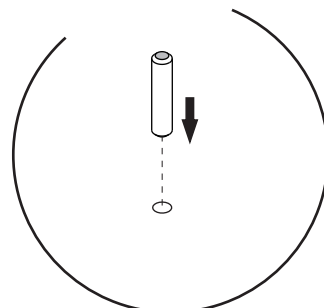
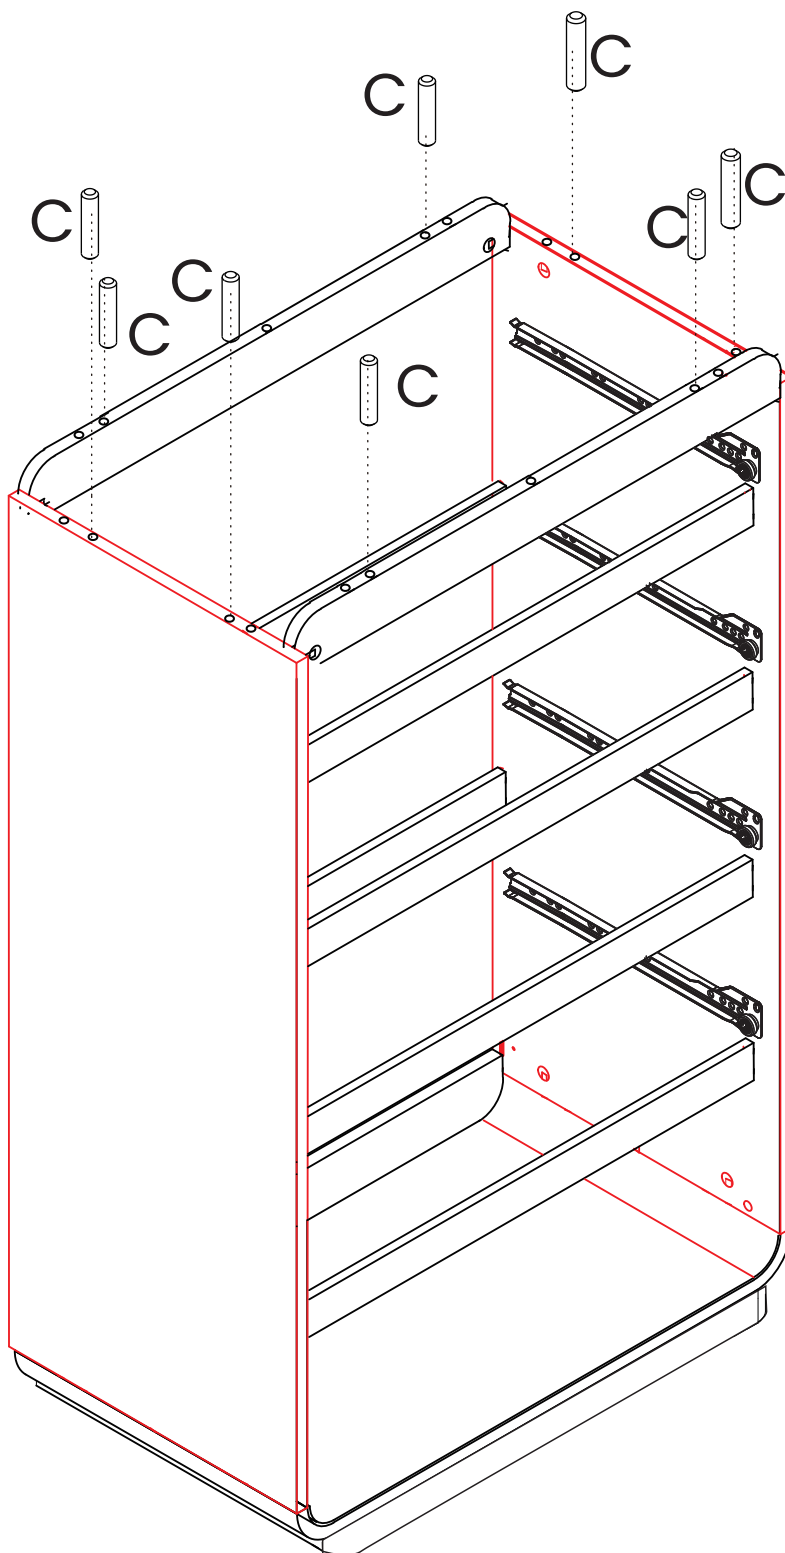


25

B x 12



Ø15 x 11 mm

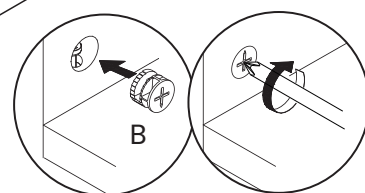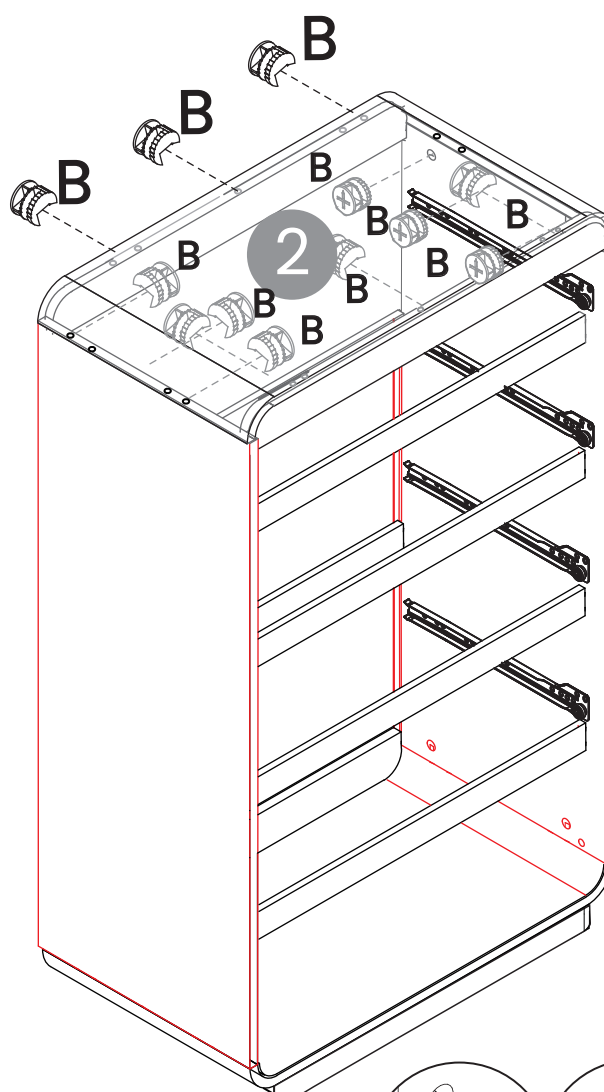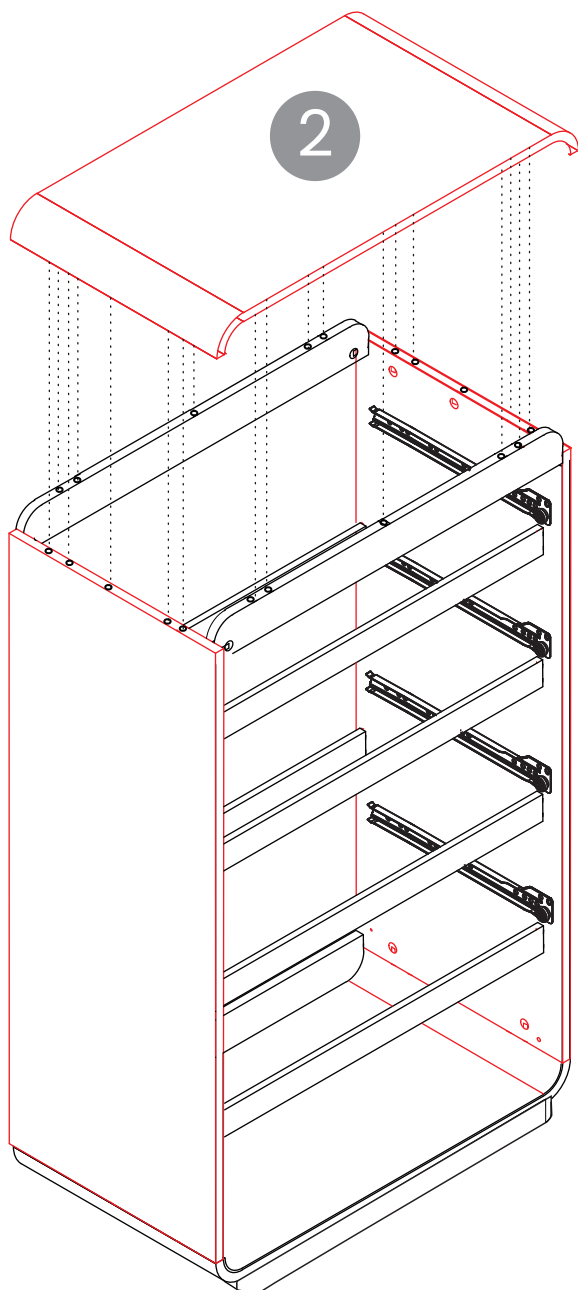

26

Dx1







L=300mm

E x4




Ø 3 x 12 mm

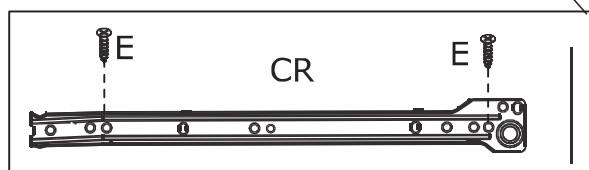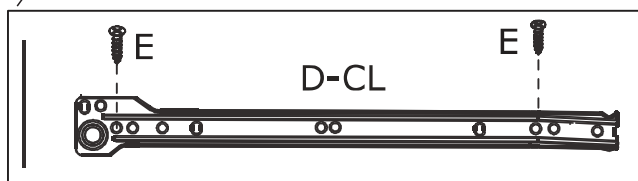
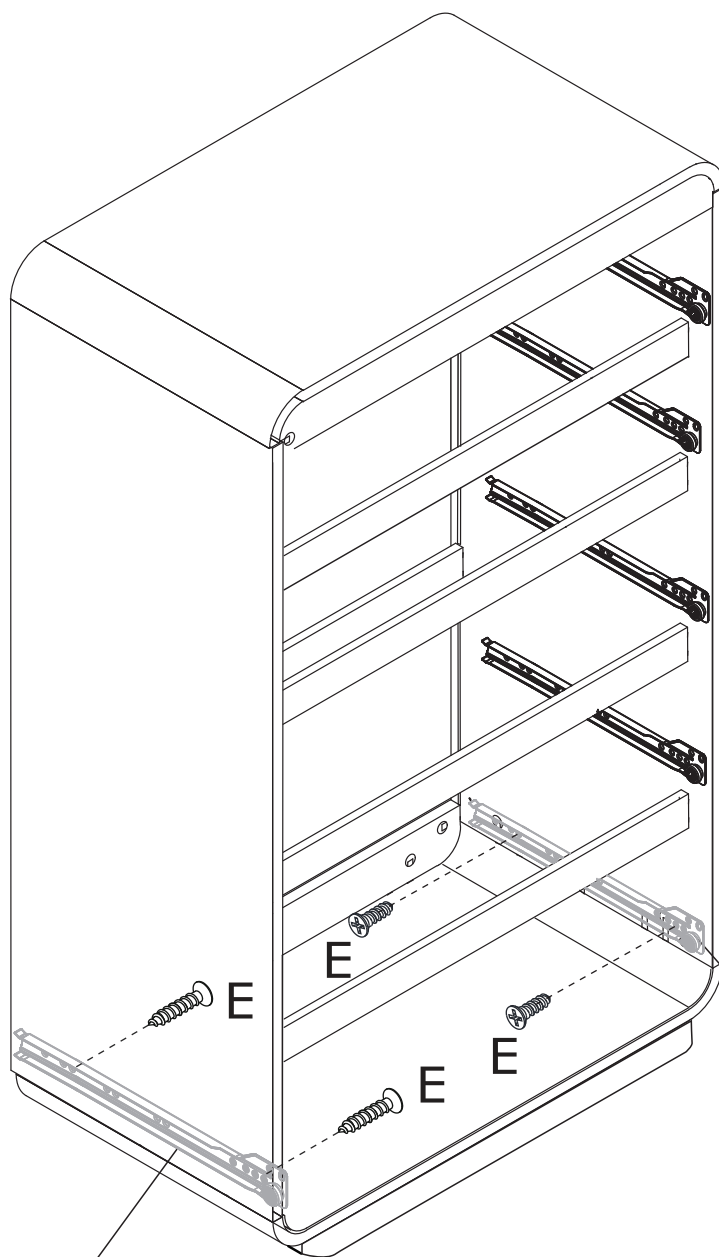



27

Ax1 0



Ø 5 x 35 mm

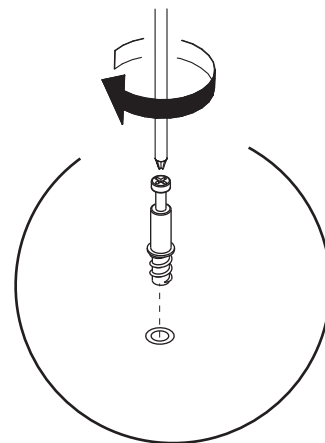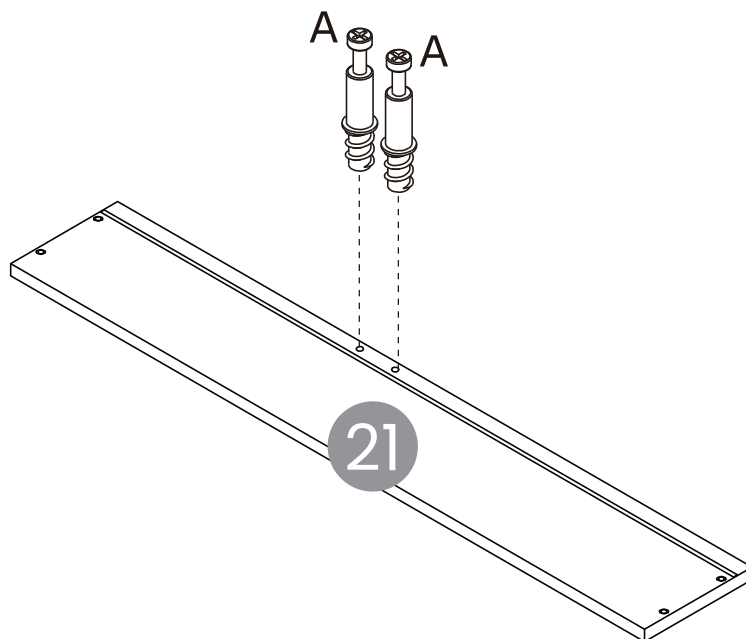

(*5) Please repeat this step five times.

28

Kx20





Ø 4 x 30 mm

Jx1 0





Ø 15 x 9.5 mm

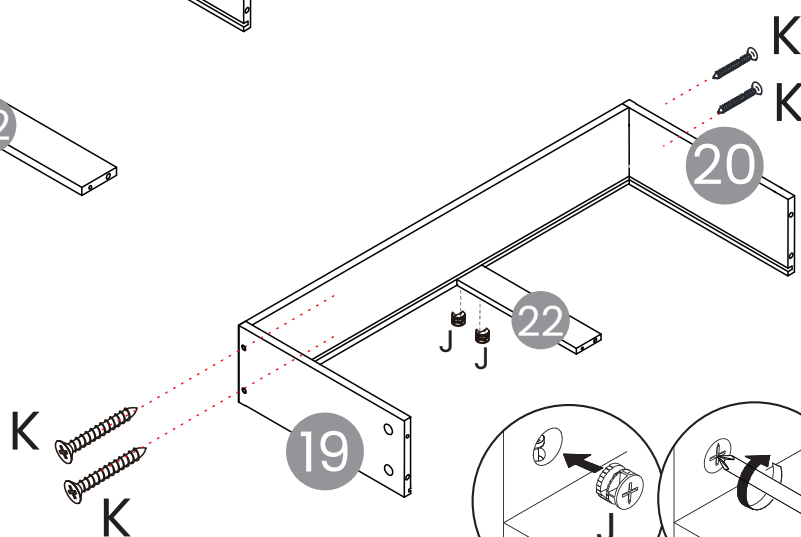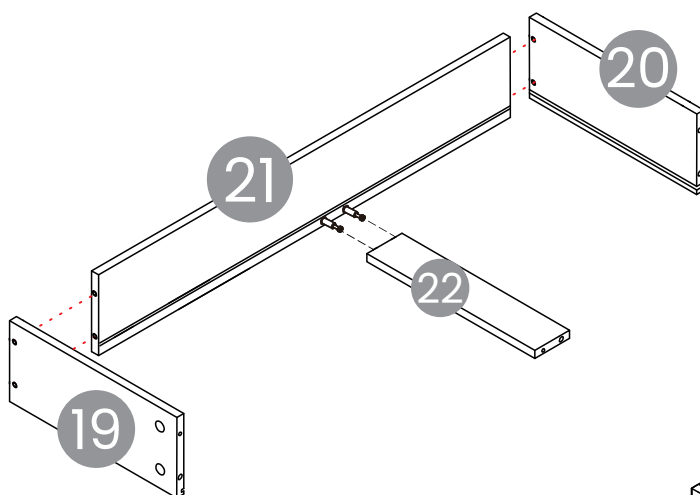




(*5) Please repeat this step five times.

29

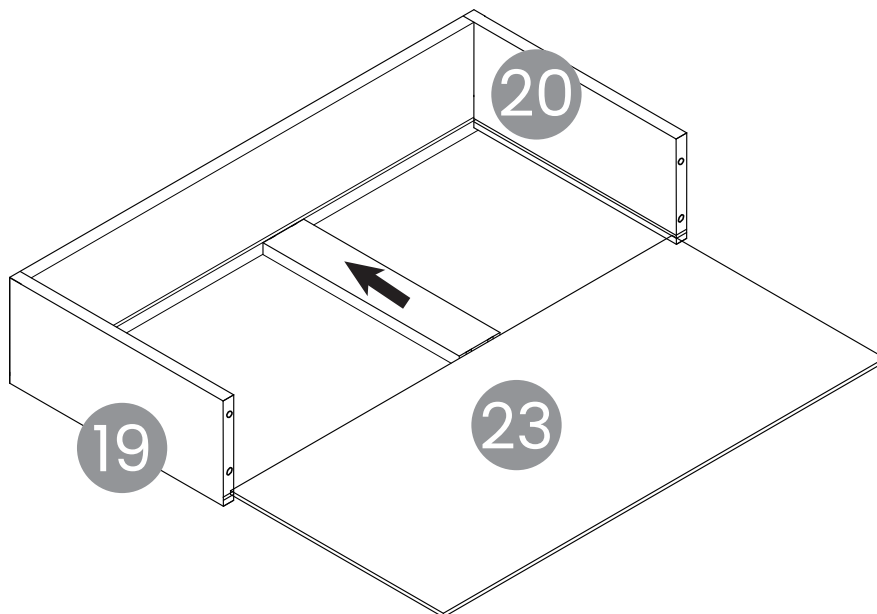

(*5) Please repeat this step five times.

30

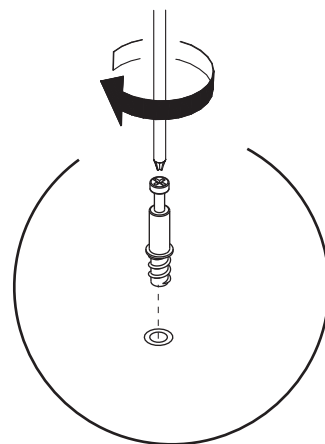
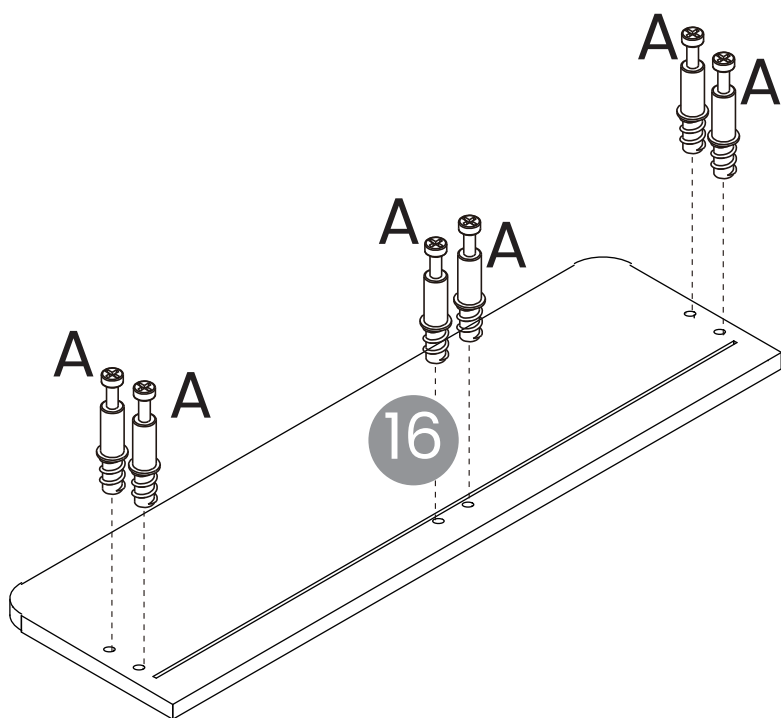
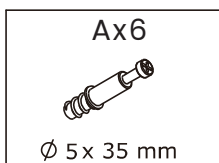


31

Jx6



Ø 15 x 9,5 mm

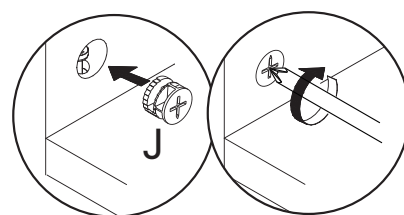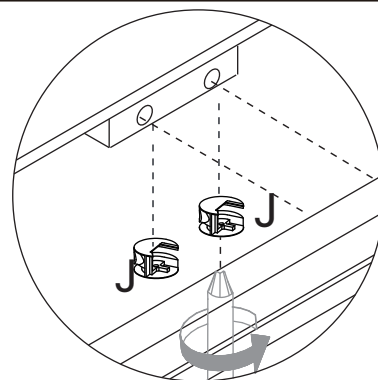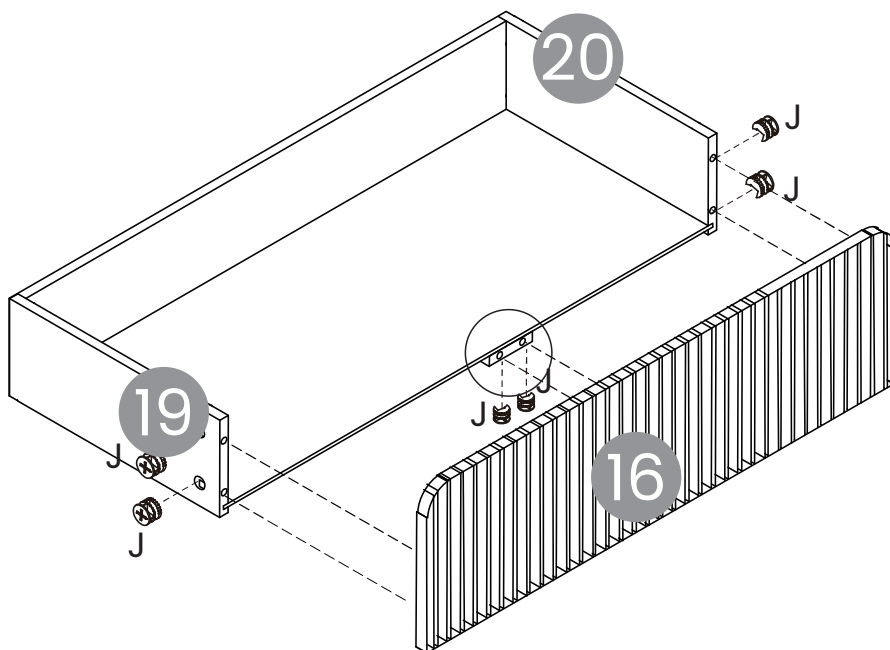

32

D x 1







L = 300 mm

E x 4





Ø 3 x 12 mm

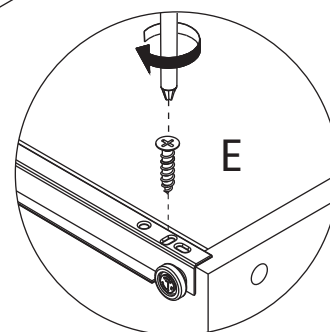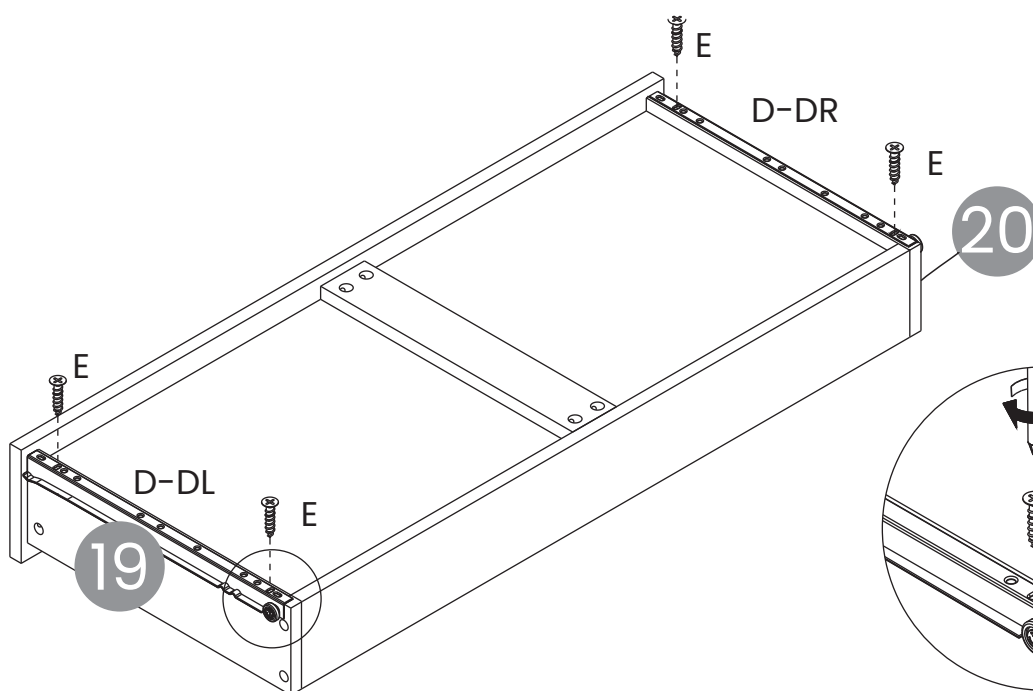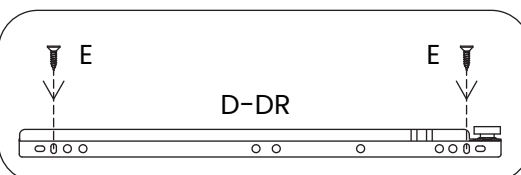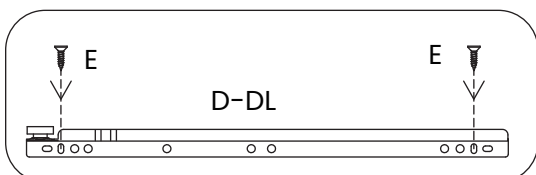

33



Ax1 8

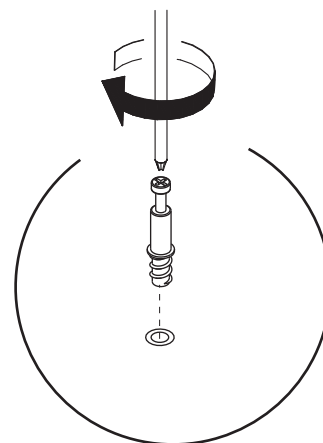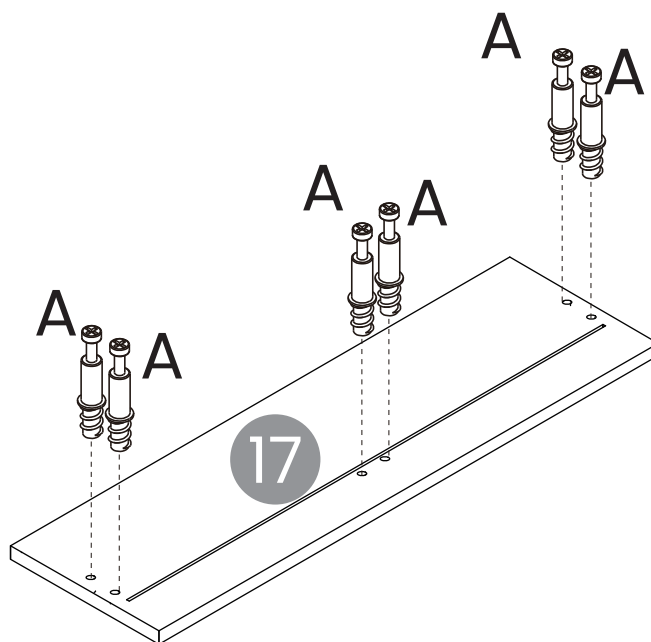

(*3) Please repeat this step three times.

34

Jx1 8

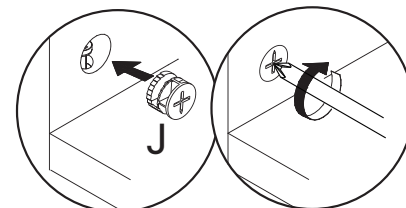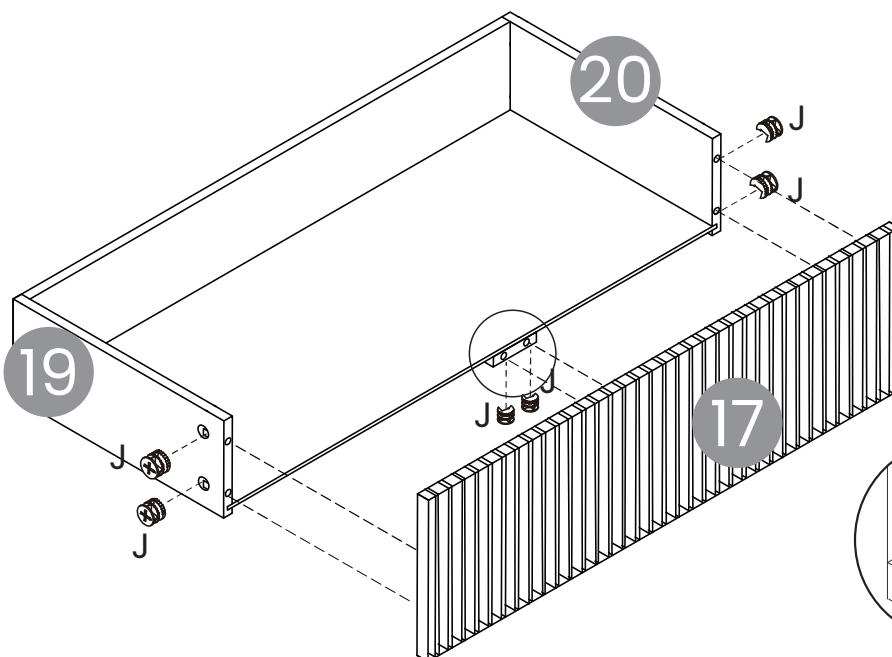

(*3) Please repeat this step three times.

35

D x 3







L = 300 mm

E x 12



Ø 3 x 12 mm

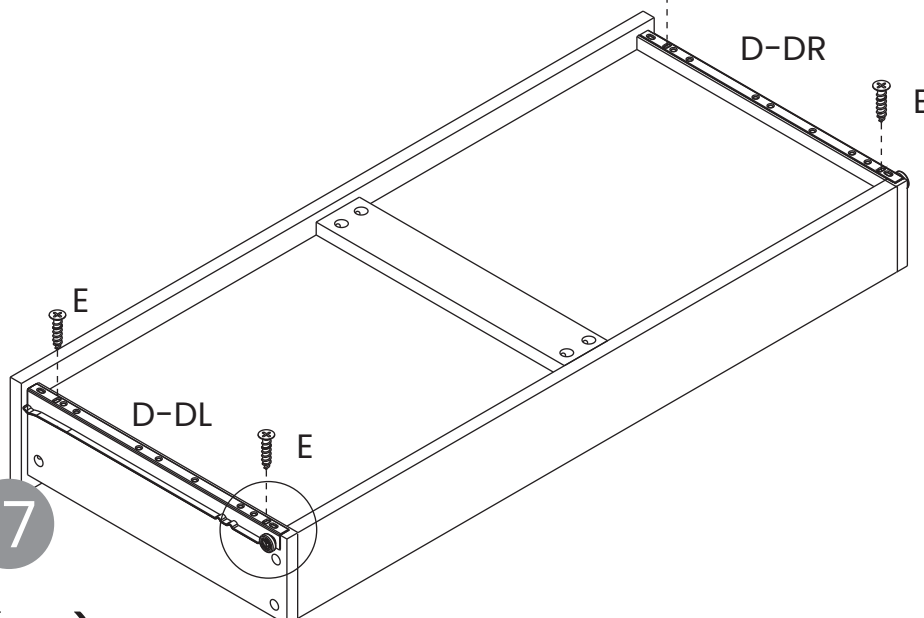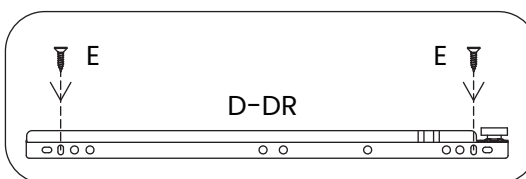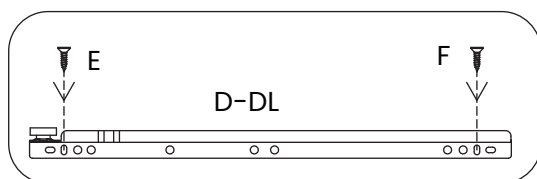

17


(*3) Please repeat this step three times.

36

A x 6



Ø 5 x 35 mm

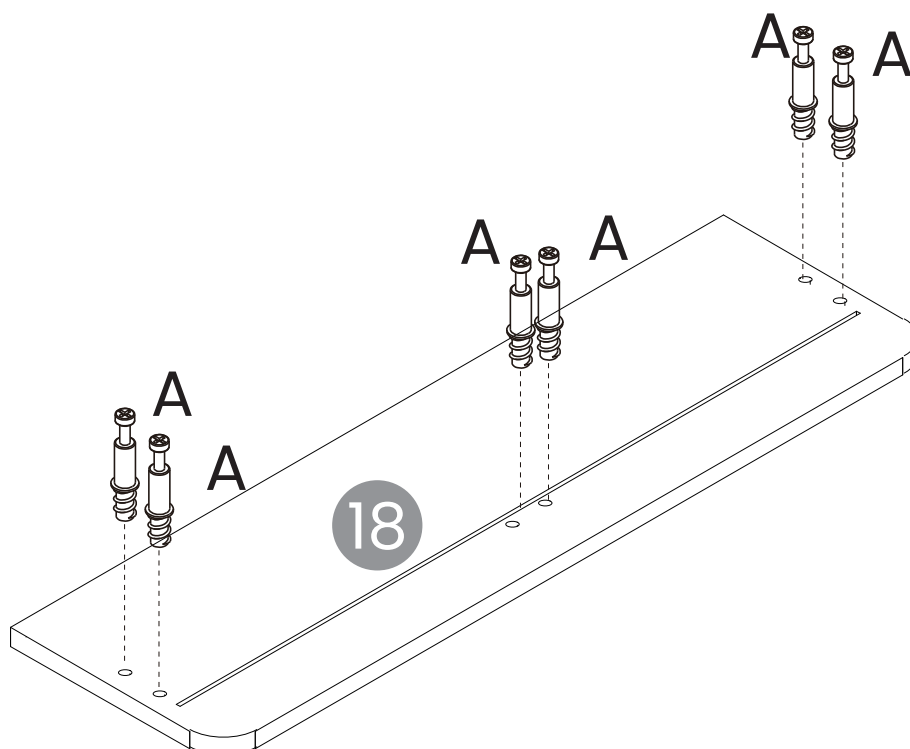



18

37

Jx6



Ø 15 x 9,5 mm

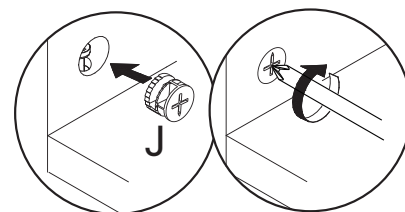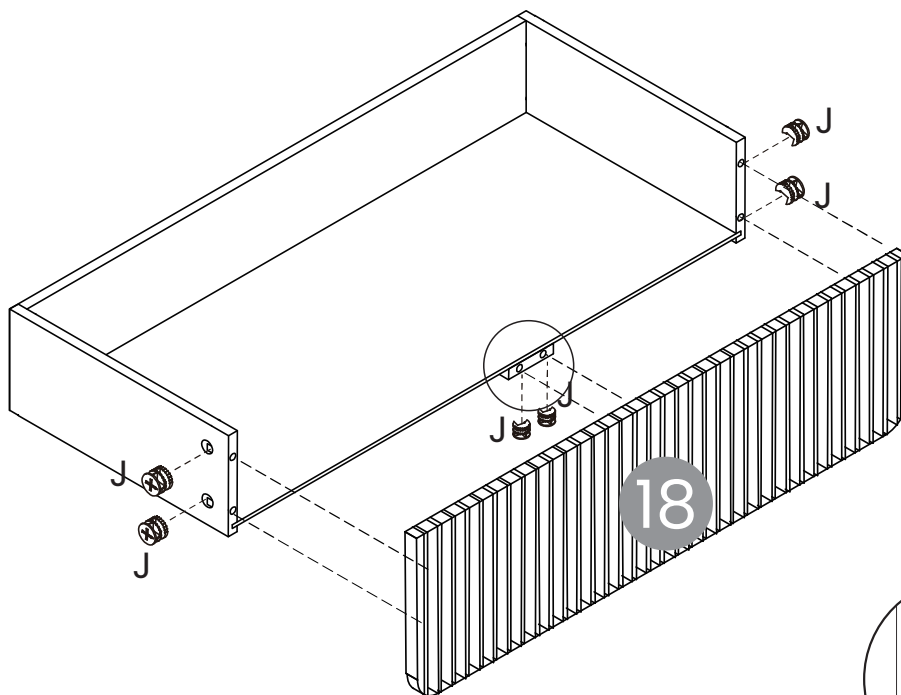

38

D x 1







L = 300 mm




E x 4



Ø 3 x 12 mm

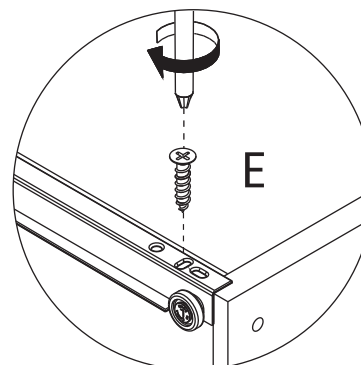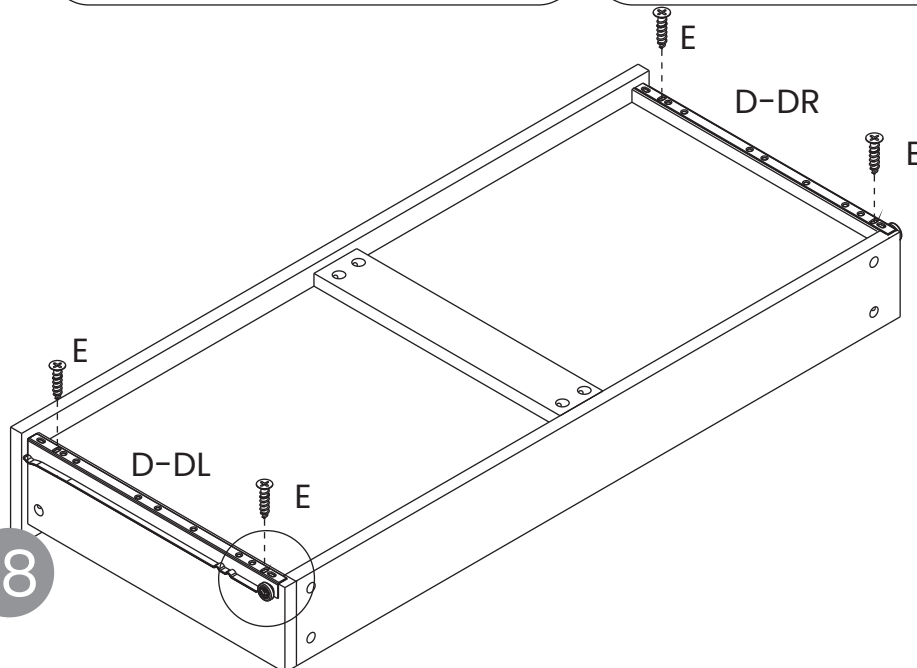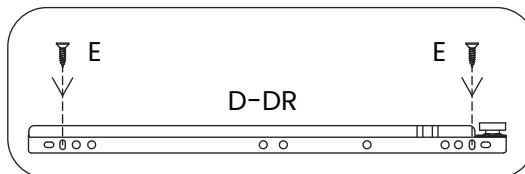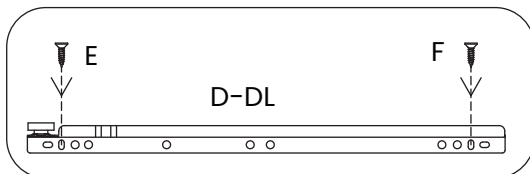

39


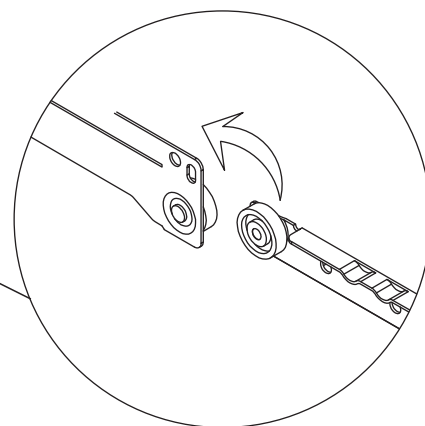
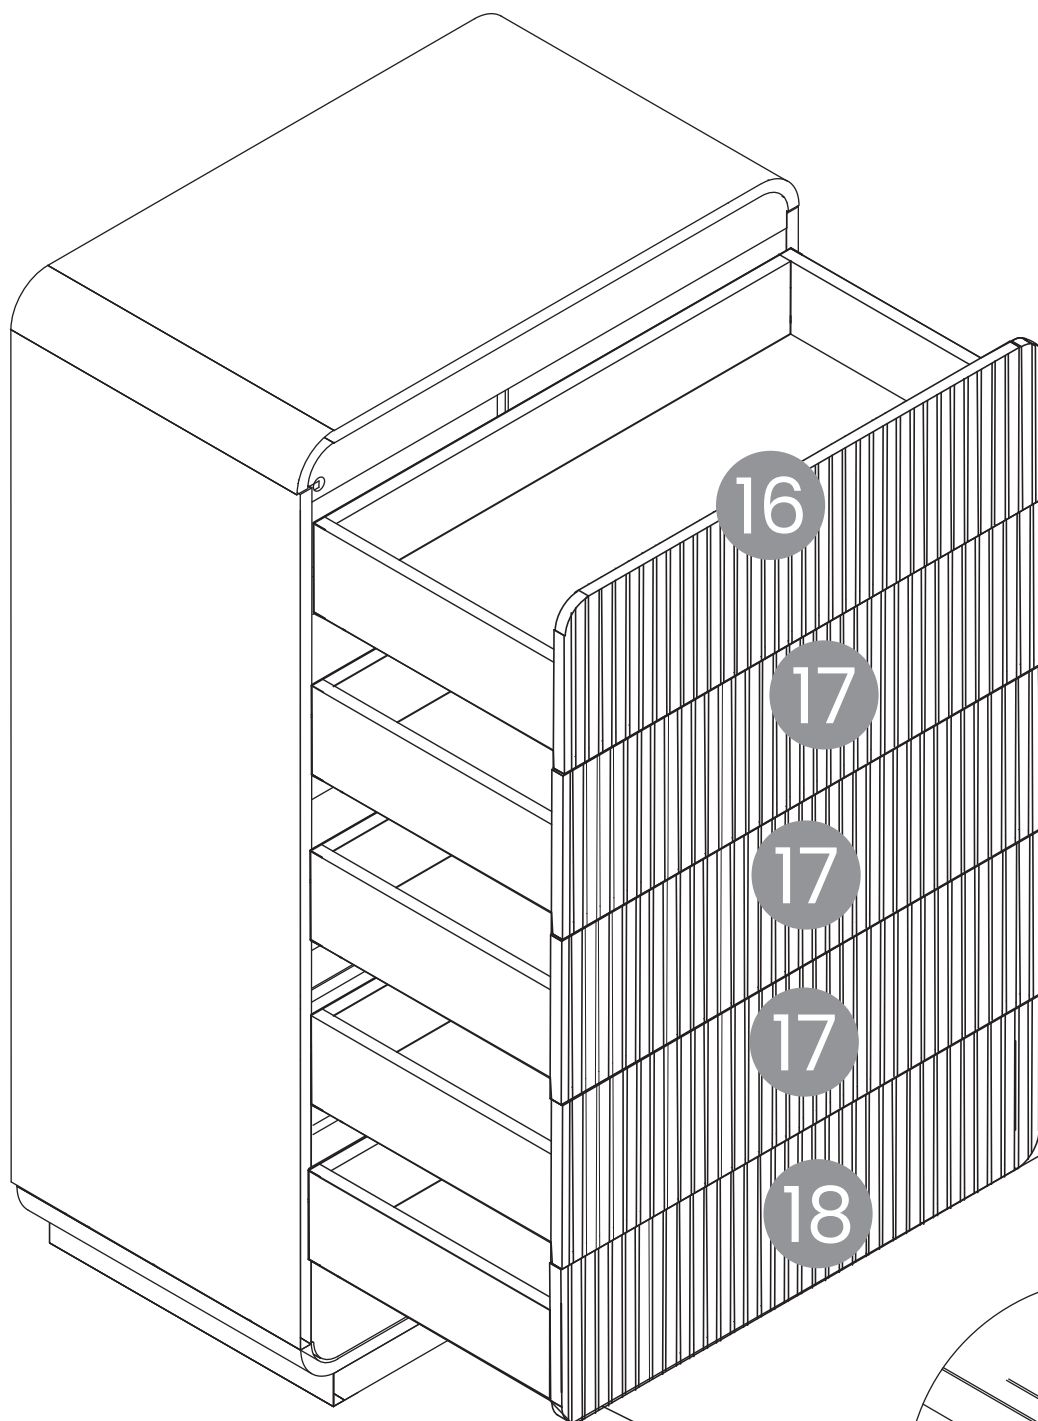



40

HX 18



E x 18

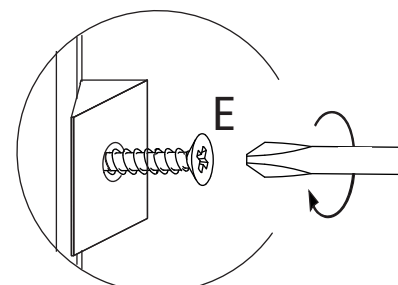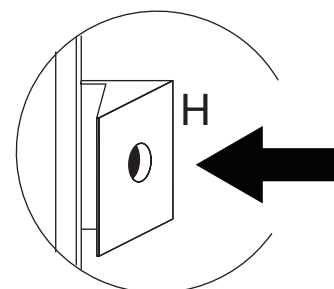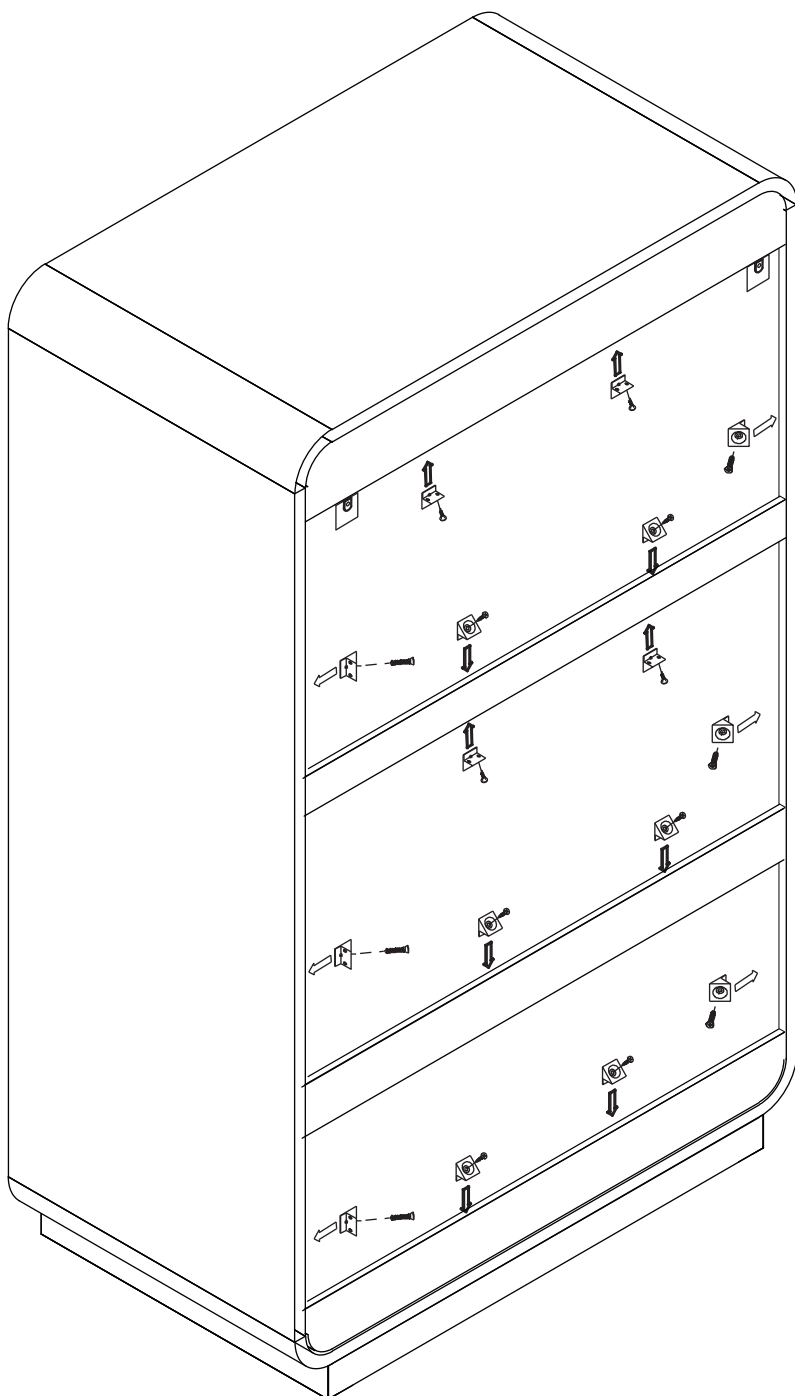


41


L x 2



WALL

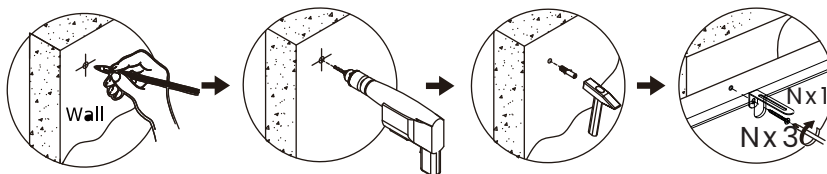


A solid wall



Φ6mm
(1/4")




B cavity wall




Φ6mm
(1/4")



C solid wood



Φ4mm
(1/8")


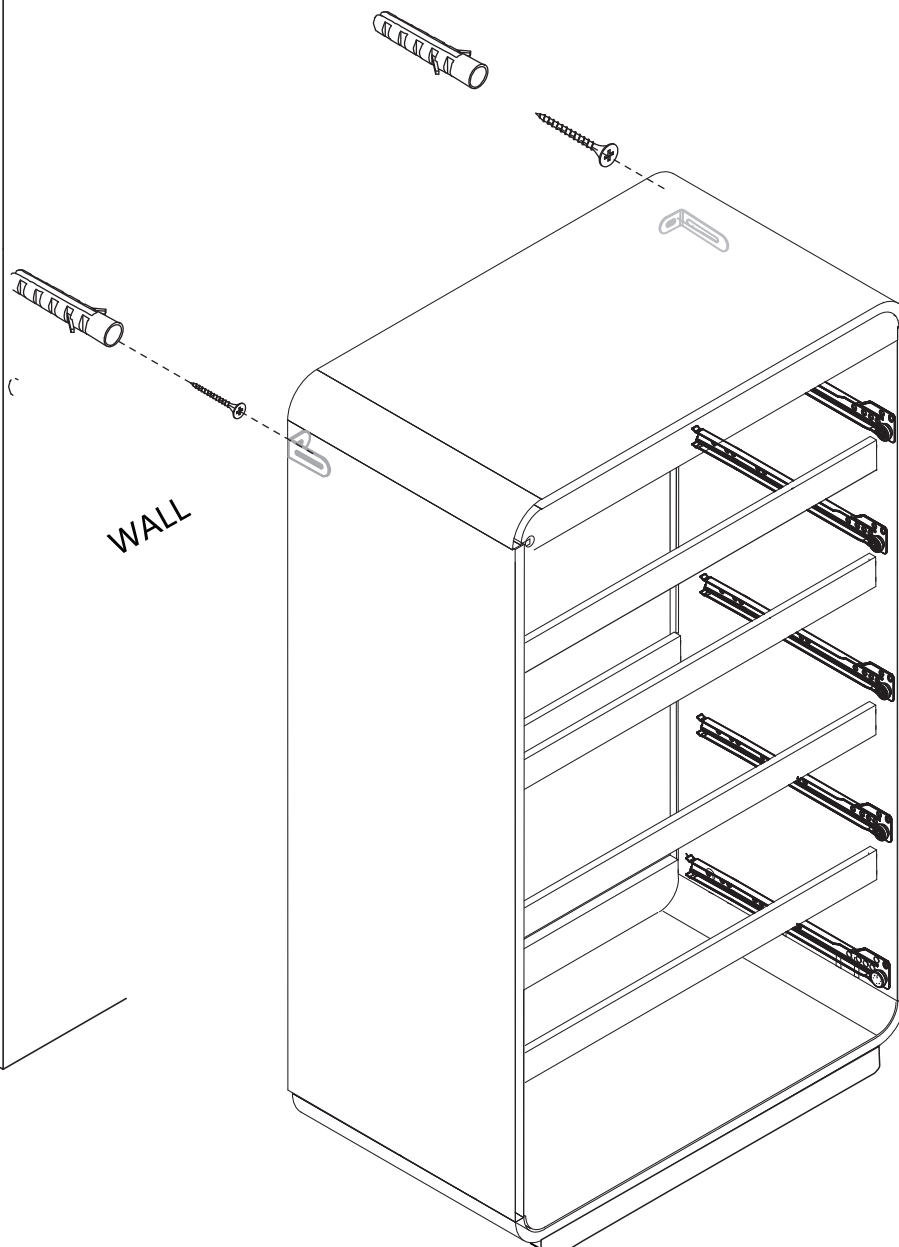


42


K x 4



Ø 4 x 30 mm


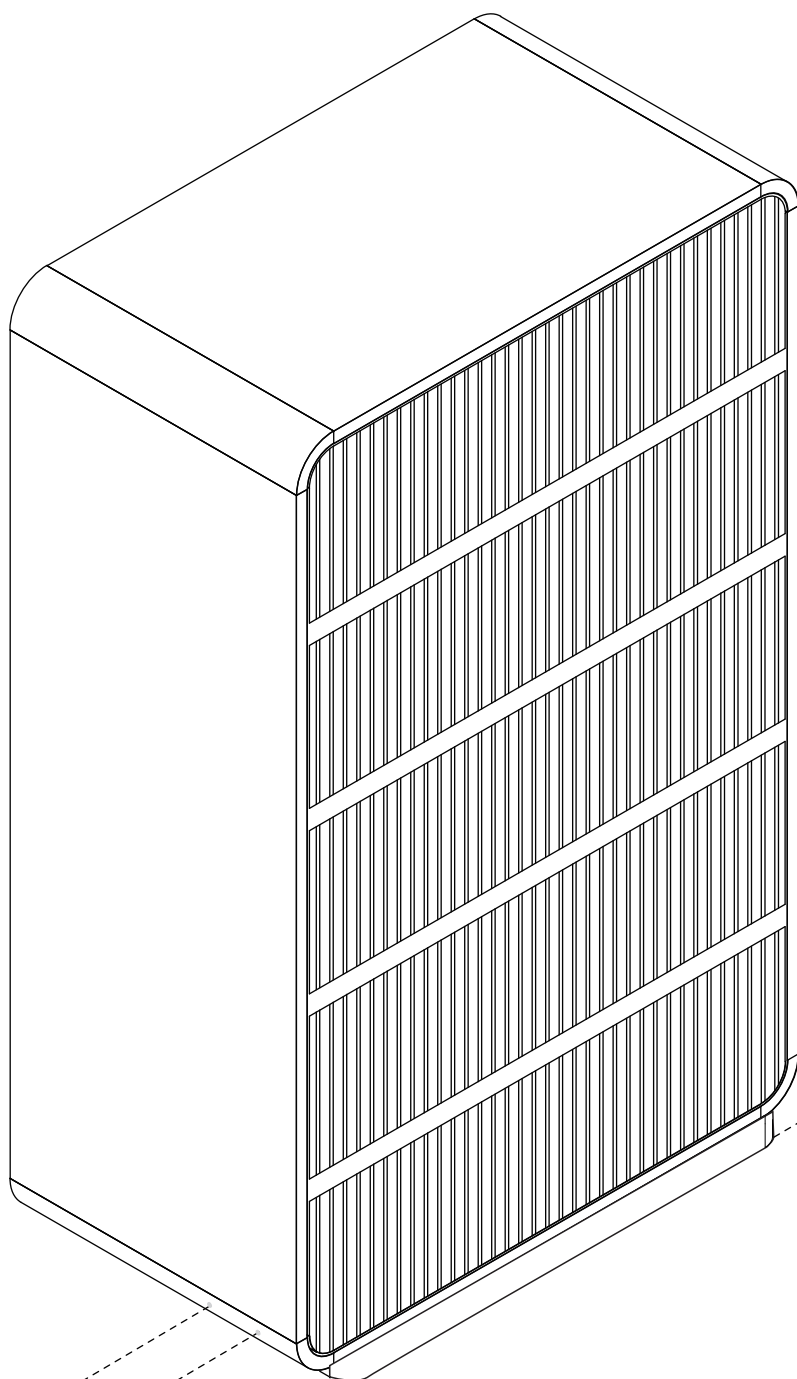



25

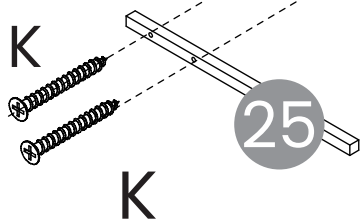

43

FX119

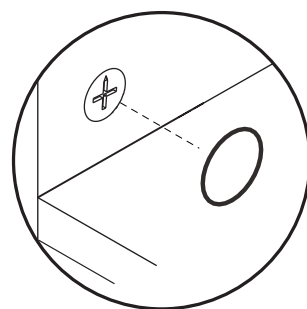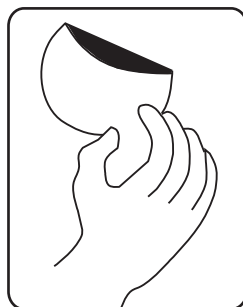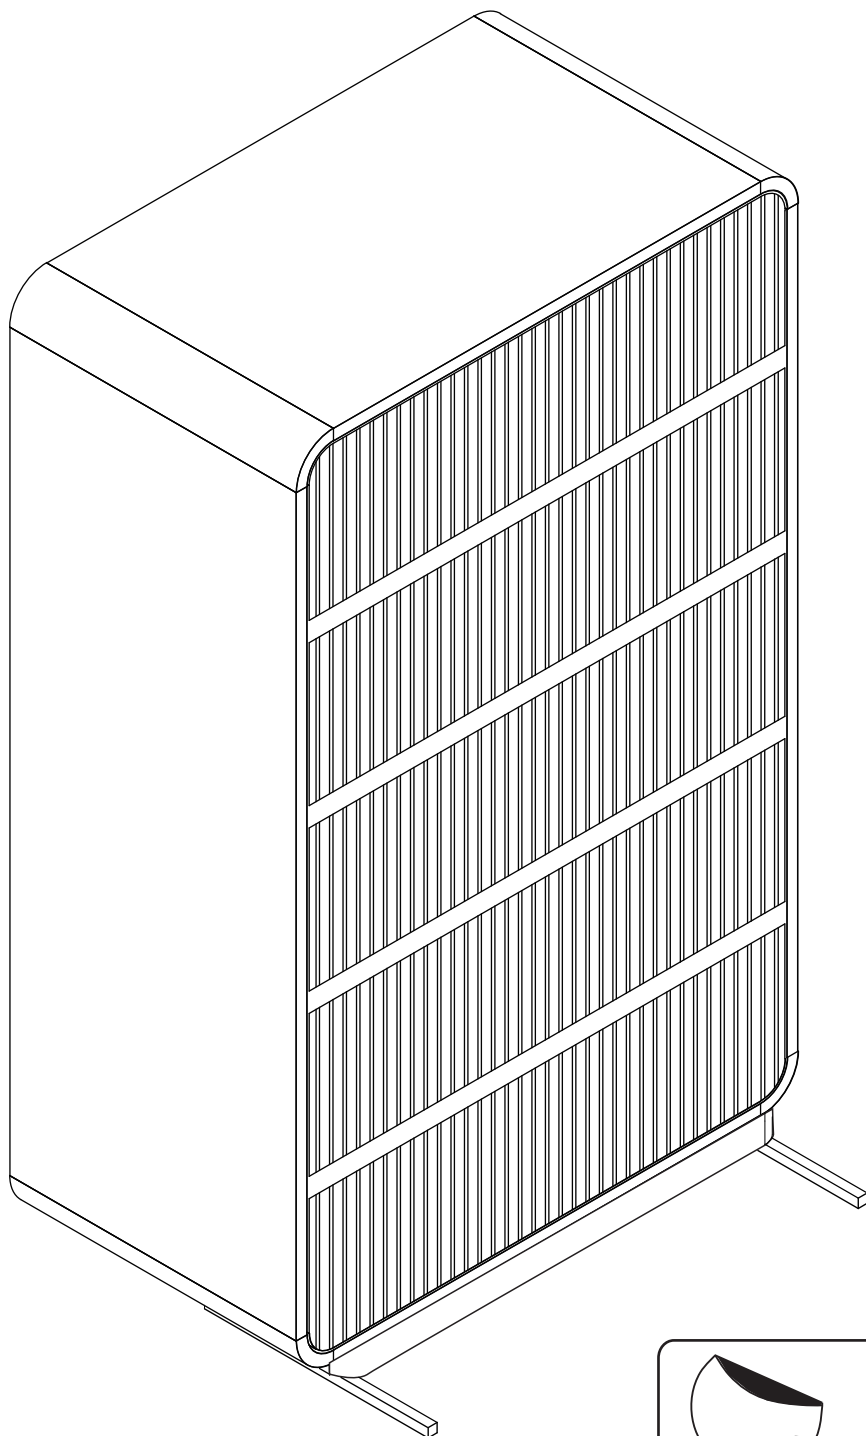

Shenzhenshi yumoshangmaoyouxiangongsi
Email: pdymproe@163.com
Add: Room 1203, Anqi Building, No. 1038, Taibai
Road Donghu Street, Luohu District, Shenzhen,
Guangdong 518000

