


## PARTS LIST:

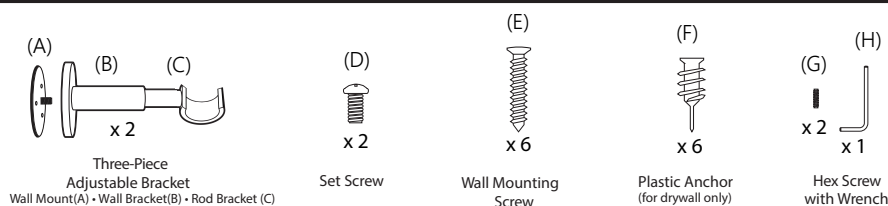


## INSTALLATION:


1. Determine the placement of the brackets on the wall. Reference the Installation Diagram on the reverse side.
2. Measure and mark the bracket locations above the window frame. Use a level to ensure the rod will be level on the wall.
3. Mark the three mounting holes for each bracket on the wall using the Wall Mount (Part-A) as a template.
4. Drill three 1/8" diameter pilot holes in the wall for all marked bracket locations.
5. For drywall only: Screw plastic wall anchors (Part-F) into pilot hole until flush. Do not over tighten.
6. For wall stud: The plastic wall anchors (Part-F) are not used.
7. Attach both Wall Mounts (Part-A) with the mounting stub pointing away from the wall (Fig. 1). Hand tighten all mounting screws (Part-E) using a screwdriver to prevent screw head damage.
8. Screw Wall Bracket (Part-B) onto the Wall Mount (Part-A).
9. Insert the Rod Bracket (Part-C) into the Wall Bracket (Part-B) and set the desired distance from the wall. Tighten the forward set screw (Part-G) with the allen wrench (Part-H) provided to lock the Rod Bracket (Part-C) in place.
10. We want to Thank You for your purchase. Please enjoy your new window.

\*\*Parts exceeding the quantity listed may be included in the hardware kit. These extra parts can be discarded after assembly.


### TOOLS NEEDED: NOT INCLUDED

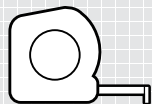

Tape Measure

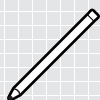

Pencil

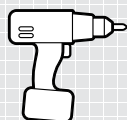

Drill



1/8" Drill Bit  
for wall stud



#2 Phillips-head  
Screwdriver



Level

