








Instructions





Storage Cabinets Type R

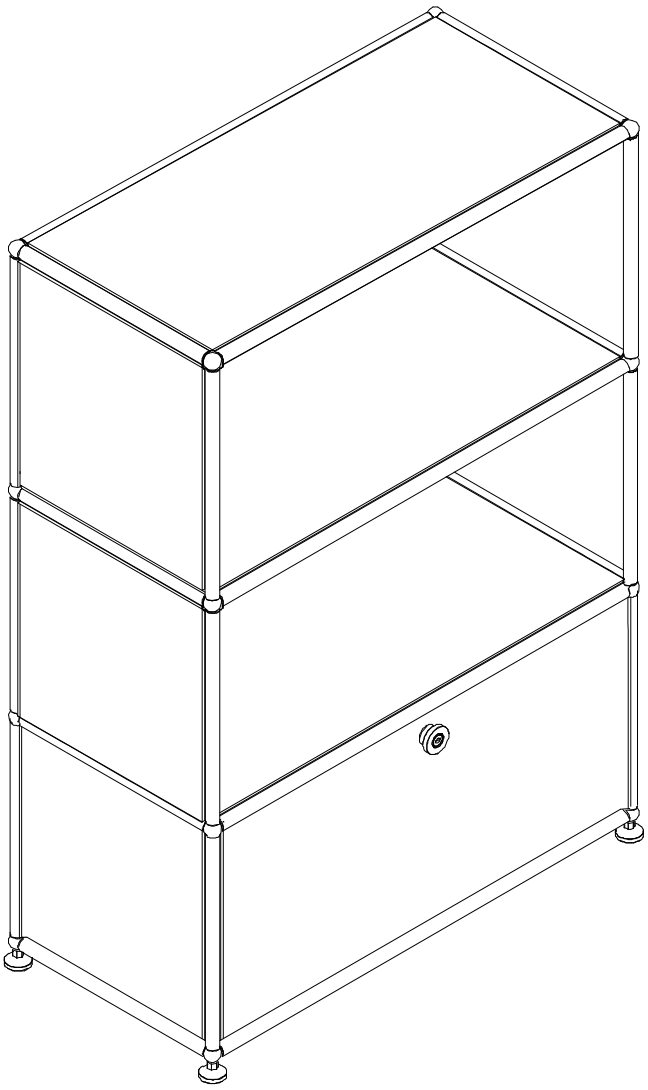


Part List

①	②	③	⑥	⑧			
							
x1	x1	x1	M3x28 x2	M4x14 x2			

A	B	C	E1	E2	F	W	
							
x7	x1	x6	Long x8	Short x20	x1	x2	

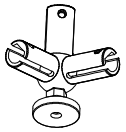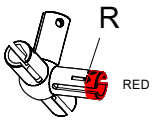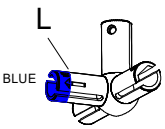
H1	H2	J1	J2	M	N	II	
							
x4	x4	x4	x4	x56	x1	x1	

Step1

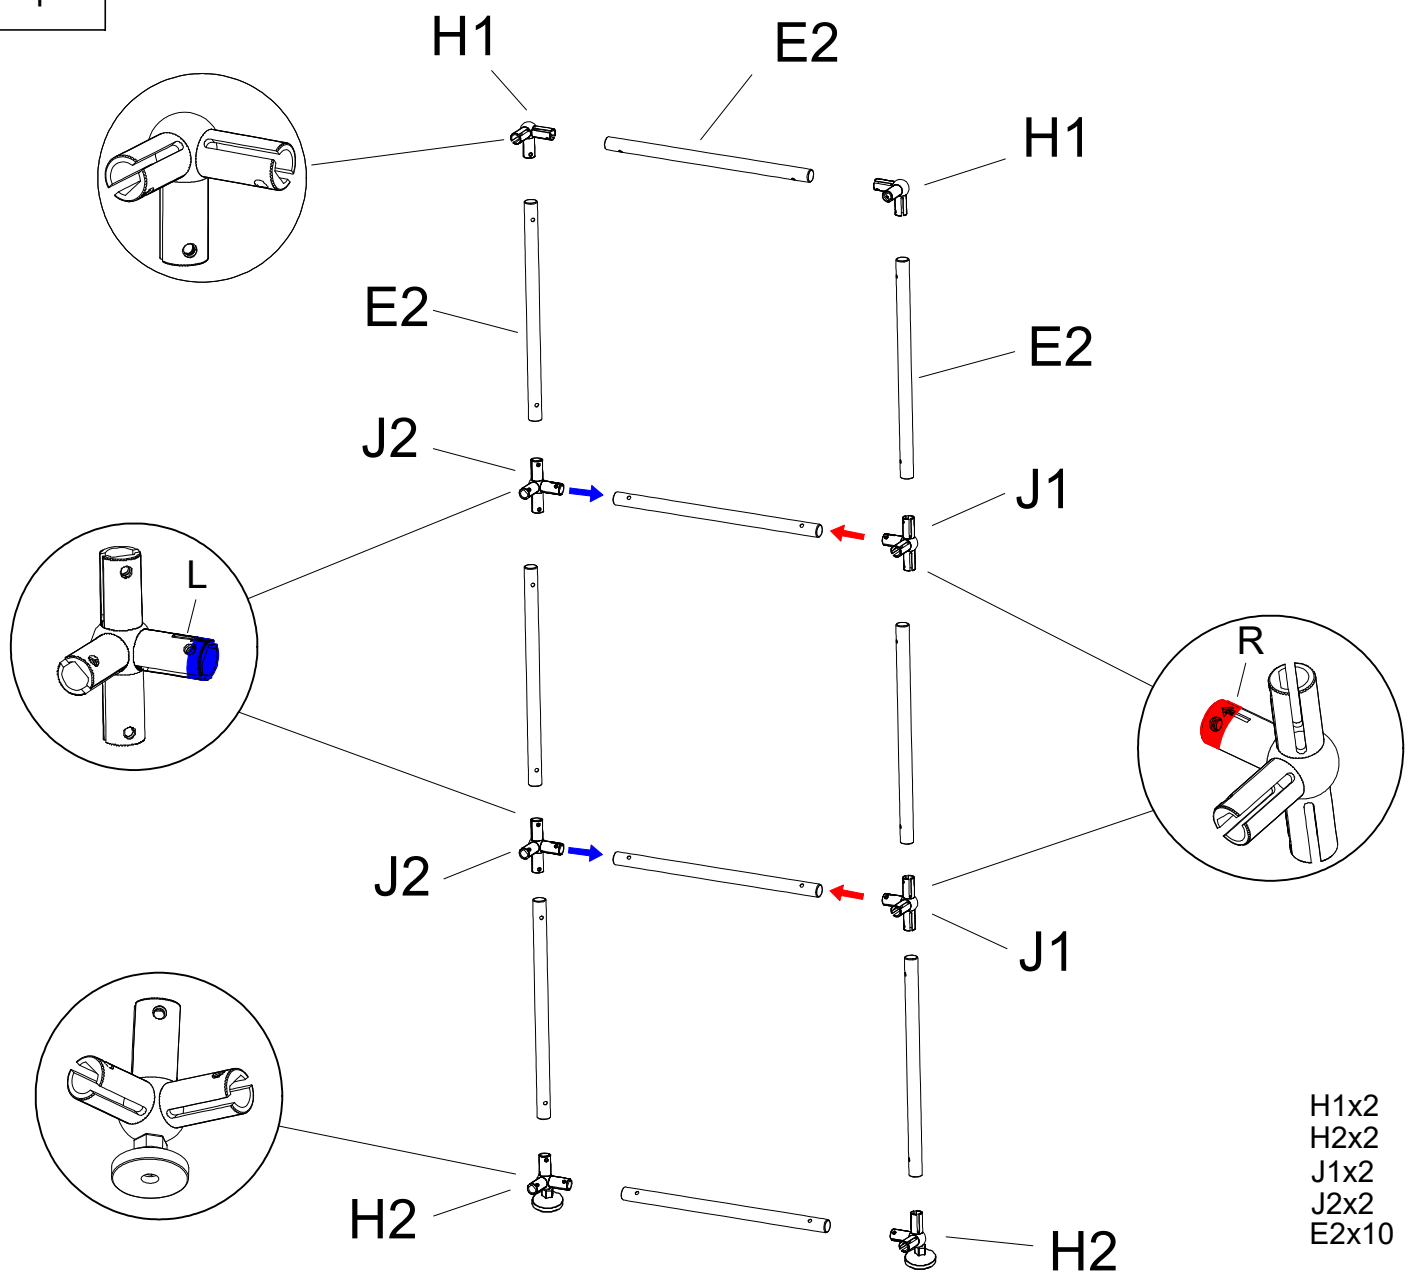

H1x2
H2x2
J1x2
J2x2
E2x10


Step2

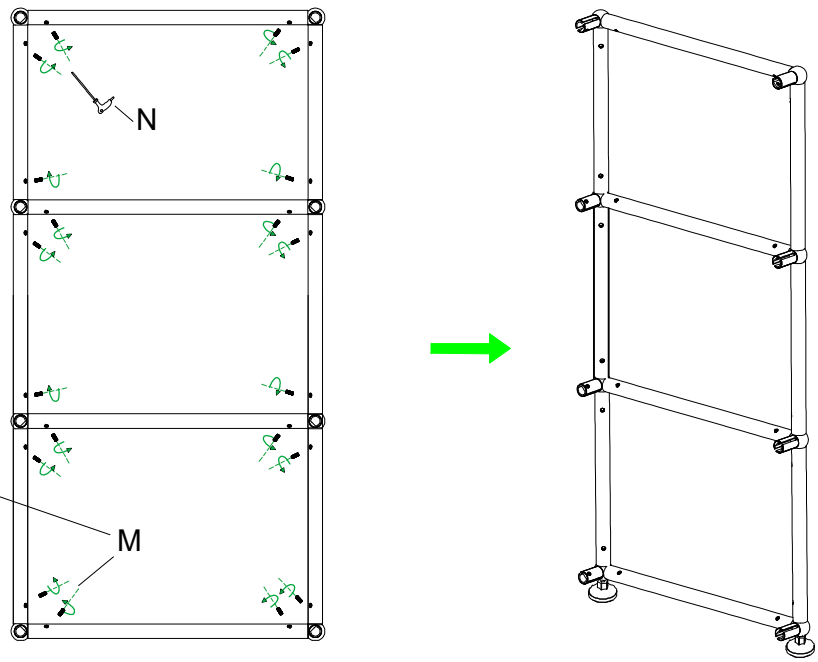

Do not tighten the M screws completely, otherwise it will not be possible to adjust the overall product later.

Mx20
Step2x2


Step3

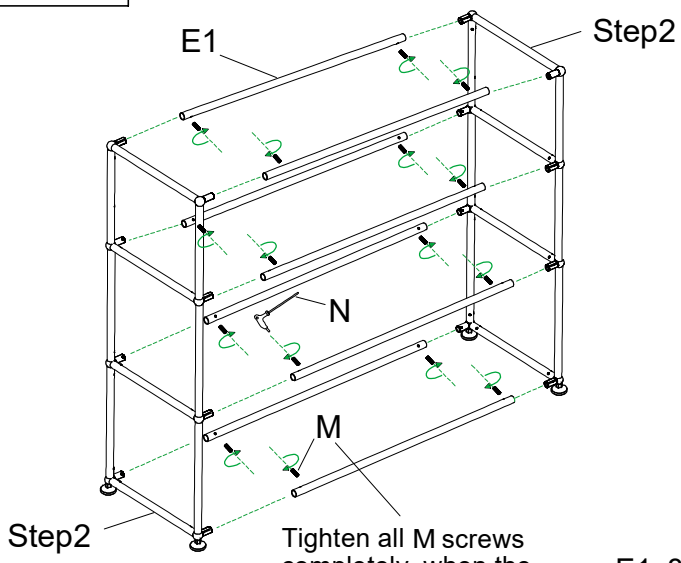

Tighten all M screws completely, when the cube frame is done.


E1x8
Mx16
Step2x2

Step4

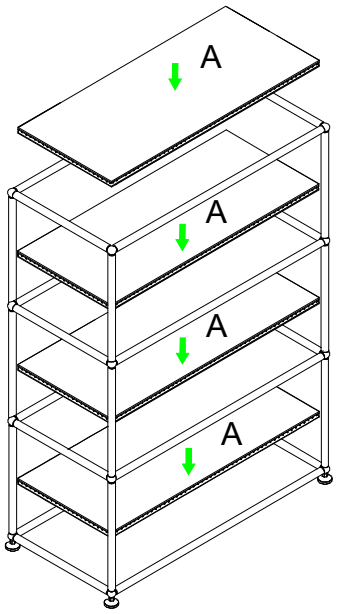

Ax4


Step5

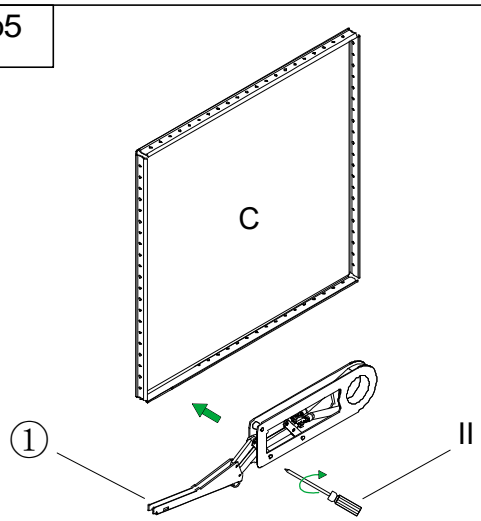

Partially unscrew the three screws in ① before installing it on the metal panel.

Cx1
①x1
Step5x1


Step6

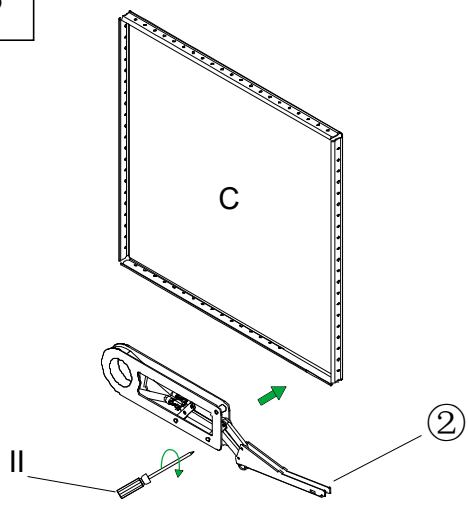

Partially unscrew the three screws in ② before installing it on the metal panel.


Cx1
②x1
Step6x1

Step7

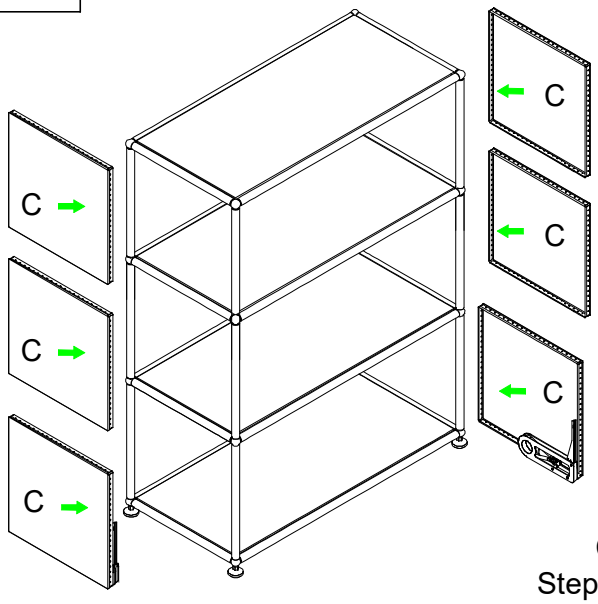


Cx4
Step5x1
Step6x1

Step8

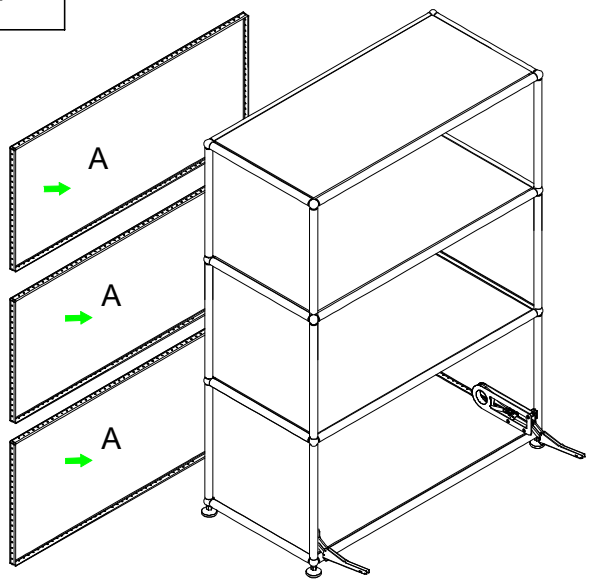


Ax3

Step9

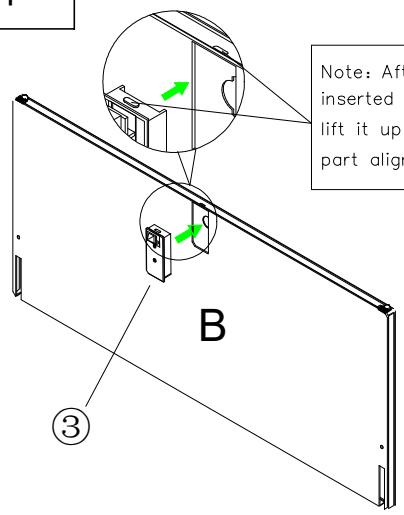


Bx1
③x1

Step10

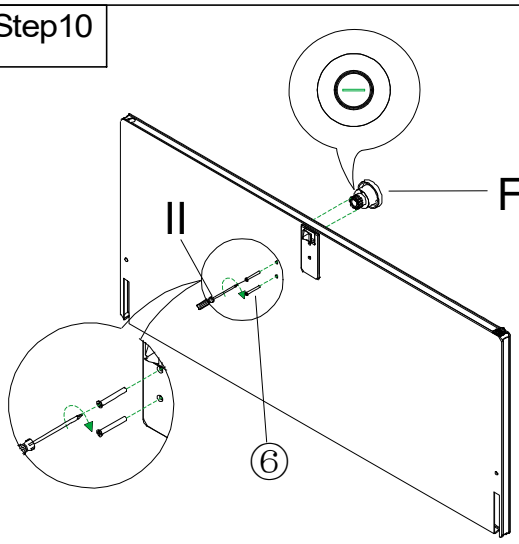


Fx1
⑥x2
Step10x1

Step11

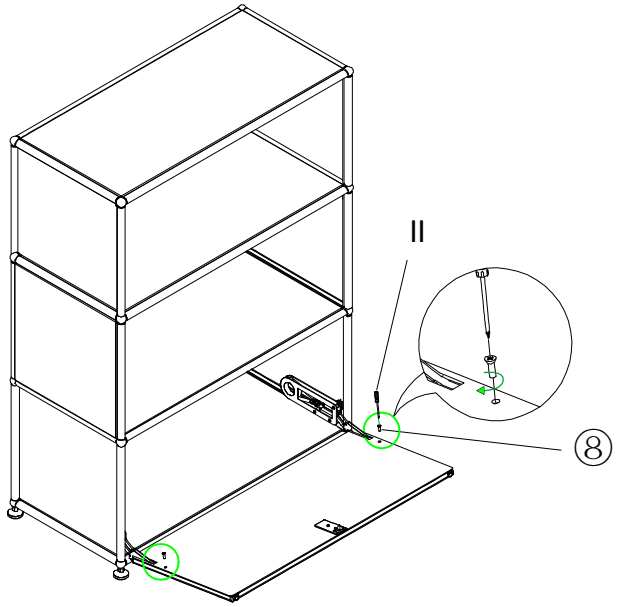


⑧x2


How to use the lock

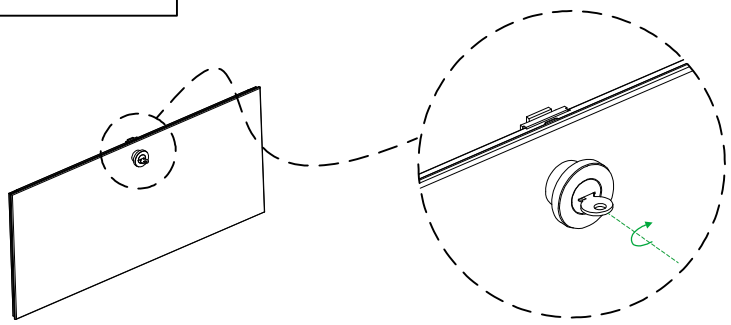

Turn clockwise to unlock

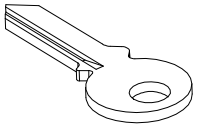

including 2 keys

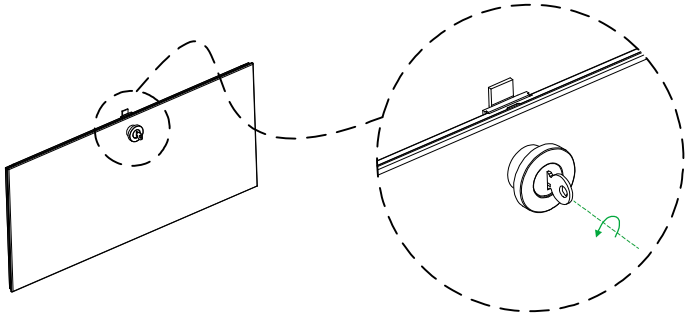

Turn counterclockwise to lock