
Installation Instruction

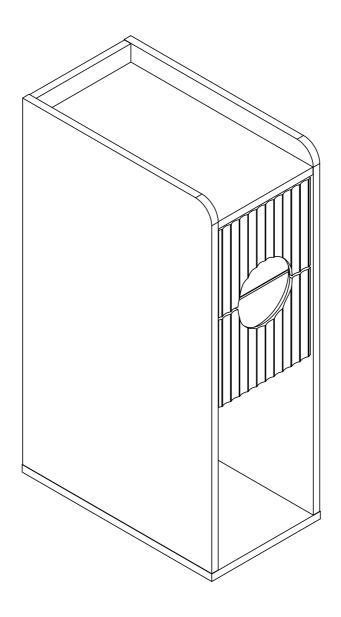

Assembling


Estimated time for assembly



45:00

What you need

- Use the packaging carton as a working surface to prevent product damage during assembly
- · Phillips head screwdriver




Weight Limitation



100 l


35 lbs per



What' included

Code Description	
A Cam Bolt M6X35MM	16
B Cam Lock 15X9MM	16
C Wooden Dowel M6X30MM	14
D Screw M4X30MM	16
E Screw M3.5X12MM	2
F EVA foot mat	4
G Circular hole Decals	16
H Screw M3.0X12MM	20
I Anchor	2
J L-shaped metal sheet	2
K The back button	4
CL Left mother extended orbi	t 2
CR Right mother extended or	bit 2
DL Left public extension track	2
DR Right public extends track	2

The Hardwares

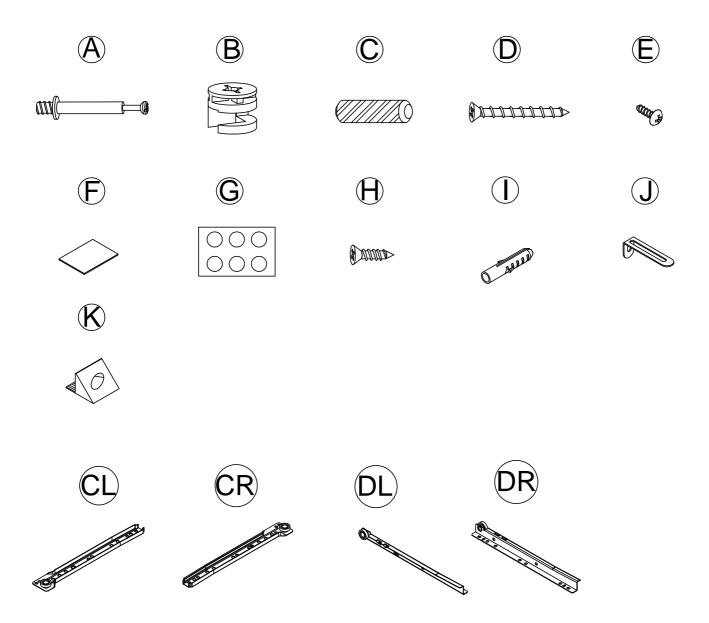


IMPORTANT:


- 1.Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
- 2.Do not over tighten screws and bolts to avoid stripping
- 3. Please use hand tools to assemble this product. Do not use power tools.


Included Accessories


Code	Description	Qty
1	Cabinet Top	1
2	laminated plate	1
3	Bottom Panel	1
4	Left Side Panel	1
5	Right Side Panel	1
6	Drawer left side panel	2
7	Drawer right side panel	2
8	The drawer bottom	2
9	After the drawer board	2
10	Drawer panel	1
11	Drawer panel	1
12	Back tie	1
13	Backboard	1

The Accessoriess

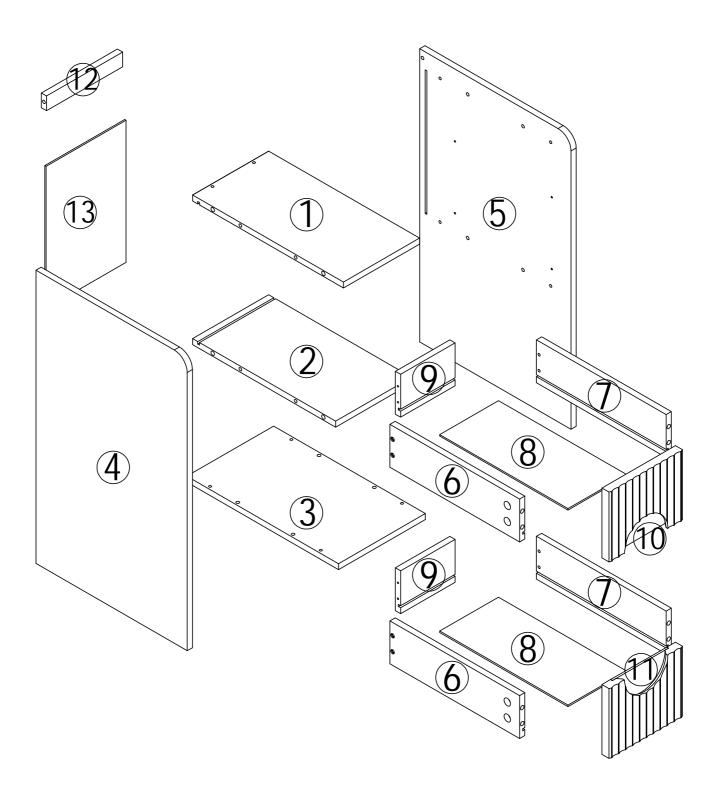





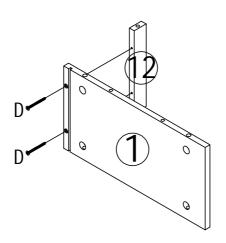


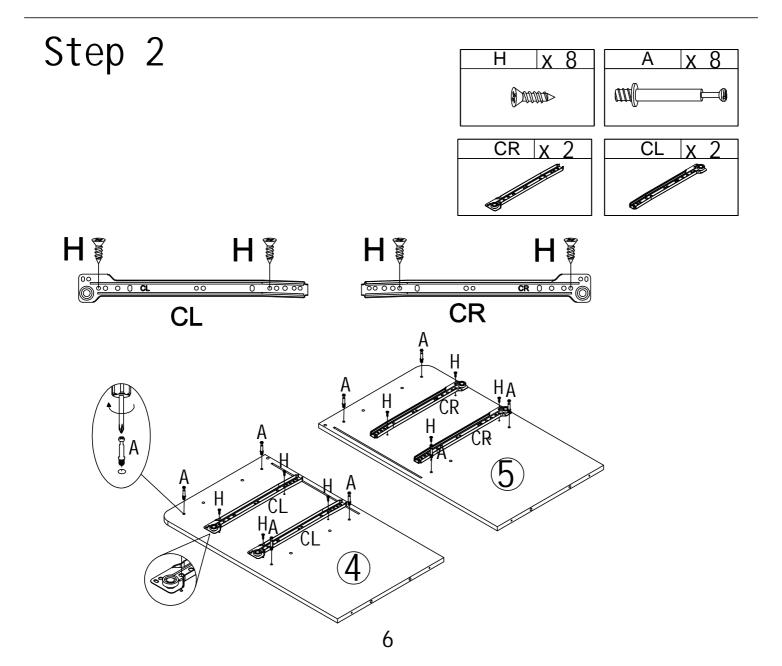























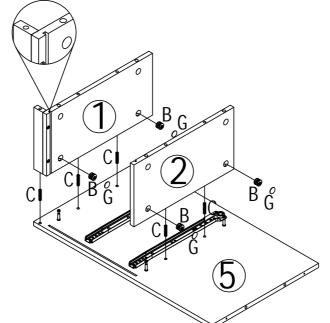





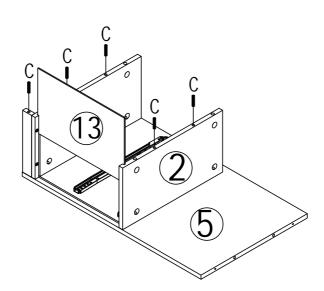



















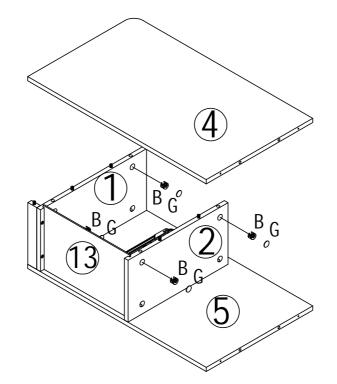


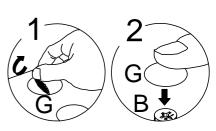


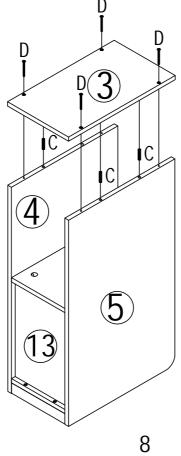










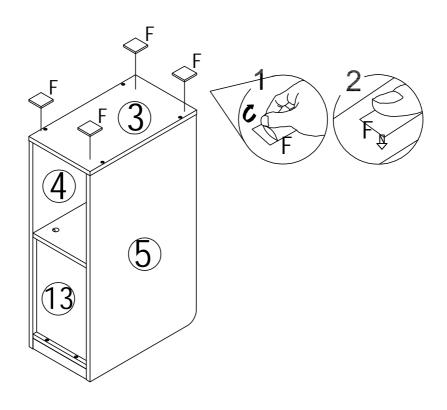



Step 8




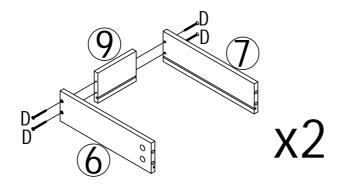


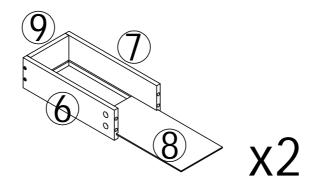





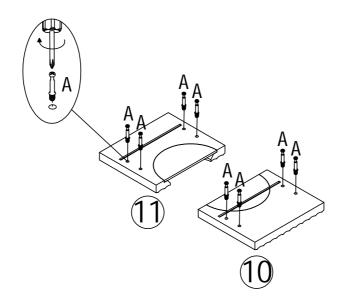





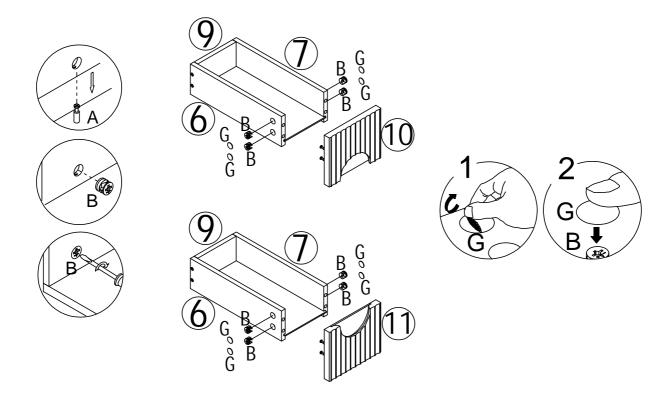

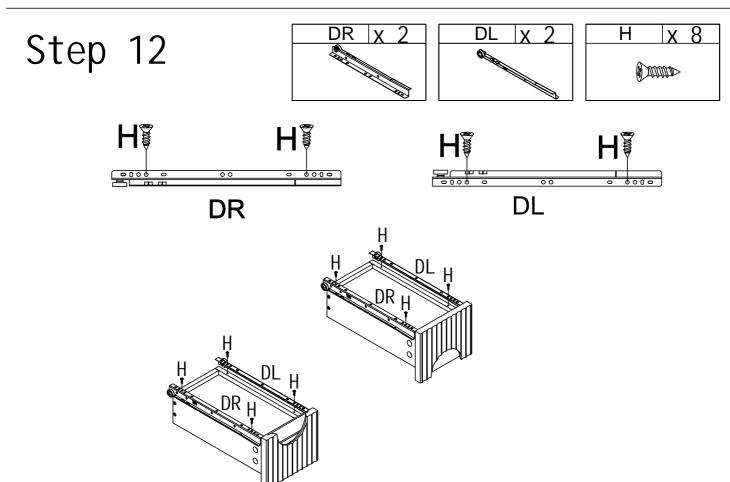

Step 13

