



Assembly Instructions


6 Assemble the Drawer Sides (O) and Drawer Rail (P) to the Drawer Back (N).
Make sure the small wheels on the Drawer Sides (O) are next to the Drawer Back (N).

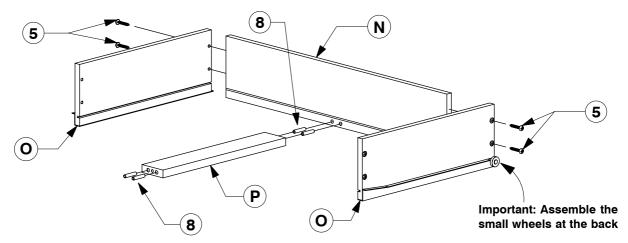


Slide the Drawer Bottom (M) into the groove on the Drawer Sides (O).

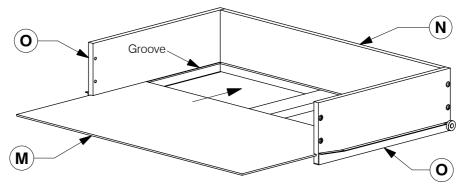



8 Assemble the Drawer Face (L) to the Drawer Sides (O).

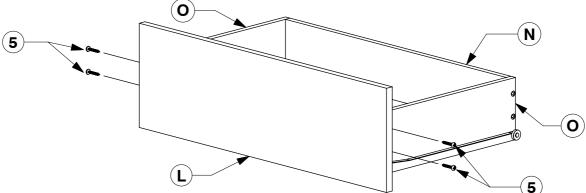


Turn the Drawer over to fit angled 25mm Wood screws (5) to the Drawer Rail (P).

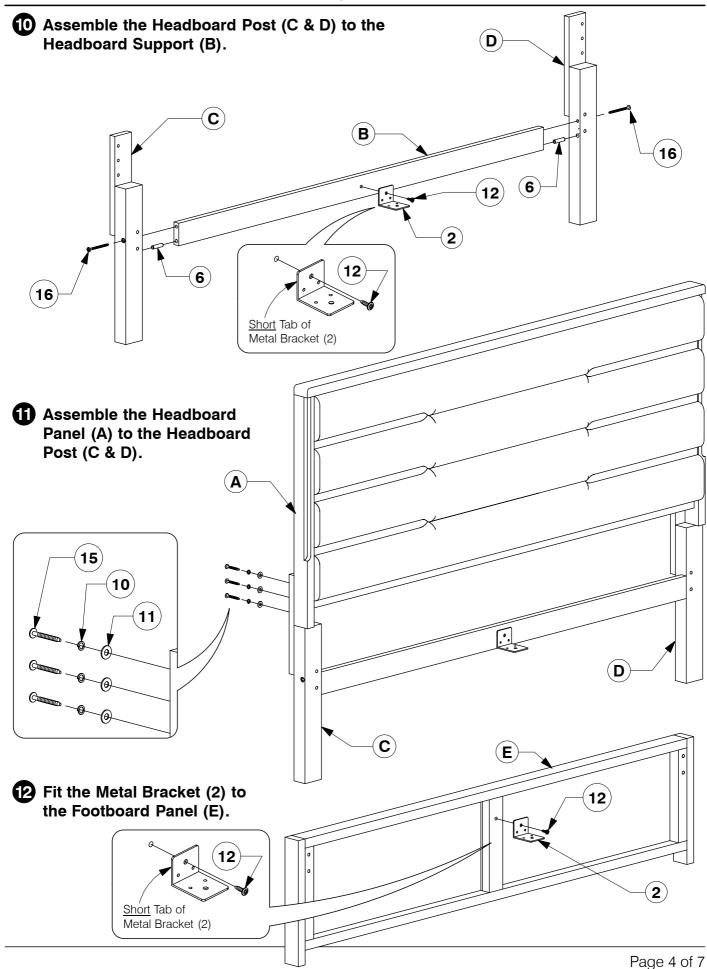

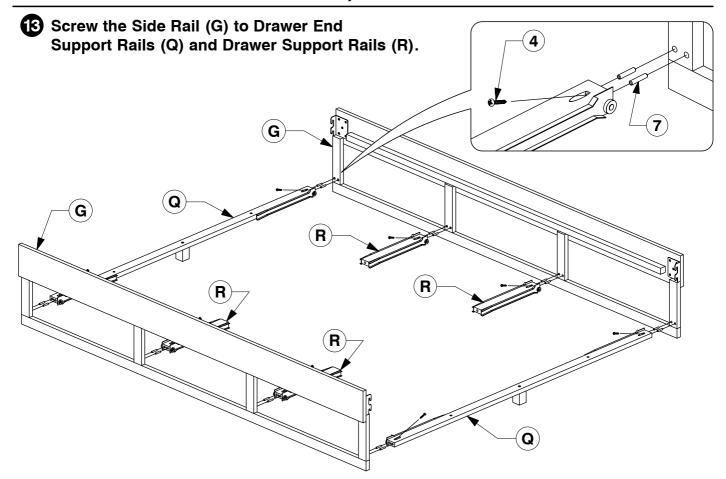


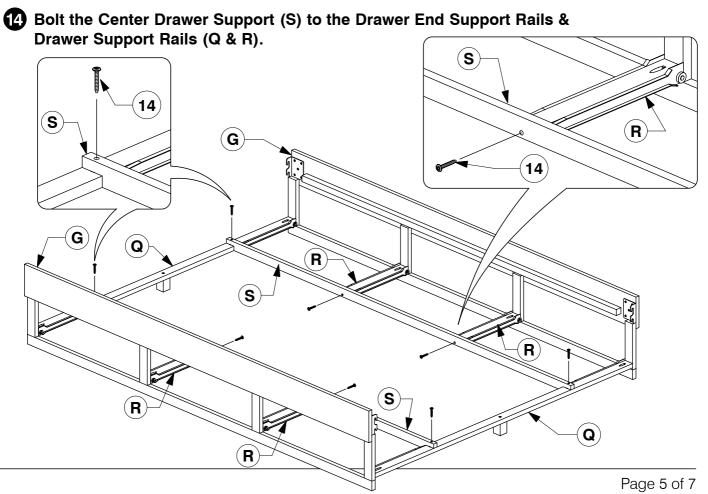

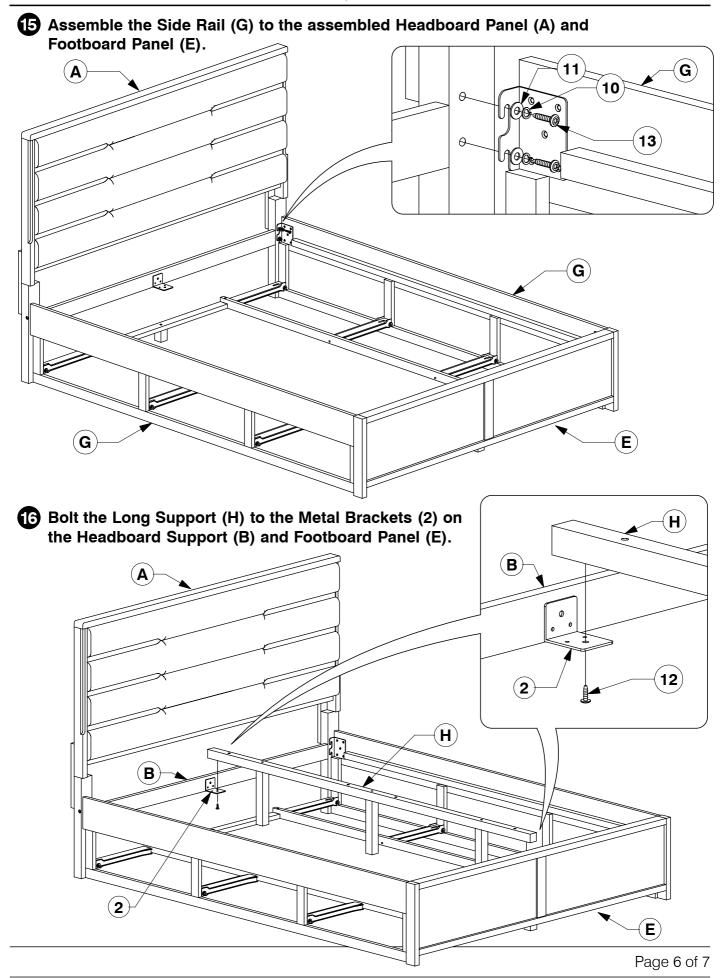

Assembly Instructions

17 Bolt the Slats (F) to the Side Rail (G).

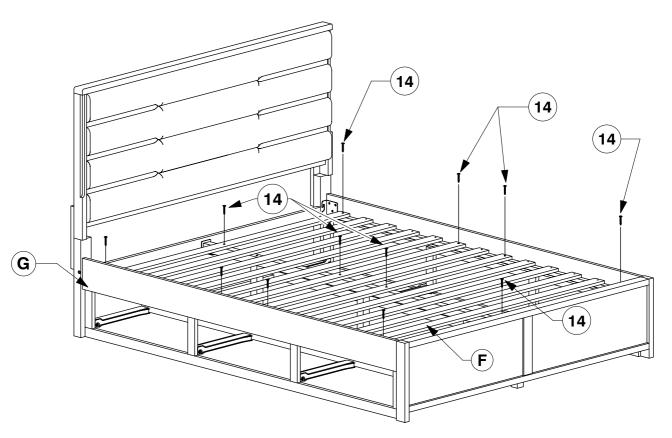

18 Screw the Slats (F) to the Side Rail (G).

