


ASSEMBLY INSTRUCTION

SIZE:King

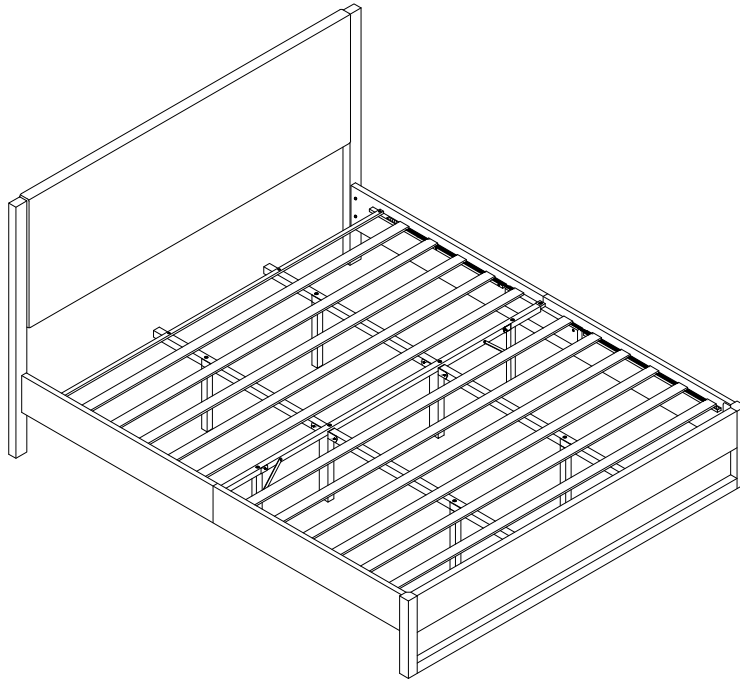


Please TEAR OFF this shrink film from side!
DO NOT USE CUTTER!

IMPORTANT NOTE


1. For the protection of your furniture, place all parts on a clean and smooth surface to prevent any damage.
2. Keep fittings out of children's reach and keep children well away from construction area.
3. When moving your assembled bed, it is best to lift the bed and never to drag it.
4. Do not use this product if parts are missing, damaged or worn.
5. This product should only be used on firm, level ground.
6. Please periodically check all fittings and re-tighten as necessary.
7. Do not use the bed unless all bolts and screws are firmly secured.
8. For further assistance, please provide a screenshot of your order and contact us via email.




















Minimum two
person assembly

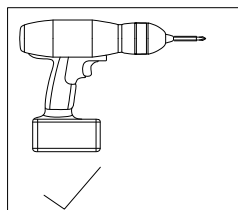


PART LIST

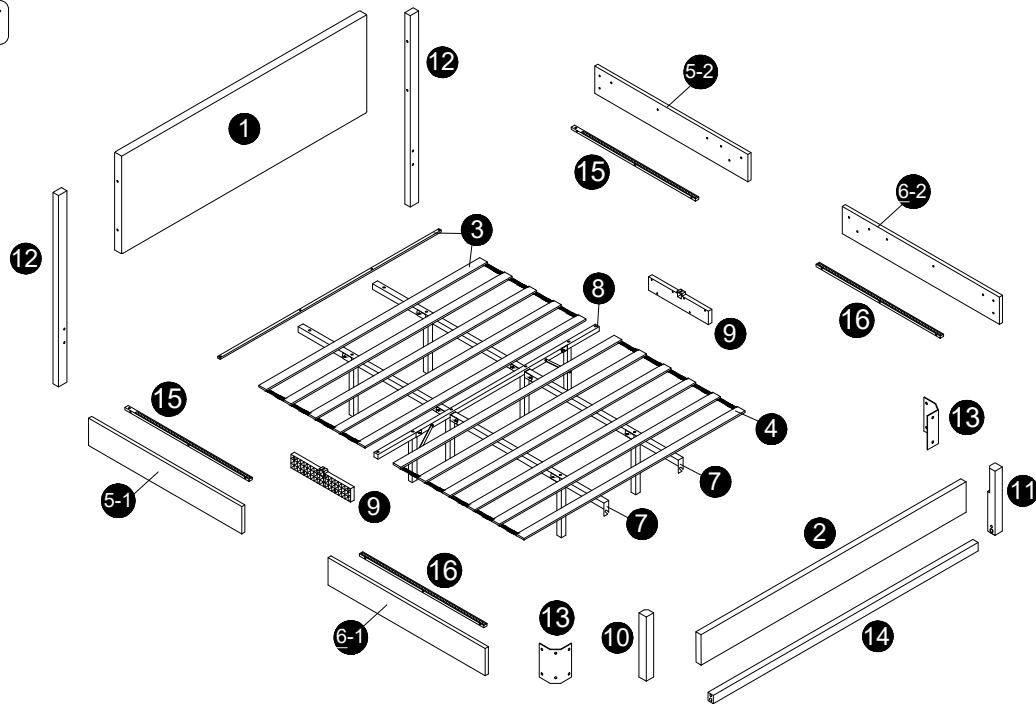

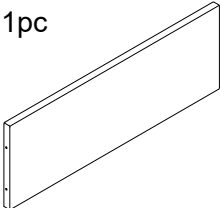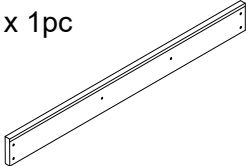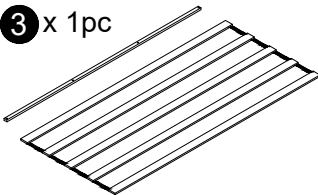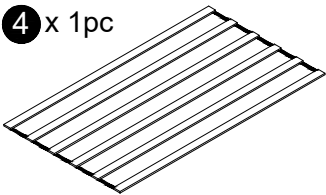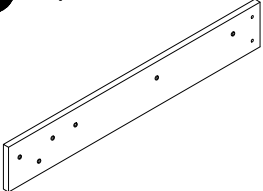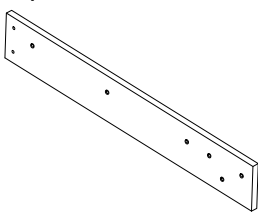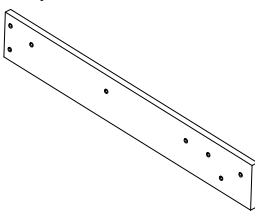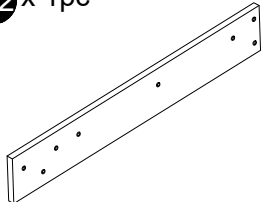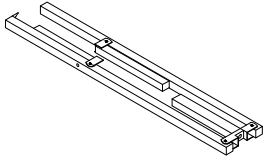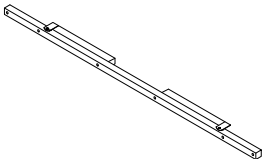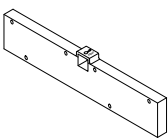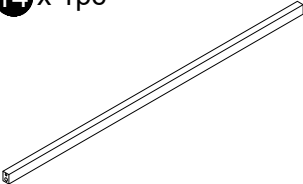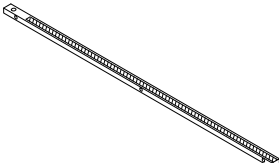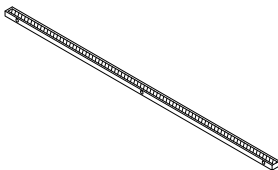
1 x 1pc 	2 x 1pc 	3 x 1pc 	4 x 1pc 
5-1 x 1pc 	5-2 x 1pc 	6-1 x 1pc 	6-2 x 1pc 
7 x 2pcs 	8 x 1pc 	9 x 2pcs 	10 x 1pc 
11 x 1pc 	12 x 2pcs 	13 x 2pcs 	14 x 1pc 
15 x 2pcs 	16 x 2pcs 		

Please ensure to thoroughly inspect the small inner cardboard box containing the hardware, which are tied with a red string, before disposing of the box.


HARDWARE LIST

 H1 M5 x 1pc	 H2 M8x25mm x 10pcs	 H3 M8x50mm x 8pcs	 H4 M8x38mm x 32pcs	 H5 M8 x 4pcs
 H6 M8x22mm x 4pcs	 H7 M8x60mm x 2pcs	 H8 M6x80mm x 4pcs	 H9 M4 x 1pc	 H10 M6 x 4pcs
 H11 M8x40mm x 2pcs	 H12 x 2pcs	 H13 x 2pcs	 H14 M8x16mm x 4pcs	


- 1** As shown in the diagram, align the screws with the corresponding holes and pre-fix them. Then, tighten each screw separately.

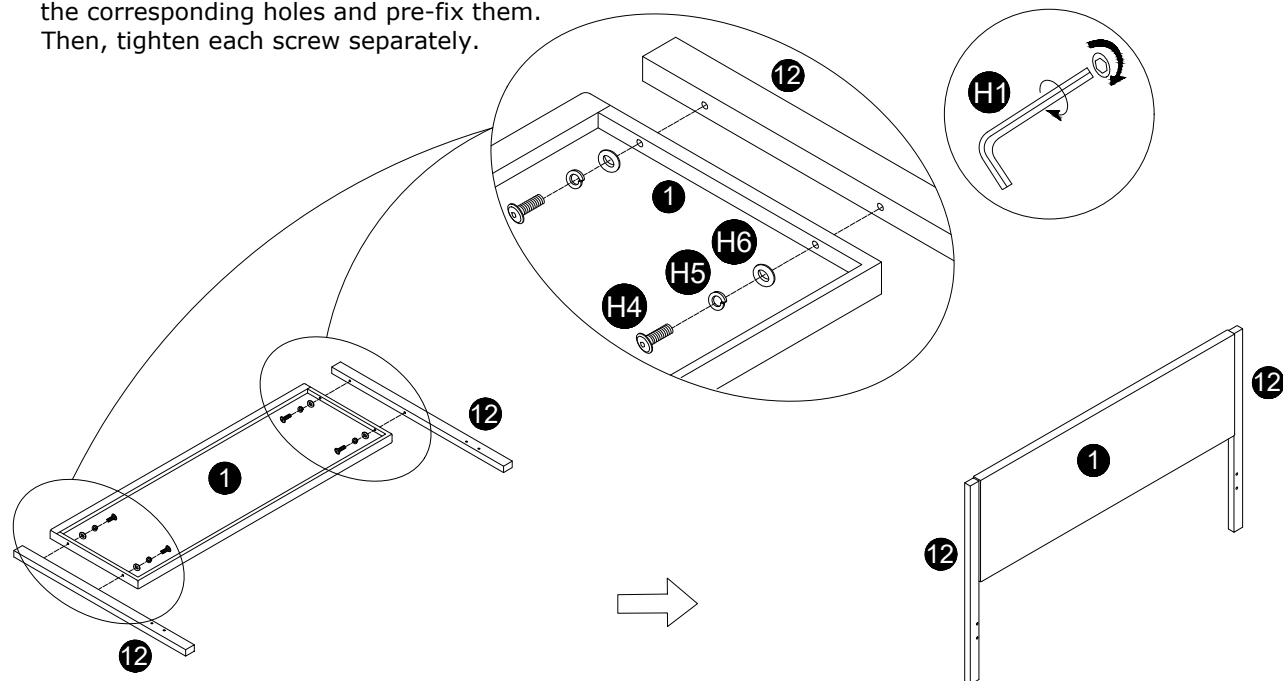


2

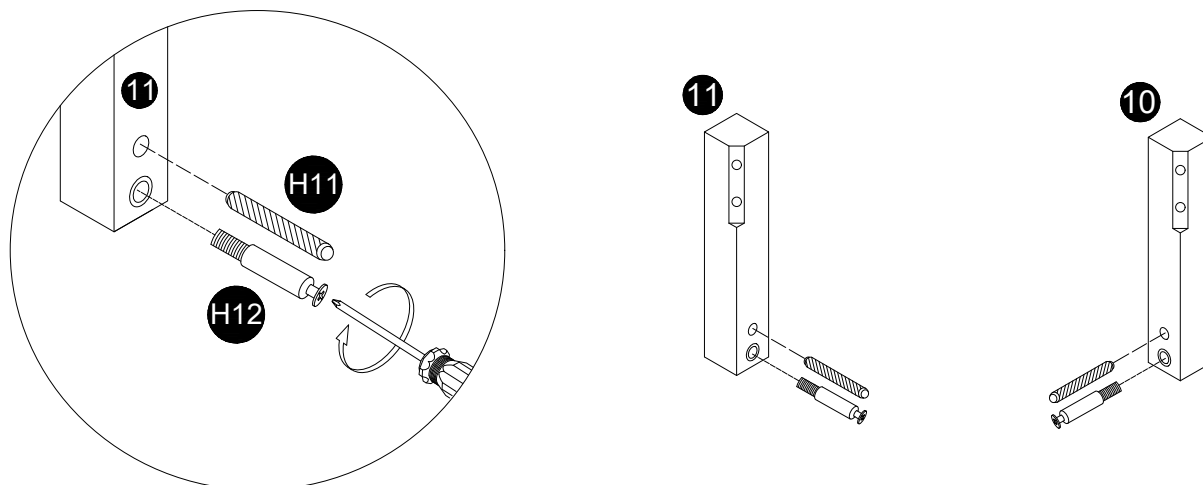


3

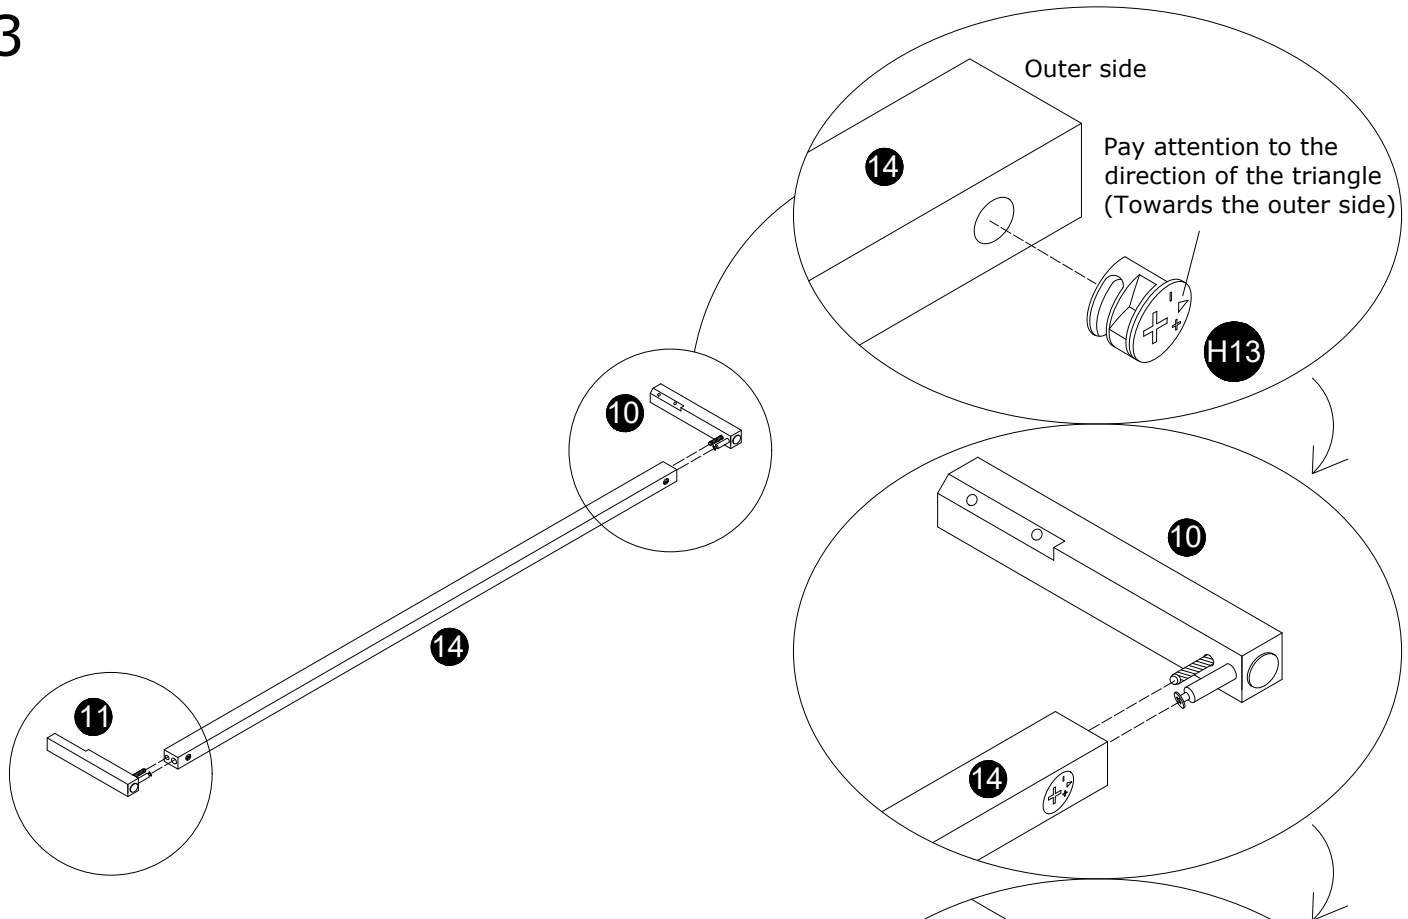


PUSH THE TWO PANELS TOGETHER ALLOWING THE DOWEL TO ALIGN WITH THE HOLE

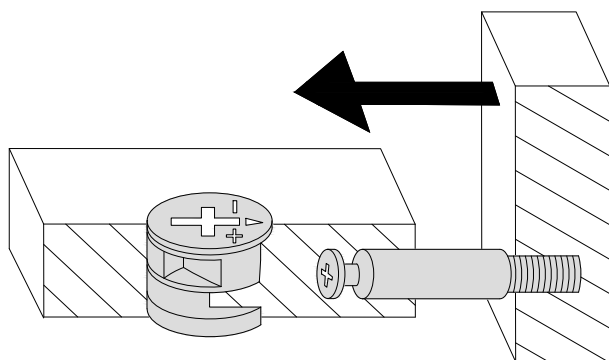


TURN THE CAM IN A CLOCKWISE DIRECTION

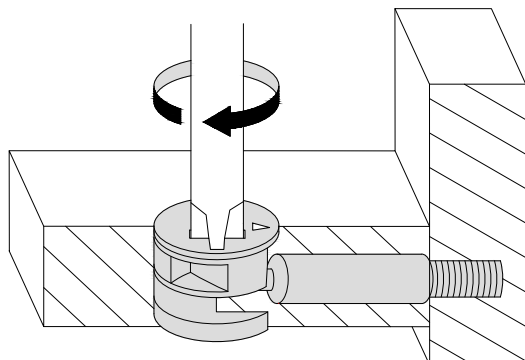

DON'T STOP UNTIL THE 2 O'CLOCK LOCK
TURN THE CAM IN A CLOCKWISE DIRECTION UNTIL THE ARROW POINTS IN THE POSITIONS SHOWN IN THE DIAGRAMS BELOW

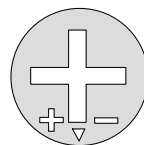


OPEN

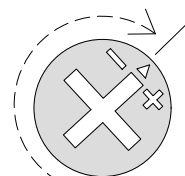


LOCKED

4

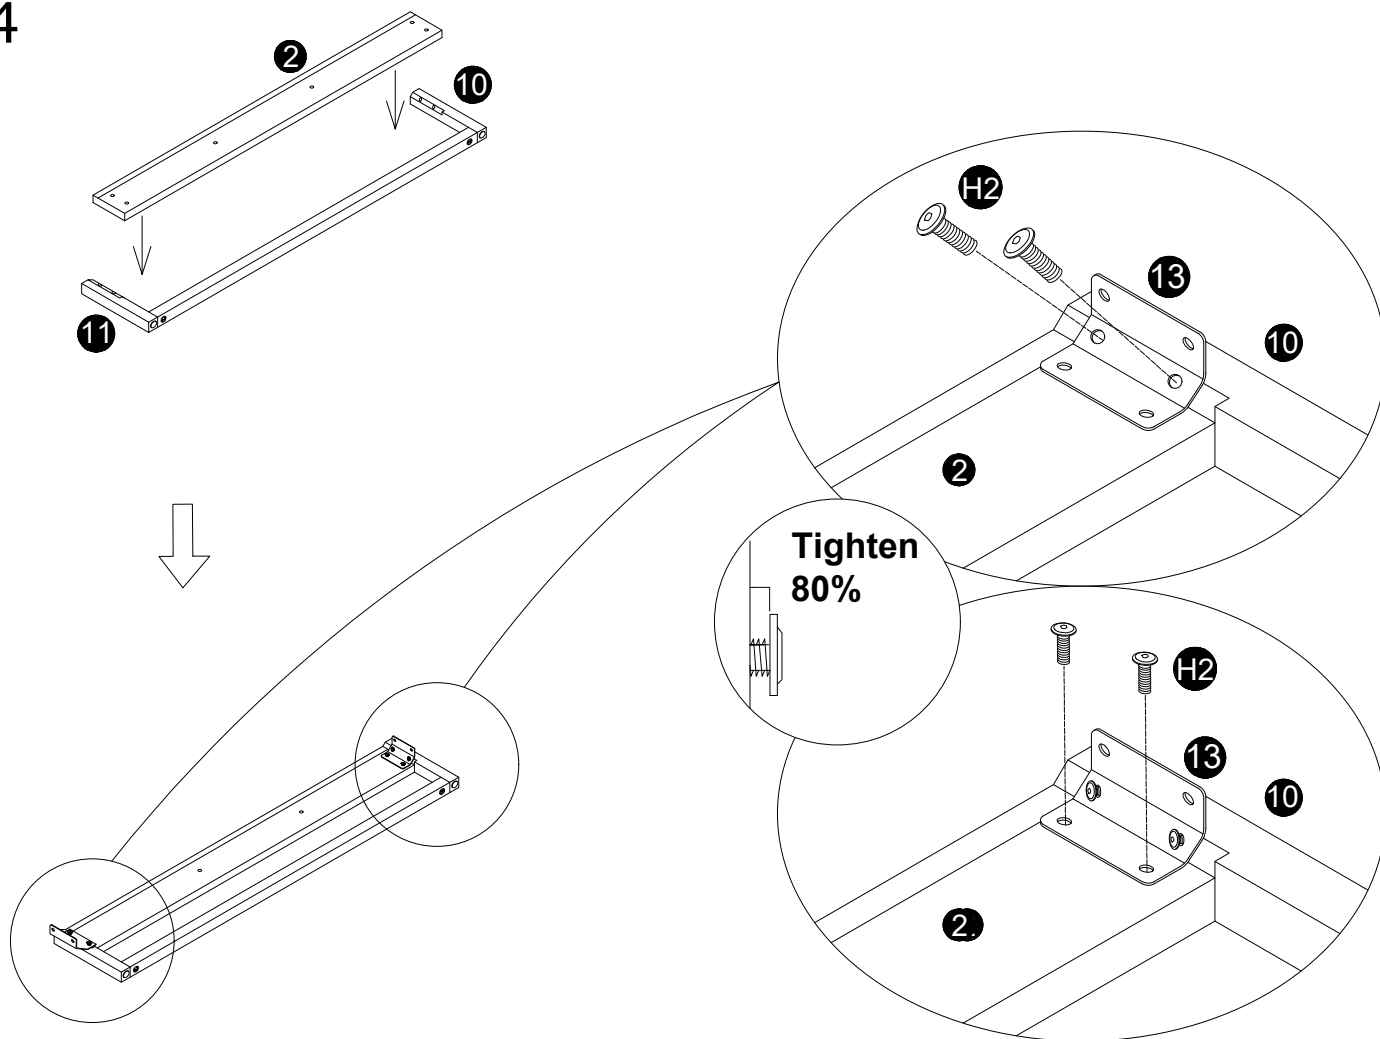


5

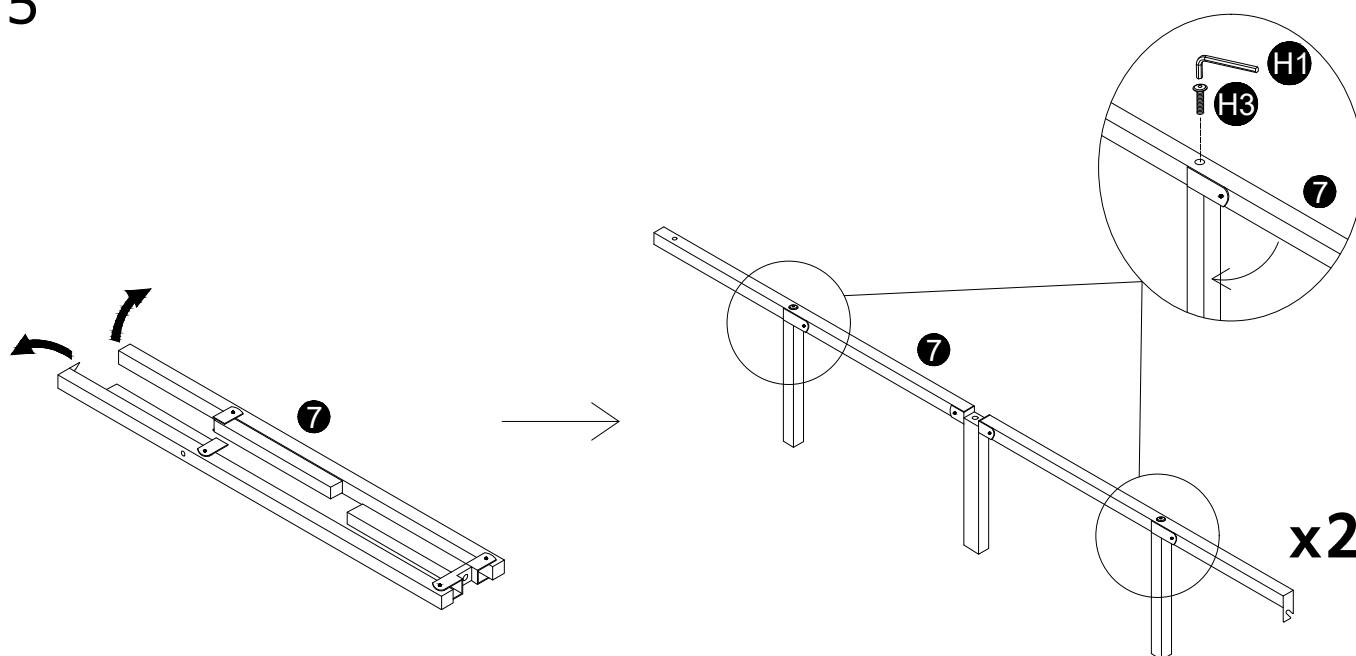


6

BEWARE OF CLAMP HAND

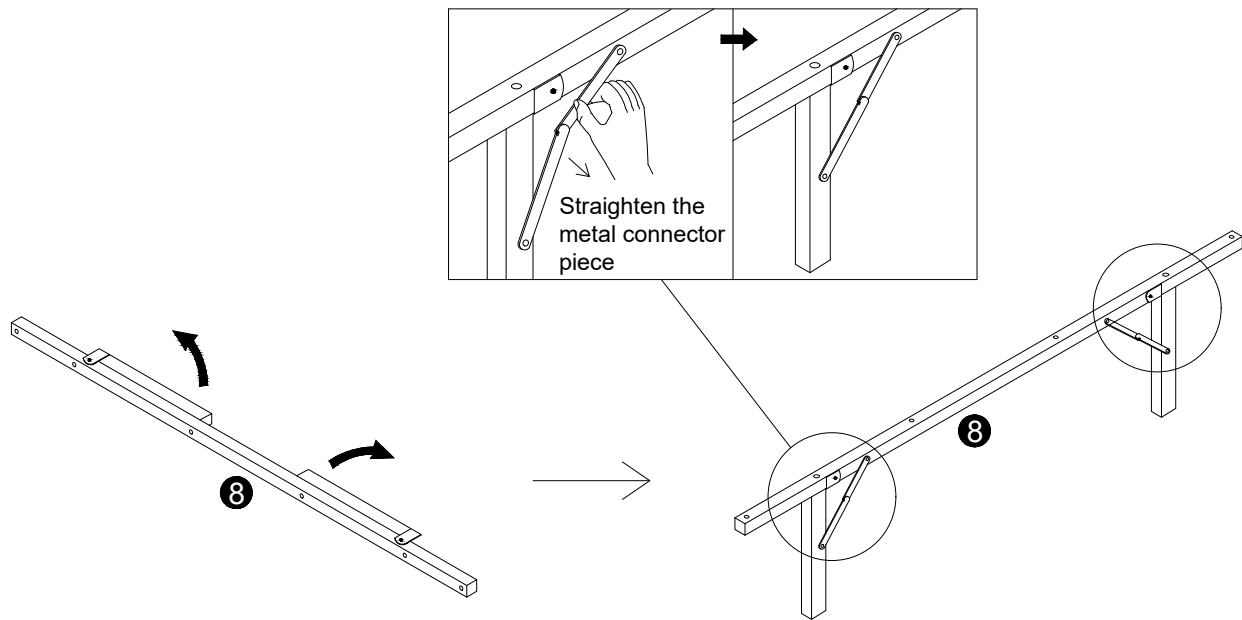


7

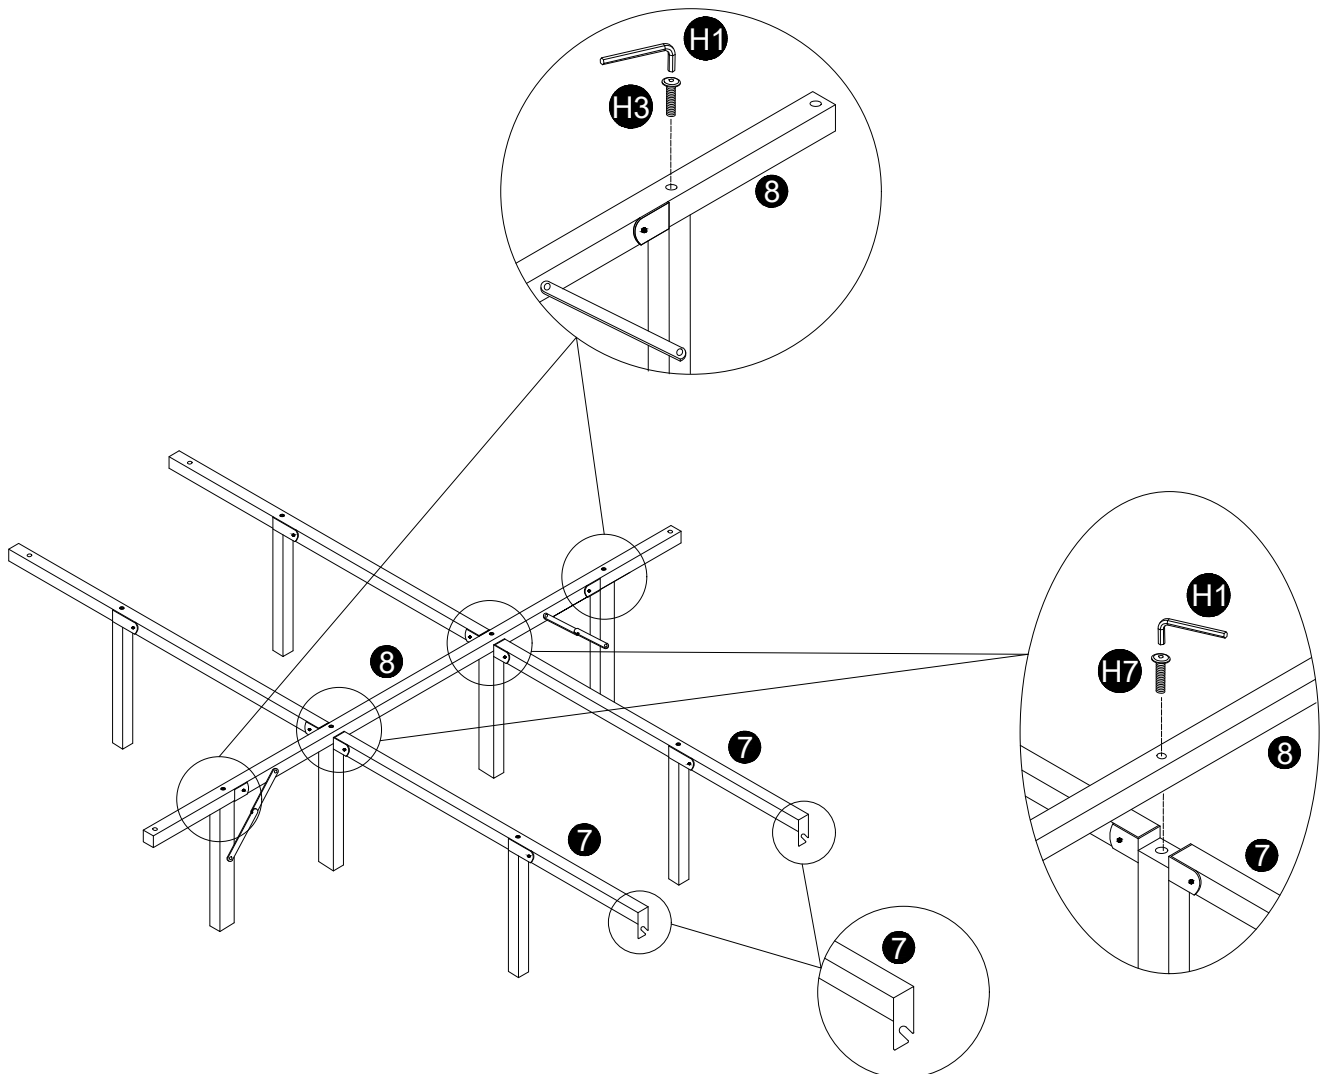


8

Important: part 9 , following the "INNER"

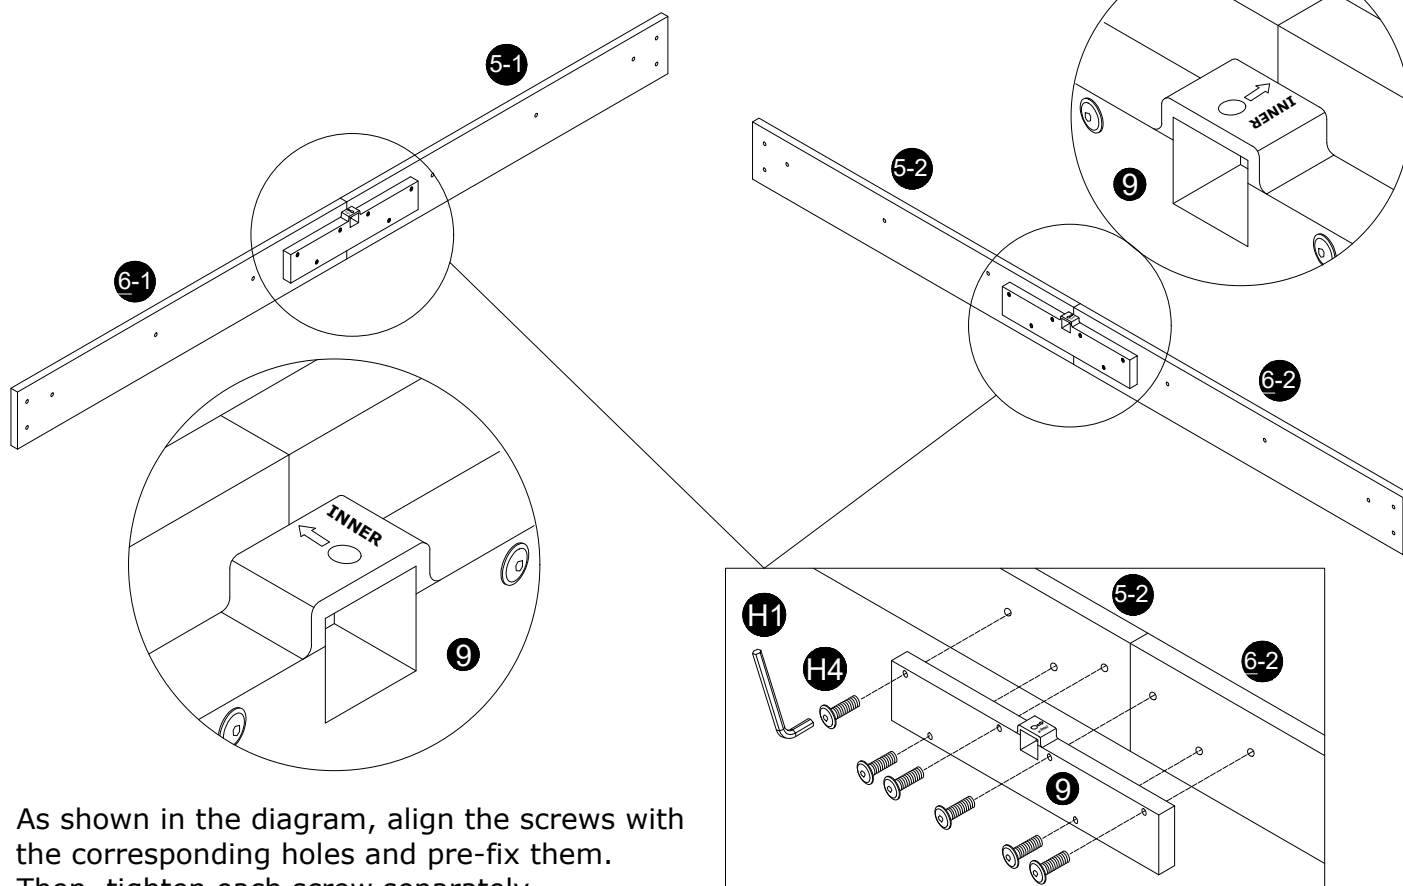


As shown in the diagram, align the screws with the corresponding holes and pre-fix them. Then, tighten each screw separately.

9

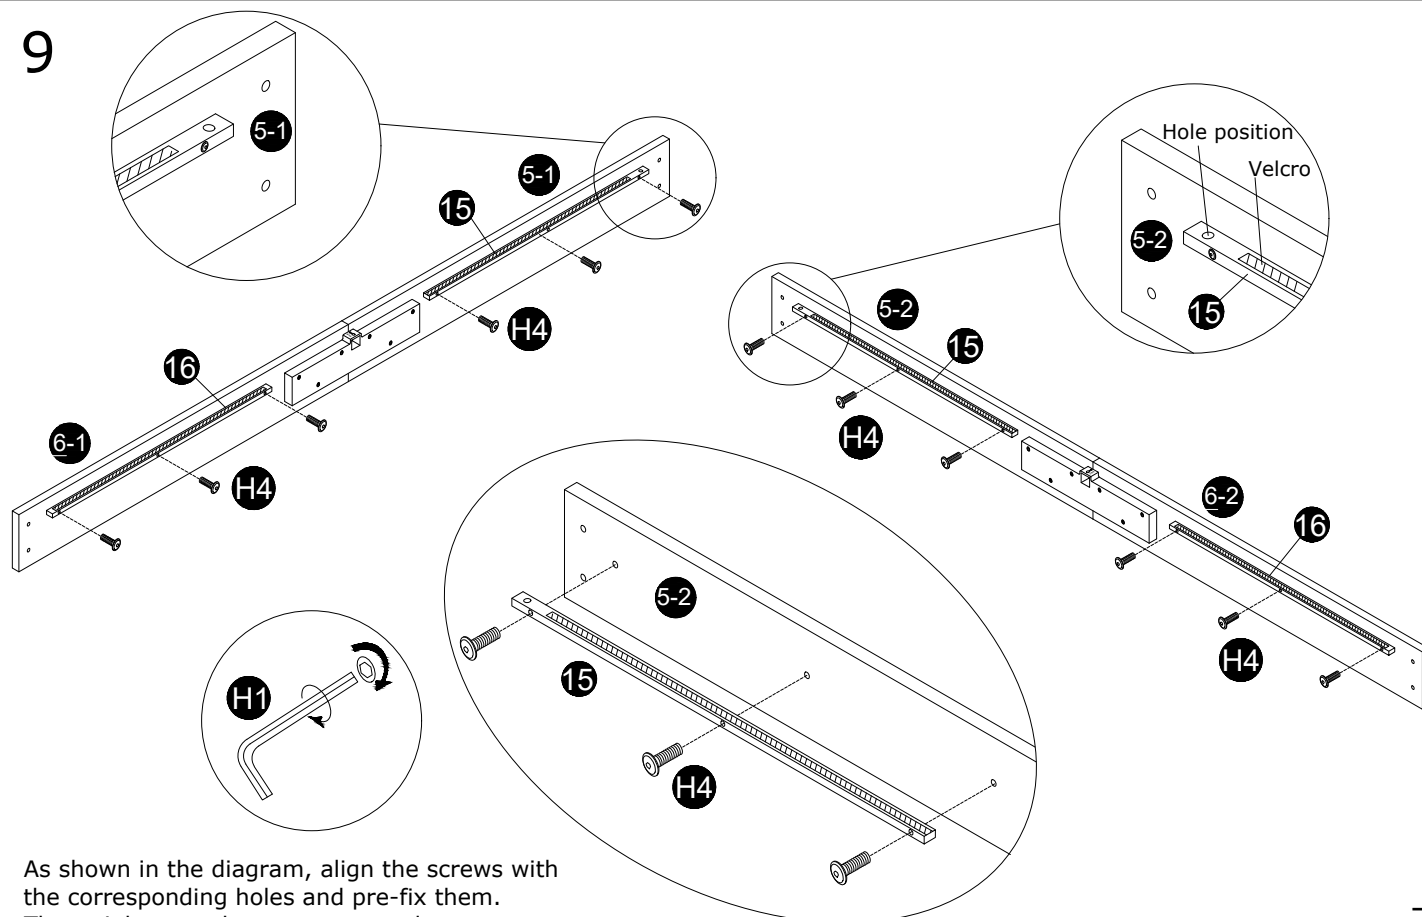


As shown in the diagram, align the screws with the corresponding holes and pre-fix them. Then, tighten each screw separately.


10

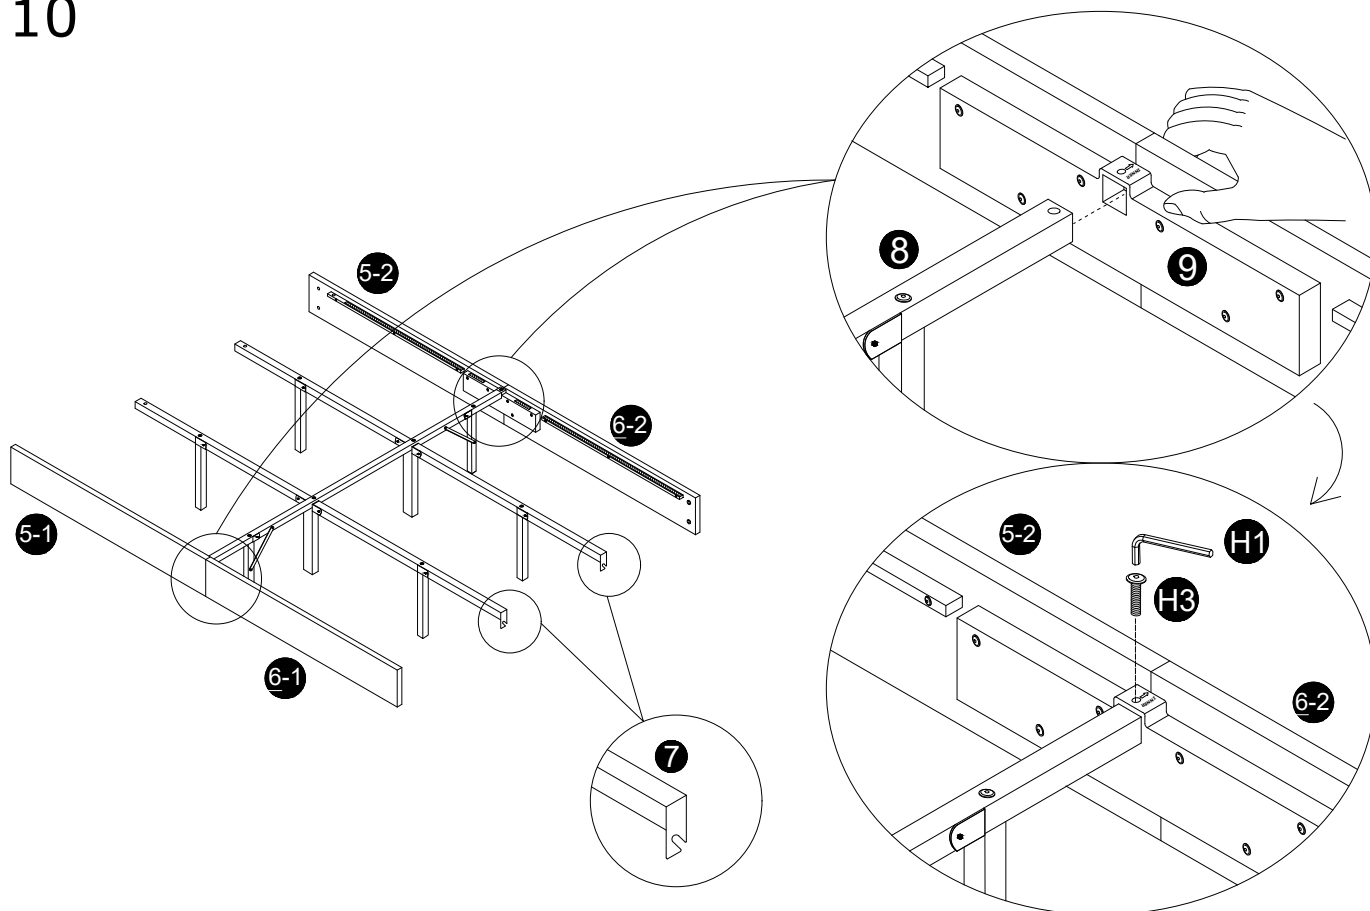


11

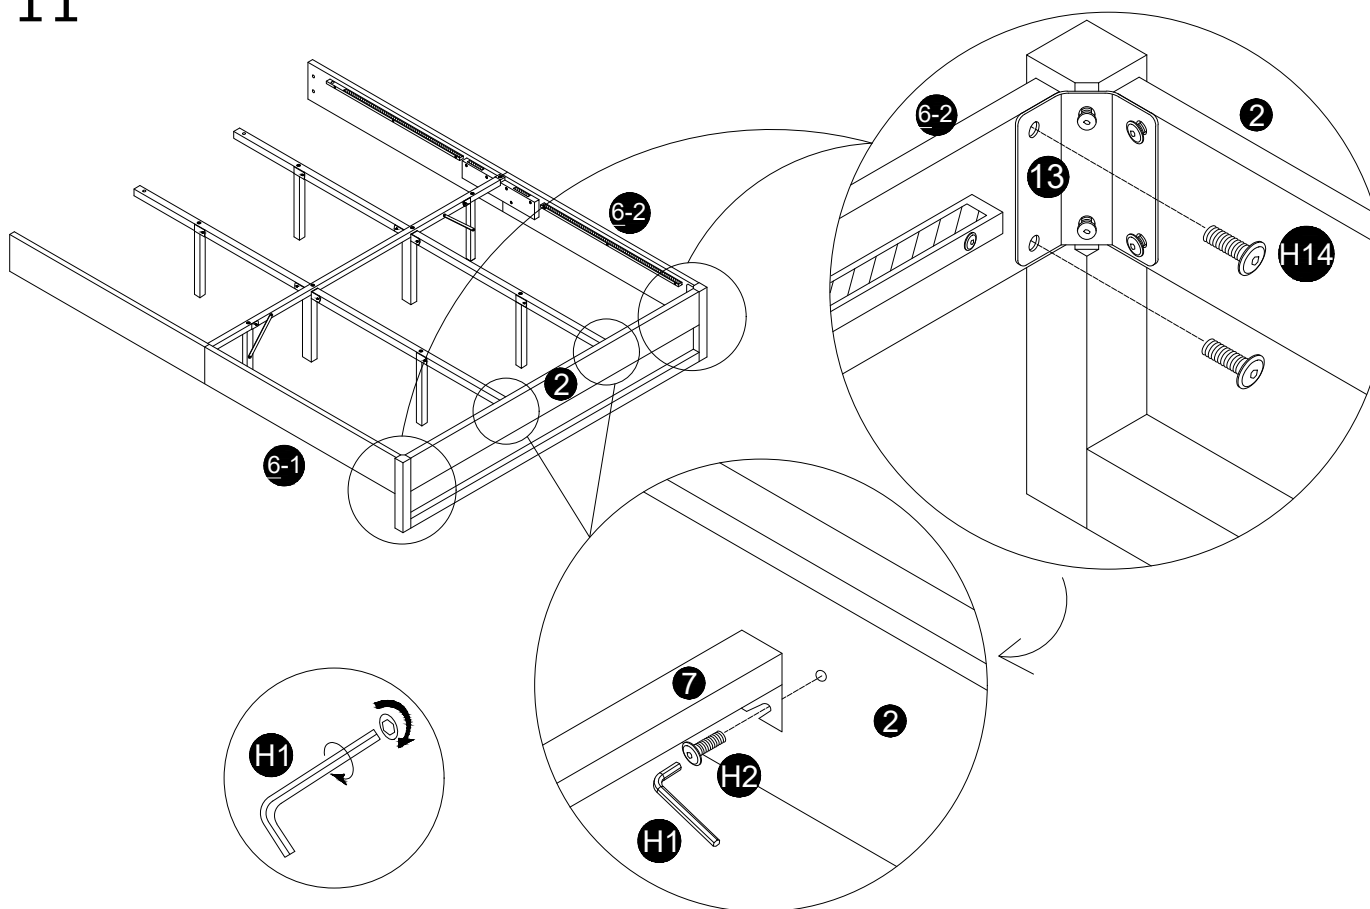


12

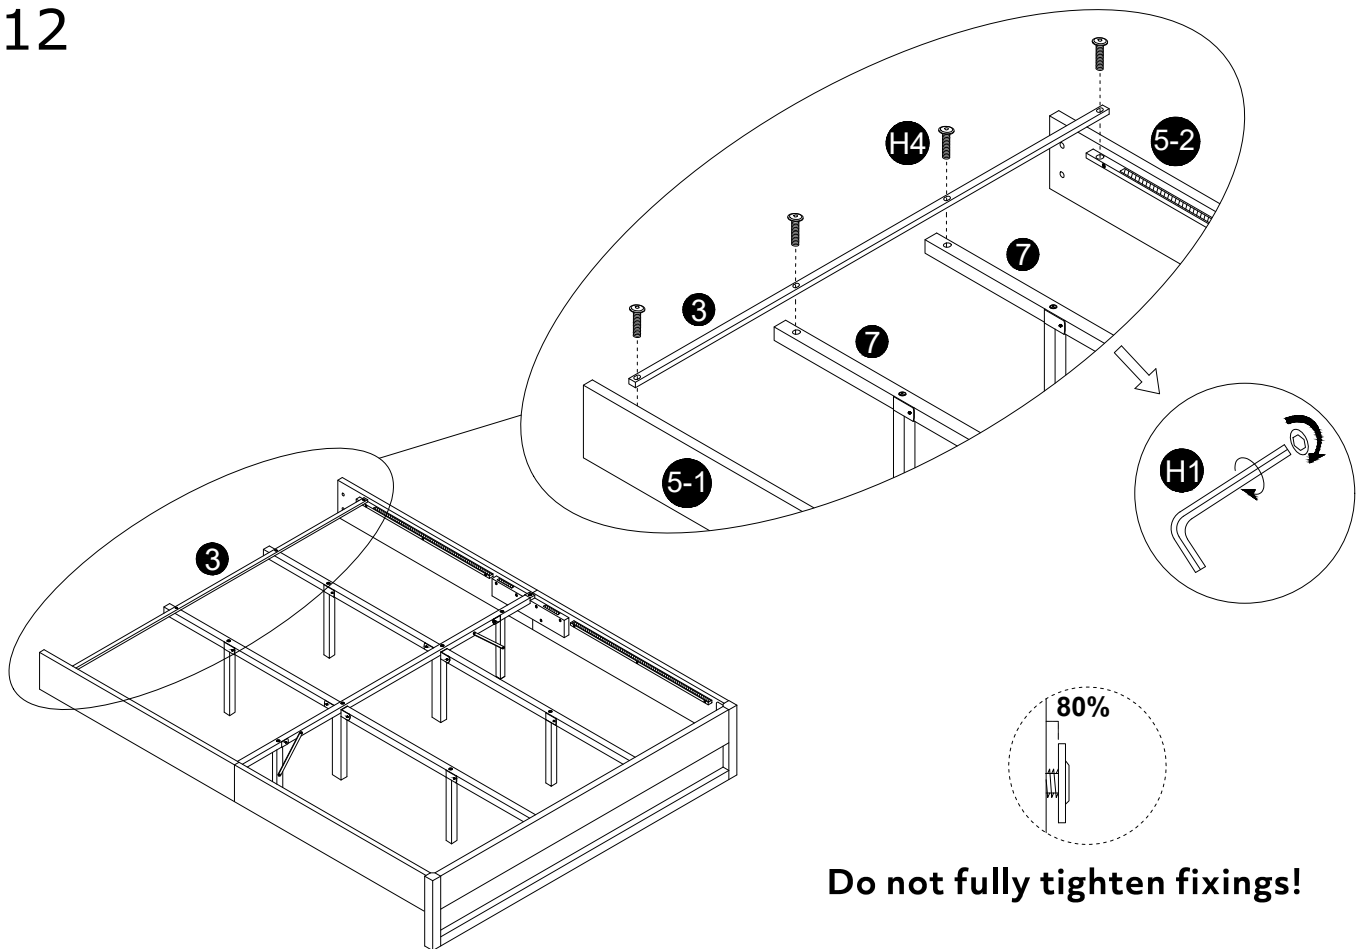

13

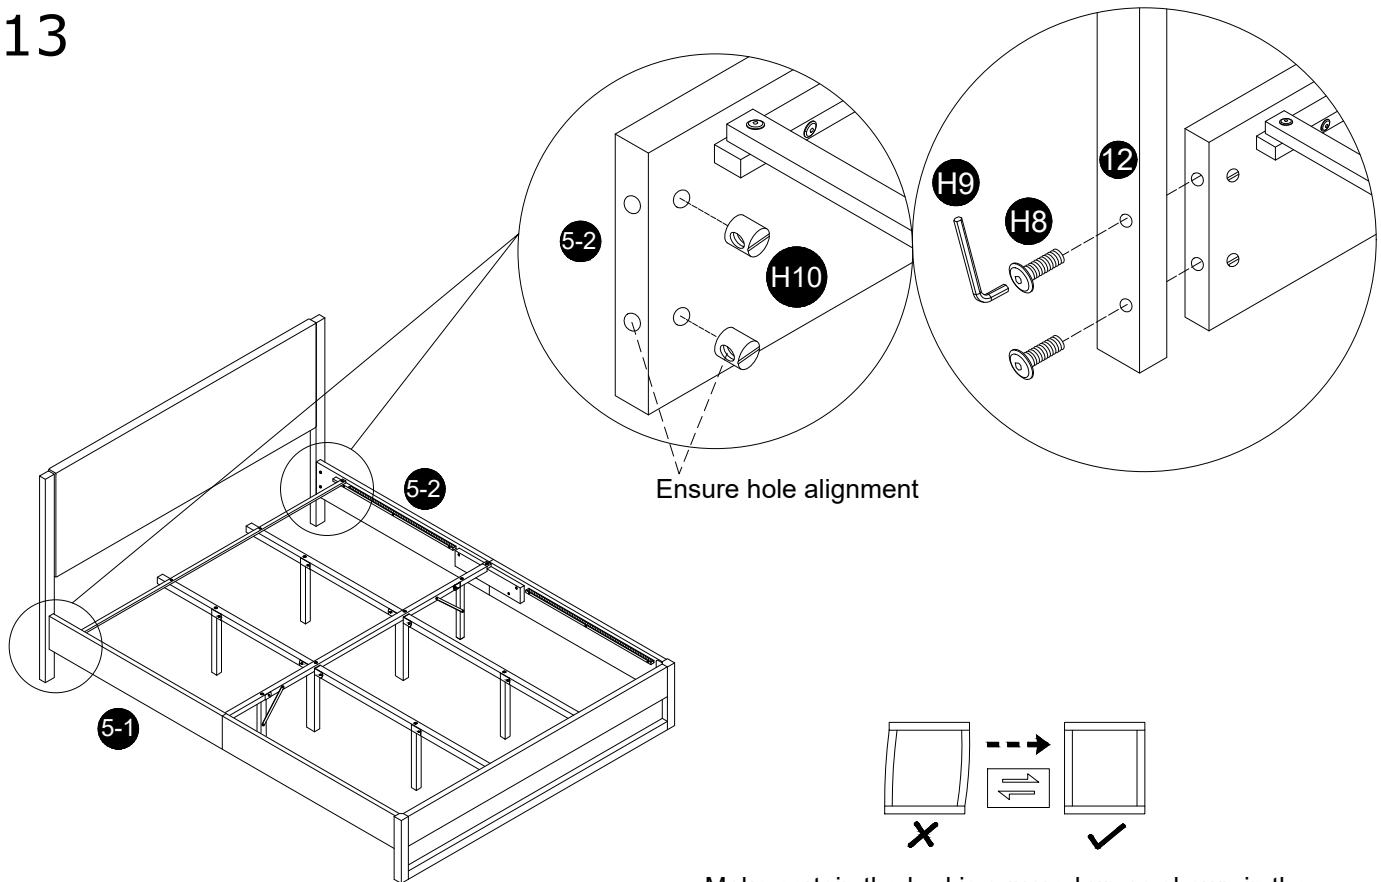

14

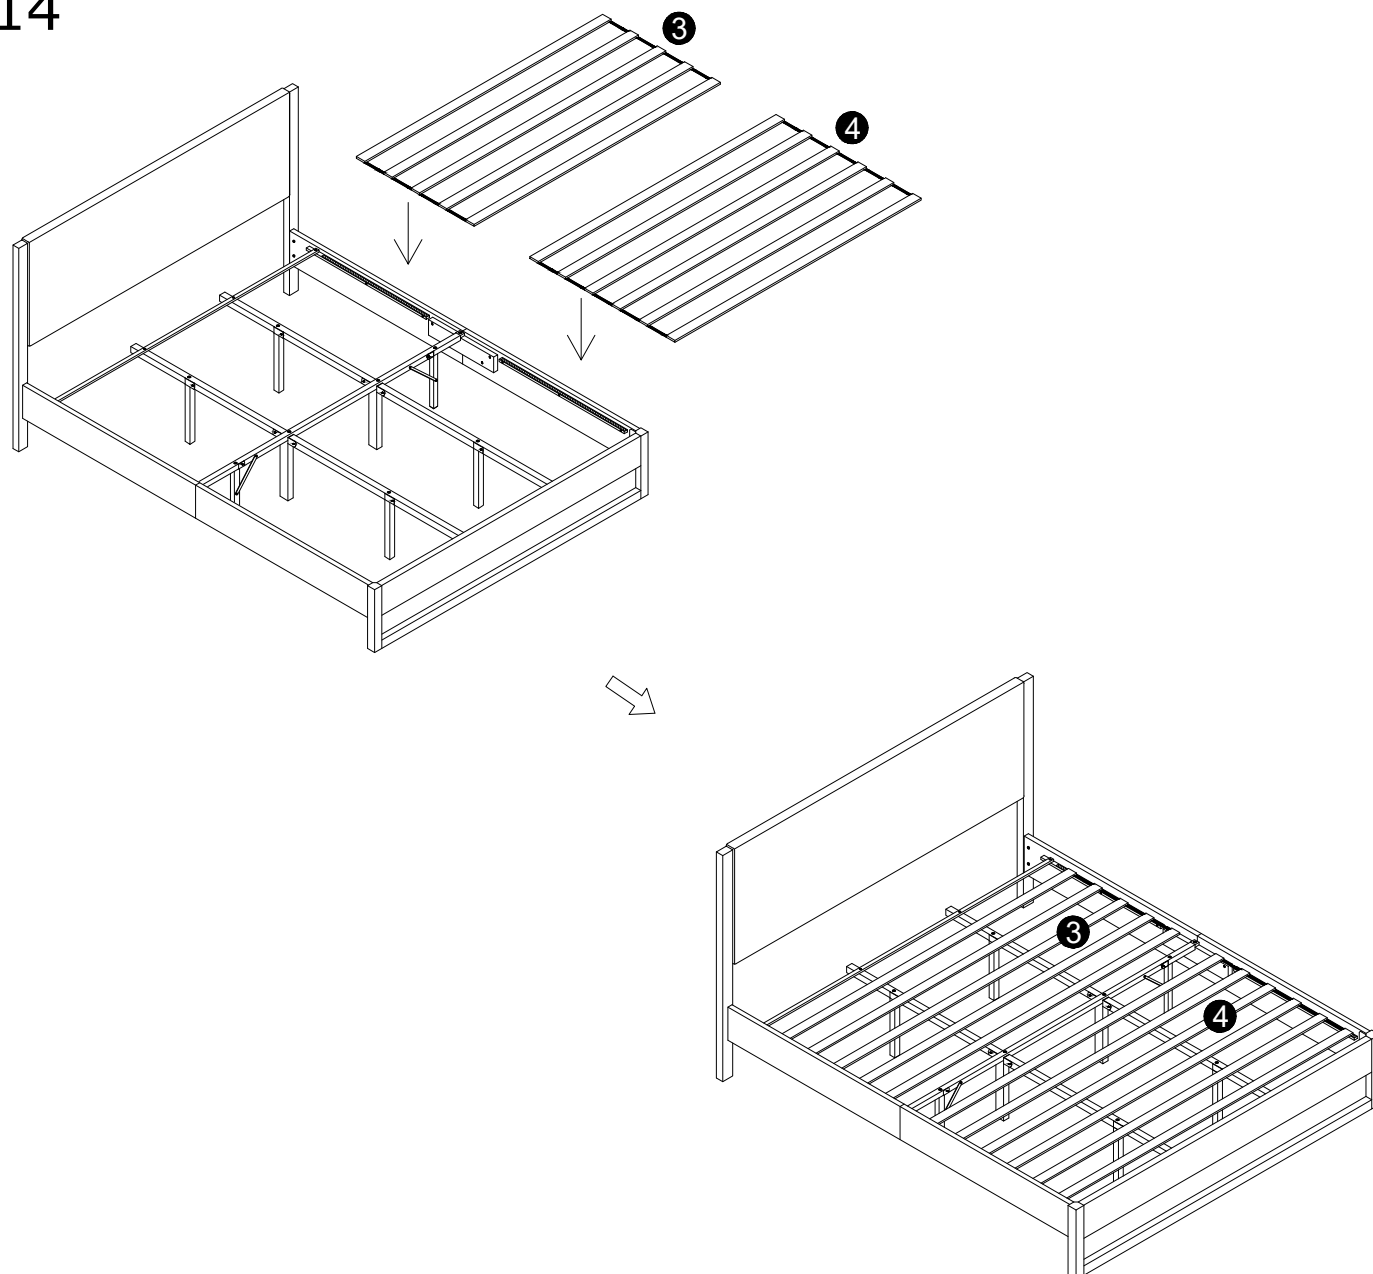

Job Complete !

In the interest of our environment please dispose of all packaging thoughtfully.