

SOFT, DRY CLOTH

CHEMICAL

HEAT

KEEP DRY

HANDLE WITH CARE

DO NOT USE KNIFE

ASSEMBLY INSTRUCTION

MODEL : ID-SC 002

DESCRIPTION : 3 DOOR SHOE CABINET

HARDWARE

A

WOOD
DOWEL
M8 X 25MM
12

B

B1 B2 B3
MINIFIX 5654+5546
QUICKFIT
CAP
6 SETS

C

16MM
CB SCREW
M3.5X16MM
44

D

50MM
CSK CAP
M6X50MM
6

E

NAIL
5/8
24

F

SHELF
SUPPORT
16

G

G1
HANDLE
7050
3G2
HANDLE
SCREW
M4X19MM
6

G3

WASHER
6

H

HINGES 5/8
4

I

ALLEN KEY
M4
1

J

2 PIN STOPPER
1


K

HINGES 2/8
2


L

5038 PVC
SQUARE LEG
5


PART LIST

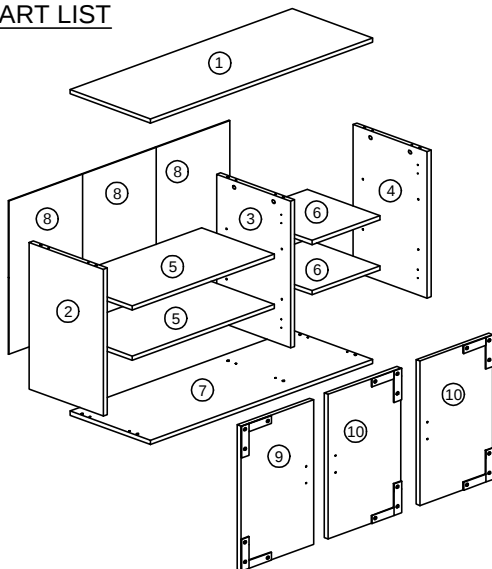


STEP 1

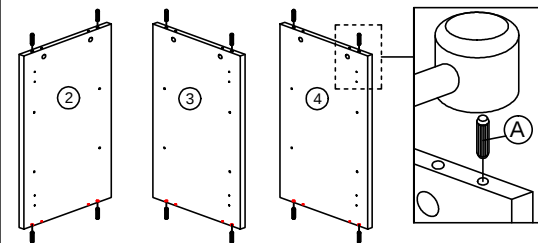


STEP 2

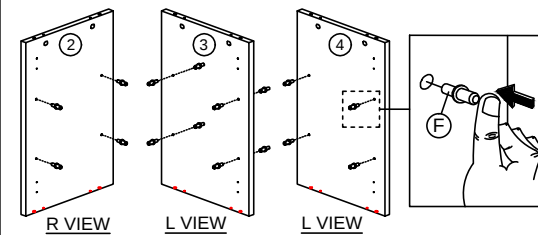


STEP 3

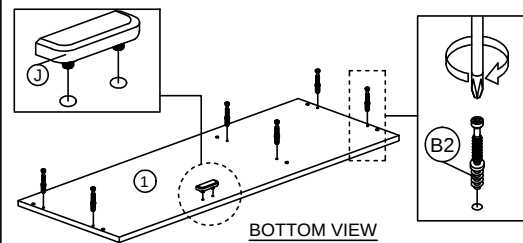


STEP 5

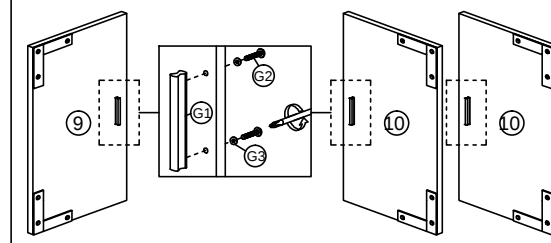


STEP 4

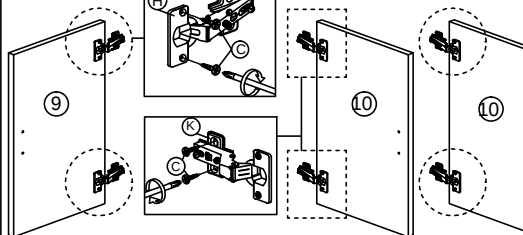


STEP 6

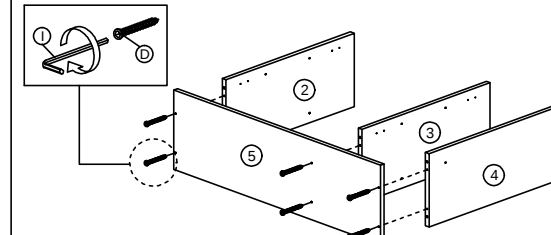


STEP 7

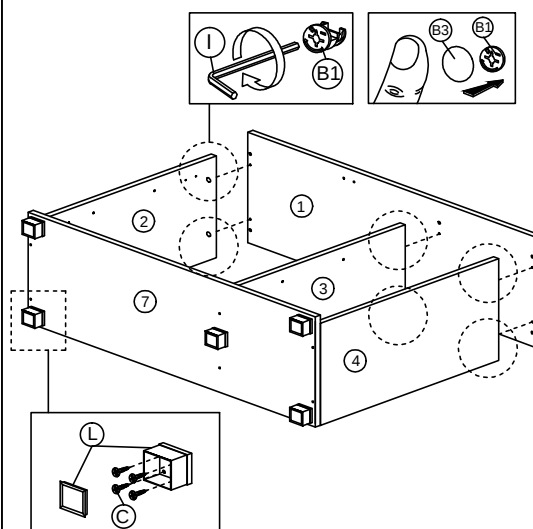

STEP 8

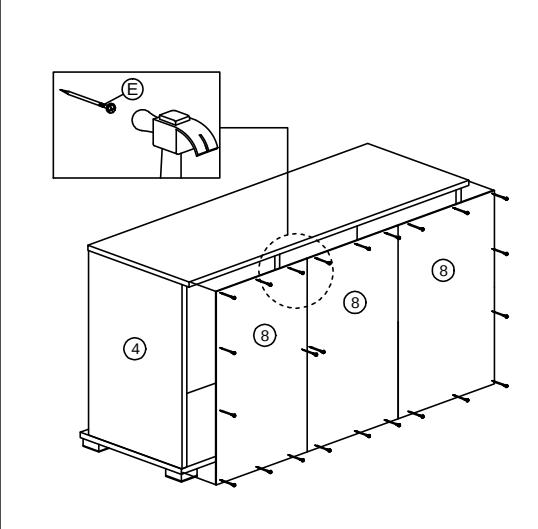

STEP 9

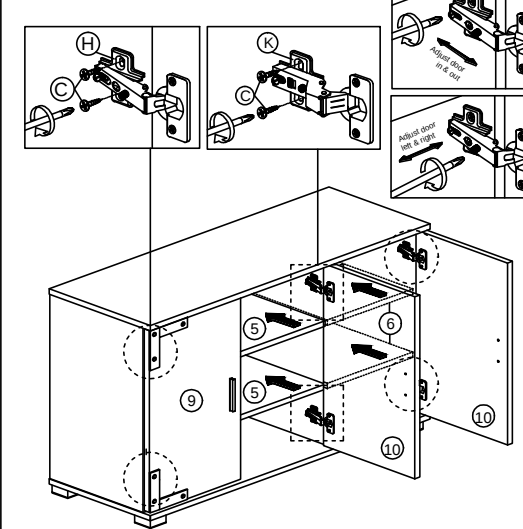

COMPLETED

