


INSTALLATION INSTRUCTIONS FOR 5/8" INDUSTRIAL PIPE BAY CURTAIN ROD

SINGLE ROD

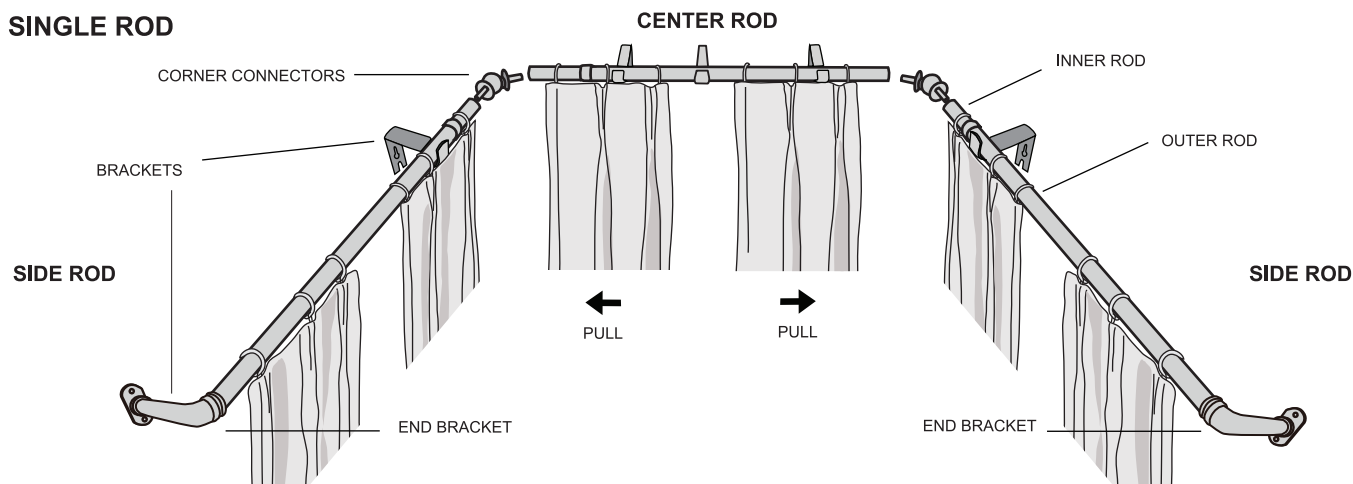


1 Mounting Brackets
This rod fits most bay window configurations. Spot and mount brackets above window using a level to ensure accuracy. Use anchors with screws for drywall installs.


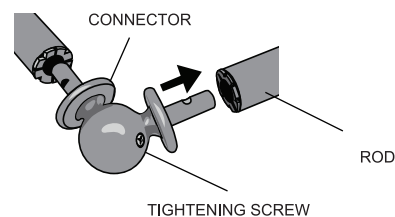
2 Rod Assembly
Build the three rod parts by sliding the rod segments together. Depending on the drapes attachment method, slide the rod pockets or the rings over the assembled rod segments.

3 Attaching Rod Connector
Insert the rod connectors to the center rod and then loosen the connectors tightening screw to find the correct angles for the side segments. Tighten the screw on the connector to lock the angle into place. Push the completed side segments onto the open end of the rod connectors.


4 Hanging the Rod
Hang the completed assembly by loosening the brackets adjustment screws and dropping the rods in.



5 Take your assembled rod and insert each end into the end brackets. Once hung, tighten both the brackets tightening screws and the connectors tightening screws.

DOUBLE ROD

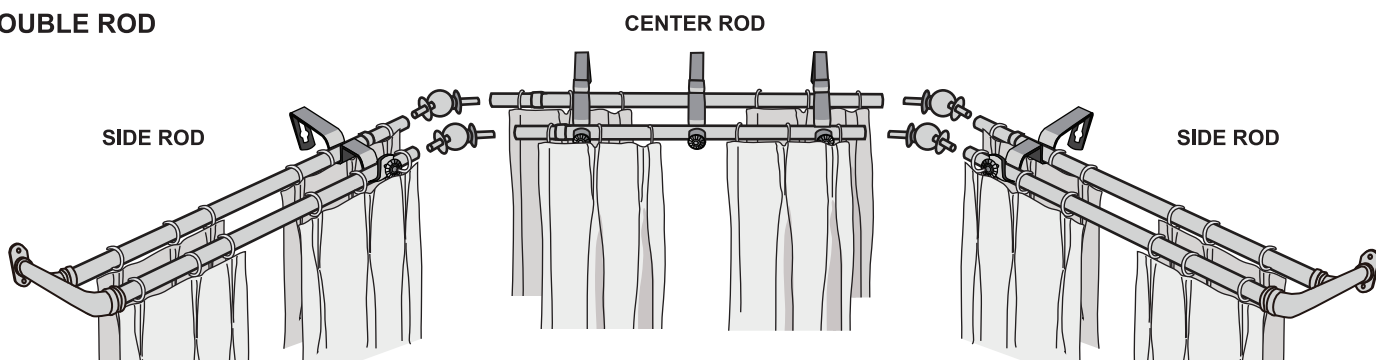


1 Mounting Brackets
This rod fits most bay window configurations. Spot and mount brackets above window using a level to ensure accuracy. Use anchors with screws for drywall installs.



2 Rod Assembly
Build the three rod parts by sliding the rod segments together. Depending on the drapes attachment method, slide the rod pockets or the rings over the assembled rod segments.

3 Attaching Rod Connector
Insert the rod connectors to the center rod and then loosen the connectors tightening screw to find the correct angles for the side segments. Tighten the screw on the connector to lock the angle into place. Push the completed side segments onto the open end of the rod connectors.

4 Hanging the Rod
Hang the completed assembly by loosening the brackets adjustment screws and dropping the rods in.



5 Take your assembled rod and insert each end into the end brackets. Once hung, tighten both the brackets tightening screws and the connectors tightening screws.

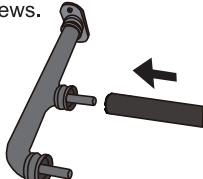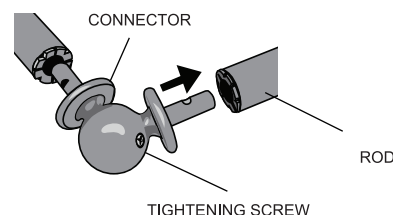DRYWALL ANCHOR INSTALLATION



If screws are going directly into wood trim or wall studs - drill 1/8" (3mm) holes and install screws through bracket. If screws are going into hollow wall - drill 3/16" (5mm) holes and push or lightly hammer plastic anchors into holes. Then install screws through brackets. Do not tighten screws too much - just snug is best.