







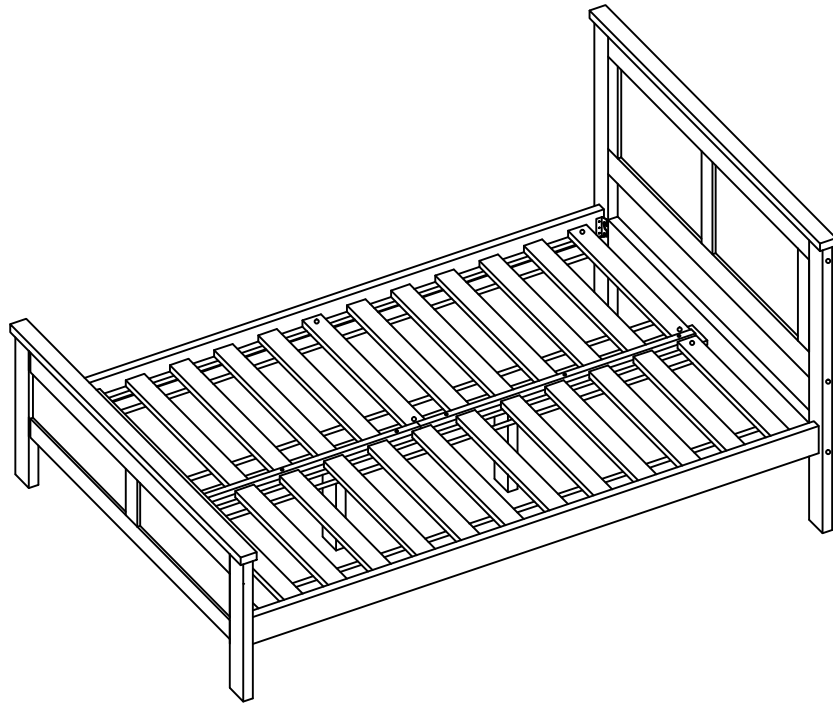




# Assembly instruction

140/160/180 - BED





## HARDWARE


A	 M6X110mm	06
B		08
C		06
D	 Ø8X30mm	06
E	 Ø3.5X30mm	18

F		01
G	 Ø7x50mm	06
H		06
I		01
J	 Ø3.5X16mm	06


Assembly instructions and directions for use

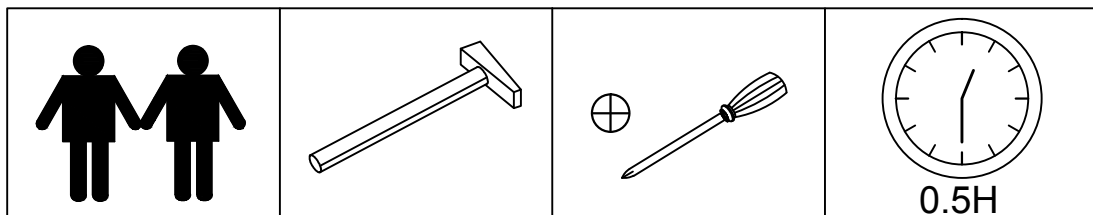

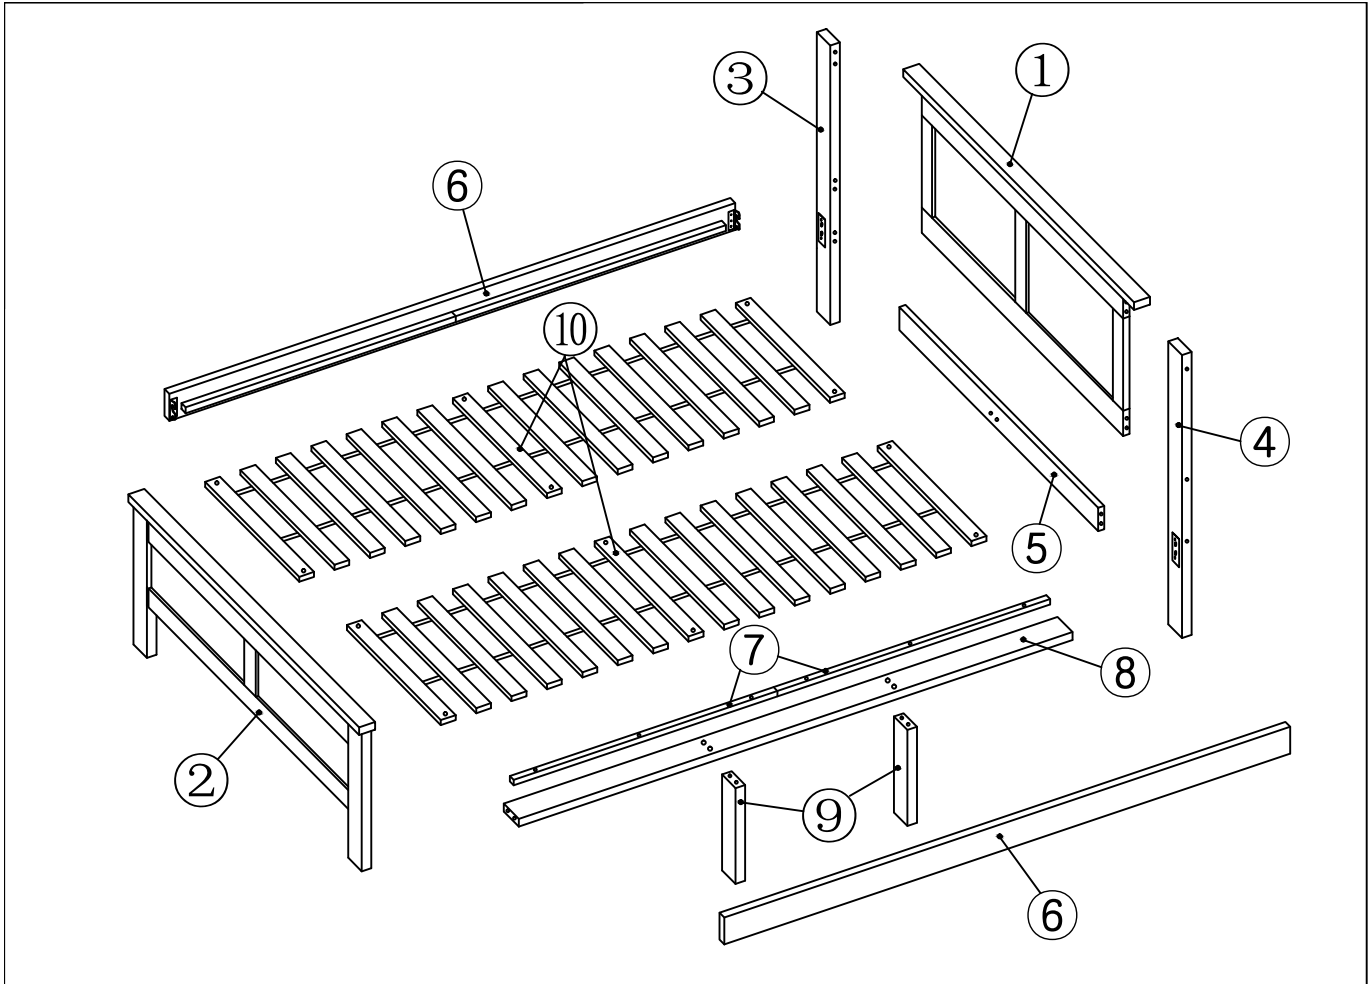





D	 Ø8X30mm	06
---	--	----

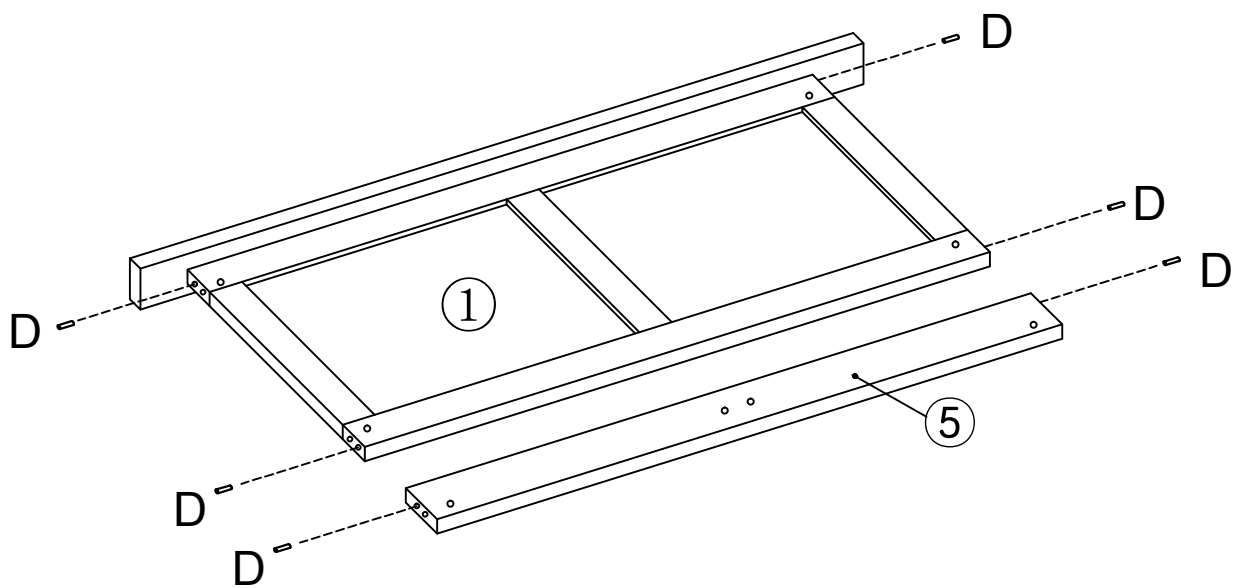

**01**




A	 M6X110mm	06
C		06
F		01

# 02

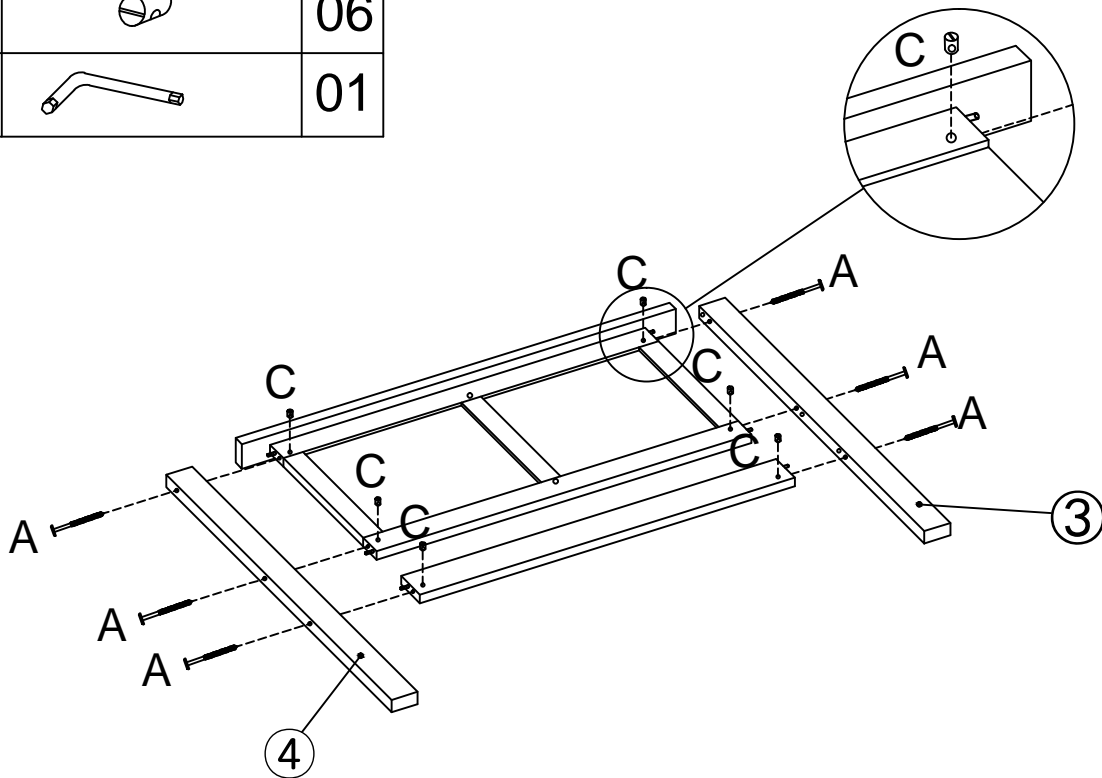

G	 Ø70x50mm	04
F		01

# 03

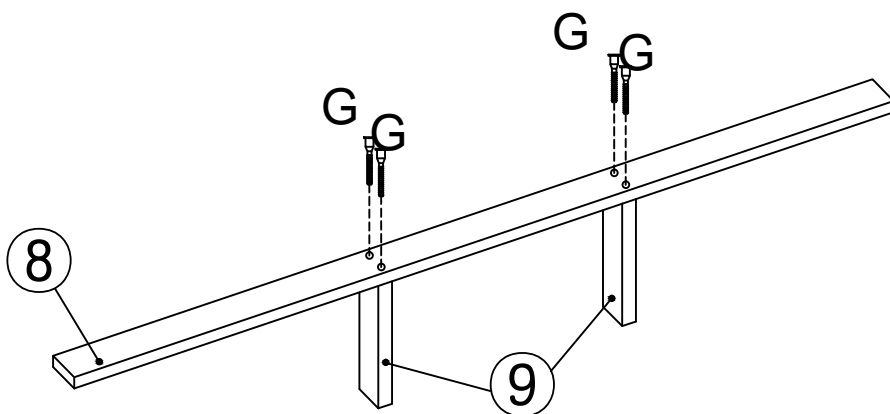


E



Ø3.5x30mm

06

# 04

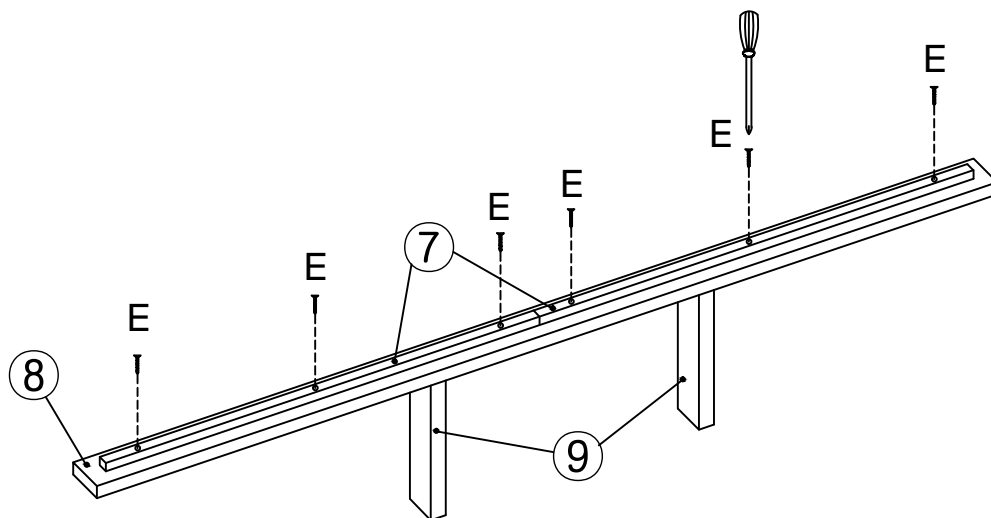

B



08

J



Ø3.5X16mm


03




# 05

I






01

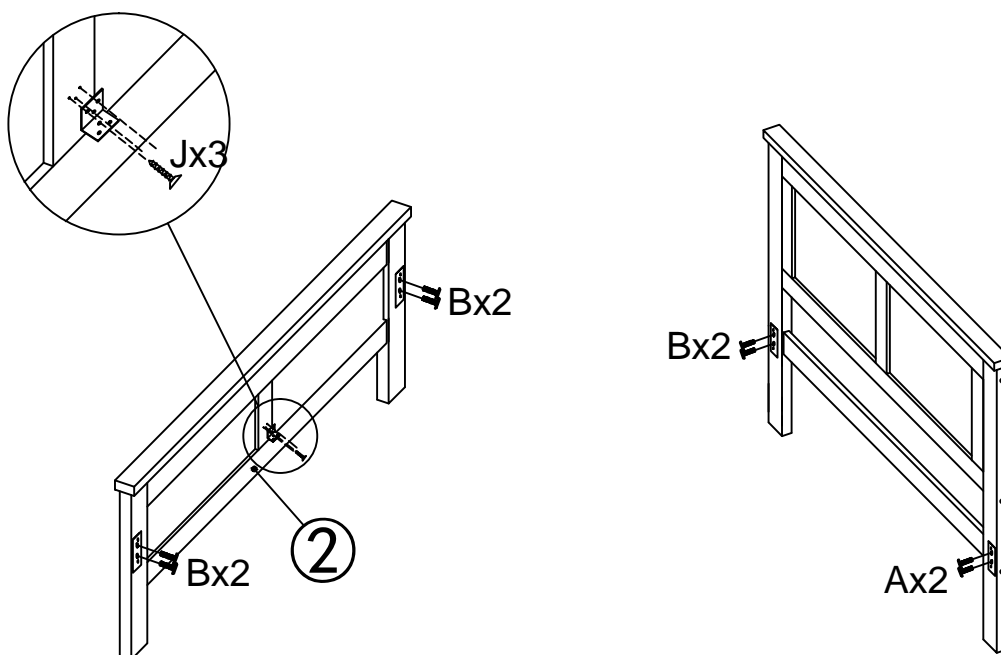


F		01
G	 Ø70x50mm	02
J	 Ø3.5X16mm	03

# 06

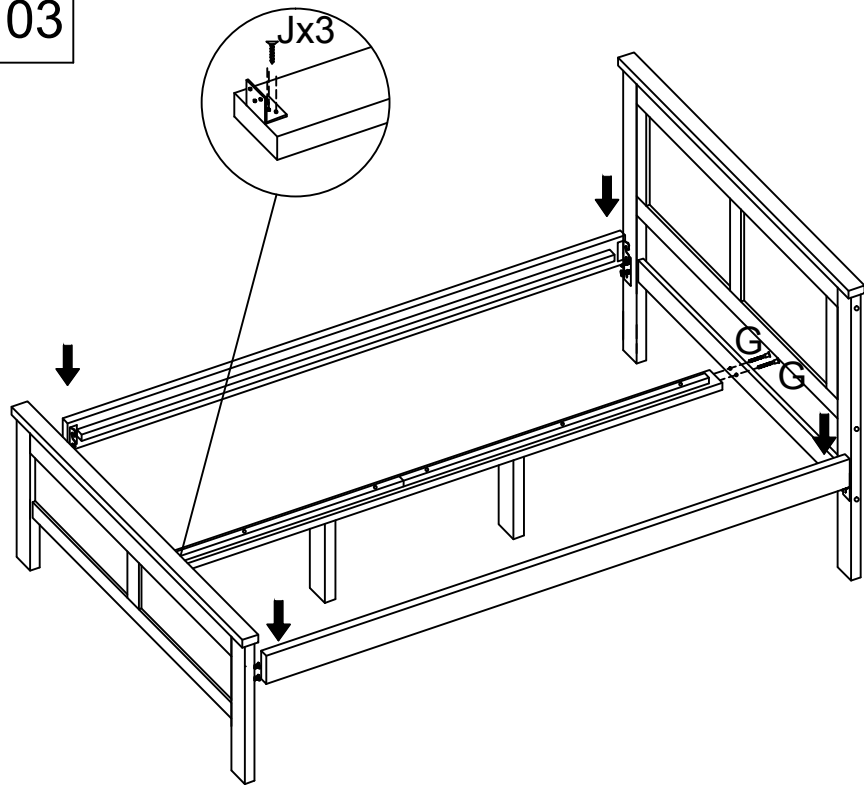

E	 Ø3.5X30mm	12
H		06

# 07

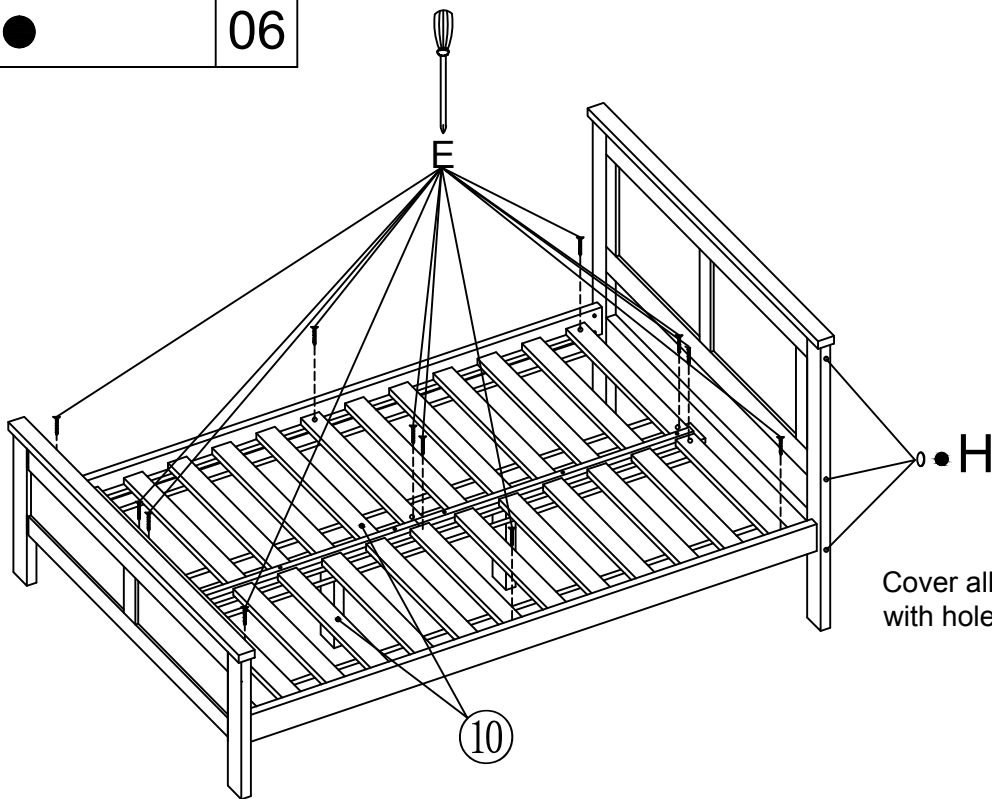

Cover all the holes with hole sticks.