


Musstufic

Assembly Instructions



VD06302201WH/02GR/03BK

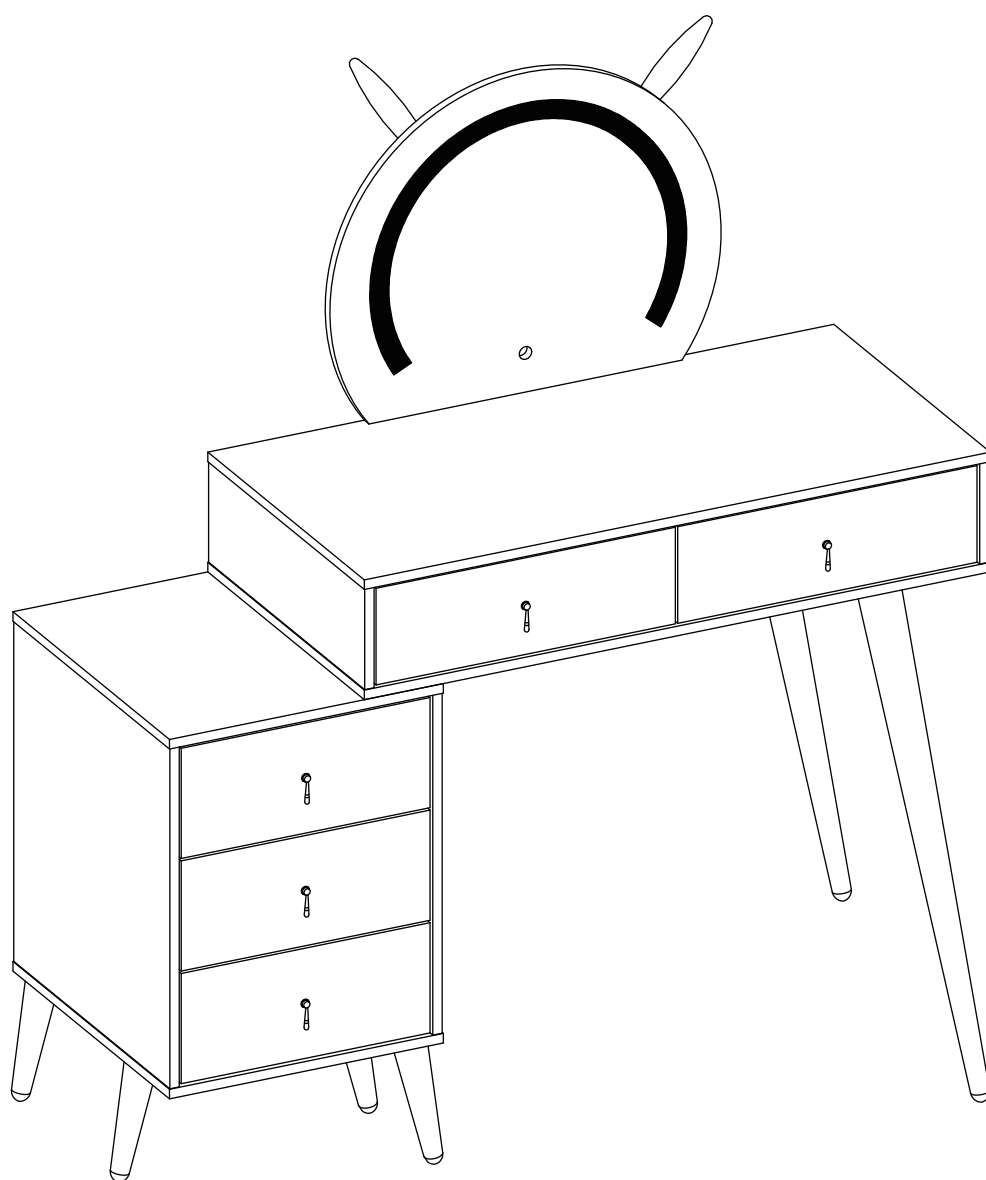

Part List




Open the package, and put the item on the mat with care. Please install it carefully to ensure your fingers will not be scratched.

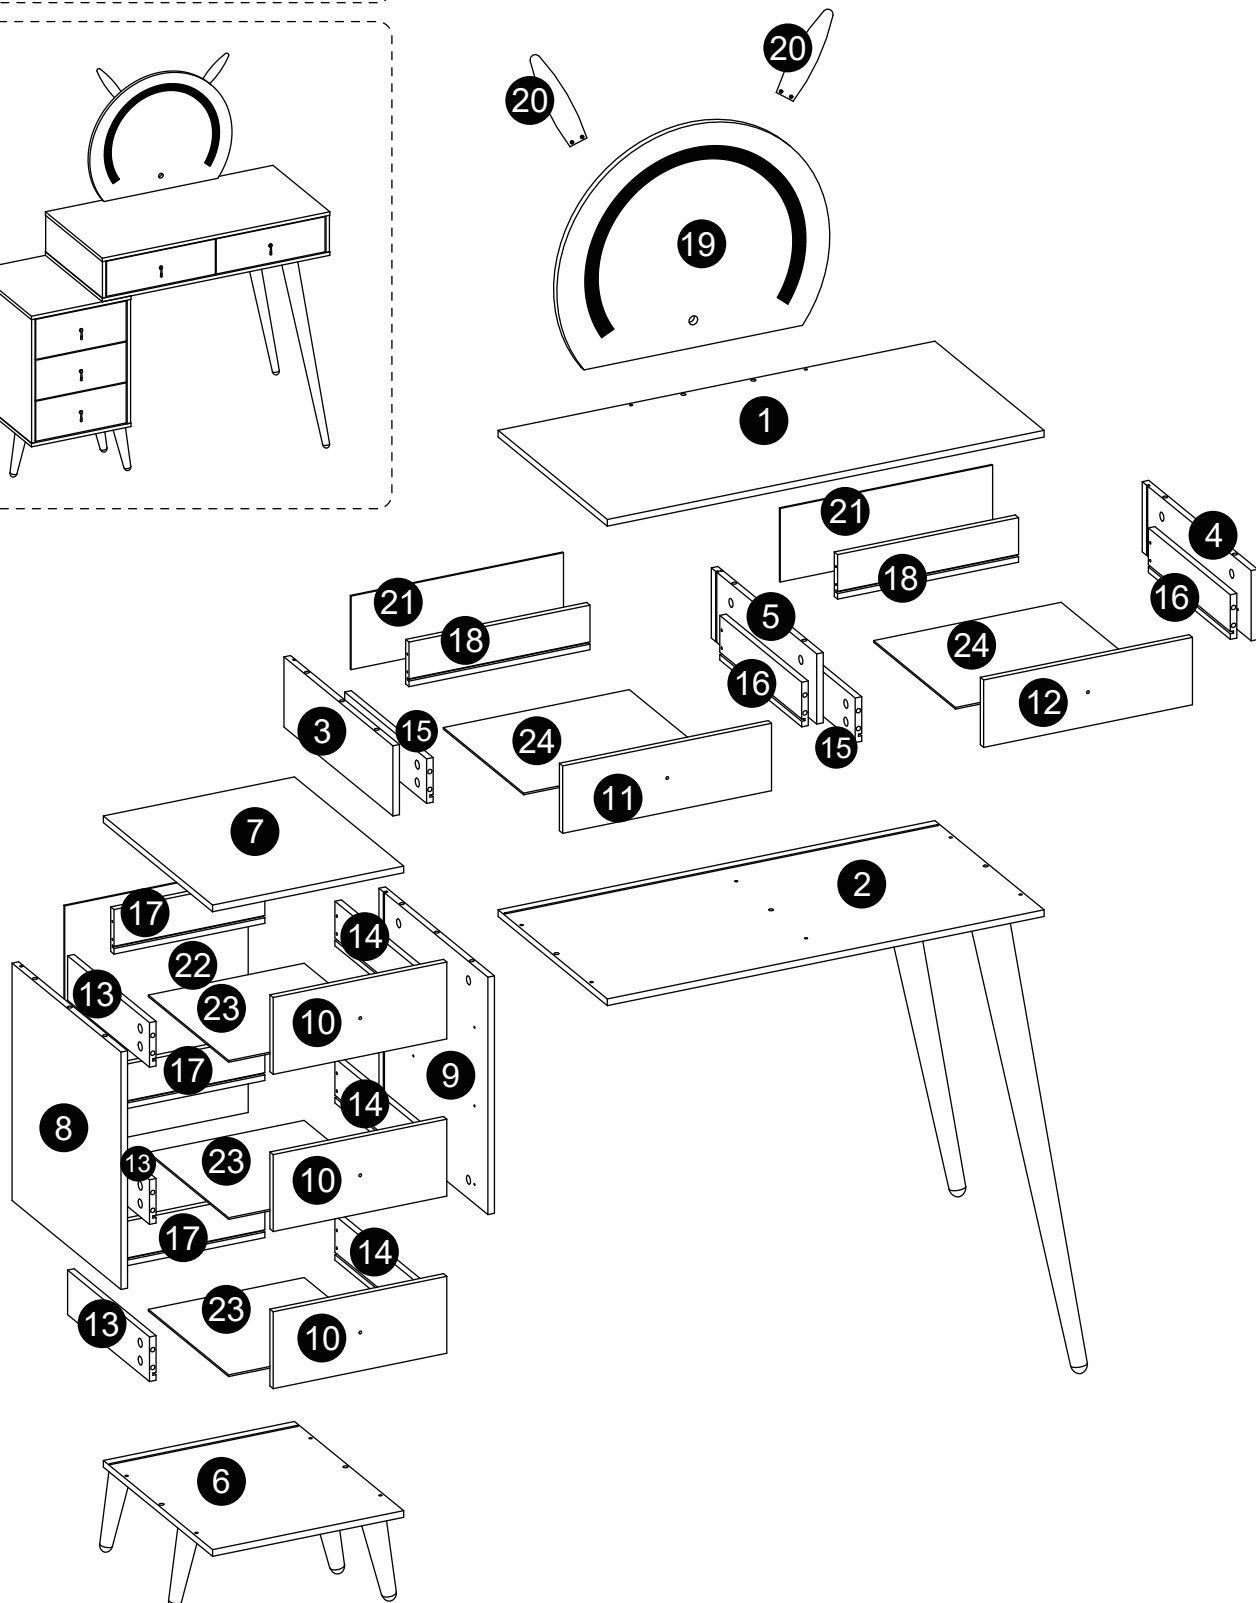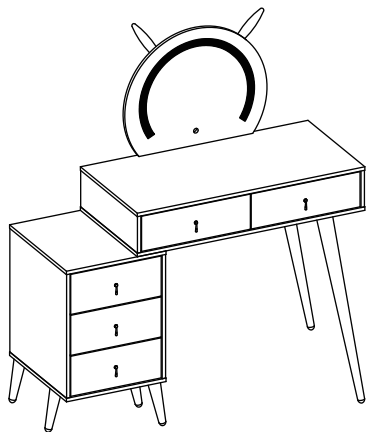

Hardware List

A

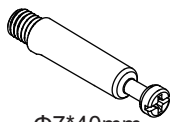


Φ7*40mm
×40

B



Φ15*9.5mm
×40

C




Φ8*30mm
×12

D




Φ3.5*12mm
×86

F



Φ3.5*30mm
×20

G




Φ3.5*20mm
×4

H




×5

I




Φ4*15mm
×5

J




Φ5*50mm
×2

K




H=150mm
×4

L

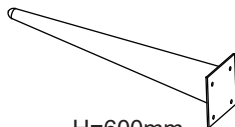

H=600mm
×2

M

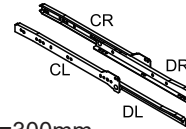


L=300mm
×5

N




The hole spacing is 33mm
×3

O



×12

P




×1



Q




×44

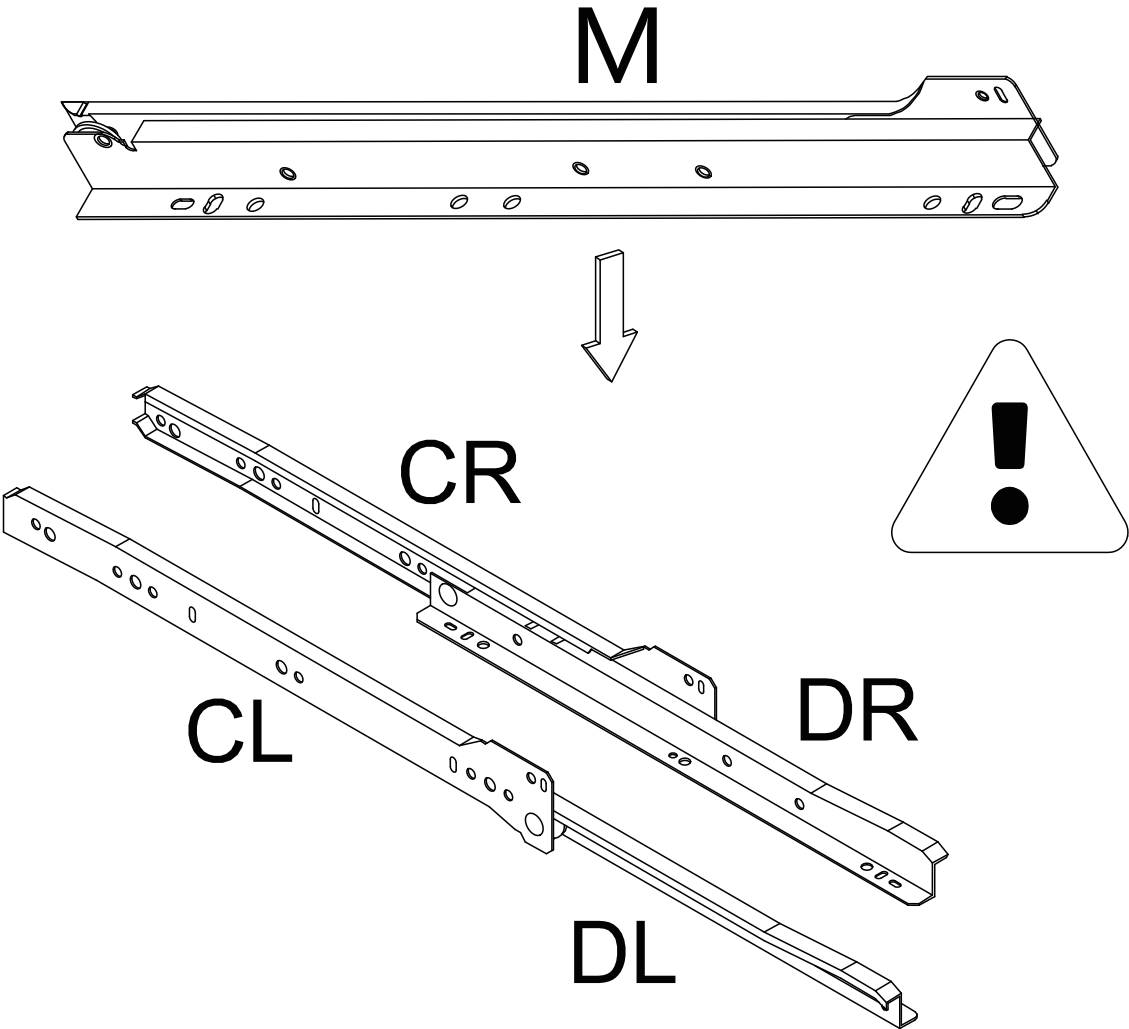



| Step2

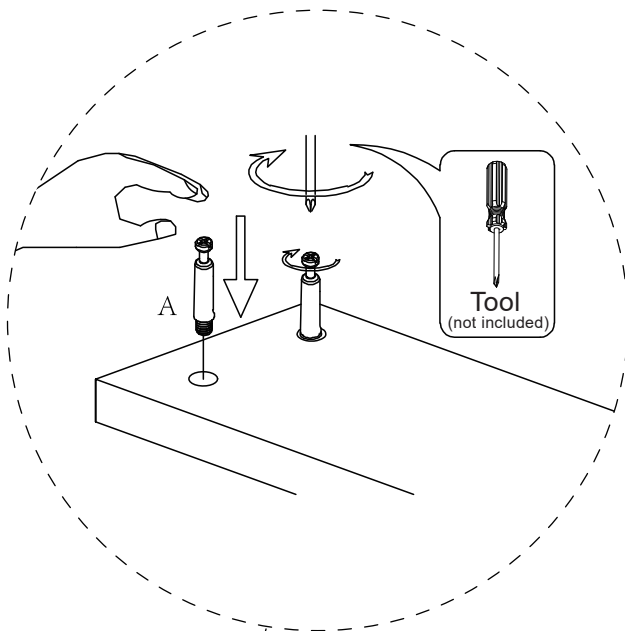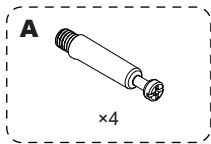


! NOTE:
Please make sure “A” hardware
tightened and can't be pulled out!

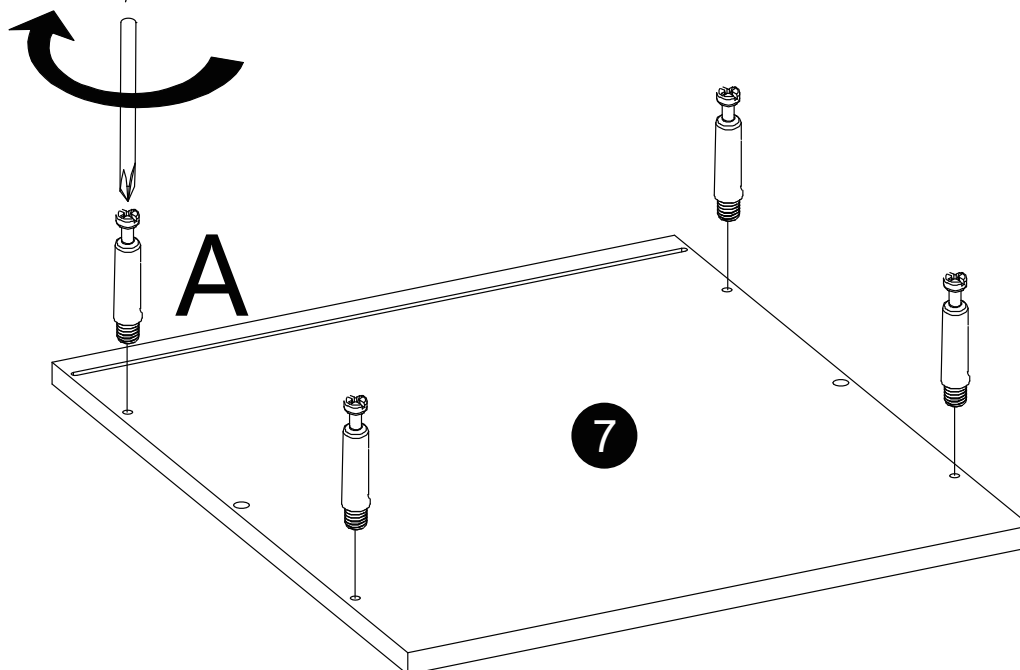









| Step3

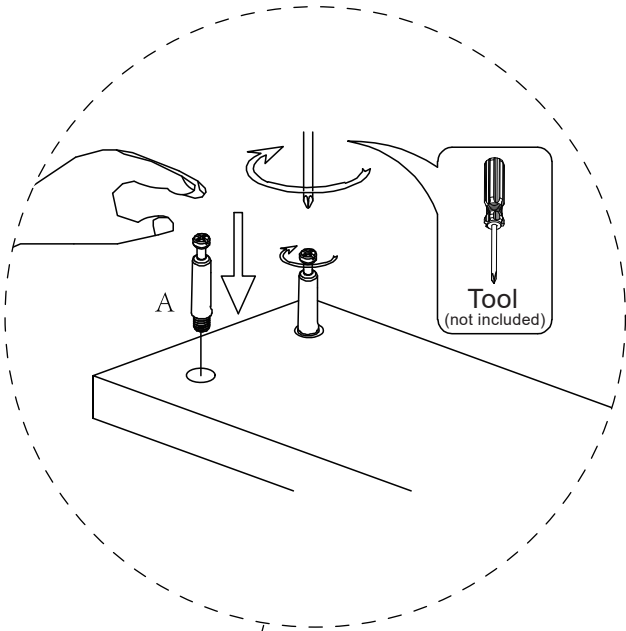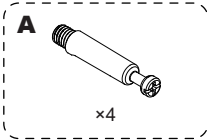


! NOTE:
Please make sure “A” hardware
tightened and can'tbe pulled out!

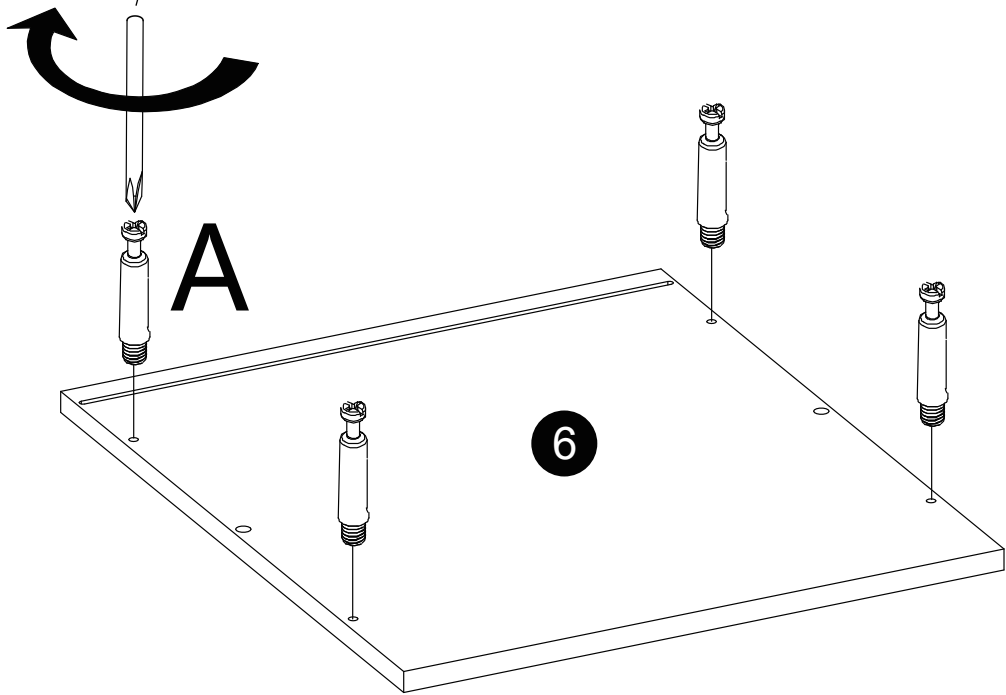






| Step4

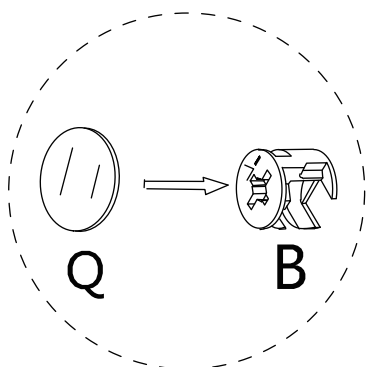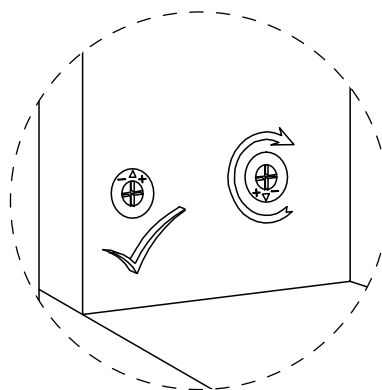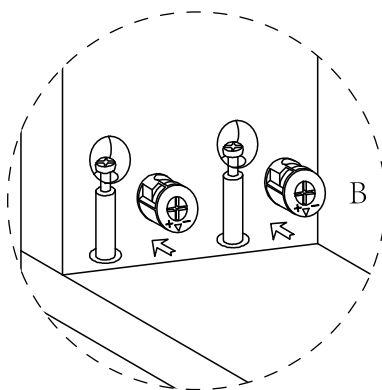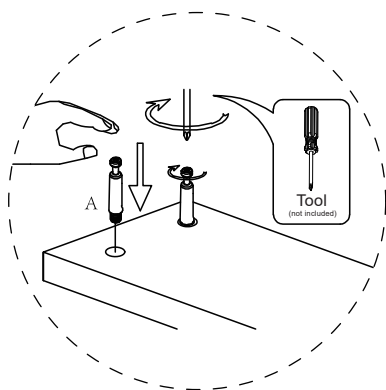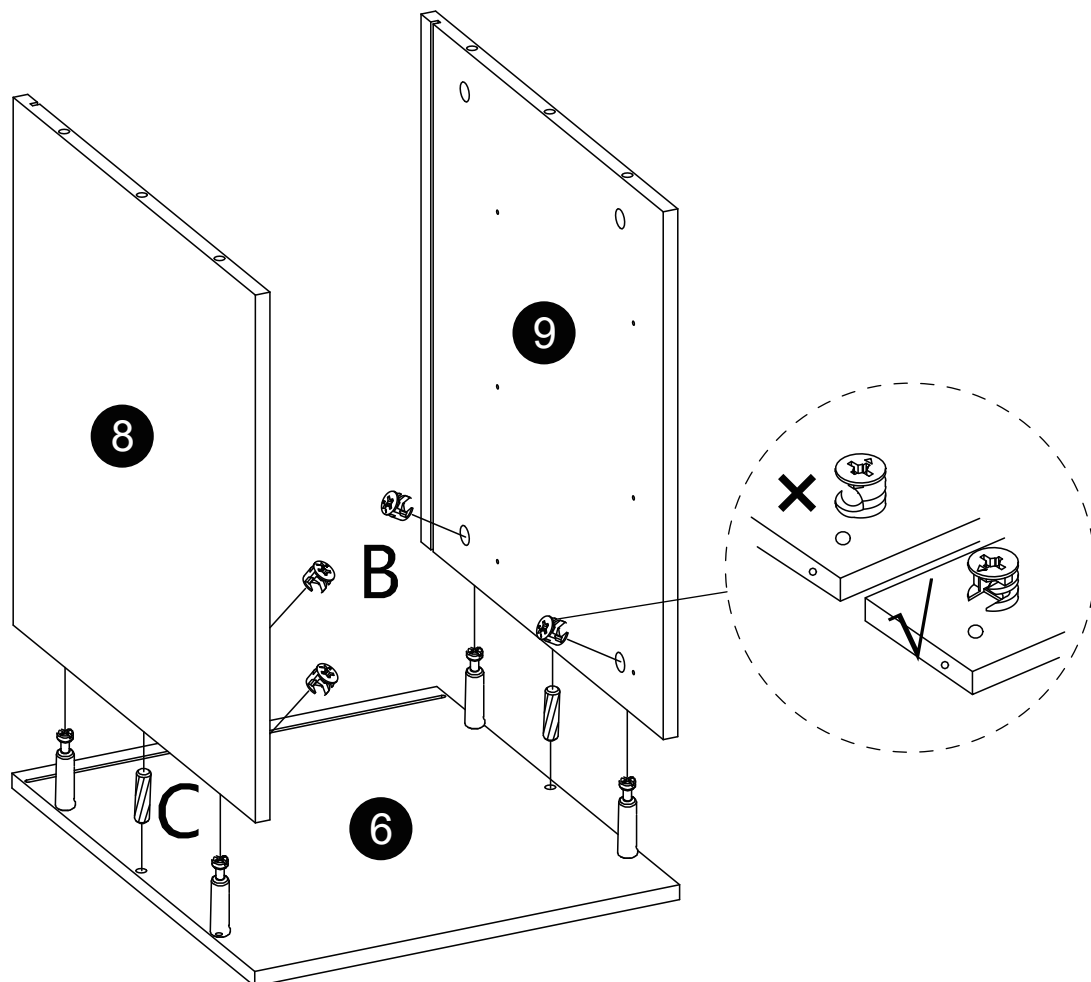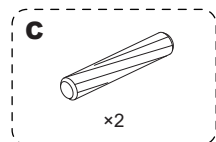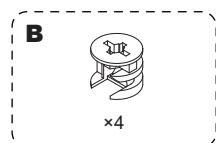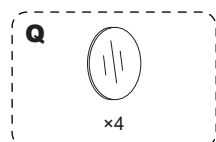

In order to make the product more beautiful,
please paste hardware “Q” on the exposed holes.




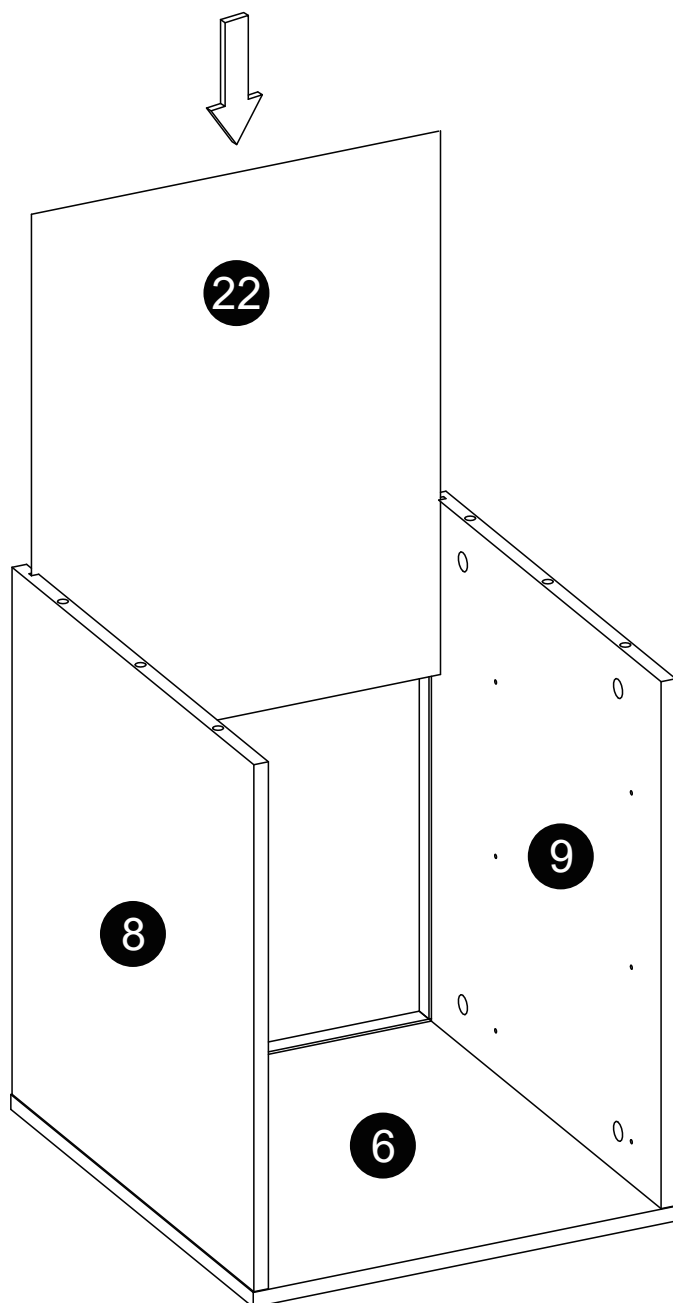


I Step6

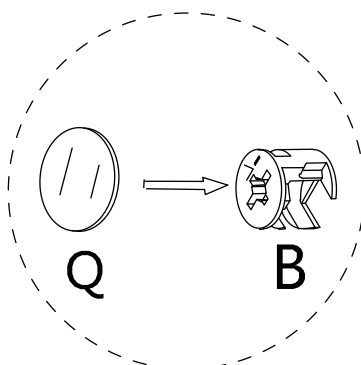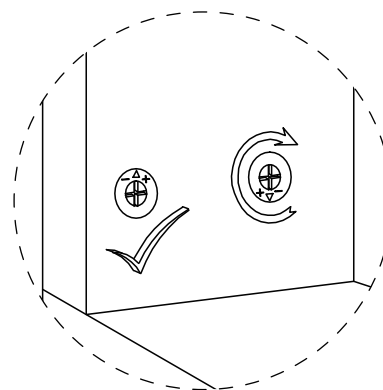
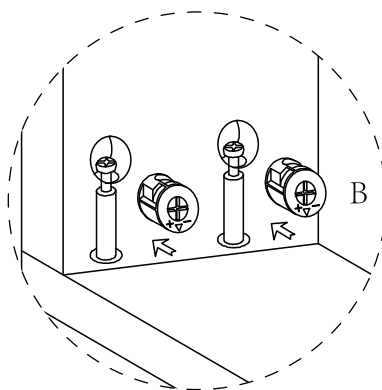
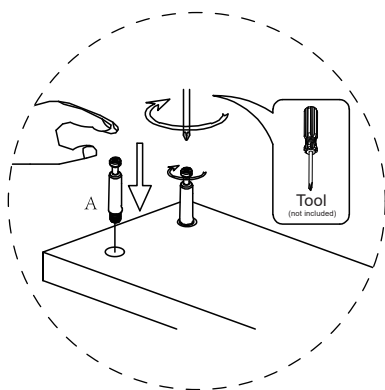
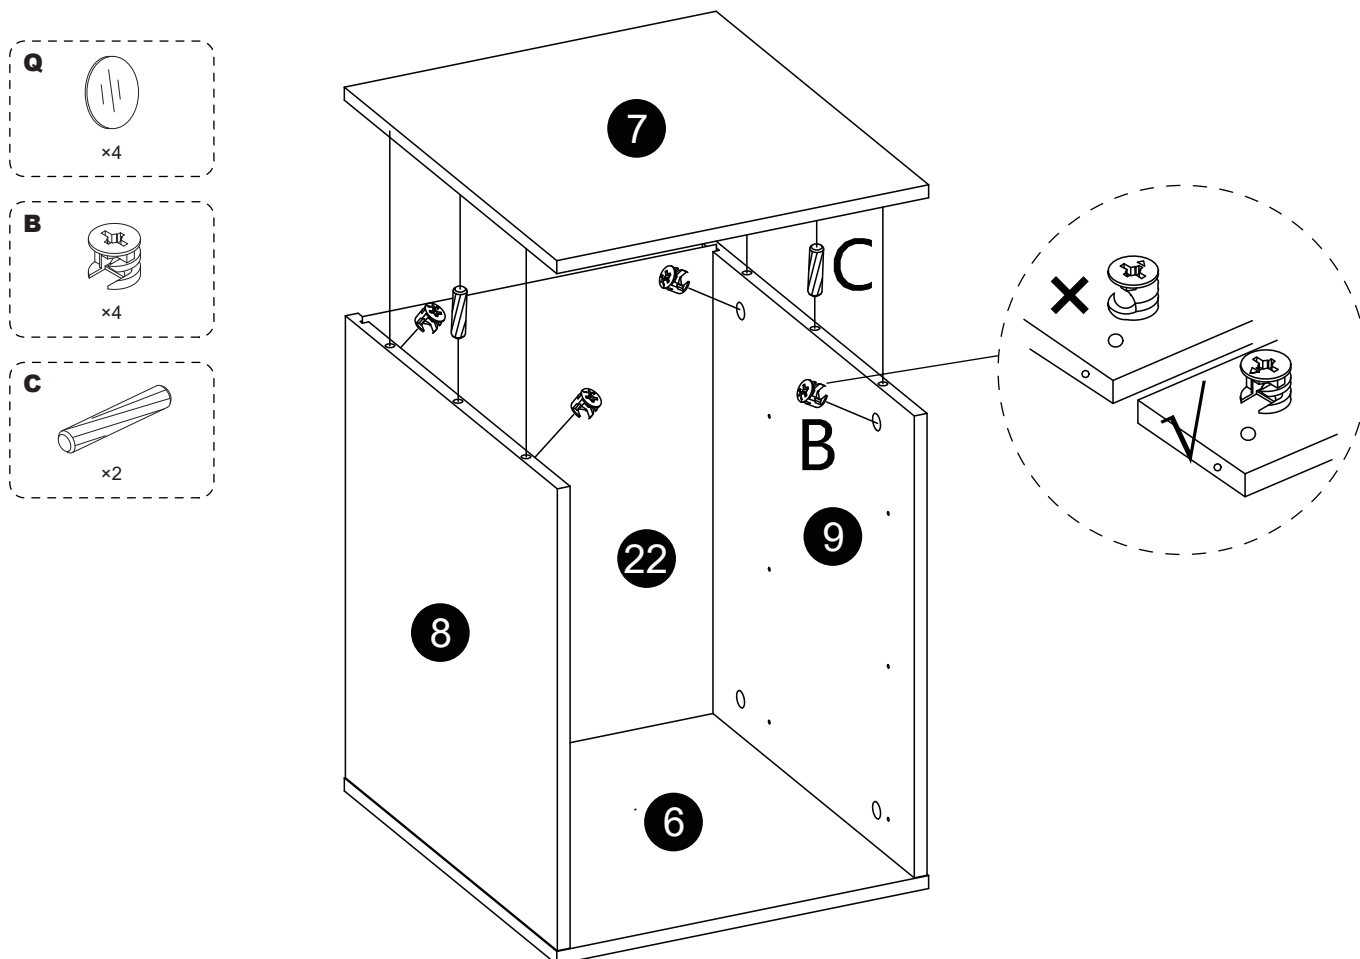


In order to make the product more beautiful,
please paste hardware “Q” on the exposed holes.




| Step7

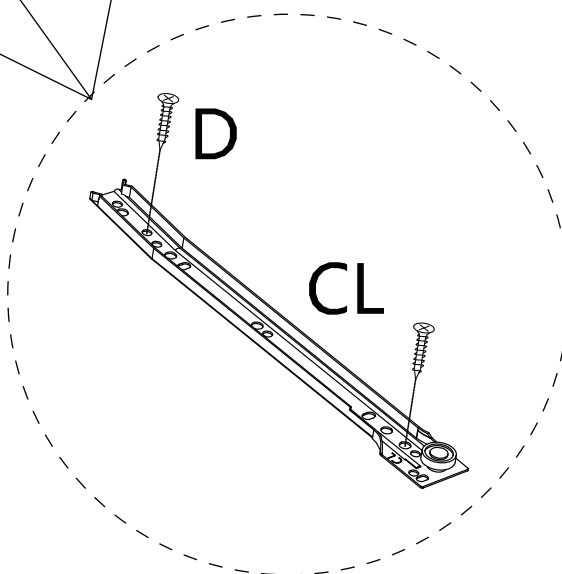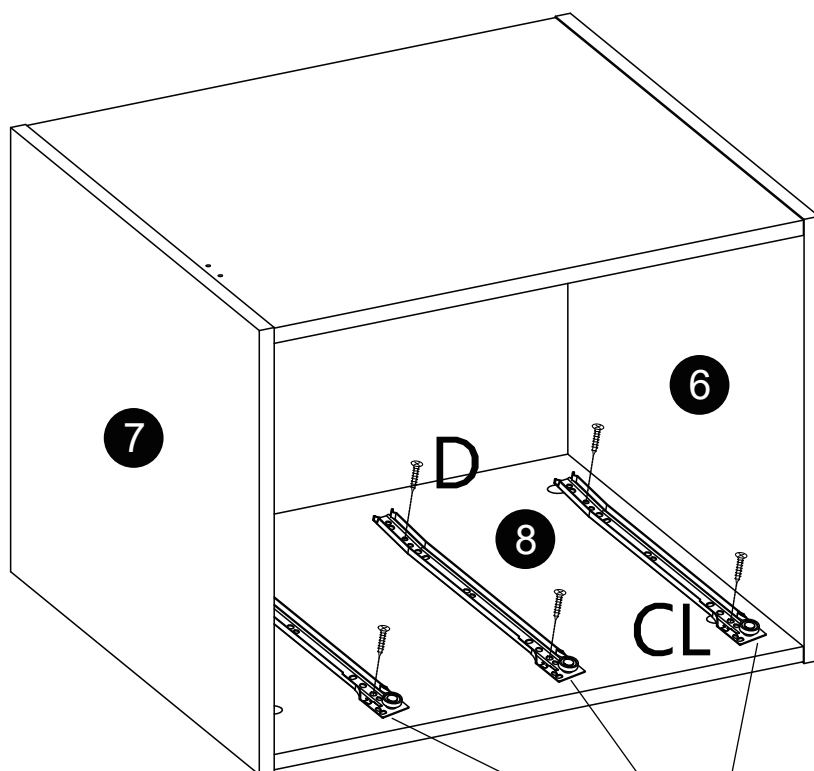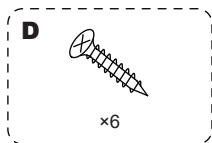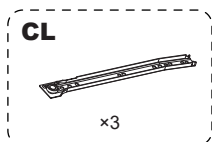


| Step8

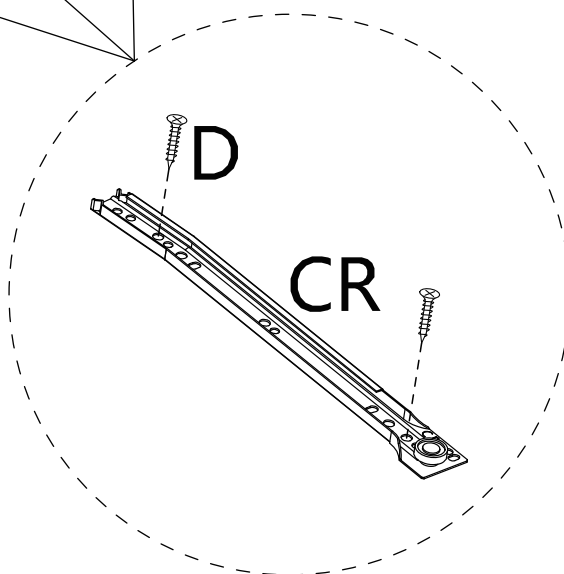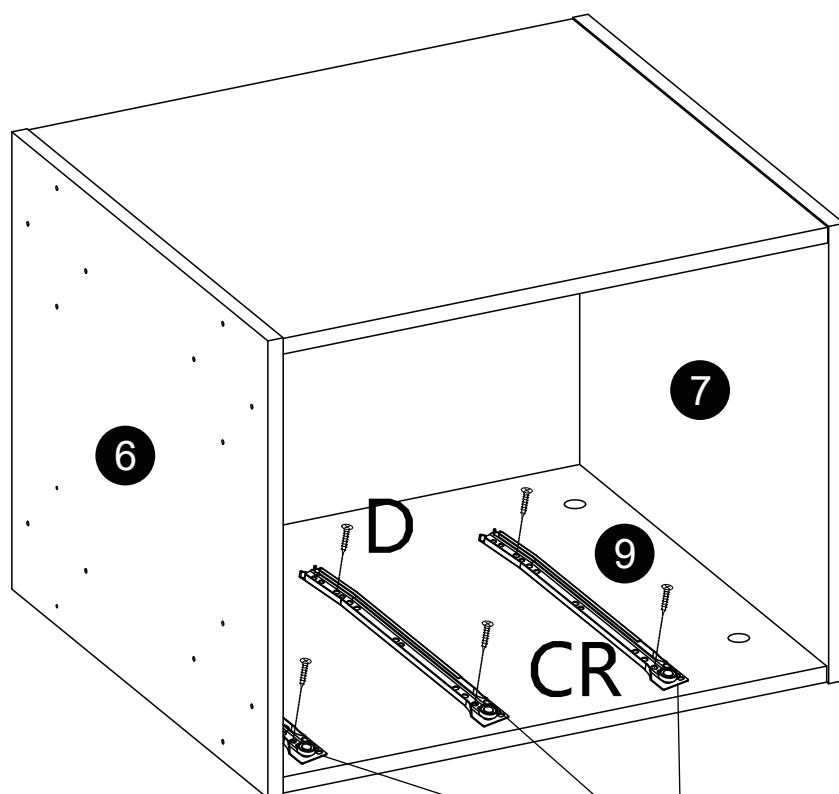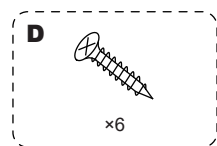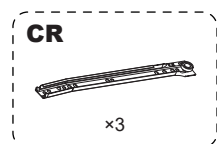





| Step9

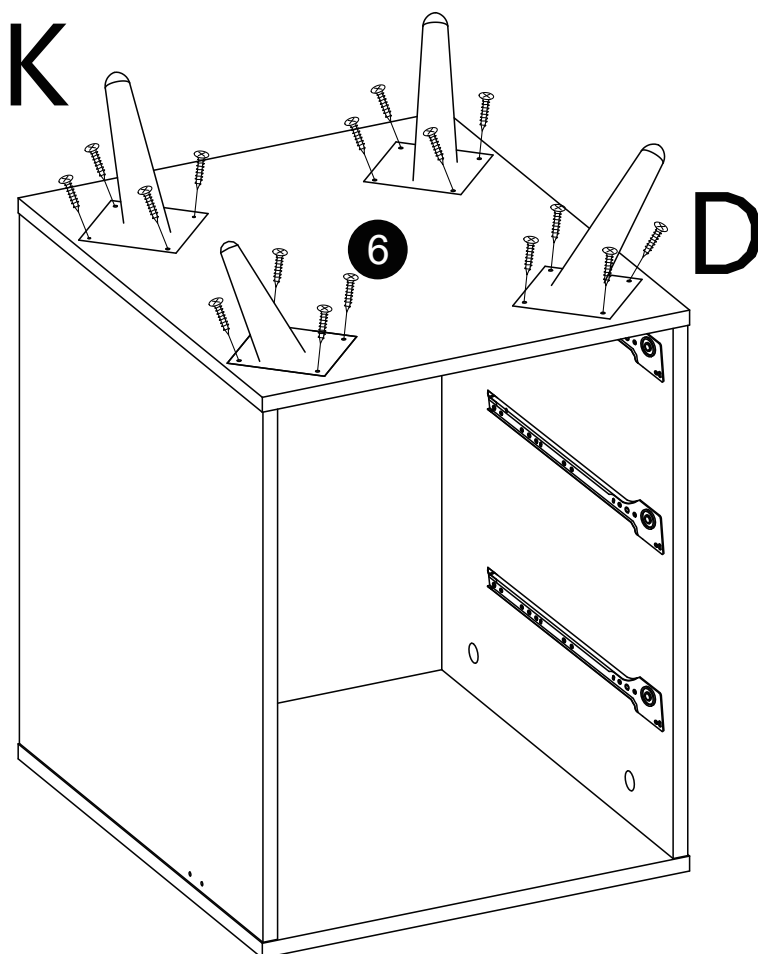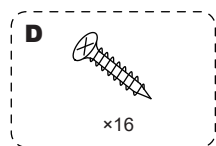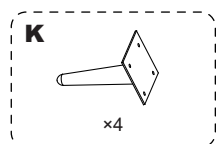

I Step10



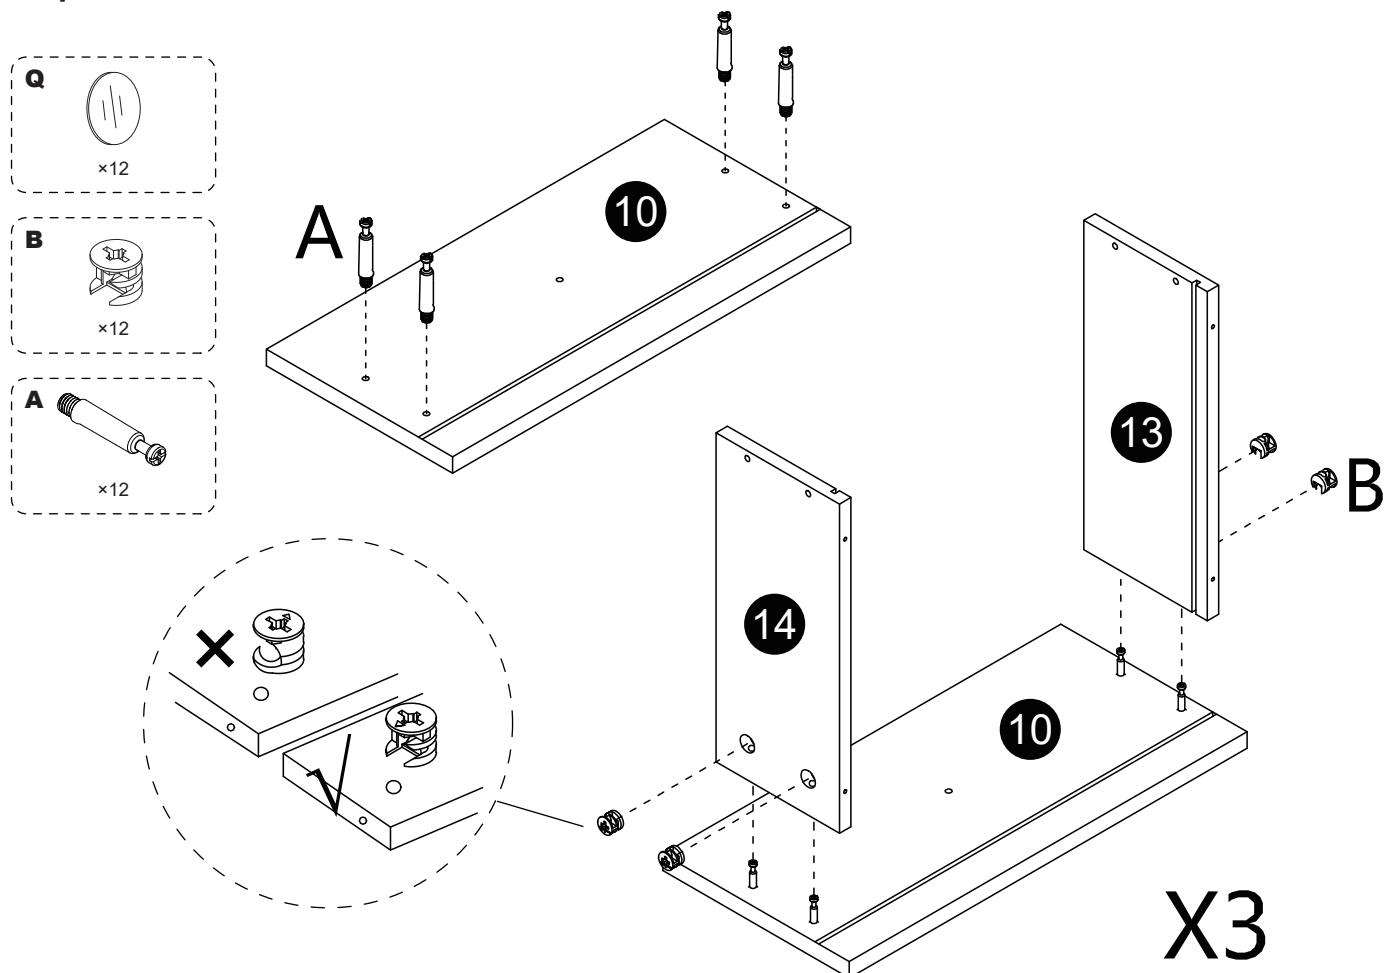


X3






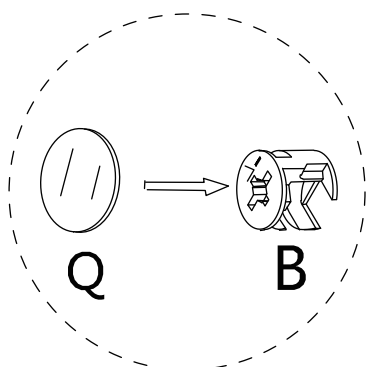
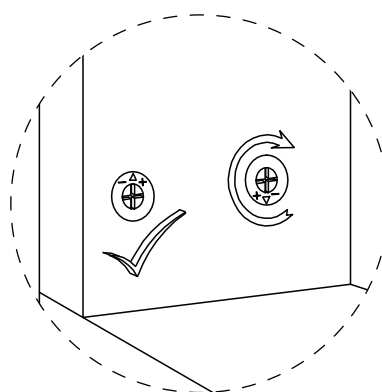
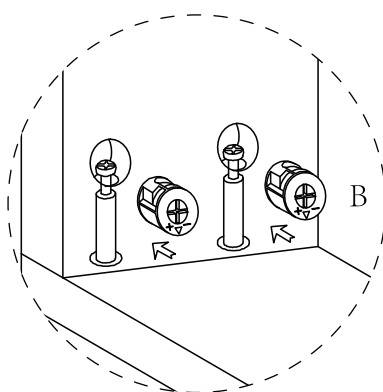
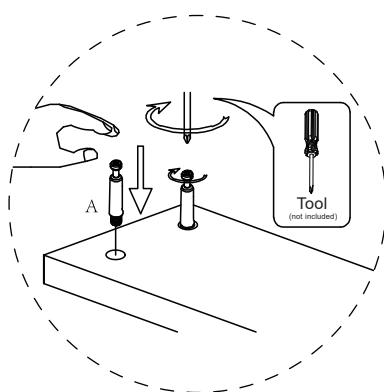


In order to make the product more beautiful, please paste hardware “Q” on the exposed holes.

Step11









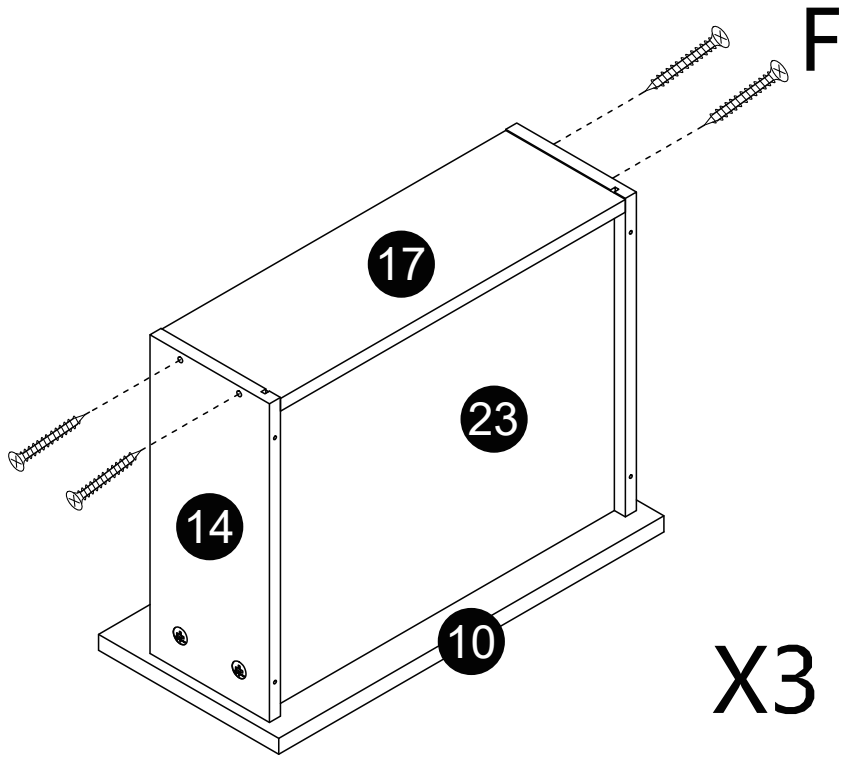
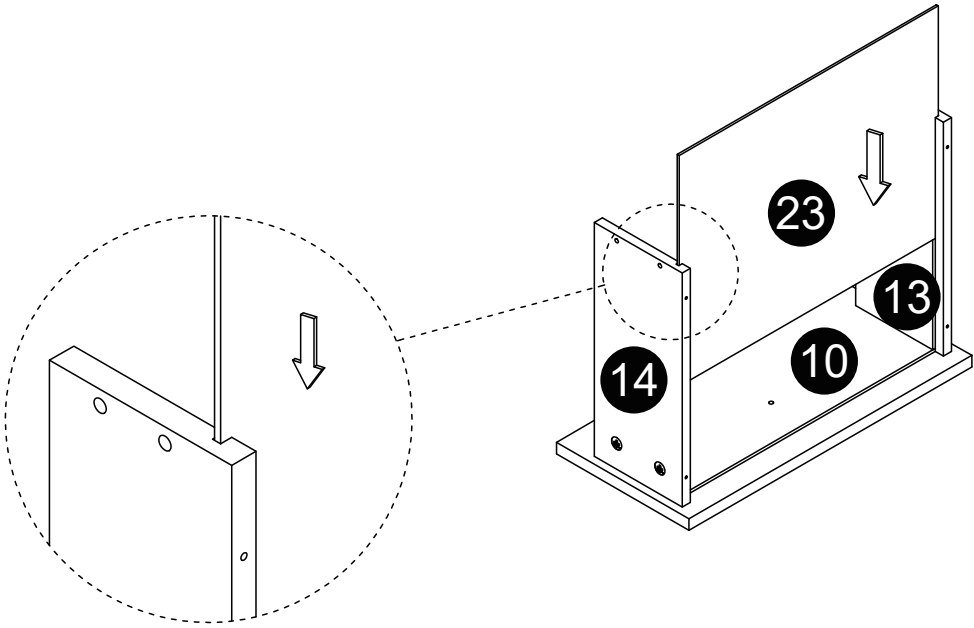
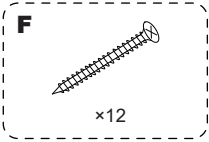


| Step12

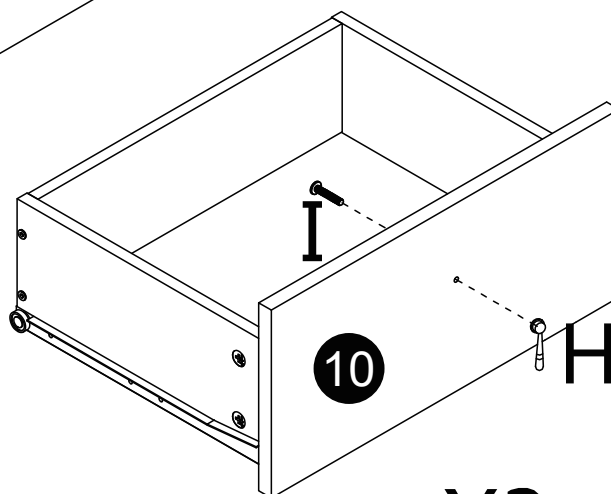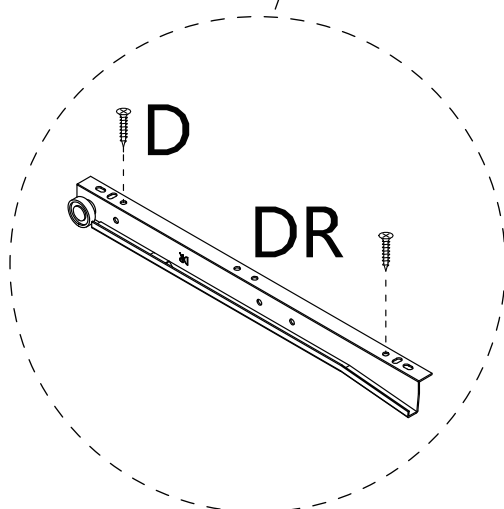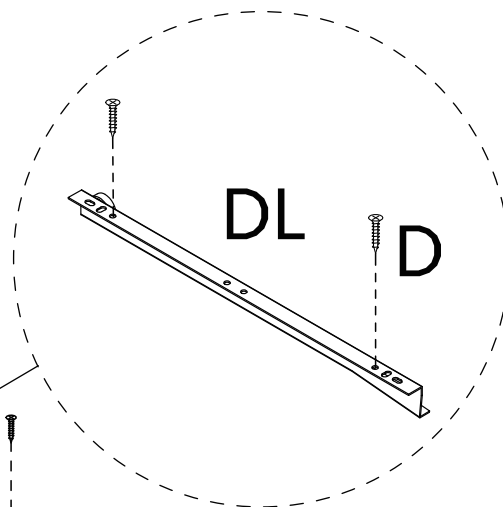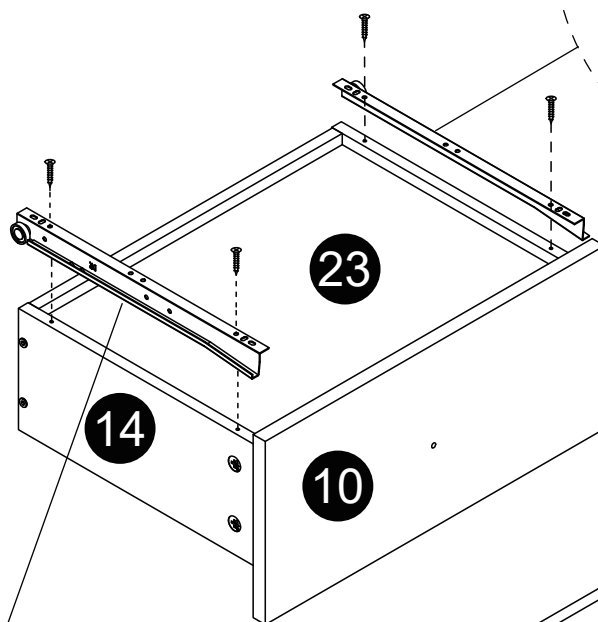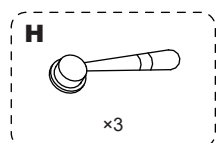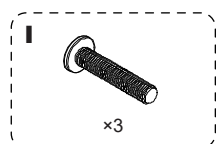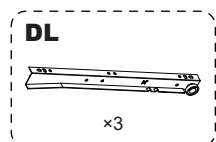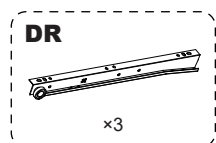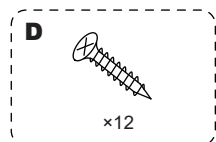



X3

| Step13

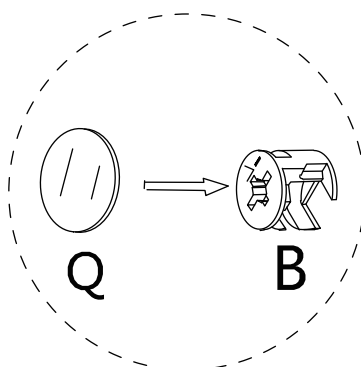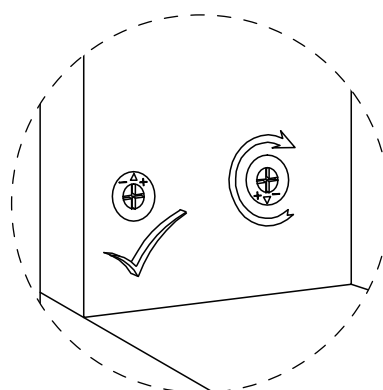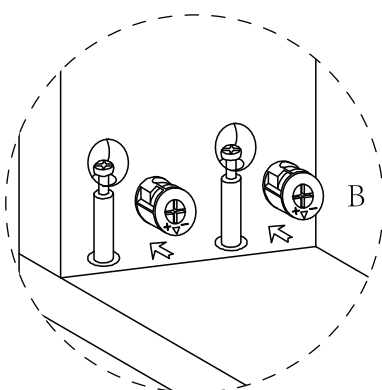
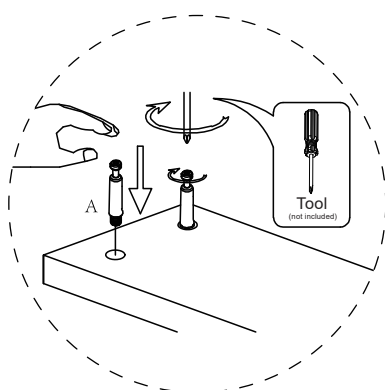
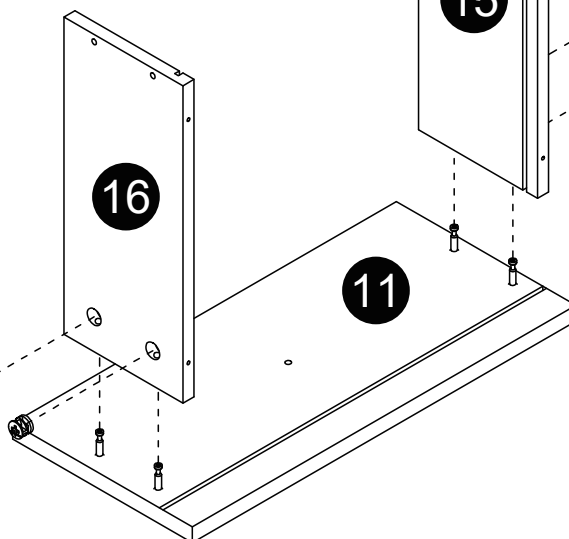
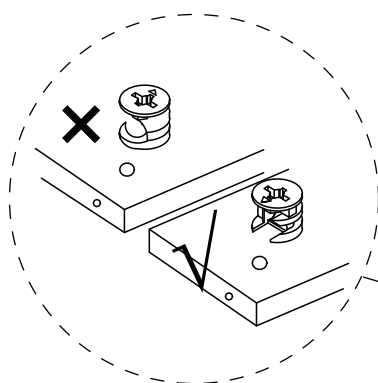
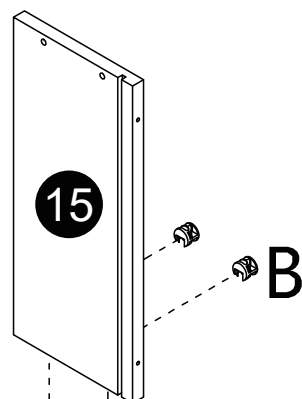
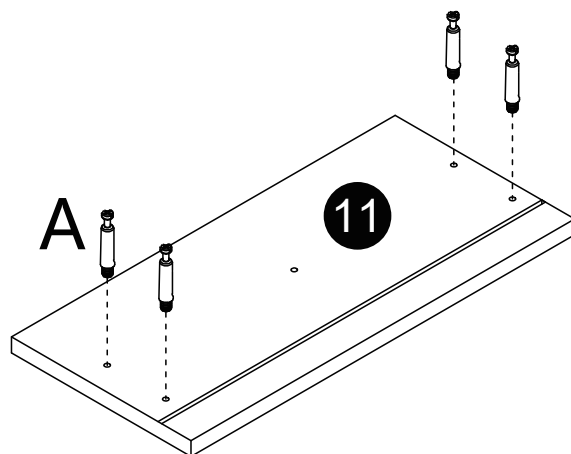
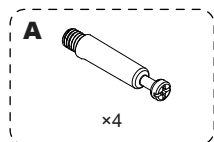
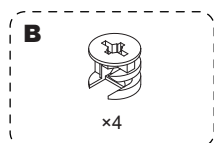
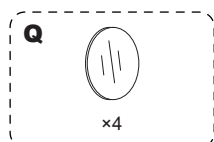


In order to make the product more beautiful,
please paste hardware “Q” on the exposed holes.






| Step14

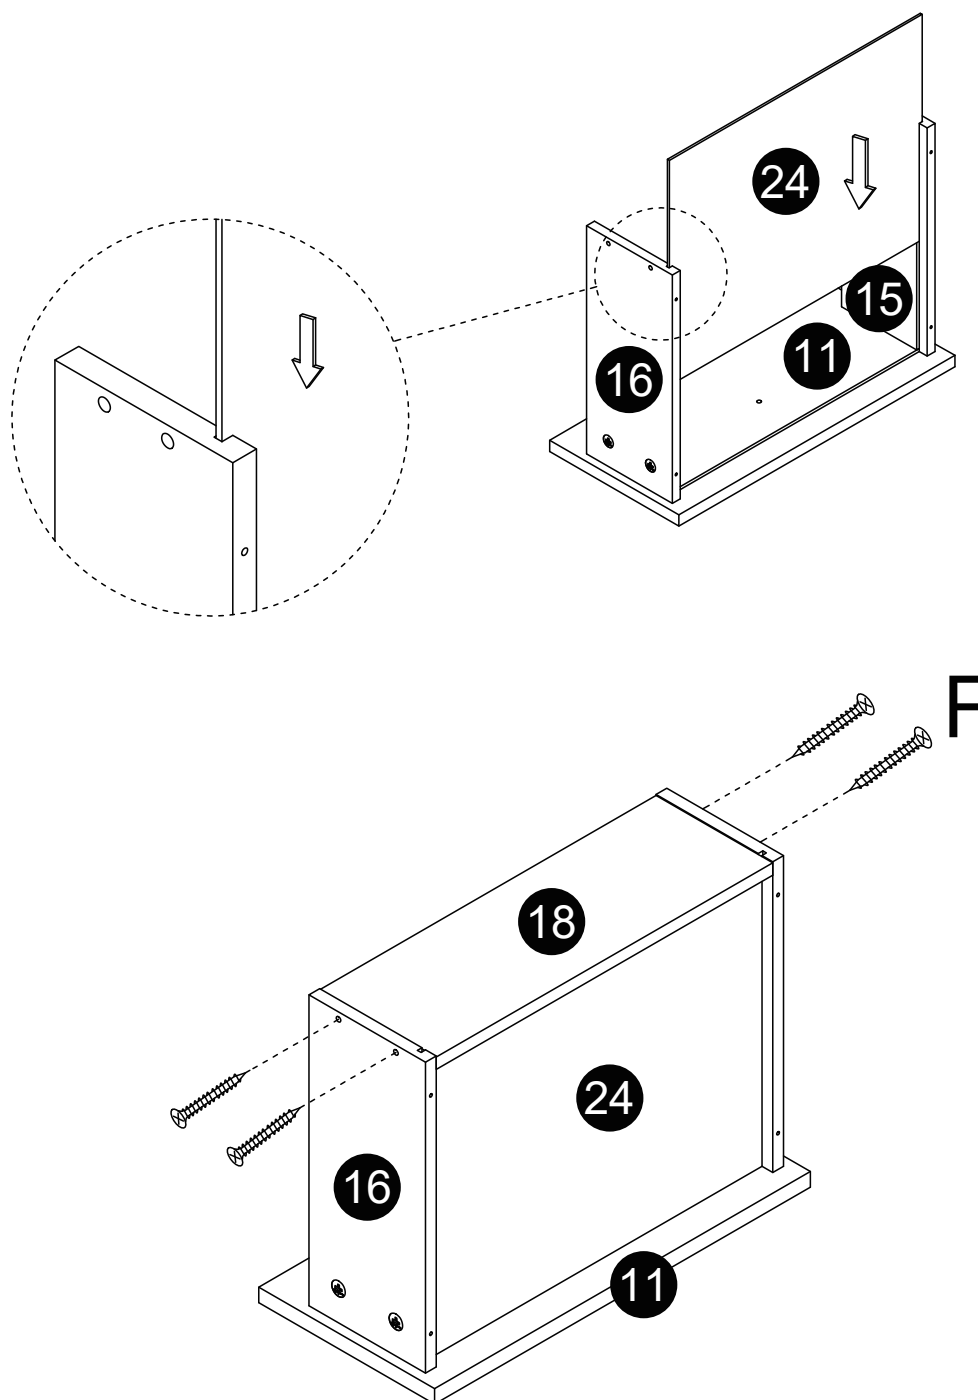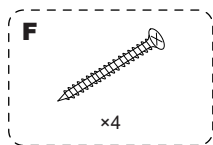

| Step15

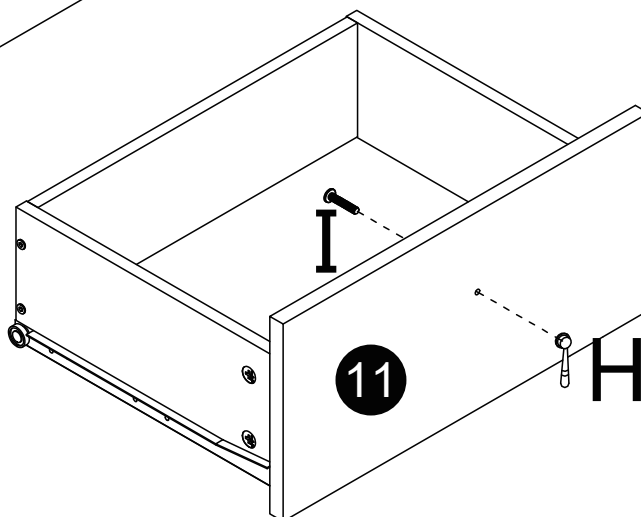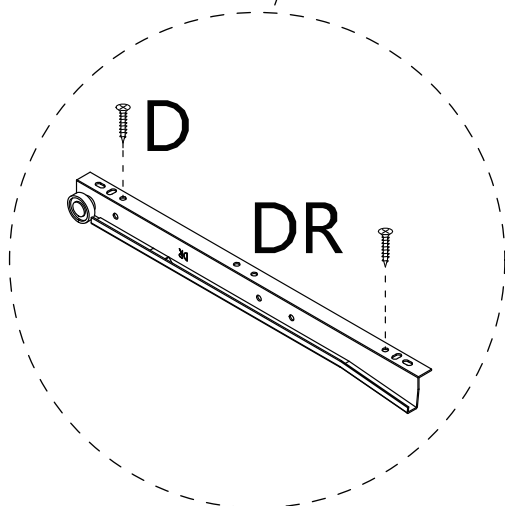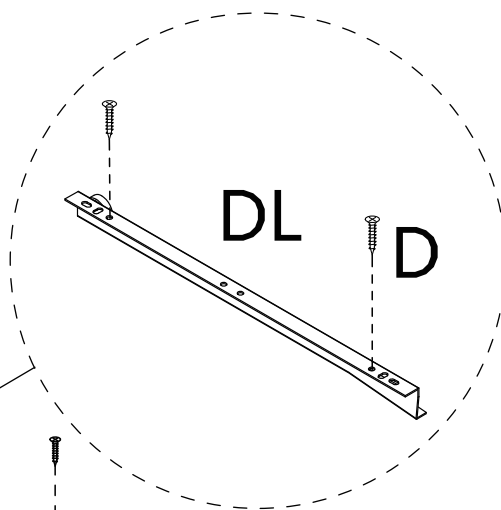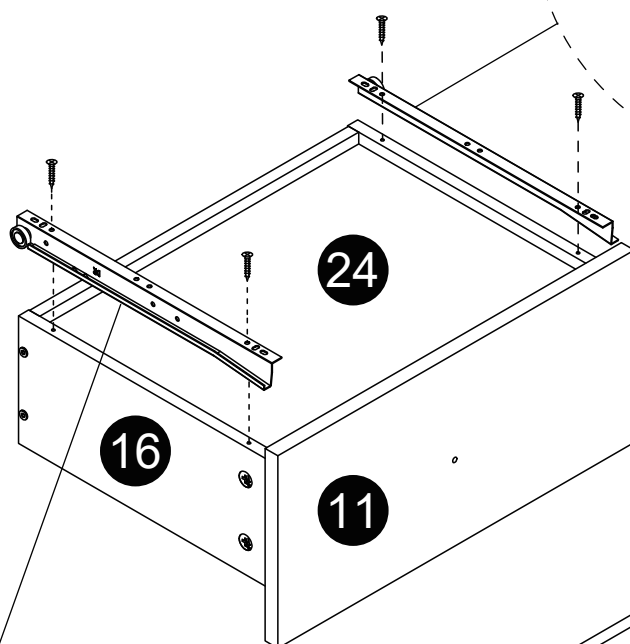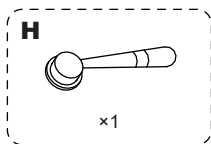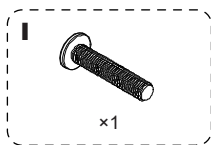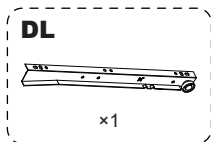
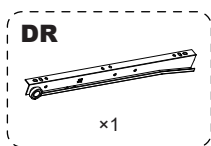
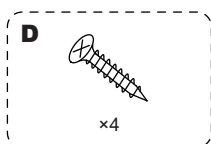


| Step16





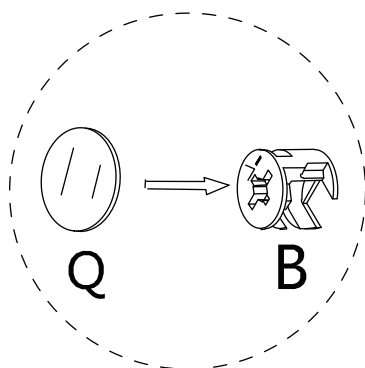
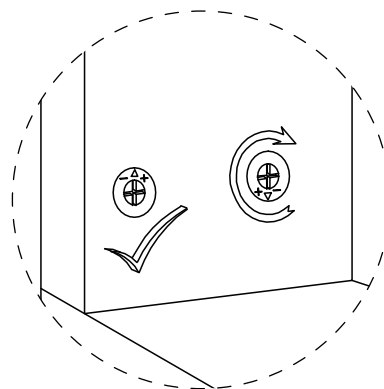
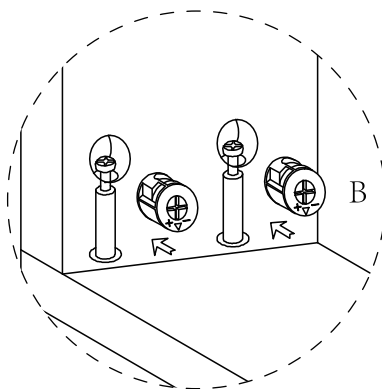
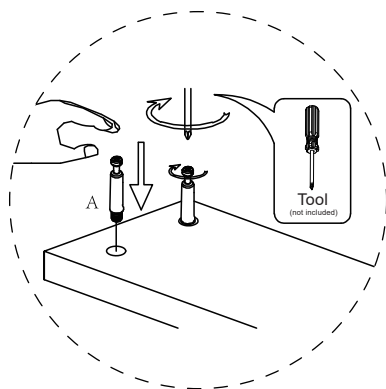
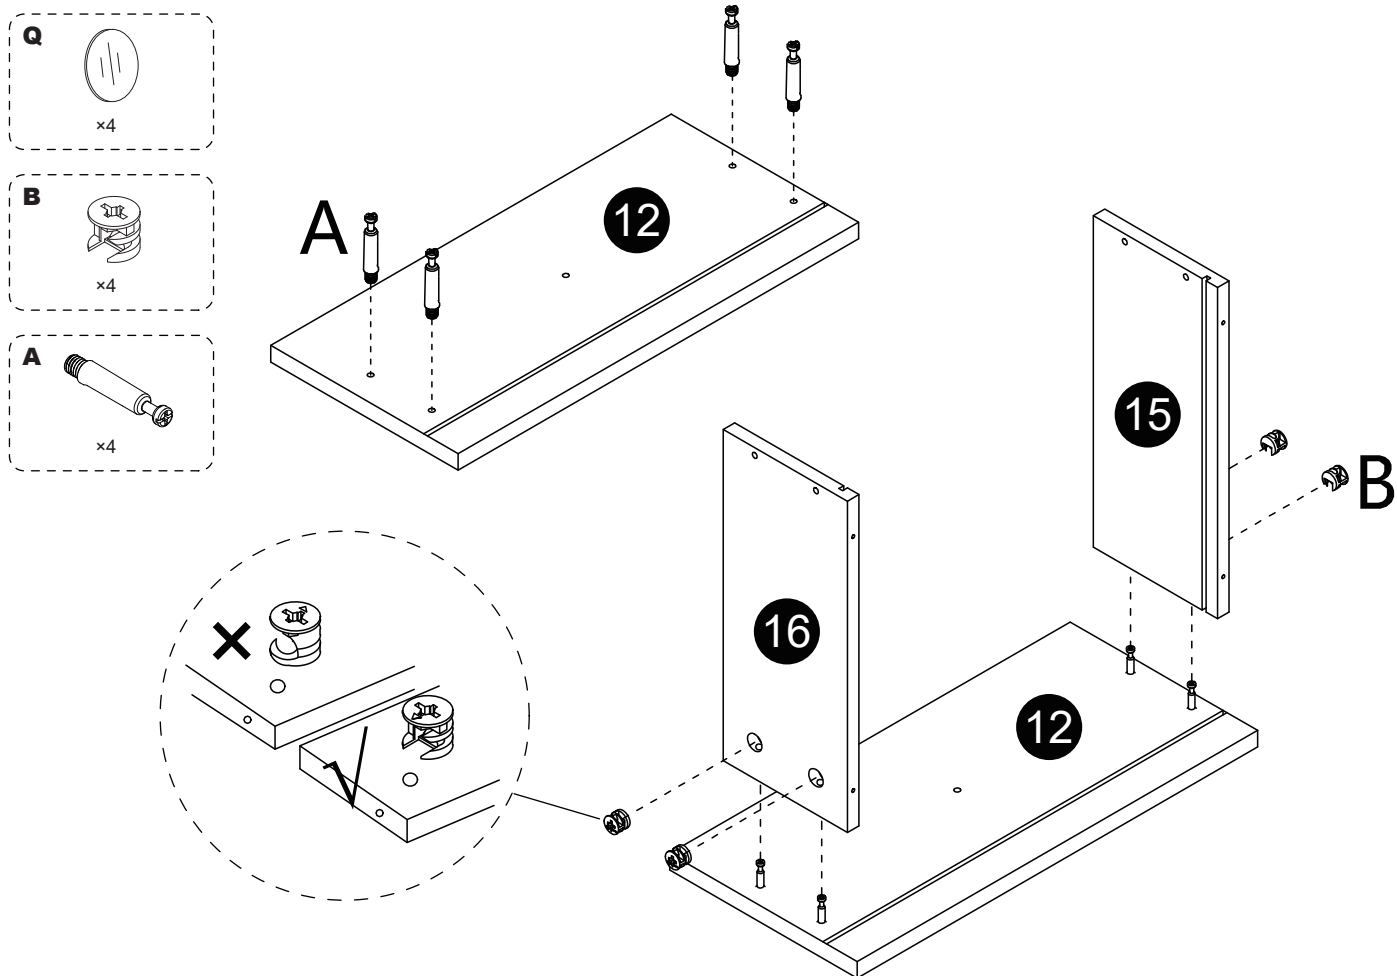


In order to make the product more beautiful,
please paste hardware "Q" on the exposed holes.


| Step17

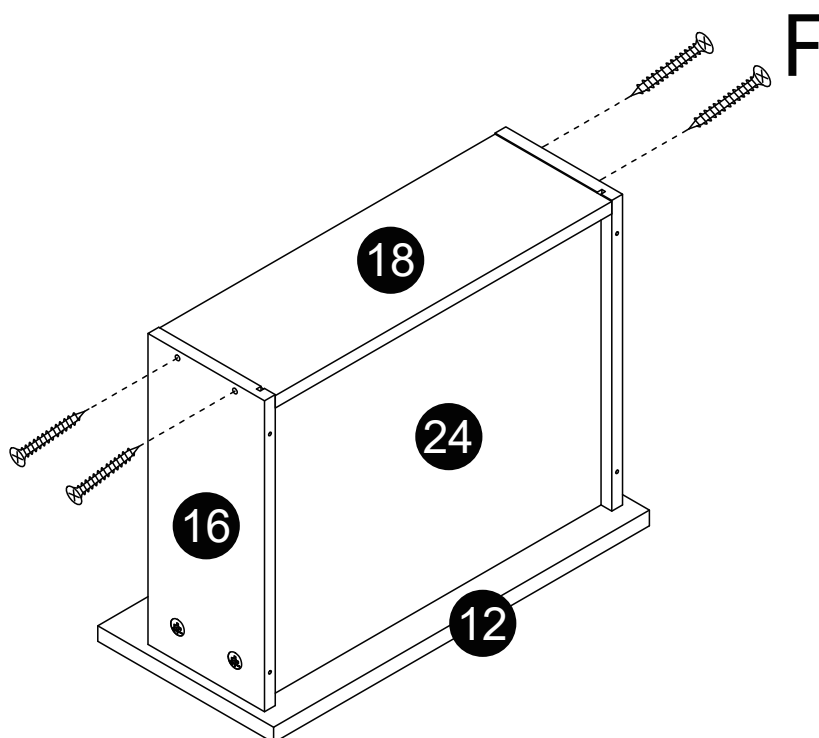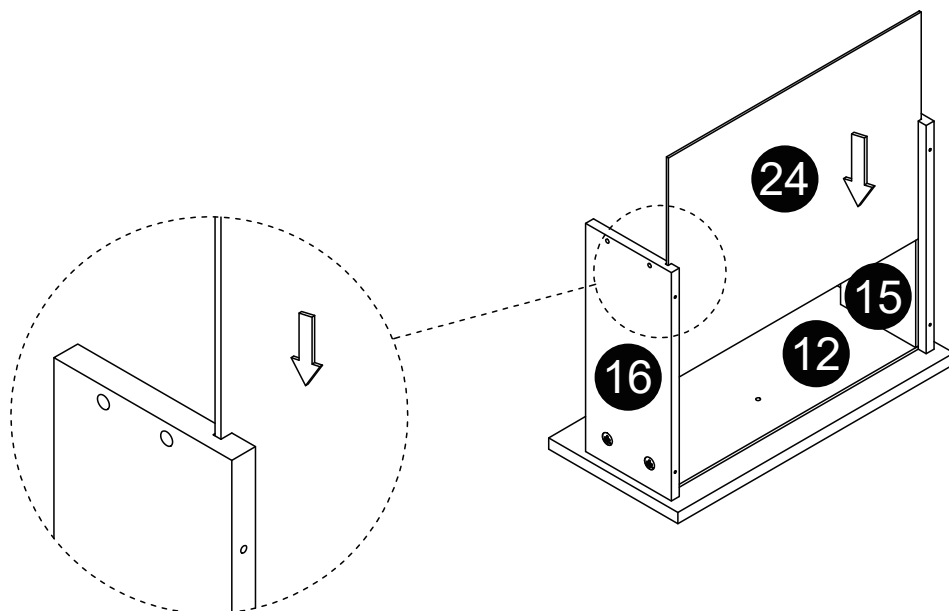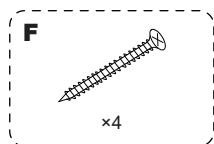



| Step18

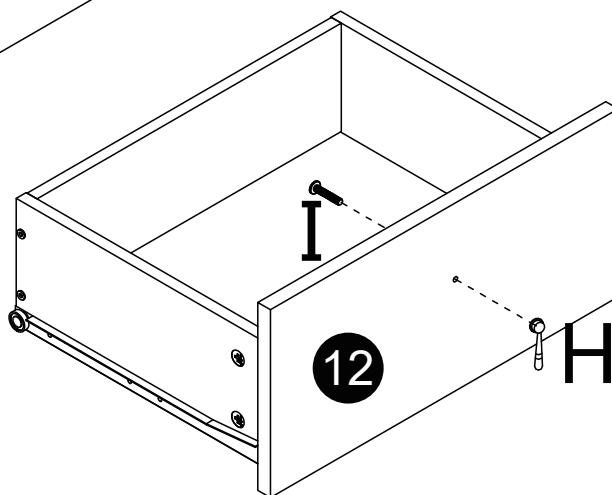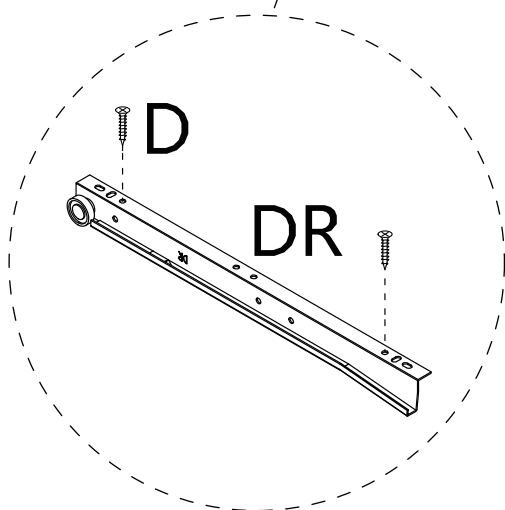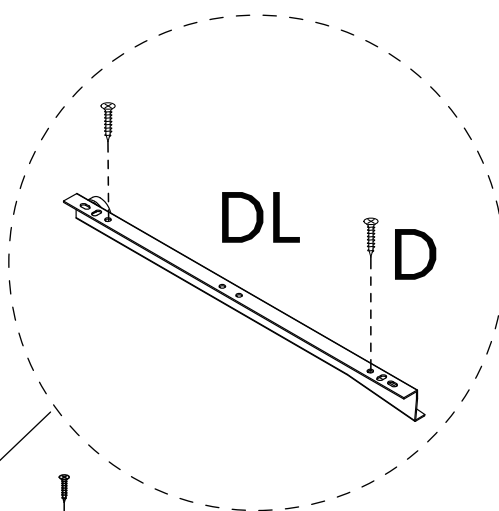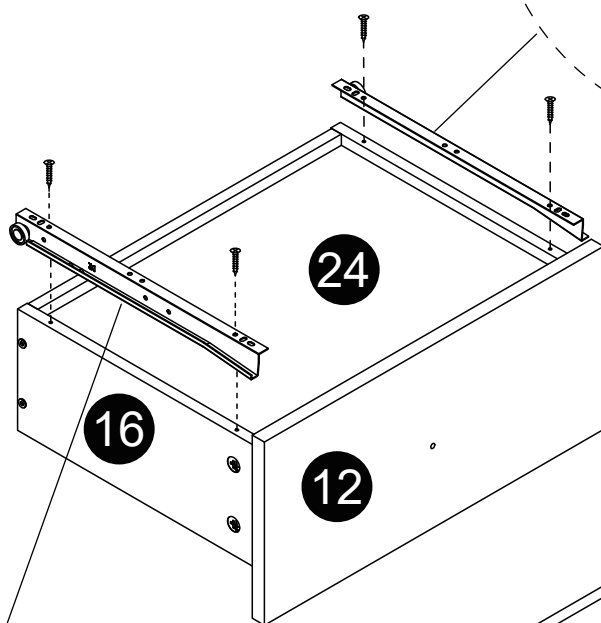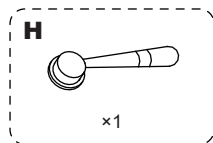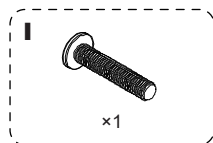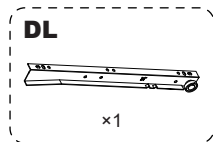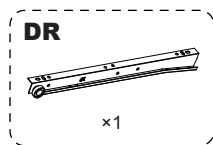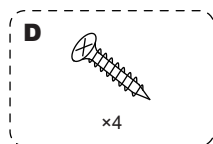


| Step19

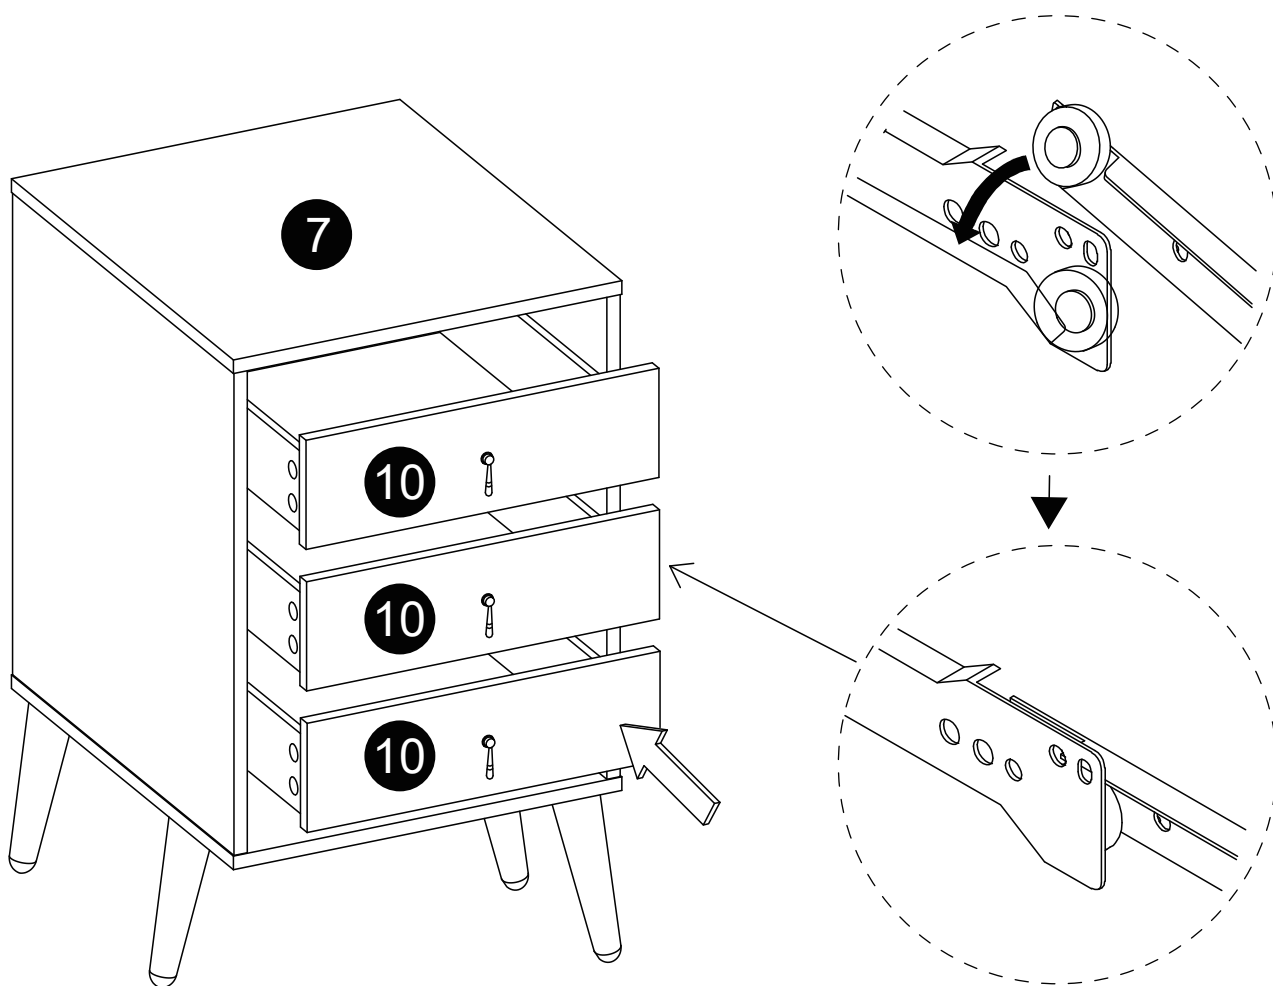



| Step20

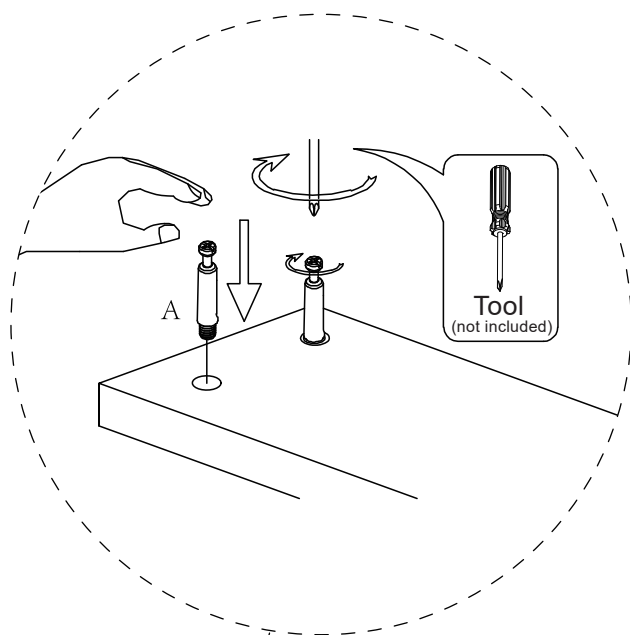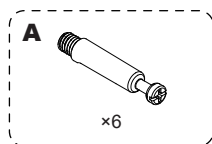









! NOTE:
Please make sure “A” hardware
tightened and can'tbe pulled out!

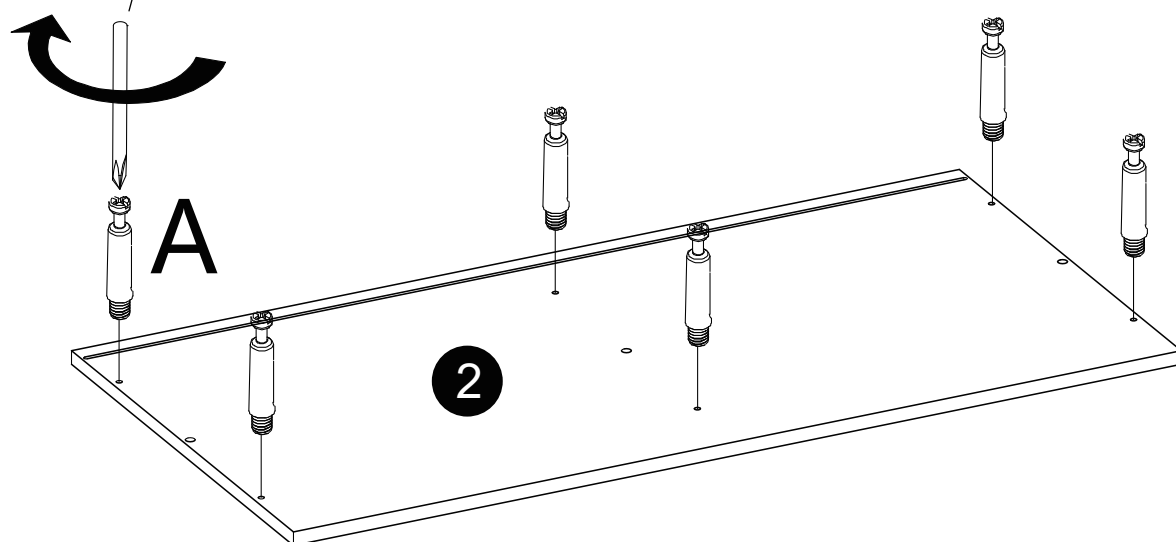

| Step21


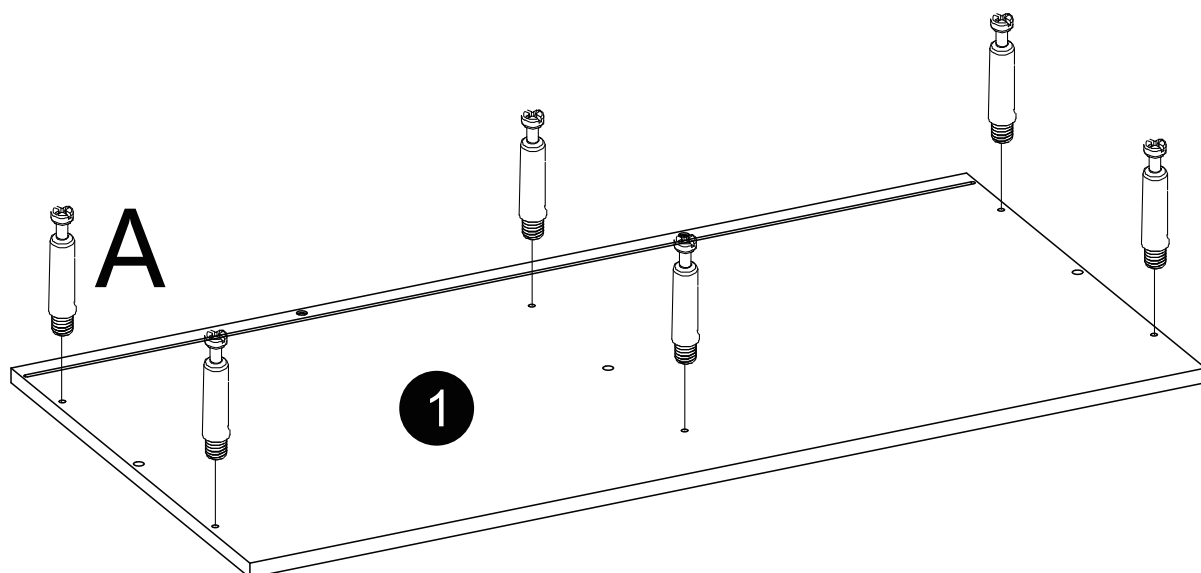
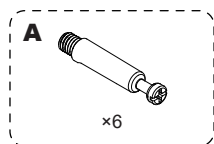


| Step22

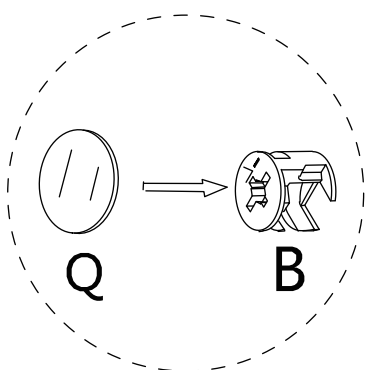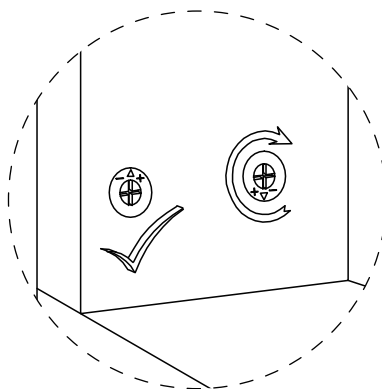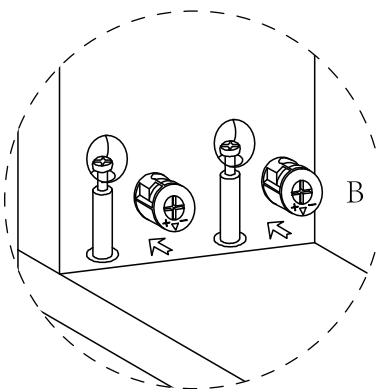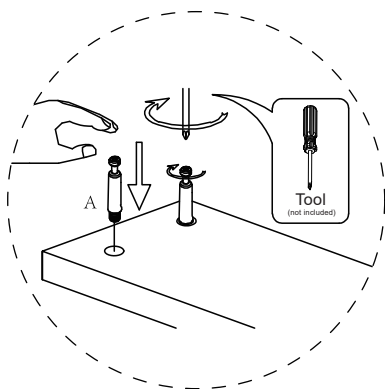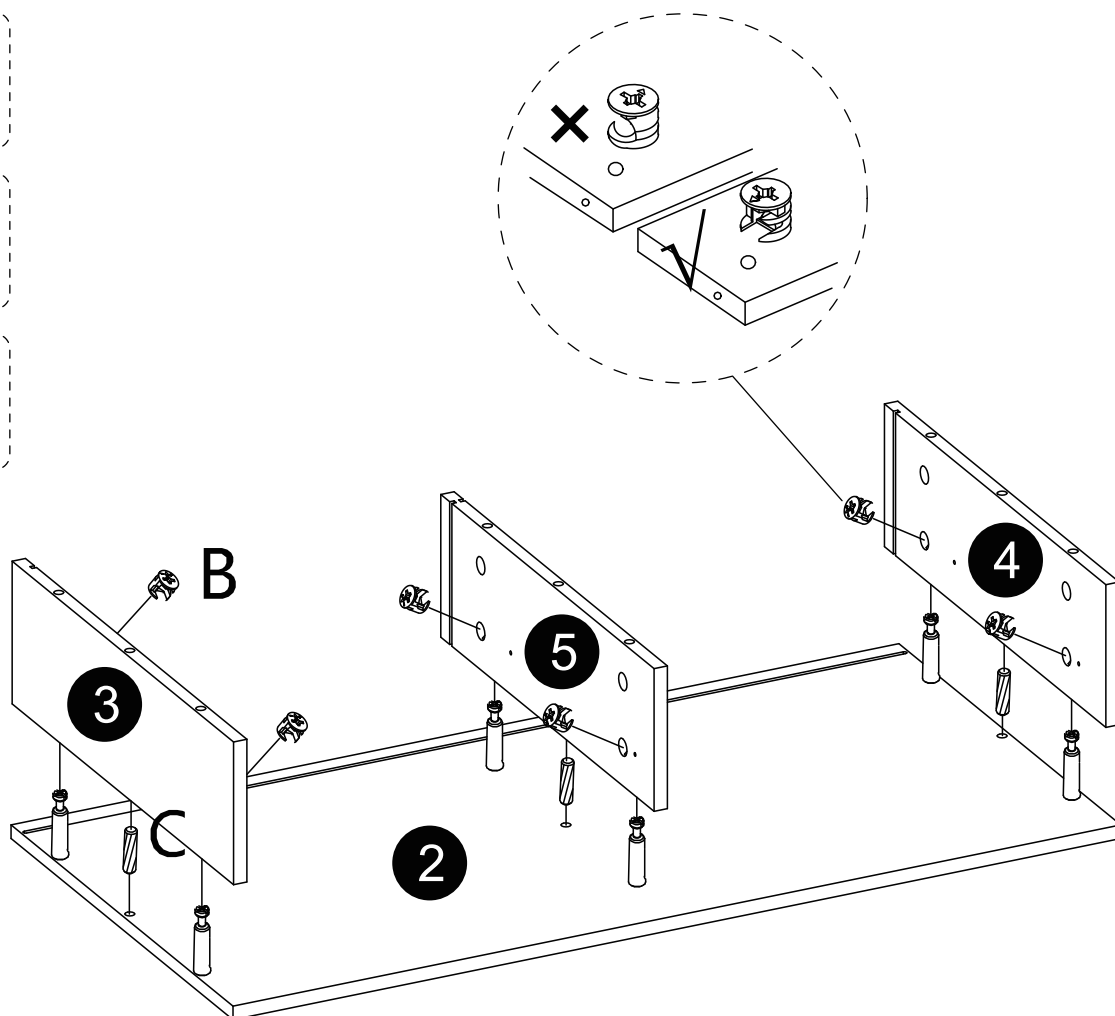
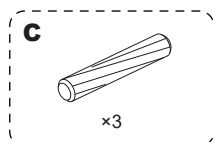
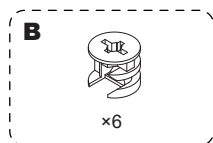
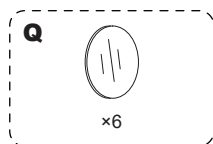


In order to make the product more beautiful,
please paste hardware “Q” on the exposed holes.









| Step23

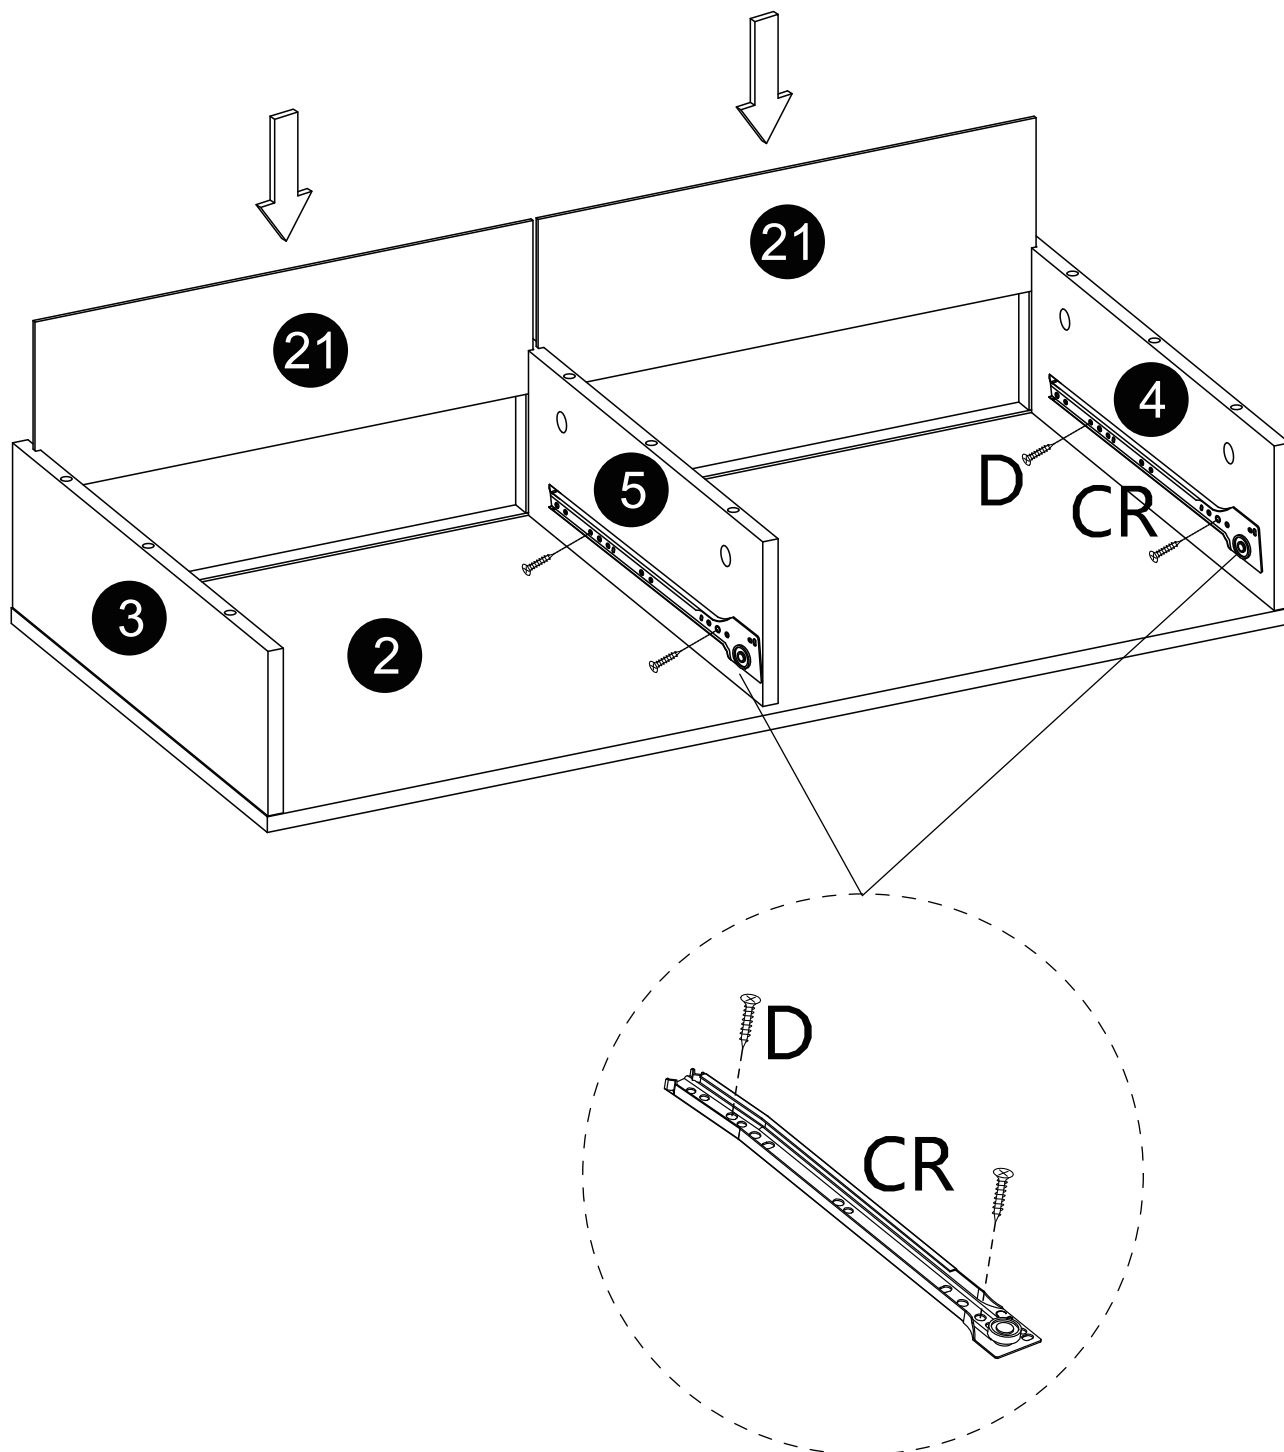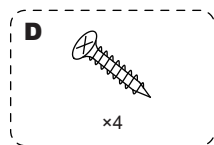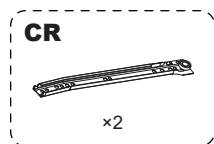

| Step24

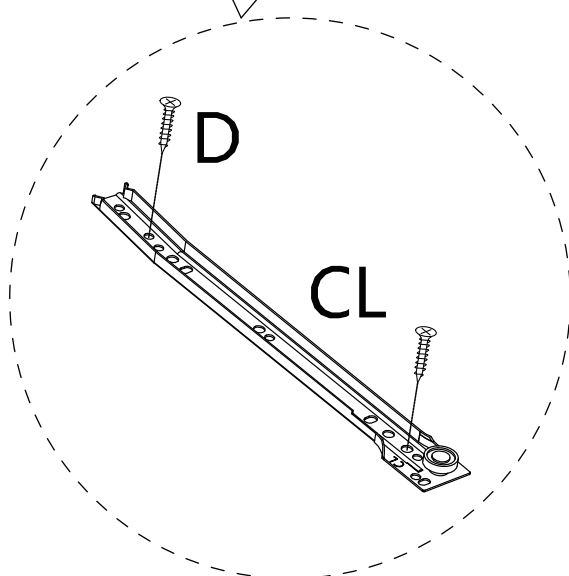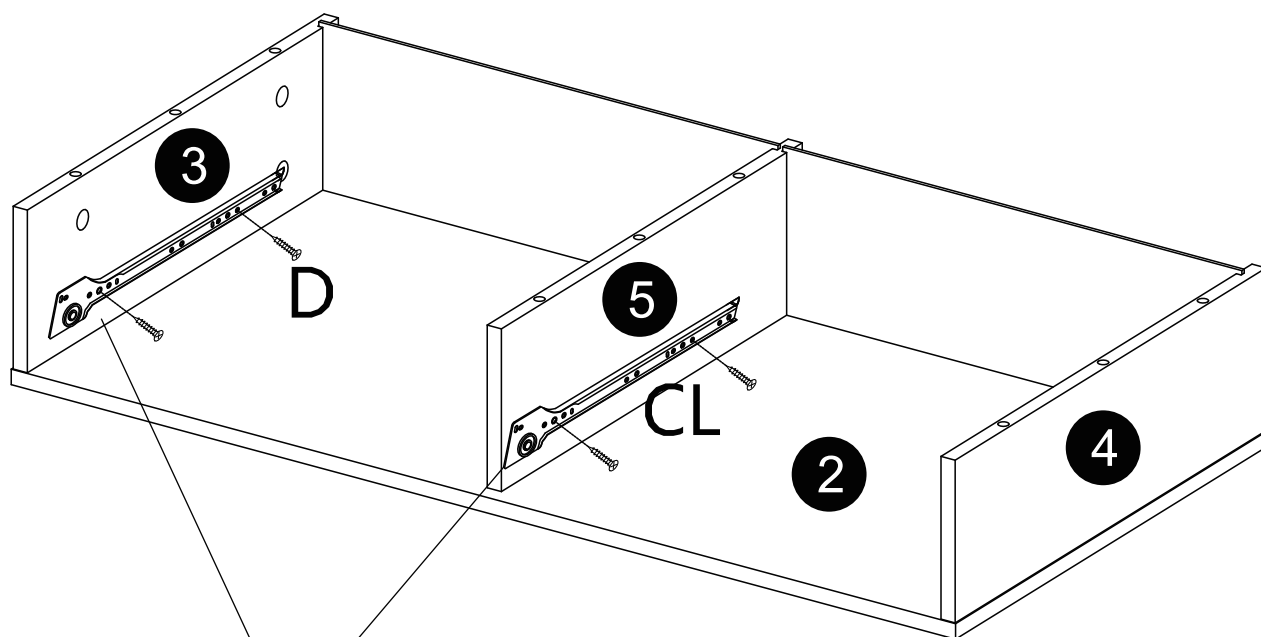
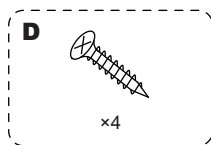
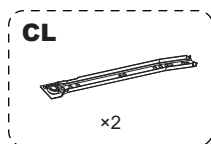


| Step25

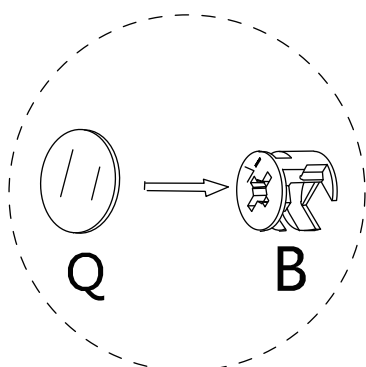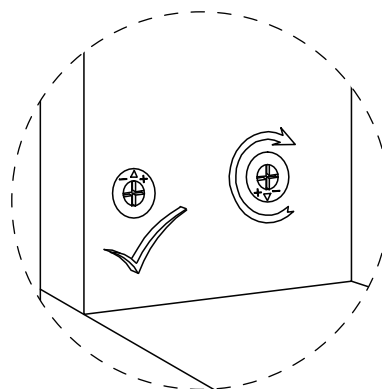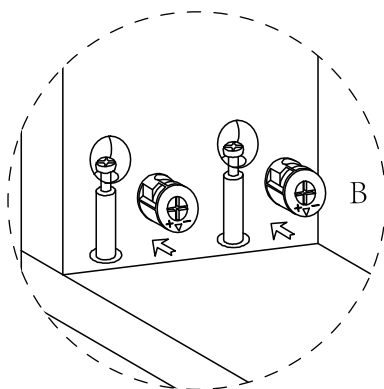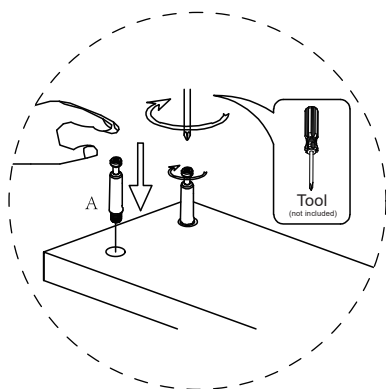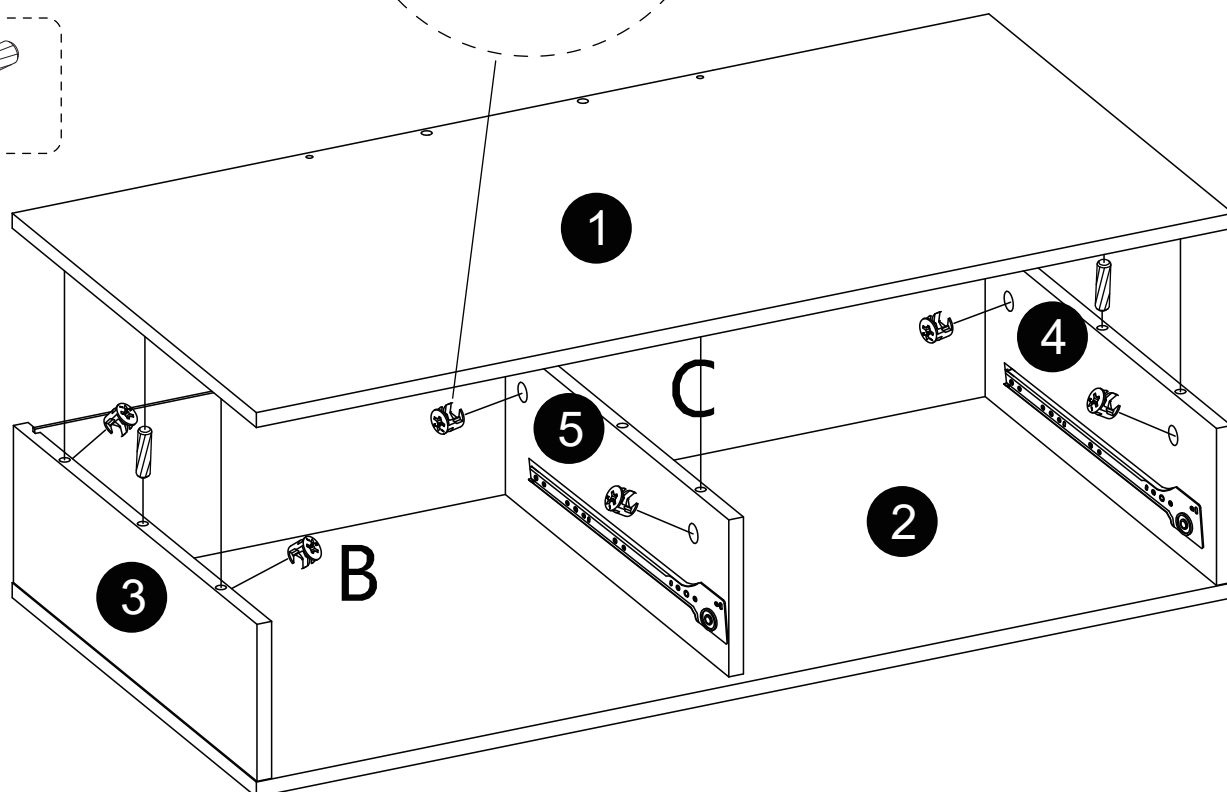
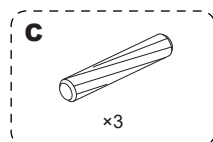
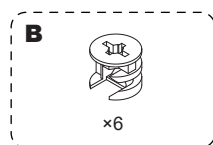
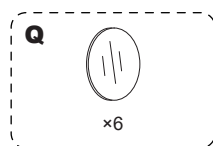


In order to make the product more beautiful,
please paste hardware “Q” on the exposed holes.




| Step26

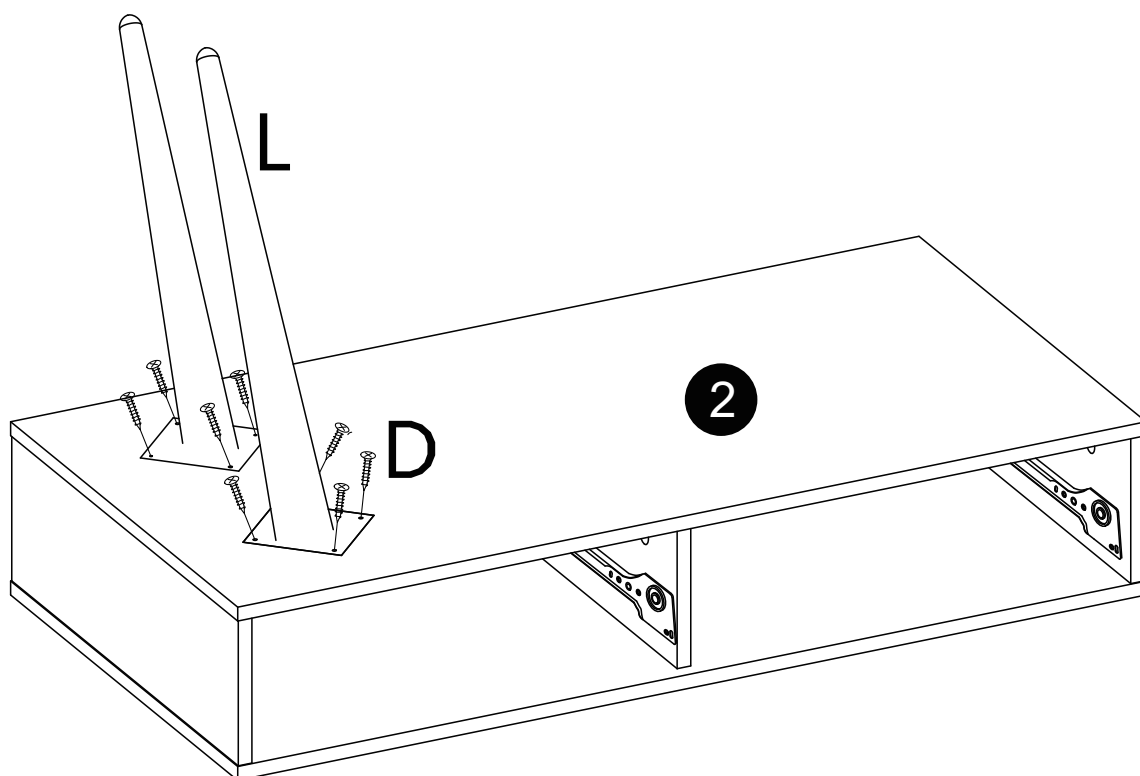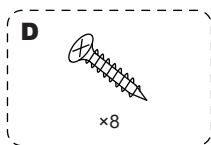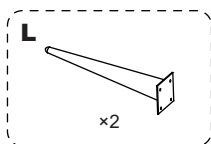

| Step27

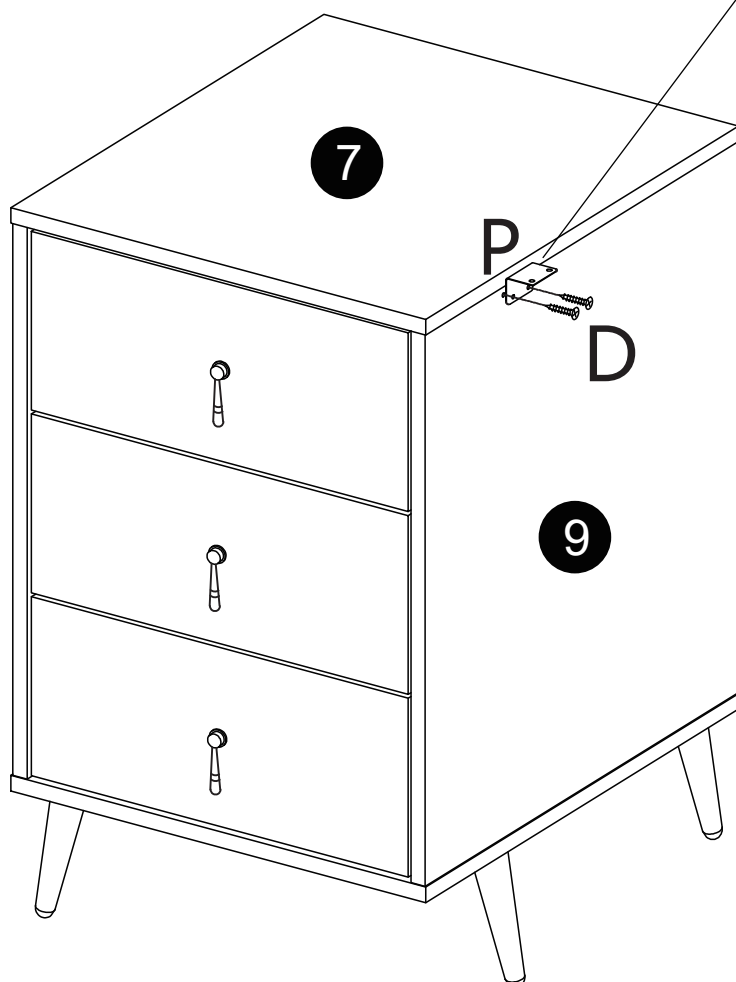
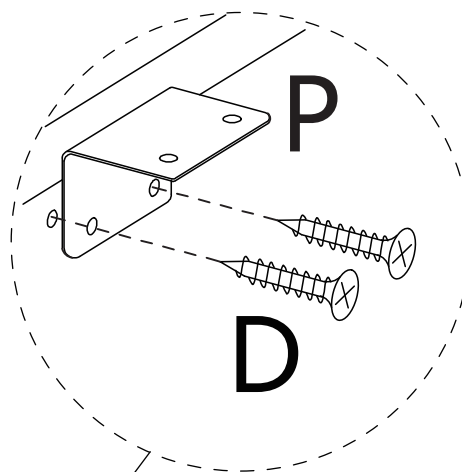
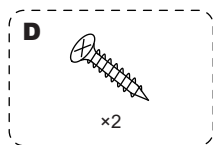
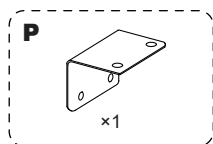


| Step28

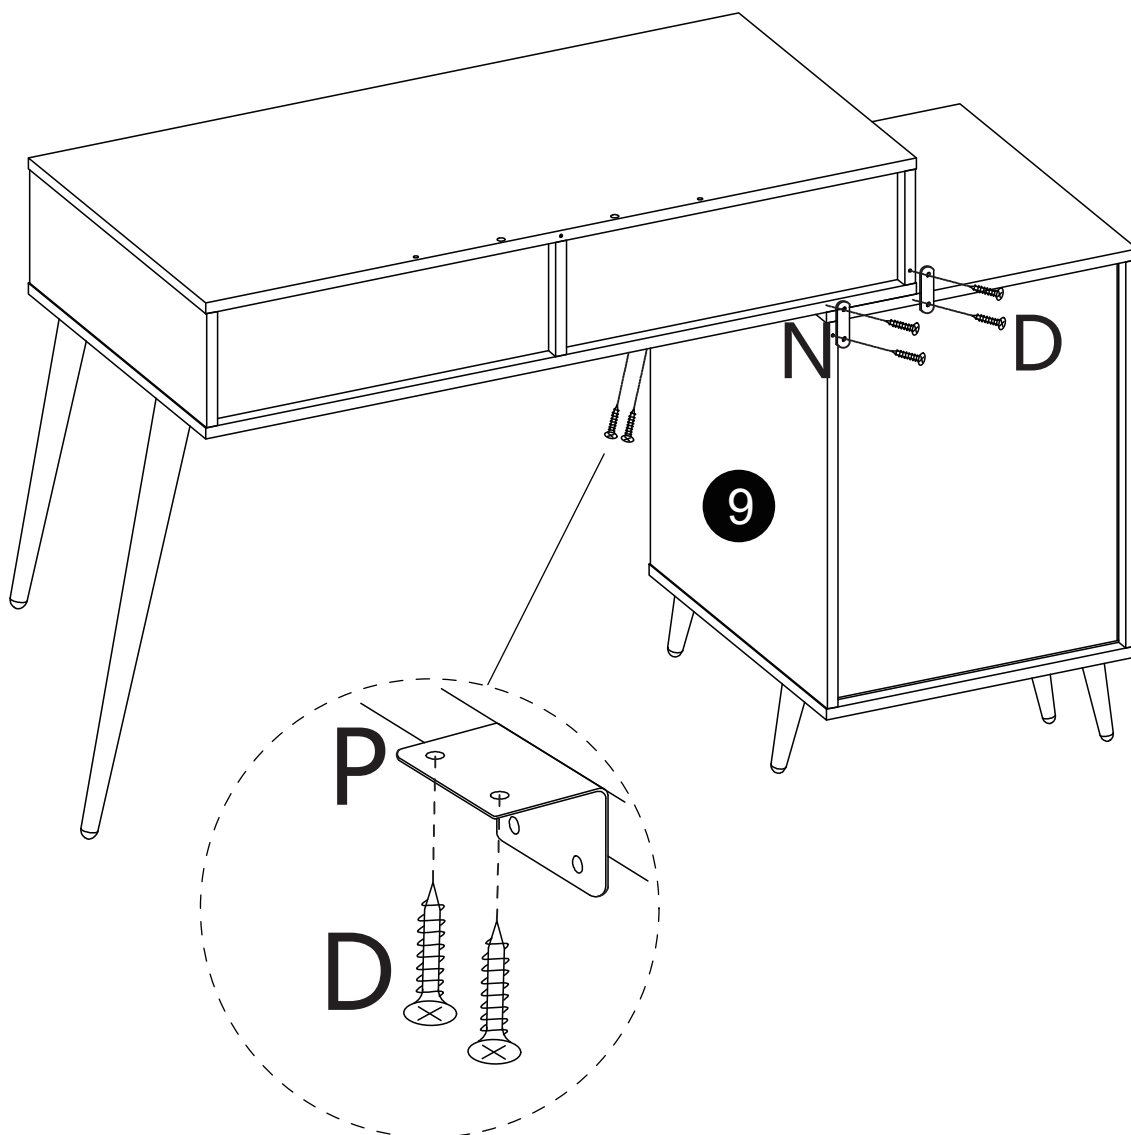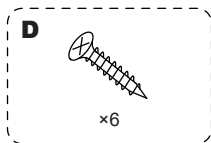
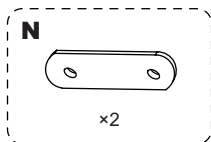


The three-drawer cabinet on the lower side can be moved left and right, and then fixed with “N” and “P”





| Step29

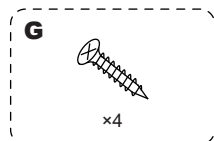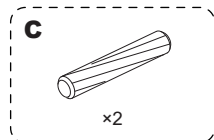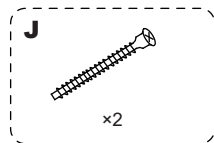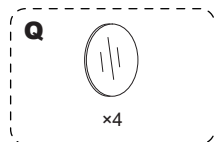


In order to make the product more beautiful,
please paste hardware “Q” on the exposed holes.

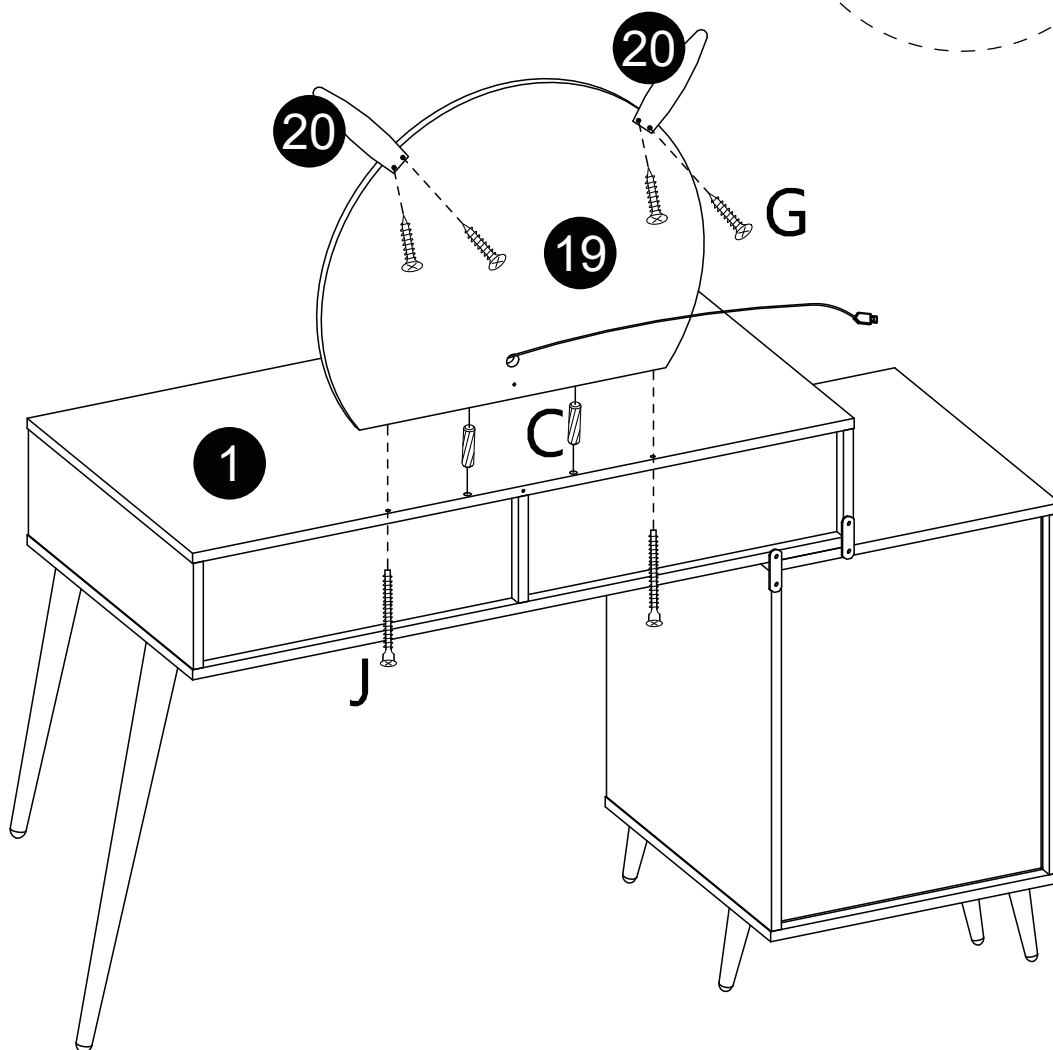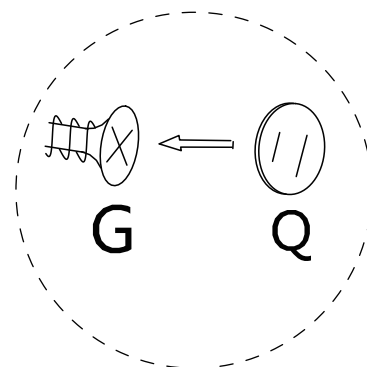

| Step30

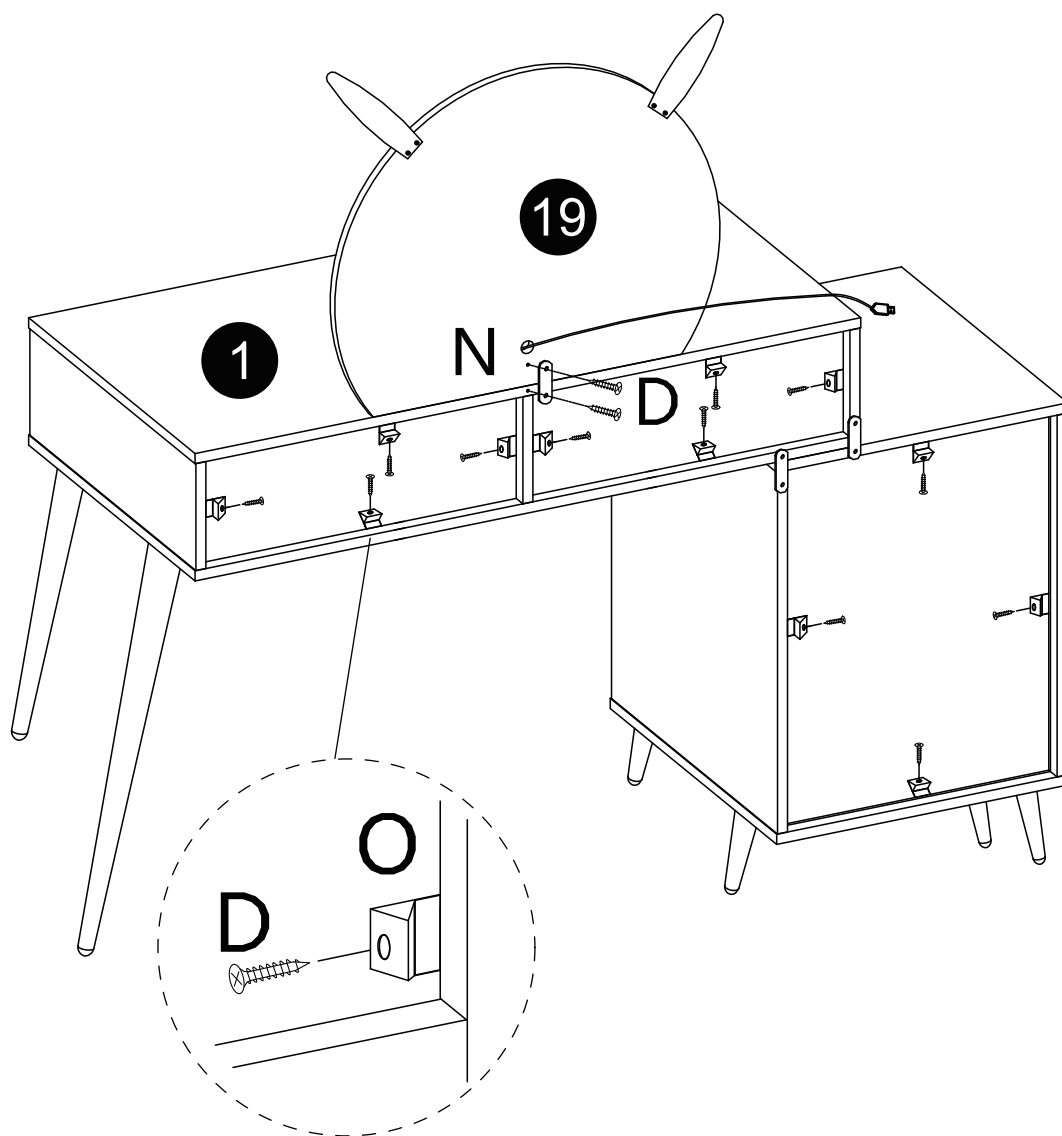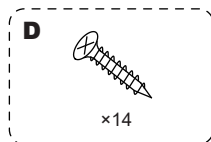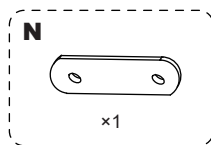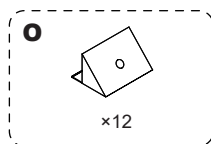

| Step31

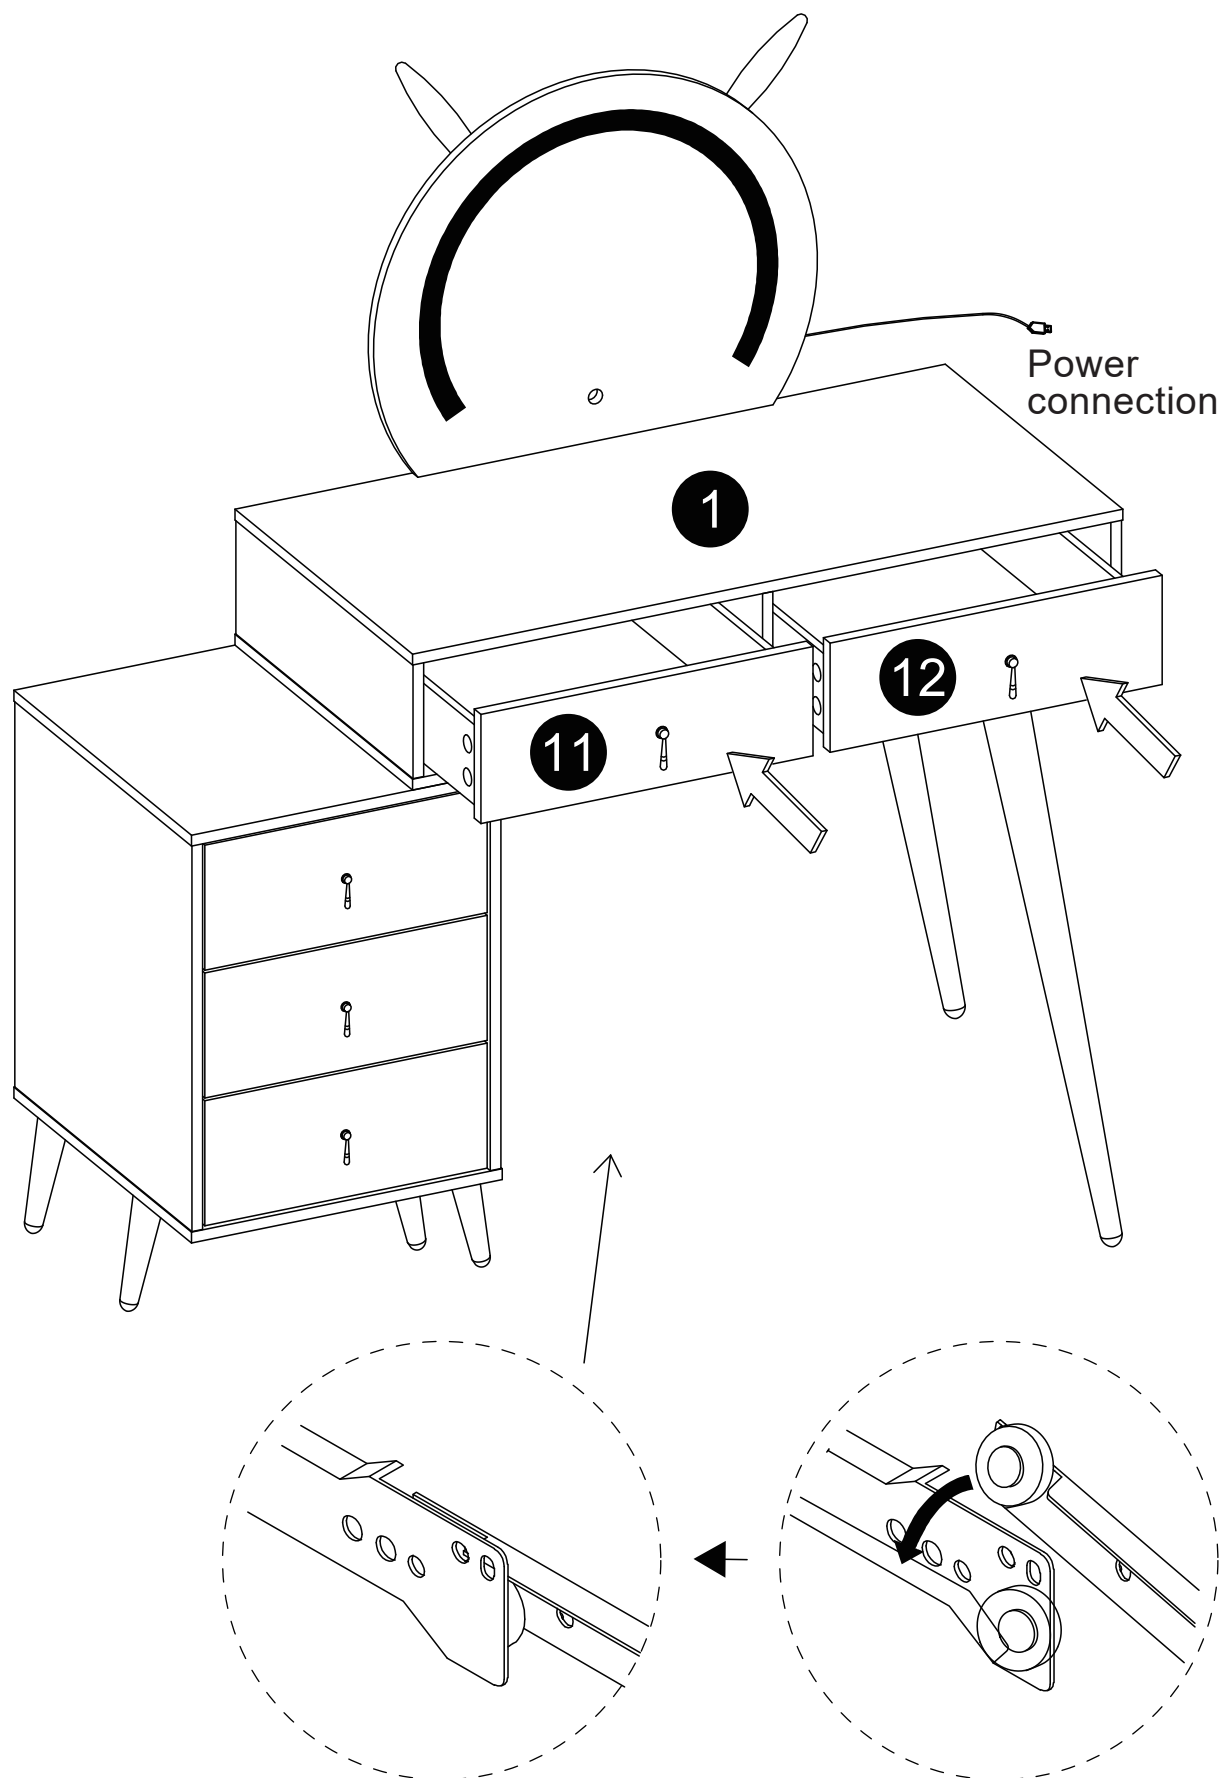

Musstufic

<i>Musstufic</i> (Parent Brand)	Radelldar (Sub-brand)
	Radelldar is sub brands of Naches