

# ASSEMBLY INSTRUCTIONS

1. Place all parts on a flat smooth surface.
2. Connect the tube(B) to the base (A).
3. Connect tube (D) to the tube (C) .
4. Connect top part (E) to the tube (D) .
5. Install the Shade (F) on the Socket and secure with the Socket Ring (G) (**Socket Ring located on socket**)
6. **When finished the installation, adjust the cardan rotating head (E) and make the lamp shade to a correct position.**
7. Install Bulb (H) (Not included)


**⚠ CAUTION** - Refer to the wattage caution label located near the lamp holder for maximum wattage - do not exceed the maximum wattage.

**⚠ WARNING** - Do not attempt to replace the bulb(s) while the lamp is plugged into a wall receptacle

**CARE INSTRUCTIONS** - Use only a soft cloth; do not use any chemicals or abrasive cleaners.

## IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit it, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not alter the plug.

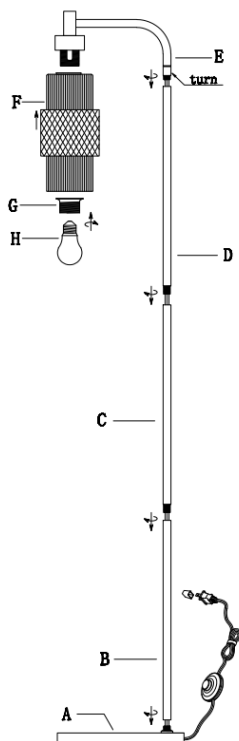

E26 Type A.40W X 1 (Not included)

E26 CFL 13W X 1 (Not included)

