

How to Measure Your Mattress Thickness


The L-method gives a true reading — in about 30 seconds.

Applies to all PrettSun mattresses.

WHAT YOU'LL NEED

A tape measure · A straight edge (ruler, book, or the tape's own case) · A flat surface · Good light

THE CORRECT WAY — THE L-METHOD

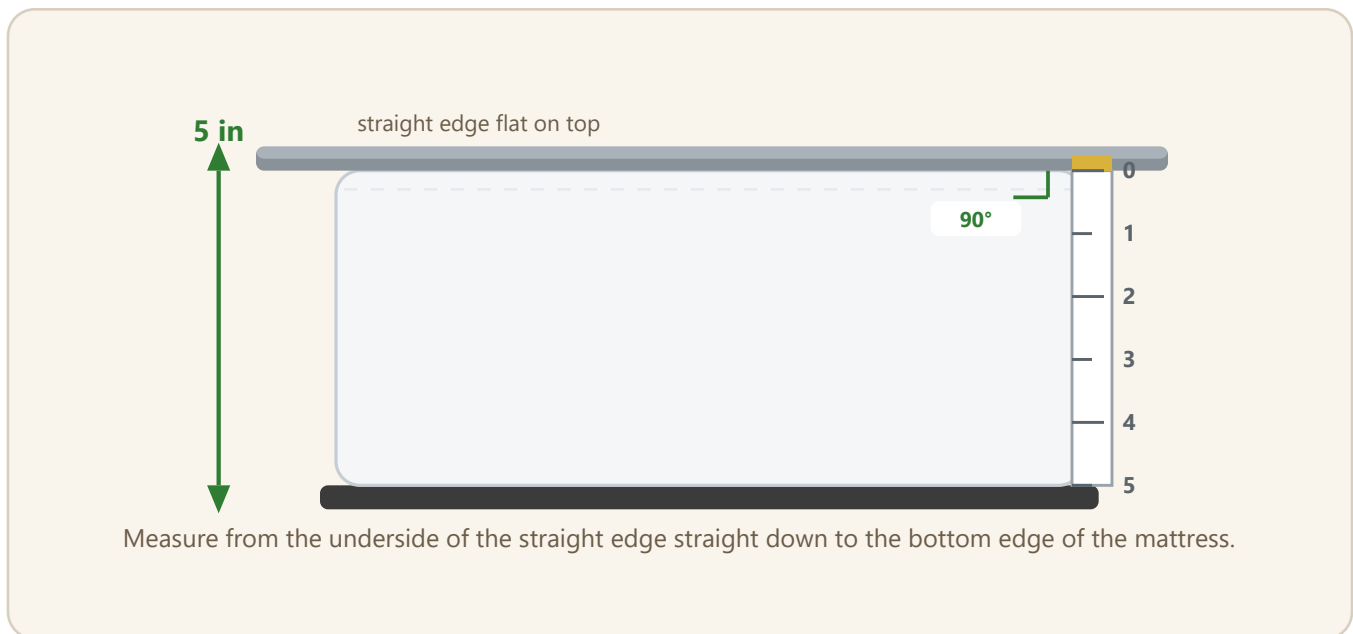


THREE THINGS TO CHECK

- 1 Lay a straight edge flat across the top.**
Use a ruler, a book, or the tape's own case — let it overhang the side of the mattress.
- 2 Measure straight down at 90°.**
Read from the underside of the straight edge down to the bottom edge. The two form an "L".
- 3 Measure at the middle of the side — not the corner.**
The corners are rounded. Hold the camera at eye level and read where the bottom edge sits.

Take the reading gently — a soft quilted surface will compress slightly if you press the tape down.

What Goes Wrong — and How to Avoid It


✗ Not quite accurate

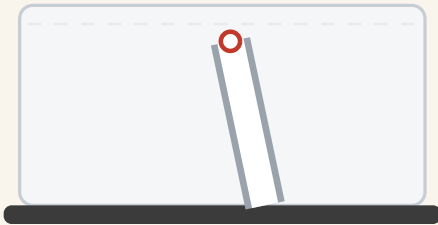

Reads short

The tape starts below the top edge and leans instead of standing straight.

✓ L-method — accurate

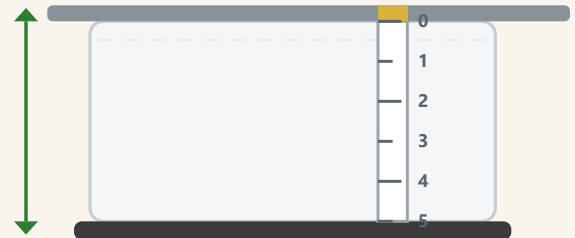

Reads the full height

Straight edge sits on the top edge; the tape runs straight down at 90°.

COMMON QUESTIONS

Should I measure at the corner of the mattress?

No. The corners are rounded, so a tape resting there stops early and reads short. Measure along the middle of a long side.

The tape will not stand up on its own.

Lay a straight edge across the top and run the tape down against it — or press the tape's case flat against the side and pull the blade upward.

My reading changes every time.

Take three readings at the same spot (near each end and in the centre), let the tape rest naturally, and compare those three.

How do I take the clearest photo?

Photograph the tape flat against the side of the mattress, camera at eye level, with the whole height in frame and the numbers readable.

KEEP THIS GUIDE

Store it with your purchase records for future reference.

Tip: a photo of the tape against the side, with the numbers readable, is the clearest record of its thickness.

Cómo medir el grosor de su colchón


El método en L da una lectura real, en unos 30 segundos.

Se aplica a todos los colchones PrettSun.

LO QUE NECESITA

Una cinta métrica · Un borde recto (regla, libro o la carcasa de la cinta) · Superficie plana · Buena luz

LA FORMA CORRECTA — EL MÉTODO EN L

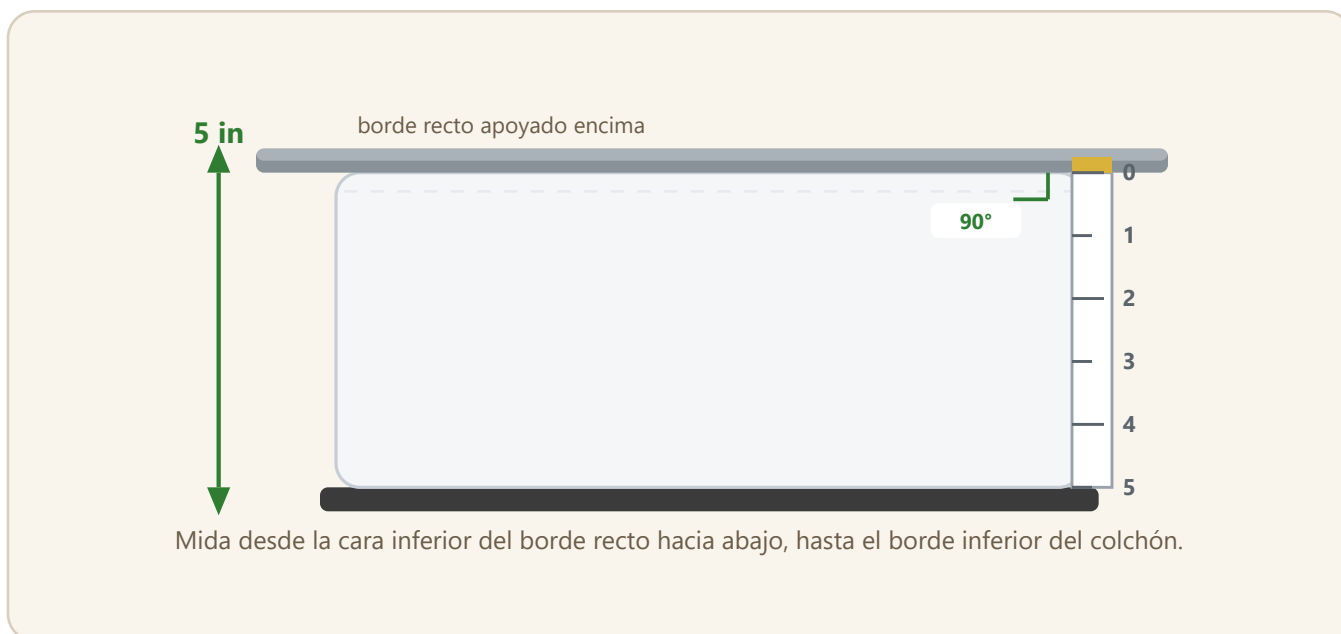


TRES COSAS QUE VERIFICAR

- 1 Apoye un borde recto sobre la parte superior.**
Use una regla, un libro o la propia carcasa de la cinta; deje que sobresalga por el lado del colchón.
- 2 Mida en línea recta hacia abajo, a 90°.**
Lea desde la cara inferior del borde recto hasta el borde inferior del colchón. Los dos forman una «L».
- 3 Mida en el centro del costado, no en la esquina.**
Las esquinas son redondeadas. Sostenga la cámara a la altura de los ojos y lea dónde queda el borde inferior.

Tome la lectura con suavidad: una superficie acolchada se comprime un poco si presiona la cinta.

Qué puede salir mal y cómo evitarlo


✗ Poco preciso

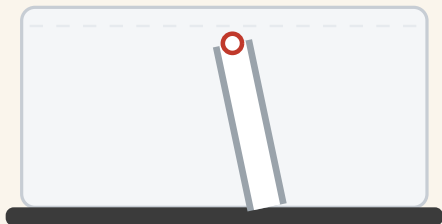

Lee de menos

La cinta empieza por debajo del borde superior y se inclina en lugar de quedar recta.

✓ Método en L — preciso

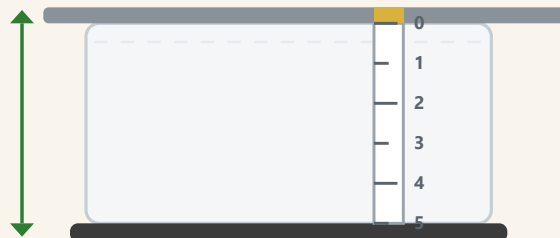

Lee la altura completa

El borde recto apoya sobre el borde superior y la cinta baja recta a 90°.

PREGUNTAS FRECUENTES

¿Debo medir en la esquina del colchón?

No. Las esquinas son redondeadas, así que una cinta apoyada ahí se detiene antes y lee de menos. Mida a lo largo del centro de un costado largo.

La cinta no se sostiene recta por sí sola.

Apoye un borde recto sobre la parte superior y deslice la cinta contra él; o presione la carcasa de la cinta contra el costado y extienda la hoja hacia arriba.

Mi lectura cambia cada vez.

Tome tres lecturas en el mismo punto (cerca de cada extremo y en el centro), deje que la cinta descansa de forma natural y compare esas tres.

¿Cómo tomo la foto más clara?

Fotografíe la cinta apoyada en el costado del colchón, con la cámara a la altura de los ojos, toda la altura dentro del encuadre y los números legibles.

GUARDE ESTA GUÍA

Consérvela con sus documentos de compra para futuras consultas.

Consejo: una foto de la cinta contra el costado, con los números legibles, registra mejor el grosor.