

FSB SQUARE ASSEMBLY

PARTS REQUIRED FOR INSTALLATION




BASE (x1)




COLUMN (x1)



TIEROD (x1)

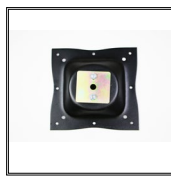


TOP PLATE (x1)

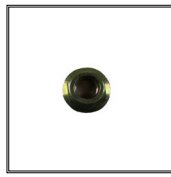

FLANGE NUT (x1)

Below are step by step instructions on how to properly assemble the FSB Square base. If you have any additional questions or concerns regarding assembly please call the GAR Customer Service Team at 800.424.2477.

STEP ONE

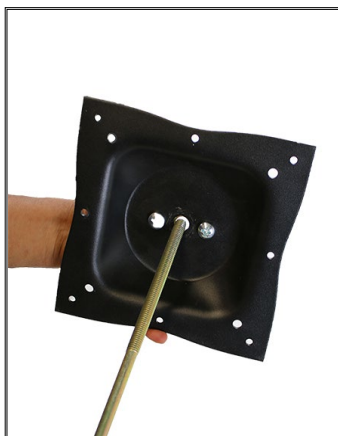

First, thread the bottom of the tierod, where the ridges are, through the middle hole on the top plate. Then place on the ground with the rod pointing upward.

STEP TWO



Place the column over the tierod until it is securely placed on top of the top plate.

STEP THREE



Place the base on the bottom of the column. The tierod should come through the middle hole of the base. Then, attach the nut to the end of the rod and tighten with a wrench.

STEP FOUR



Once secure, safely flip over the base for the completed product.



1 800 4CHAIRS(424-2477)

www.garproducts.com

service@garproducts.com

Hours of Operation: 8:30am to 5:00pm EST

Tel 732.364.2100

Fax 732.370.5021