

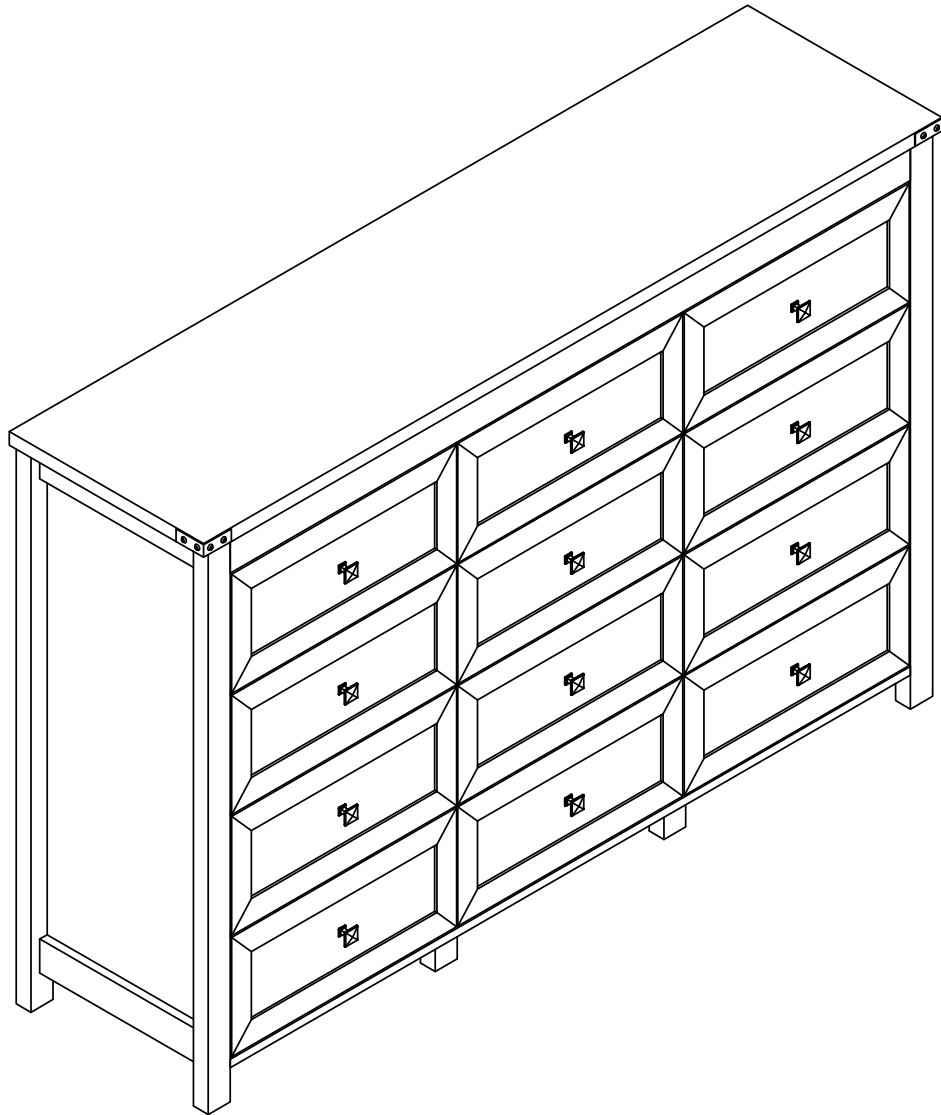


Installation & Assembly

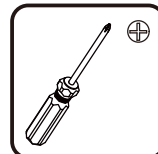


IT IS RECOMMENDED
TO USE POWER TOOLS

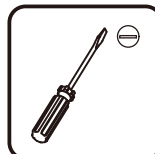


180 MIN




EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

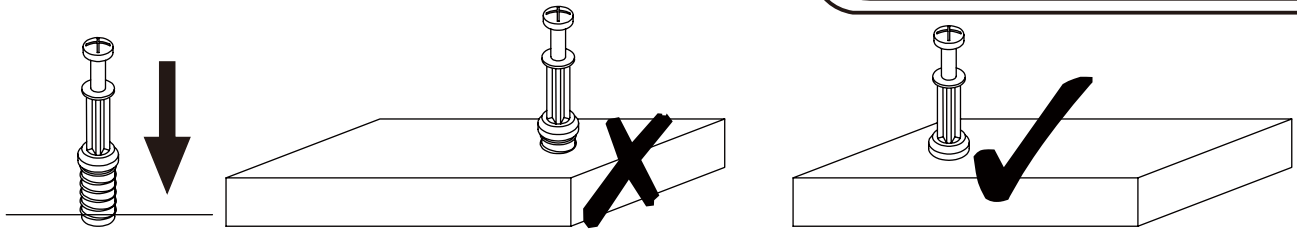


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

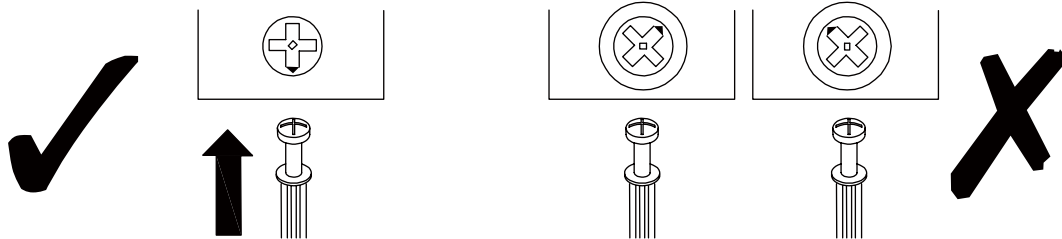

EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.








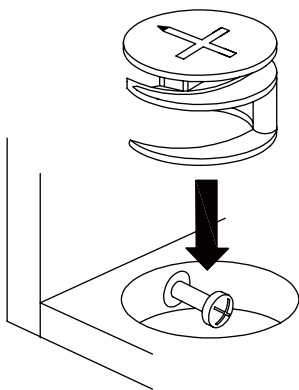


EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.


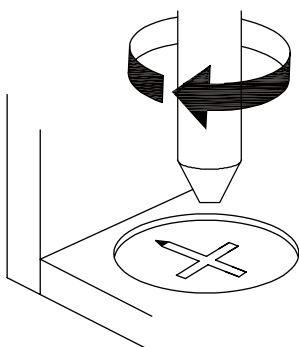


EN_Turn cam lock clockwise to tighten.










Carton A

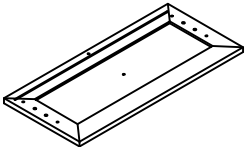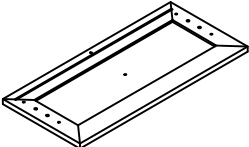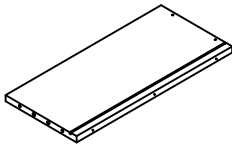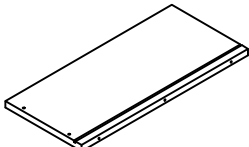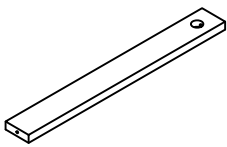
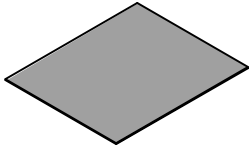
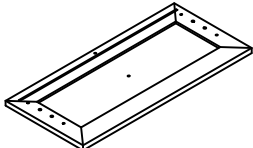
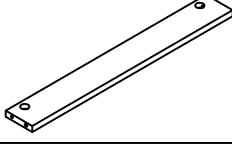
NO.	PARTS	QTY	SPARE
⑩		x4	
⑪		x4	
⑫		x12	
⑬		x12	
⑮		x12	
⑯		x12	
⑰		x4	
⑲		x3	

Carton B

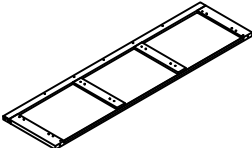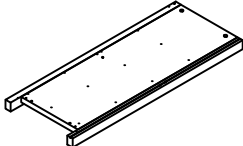
①		x1	
②		x1	

Carton B

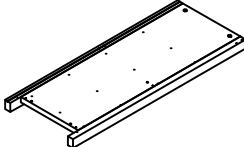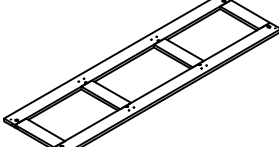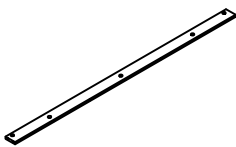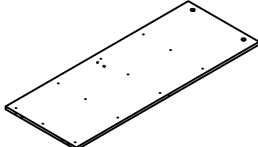
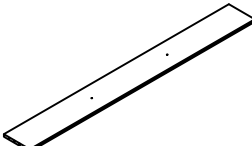
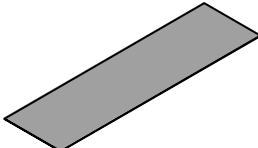
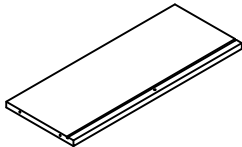
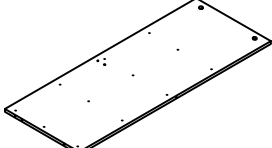
NO.		QTY	SPARE
③		x1	
④		x1	
⑤		x4	
⑥		x1	
⑦		x1	
⑧		x1	
⑨		x2	
⑭		x12	
⑱		x1	
	 Hardware Kit	x1	

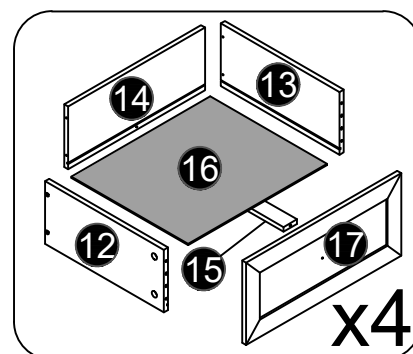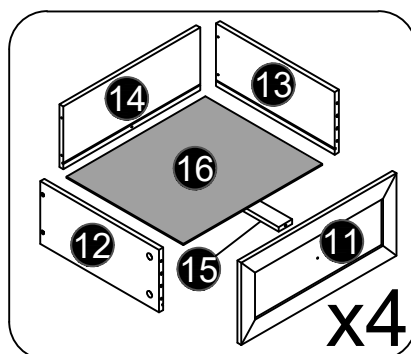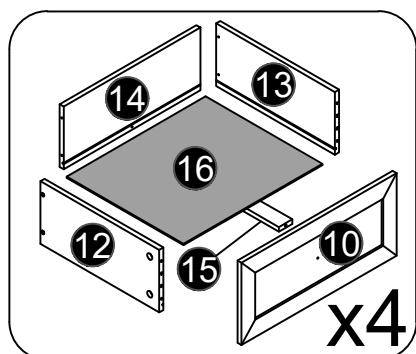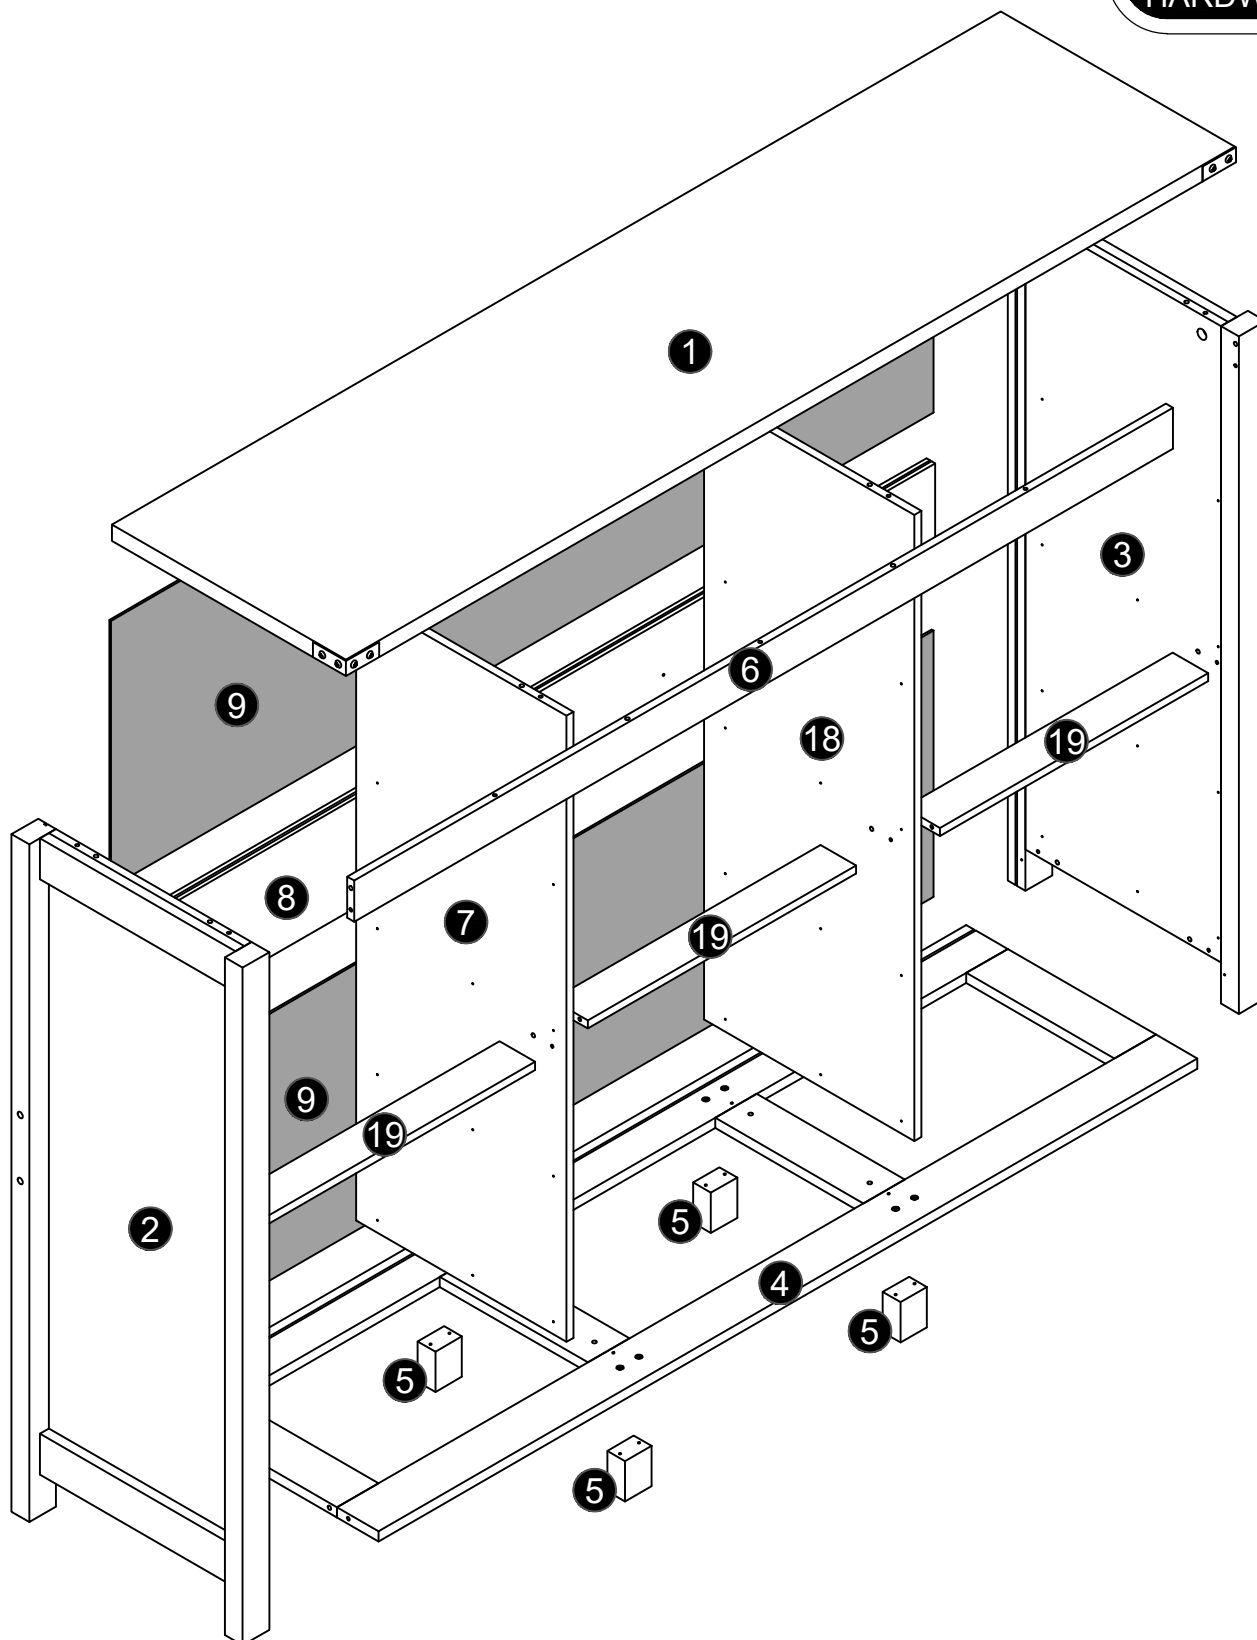

A x83 Ø6x35mm +3(spare)	B x83 Ø15x10mm +3(spare)	C x78 Ø6x30mm +3(spare)	D x74 Ø4x35mm +3(spare)	E x144 Ø3.5x12mm +4(spare)	F x4
G x4	H x12 H-1 H-2	I x2 Ø4x14mm I-1 I-2	J x12 Ø3x16mm +2(spare) J-1 J-2	K x2 K-1 K-2	L x4
M x4	N x4	O x8 Ø4x14mm			
CL x12 L350mm	CR x12 L350mm	DL x12 L350mm	DR x12 L350mm		

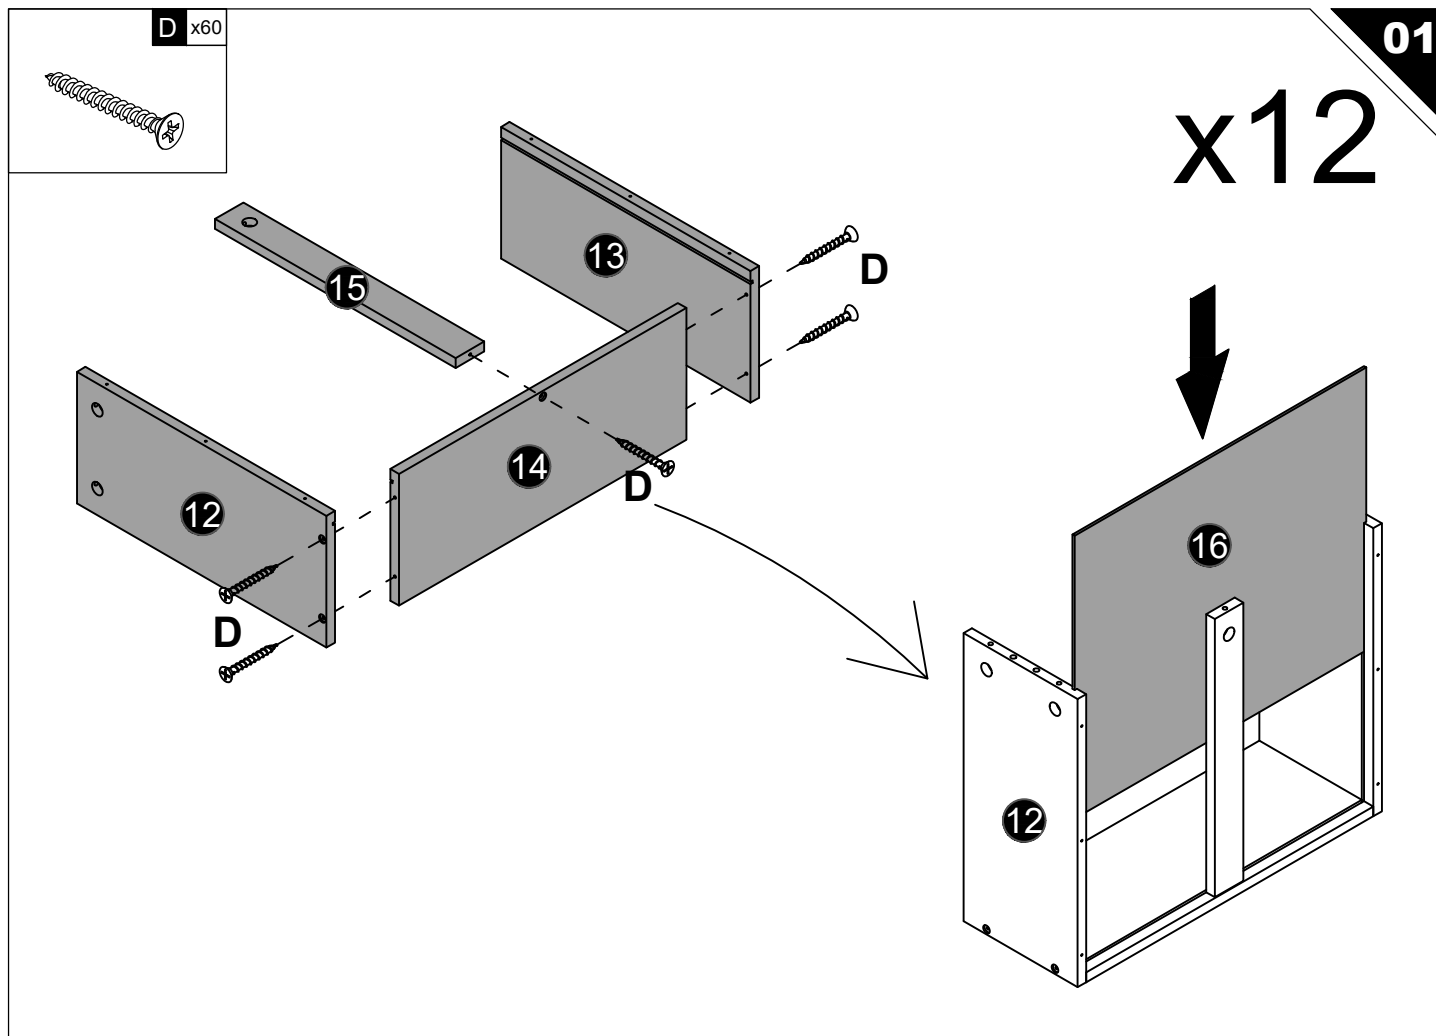

x4

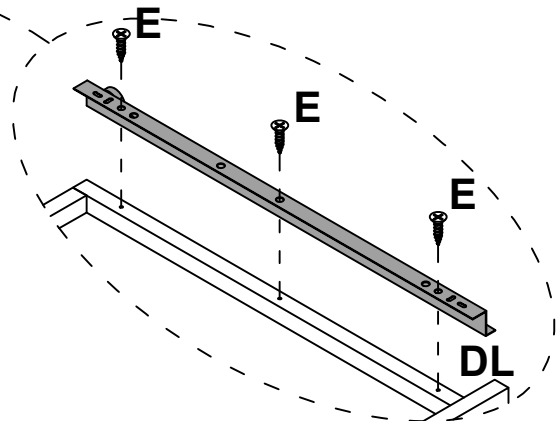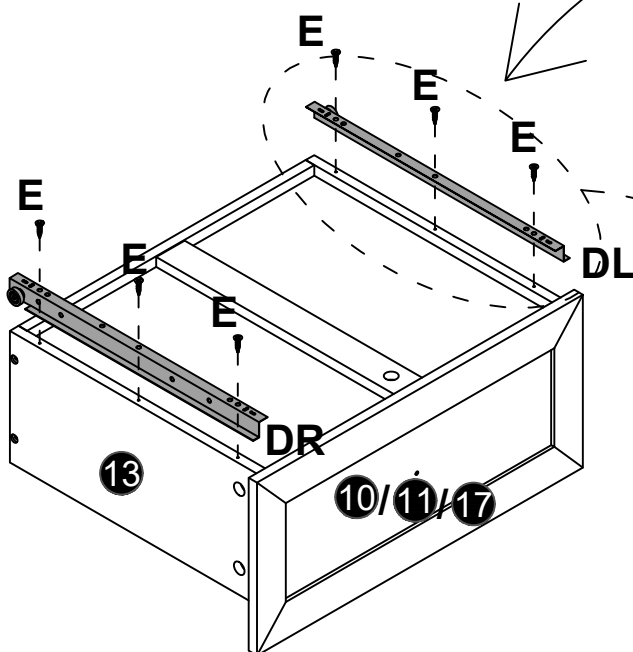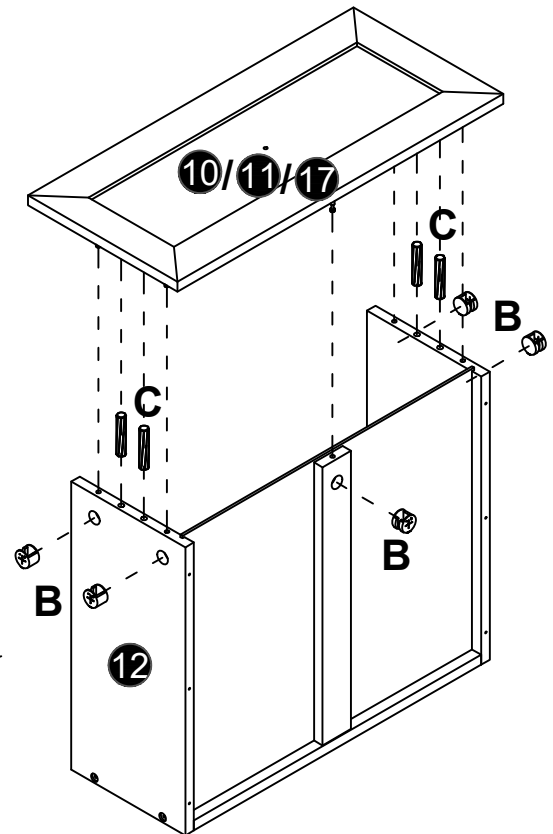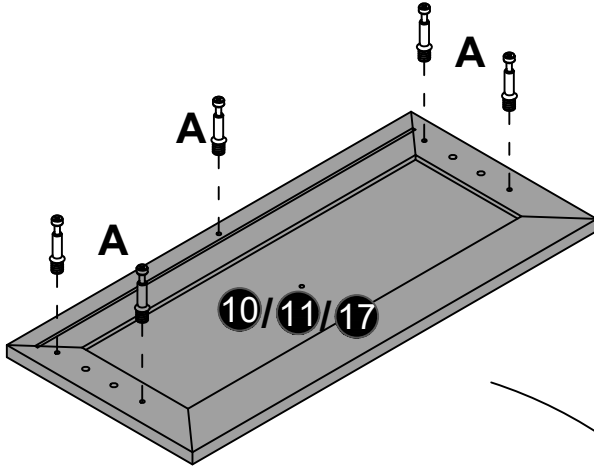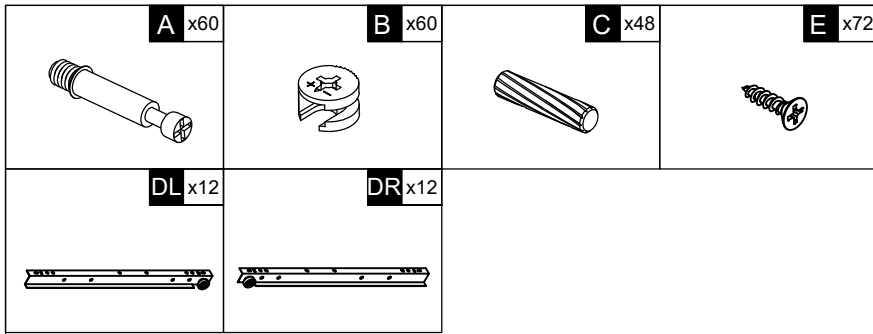

H x12




H-1



H-2

03

x4

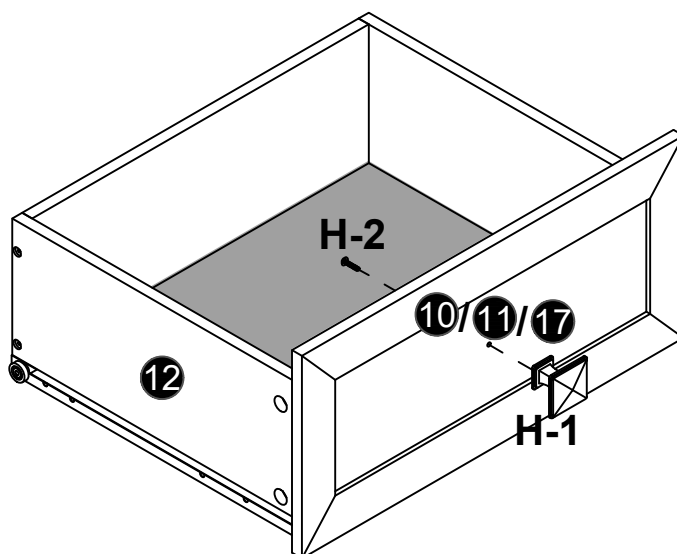

E x12




CL x4



L x2




04

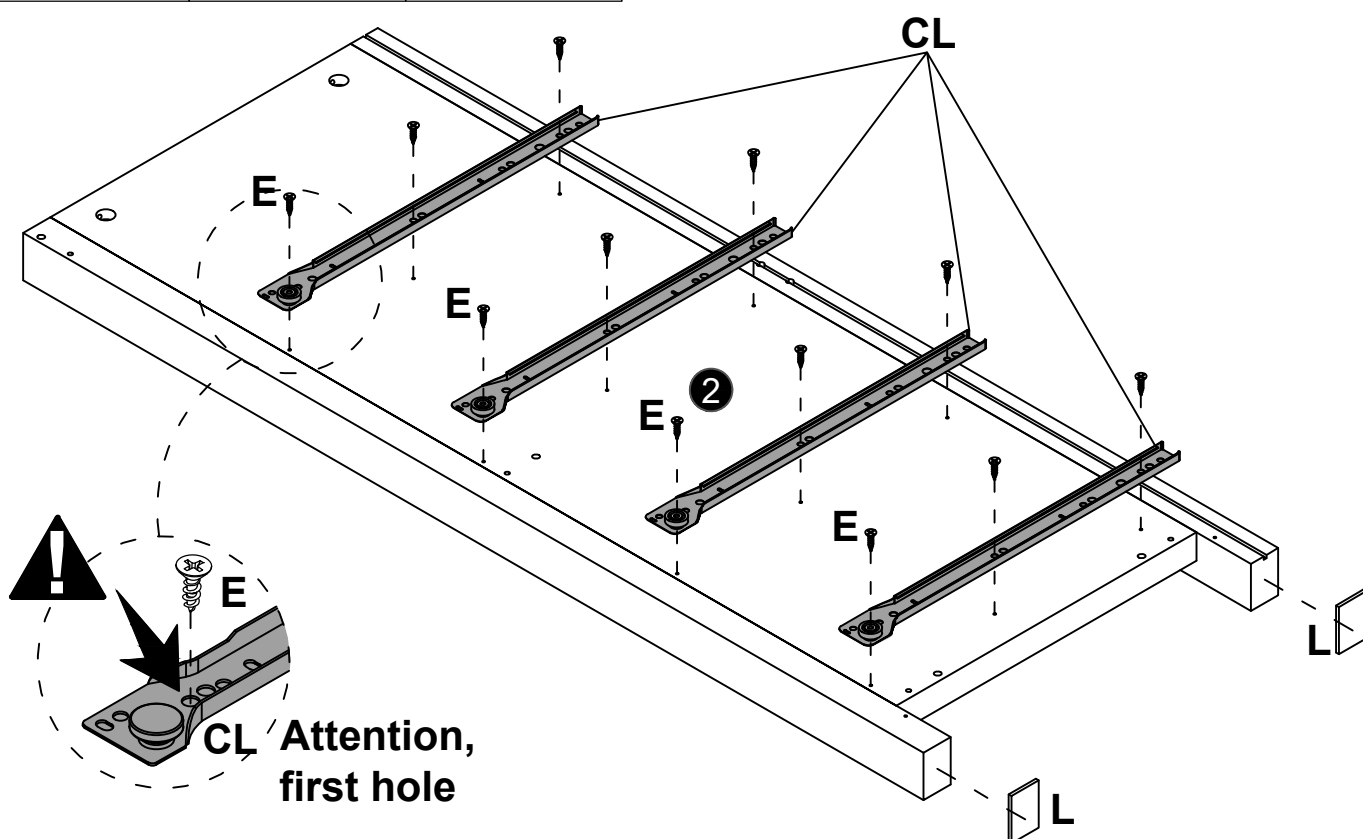



E x12

CR x4

L x2

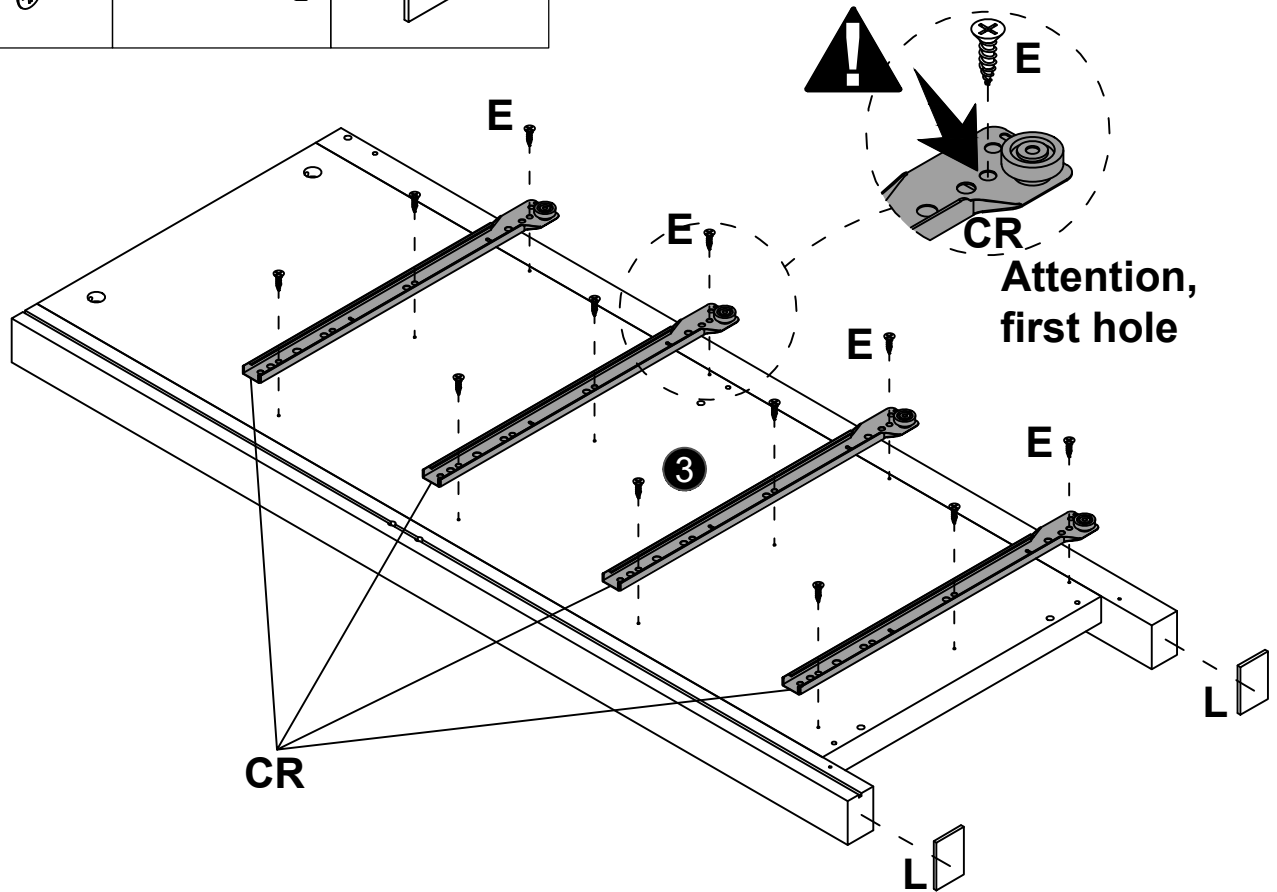

A x8

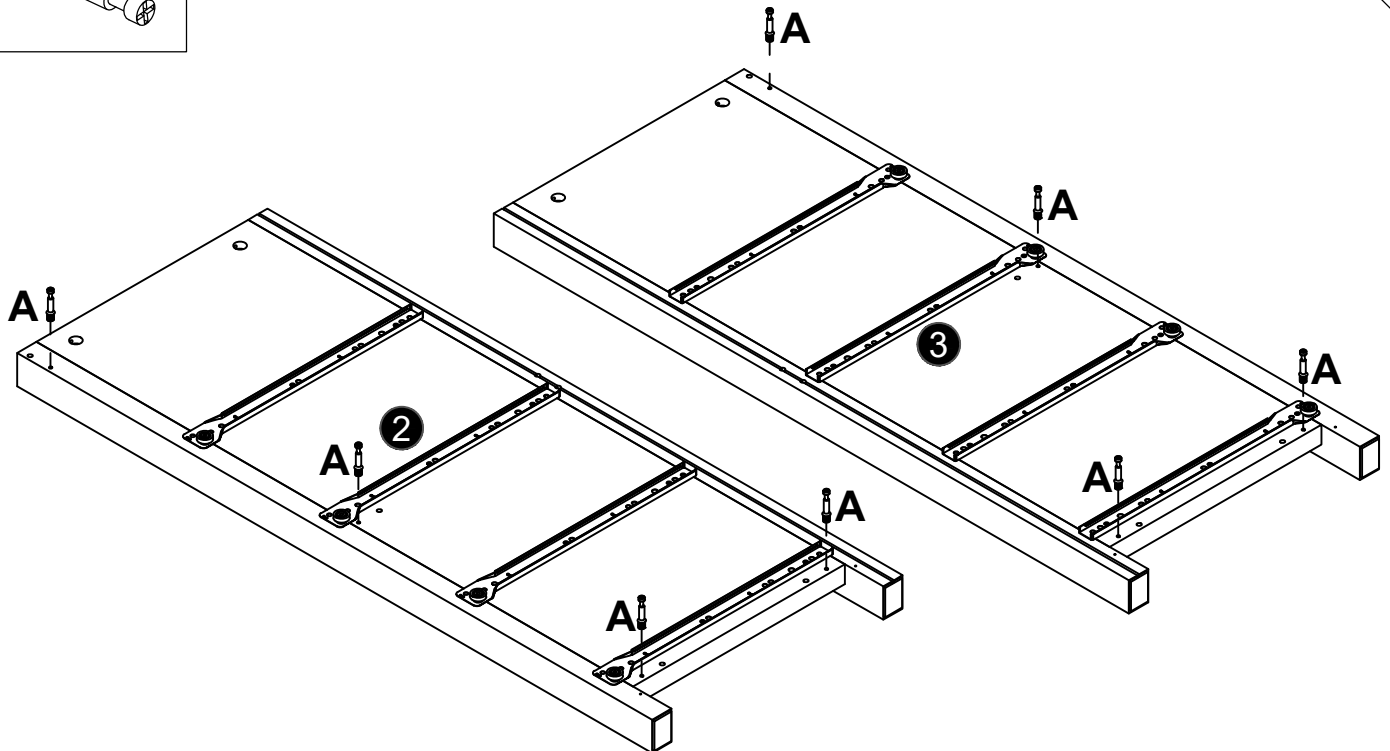

E x24


CL x4

CR x4


07




Notice

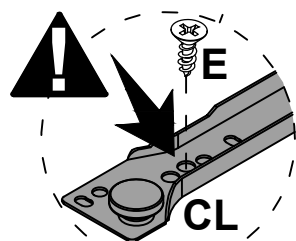

Attention,
second hole

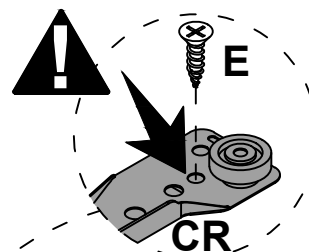

Attention,
first hole





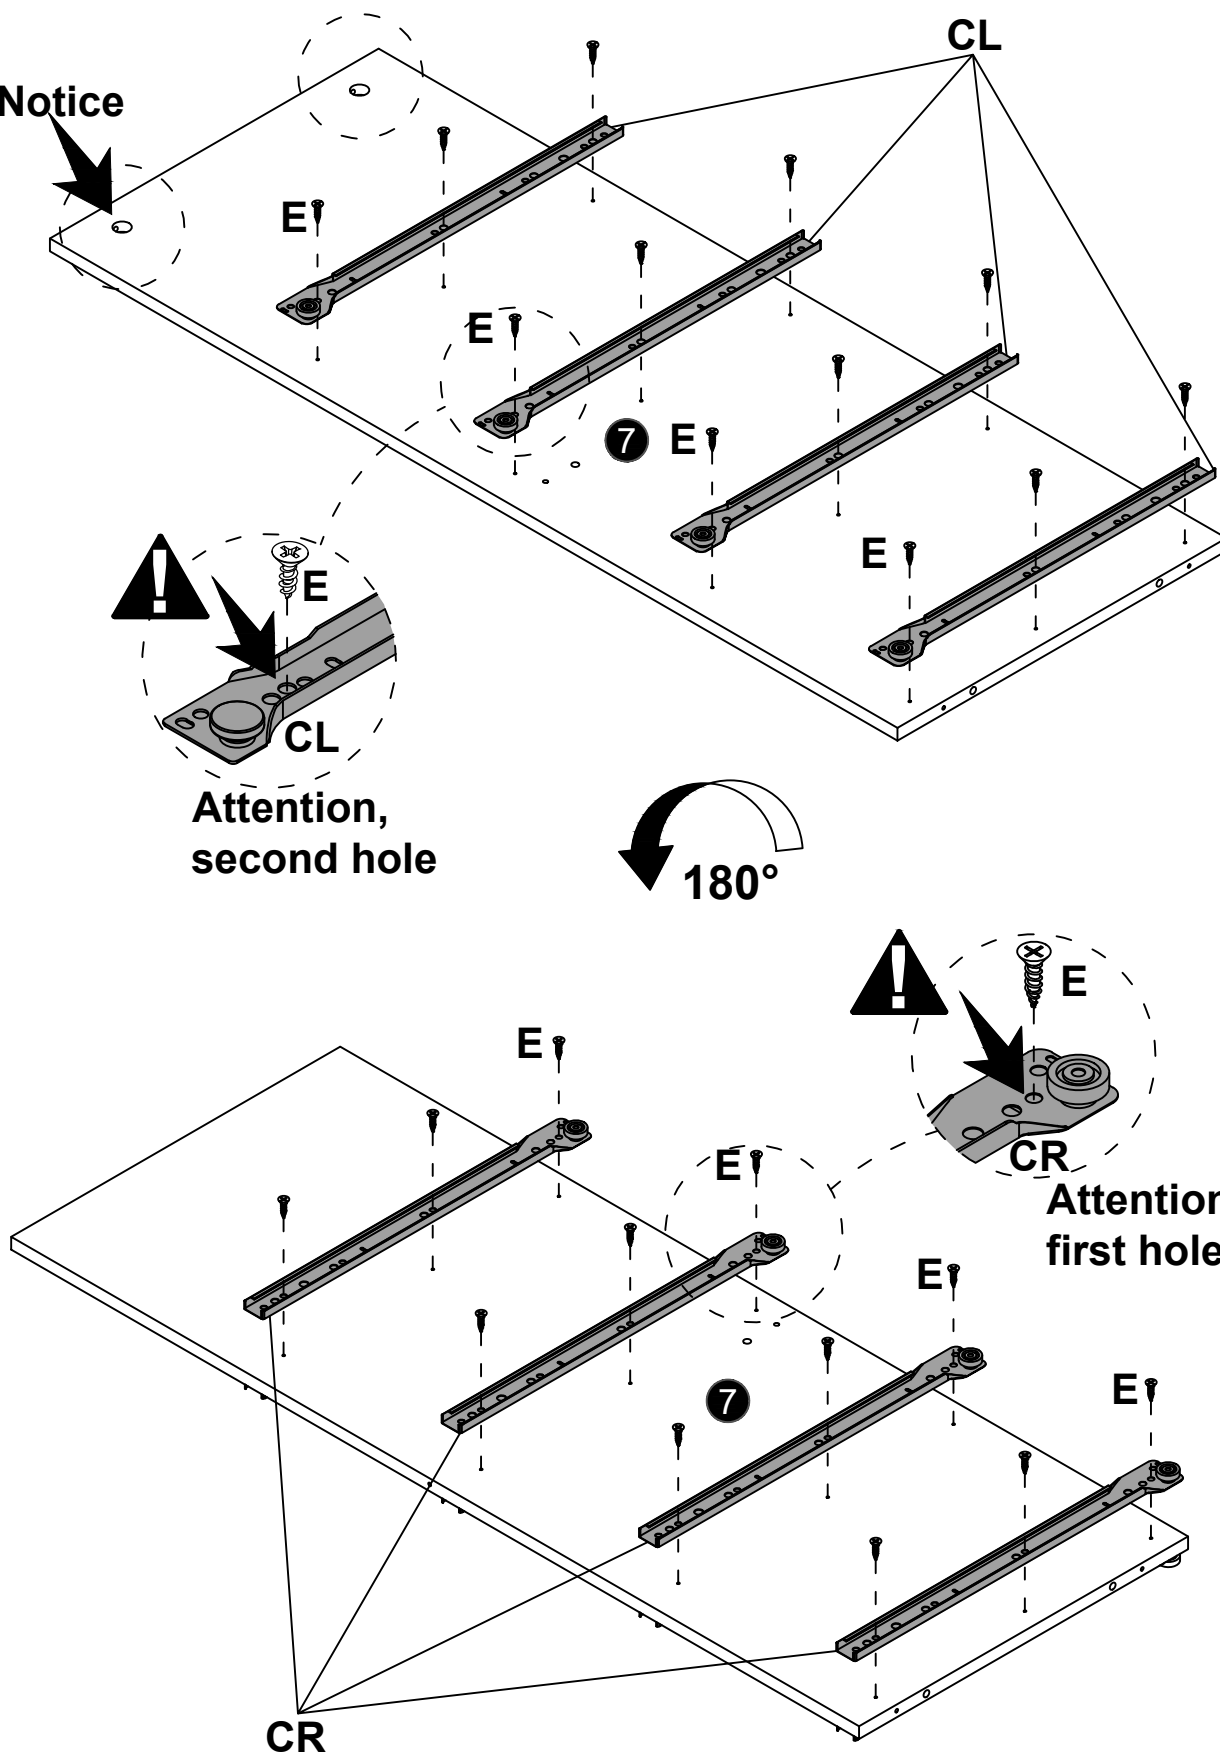


E x24


CL x4

CR x4


08

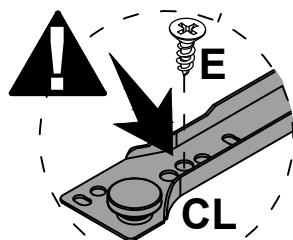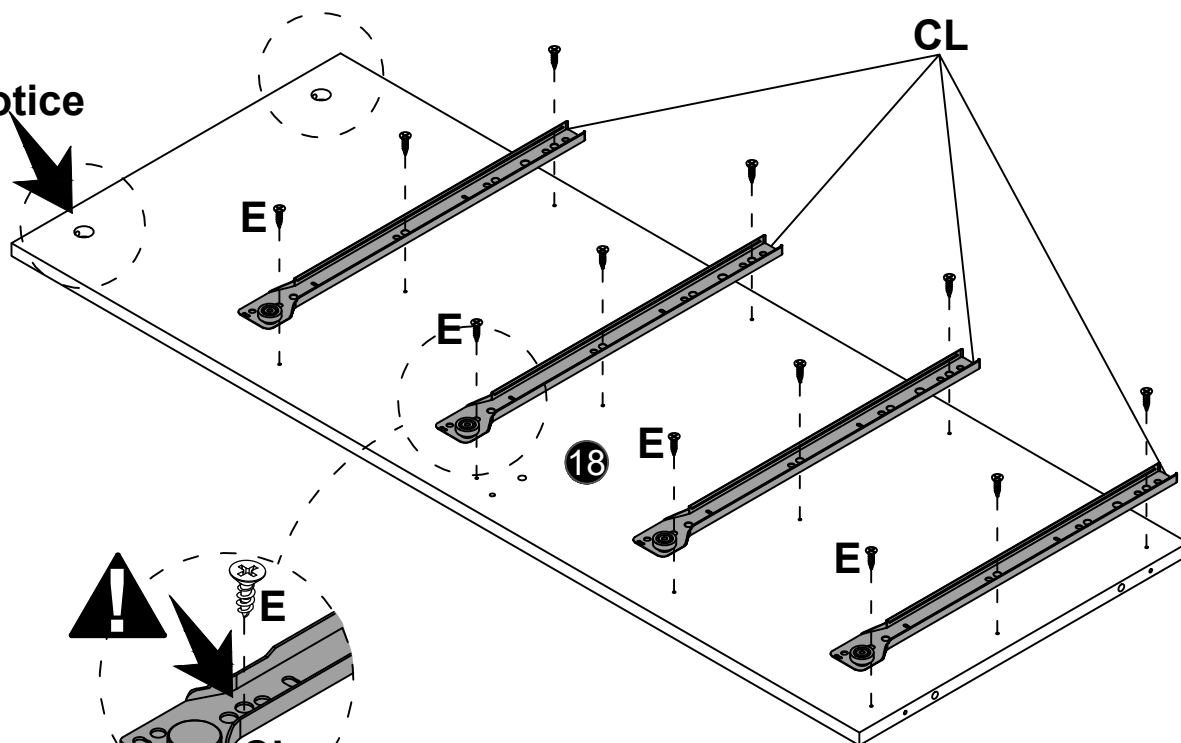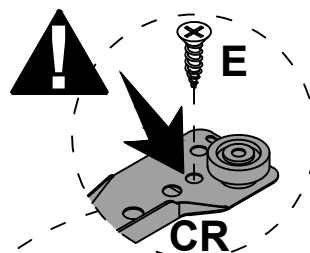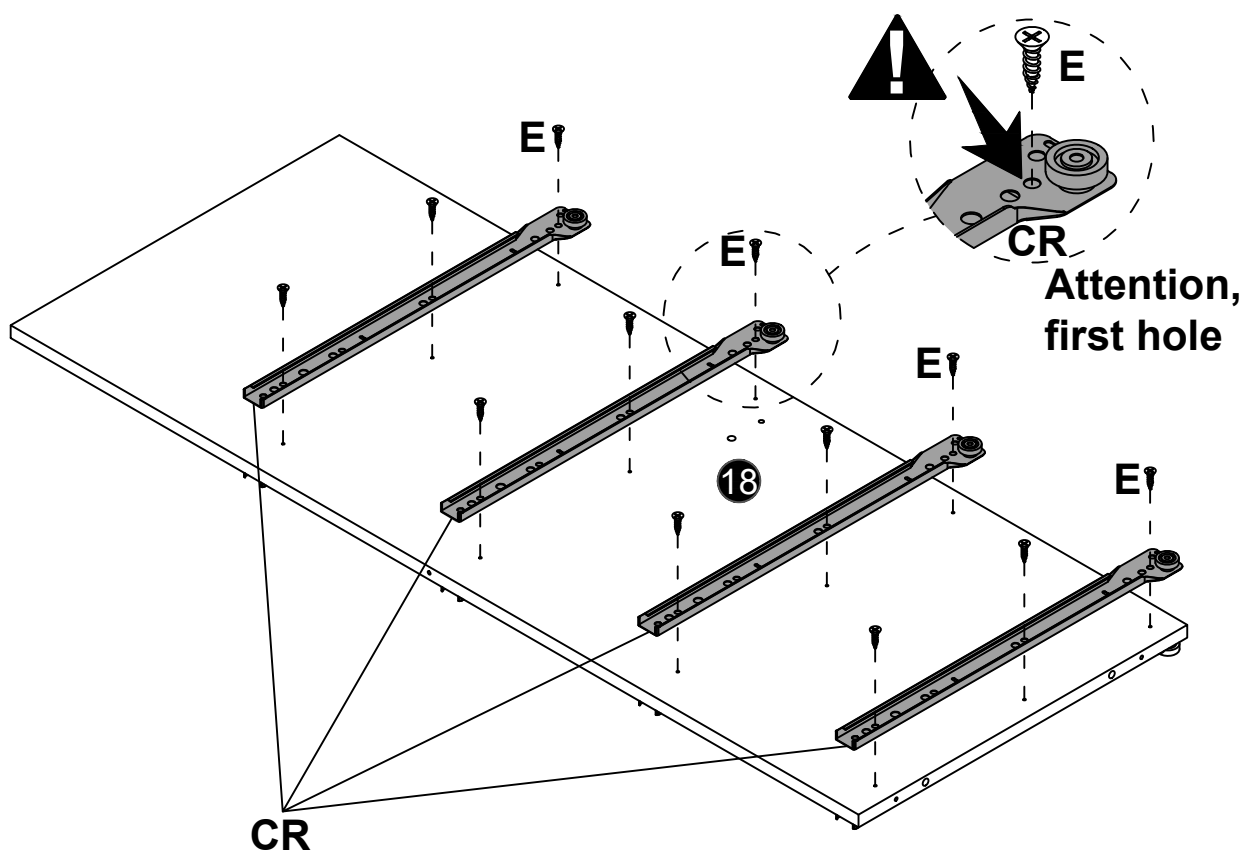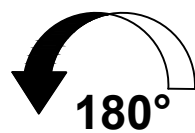**Notice****Attention,
second hole****Attention,
first hole**

A x4




Notice

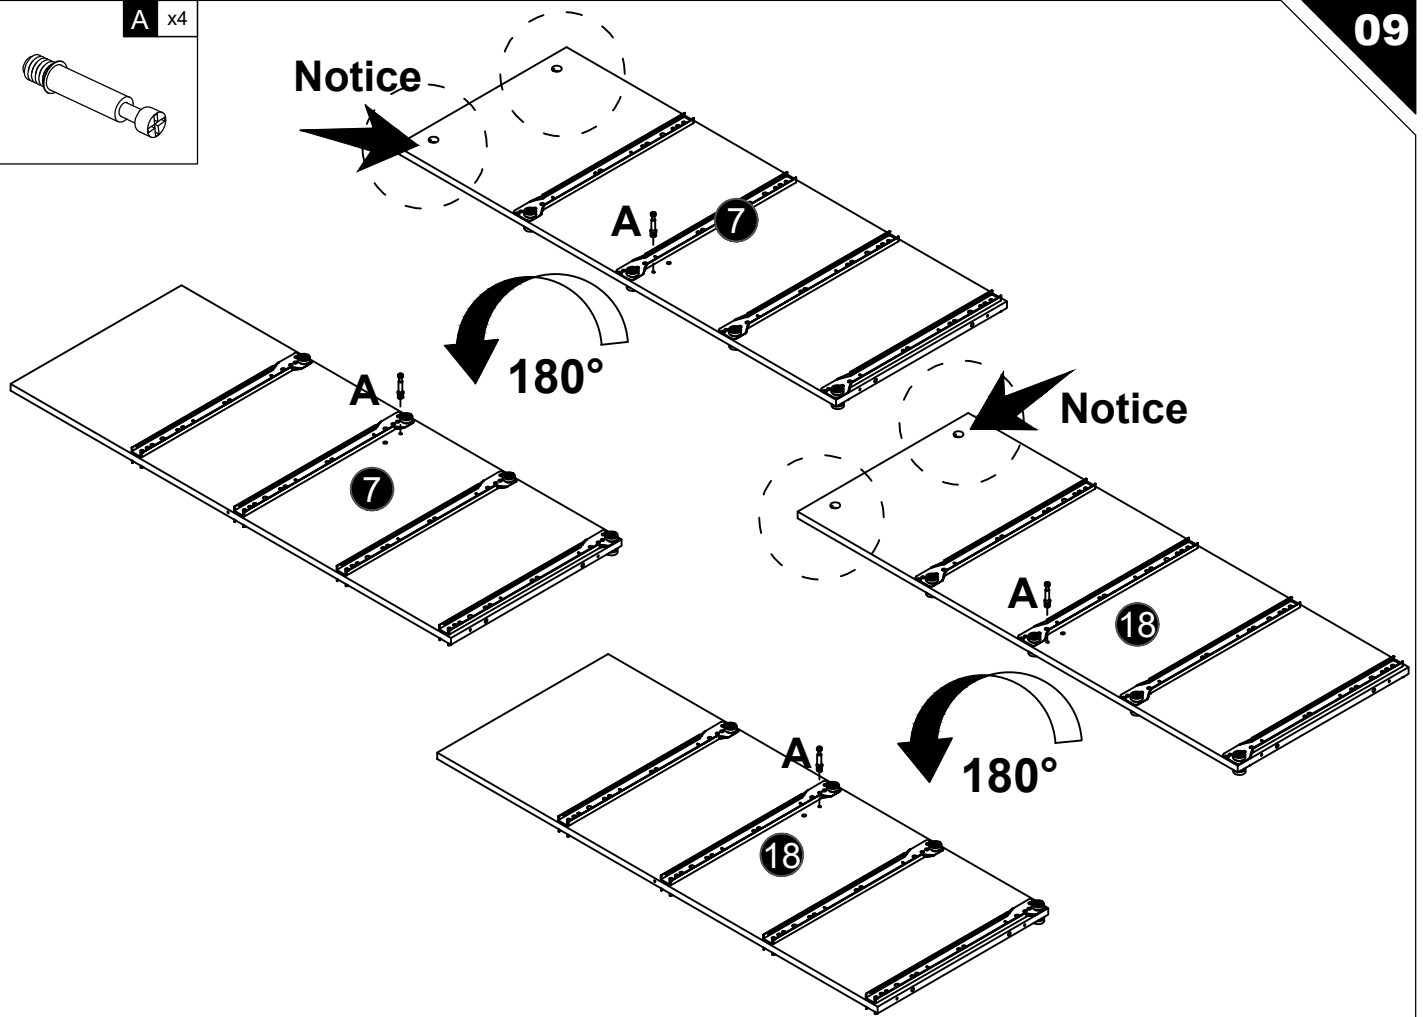


B x2




C x2

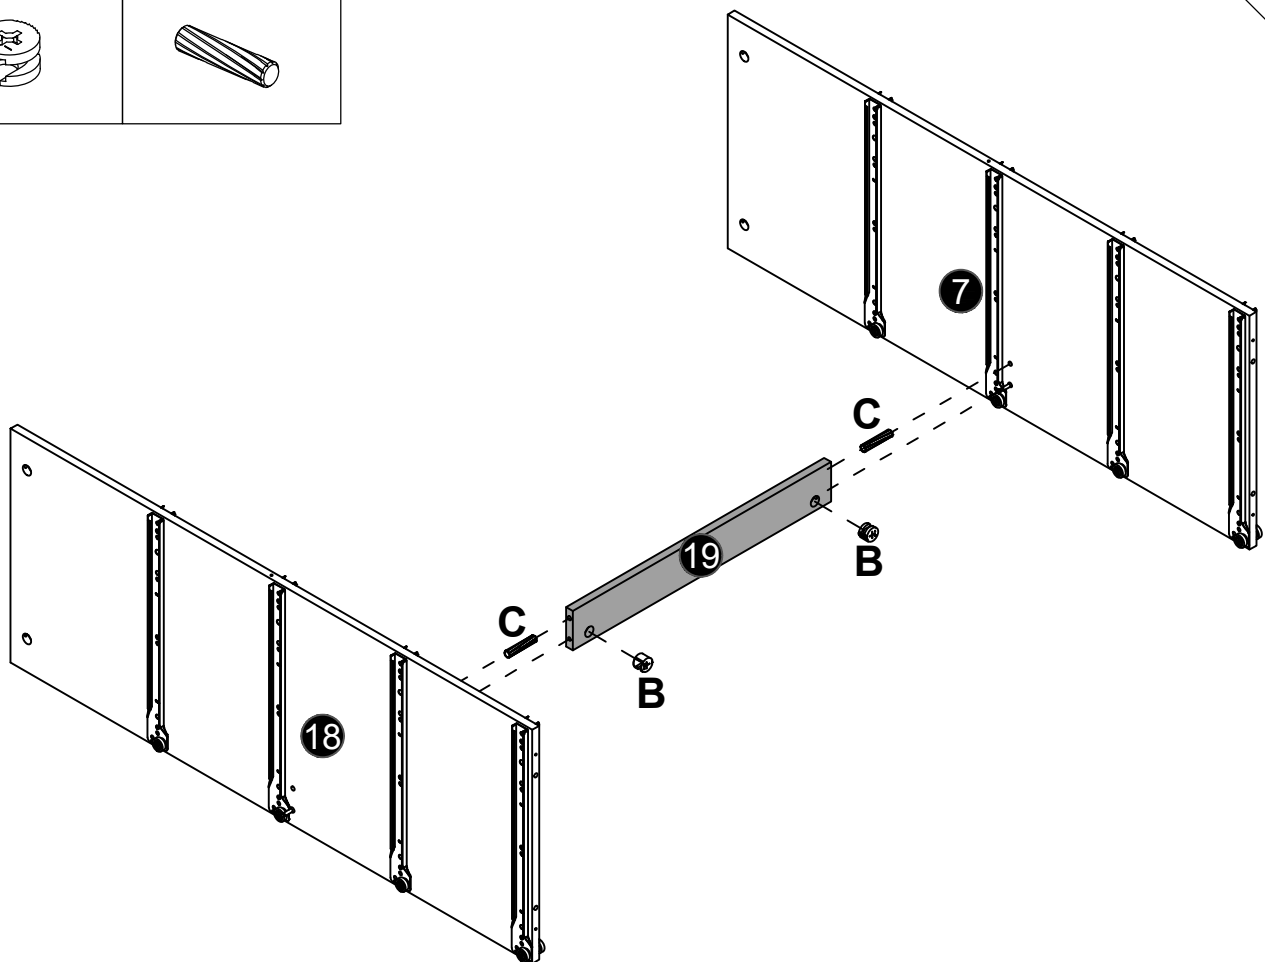

D x2



11

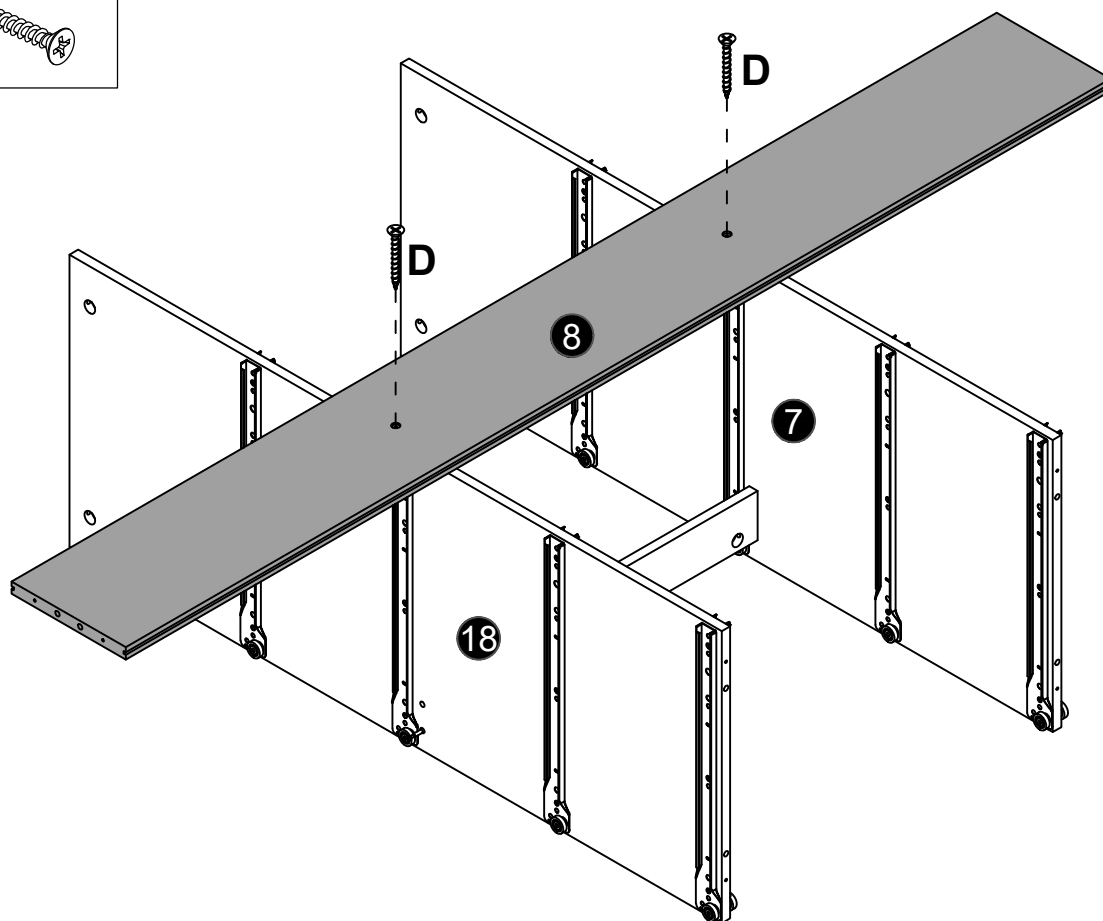


B x2



C x2





12

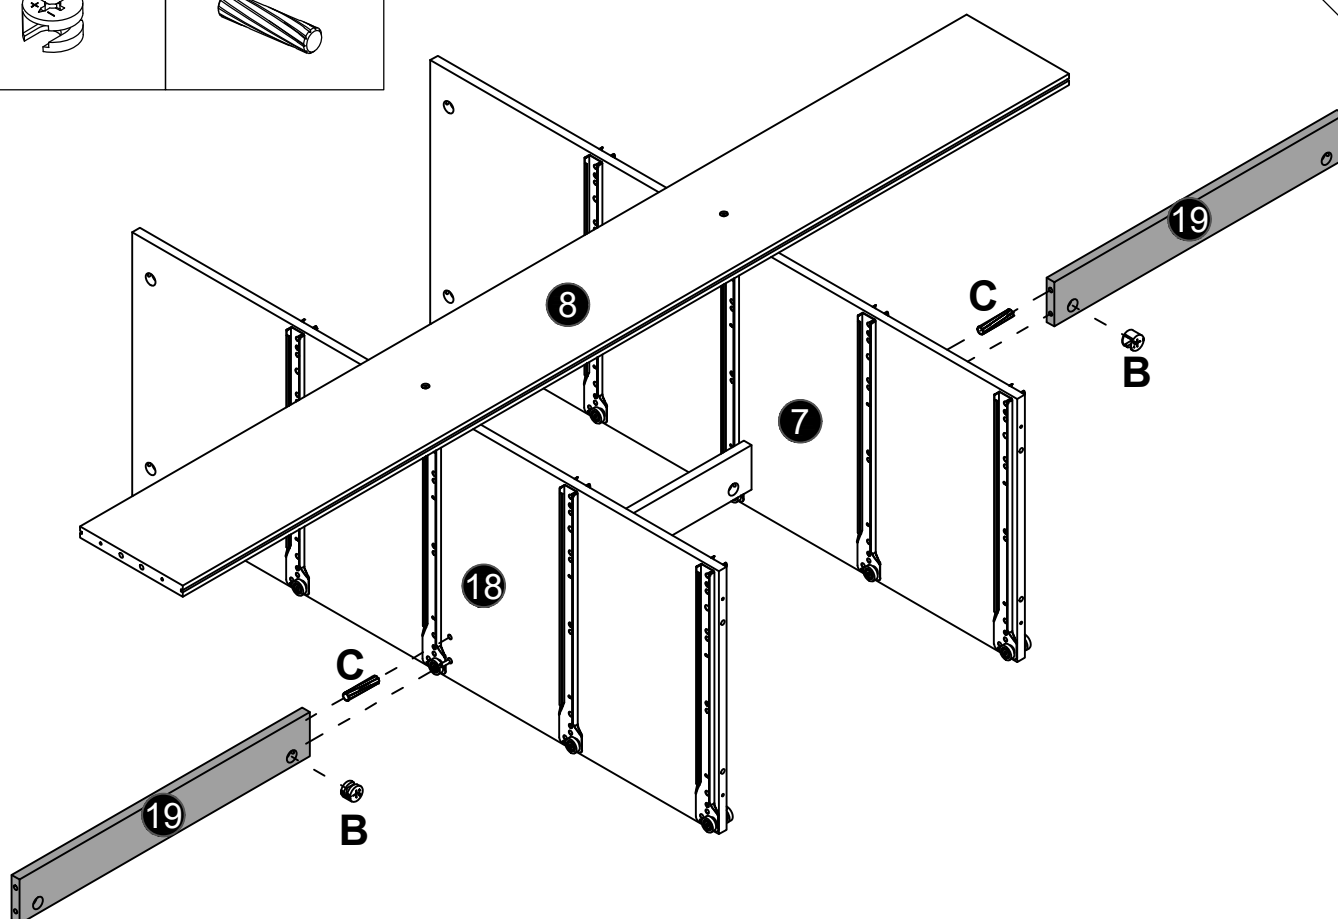



D x8

M x4

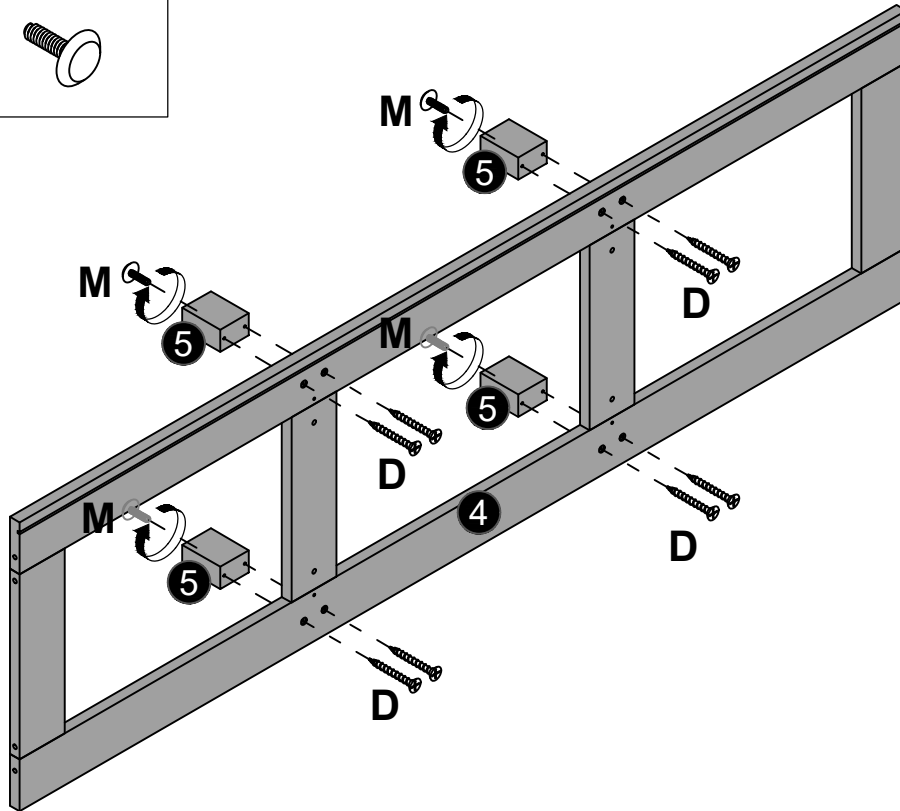


C x4

D x4

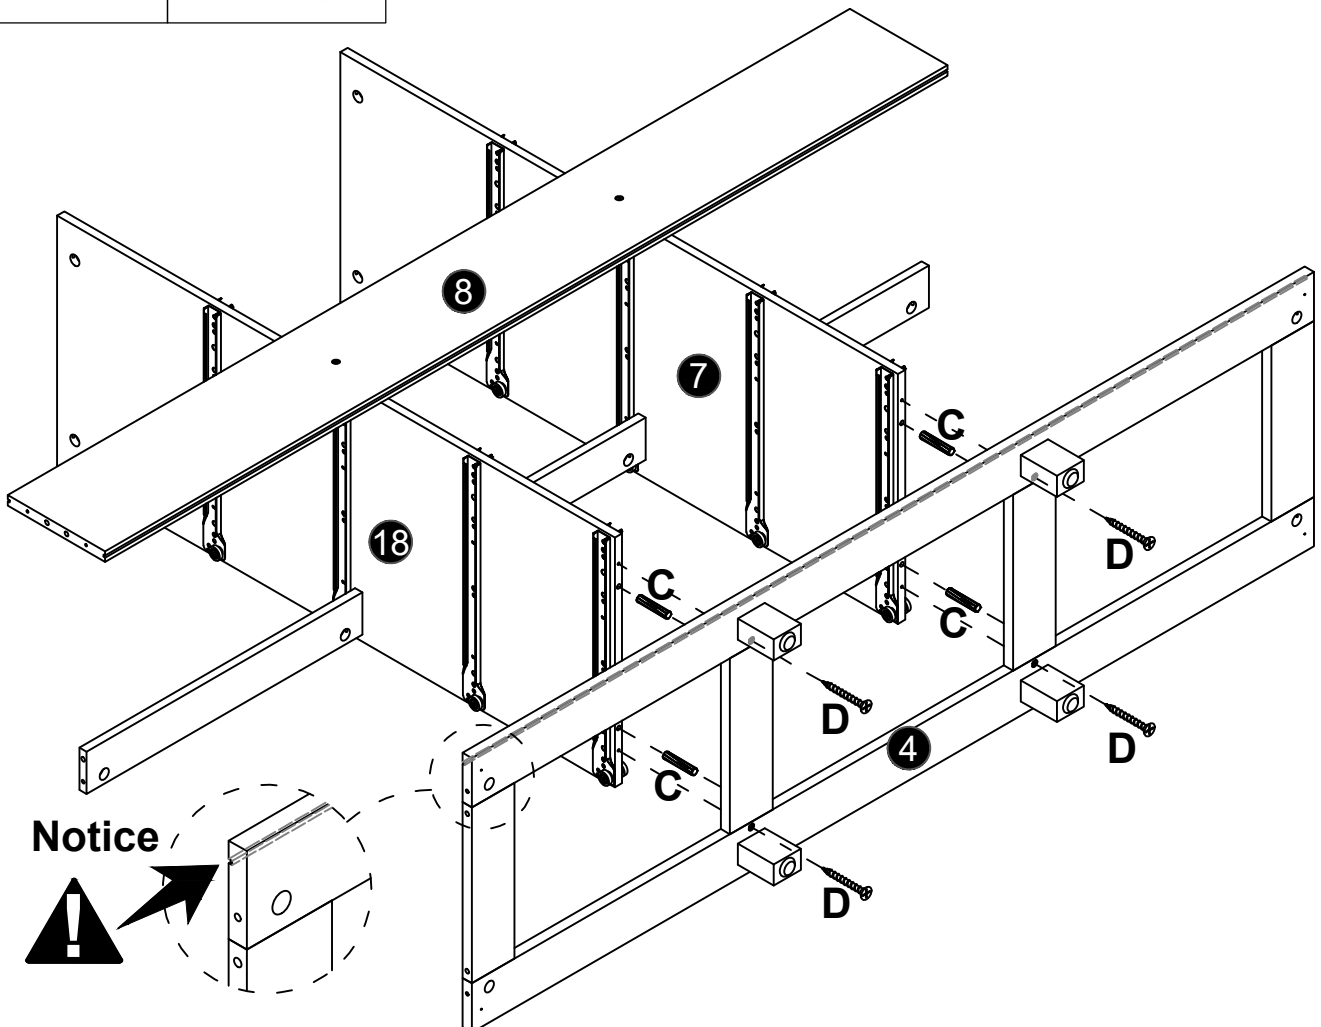


Notice

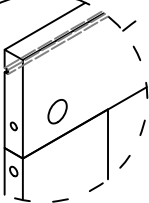


B x3




F x2




C x5

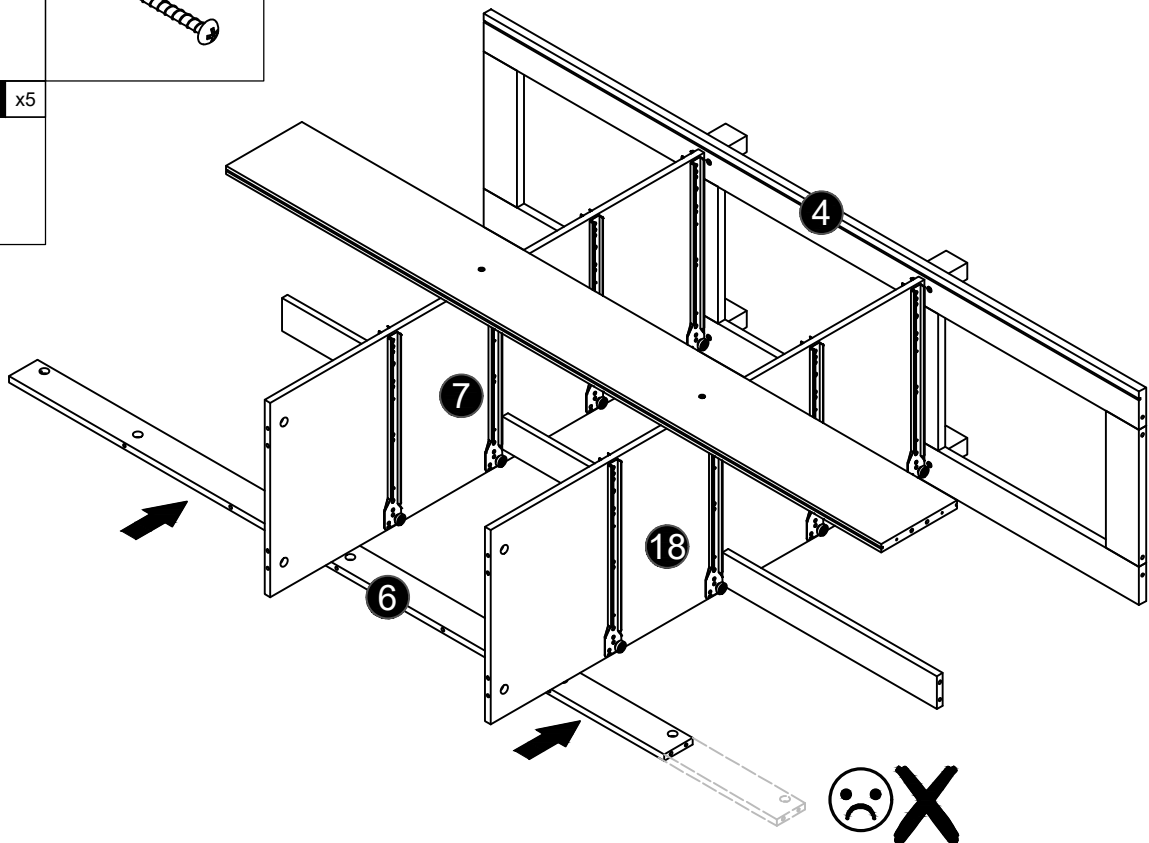

For easier installation later, it is recommended to place the No. 6 wooden board underneath, Do not come too close, as it may interfere with the installation.

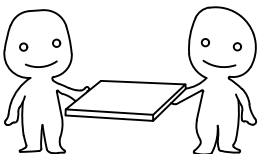

Need Two or More
People To Complete

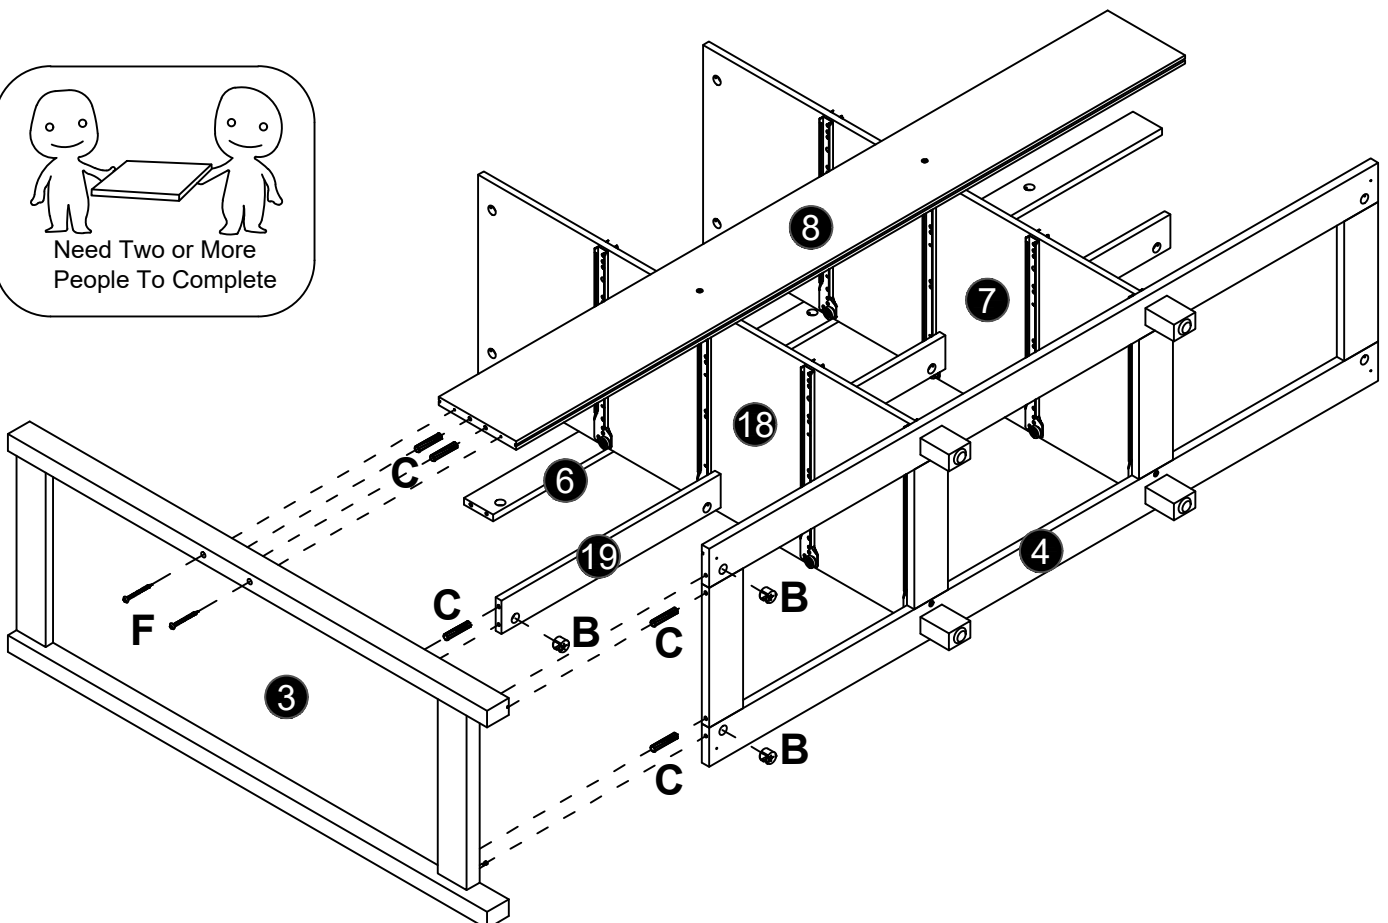


B x1



C x1



After installation, one person
needs to hold the No. 6
wooden board.

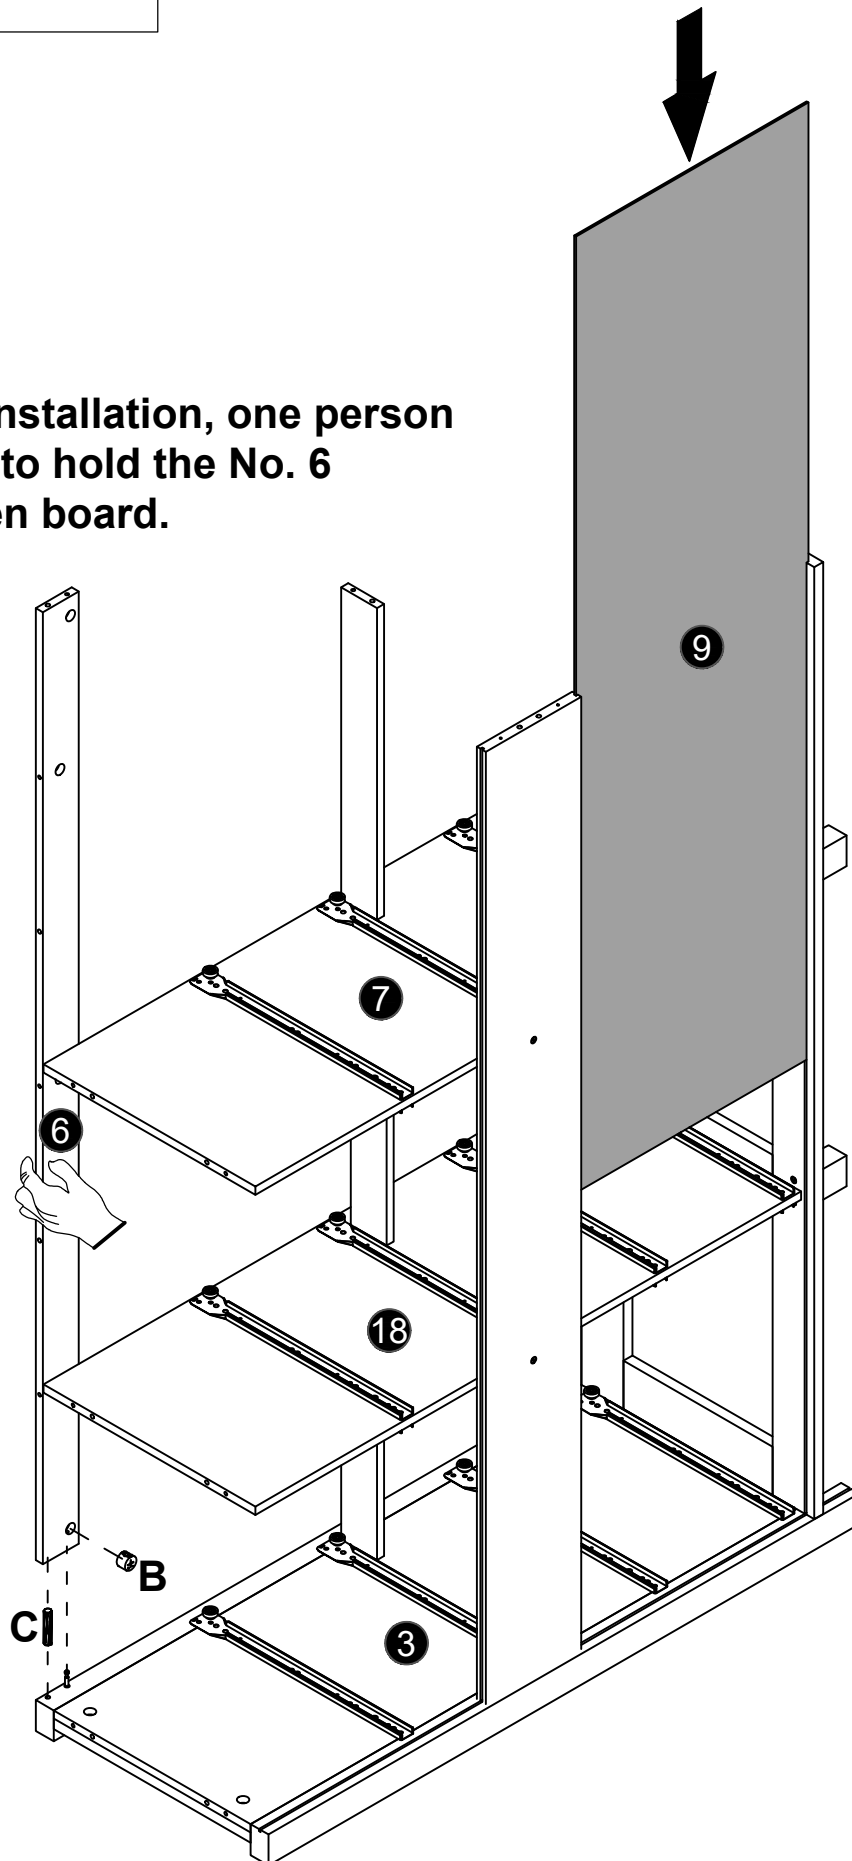




B x4






C x6





F x2

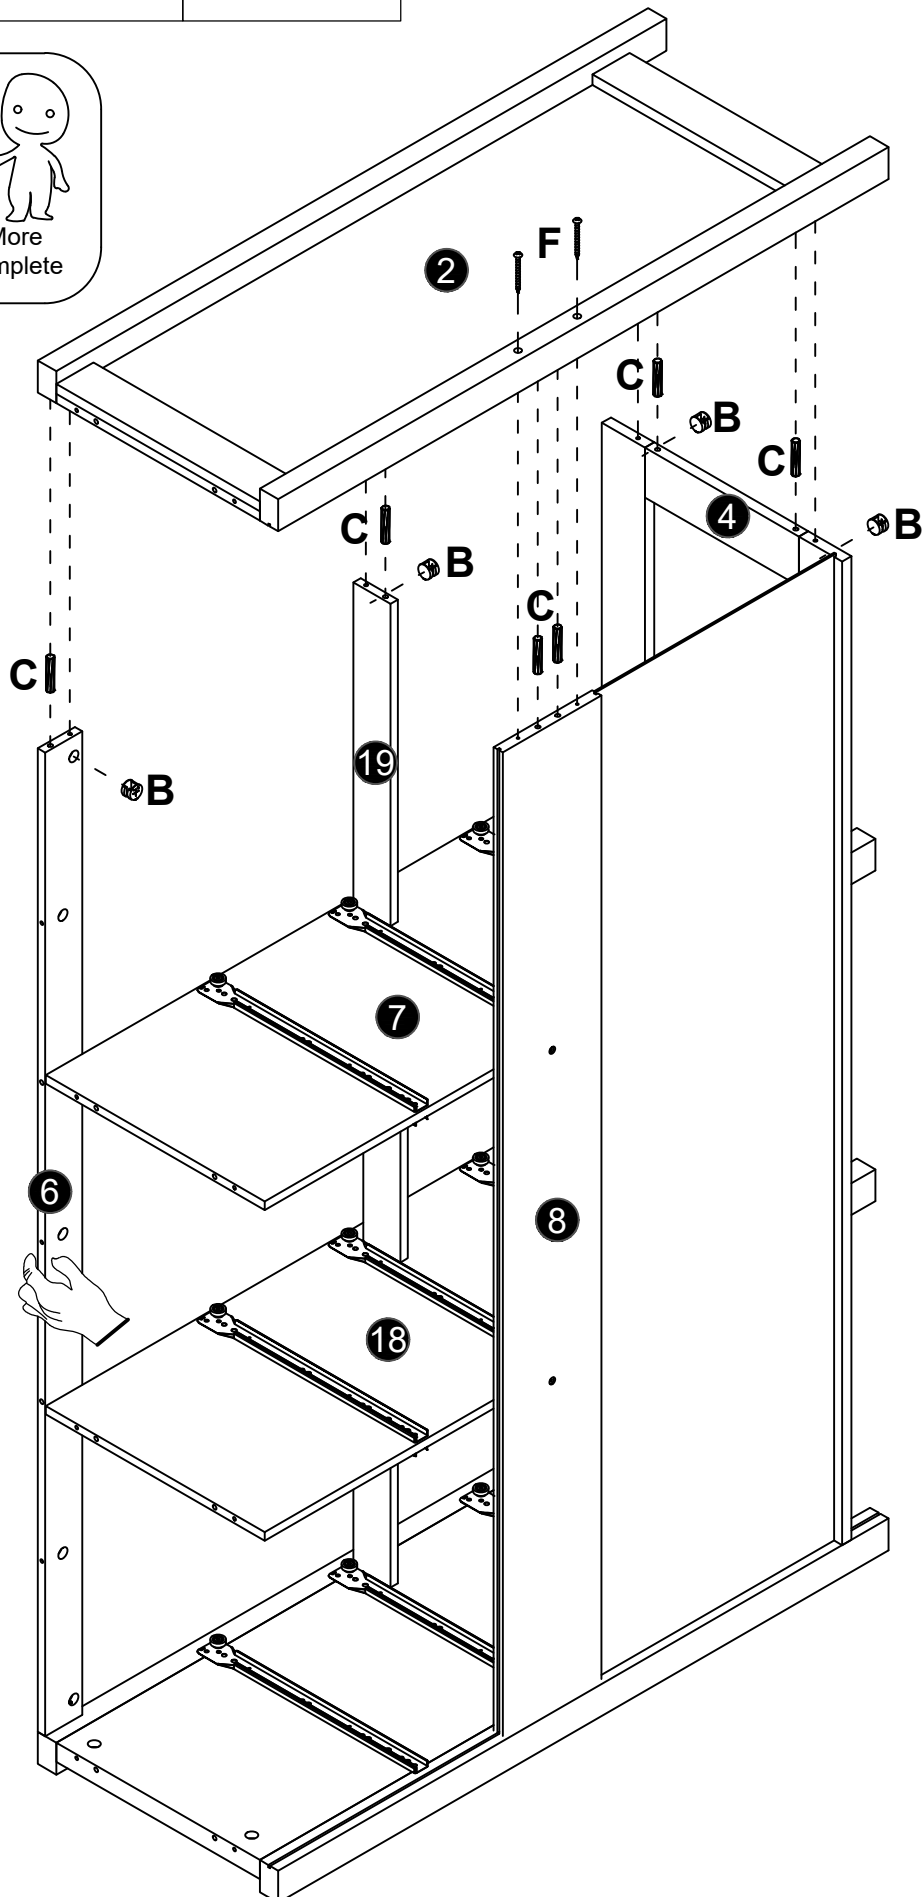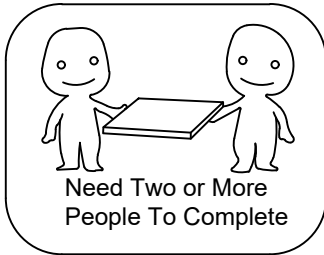

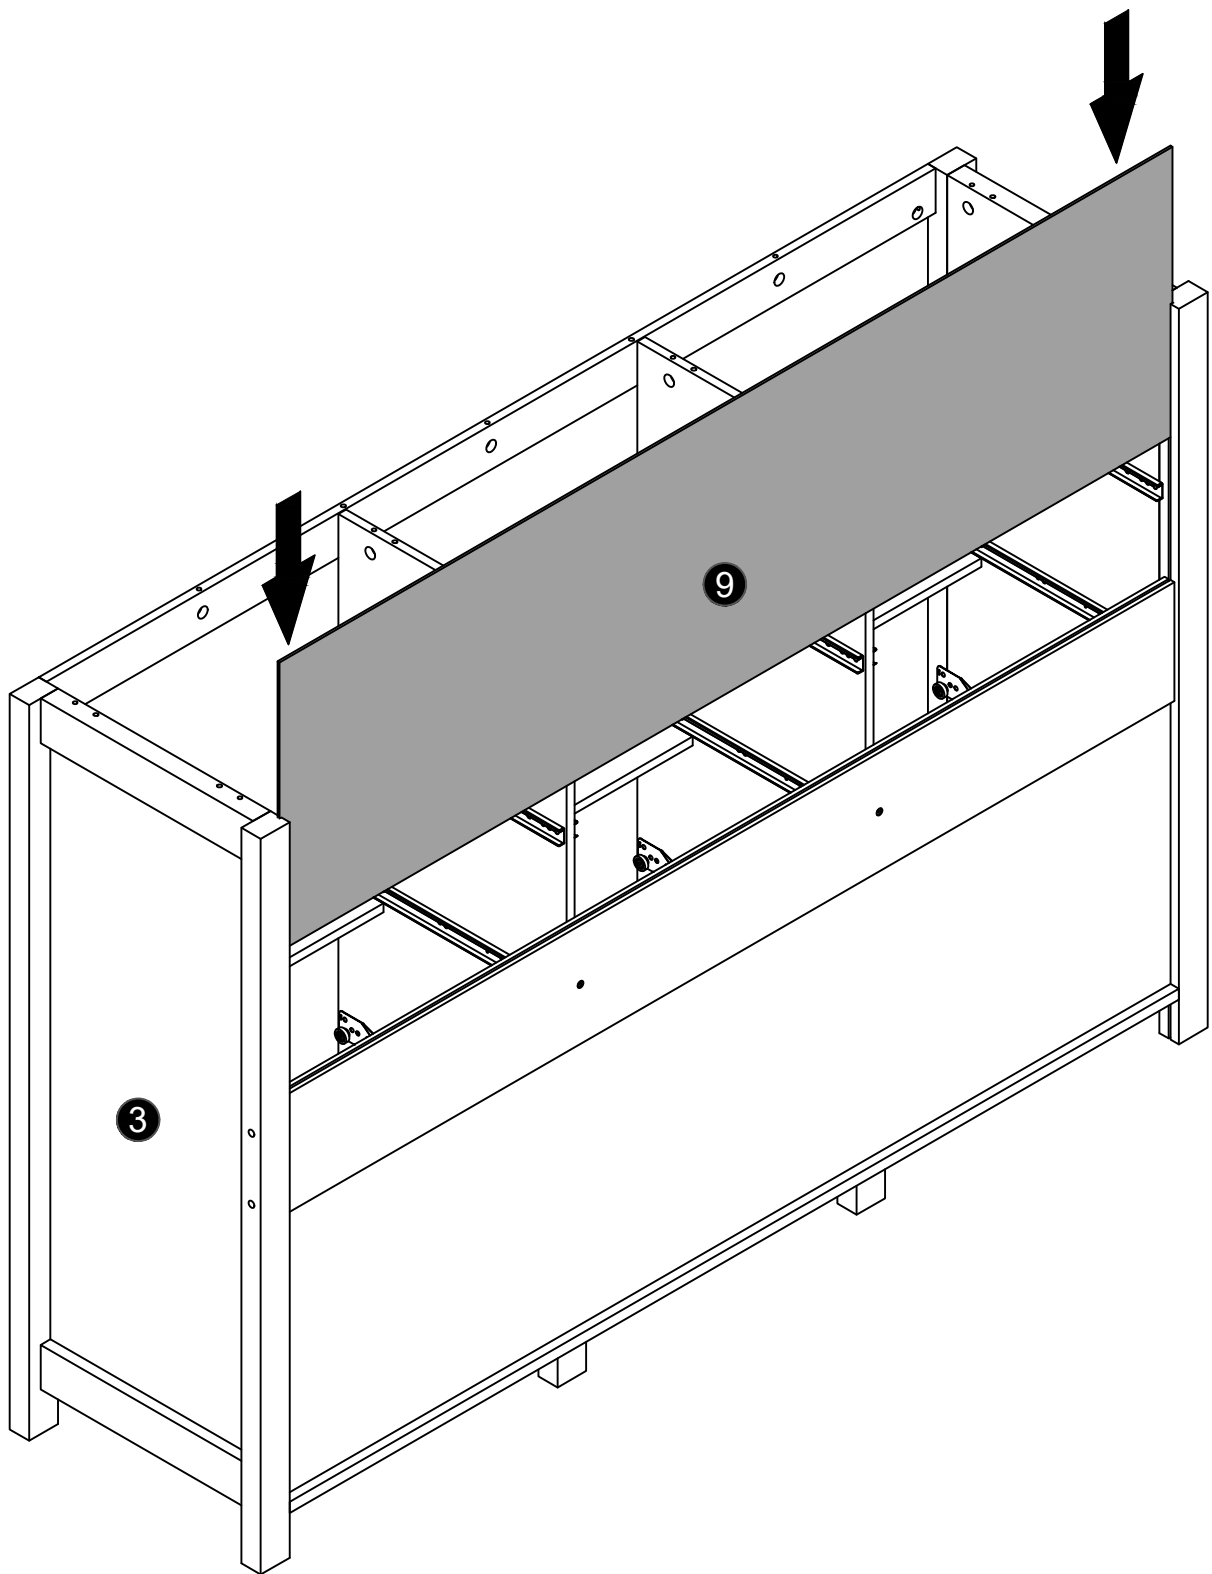

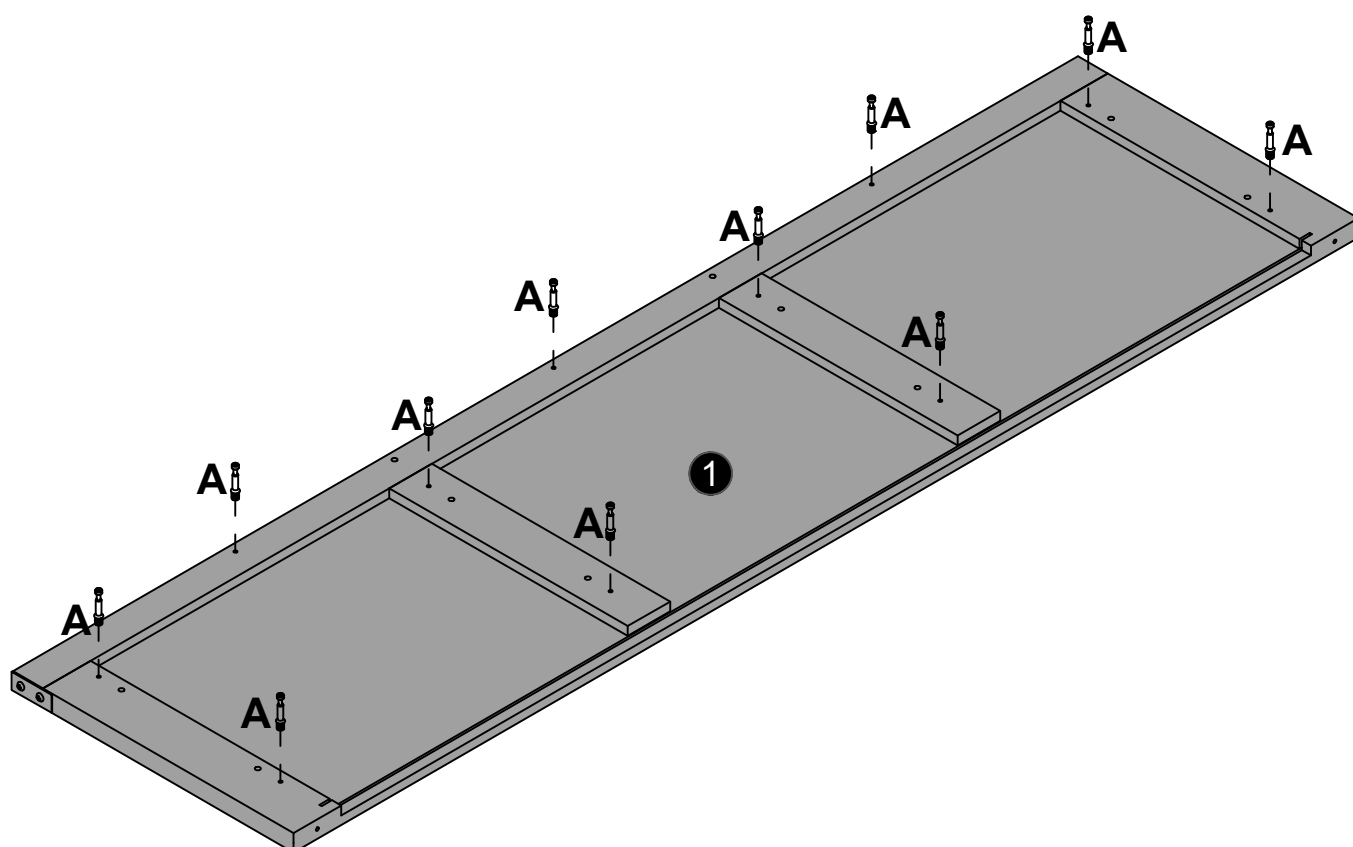

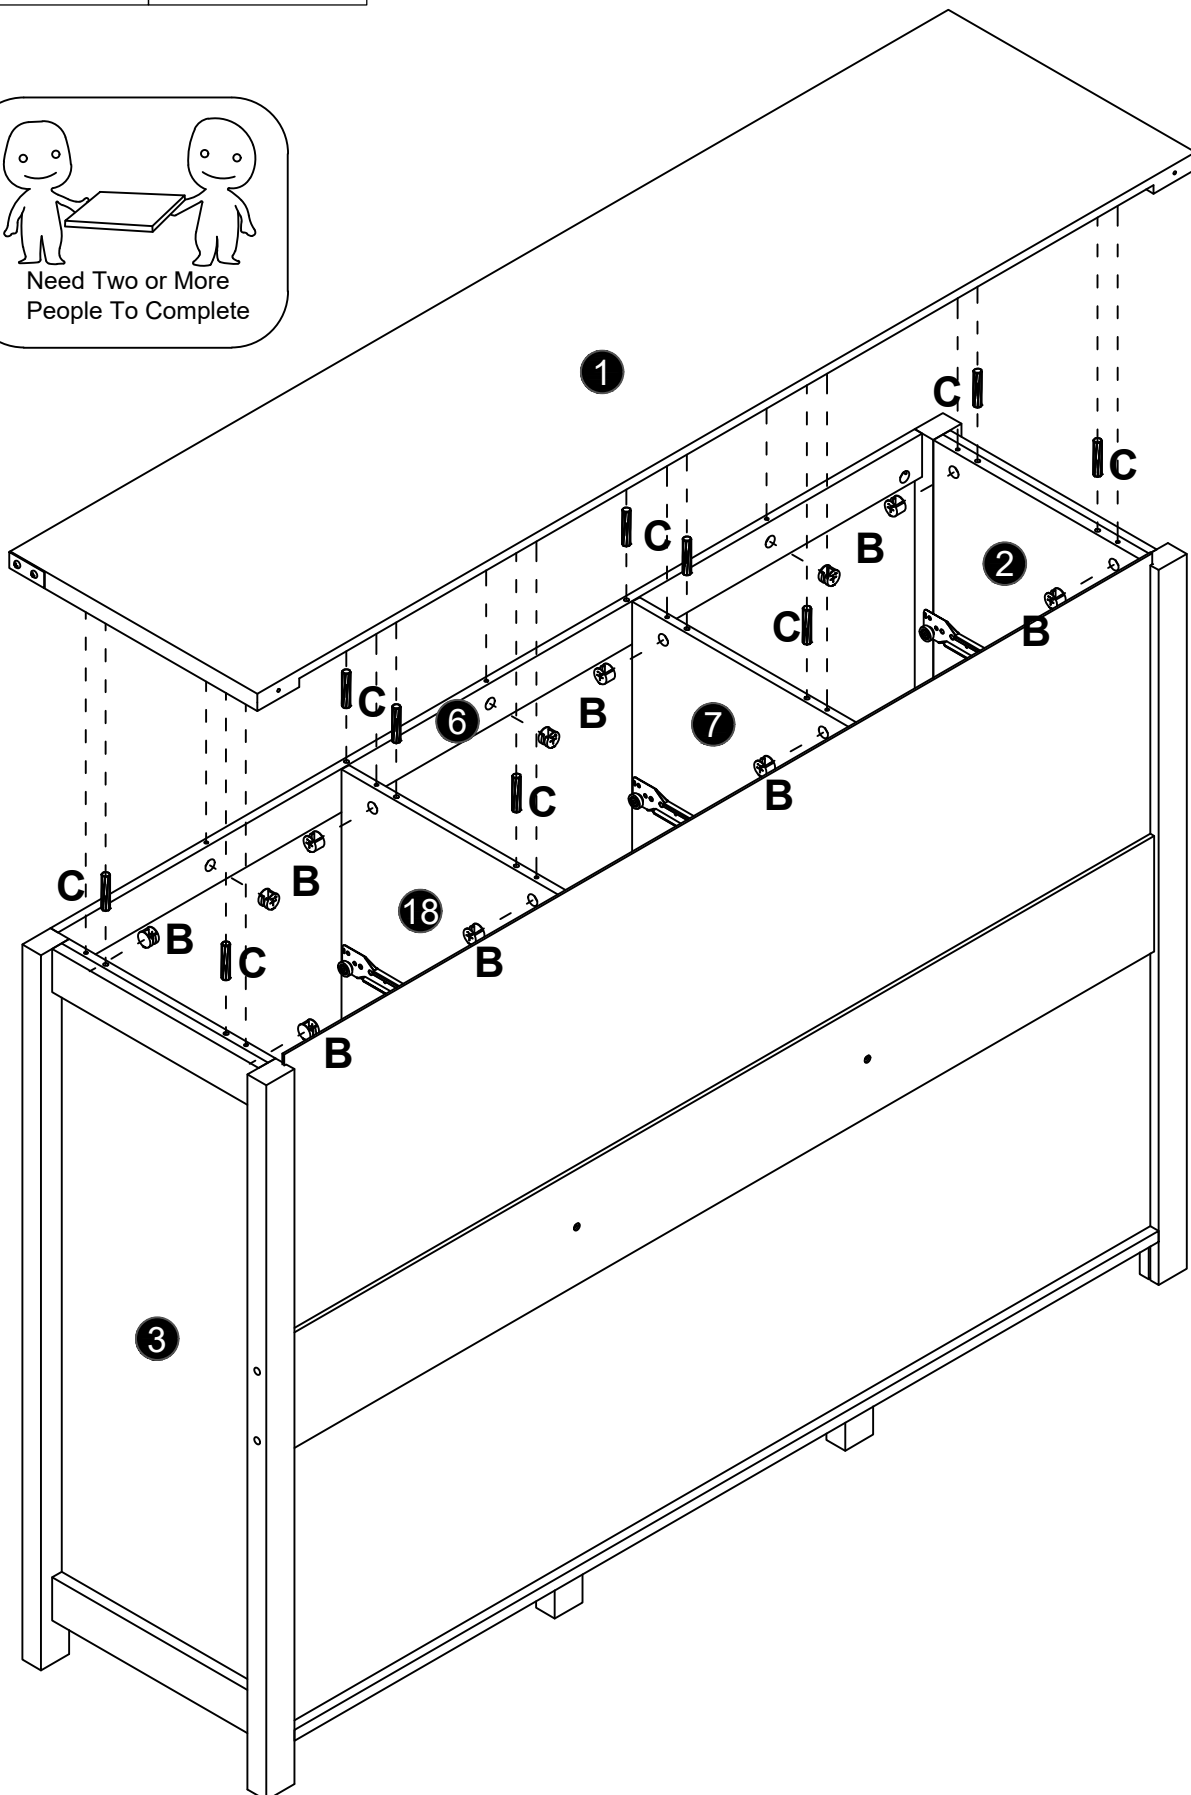

G x4



J x12



J-1






J-2

N x4






O x8

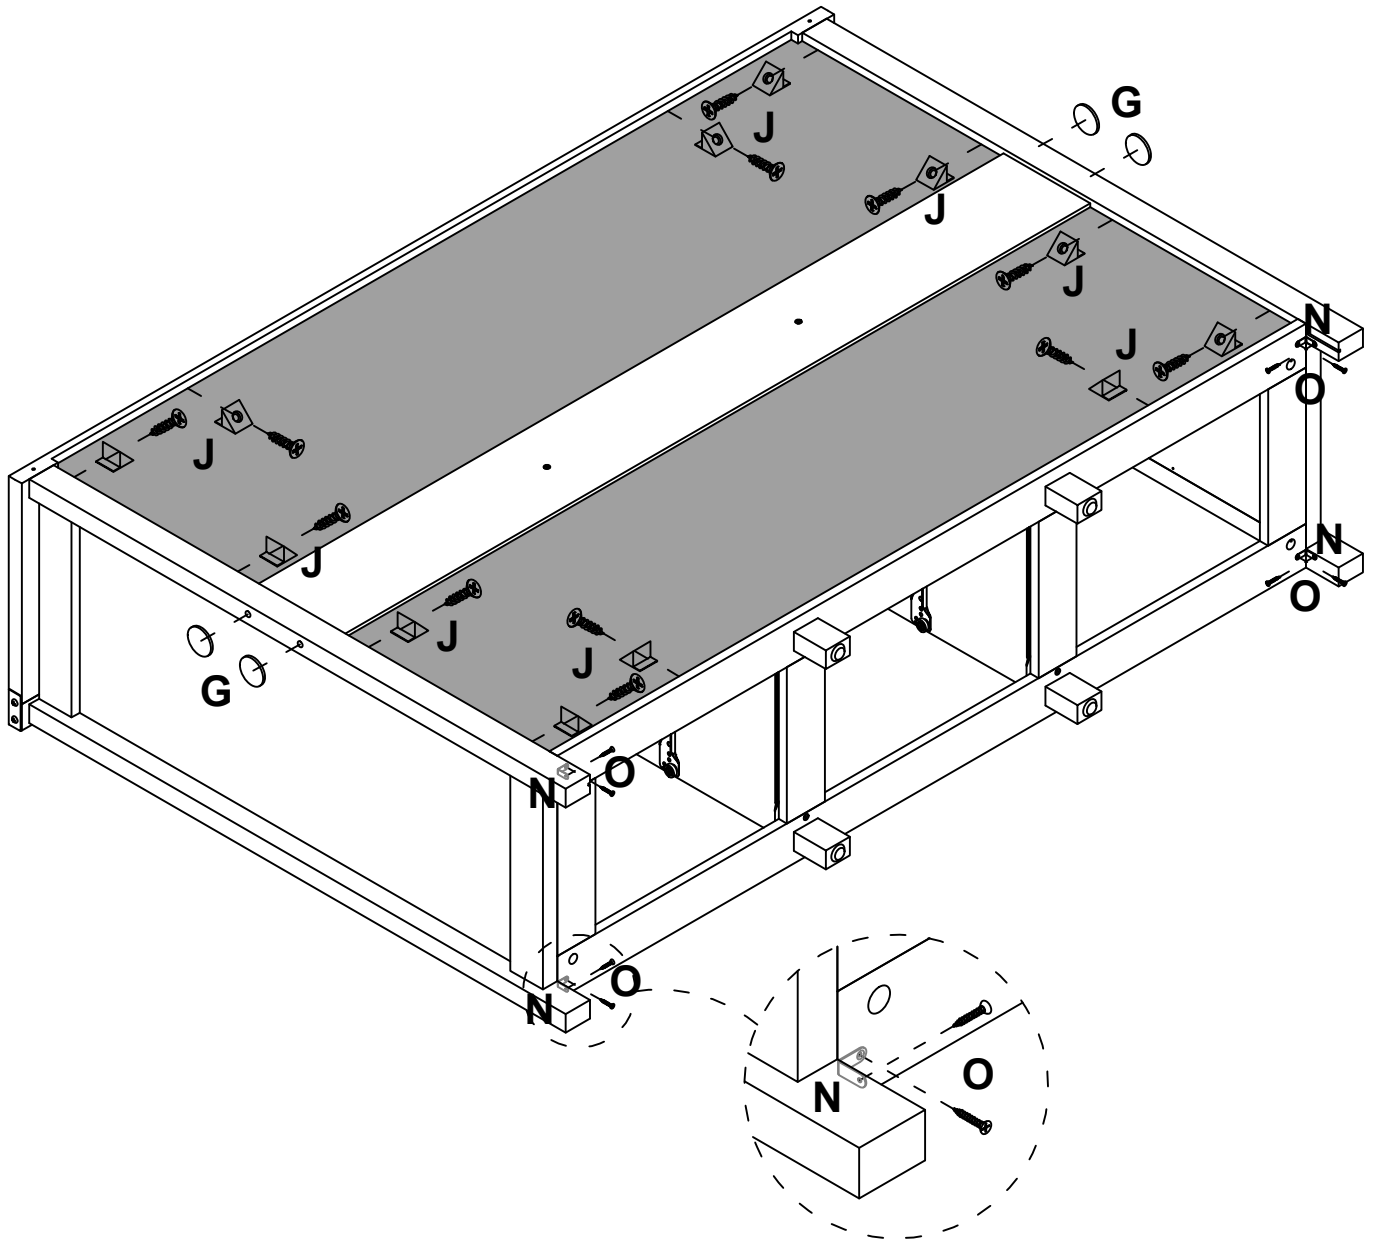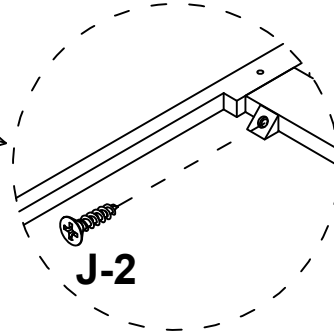
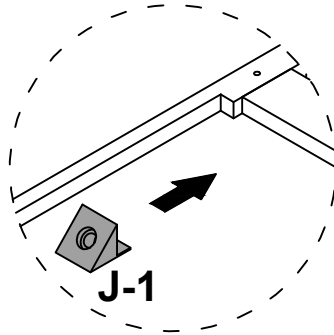





First, move the product to the desired location, paying attention to where you grip it during handling.

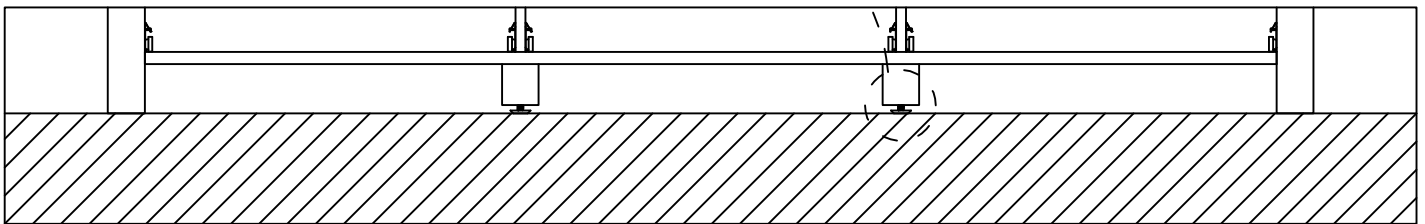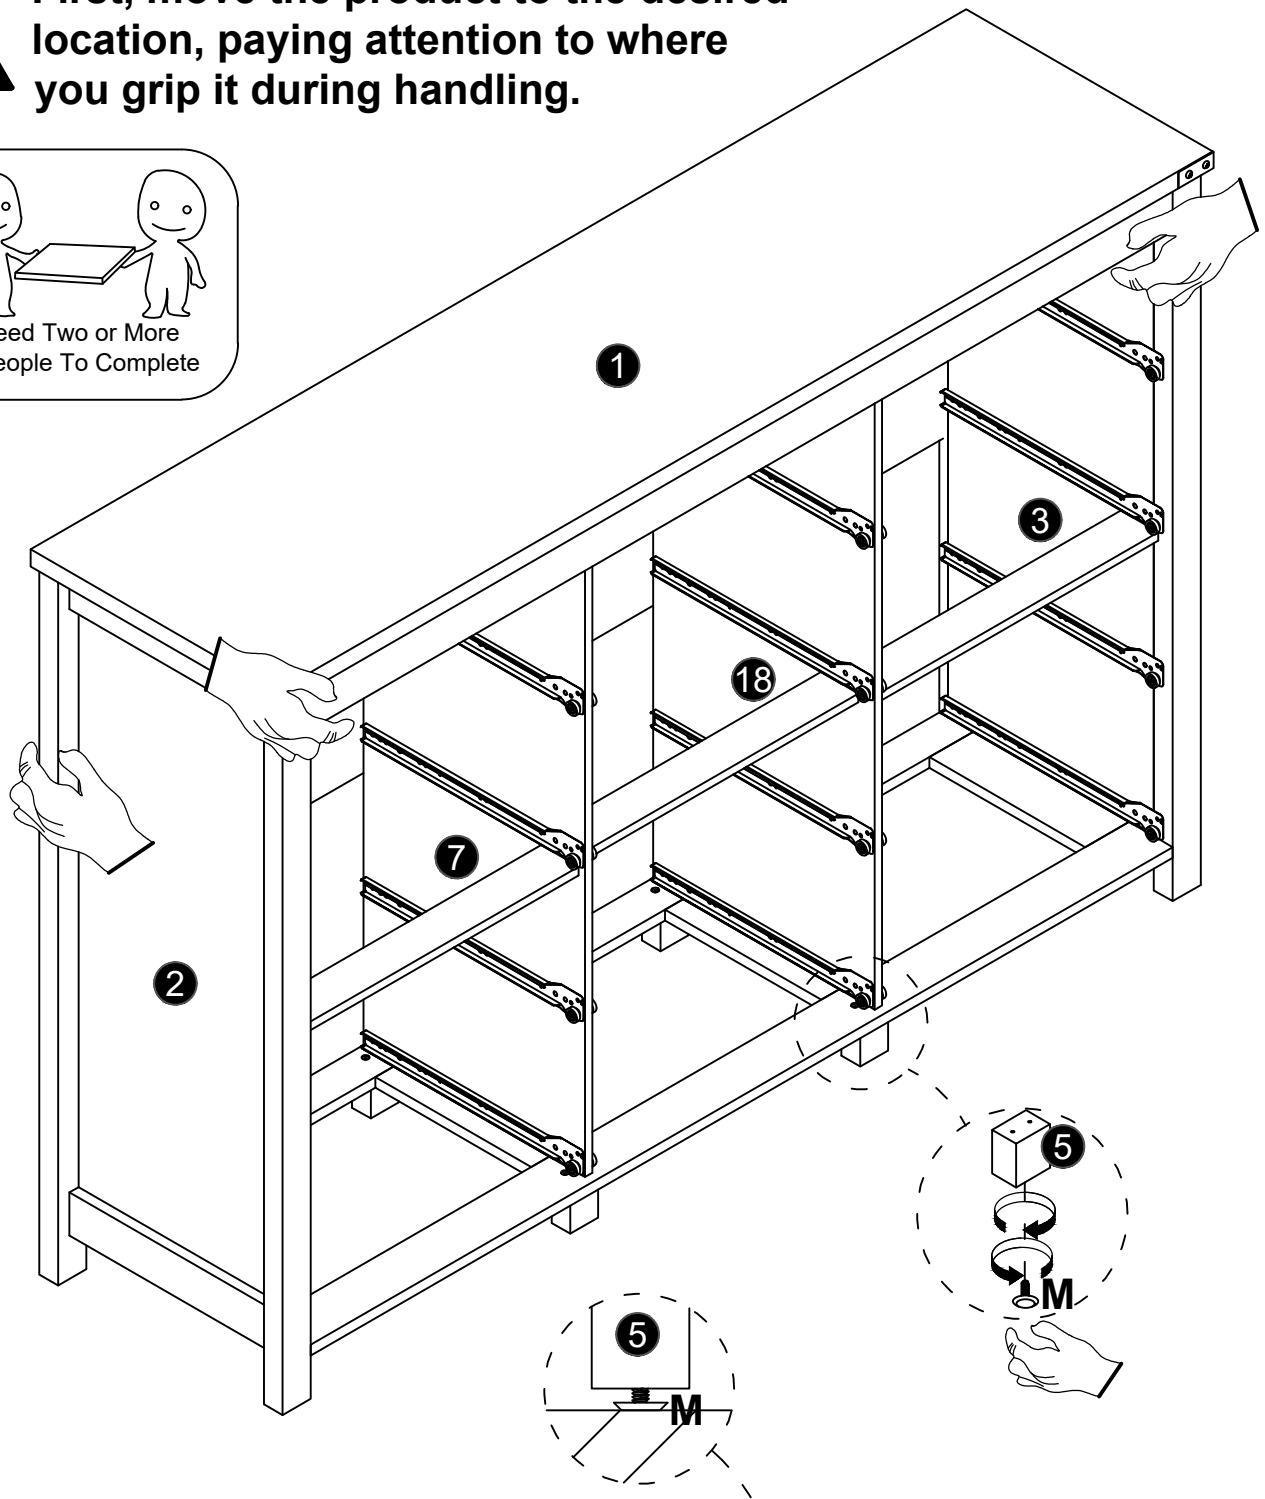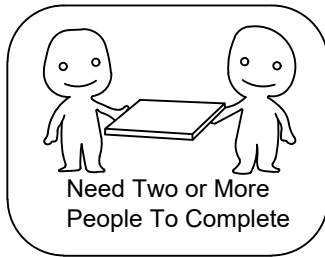


If the cabinet is unstable on the ground, please rotate the No. M adjustment foot pad on the No. 5 support leg.

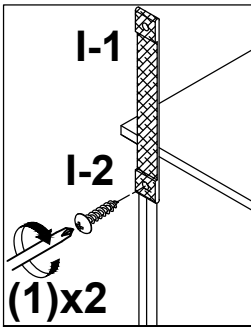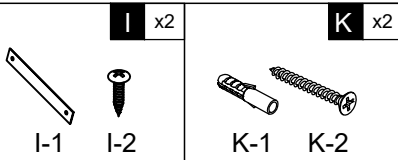


First fix the anti-rewind screw in the reserved hole of the product.

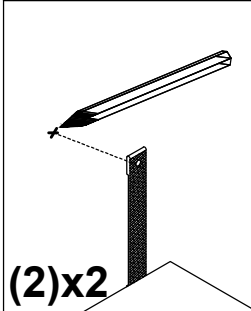


then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

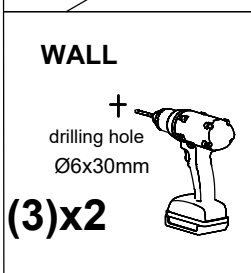


Then use a tape drill to make holes in the wall that are suitable for the product screws.

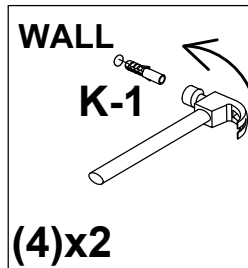

Then, put the expansion bolt into the hole



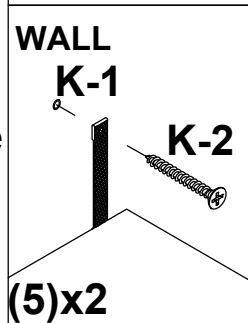


Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

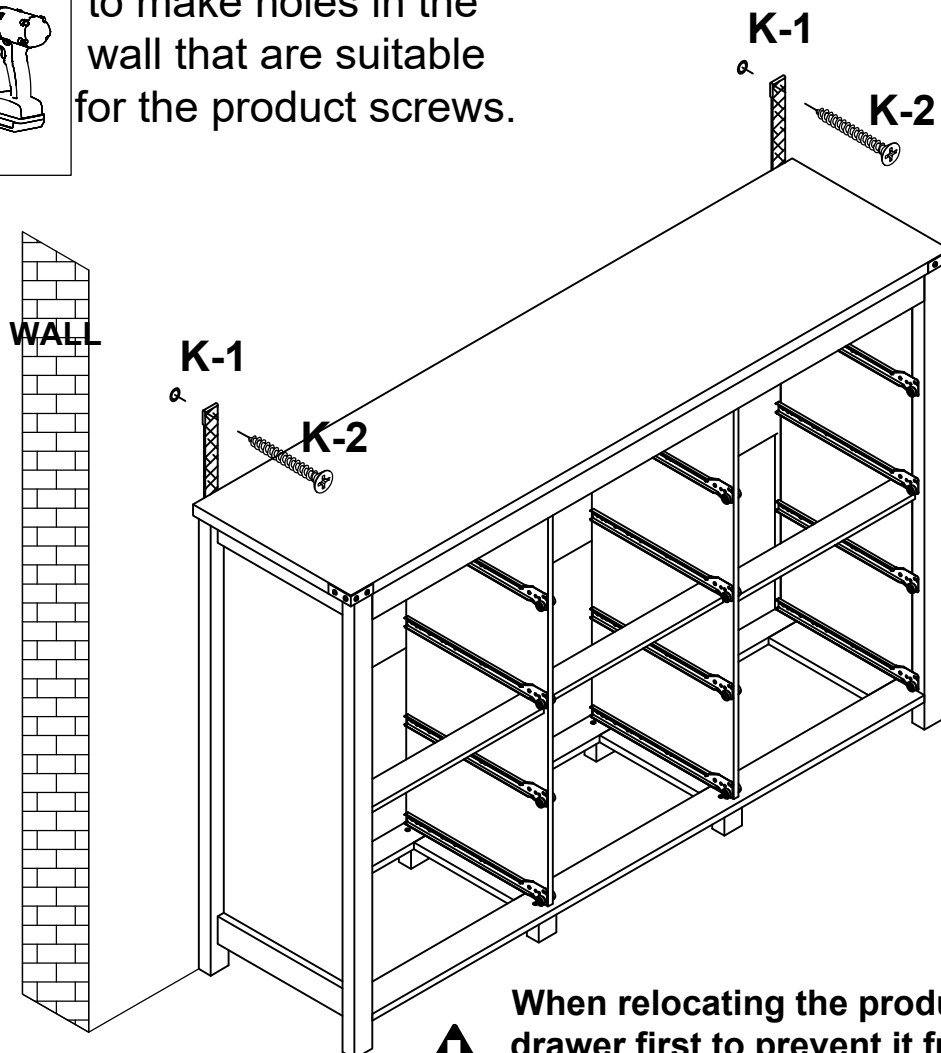


When relocating the product, remove the drawer first to prevent it from falling and causing injury. Removing the drawer also makes it easier to carry.


Attention: The drawers are divided into left drawer, middle drawer, and right drawer.
The picture shows the left drawer installed in the cabinet.

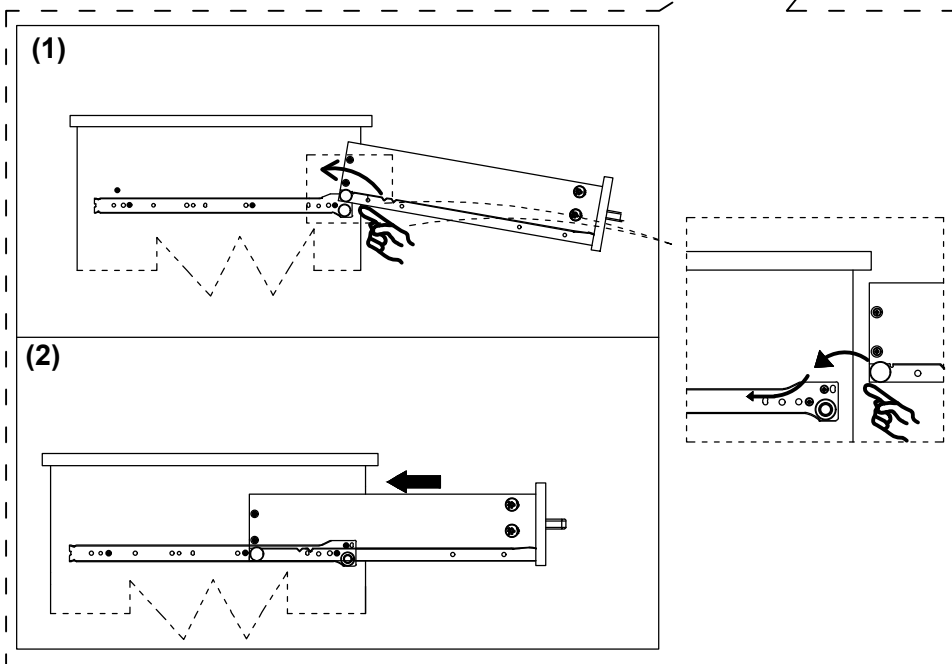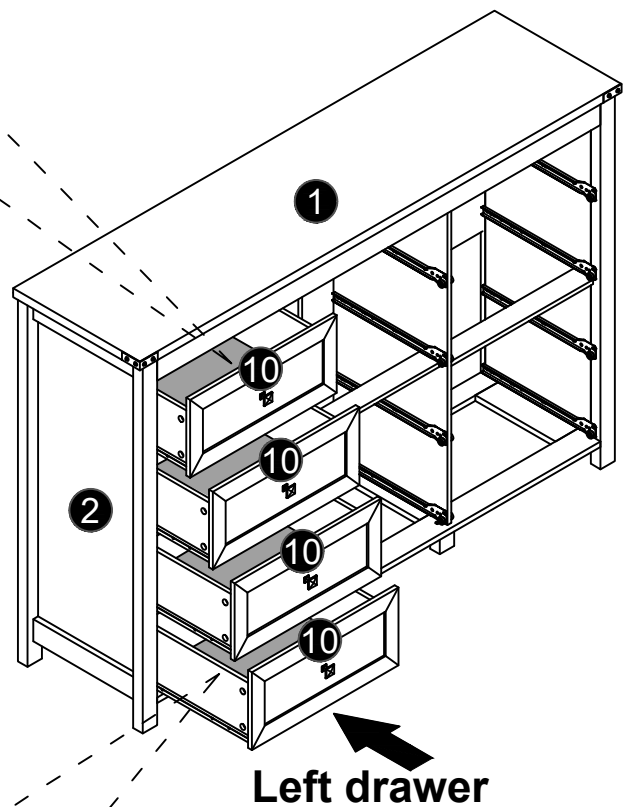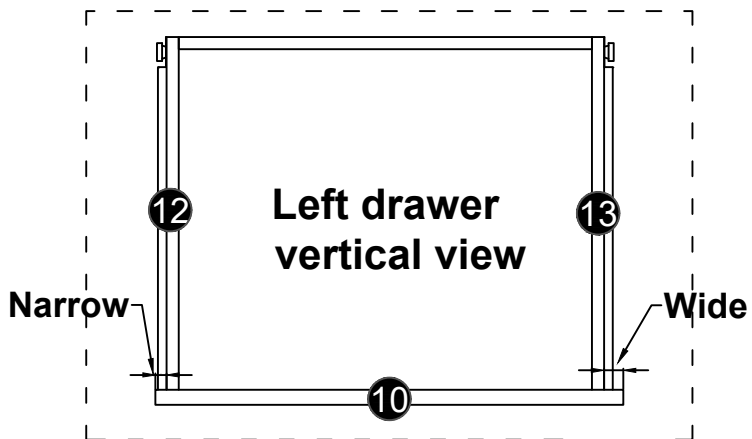


Attention: The drawers are divided into left drawer, middle drawer, and right drawer.
The picture shows the middle drawer installed in the cabinet.

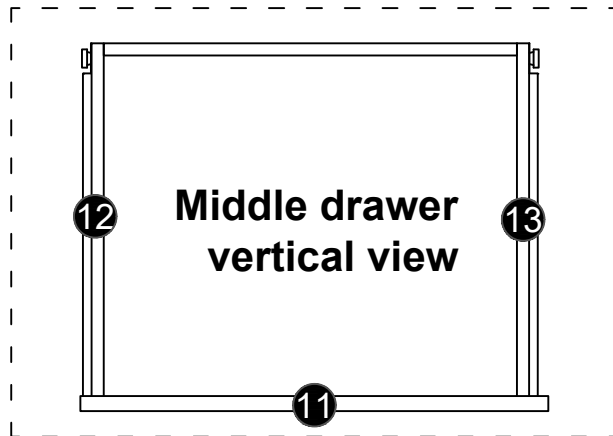

The distance between the left and right is the same.

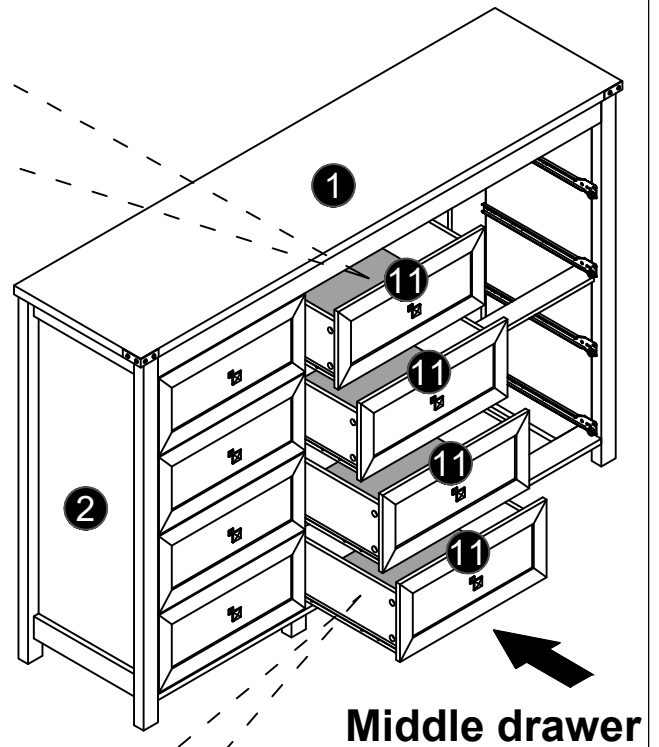

Middle drawer

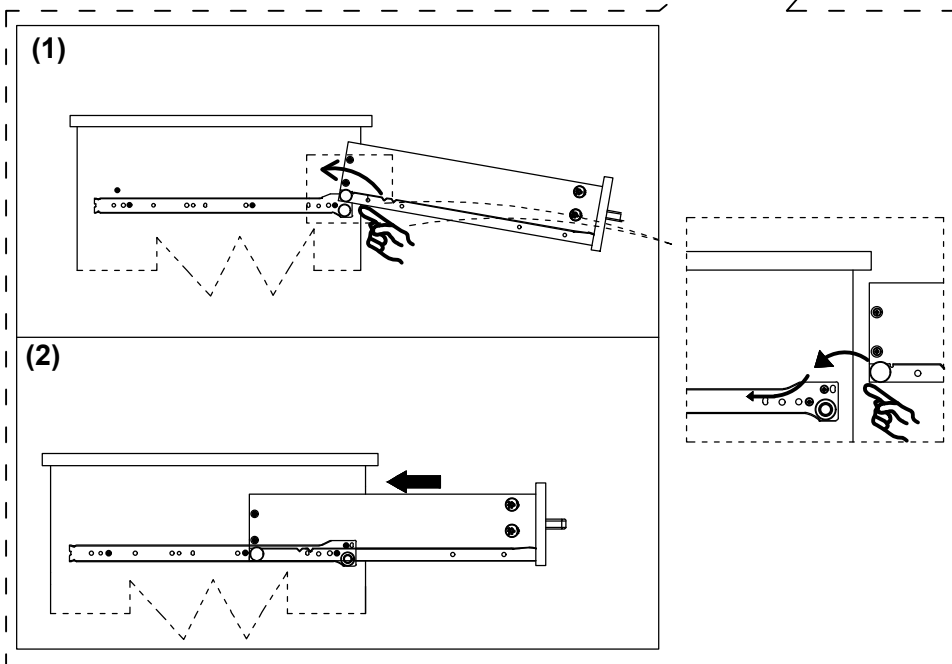

Attention: The drawers are divided into left drawer, middle drawer, and right drawer.
The picture shows the right drawer installed in the cabinet.

