



第一步:取4个F调节脚垫安装在2片D下支架底部,再取2根A管、2块B层片,用12颗E螺丝钉与D下支架锁住固定。  
 Step 1: Take 4 adjustable foot pad F and install them on the bottom frame D, then take 2 tube A and 2 shelf B, fix them with bottom frame D by 12 screw E.

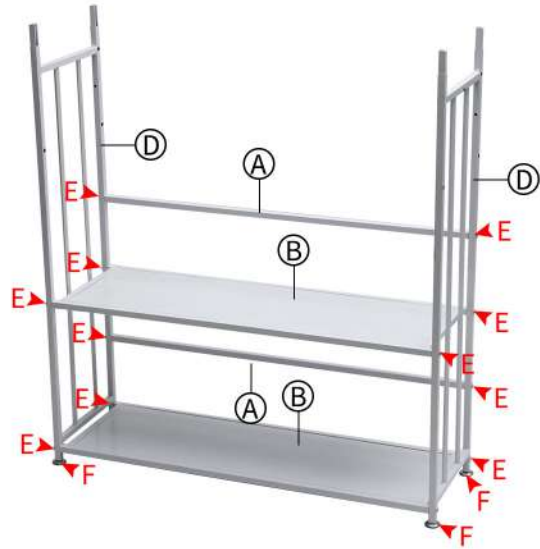


第二步:取1根A管、1块B层片,用6颗E螺丝钉与D下支架锁住固定,继续往上安装。  
 Step 2: Fix 1 tube A and 1 shelf B with bottom frame D by 6 screw E.

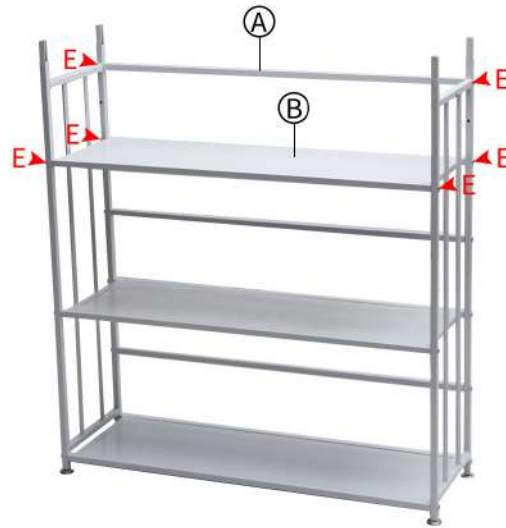


第三步:继续往上安装2片C上支架。  
 Step 3: Continue to install 2 upper frame C.



第四步:取1根A管、1块B层片,用6颗E螺丝钉与C上支架锁住固定,继续往上安装。  
 Step 4: Fix 1 tube A and 1 shelf B with upper frame C by 6 screw E.

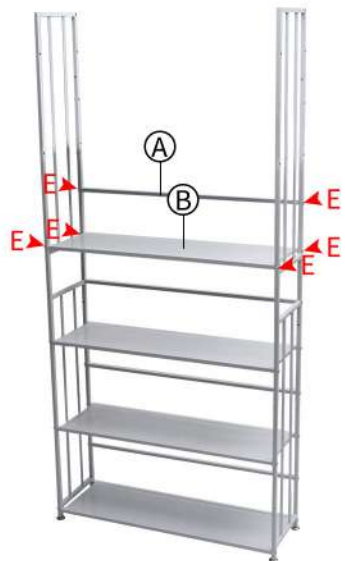

第五步:取1根A管、1块B层片,用6颗E螺丝钉与C上支架锁住固定,继续往上安装。  
 Step 5: Repeat the step 4 to further installation.

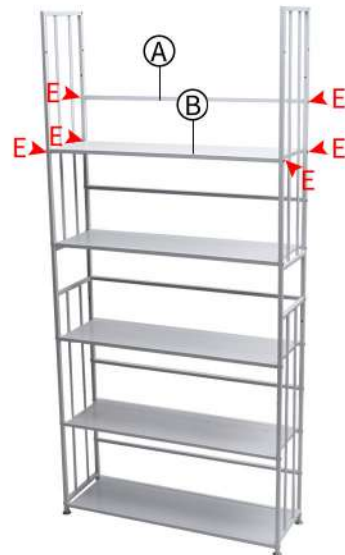

第六步:取1根A管、1块B层片,用6颗E螺丝钉与C上支架锁住固定,安装完成。  
 Step 6: Fix 1 tube A and 1 shelf B with upper frame C by 6 screw E. Then the installation is finished.

注意: 图中标注的圆圈孔位可使用4个G无痕贴与墙面固定。

Step 6: Fix 1 tube A and 1 shelf B with upper frame C by 6 screw E. Then the installation is finished.

Notice: The circle hole marking in the picture can be fixed to the wall with traceless paste.



无痕贴安装方法  
 The fixing way with  
 Traceless paste (G).