
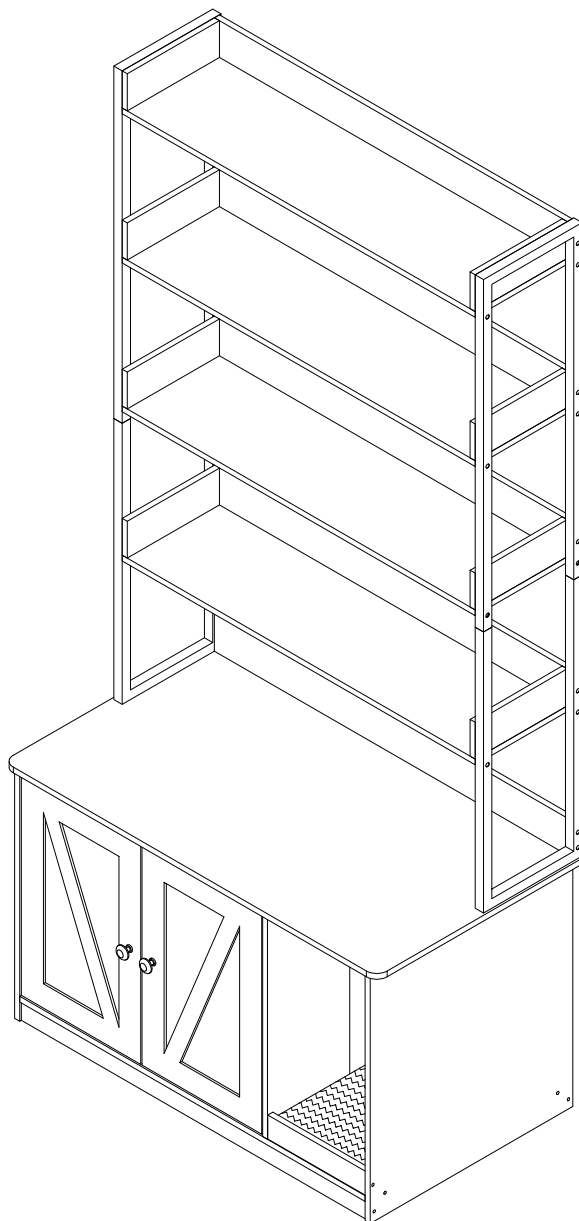
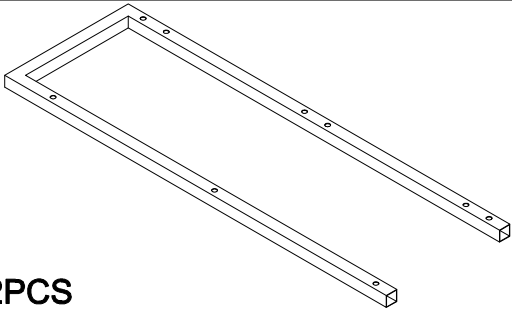
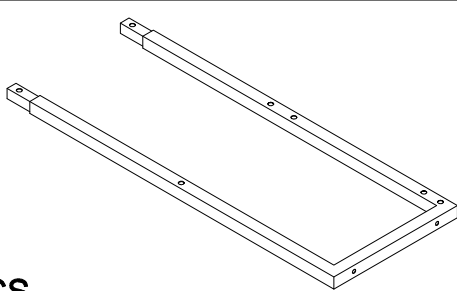
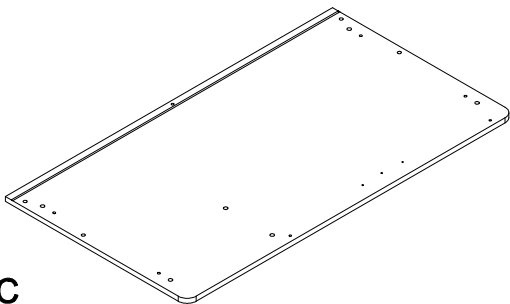
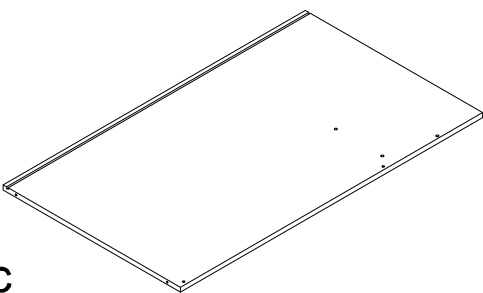
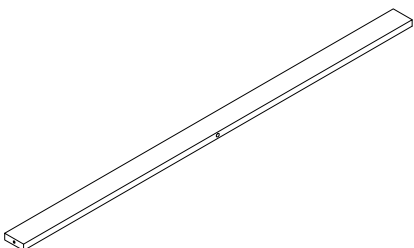
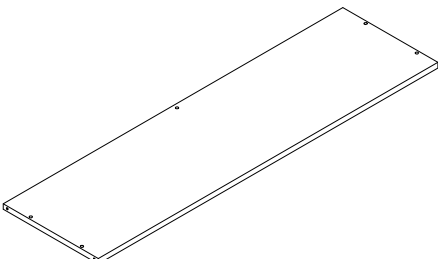
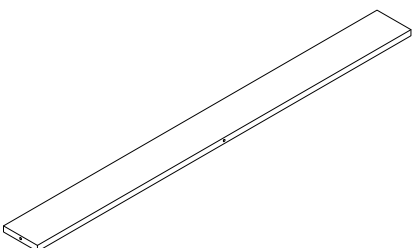
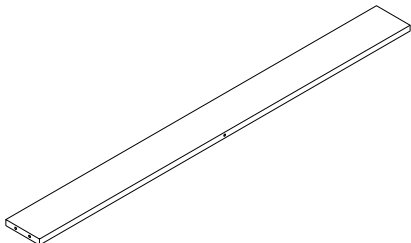
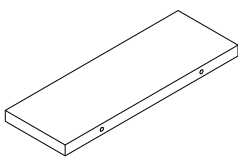
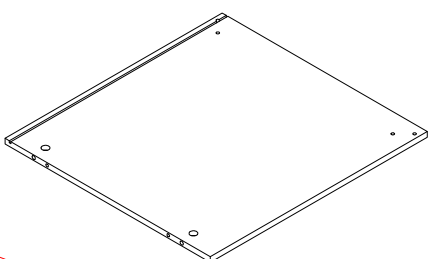
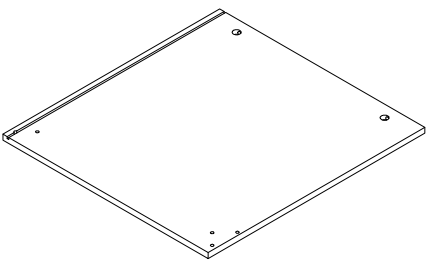
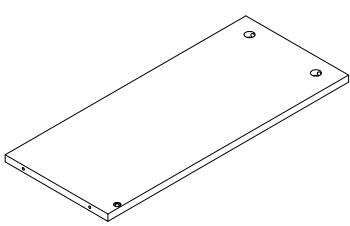
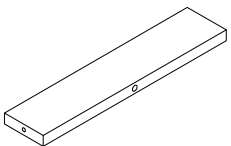
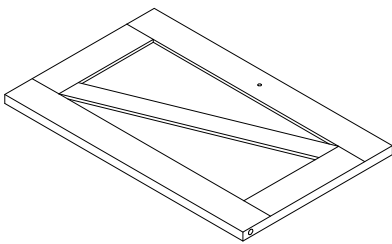
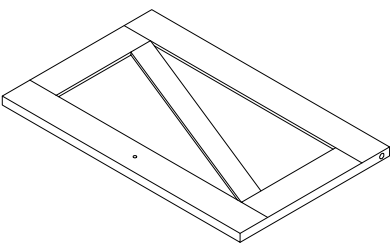



Installation Instruction

Please don't tighten the screws completely and go back later for a final tightening of all the screws after pieces are aligned with each other.

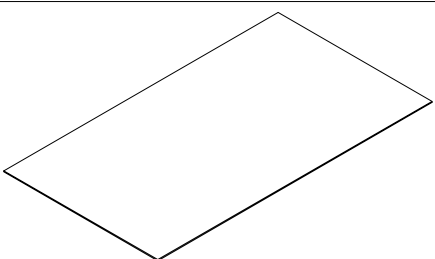


HARDWARE LIST


 ① ×2PCS	 ② ×2PCS	
 ③ ×1PC	 ④ ×1PC	
 ⑤ ×2PCS	 ⑥ ×4PCS	 ⑦ ×4PCS
 ⑧ ×1PC	 ⑨ ×8PCS	 ⑩ ×1PC
 ⑪ ×1PC	 ⑫ ×1PC	 ⑬ ×1PC
 ⑭ ×1PC	 ⑮ ×1PC	 ⑯ ×1PC

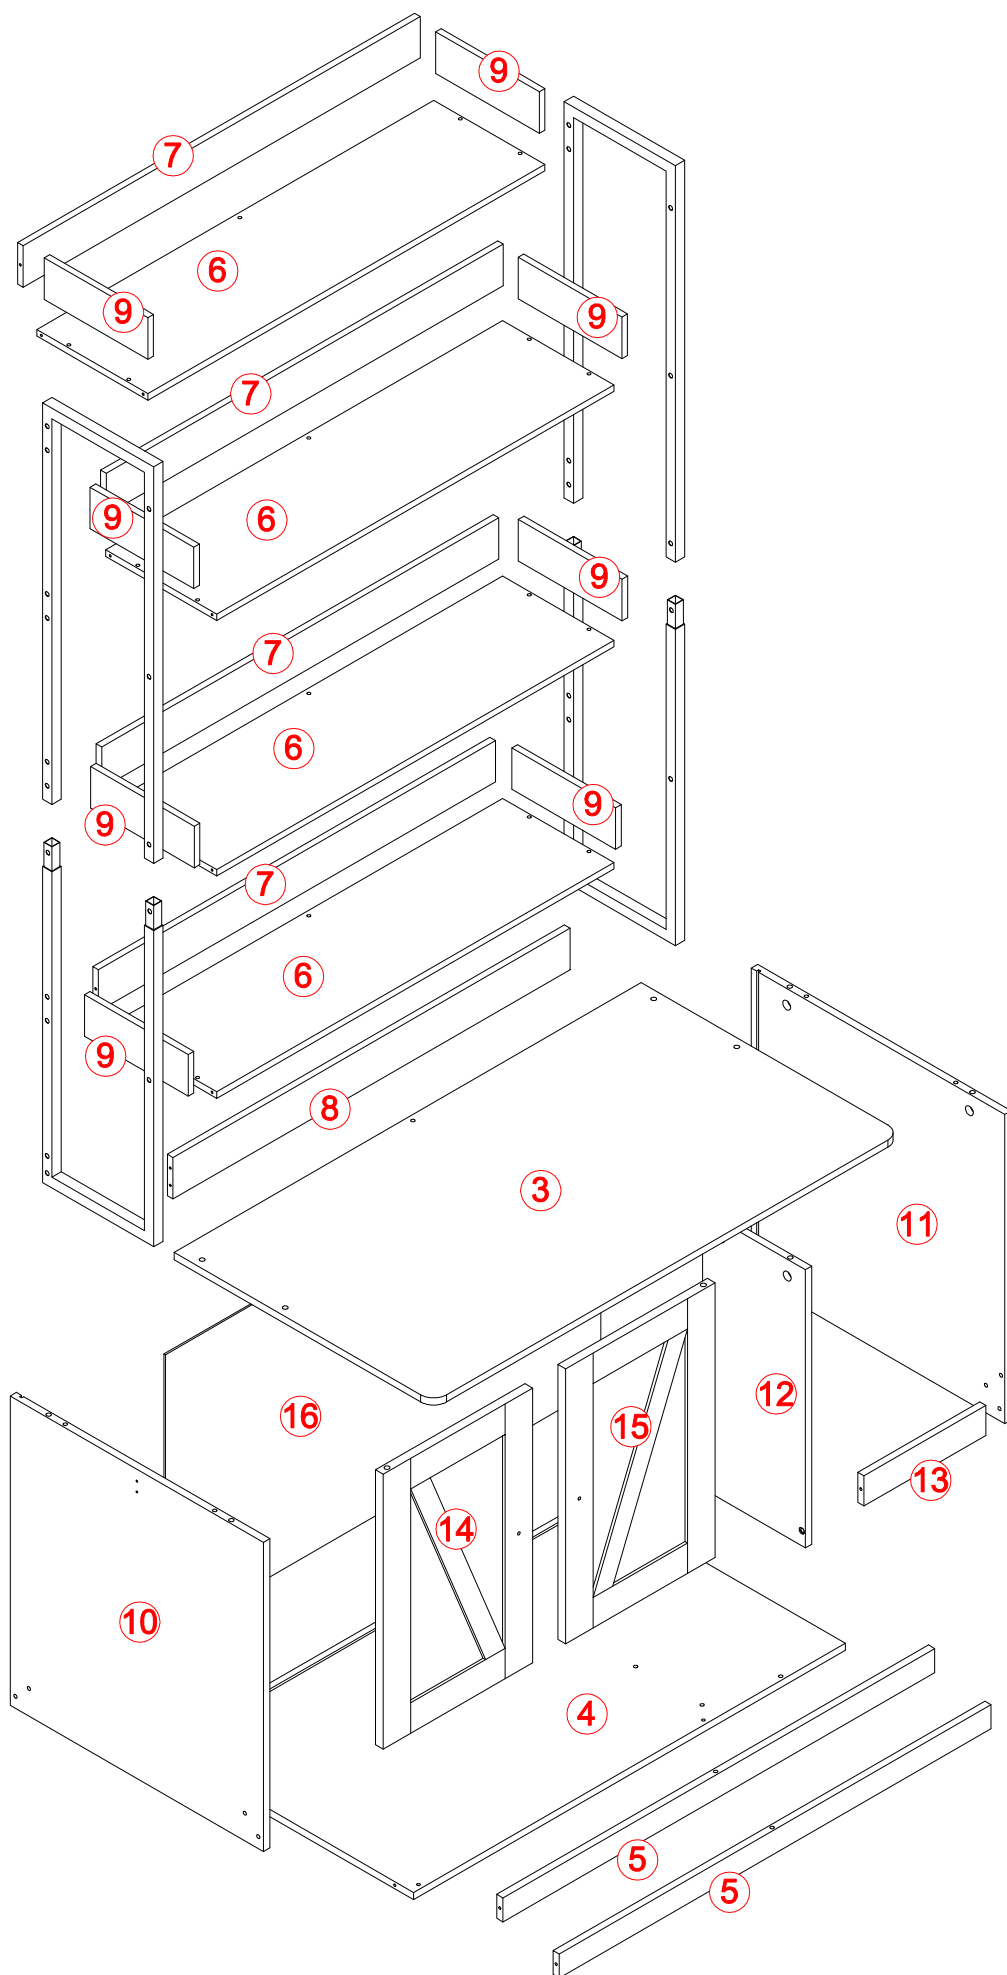

PARTA LIST




M4
A×1PCS




M5X45mm
B×61PCS




Ø6*30mm
C×7PCS

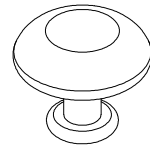

Ø29*25mm
D1×2PCS




M4*22mm
D2×2PCS

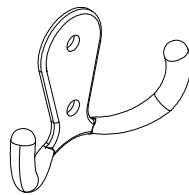

53*40*17mm
E×1PC




Ø6.5x36mm
F1×6PCS




Ø15x9.8mm
F2×6PCS



Ø7*M3.5*12mm
G×7PCS



Ø8xM6x20mm
H×4PCS




120*19mm
I1×1PC




54*12mm
I2×2PCS




Ø6*M3*16mm
J×7PCS




Ø12*25mm
K×4PCS




14*14*11mm
L×4PCS

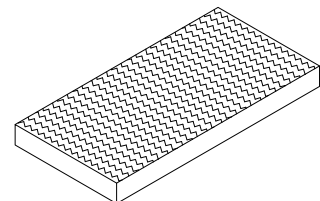


460*230*40mm
M×1PC

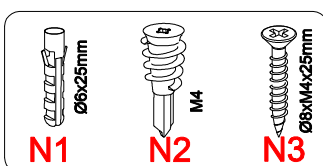

N×1PC

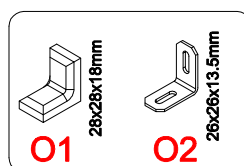


O×1PC

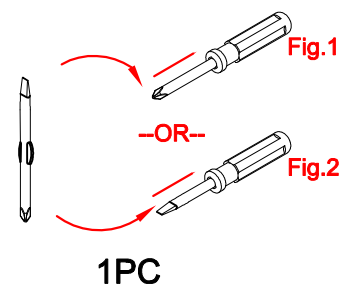


1PC

1

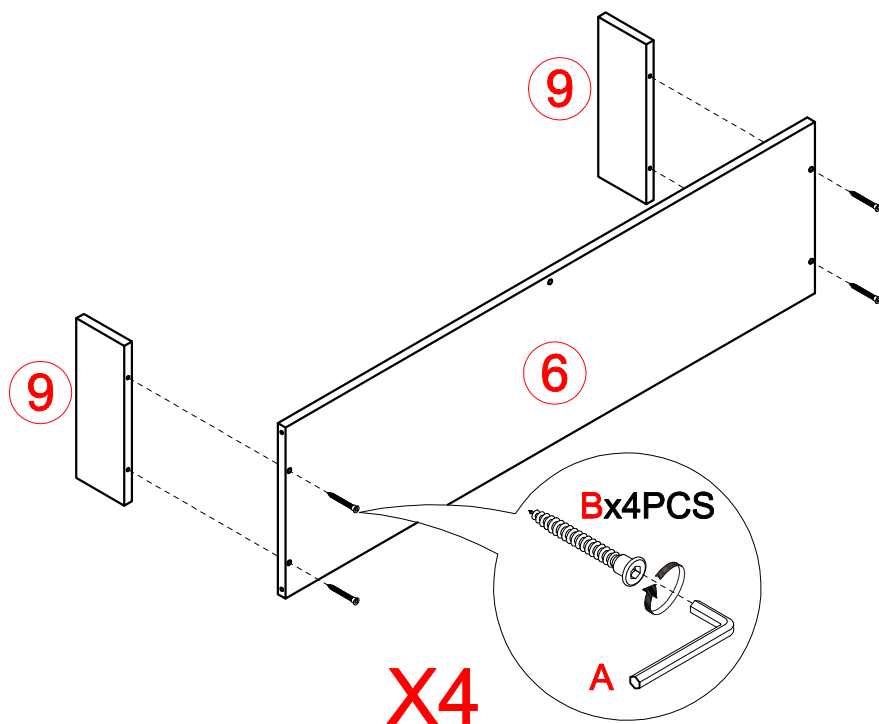


Bx16PCS
6x4PCS
9x8PCS

2

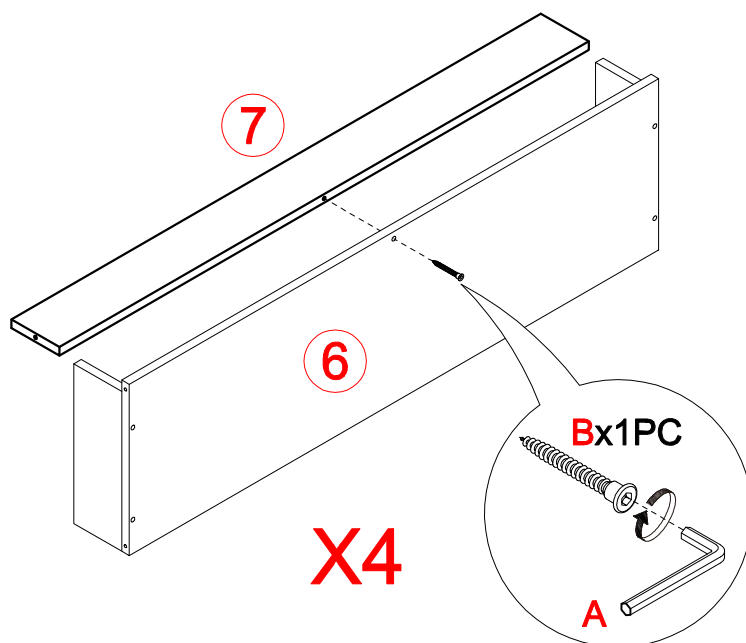


Bx4PCS
7x4PCS

3

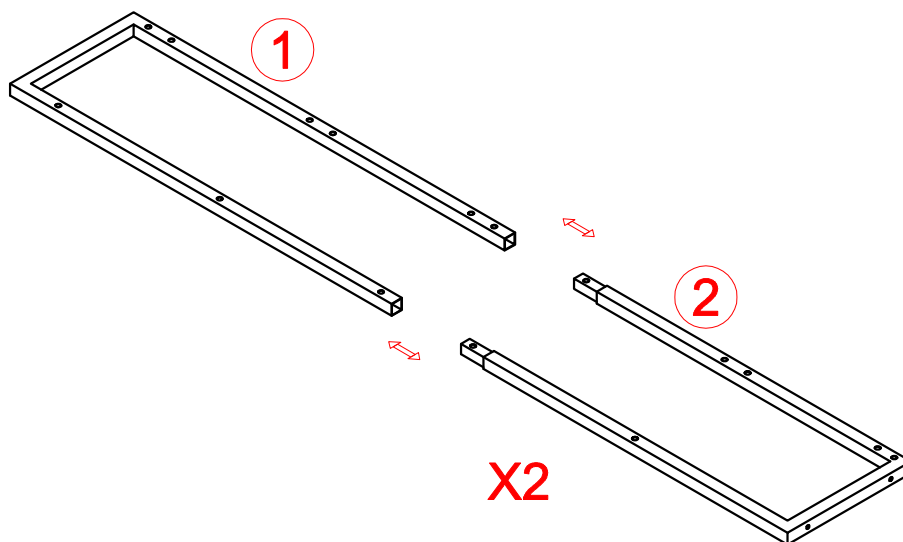


1x2PCS
2x2PCS


4

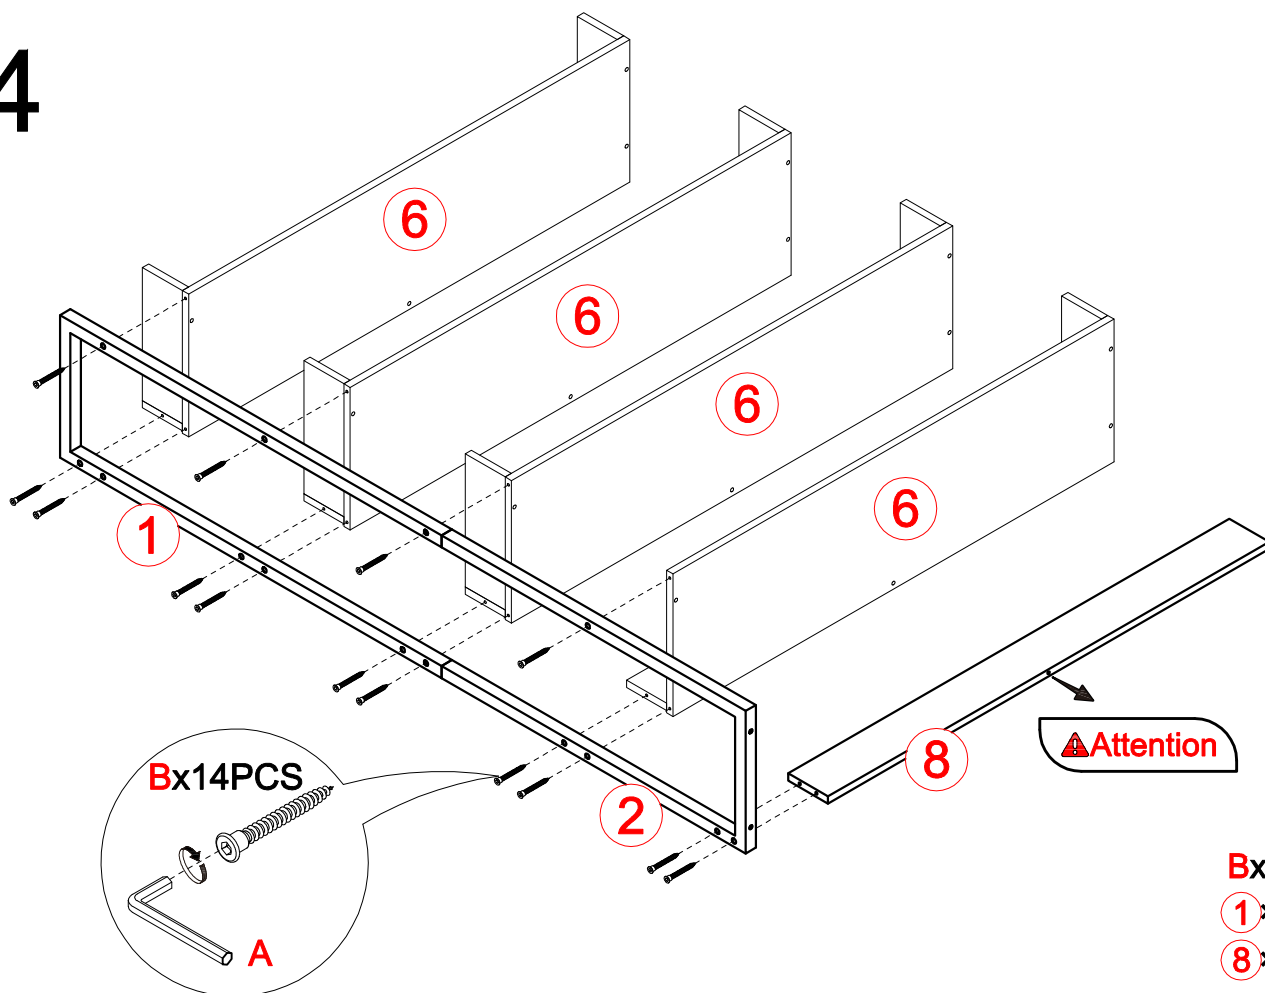

5

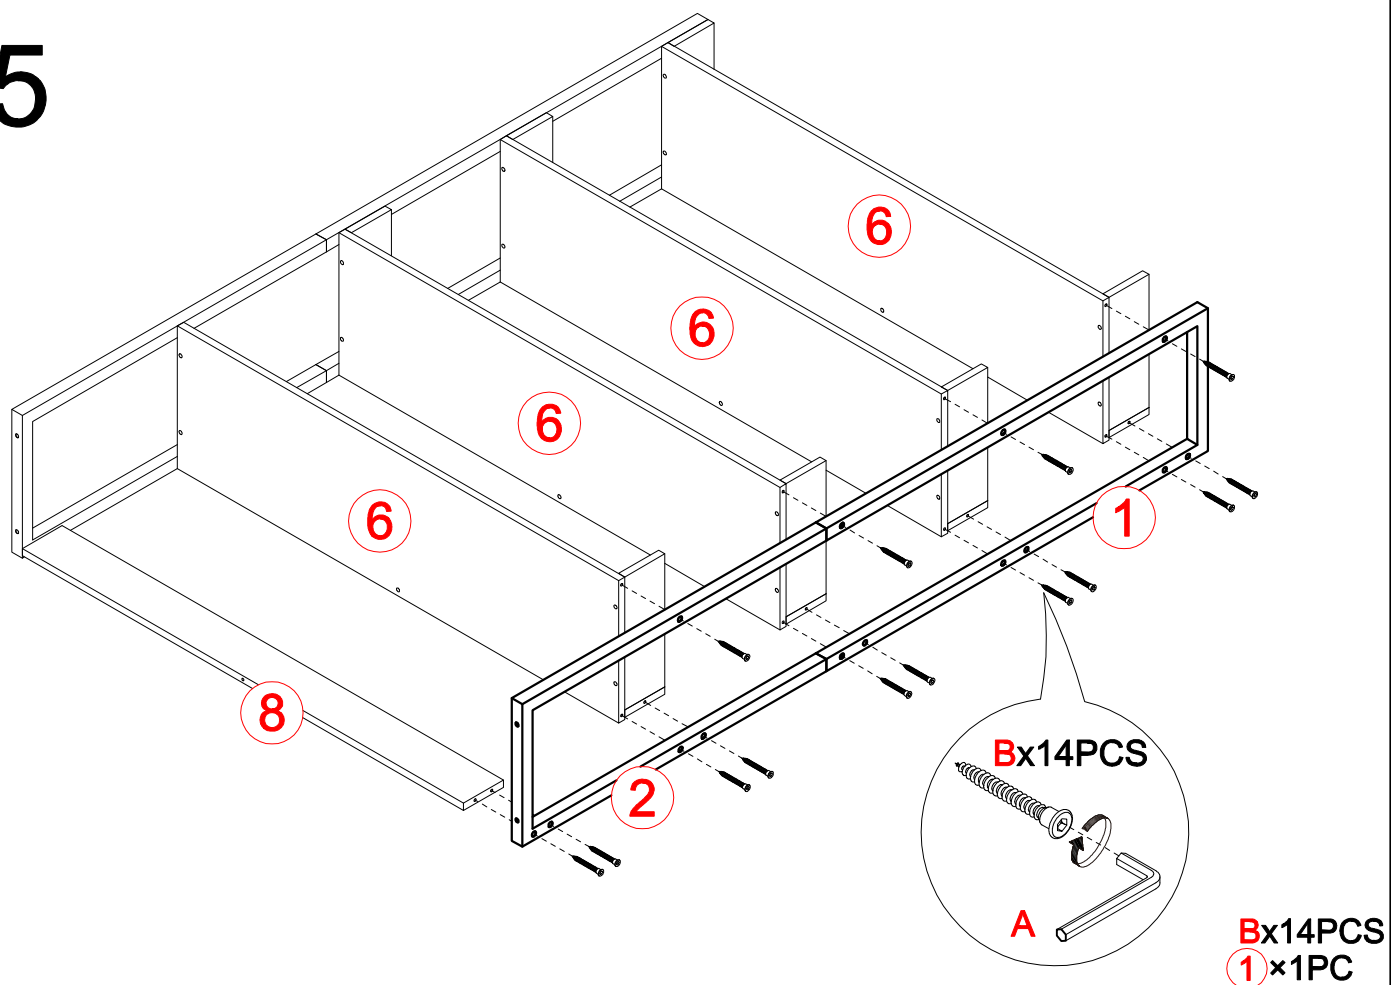


6

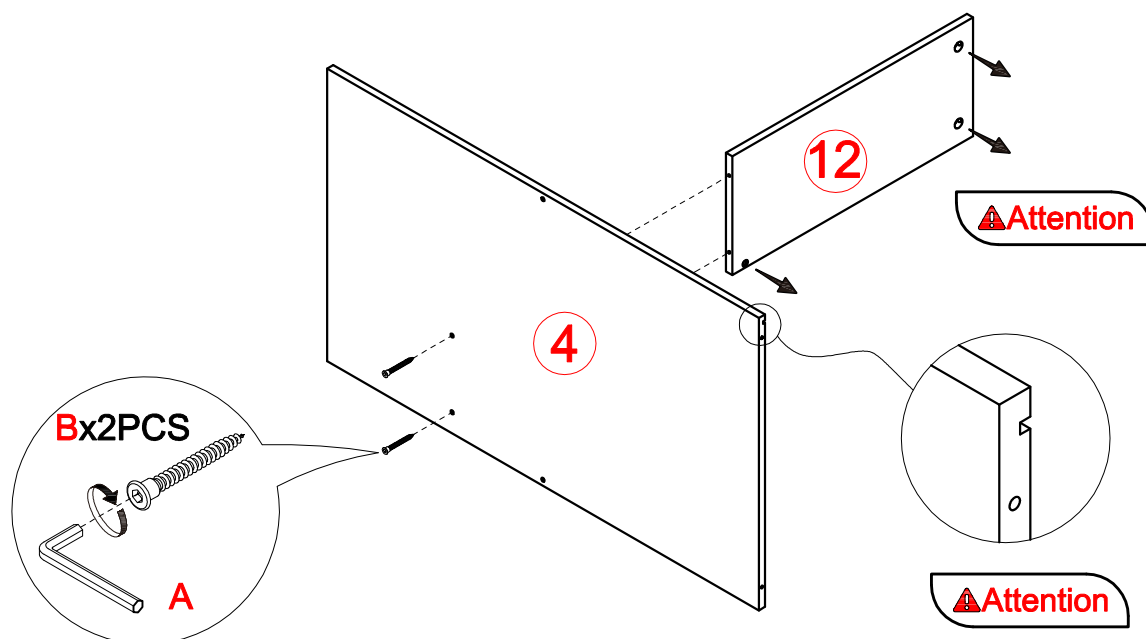


Bx2PCS
4×1PC
12×1PC

7

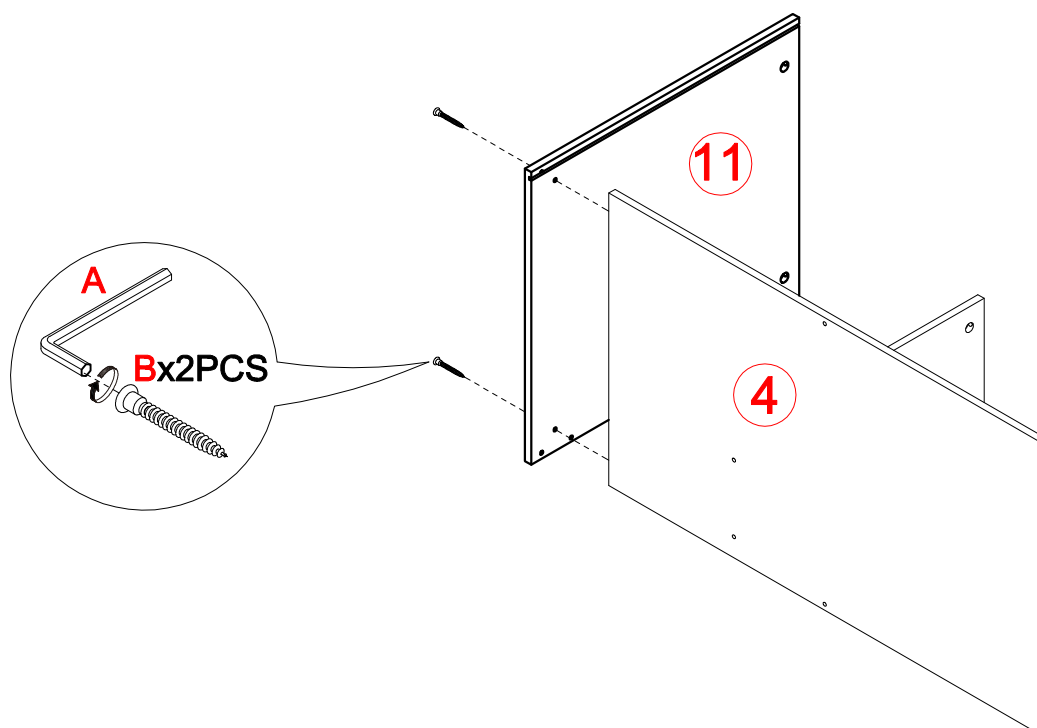


Bx2PCS
11×1PC

8

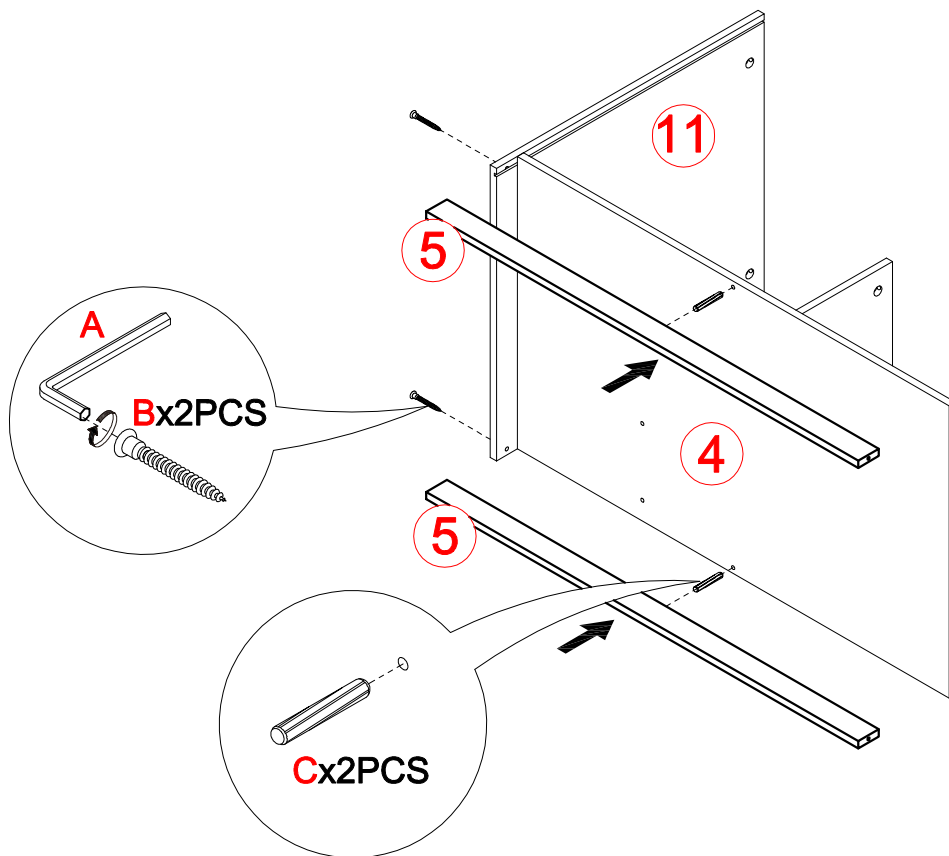


Bx2PCS
Cx2PCS
5x2PCS

9

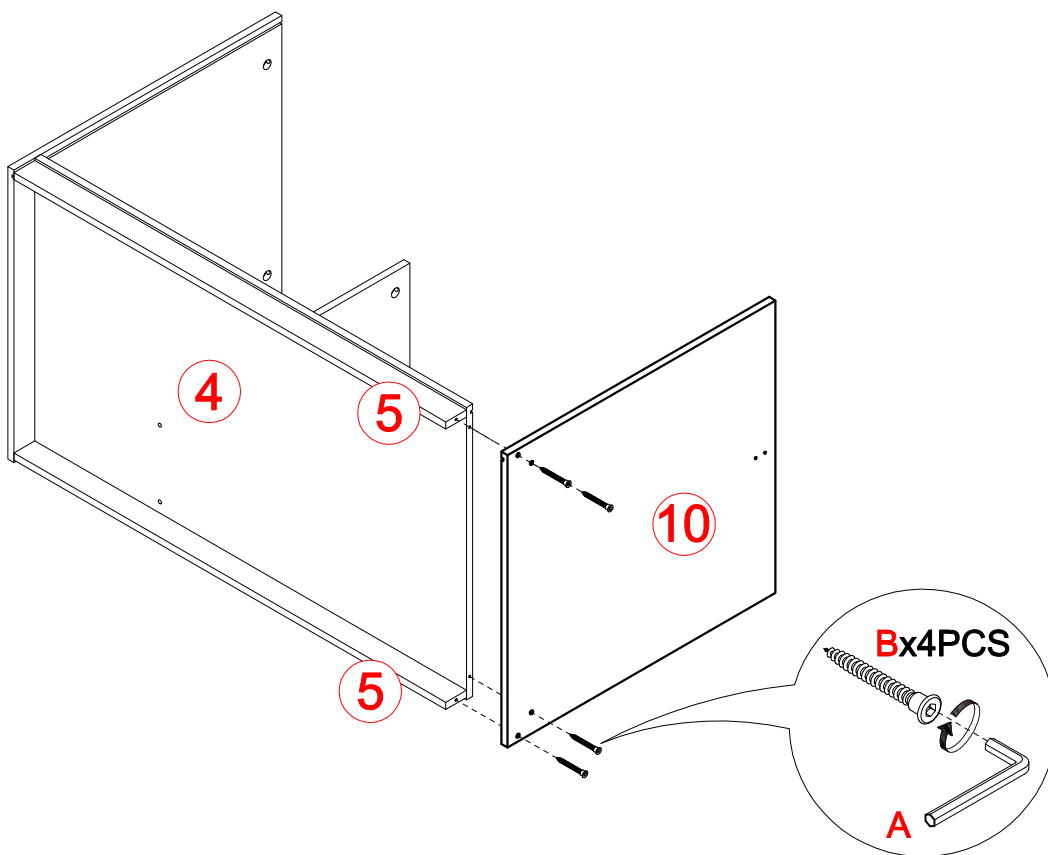


Bx4PCS
10x1PC

10

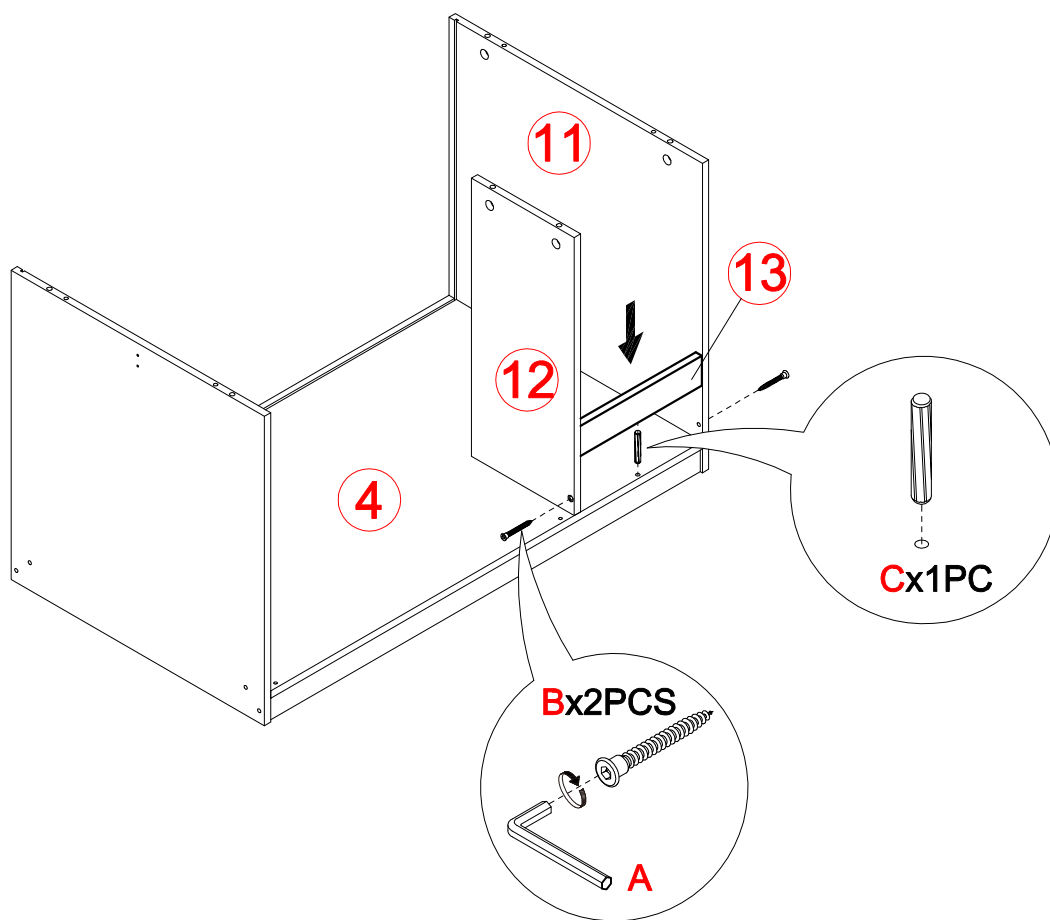


Bx2PCS
Cx1PC
13x1PC

11

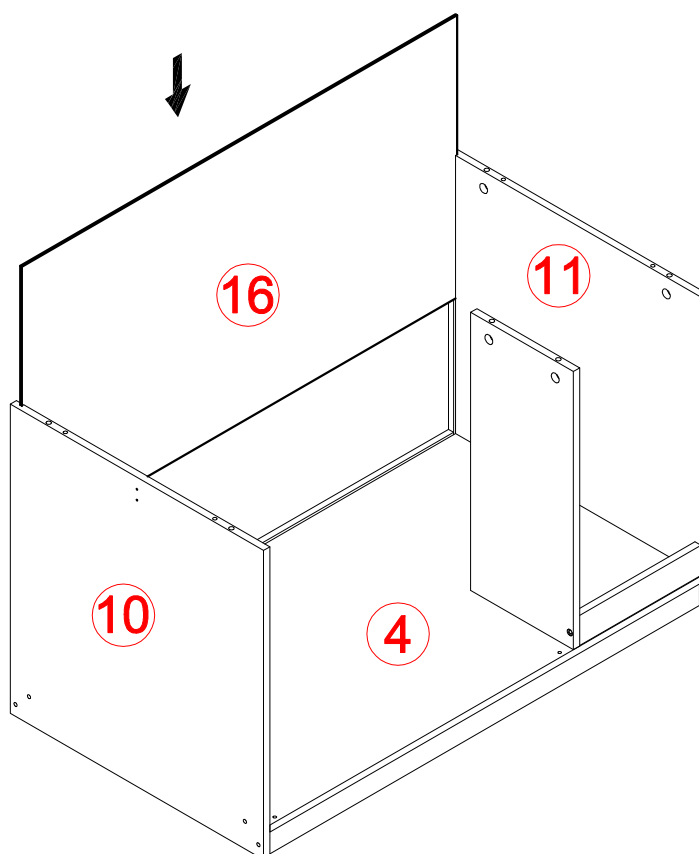


16x1PC

12

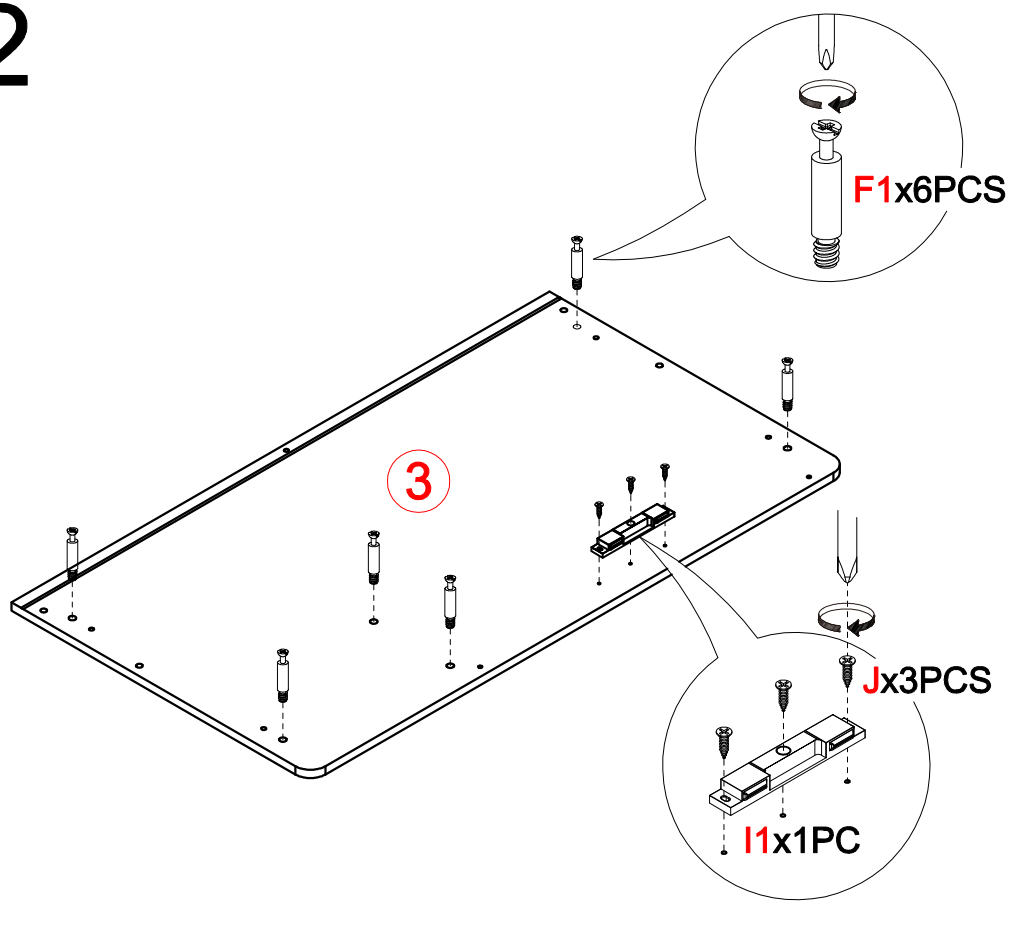


13

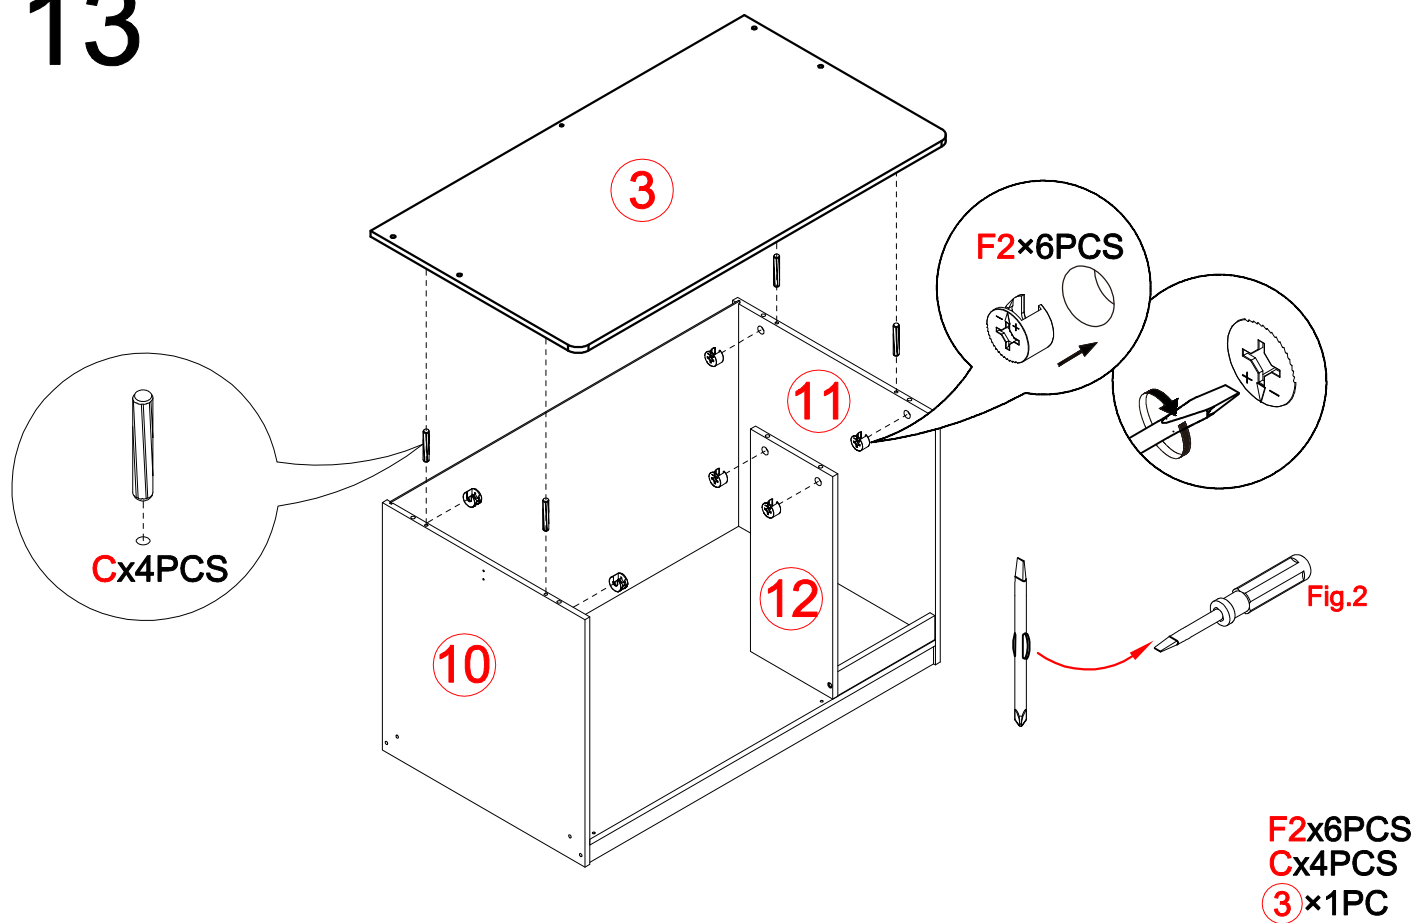


P10/14

14

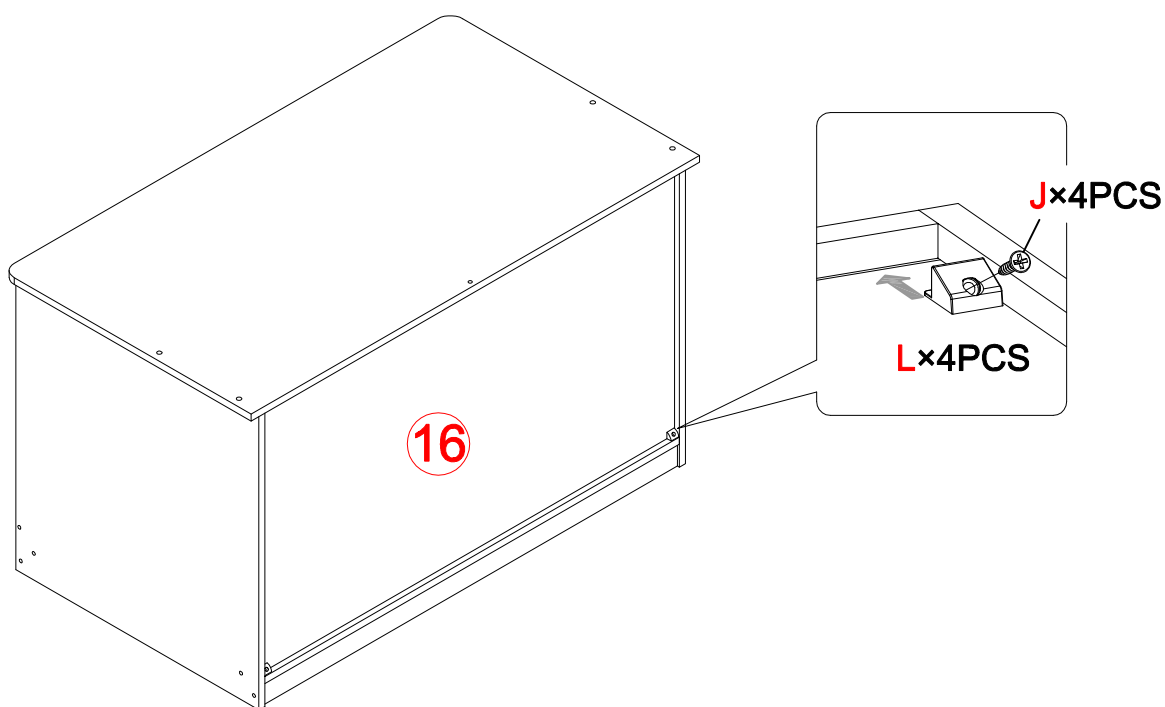


Jx4PCS
Lx4PCS

15

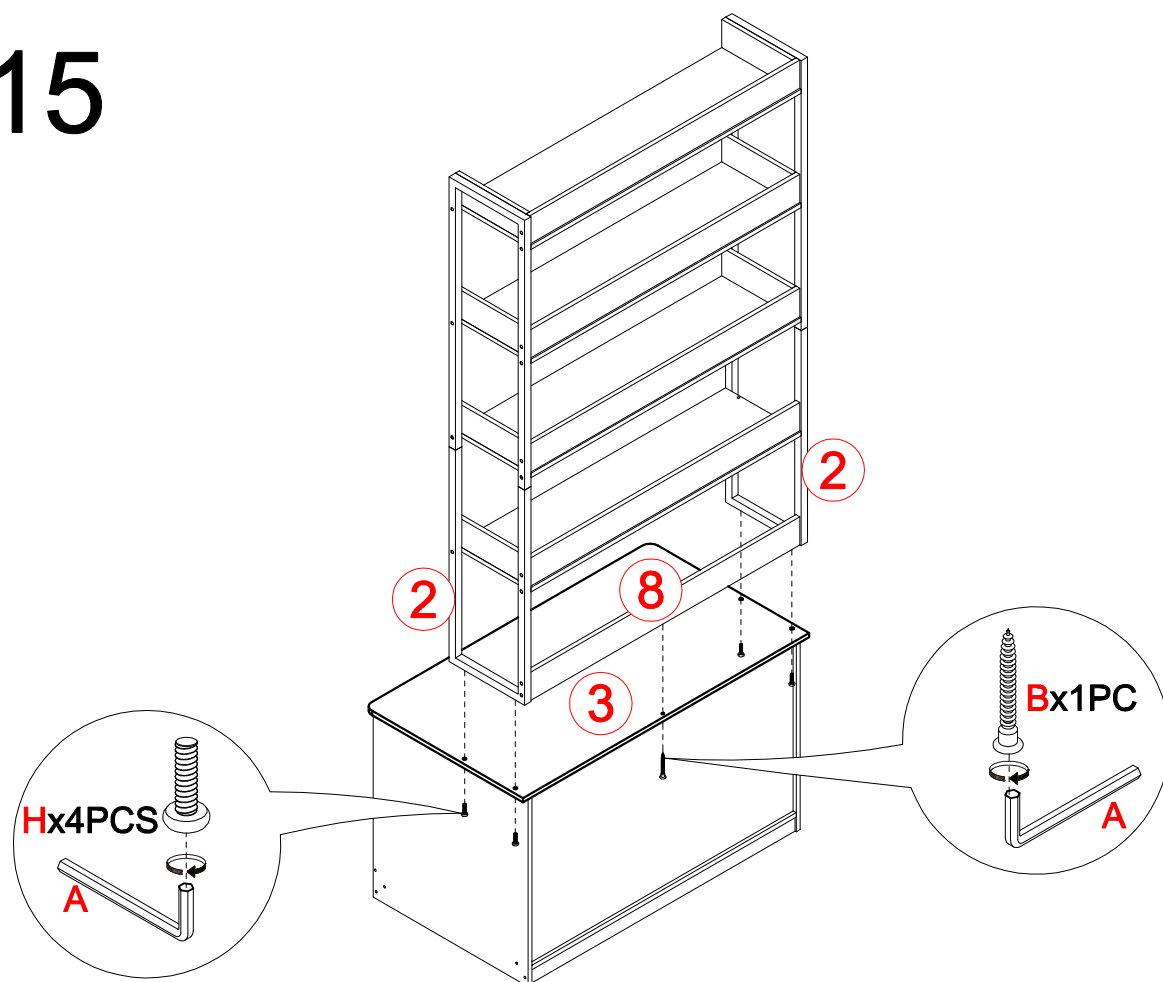


Bx1PC
Hx4PCS

16

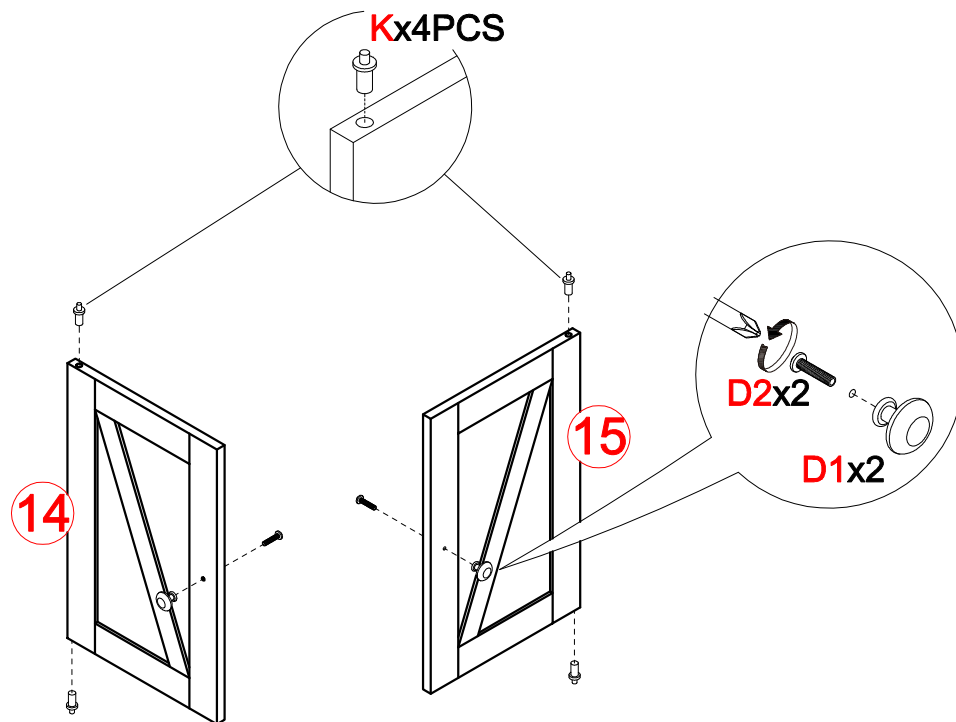

D1x2PCS
D2x2PCS
Kx4PCS
14x1PC
15x1PC


17

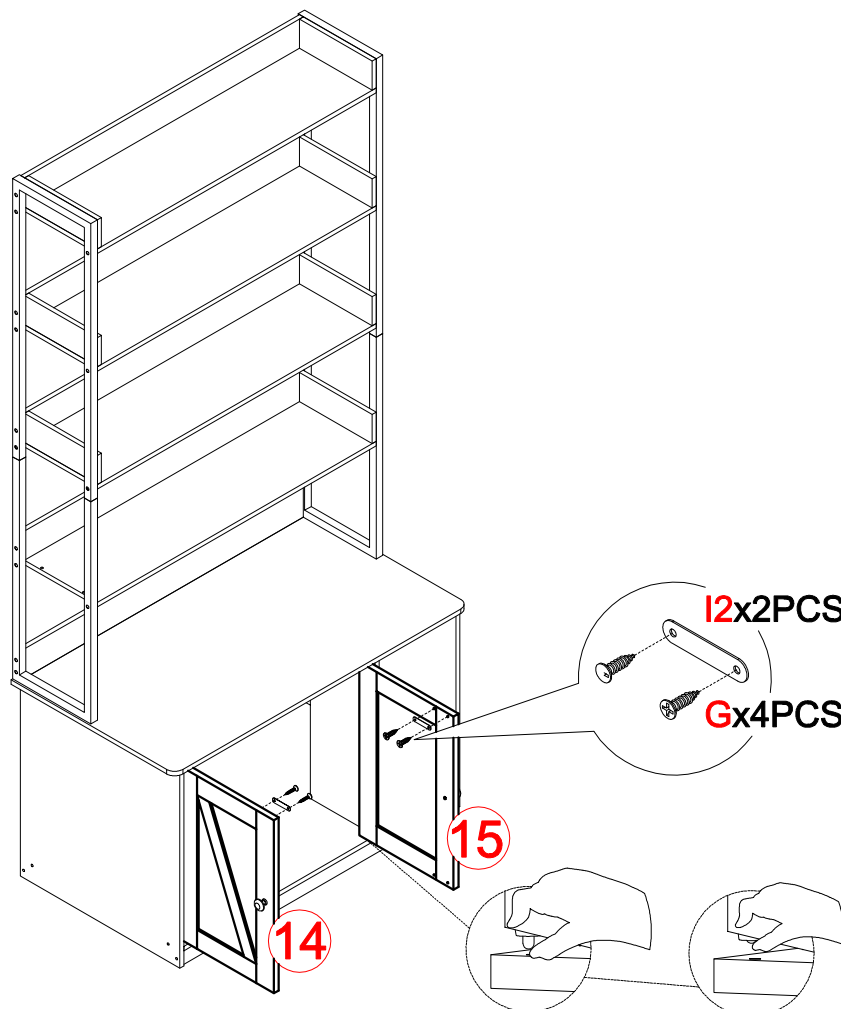

Gx4PCS
I2x2PCS
14x1PC
15x1PC


P12/14

18

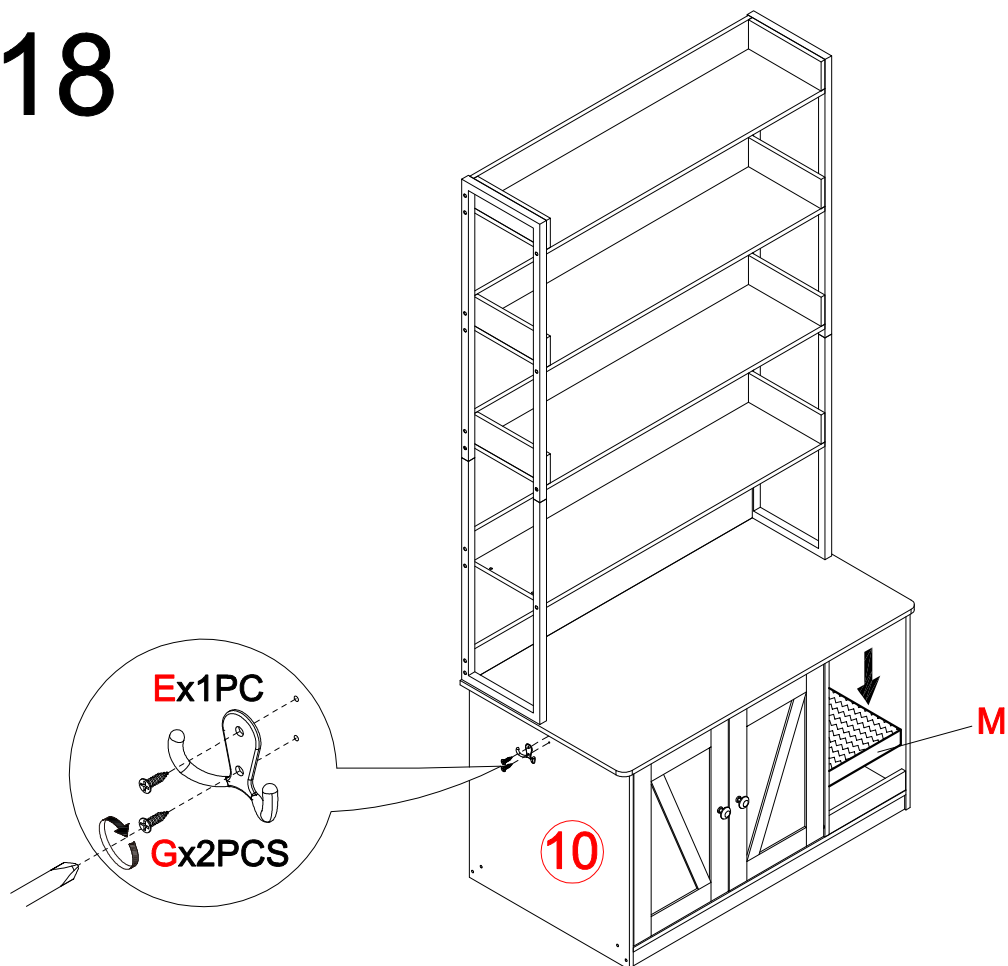



Ex1PC
Gx2PCS
Mx1PC

19

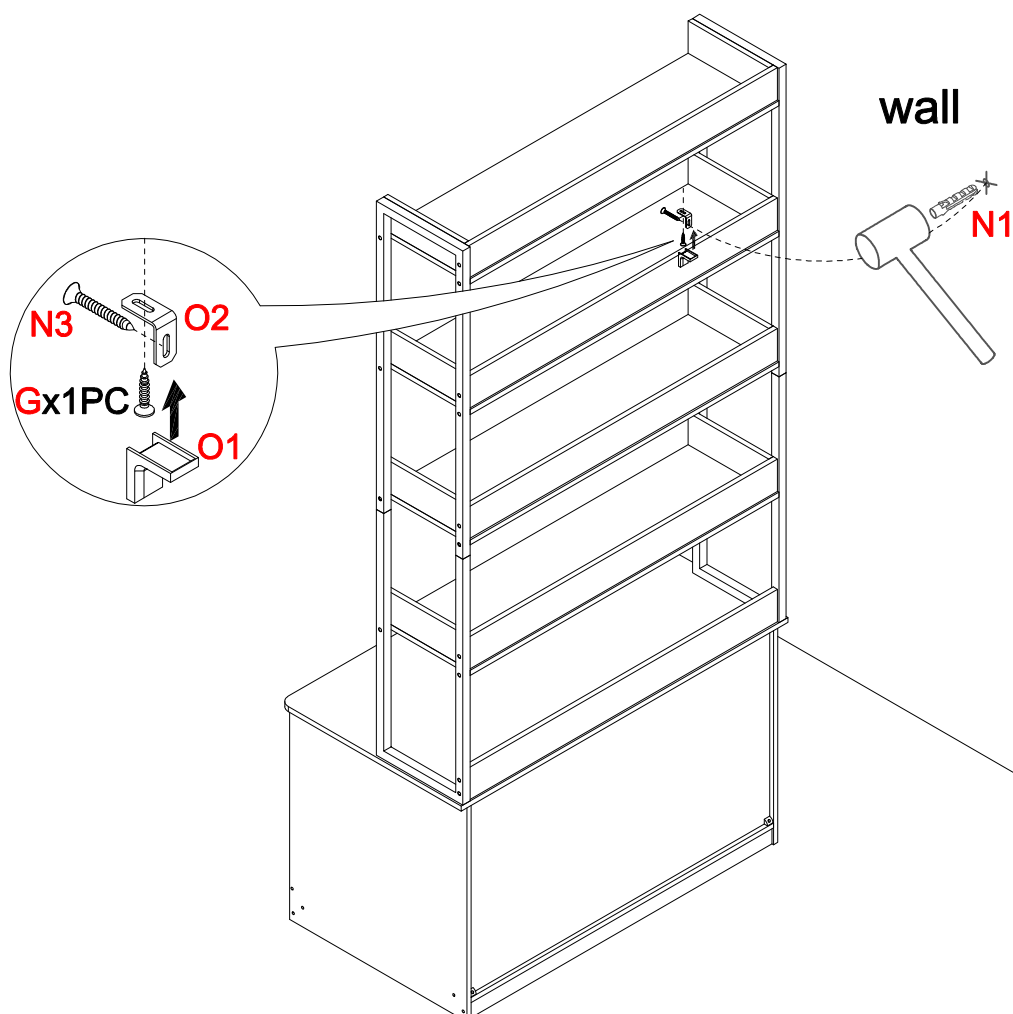

Gx1PC
O1x1PC
O2x1PC
N1x1PC
N3x1PC

20

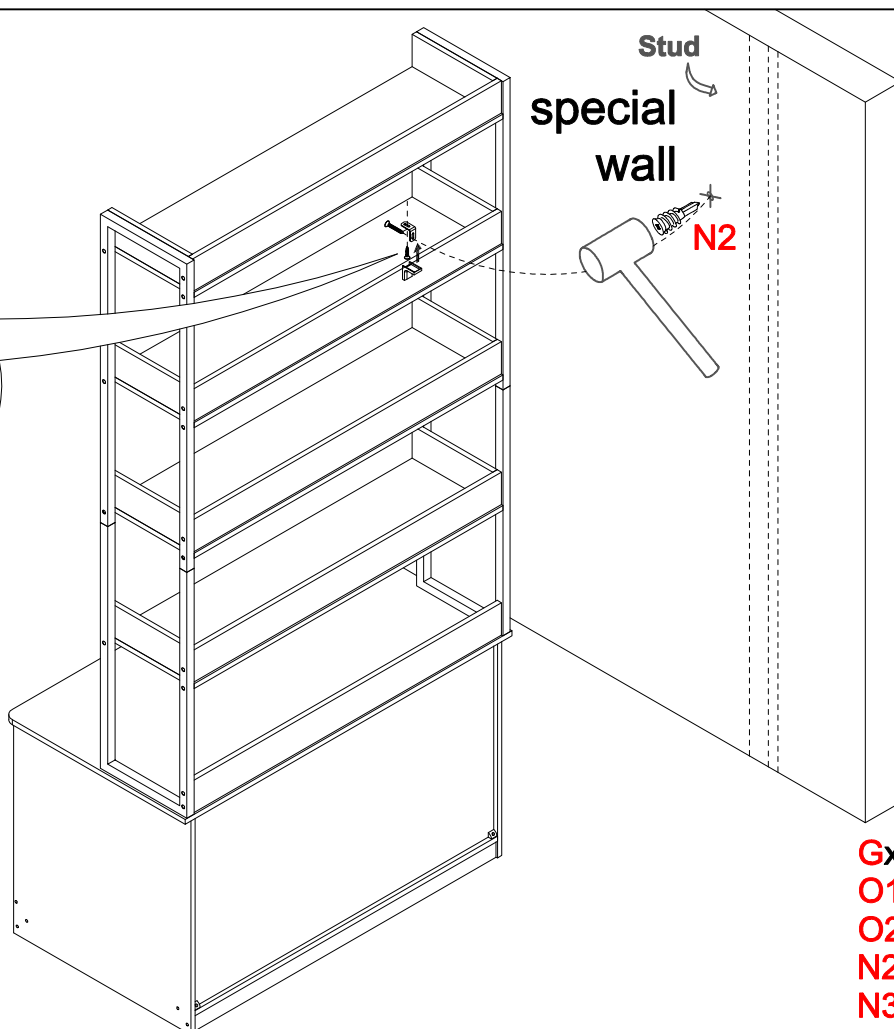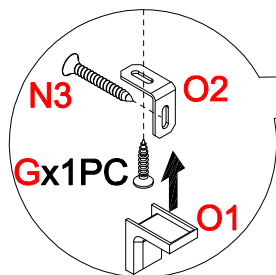

21

