
## TECHNICAL DATA

## Victorian®

## TOILET PAPER HOLDER

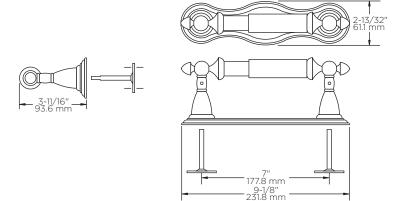



MATERIALS: Base Plate, Bell and Posts - Zinc Die Cast

Roller - Brass, Plated Wall Plate - Zinc Die Cast

INSTALLATION: Mount wall plate bracket(s) per installation instructions with supplied

fasteners. Slip product over wall plate(s) and tighten set screws until secure.

OPTIONAL FASTENER INFORMATION:

Wood blocking is preferable behind all wall surfaces. If wood blocking is not available, the following fasteners are suggested: Tile/Masonry - Plastic or

Lead Anchors, Plaster/Drywall - Toggle Bolts.

SPECIFICATION: Surface mounted toilet paper holder shall be model

(fill in model number) by Liberty Hardware Manufacturing Corporation.