
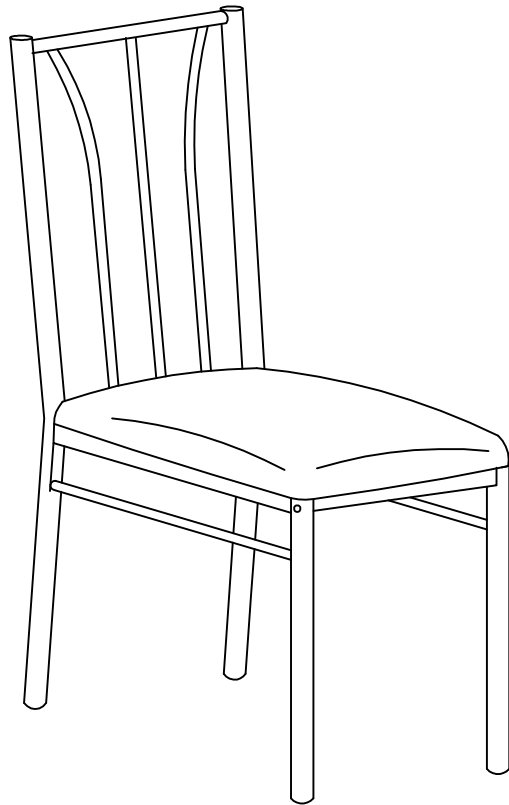






Assembly Instructions


Style # D661 Side Chair

PARTS LIST




A		CHAIR BACK	2PCS
B		LEFT LEG	2PCS
C		RIGHT LEG	2PCS
D		CROSS BAR	2PCS
E		CUSHION SEAT	2PCS
F	 BOH:12MM	BOLT & SPRING WASHER	16PCS
G	 BOH:15MM	SCREW	8PCS
H		ALLEN WRENCH	1PCS

Step 1:

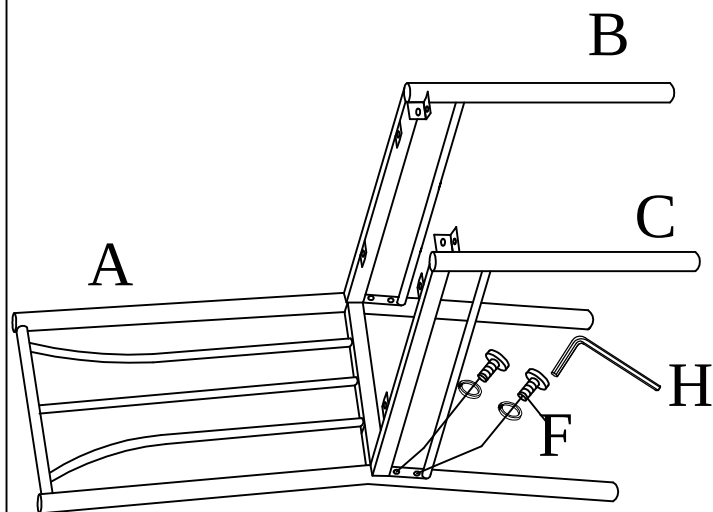


Attach the Legs (B)& (C)to the chair back (A) with bolts & spring washers (F) as shown above. Do not fully tighten until step 3.

Step 2:

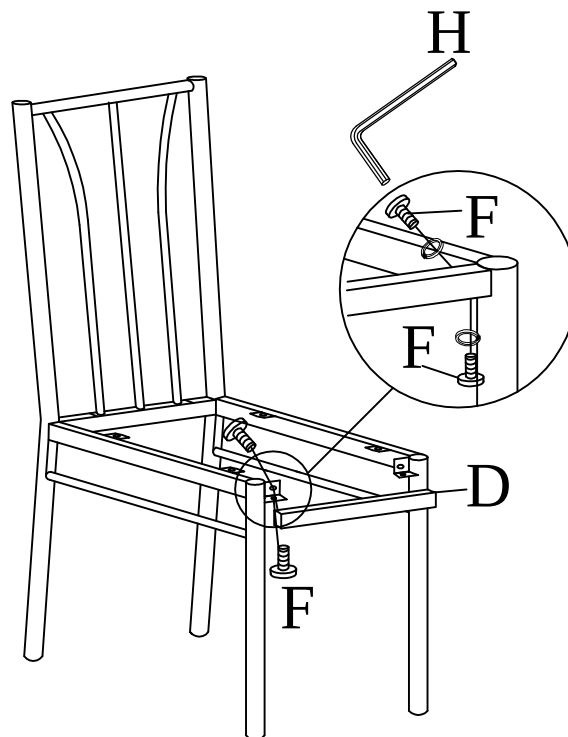

Attach the crossbar (D) to the legs (B) & (C)with bolts & spring washers (F) as shown above. Do not tighten bolts (F) until step 3.

Step 3:

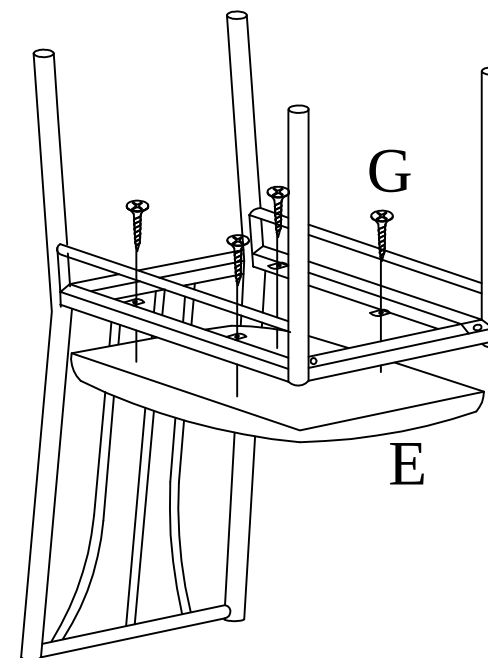

1) Attach the cushion seat (E) to the legs (B)& (C) with the screws (G) as shown above.
2) Tighten all bolts and screws at this point.
It is recommended that this item should be assembled by two adults.