




DOG HOUSE ASSEMBLY MANUAL

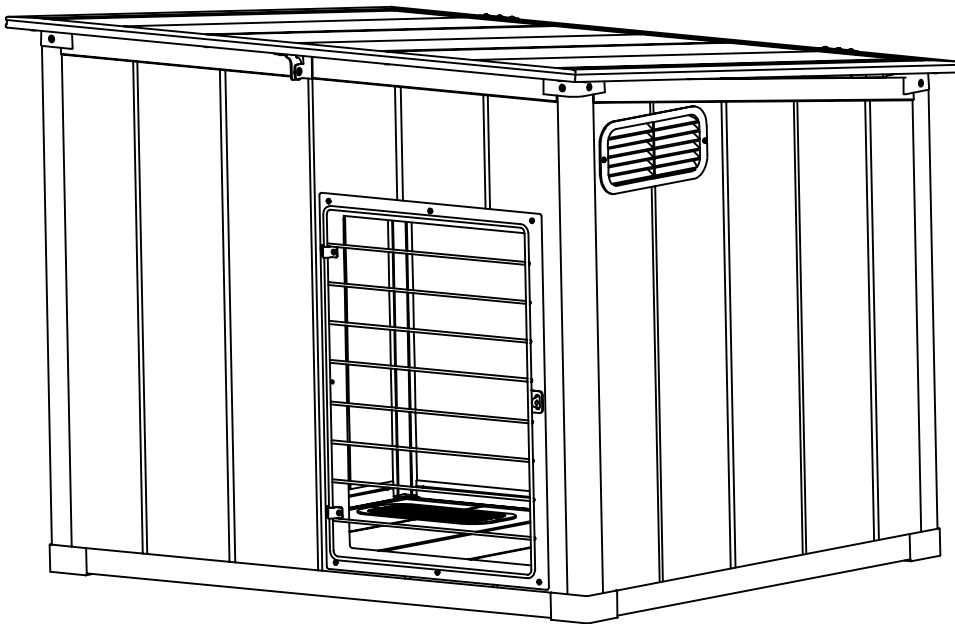

SKU: LNCZ0646

Missing part? Damaged? Contact us via email at

service@domioutdoorliving.com

www.domioutdoorliving.com


BEFORE STARTING ASSEMBLY

- ① Please check all parts and components to ensure that there are no damages or missing items BEFORE starting the construction of the product.
- ② For ease of construction, you may need a Power Drill (Cordless, Variable Speed).
- ③ It would be much easier to assemble the product with two or more people.
- ④ Some parts have metal edges. Please be careful when handling components.


IMPORTANT: Please contact Customer Service if you have any problems or discover any missing parts.




USA & Canada:
1-833-807-3550

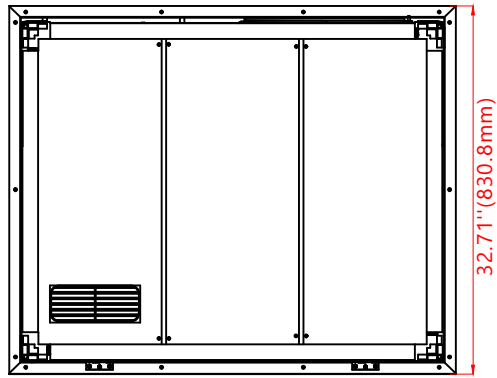


Bottom

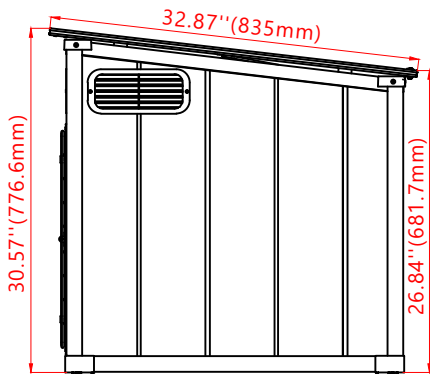


Side

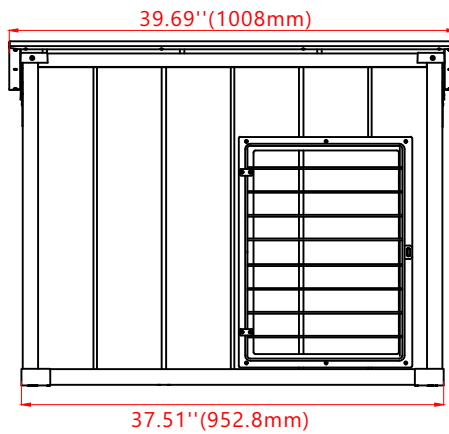















Front








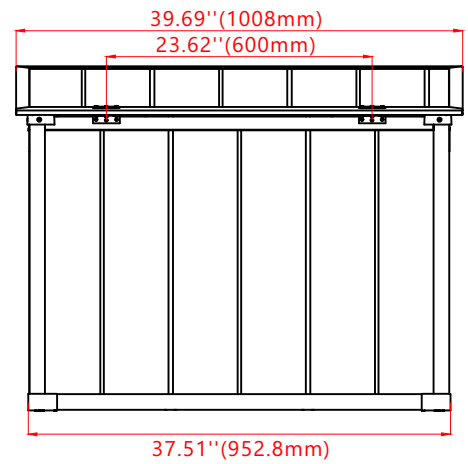





Back


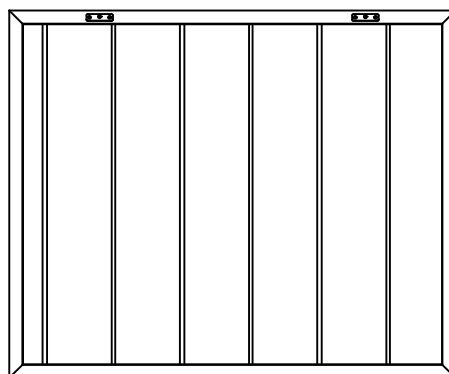





Top

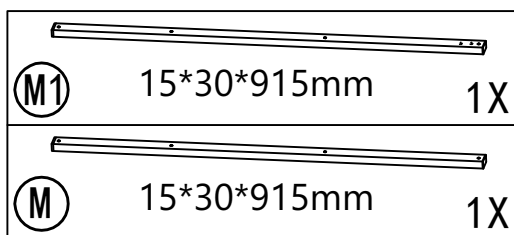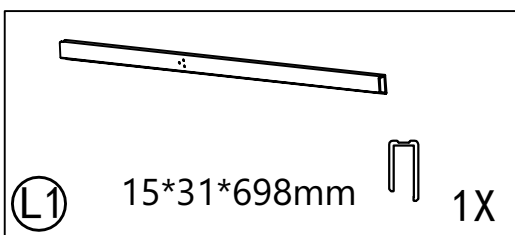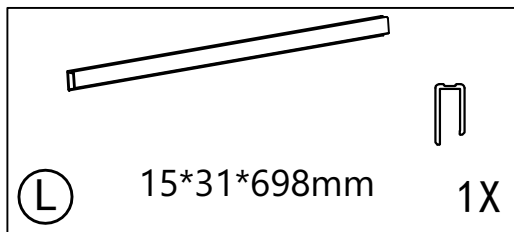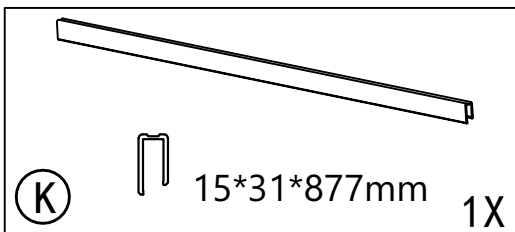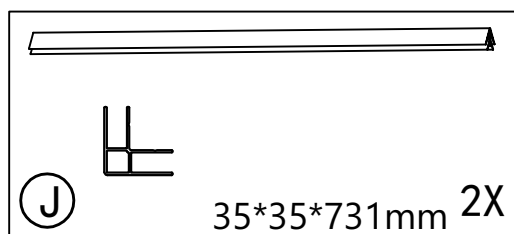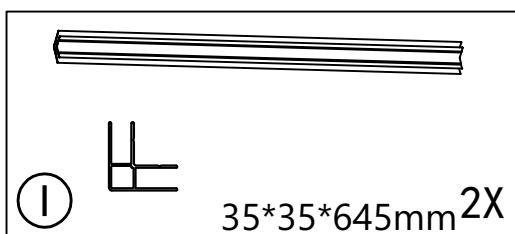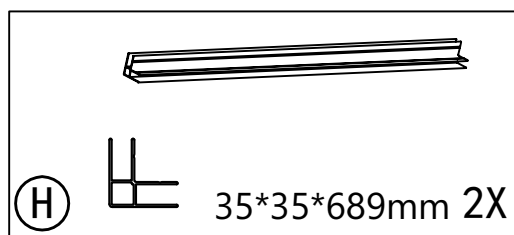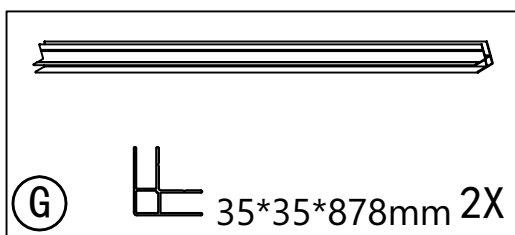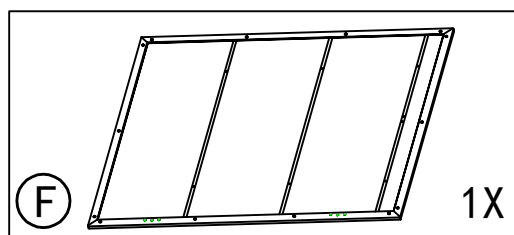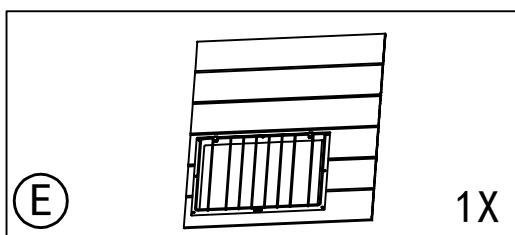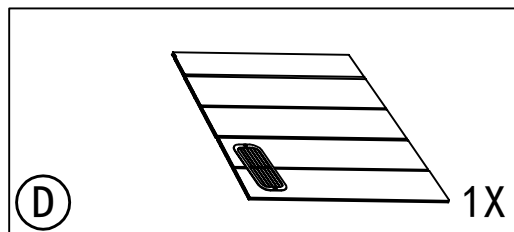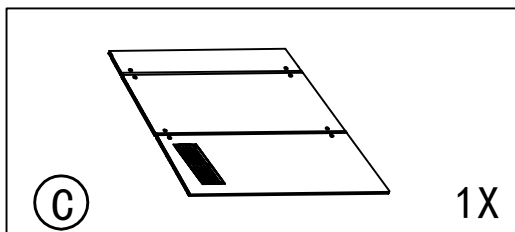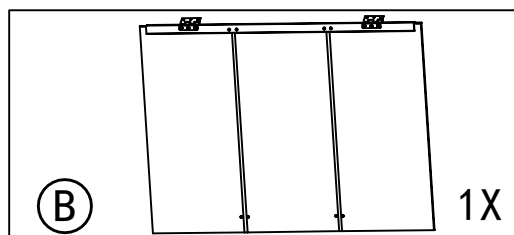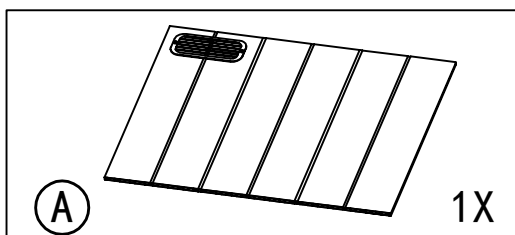

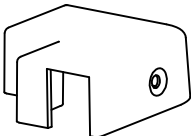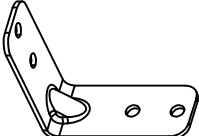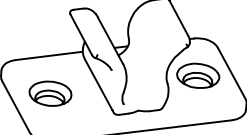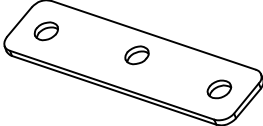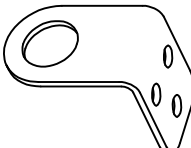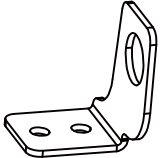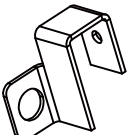(N)  4X	(O)  1X
(P)  4X	(Q)  4X
(R)  1X	(S)  1X
(T)  2X	(U)  1X
(V)  1X	(V1)  1X
(W)  M4*22 Bolts 6X	(X)  ST4*22 Screws 8X (X1)  ST4X10 Screws 72X
(Y)  Nuts M4 6X	(Z)  Screwdriver 1X

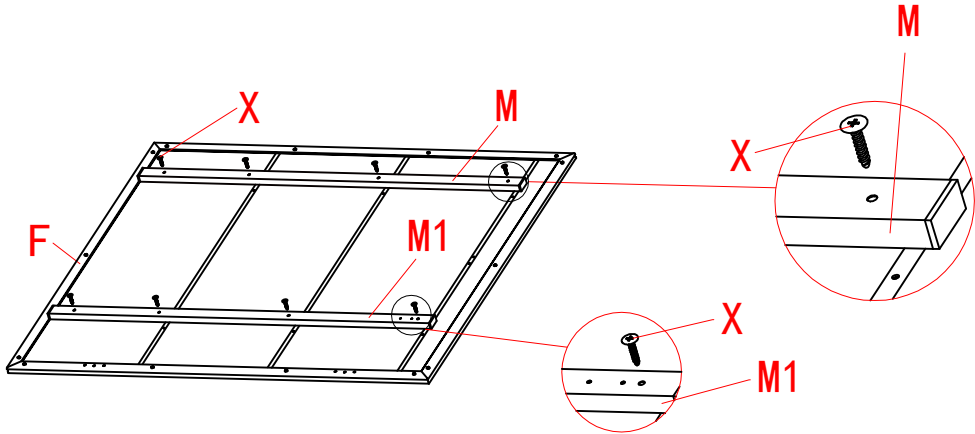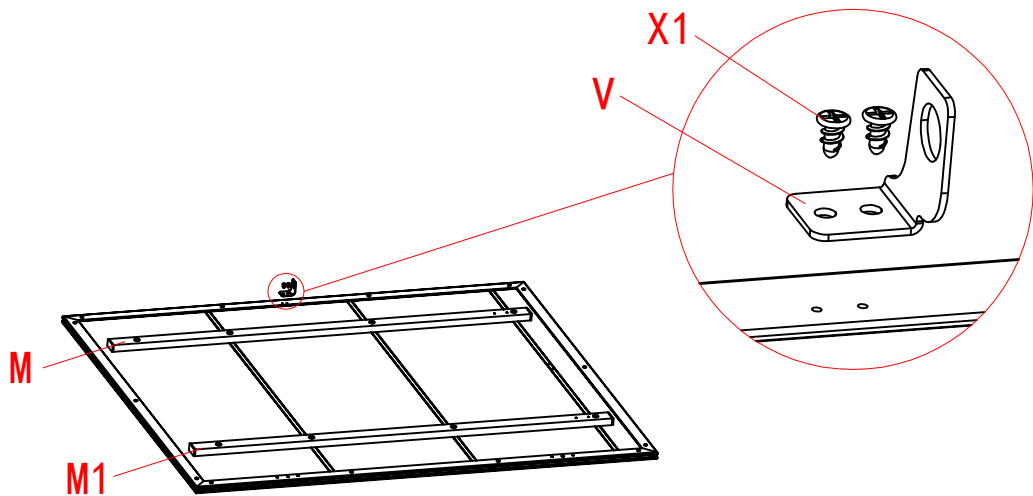
 F1X  M1X  M11X  ST4*228X	Step 1: Attach part #M and part #M1 to part #F, securing them with 8 Screws #X (ST4*22). 
 V1X  ST4X10X12X	Step 2: Attach part #V to part #F as shown (on the side near #M), securing it with 2 screws #X1 (ST4*10). 
1	

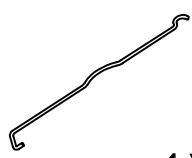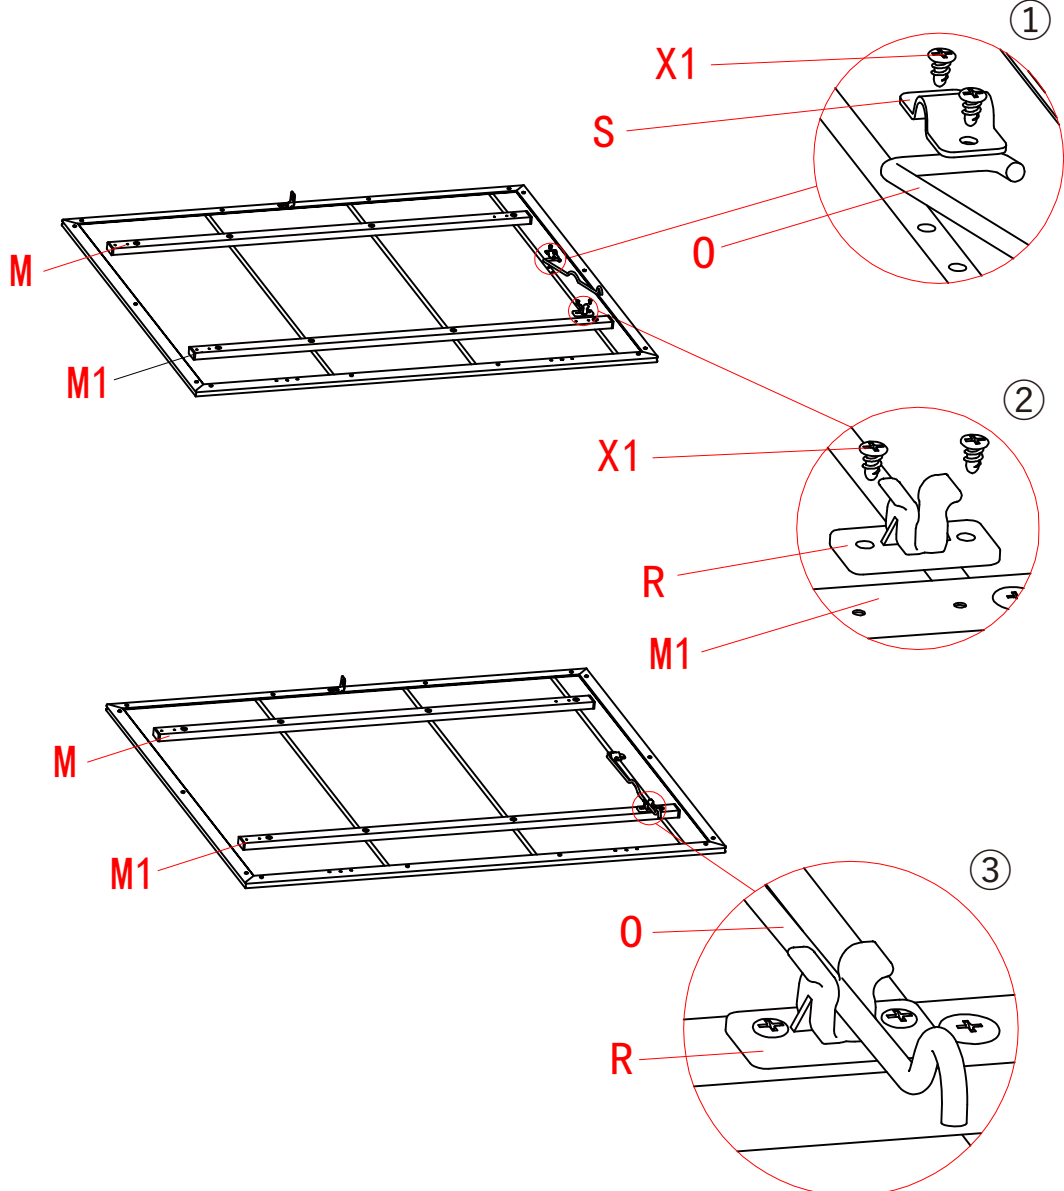 ST4X10 X1 4X	Step 3:
 R 1X	①: Place the non-hooked end of part #O into position, then attach bracket #S over it as shown, securing both with 2 screws #X1 (ST4×10).
 S 1X	②: Attach bracket #R to the assembly as shown, securing it with 2 screws #X1 (ST4×10).
 O 1X	③: Fit the hooked end of part #O onto bracket #R as shown to complete the installation.
	 The diagram illustrates the three-step installation process on a rectangular frame with a grid pattern. Red labels M and M1 point to specific locations on the frame. Step 1 shows a close-up of bracket S being secured to part O with two screws X1. Step 2 shows a close-up of bracket R being secured to the frame with two screws X1. Step 3 shows a close-up of the hooked end of part O being inserted into bracket R.
2	

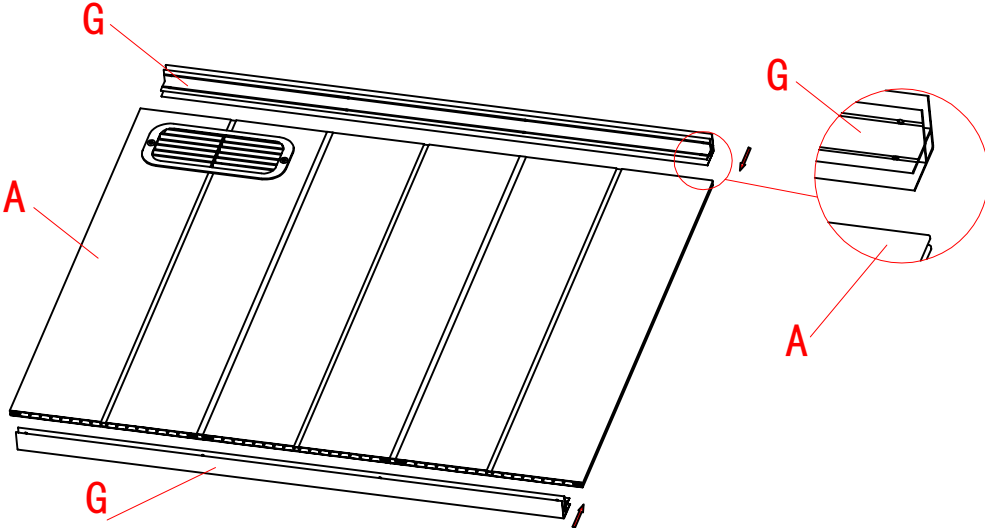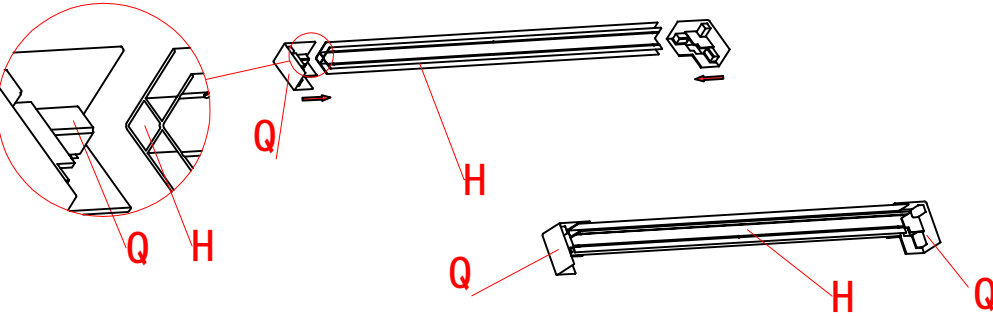 35*35*878mm G 2X	Step 4: Insert part #G into the top and bottom edges of part #A as shown. 
 4X  35*35*689mm H 2X	Step 5: Align and attach part #Q to both ends of part #H as shown. Repeat for the second part #H. 
3	

Step 6:

Align and insert the assembled part #H into both sides of part #A as shown.

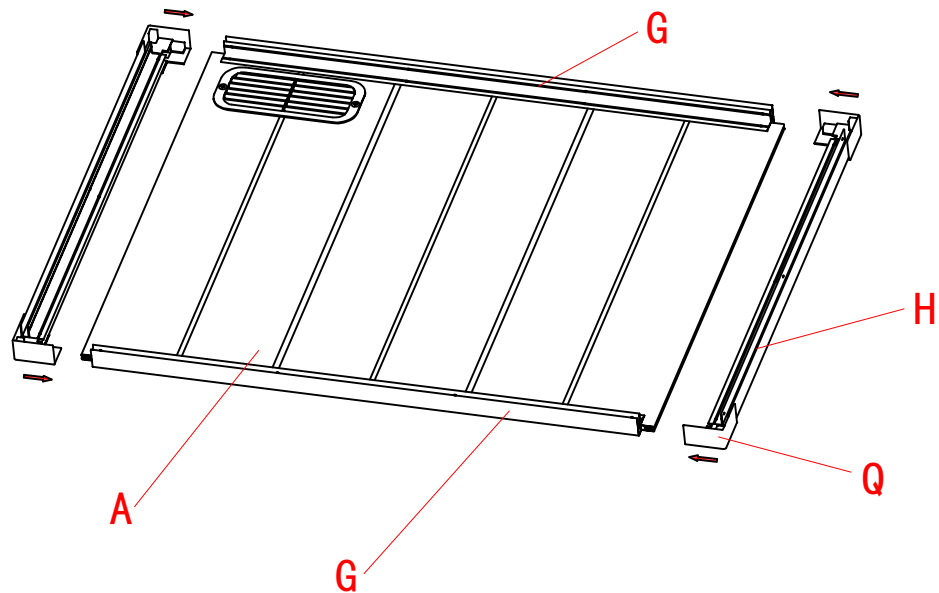

Step 7:


Secure the assembled parts from Step 6 with 14 screws #X1 (St4×10) as shown.










ST4X10

X1

14X

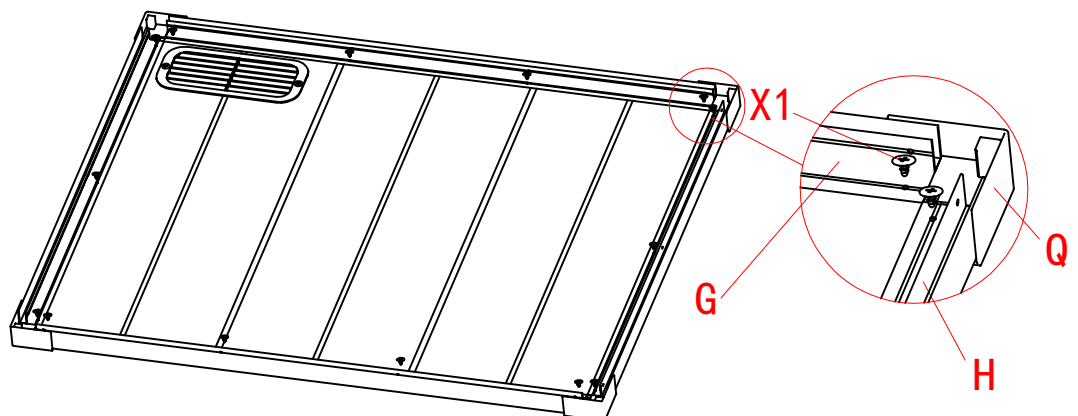

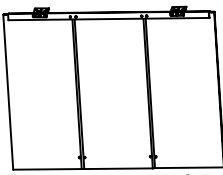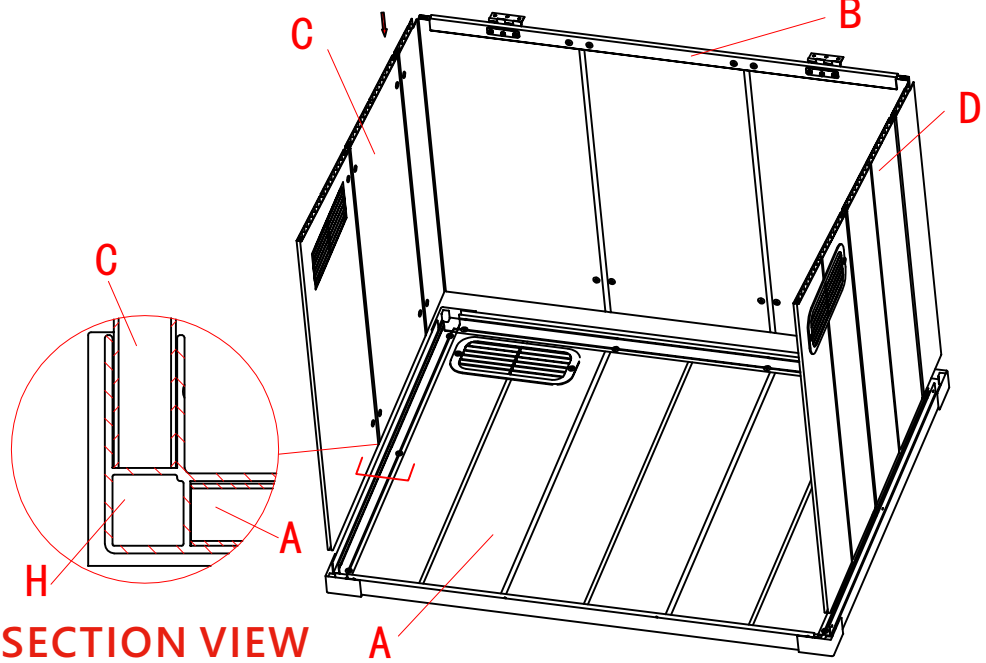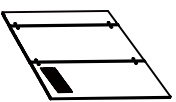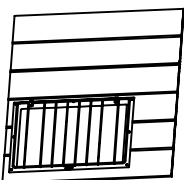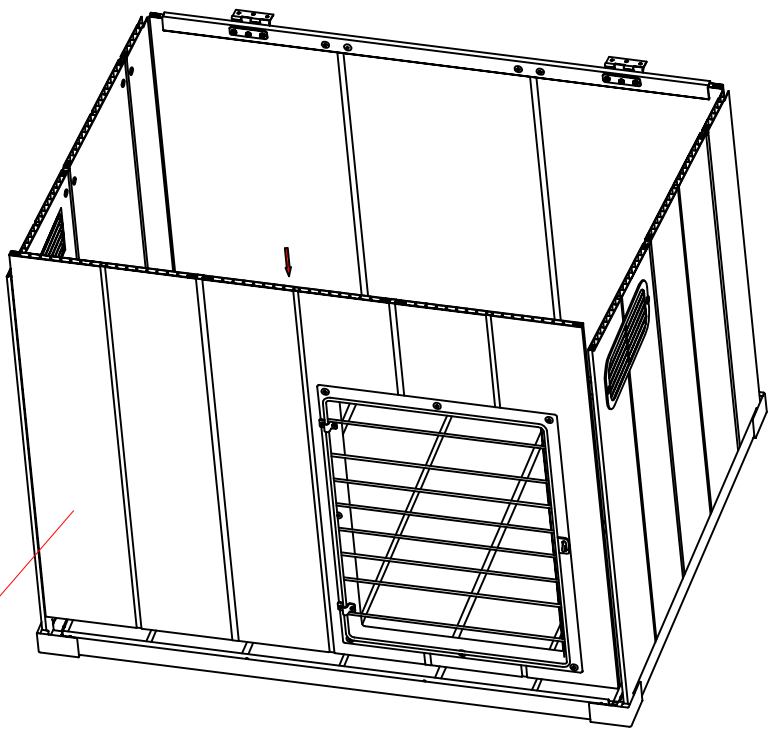 B 1X	Step 8: Align and insert part #C and part #D into both sides of part #A, then attach part #B as shown.  SECTION VIEW
 C 1X	
 D 1X	
 E 1X	Step 9: Align and insert part #E as shown. 
5	

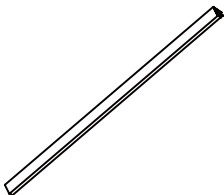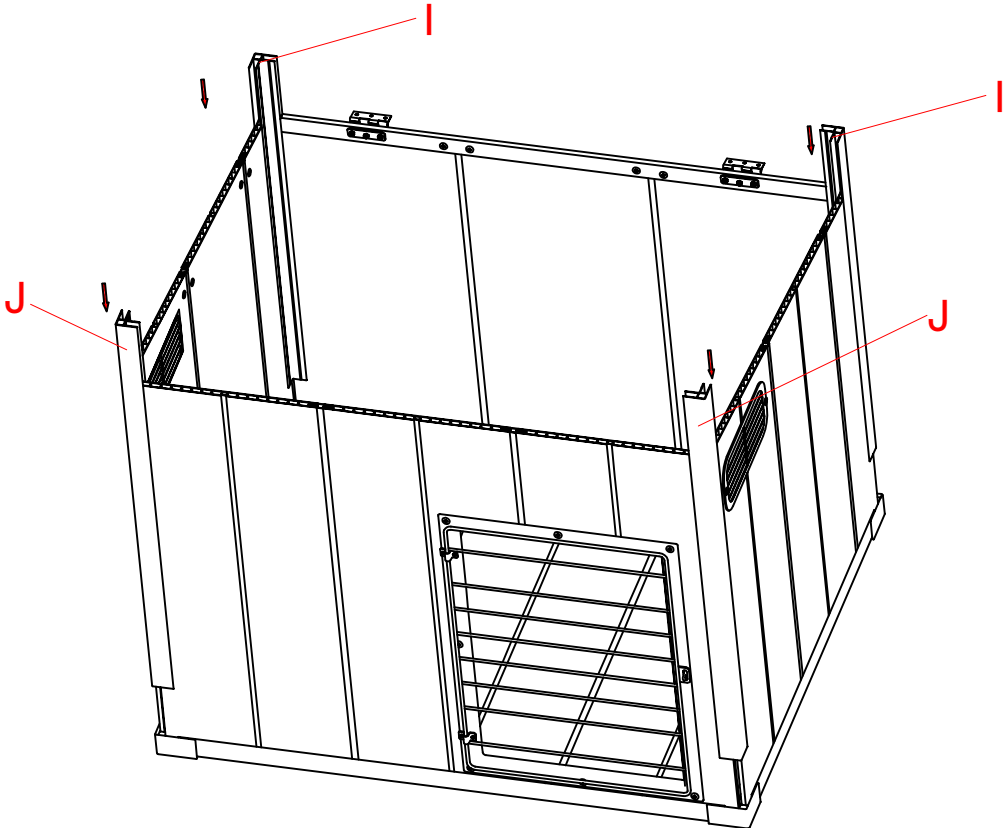 35*35*645mm I 2X	Step 10: Align and insert parts #I and #J into position as shown.
 35*35*731mm J 2X	
6	

L 1X	Step 11: Align and insert parts #L, #L1, and #K into position from above as shown.
L1 1X	The diagram shows a wire crate with a door. Three red arrows point to the top edges of the crate, indicating where to install parts L, L1, and K. Red labels L, L1, and K are placed next to the arrows to identify the parts.
K 1X	
7	





ST4X10

Step 12:


Adjust the panels to ensure the frame is square, then secure all joints from the inside with 24 screws #X1 (ST4×10) as shown.

X1

24X

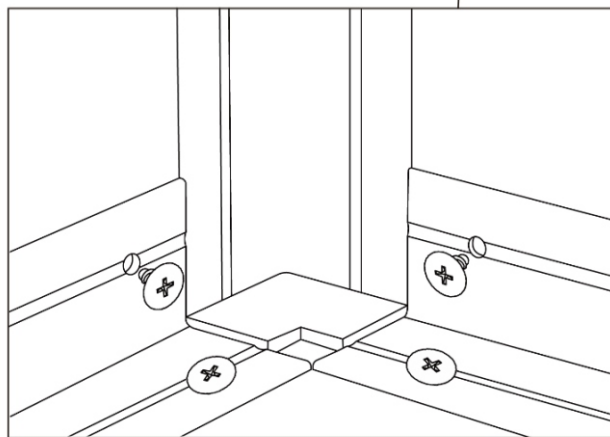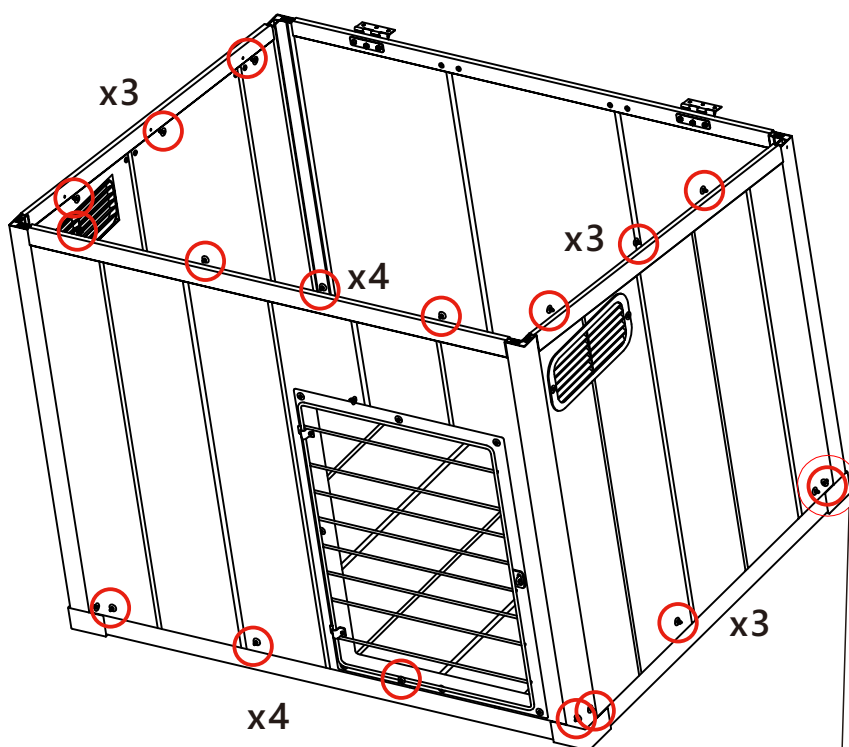

Inside View

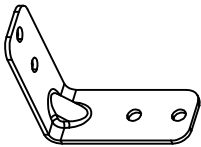

P

4X



ST4X10


X1


16X

Step 13:

Attach part #P to the one corner of the frame, then secure it with 4 screws #X1 (ST4×10) as shown.

Repeat the above procedure for the other 3 corners.

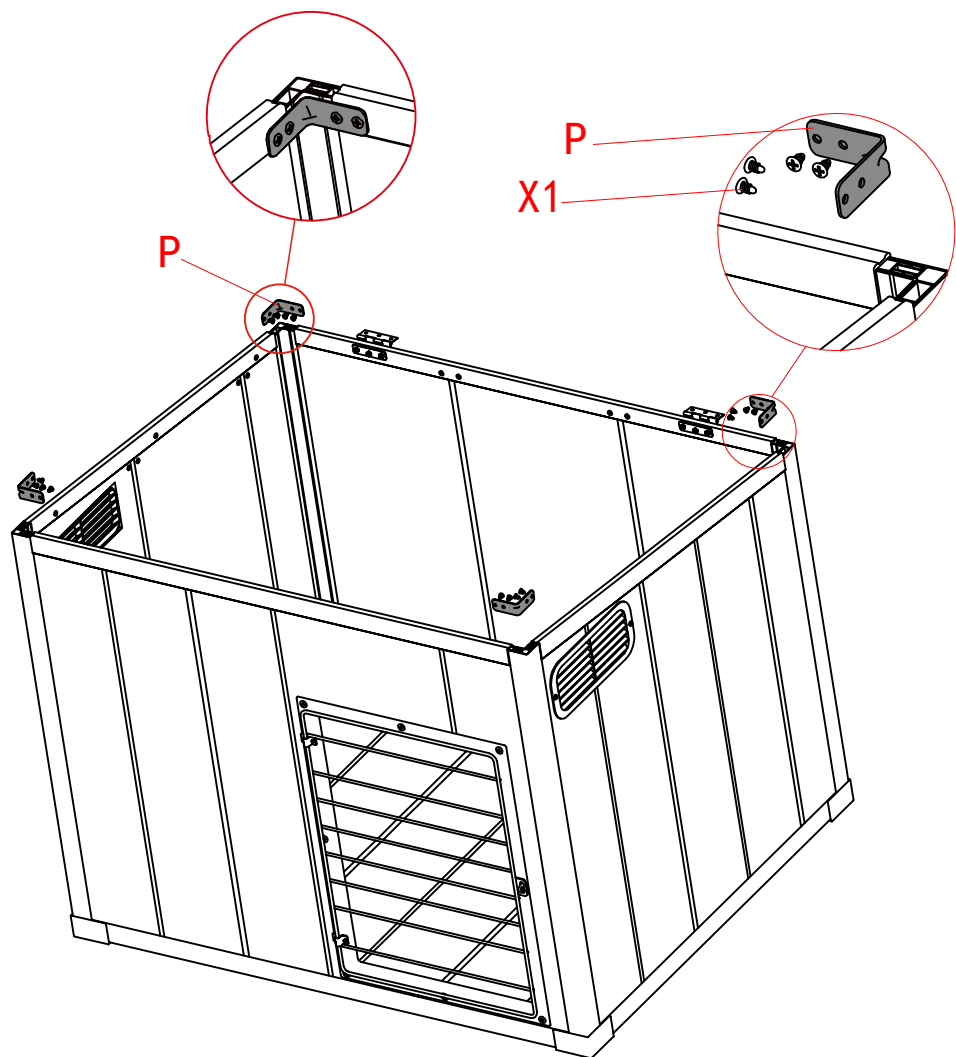

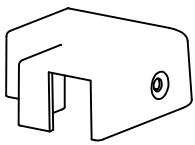

N 4X




ST4X10

X1 8X

Step 14:

Align and connect part #N to one corner of the frame, then secure it with 2 screws #X1 (ST4×10) as shown. Repeat the above procedure for the other 3 corners.

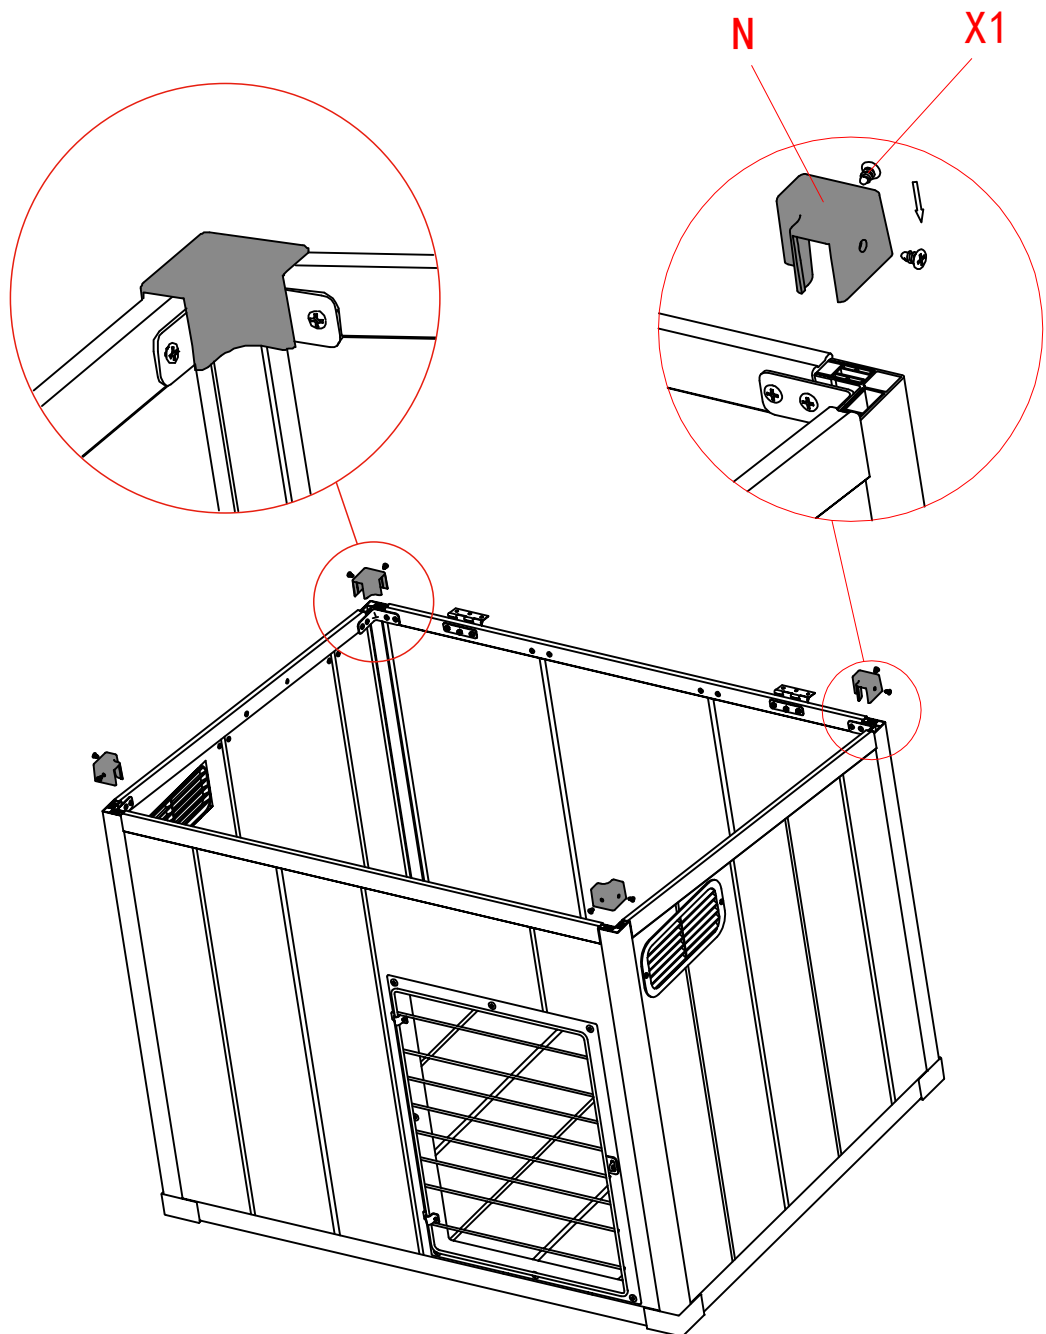

U 1X	Step 15: Attach part #U to part #L1, then secure it with 3 screws #X1 (ST4×10) from the inside as shown.
ST4X10 X1 3X	
11	

T 2X	Step 16: Attach part #T to parts #F and the hinges on part #B, then secure each with 3 sets of screws #W (M4×22) and nuts #Y (M4) as shown.
W 6X	
Y 6X	
F 1X	
12	

V1 1X	Step 17: Attach part #V1 to the frame, then secure it with 1 screw #X1 (ST4×10) as shown.
ST4X10 X1 1X	Outside View Inside View
13	



Thanks for your purchase.

At domi outdoor living, we believe in our products.

That's why we provide a 12-month warranty and friendly, easy-to-reach after-sales service. So, if you have any questions about our product or assembly, please feel free to contact us. We are here for you.

Support:  

After-sales contact email:

service@domioutdoorliving.com

Business cooperation contact email:

marketing@domioutdoorliving.com

Please have your order ID available if you reach out for support.

If you have damaged parts or product, please send us photos for an immediate response.