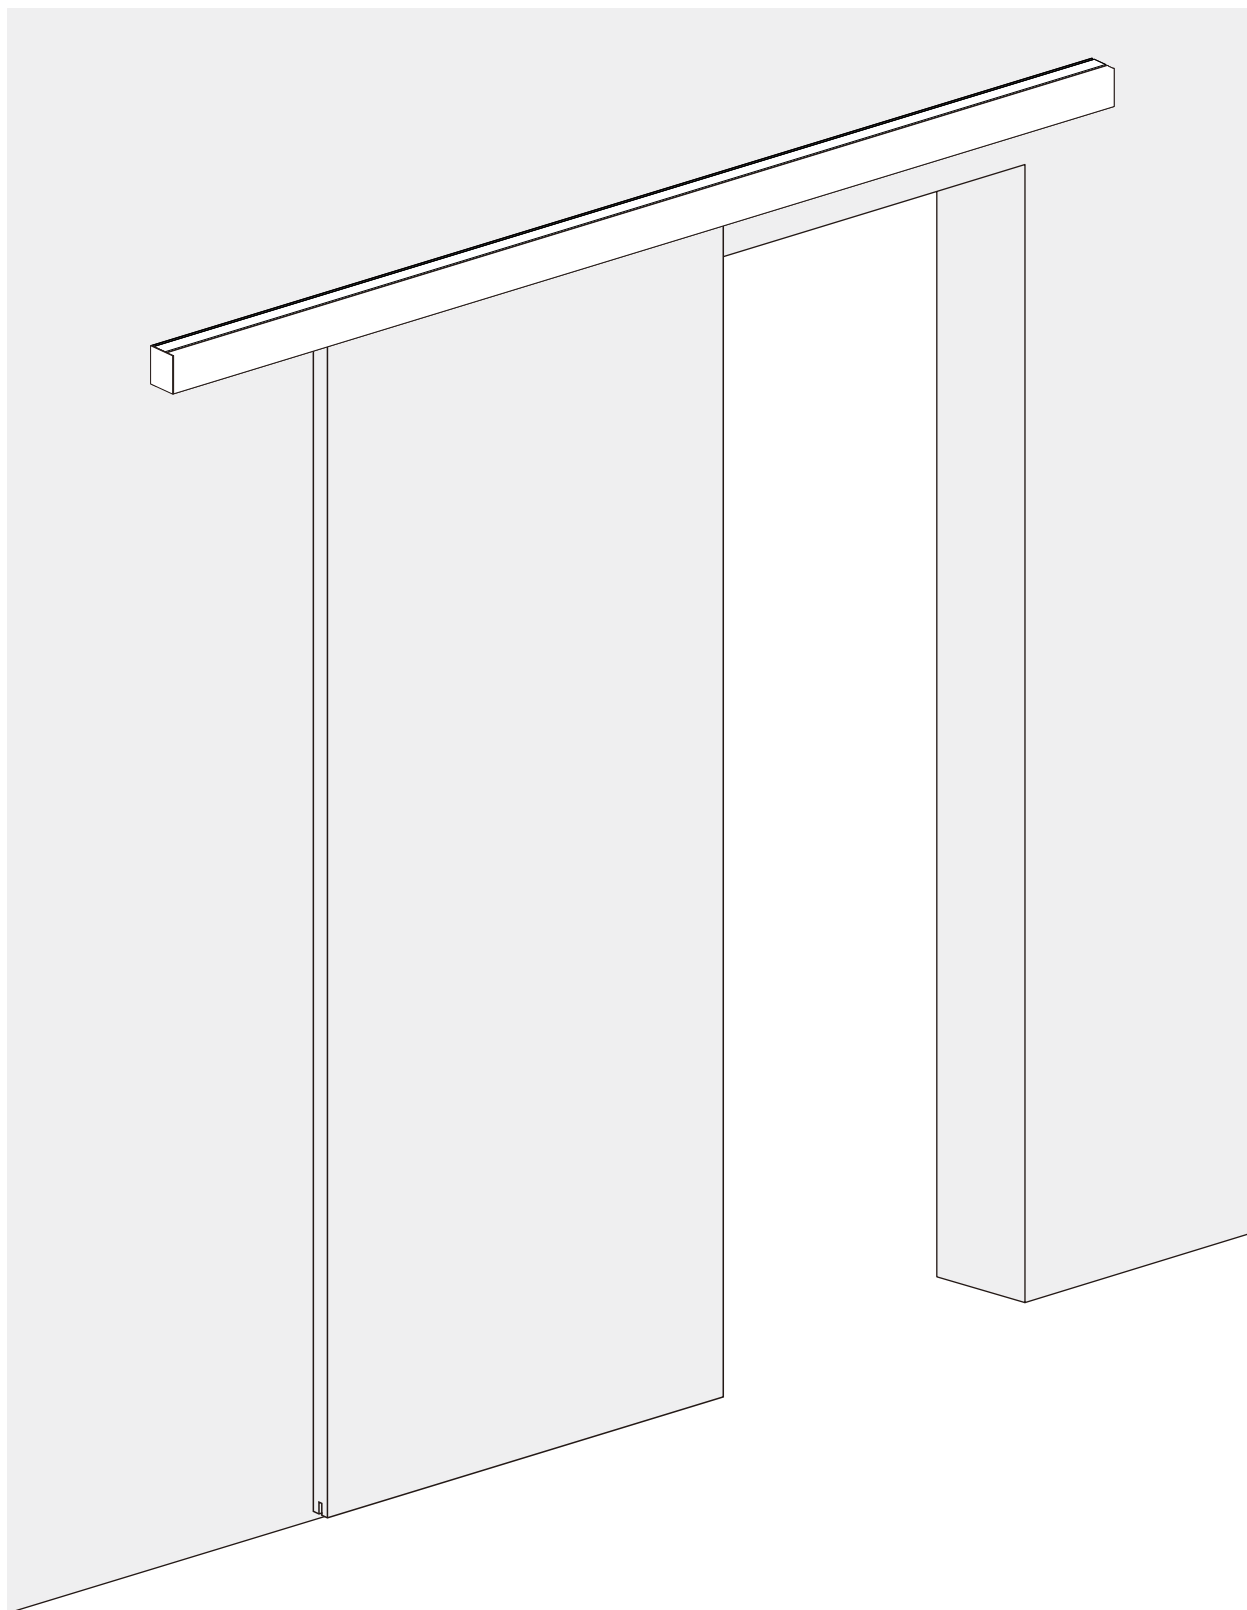


# Installation Manual


---

TSQAL14-6FT



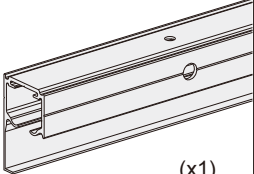
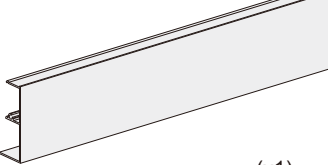
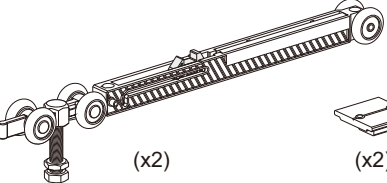

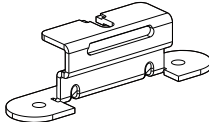



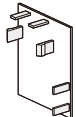
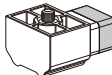
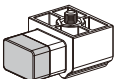
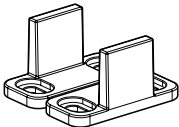





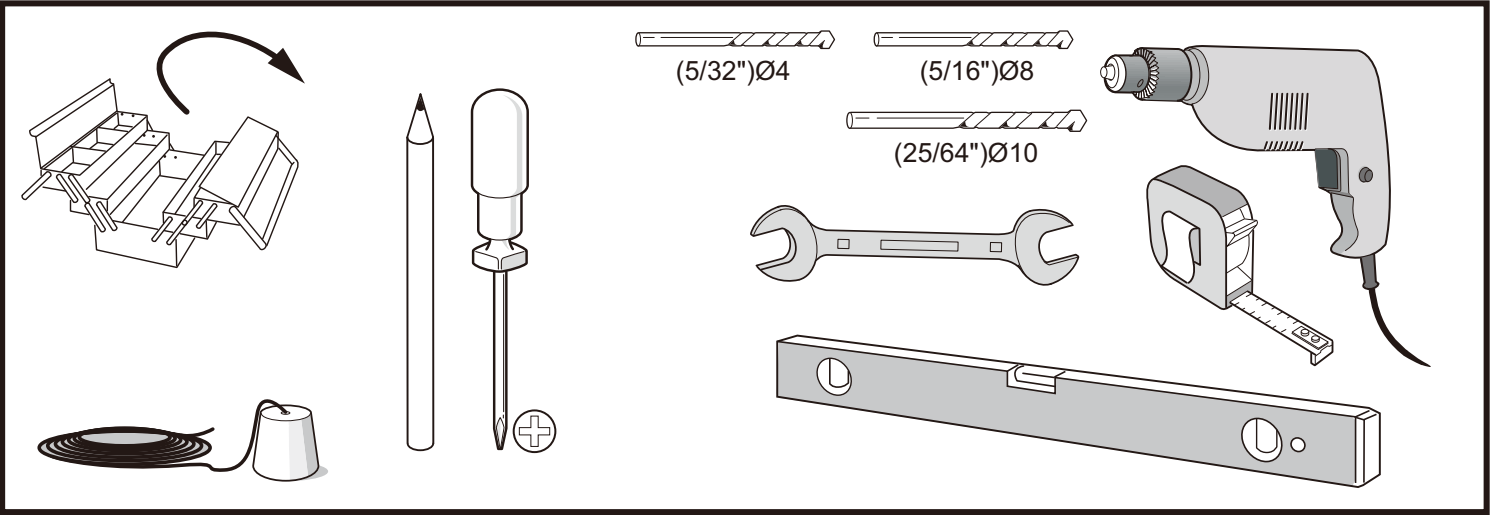

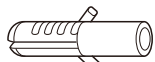





# Pre -installation

## TOOLS REQUIRED

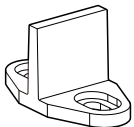


## HARDWARE INCLUDED

 <p>(x5) 25/64" Ø10</p>  <p>(x5) 3/16"x1 31/32" ST4.8x50</p>	 <p>(x1)</p>	 <p>(x1)</p>		 <p>(x2)</p>  <p>(x2)</p>	
 <p>(x2)</p>	 <p>(x4) 1/4x1 1/2" ST6.3x38</p>  <p>(x4) 15/64"x15/32" M6x12</p>	 <p>(x1)</p>	 <p>(x1)</p>	 <p>(x1)</p>	 <p>(x1)</p>
 <p>(x1)</p>	 <p>(x4) 11/64"x63/64" ST4.2x25</p>  <p>(x4) 5/16" Ø8</p>	 <p>(x1)</p>	 <p>(x2) 11/64"x1 3/8" ST4.2x35</p>  <p>(x2) 5/16" Ø8</p>	 <p>(x1)</p>	 <p>(x1)</p>

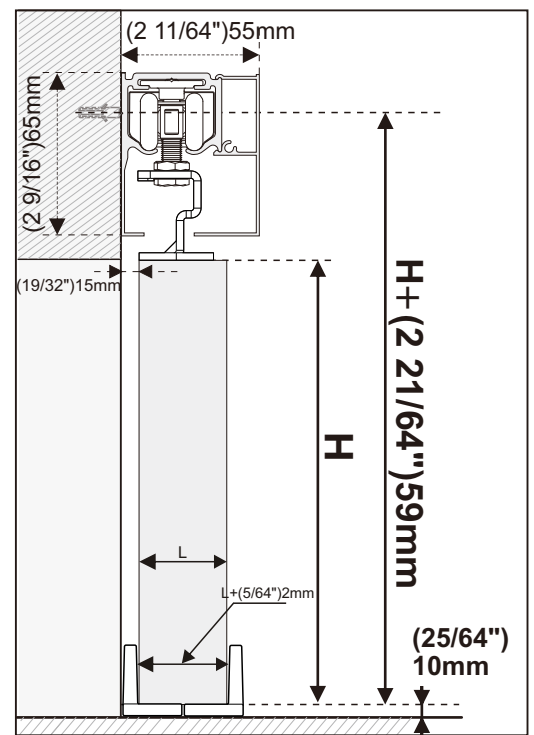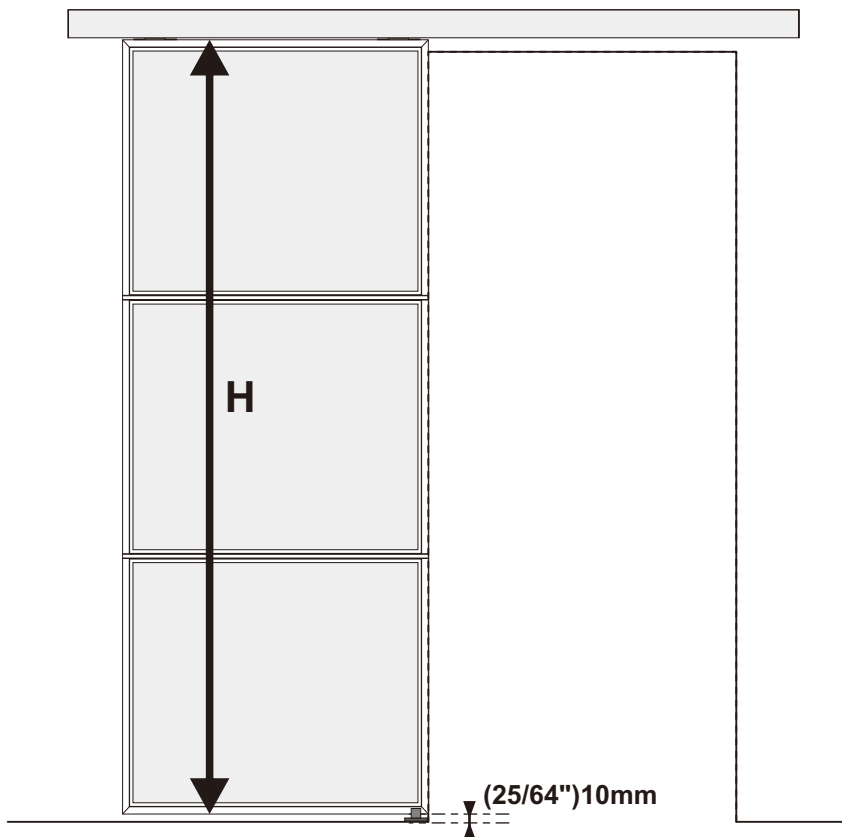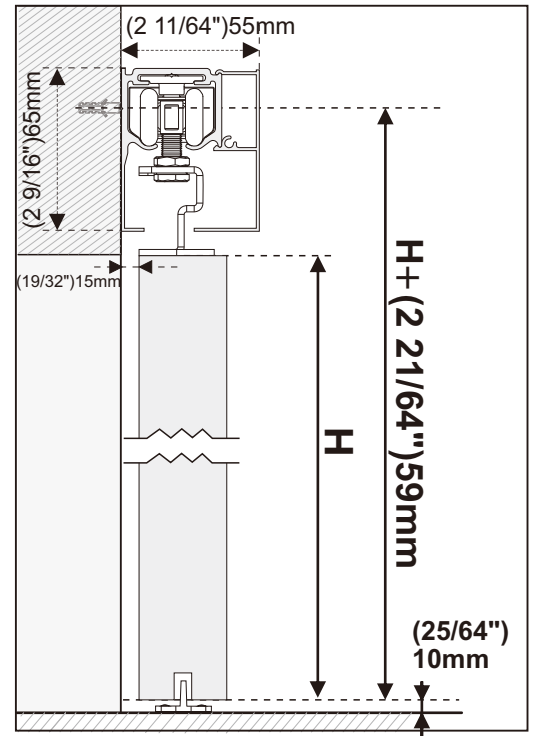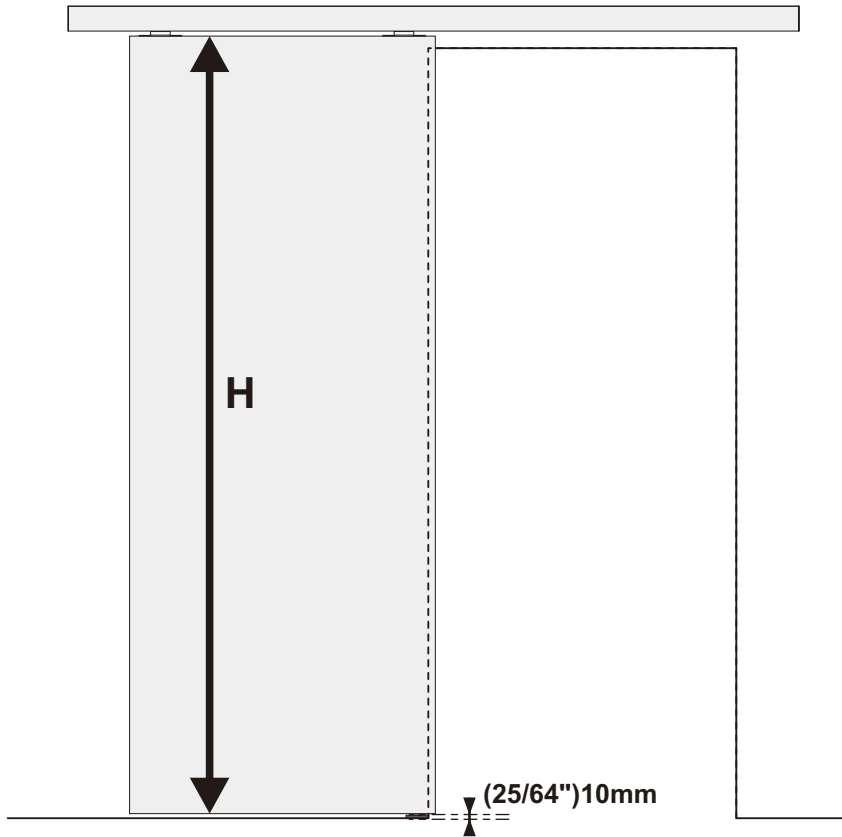


## Step 1. CONCRETE Wall Preparation1

Position the rail in place ensuring that it is level, mark the holes on the rail using a pencil

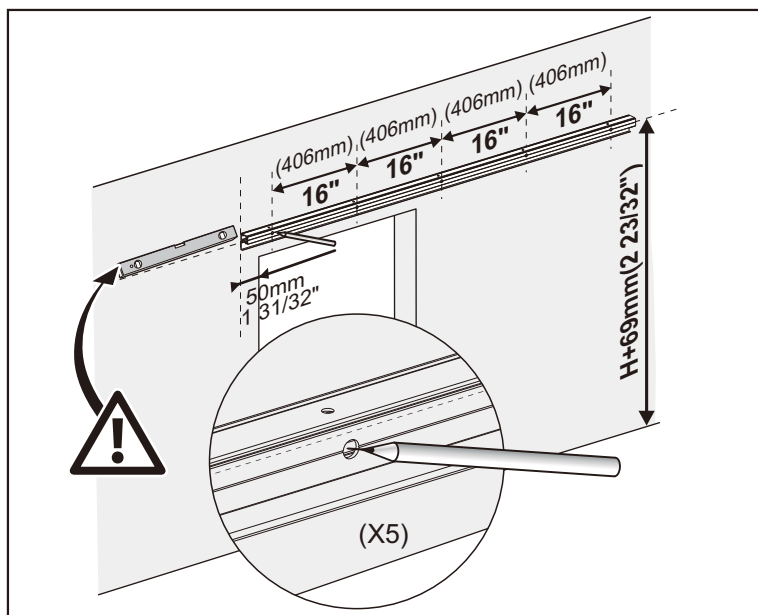


## Step 2. CONCRETE Wall Preparation2

pre-drill 25/64" holes into the concrete.

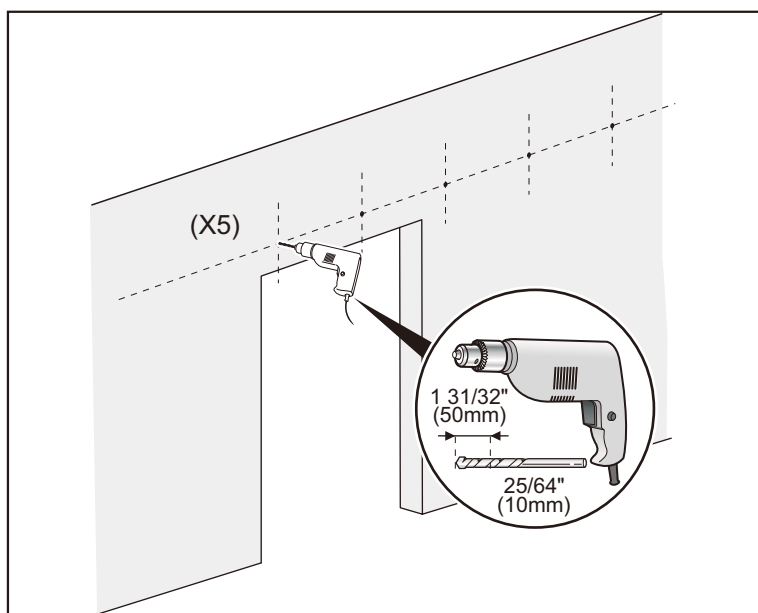


## Step 3. CONCRETE Rail Installation

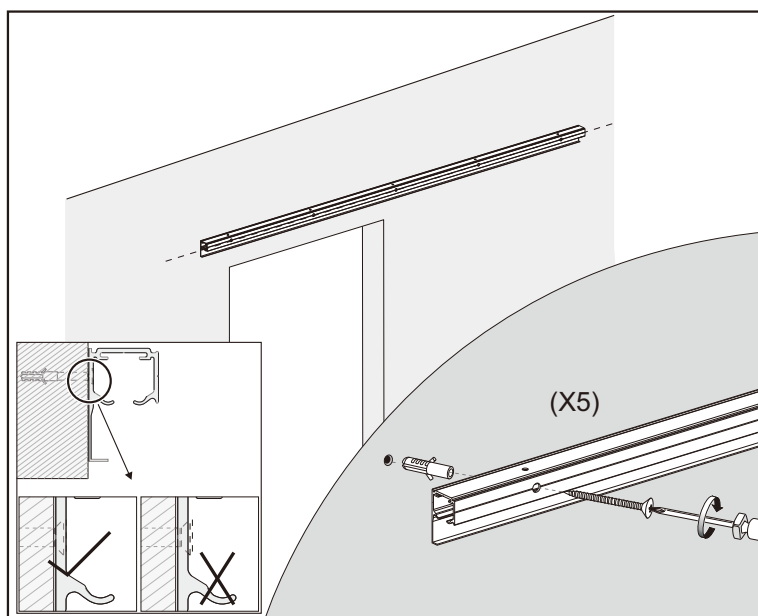


#### Step 4.Adjusting soft close

Adjust the soft close to the proper position by screwdriver

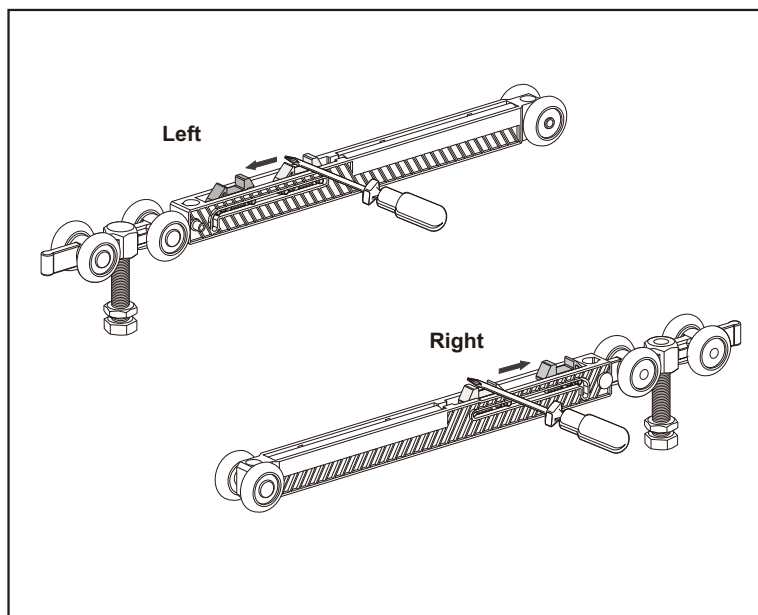


#### Step 5.Install the pulley

Install the pulley into the rail as shown in the picture

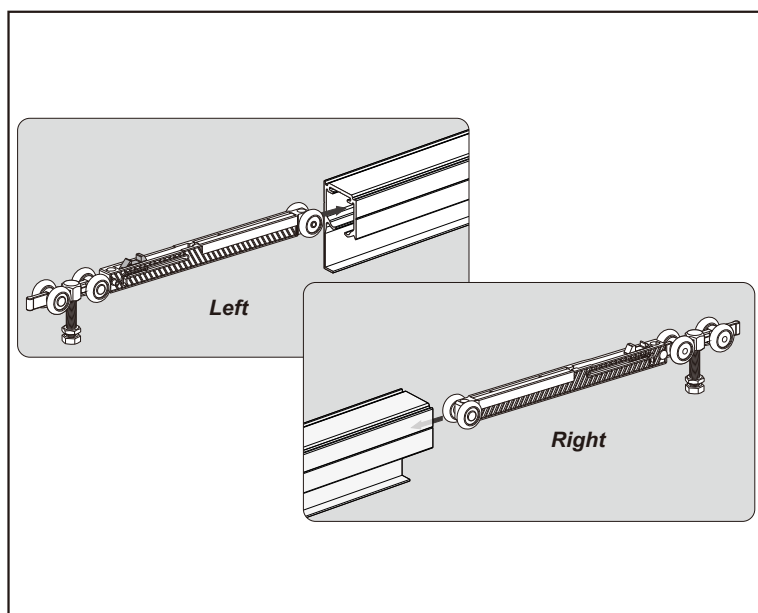


#### Step 6.Install Actuator

Install the actuator into the rail ,then use an allen key to secure the screws to the actuator.

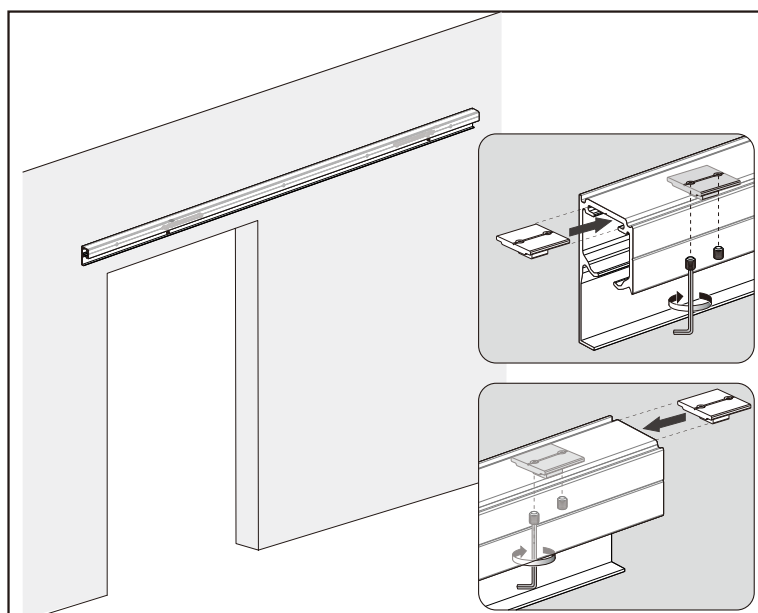


**Step 7.Door Preparation – Strap Installation**

Install the rollers on the top of door

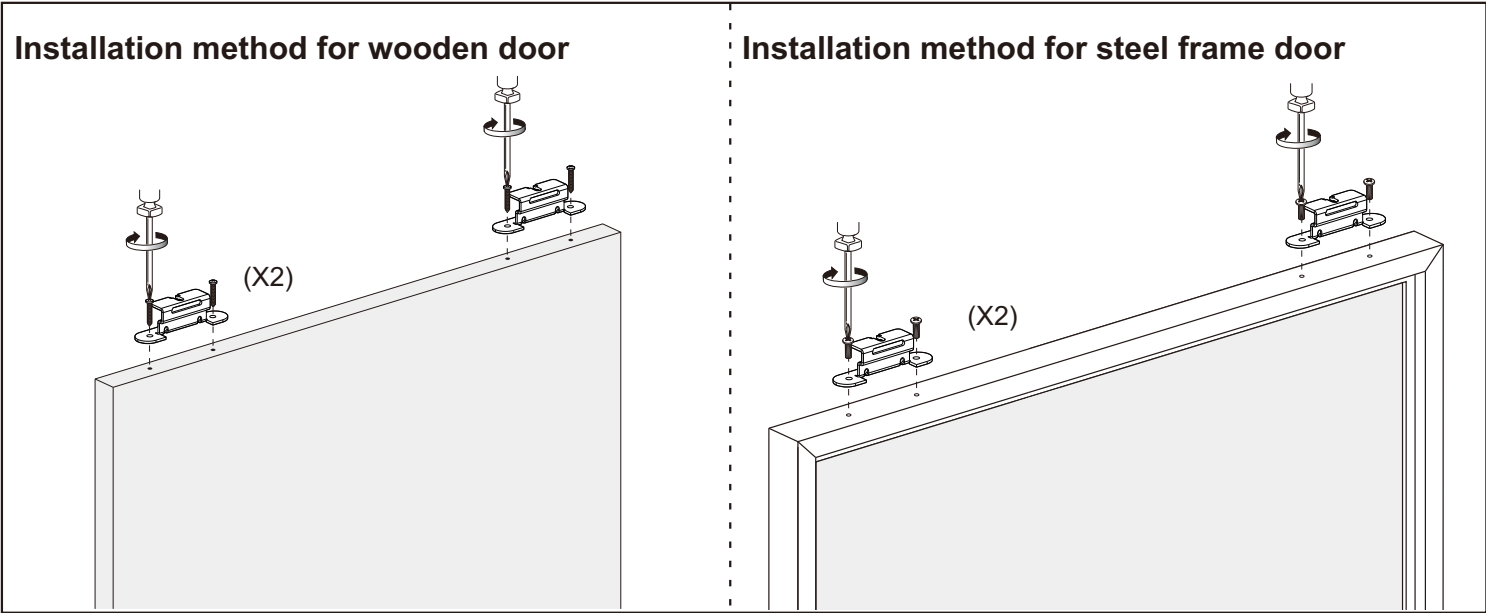


**Step 8.Installation steps of pulley**

Put the door onto the installed pulley, then use the wrench to tighten the screws on the pulley

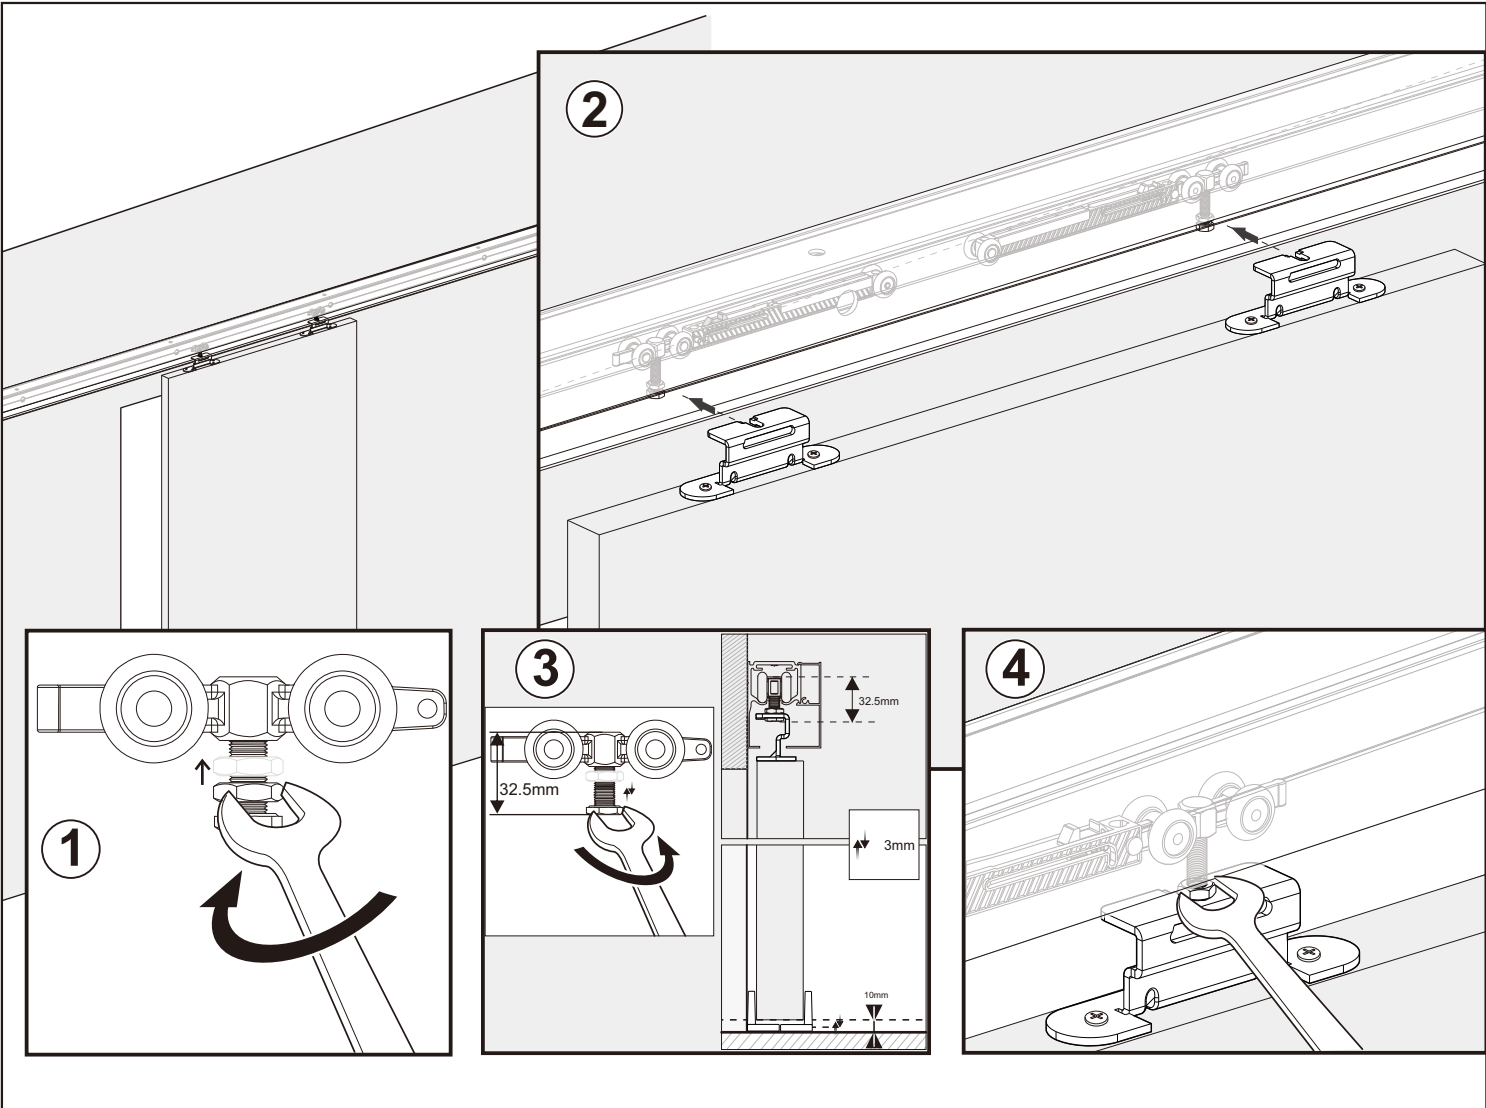


Step 9.Floor-Mounted Door Guide Installation

Once the door is plumb, position the floor-mounted door guide inside the mortised door, line up close to the opening. Slide the door side-to-side to ensure functionality for final placement then mark holes with a pencil and pre-drill 5/16" holes. If drilling directly into a concrete floor, use the provided anchors.

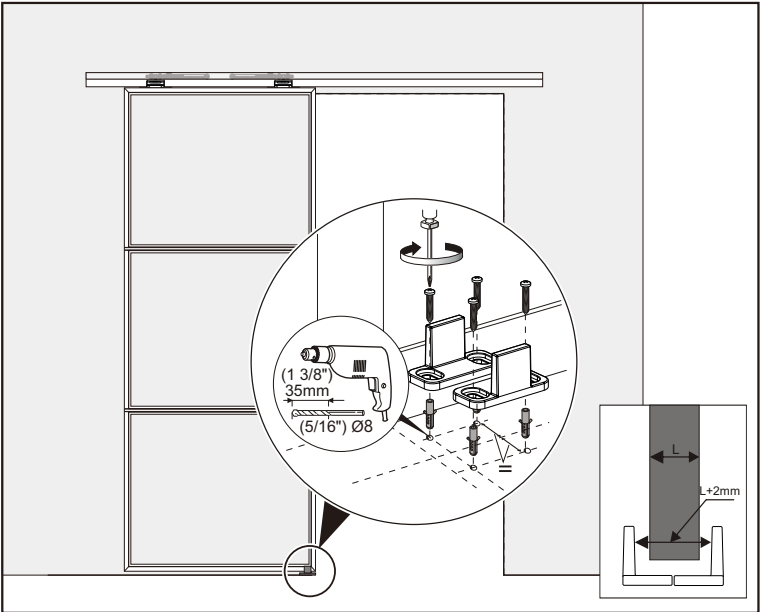









Step 9.Floor-Mounted Door Guide Installation

Once the door is plumb, position the floor-mounted door guide inside the mortised door, line up close to the opening. Slide the door side-to-side to ensure functionality for final placement then mark holes with a pencil and pre-drill 5/16" holes. If drilling directly into a concrete floor, use the provided anchors.

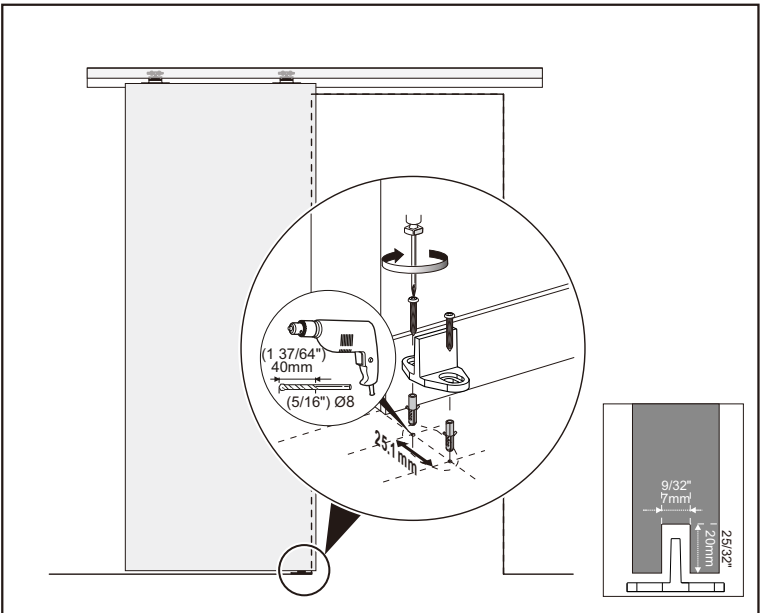

Step 10.Installation of actuator

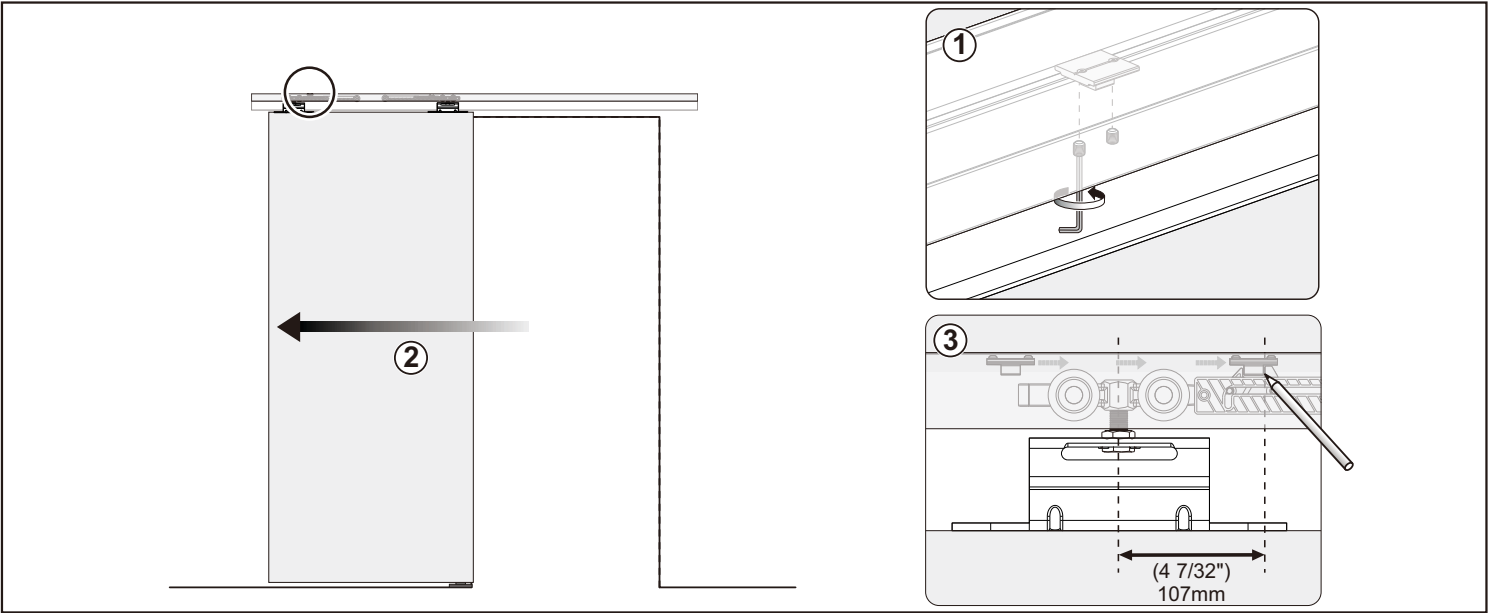


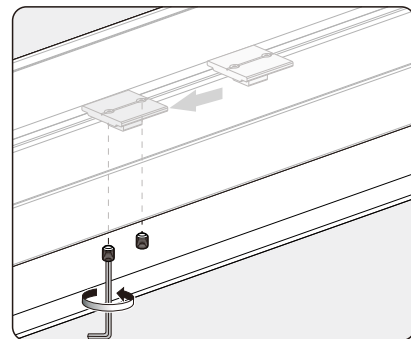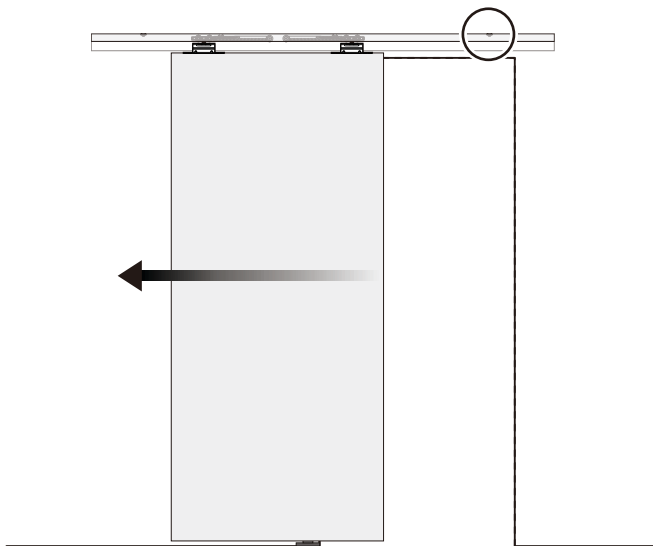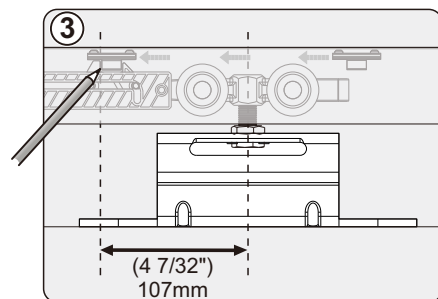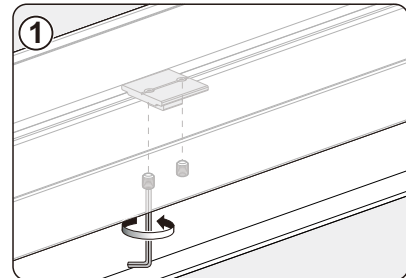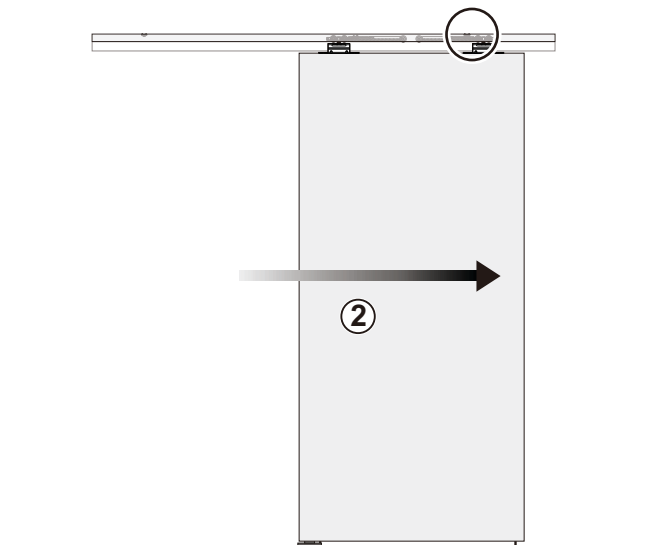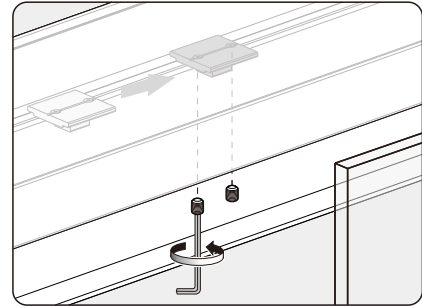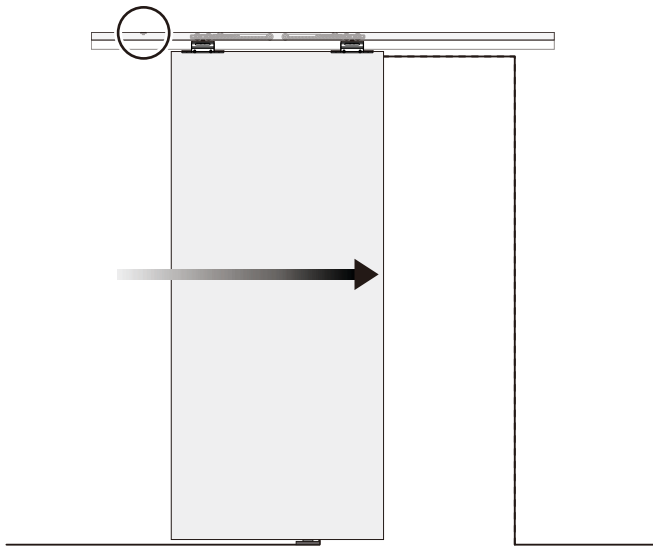




## Step 11. Stopper Installation

Slide the door closed and to correct position of both stoppers. Using the provided Allen key, tighten into position to complete the installation of the Barn Door Kit.

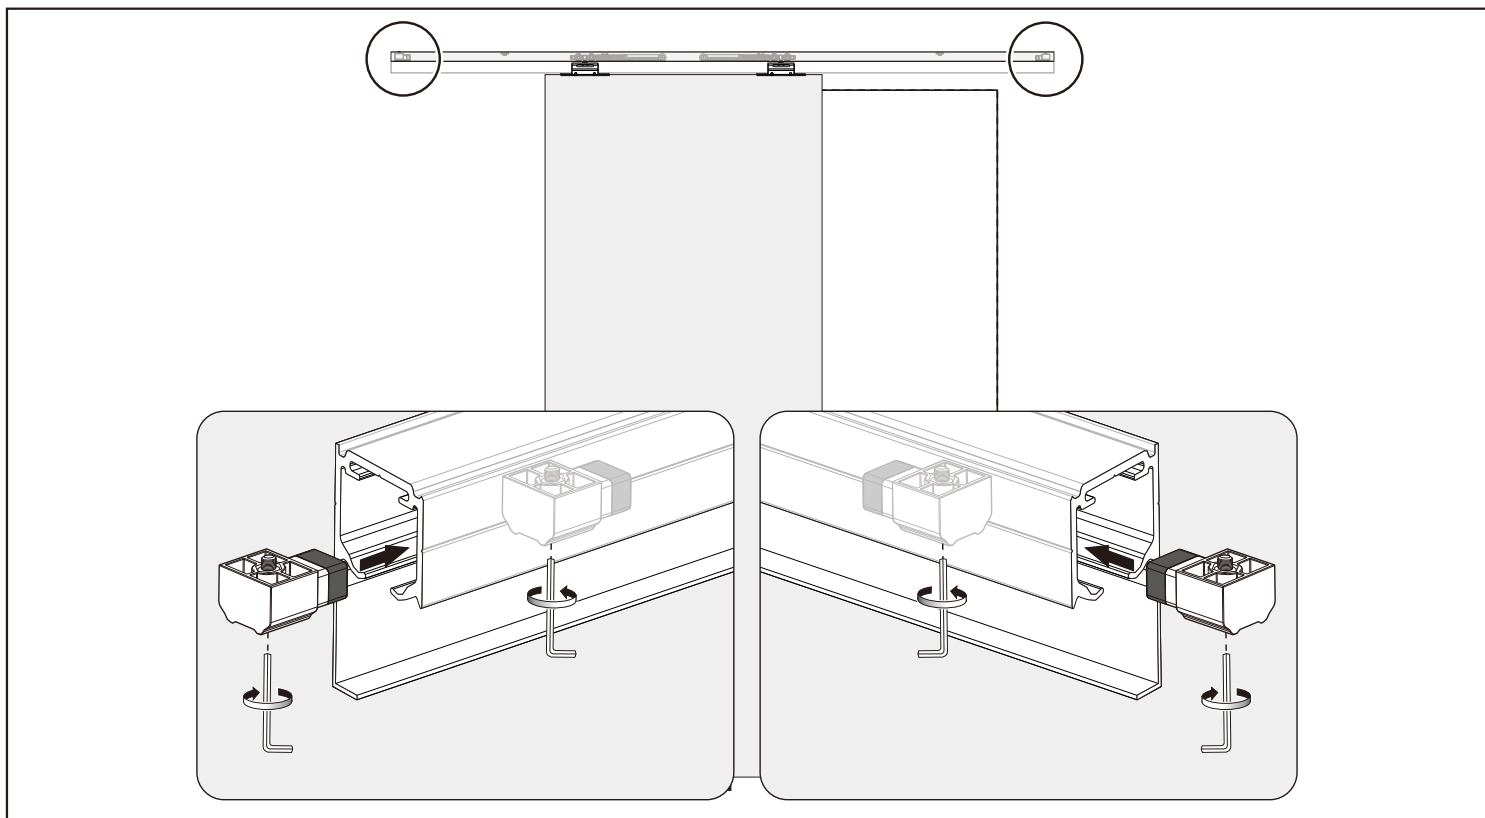

## Step 12. Install the cover

Put the cover onto the rail parallel and align the ends

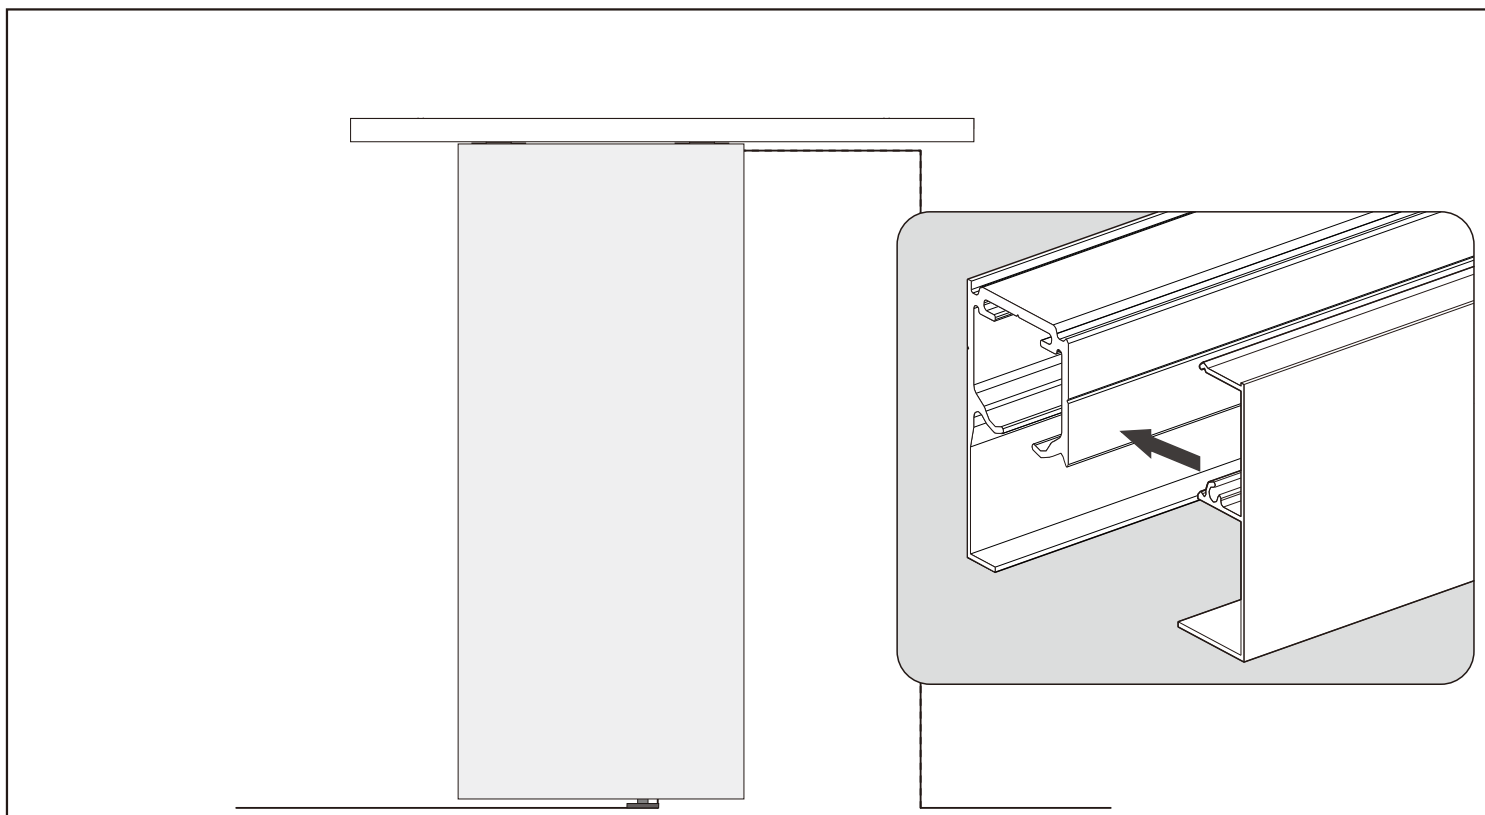

### Step 13. Install sealing piece

Install the sealing piece on both sides of the rail

