

# Quick Installation Guide

Important information BEFORE starting installation

- Allow at least 30 days prior to installation for recently painted walls.
- Make sure surface is clean and even.
- Do not peel entire backing off at once.
- Apply wallpaper immediately after unrolling. If not, roll back until you are ready.

**Necessary materials:** A sharp, blade or cutting blade (such as a utility knife or box cutter), a squeegee, and both, a damp and dry cloth.

**Suggestion:** Use a leveling ruler to ensure first panel is aligned

## 1

Use a damp cloth to clean the surface. Dry moisture with a dry cloth. Allow time for drying and make sure it is dry prior to starting the application.




## 2

Place the wallpaper face-down on a flat surface. Pull the liner down about 6" and cut the liner. Start applying wallpaper from the top corner of the wall. Stick a little above of the top of the wall.



## 3


Use a squeegee to smooth out the paper as you go. Remember to smooth from the center outwards. If wrinkles or bubbles appear simply peel back and reapply that section.

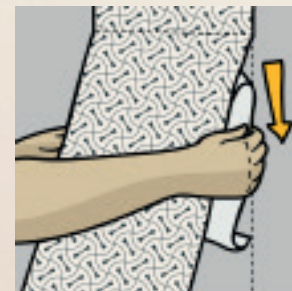

## 4



Repeat steps 2 to 5 with the remaining panels. This time be sure to match the design. You should expect up to 1/2 inch of overlapping.

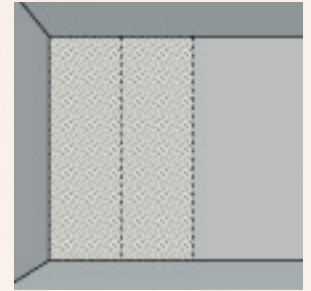

## 5

After applying wallpaper to all of the walls, trim excess wallpaper on the top and bottom of each wall using a sharp blade.



Do not know what to do with your leftover wallpaper? Here are some suggestions of where to apply it:

- Trays
- Cabinets
- Doors
- Bookshelves