




Assembly Instructions

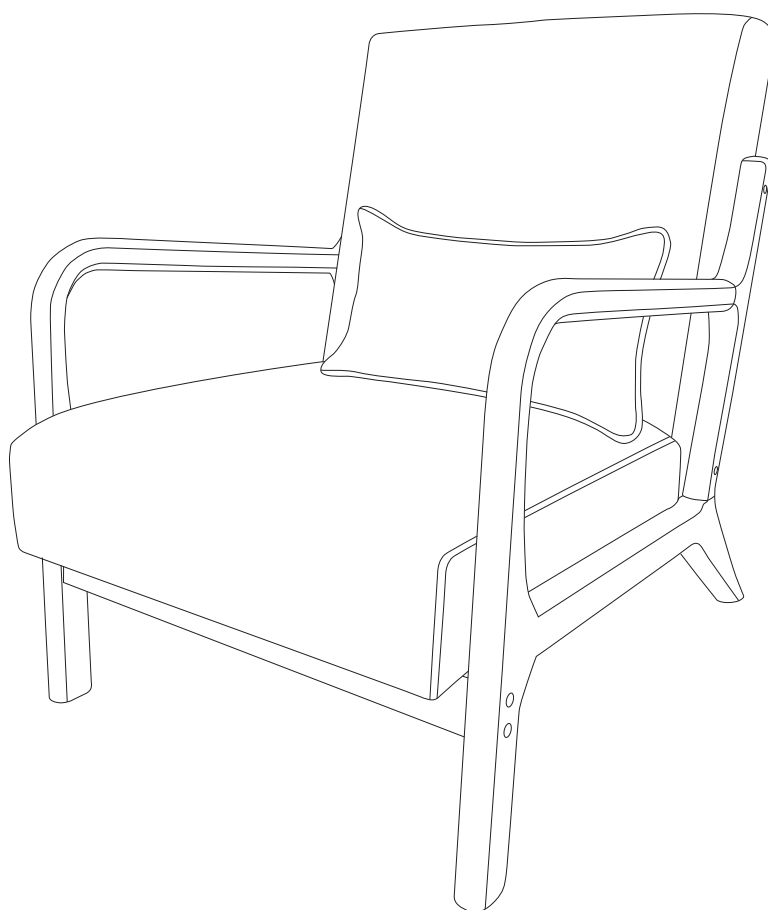


PARTS CHECKLIST




Ax1PC



Bx1PC



Cx1PC

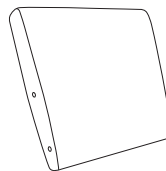

Dx1PC



Ex1PC



M8*60

Fx10PCS



22*8*2

Gx2PCS



Hx1PC



Ix8PCS




Jx2PCS




Kx2PCS




Lx1PC

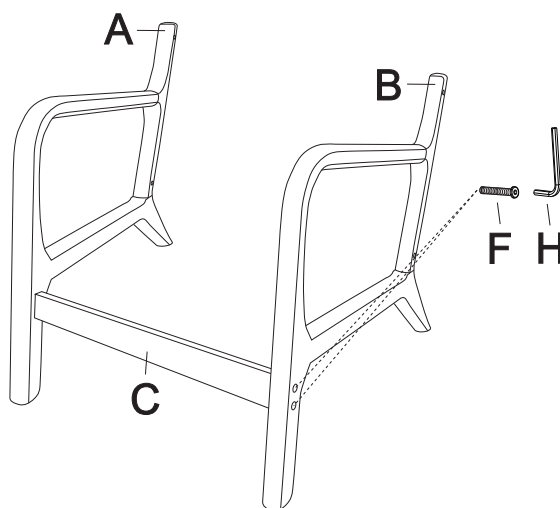


Step 1: Connect Crosspiece [C] to Armrests [A] and [B] with Screw [F]. And tighten them by 60%.

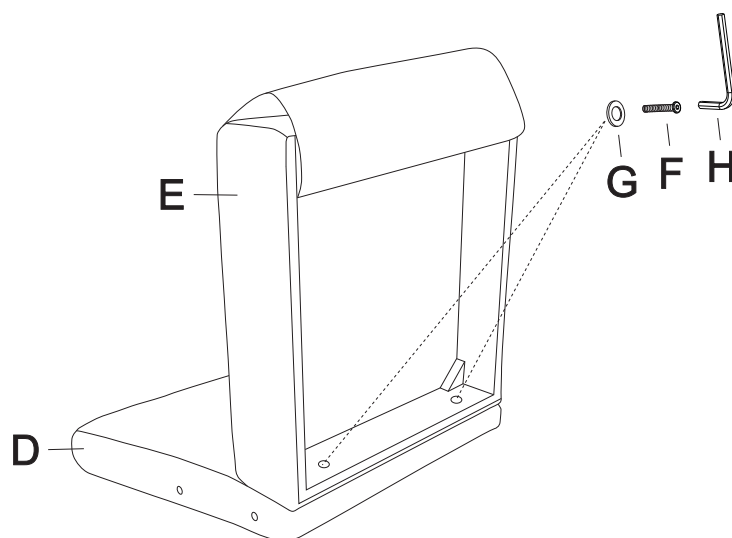


Step 2: Connect Backrest [D] to the Seat [E] with Screw [F]. Tighten them by 60%.

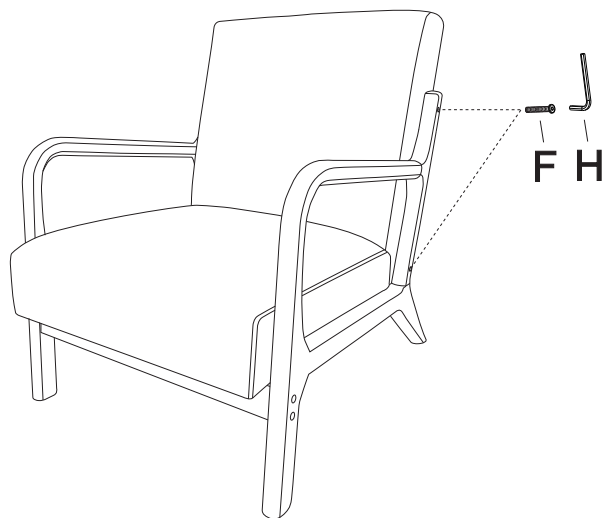


Step 3: Connect Armrests [A] and [B] to the Backrest [D] with Screw [F]. Tighten them by 60%.

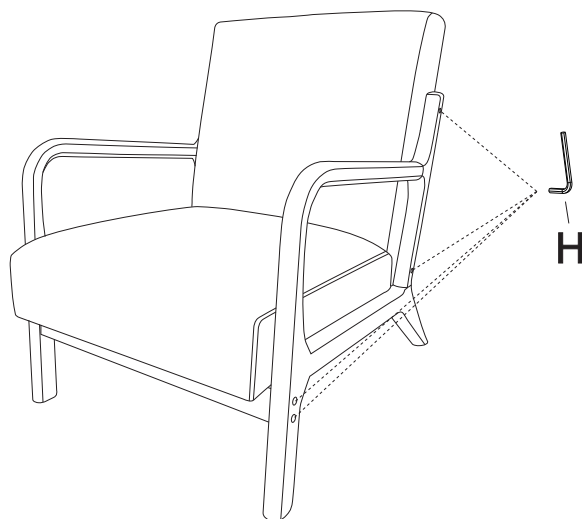


Step 4: Make sure the accent chair is leveled on the ground. Then tighten all the screws by 100%.

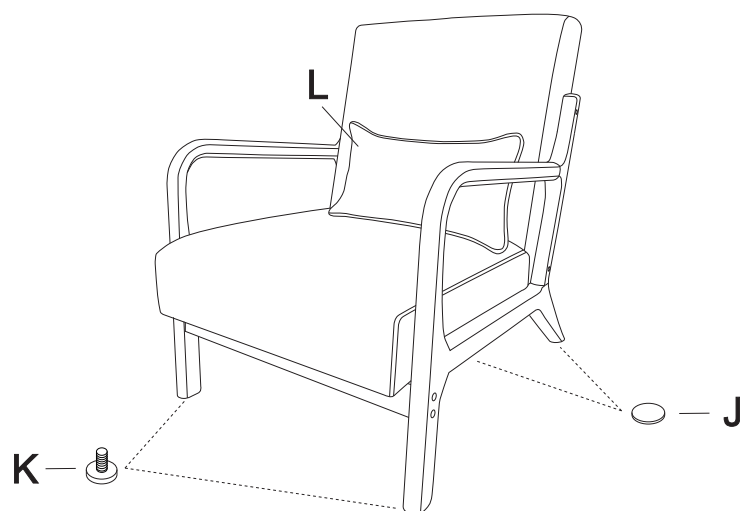

Step 5: Install the adjusting nails [J] to the bottom of them.

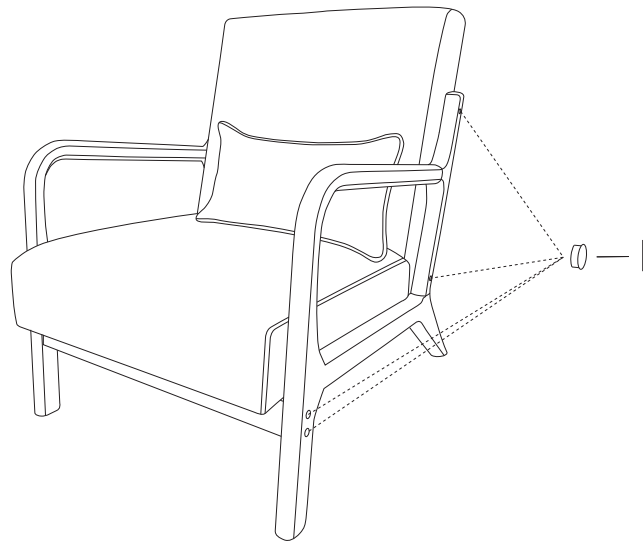

Step 6: Put the hole caps [I] into the screw holes.

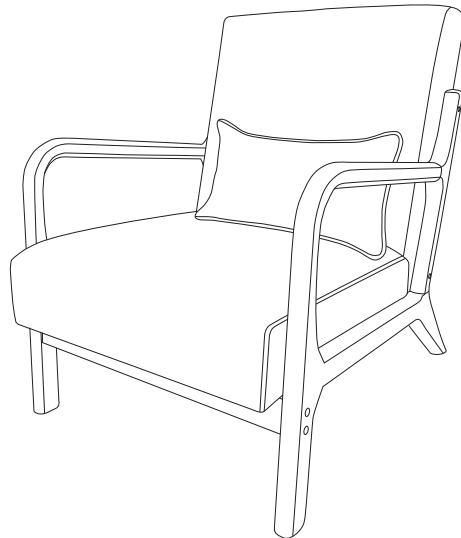

Step 7: Enjoy your new Accent Chair!