



Installation & Assembly

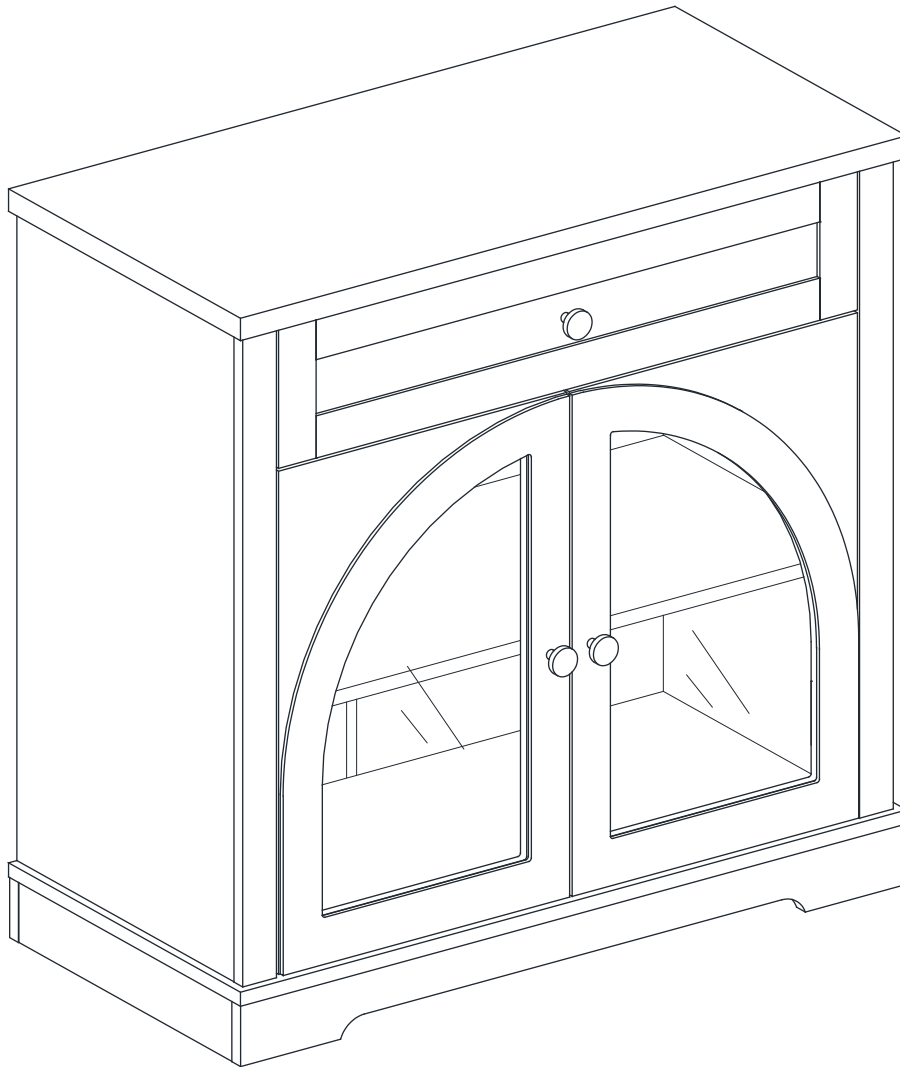


 WARNING	
	This product is NOT a Clothing Storage Unit (CSU). DO NOT use it for clothing storage. Improper use may cause furniture tipover.















1.Note:This is not clothing storage cabinet and it is not recommended to use it as a clothing storage cabinet.

2.All cabinets come with TRO, stainless steel or our "L-Bracket" when shipped.

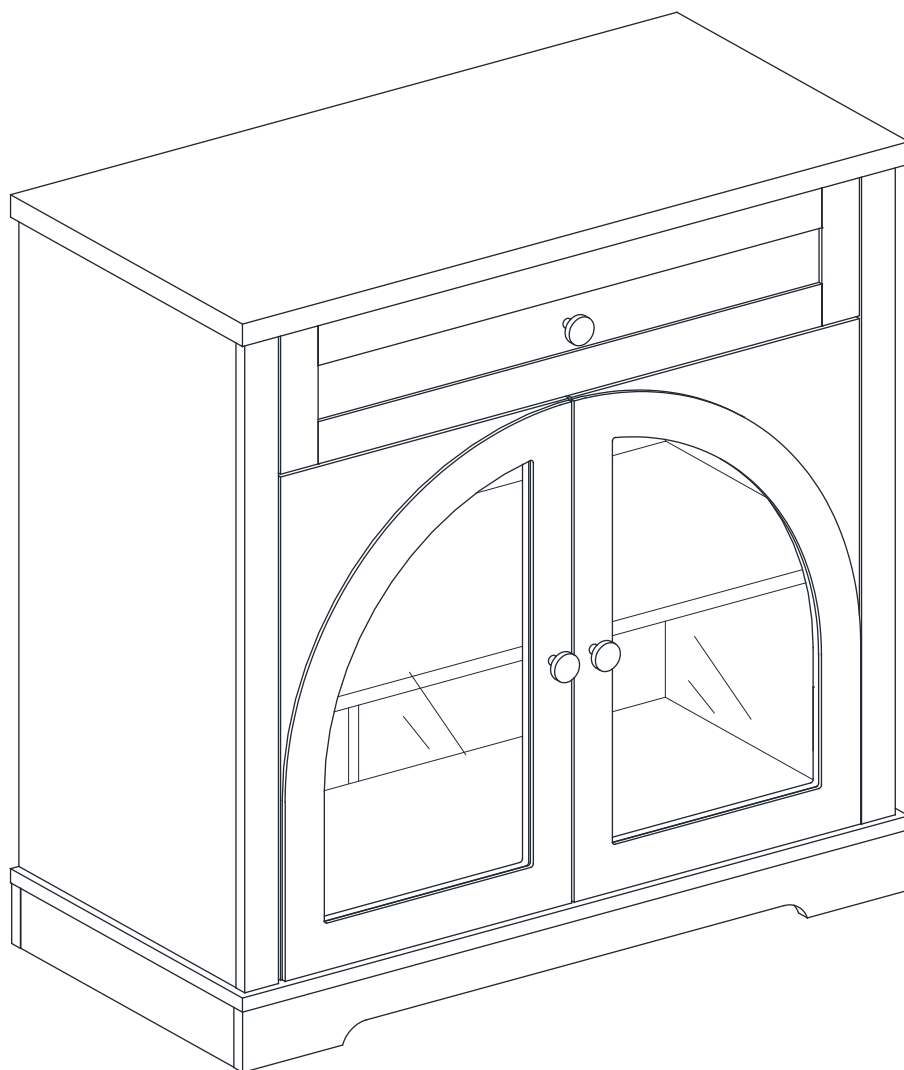


Part List

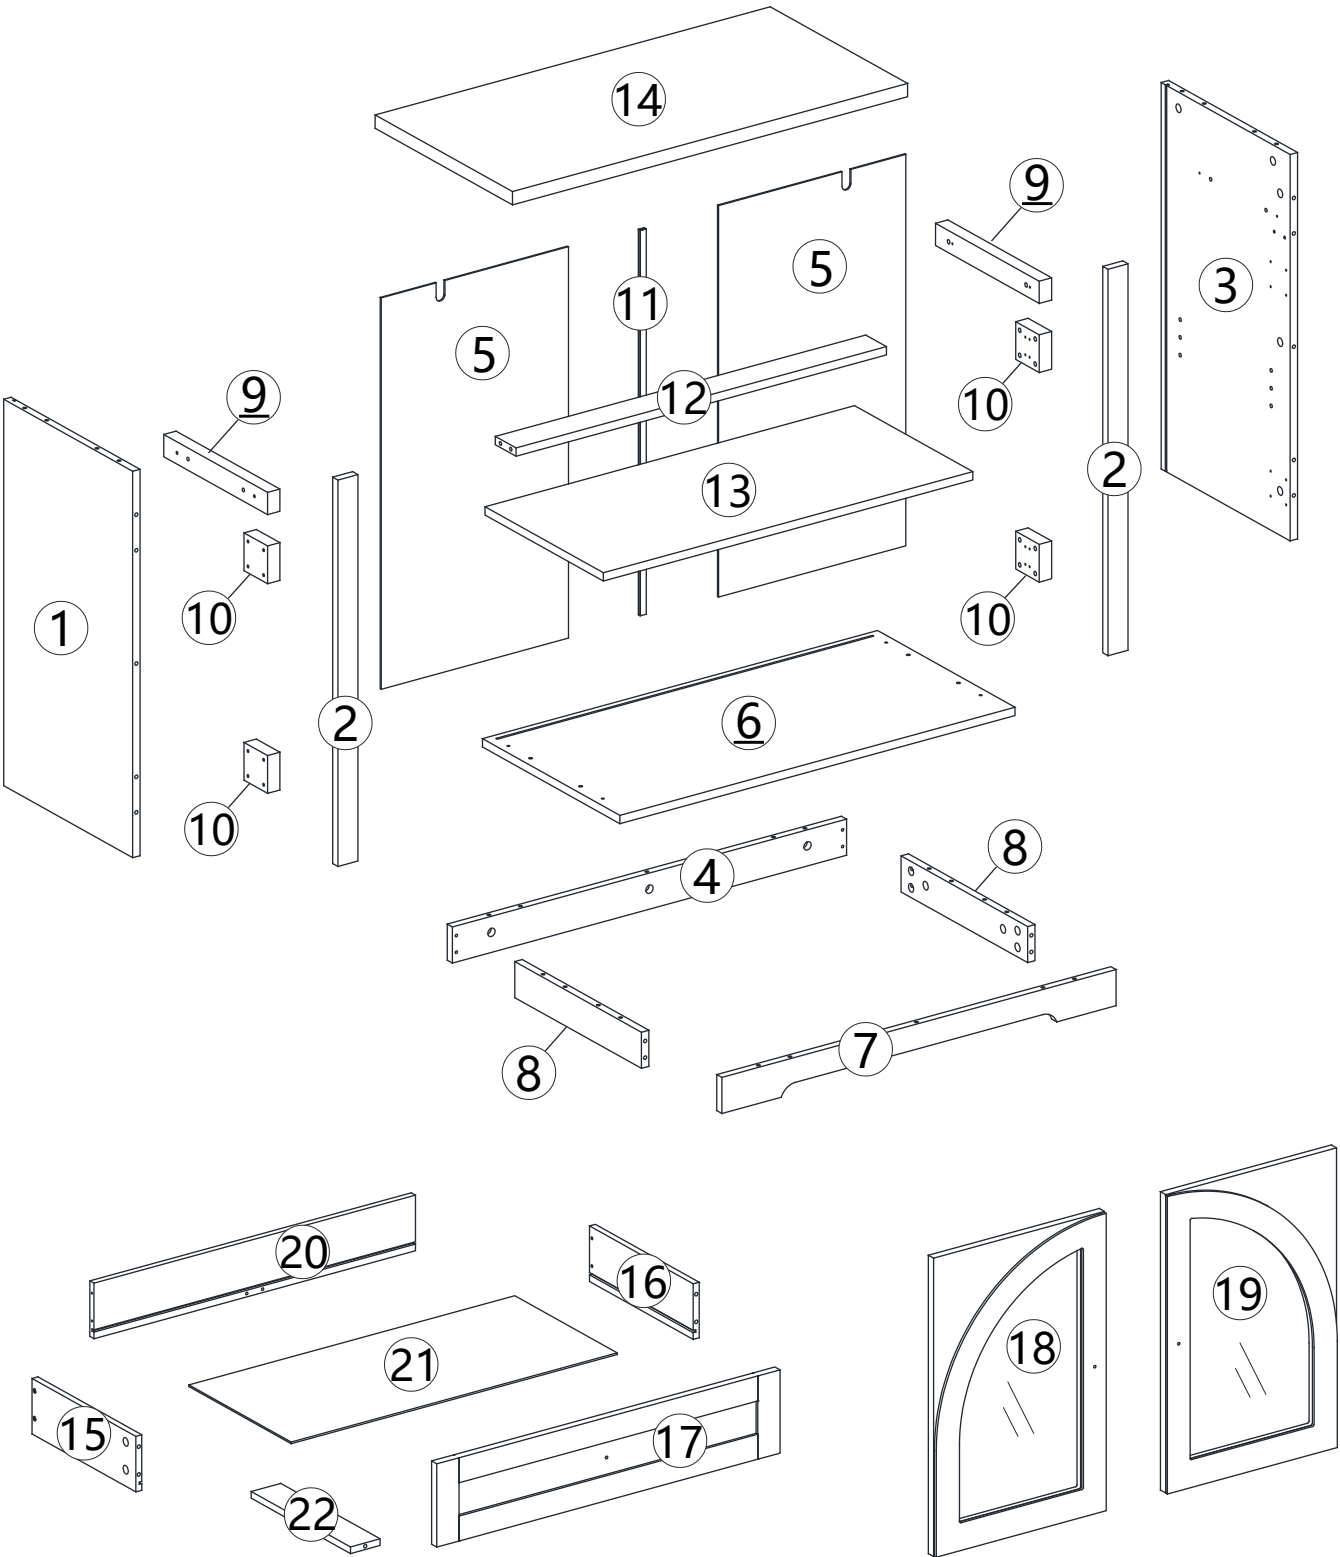

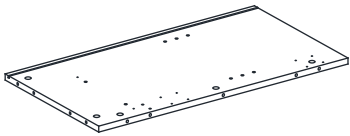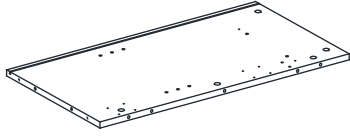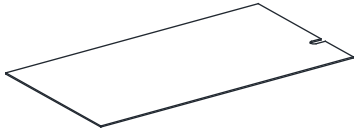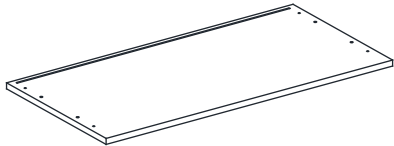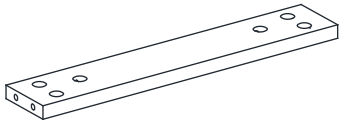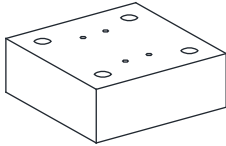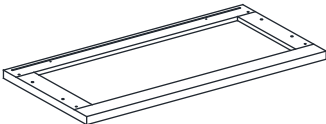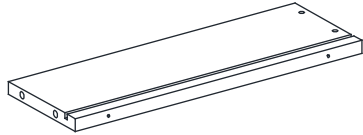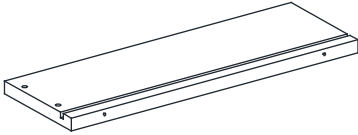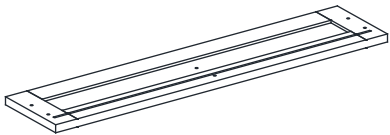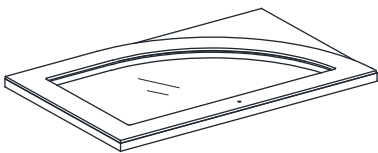
①  ×1PC	②  ×2PCS	③  ×1PC
④  ×1PC	⑤  ×2PCS	⑥  ×1PC
⑦  ×1PC	⑧  ×2PCS	⑨  ×2PCS
⑩  ×4PCS	⑪  ×1PC	⑫  ×1PC
⑬  ×1PC	⑭  ×1PC	⑮  ×1PC
⑯  ×1PC	⑰  ×1PC	⑱  ×1PC

19

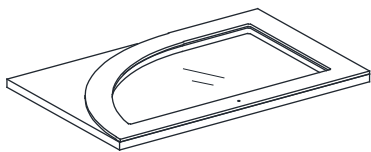

×1PC

20

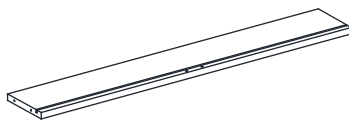


×1PC

21











×1PC



22



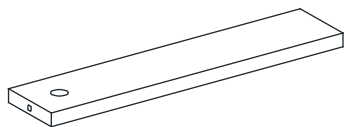






×1PC

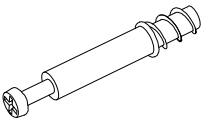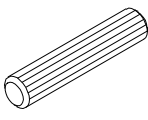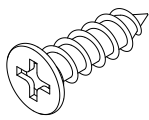A	×37	B	×37	C	×24	D	×8
							
Ø6*35mm		Ø15*10mm		Ø6*30mm		Ø7*3.5*12mm	

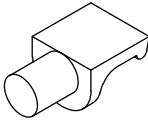
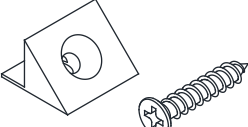
E	×4	F	×24	G	×4	H	×8
							
		Ø7.2*3.5*14mm				Ø3*16mm	

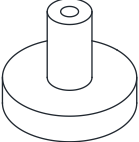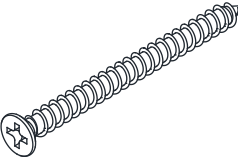
I	×3	J	×1	K	×2	L	×4
							
		M4*10mm		M4*25mm		Ø4*40mm	

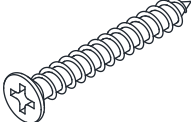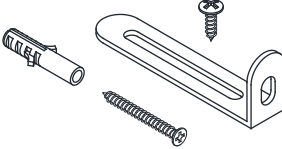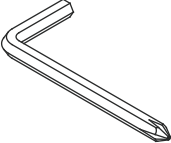M	×26	N	×6	O	×2	P	×1
							
Ø4*30mm		40*12*3mm				S4	

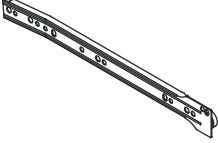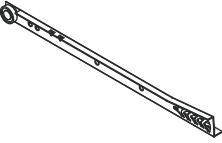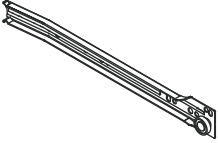
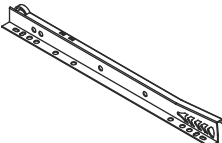
CL	×1	DL	×1	CR	×1	DR	×1
							
300mm		300mm		300mm		300mm	

Step 1

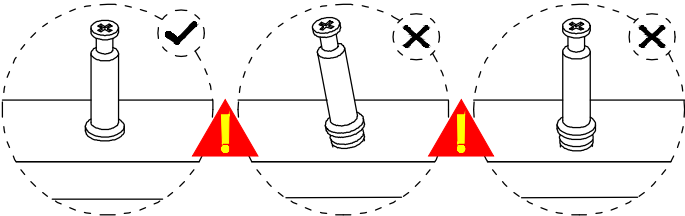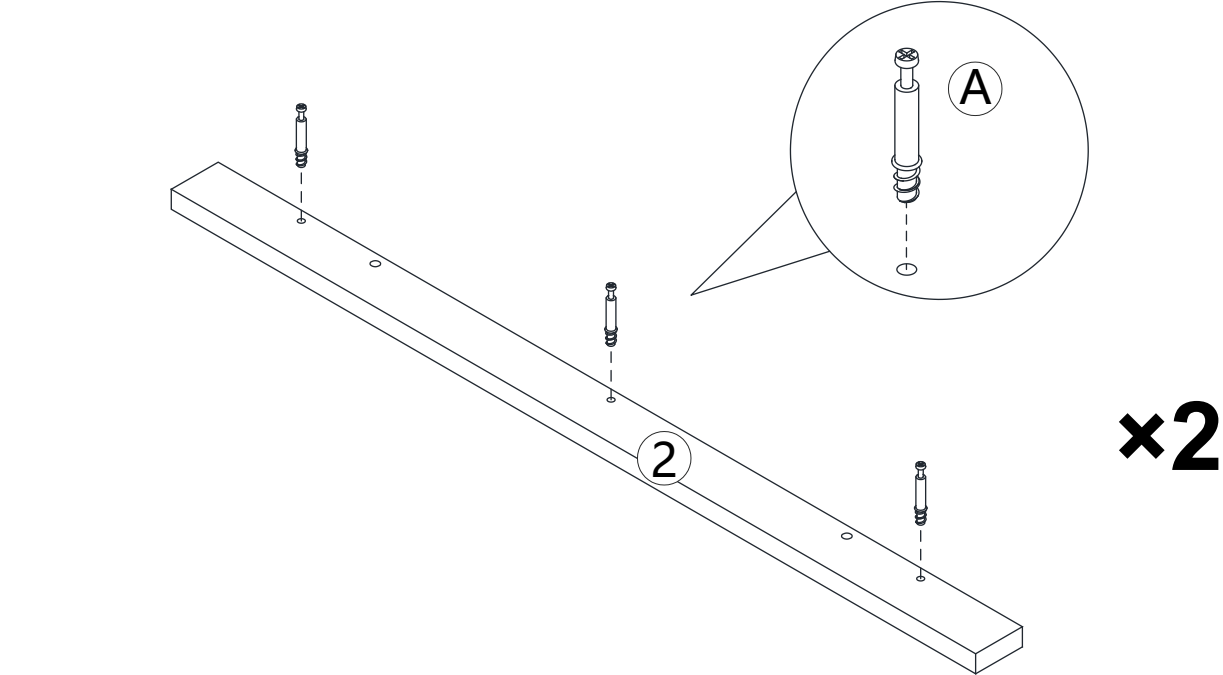


A	x6
	
Ø6*35mm	


Step 2

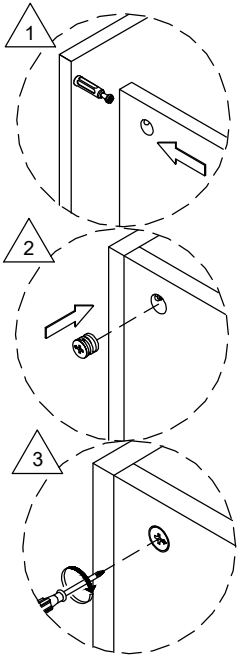
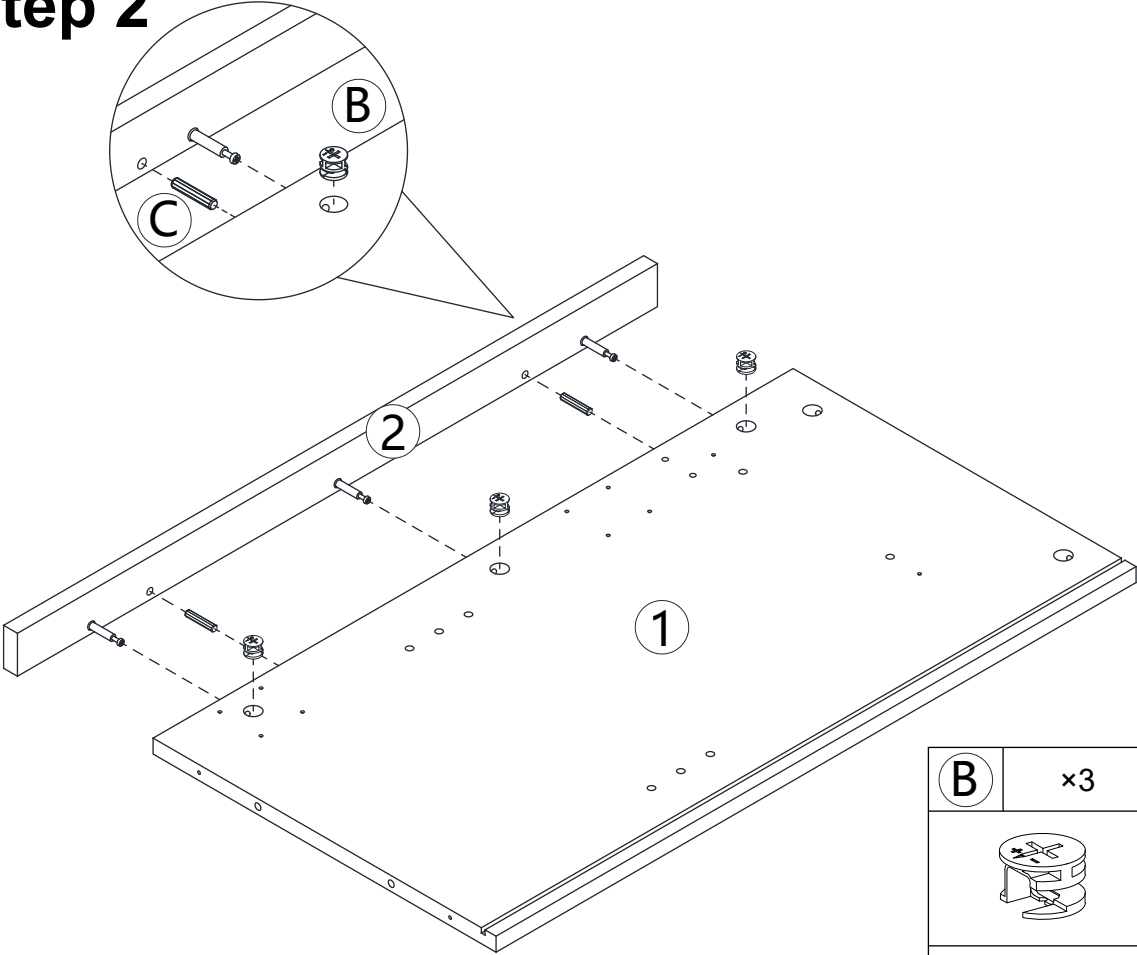


B	x3
	
Ø15*10mm	


C	x2
	
Ø6*30mm	



Step 3

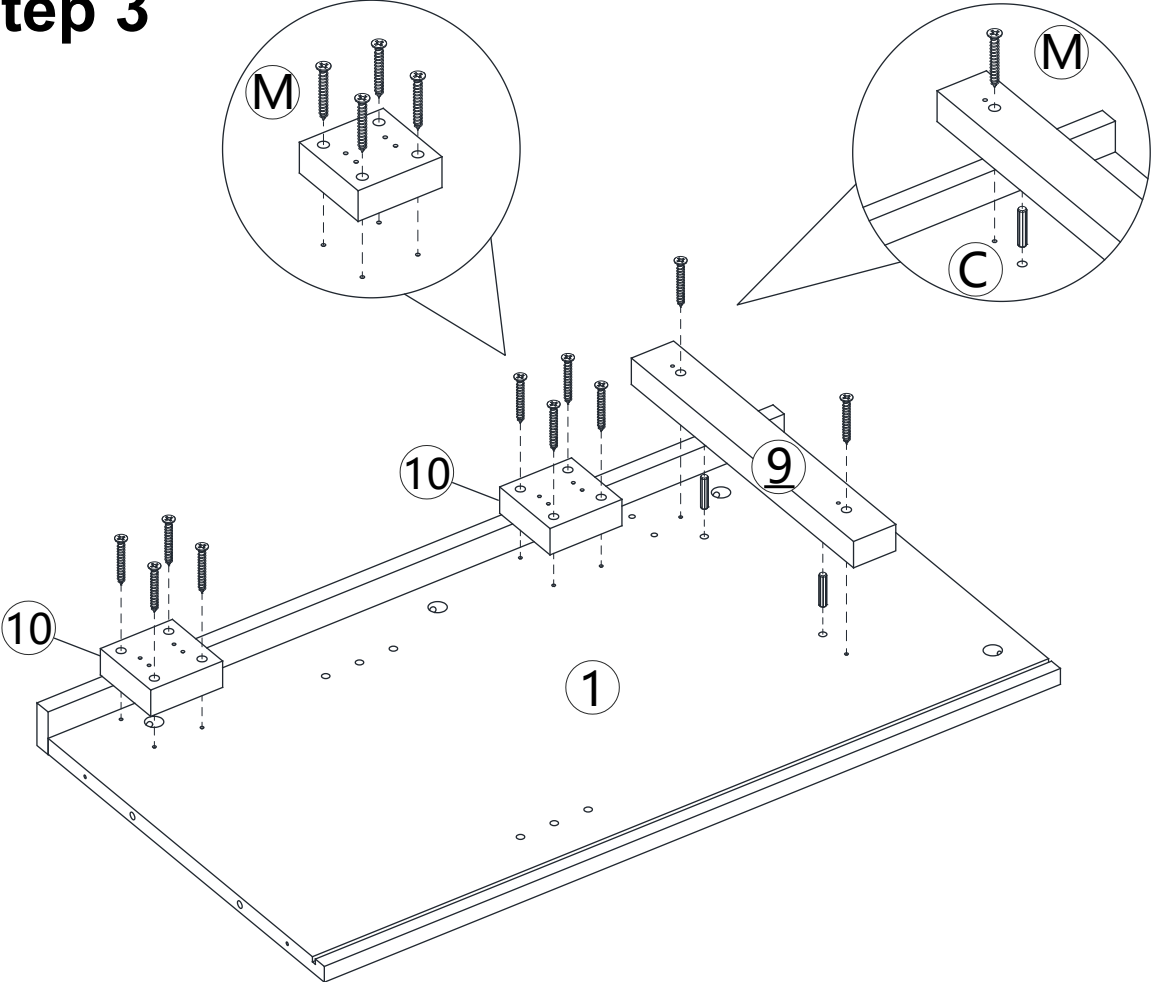


C	×2
	
Ø6*30mm	
M	×10
	
4*30mm	

Step 4

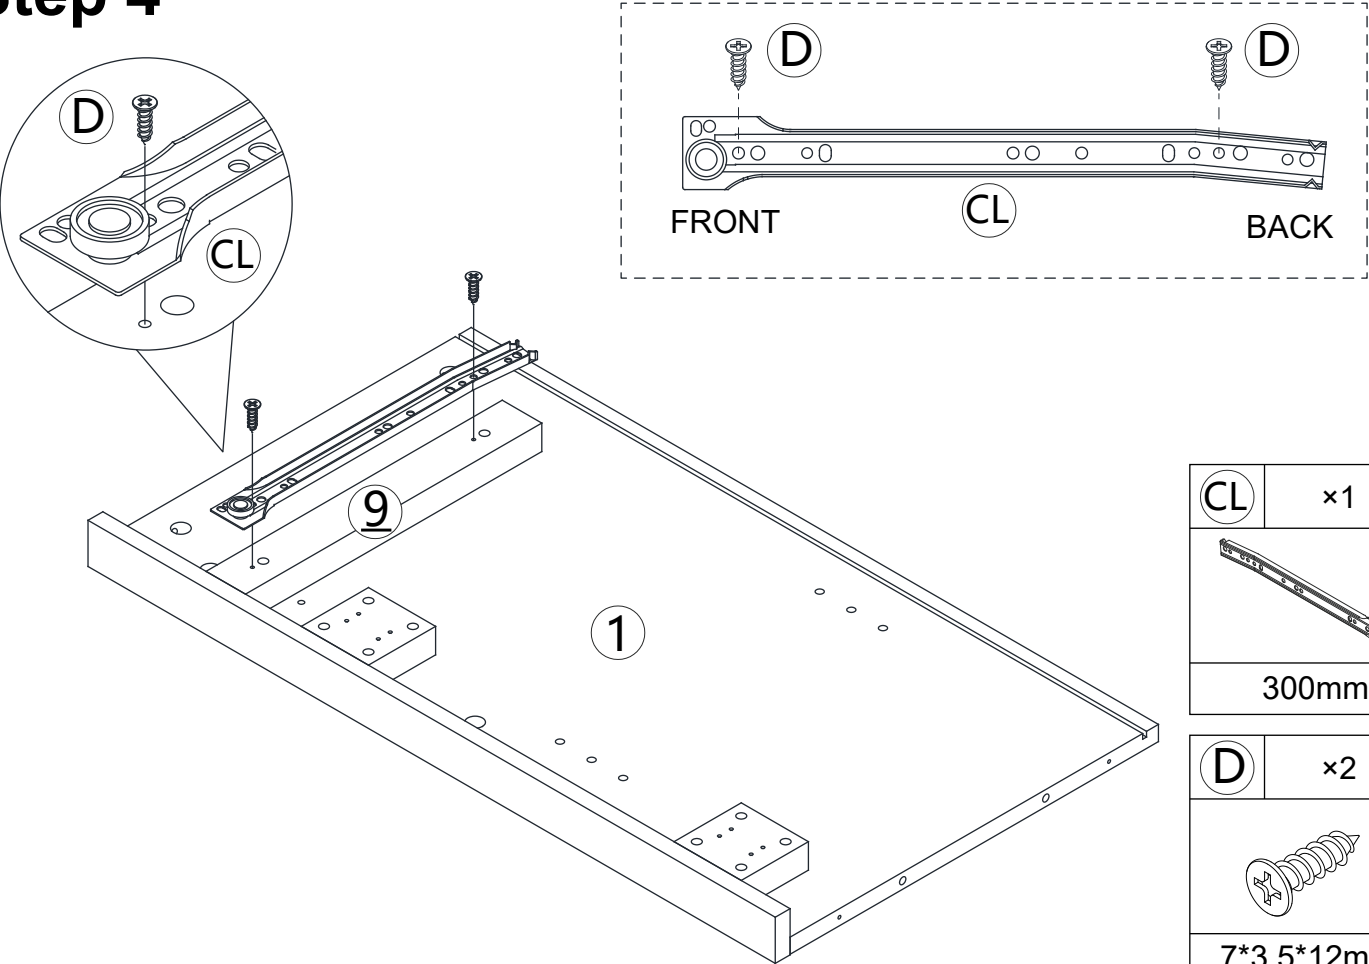


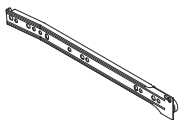CL	×1
	
300mm	
D	×2
	
7*3.5*12mm	


Step 5

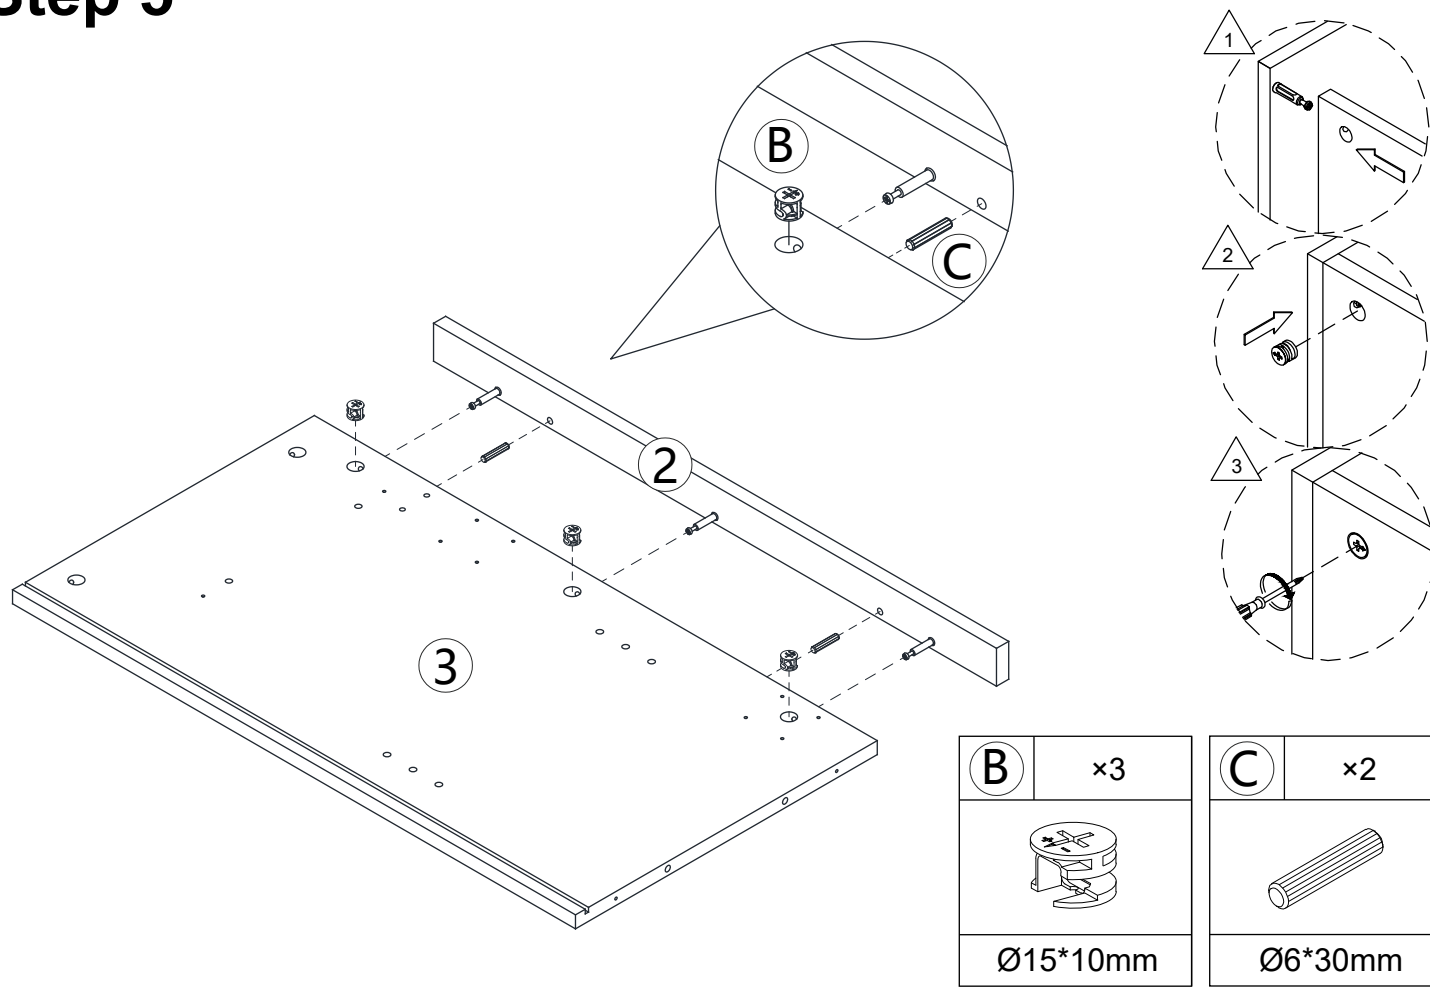

Step 6

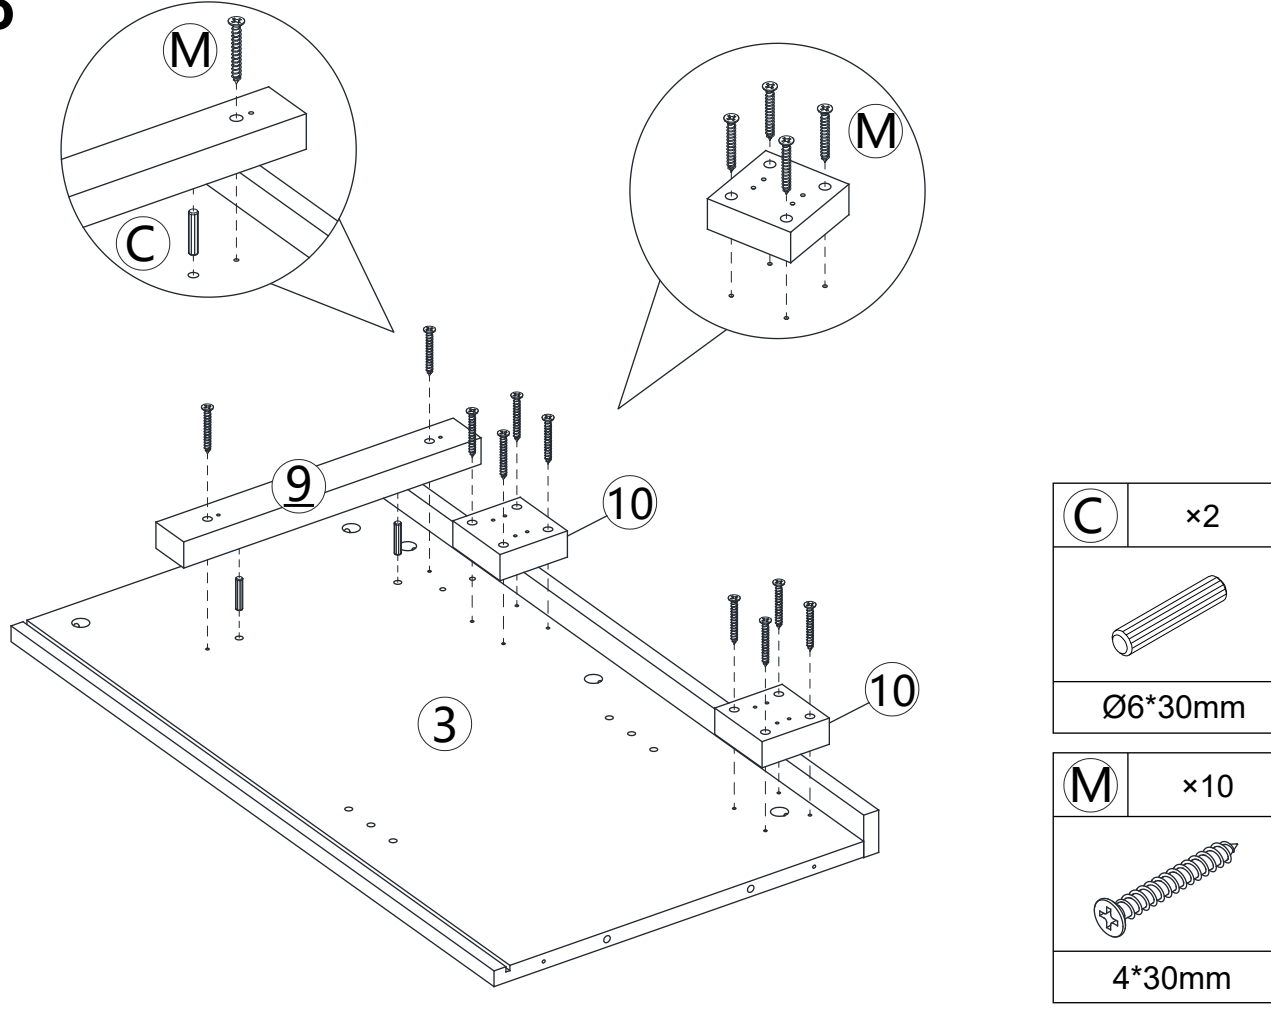


Step 7

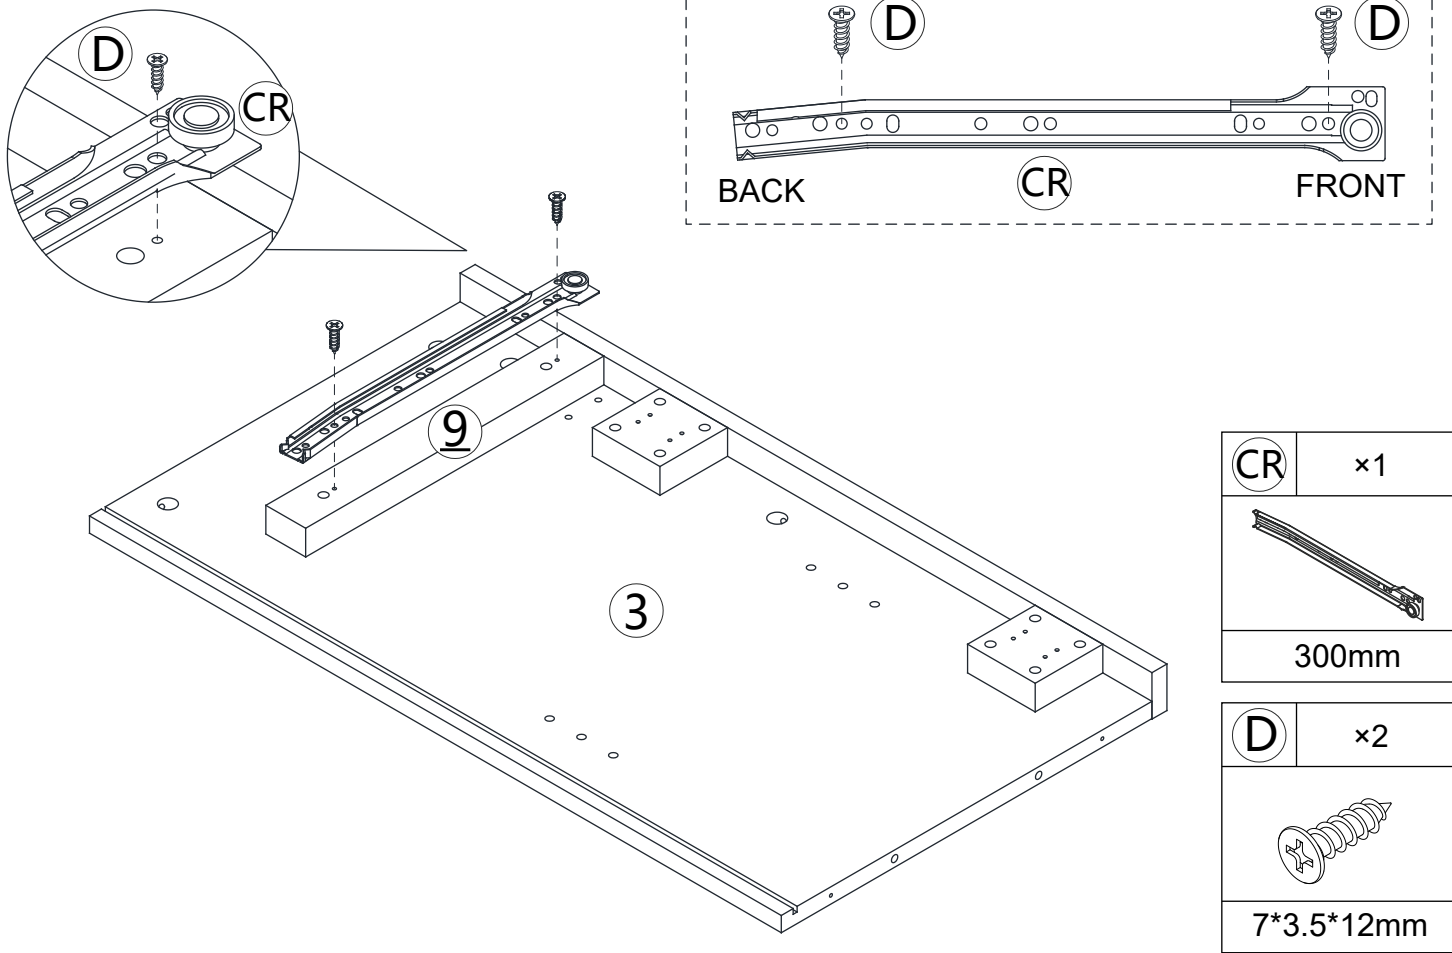



CR	×1
300mm	
D	×2
7*3.5*12mm	

Step 8

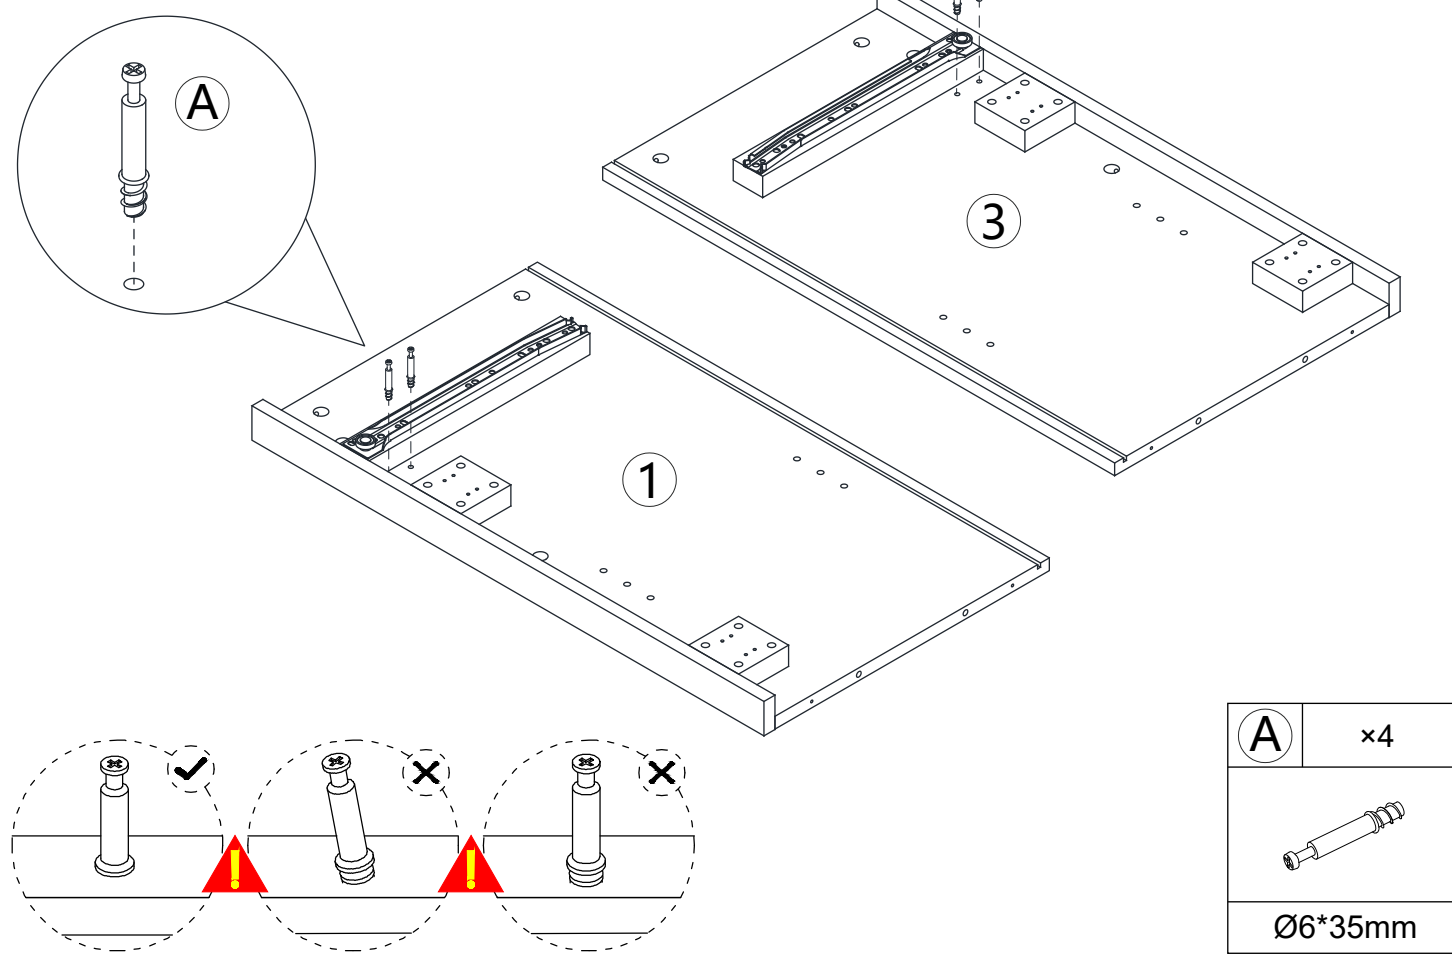



A	×4
Ø6*35mm	

Step 9

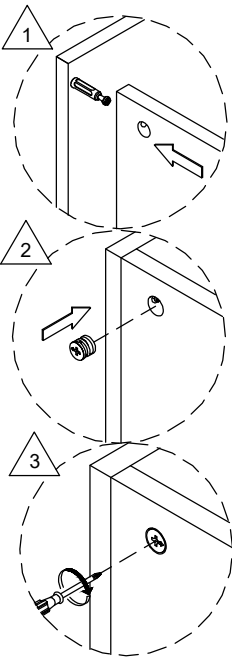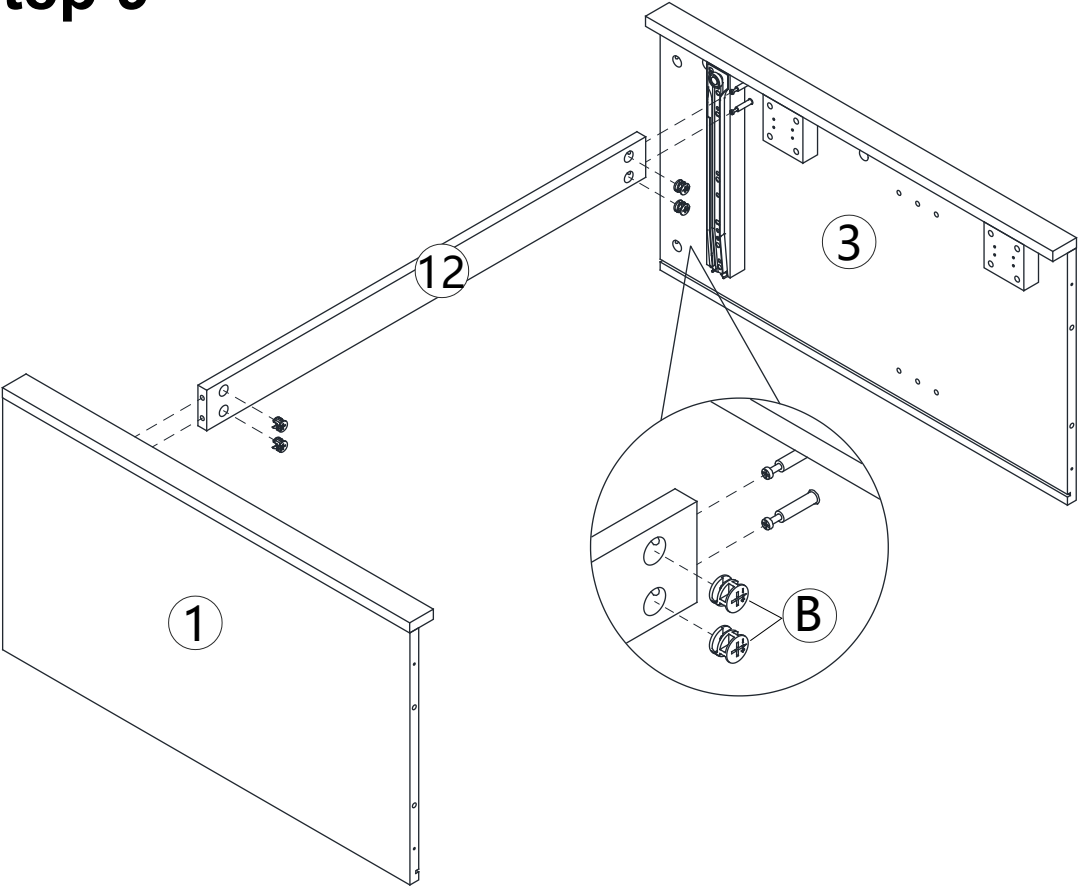


B	×4
Ø15*10mm	

Step 10

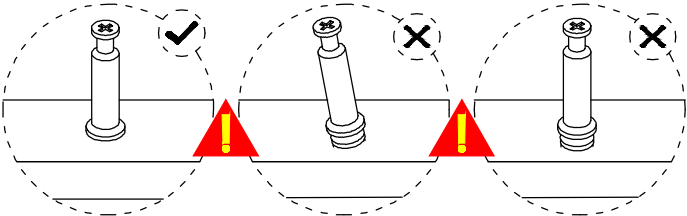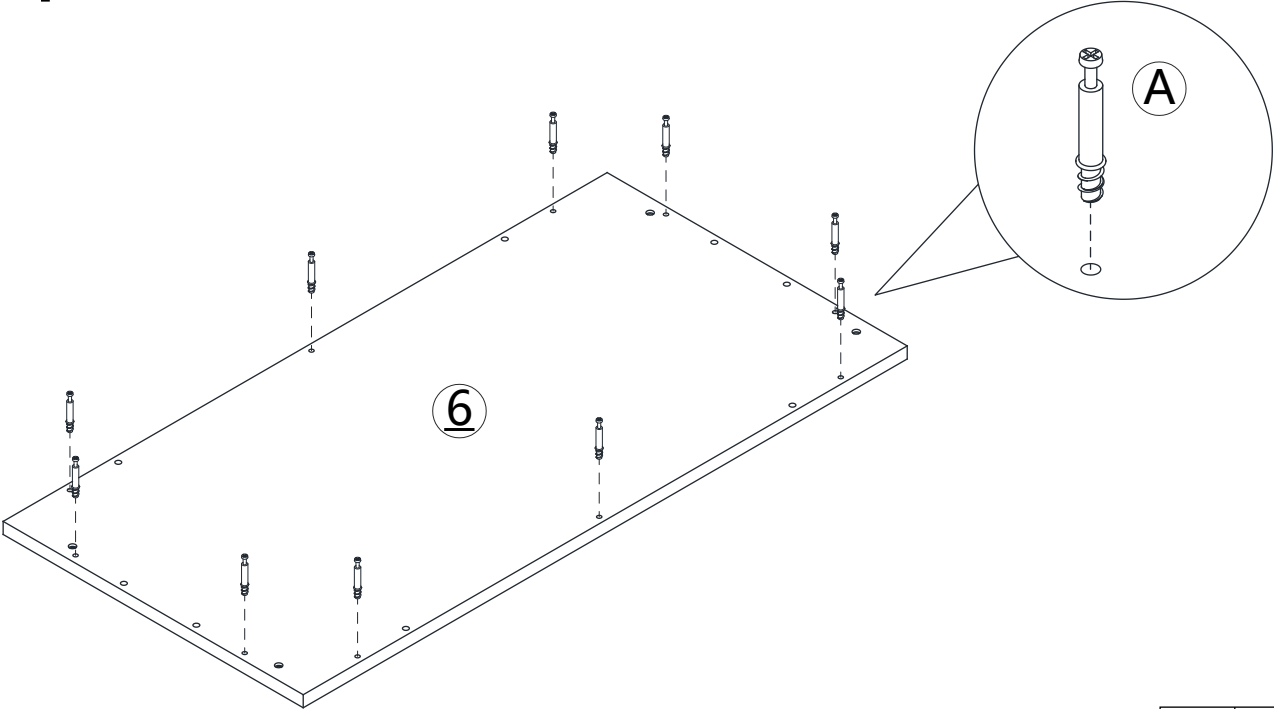


A	×10
Ø6*35mm	



Step 11

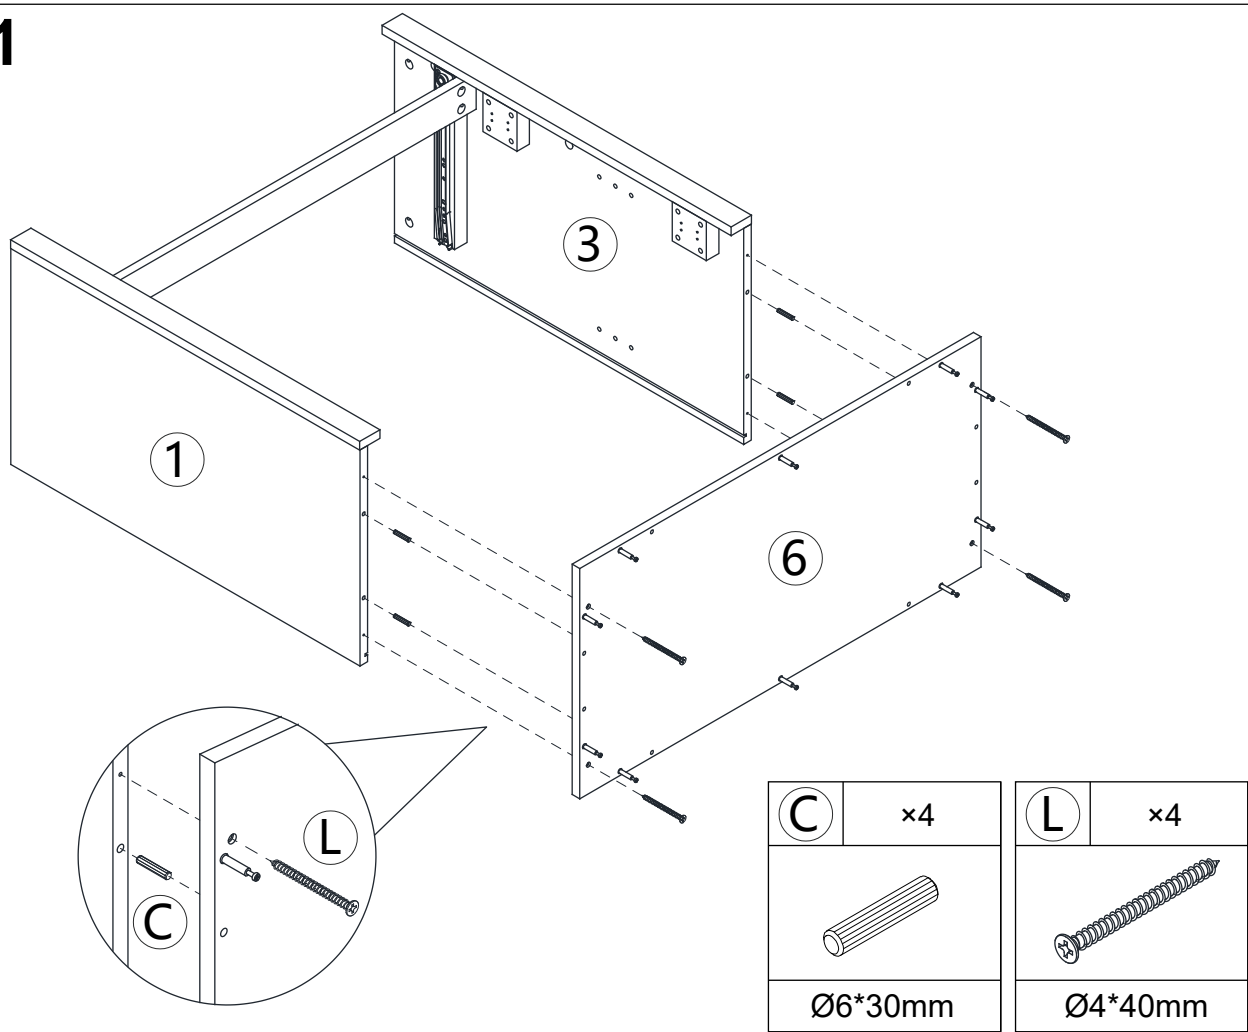

Step 12

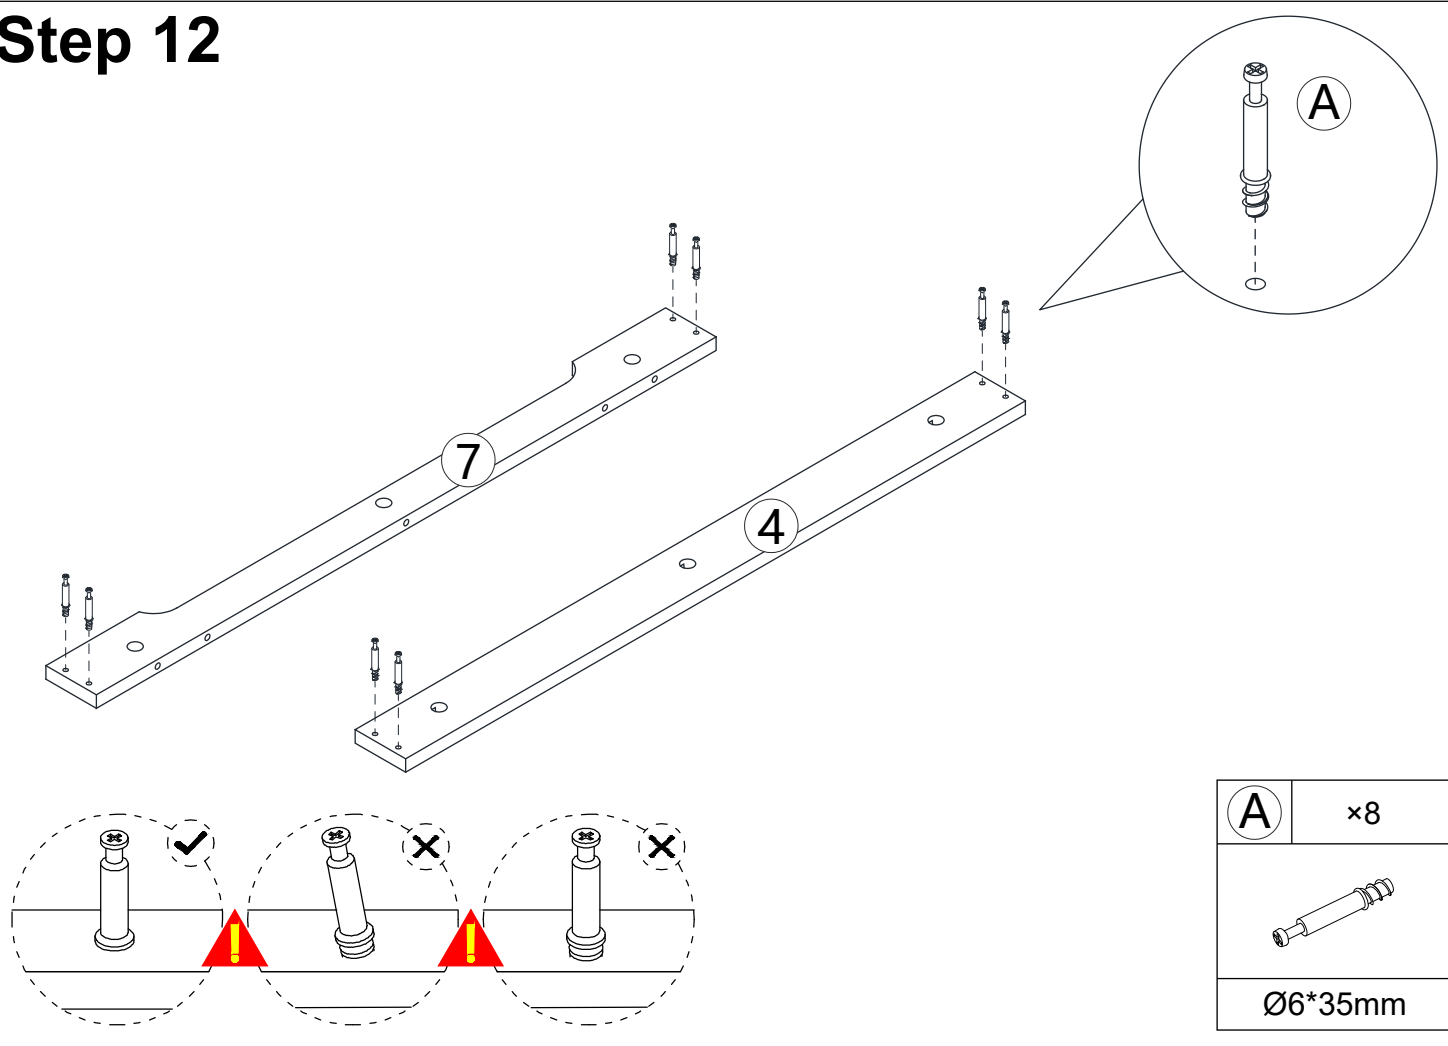


Step 13

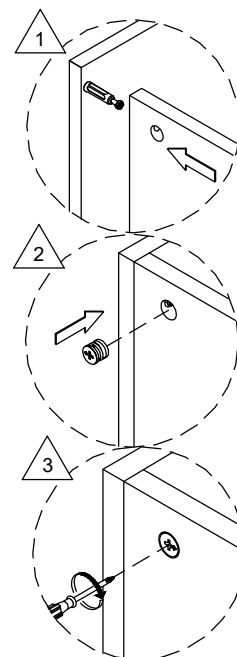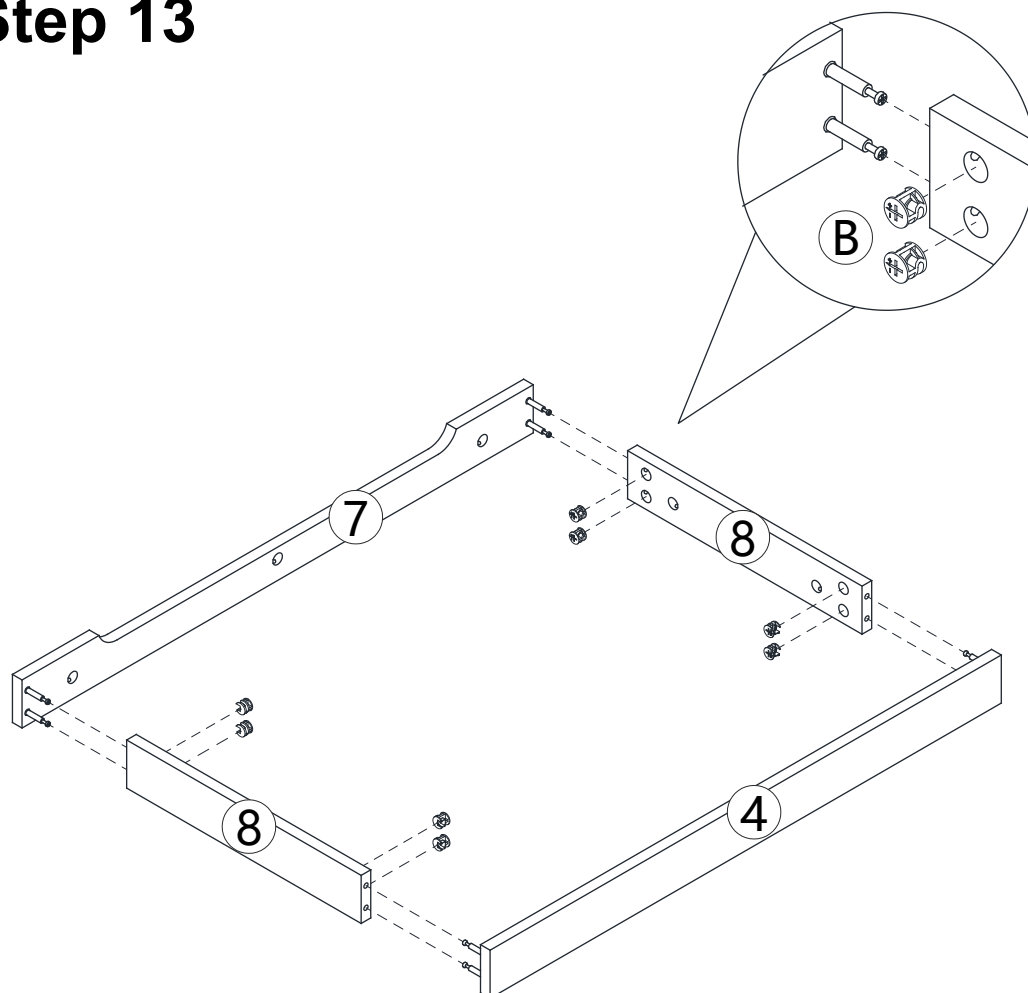

B	×8
Ø15*10mm	


Step 14

Step 1

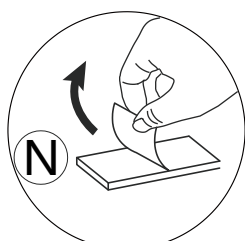


Note: Please remove the protective film before installation

Step 2

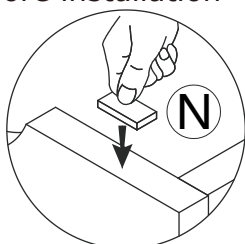


Note: Stick the felt pad to the bottom of the leg post.

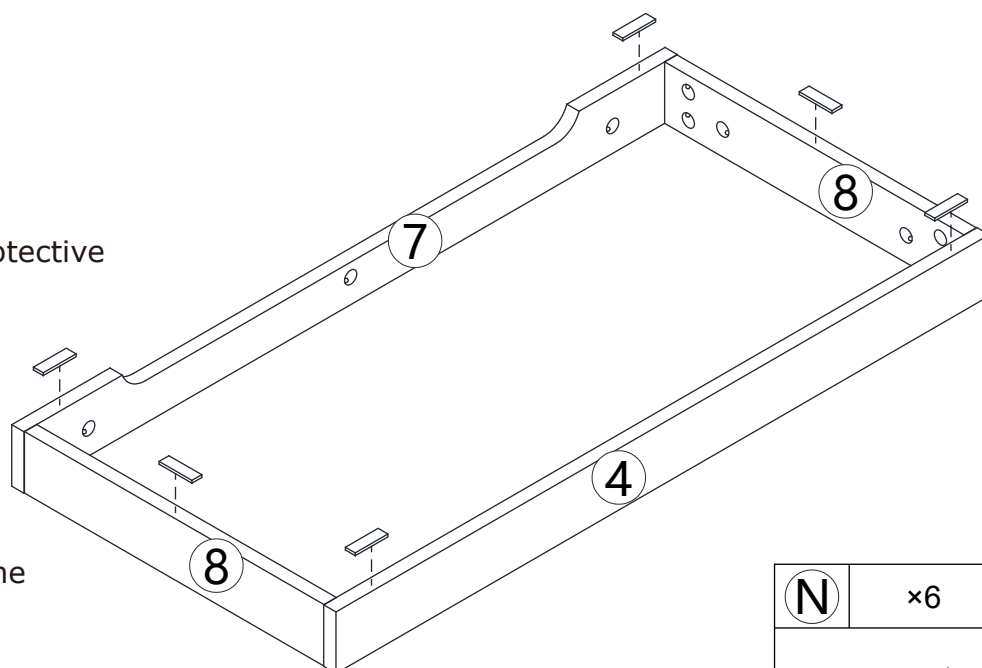


N	×6
40*12*3mm	


Step 15

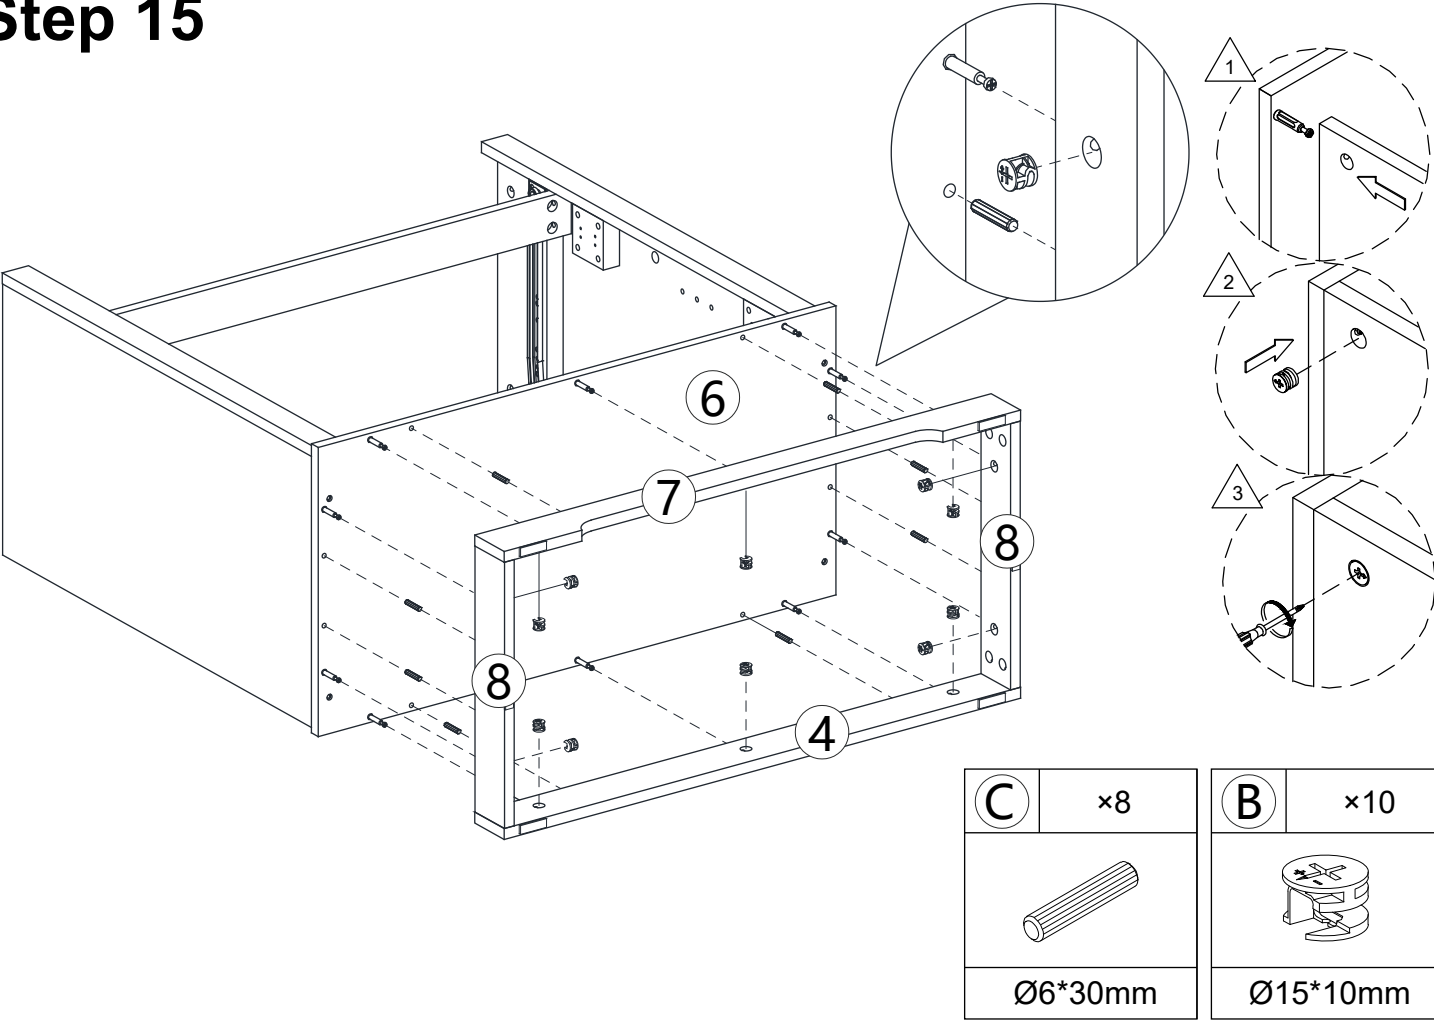


Step 16

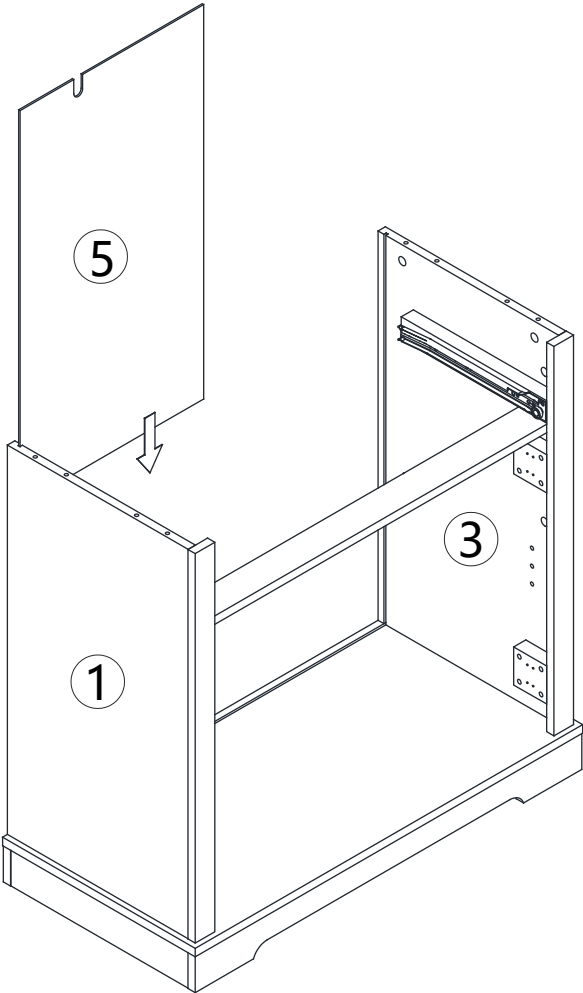


Step 17

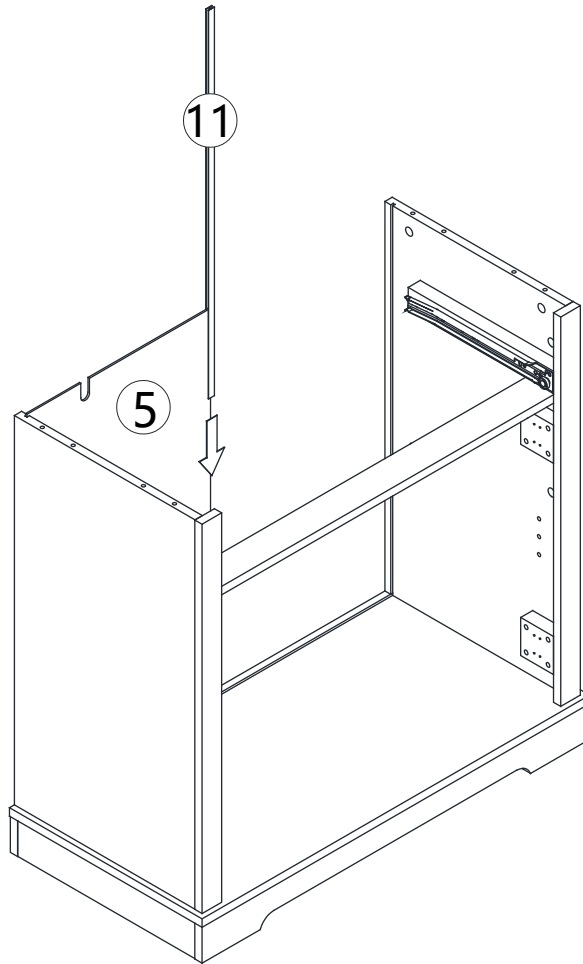


Step 18

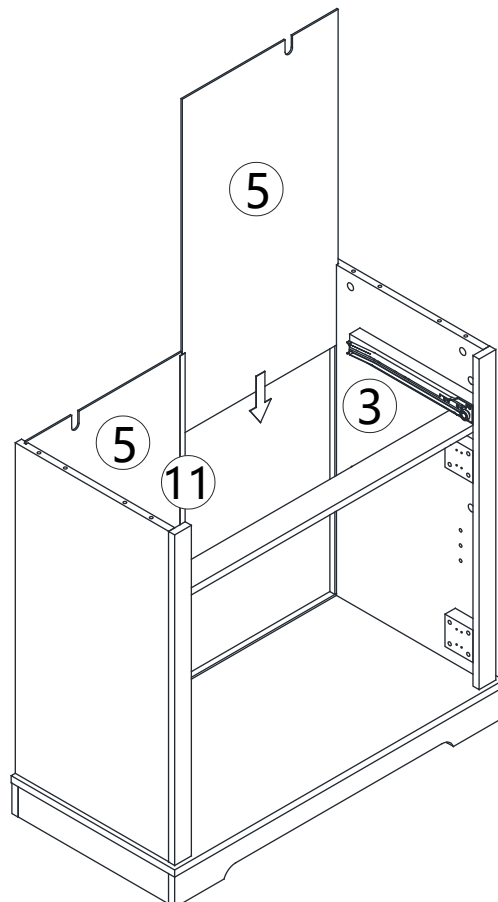


Step 19

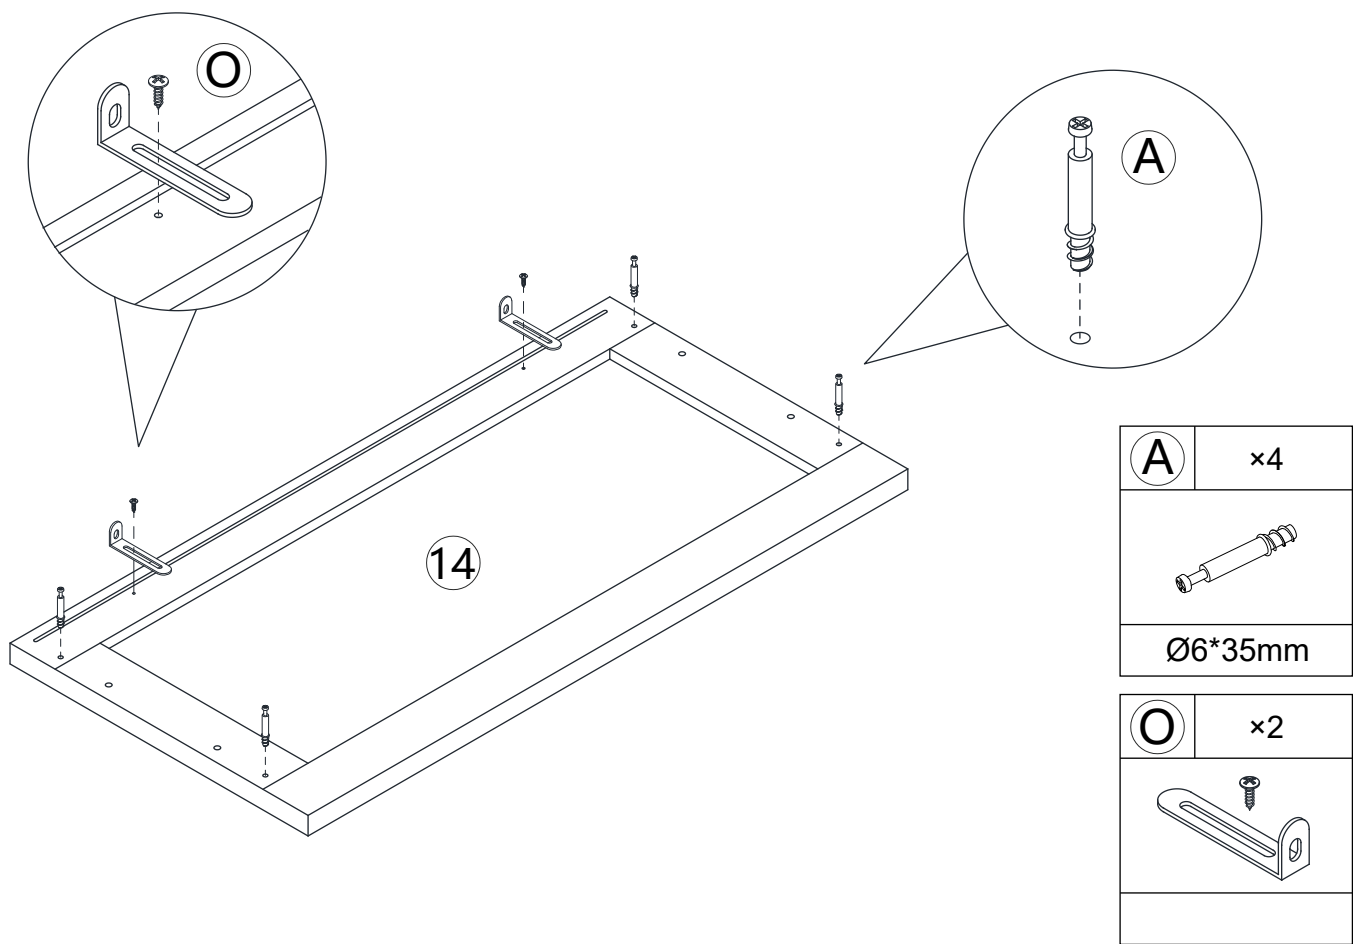


Step 20

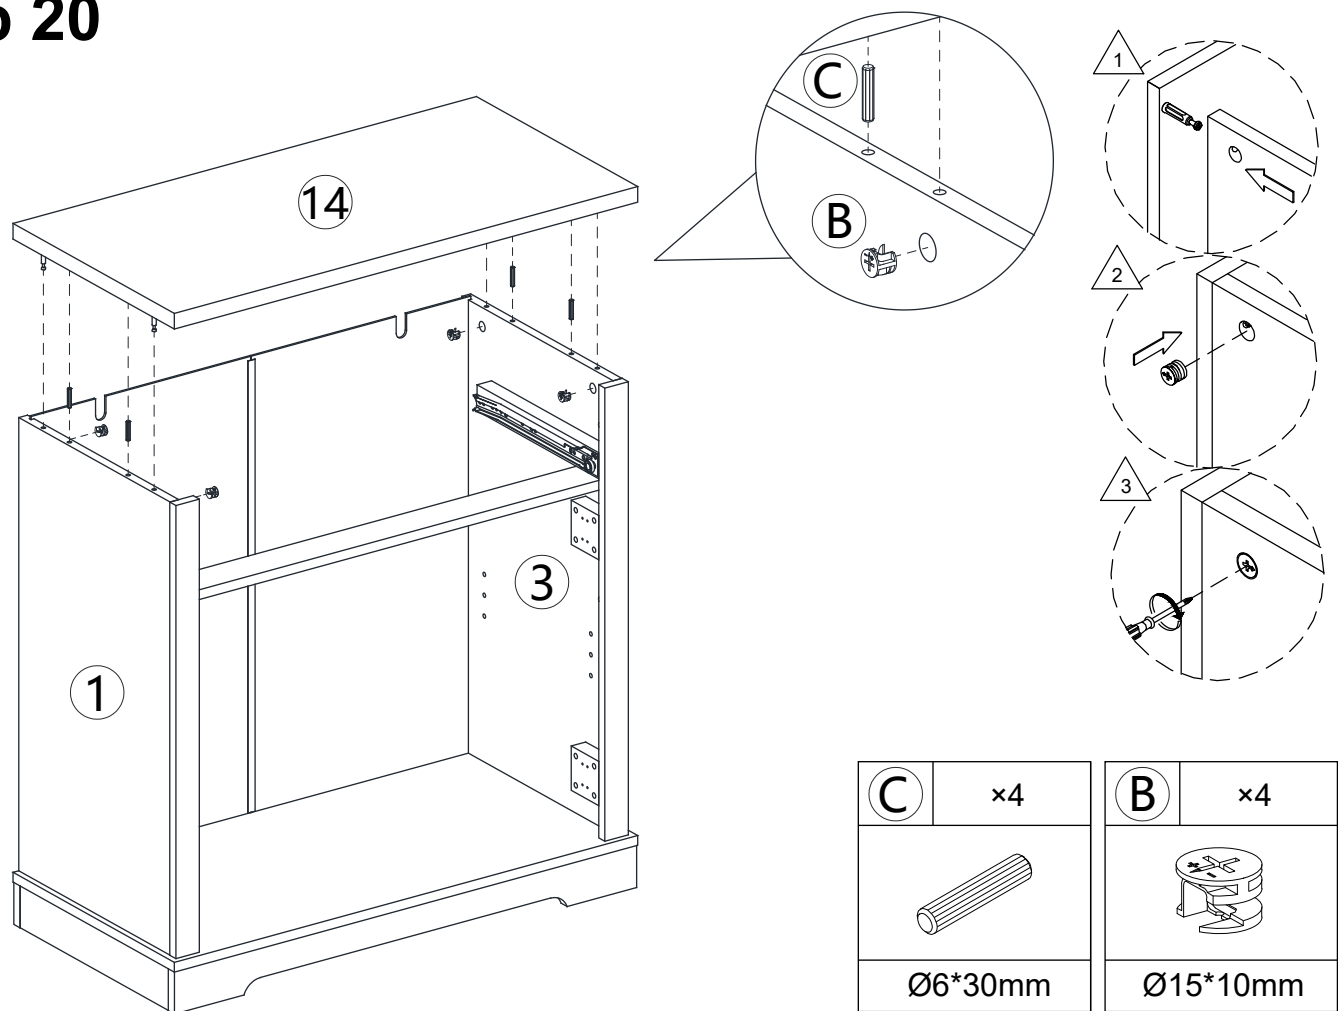


Step 21

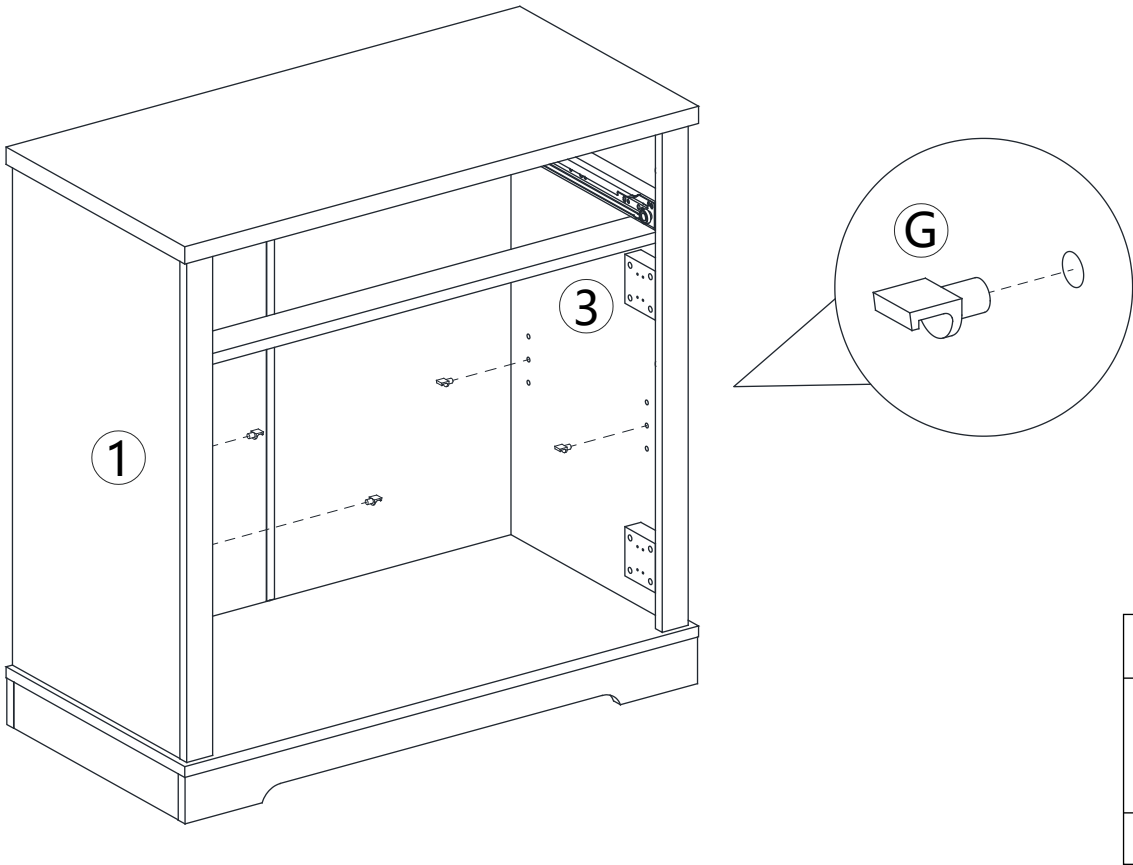

Step 22

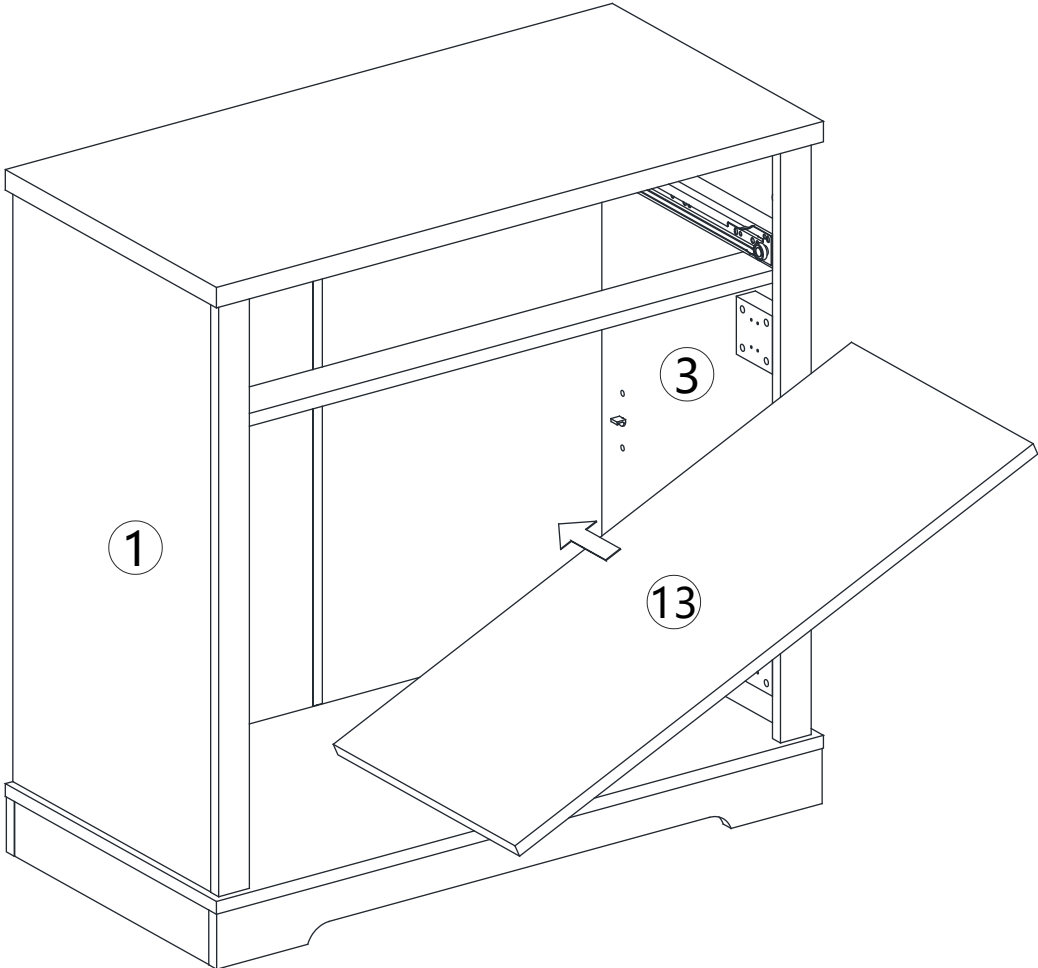


Step 23

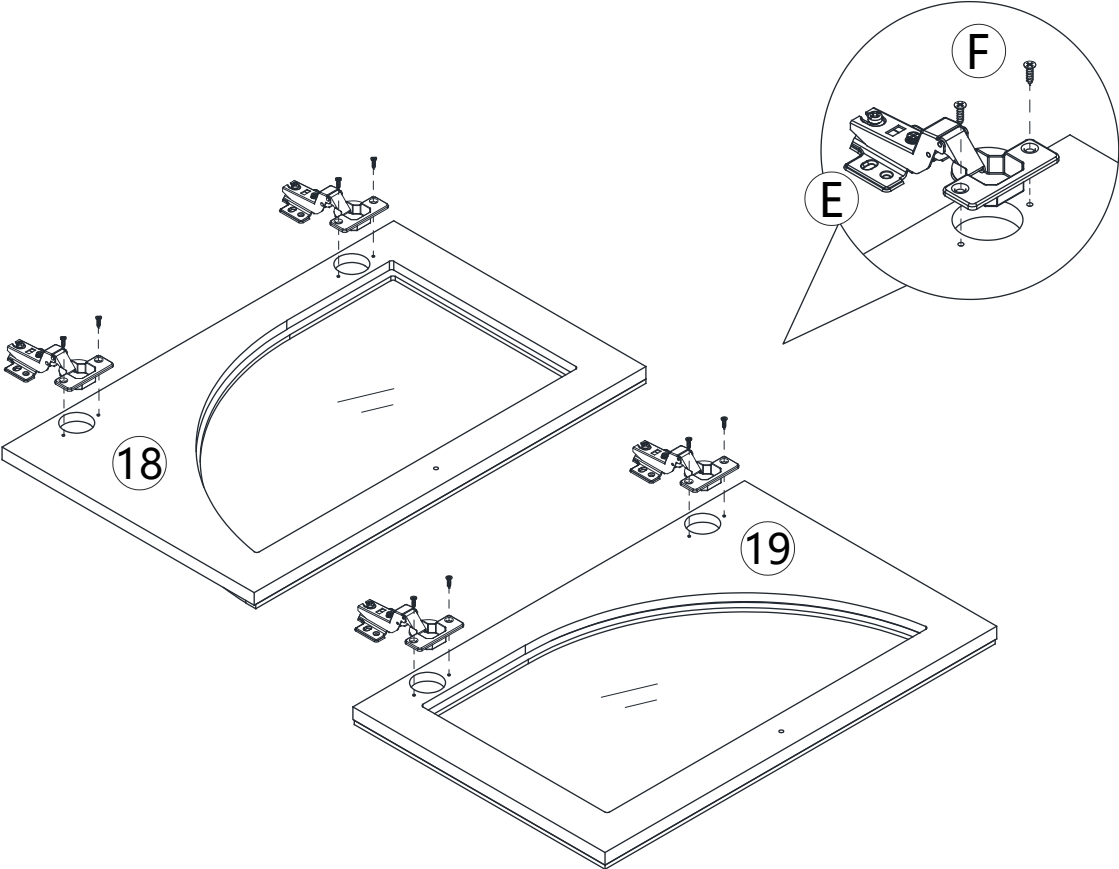


E	×4
F	×8
Ø7.2*3.5*14mm	

Step 24

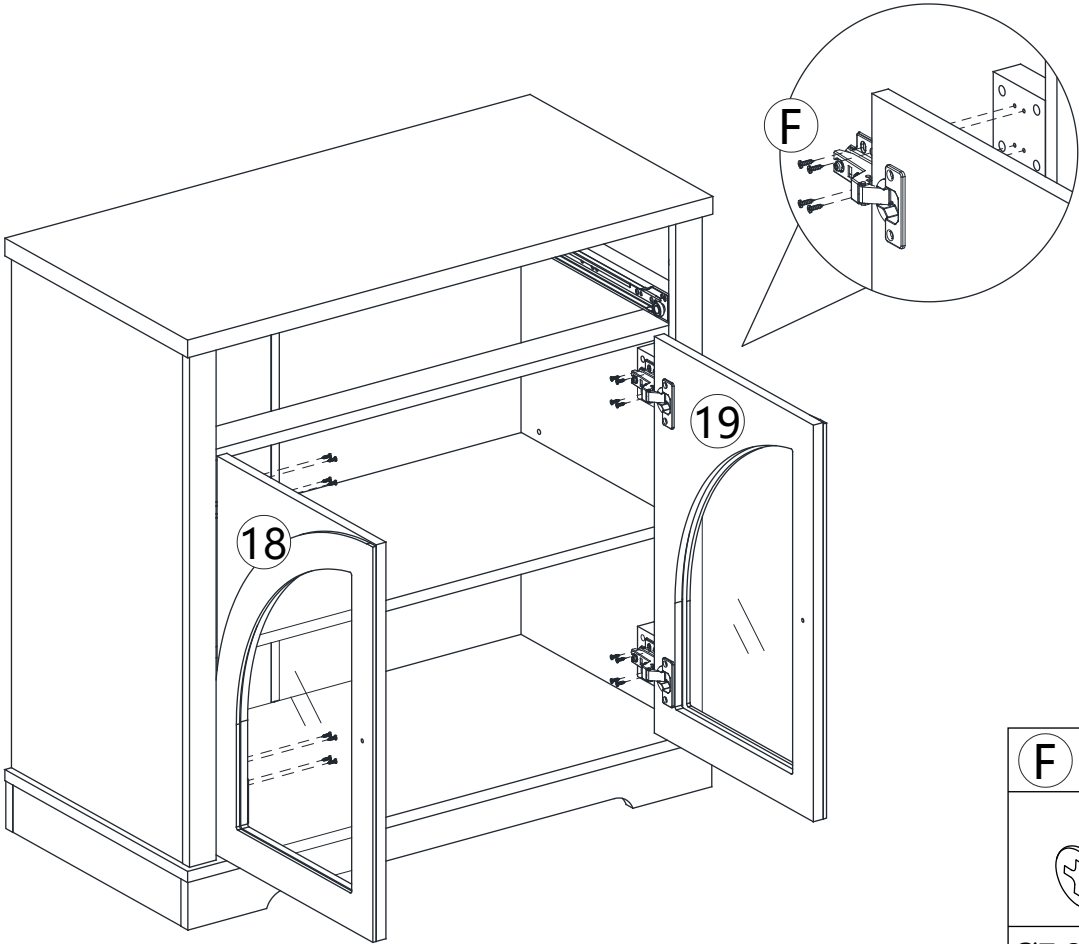


F	×16
Ø7.2*3.5*14mm	

Step 25

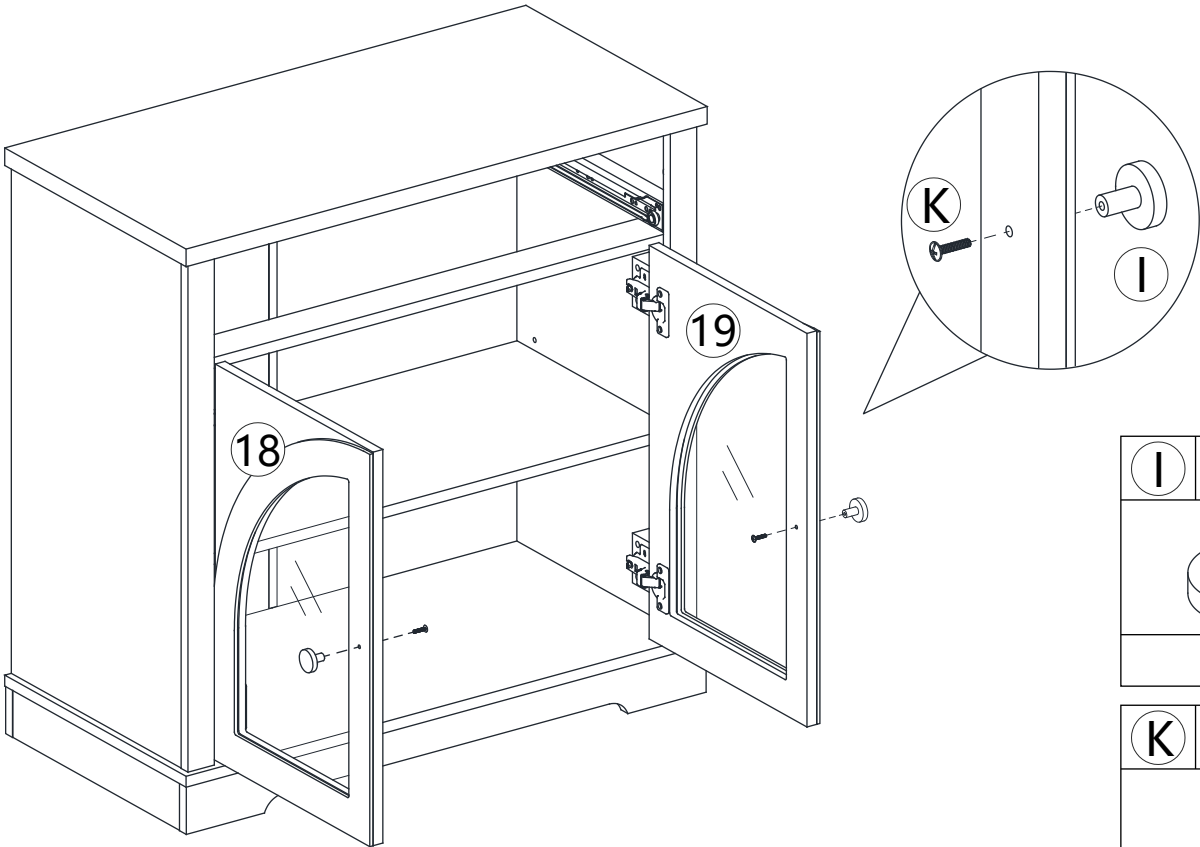

Step 26

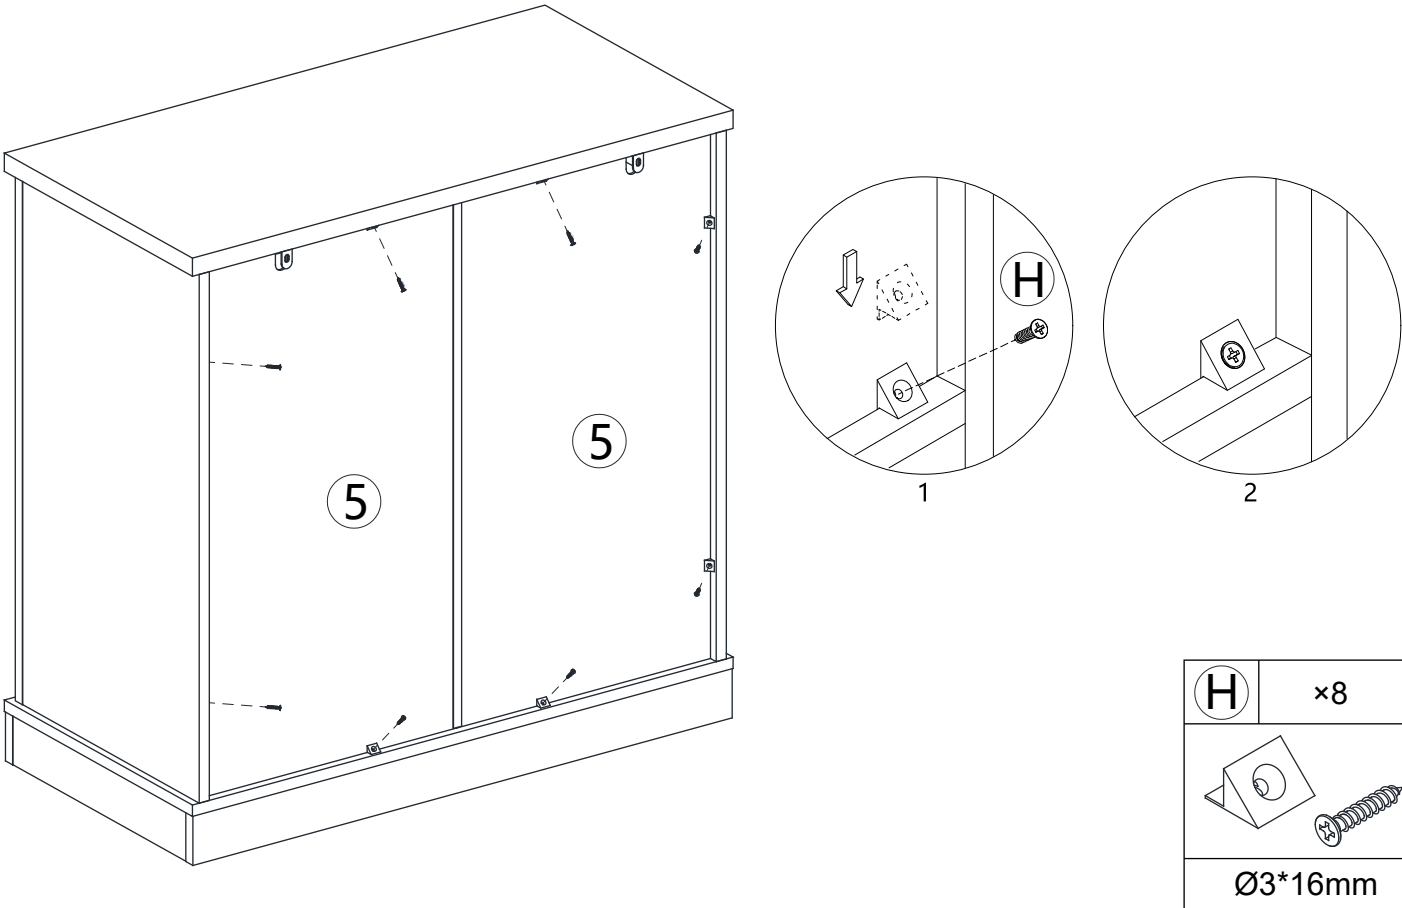


Assembly Steps(EN) / Montageschritte(DE)

HOW TO ADJUST THE HINGES TO
ALIGN THE DOORS IF NEEDED.


STEP 1

Open the door.

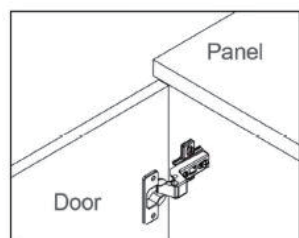


STEP 2

Adjust the door panel upward or downward

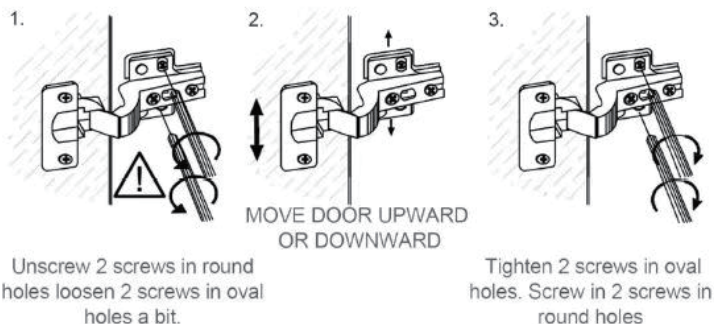


STEP 3

Adjust the flush between door panel and side panel



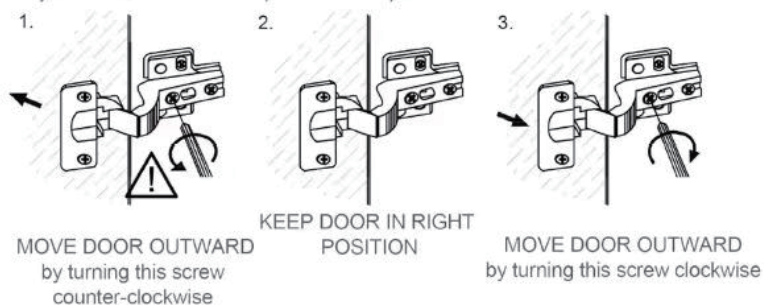


STEP 4

Adjust the Gap between door panel and side panel

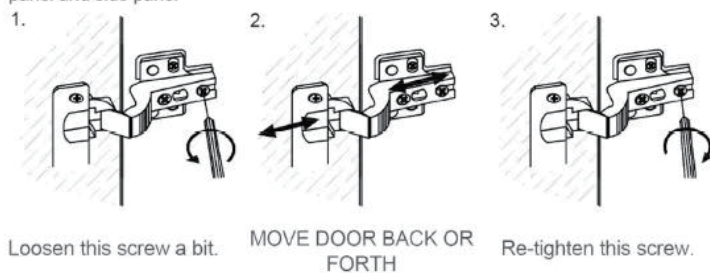


Step 27

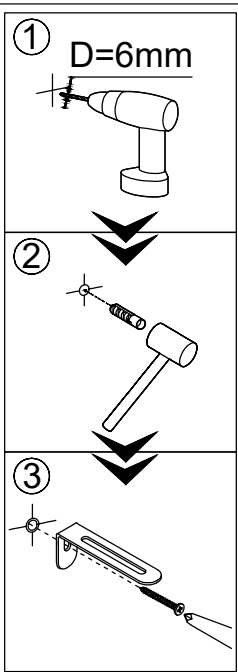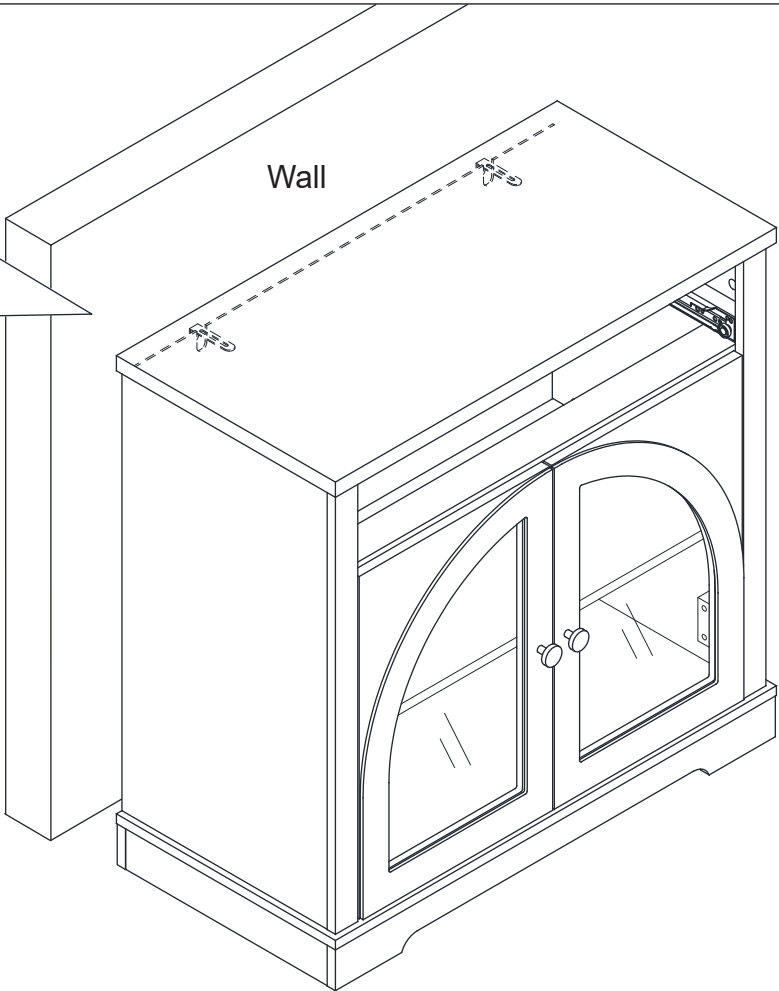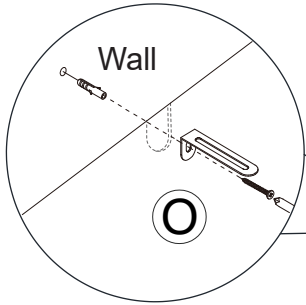


O	×2

Step 28


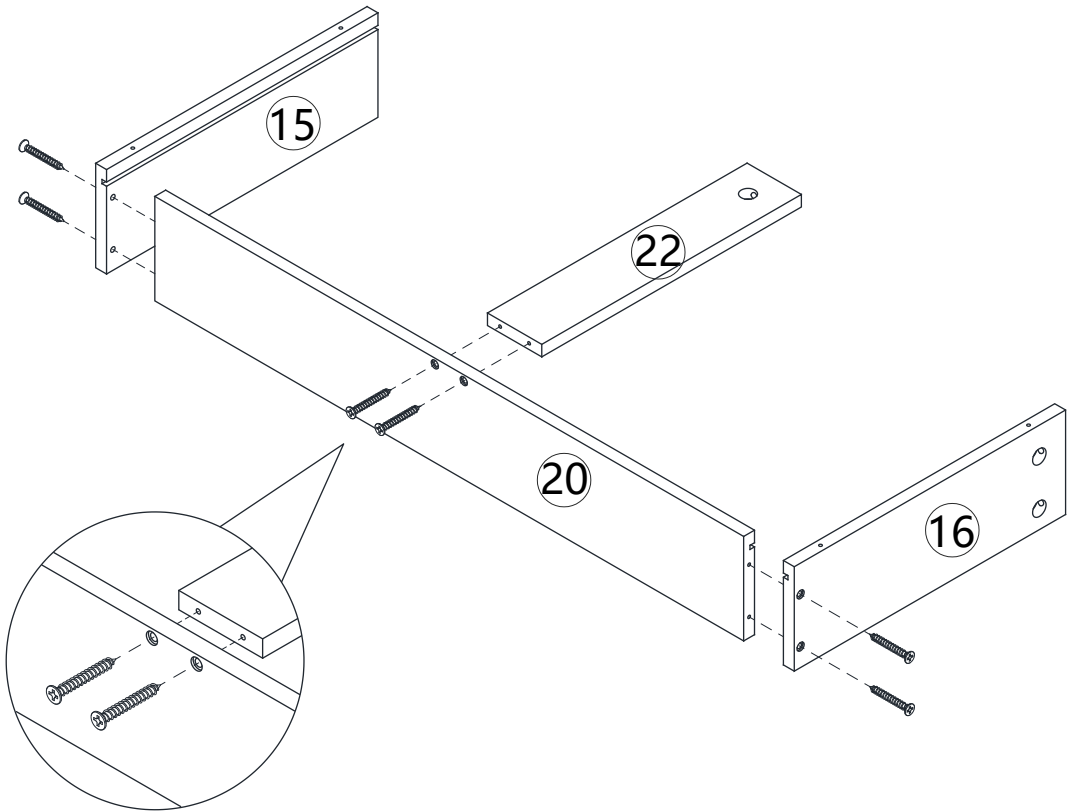


M	×6
Ø4*30mm	

Step 29


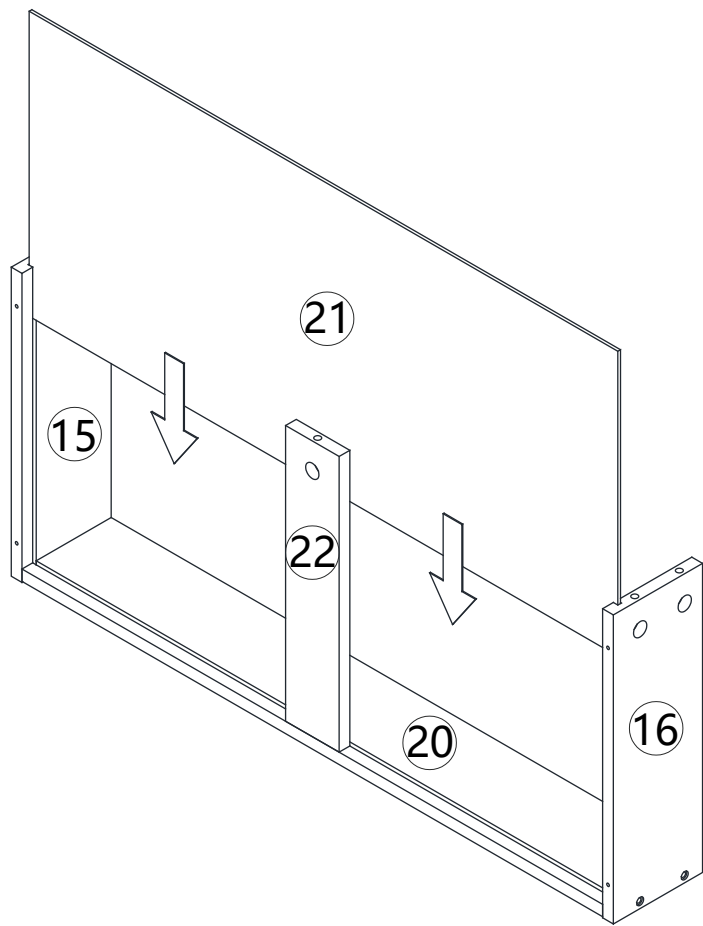


Step 30

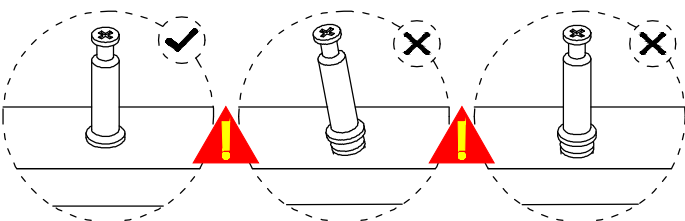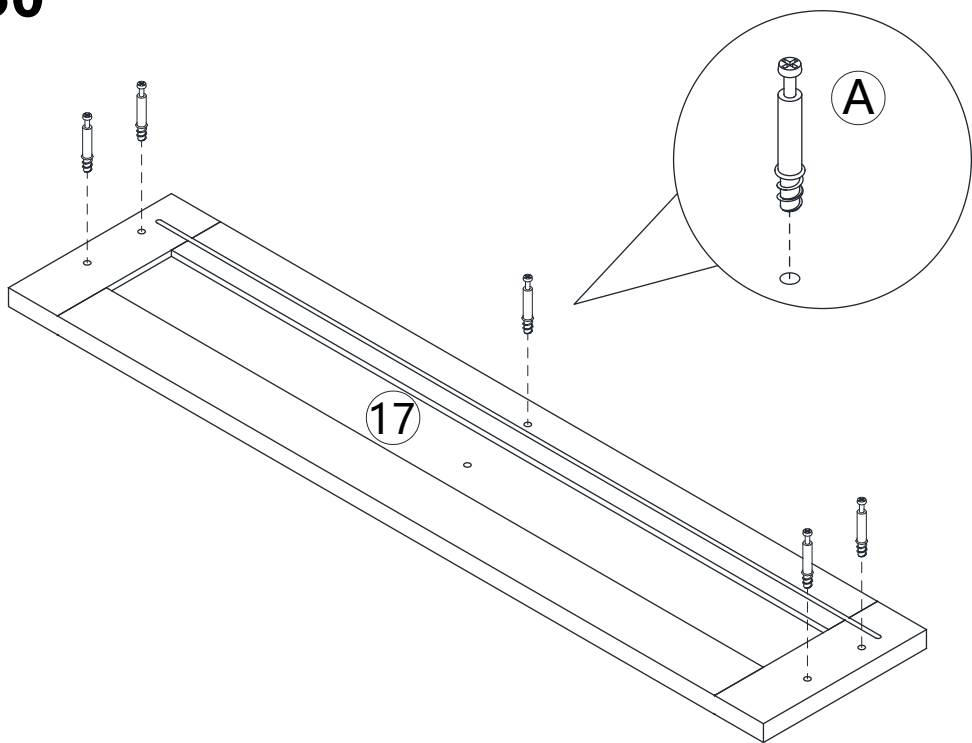



A	x5
Ø6*35mm	

Step 31

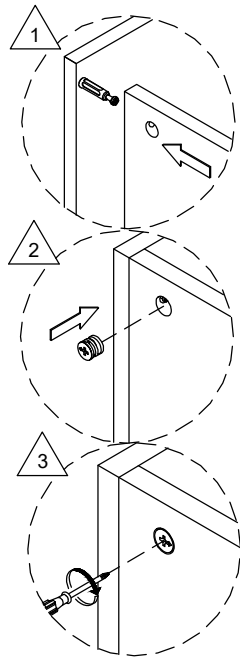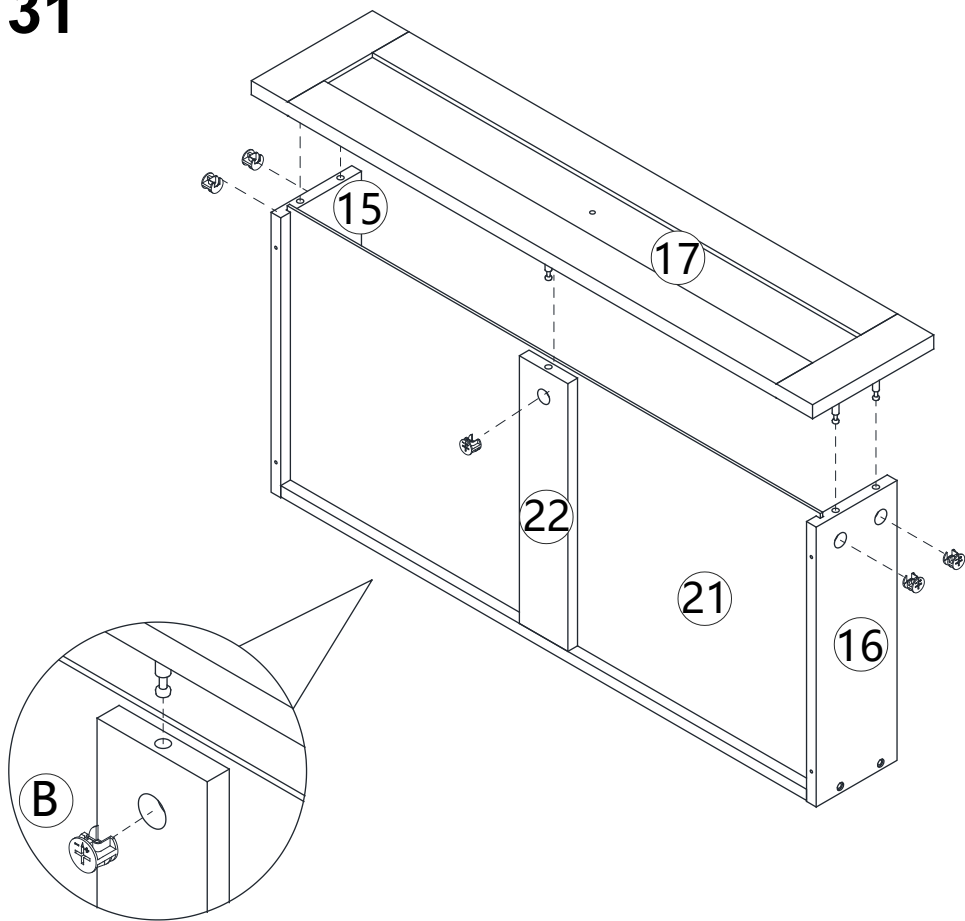


B	×5
Ø15*10mm	

Step 32

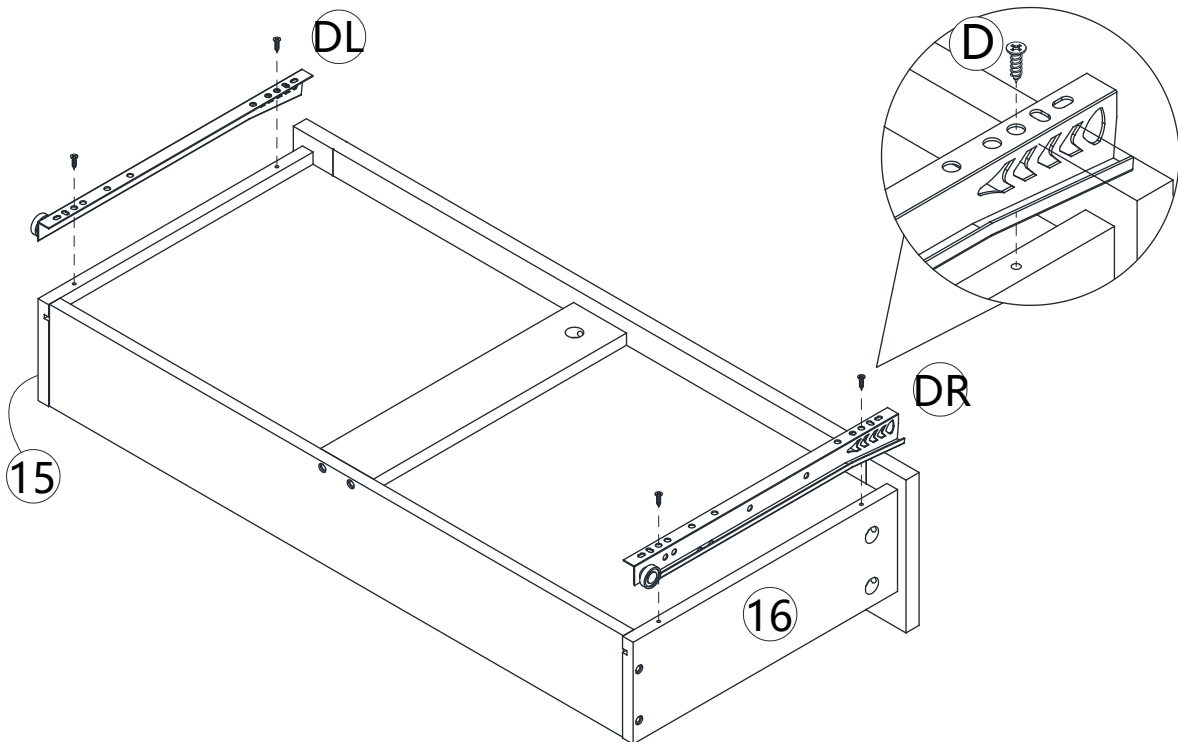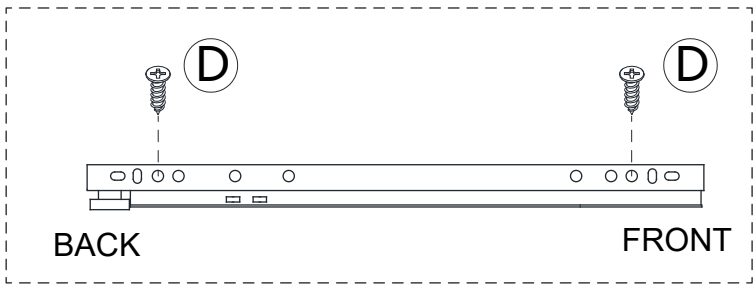


D	×4
Ø7*3.5*12mm	
DL	×1
300mm	
DR	×1
300mm	

Step 33

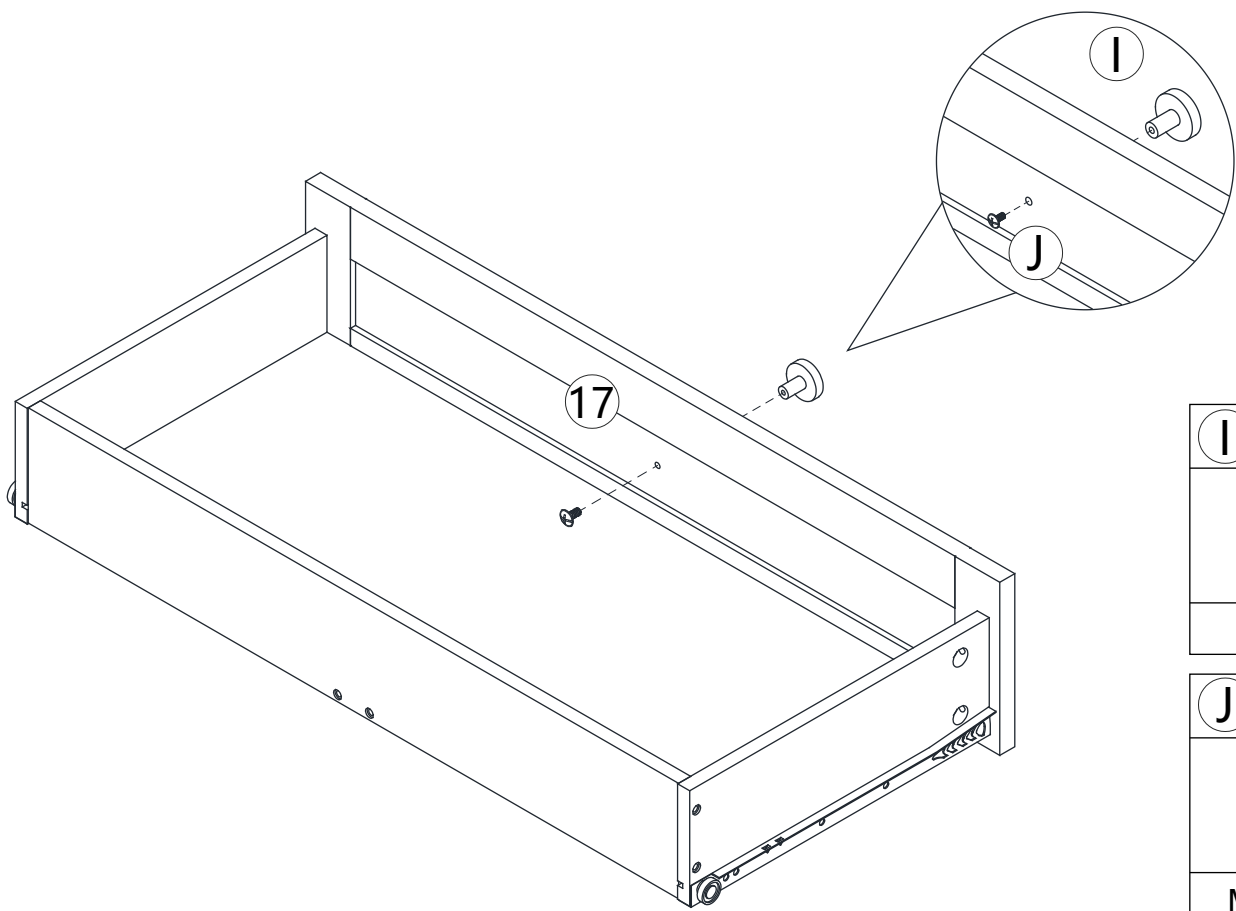

Step 34

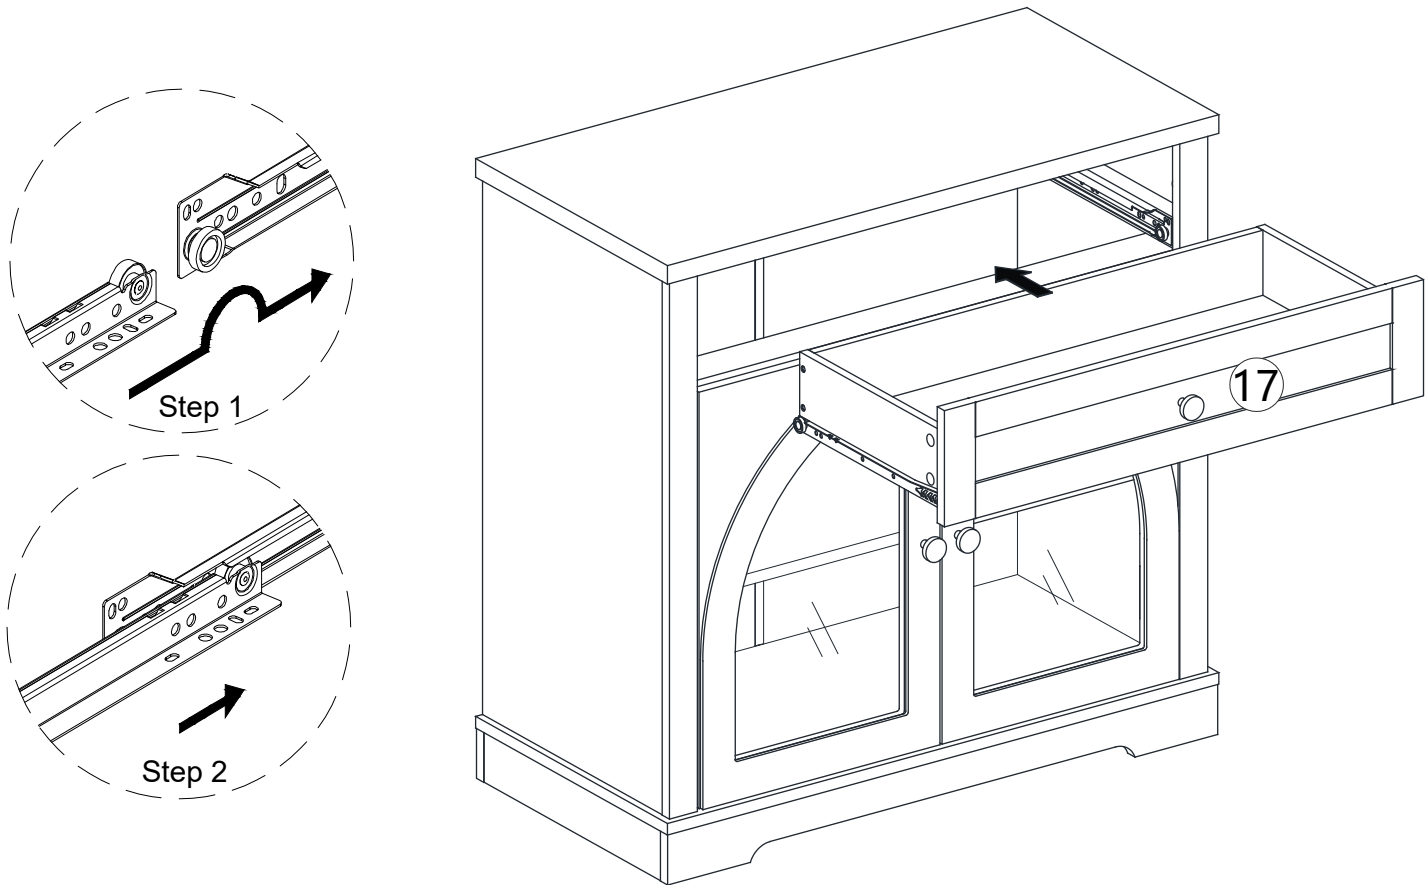

COMPLETE

