



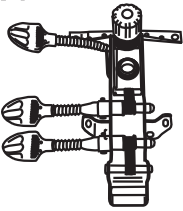













Estimated Assembly Time: 30mins

Assembly instructions


① X 1	A1.M6*20 X 2
	
② X 1	A2.M6*30 X 2
	
③ X 1	B.M6*40 X 6
	
④ X 1	C. X 6
	
⑤ X 1	D. X 1
	
⑥ X 1(R)	E. X 5
	
⑦ X 1(L)	F. X 1
	
	G.M6*10mm X 1
	

NOTICE:  
EVERY 6 MONTHS,PLEASE MAKE SURE ALLBOLTS,  
SCREWS AND KNOBS ARE FULLY TIGHTENED TO  
ENSURE STABILITY.


STEP 1

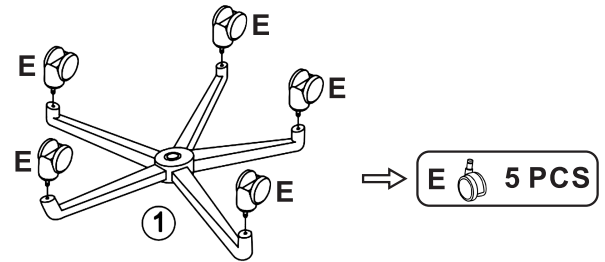


STEP 2

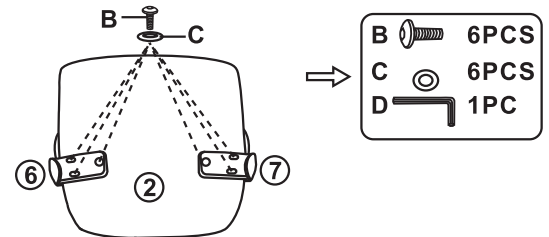

STEP 3

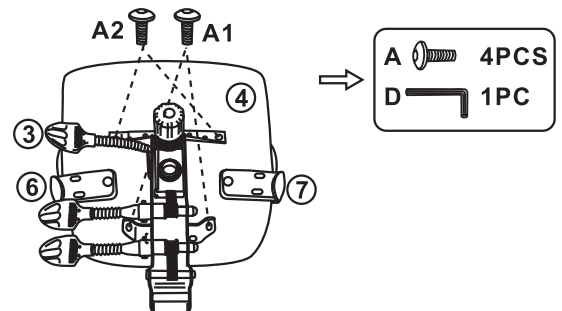

STEP 4

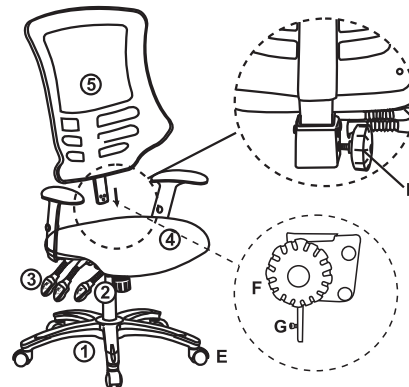

STEP 5

